01 IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

INTENDED USE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- **DO NOT** allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Use the appliance only for intended household purposes as described in this User Manual.
- Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces.

ELECTRICITY SAFETY

- Use only the provided power adapter for charging. Use only the included batteries, other types of batteries may burst, causing injury to persons and damage.
- **DO NOT** handle any part of the plug or appliance with wet hands.
- **DO NOT** operate the appliance with a damaged cord or plug. The use of an extension cord is NOT recommended.
- **DO NOT** use if the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water.
- **DO NOT** unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- **DO NOT** pull or carry vacuum cleaner by the cord or use the cord as a handle.

BATTERY SAFETY

- This appliance contains Li-ion batteries, do not incinerate or expose to high temperatures, as they may explode in a fire.
- **DO NOT** disassemble, repair, or try to open the battery. When charging, keep away from hot or flammable objects.
- **DO NOT** shorten the battery terminals, it may cause burns or fire.
- When not in use, keep the battery away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.
- Remove the battery from the product before disposal. Dispose of the battery in accordance with local regulations.
- In the event that liquid leaks from the battery, do not touch the liquid and observe the following precautions:

  * Skin contact can cause irritation. Wash with soap and water.
  * Inhalation can cause respiratory irritation. Expose to fresh air and seek medical advice.
  * Eye contact can cause irritation. Immediately flush eyes thoroughly with water for at least 15 minutes. Seek medical attention.
  * For disposal, wear gloves to handle the battery and dispose of immediately, following local regulations.

RELATED TO USE

- **DO NOT** use to pick up:

  * Liquids
  * Large objects
  * Hard or sharp objects (glass, nails, screws, or coins)
  * Large quantities of dust (drywall dust, fireplace ash, or embers)
  * Smoking or burning objects (cigarette butts, matches, or hot ashes)
  * Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
  * Toxic materials (chlorine bleach, ammonia, or drain cleaner).

- **DO NOT** put any objects into nozzle or accessory openings. Do not use with any opening blocked. Keep free of dust, lint, hair, and anything that may reduce airflow.
- **DO NOT** use without the dust cup and filters in place.

- **DO NOT** install, charge or use the appliance outdoors, in a bathroom or within 10 feet (3 meters) of a pool. Do not use on wet surfaces and do not expose to moisture, rain or snow.
- **DO NOT** apply any fragrance or scented product to the filters. The chemicals in such products are known to be flammable and can cause the machine to catch fire.
- **DO NOT** attempt to disassemble, repair, modify or replace any part of your product. All servicing should be performed by qualified personnel only.
- Keep nozzle and all vacuum openings away from hair, loose clothing, fingers, and other parts of the body to avoid convolving.
- Use only manufacturer recommended accessories and replacement parts.
- Use extra care when cleaning on stairs.
- Always turn OFF the appliance before connecting or disconnecting any motorized any motorized nozzles or other accessories.
- Always unplug from the electrical outlet when not in use and before any maintenance or servicing.

FOR HOUSEHOLD USE ONLY


SAVE THESE INSTRUCTIONS

Specifications


Voltage	DC 22.2V	**Battery Capacity**	2200 mAh
Rated Power	150W	**Dust Cup Capacity**	1.3L / 0.34Gal.
Charging Input	100-240V~ 50/60Hz	**Running Time**	30 minutes (Low Speed mode)
Charging Time	5.5 hours		

02 EXPLORING YOUR VACUUM CLEANER


Check if all accessories are included. Contact us via **email: support@osoeri.com** if there is any missing part.

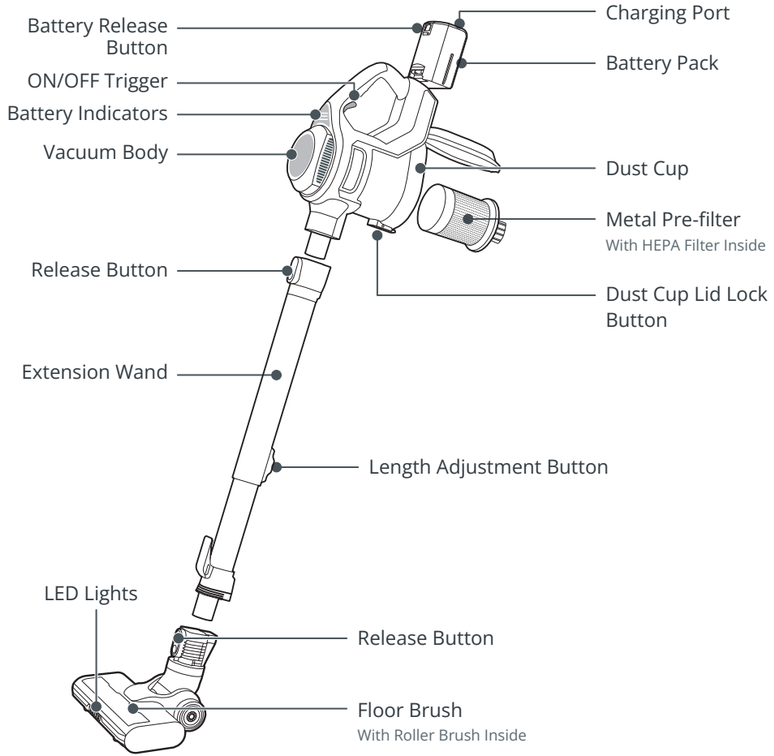


Other Accessories


2-in-1 Tool


HEPA Filter*2


Wall Hanger



Screws & Anchors


Cleaning Brush


Power Adapter


Setting Up

Make sure the vacuum cleaner is turned off before assembling. Assemble it in place before use.

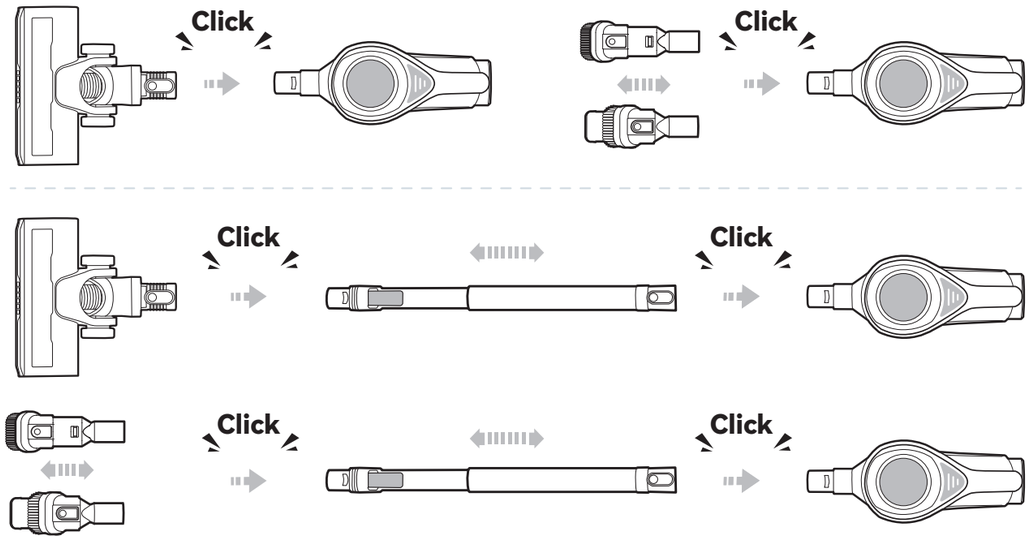


Installing Wall Hanger

- Make sure the wall hanger is mounted securely with the included screws and anchors.
- Ensure no pipe work (gas, water, air) or electrical cables, wires are located directly behind the mounting area.

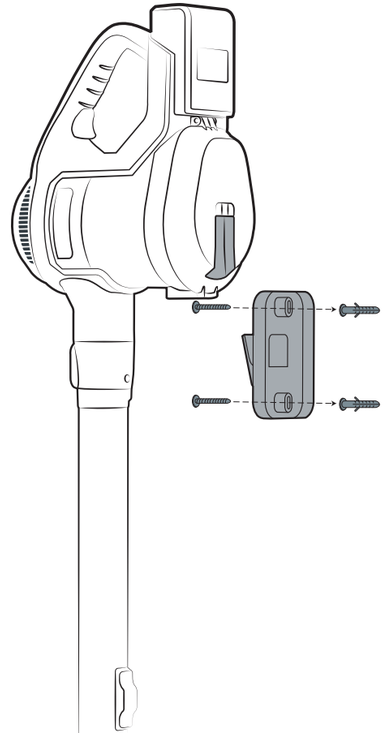

03 USING YOUR VACUUM CLEANER

- Fully charge with the included power adapter before first use. A full charge takes about 5-6 hours.
- DO NOT use outdoors or on wet surfaces, or use to pick up water or other liquids, burning, large or sharp hard objects.
- When idled for extended periods of time, remove the battery and store in a cool and dry location.

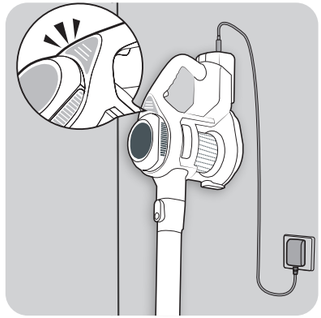


1

Charging with Main Body

Connect to an electrical outlet with the included power adapter.


Last Indicator Flashing	>	Battery Low
On one by one	>	Charging
All solid on	>	Fully Charged

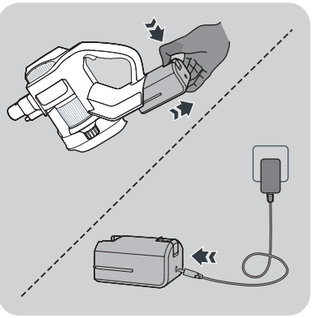

OR

Or Charging Separately

Press and hold the battery release button to pull out the battery. Connect the battery to the electrical outlet.

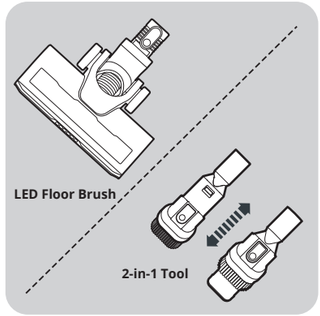


2

Attaching Brush Head

Attach your desired brush until it clicks in place.

LED Floor Brush
Versatile angled with LED lights for low pile carpets & hard floors

2-in-1 Tool
Two tools in one for dusting of curtains, sofas & hard surfaces

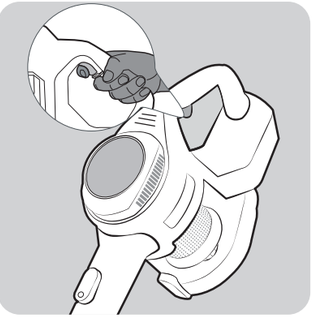

3

Selecting Cleaning Mode

Press the ON/OFF Trigger to select mode.



X1 Turn ON Low Speed
X2 Switch to High Speed
X3 Turn OFF

04


CARE AND CLEANING

- Always make sure the vacuum cleaner is turned OFF before cleaning.
- Make sure all parts are completely dry before installing back.

Dust Cup & Filters


- Empty the dust cup after each use. DO NOT overfill the MAX line.
- Brush the dust off the filter after each use. To maintain optimum suction power, wash the filters at least twice a month or replace every 2 months.

1

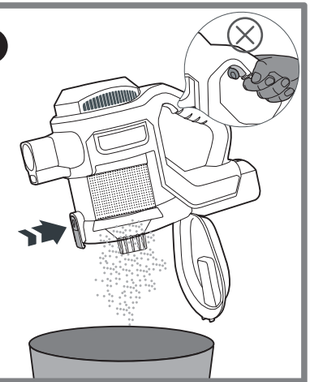

Detach the vacuum body. Hold to press the lock button to release dirt.

2

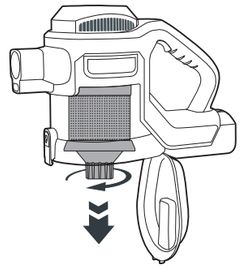


Twist the metal pre-filter anti-clockwise and take it (with HEPA filter) out.

3




Wipe clean the dust cup. Air dry completely. Do not rinse with water.

4

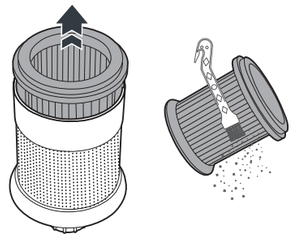


Take out the HEPA filter. Brush gently to remove any loose dust and debris.

5

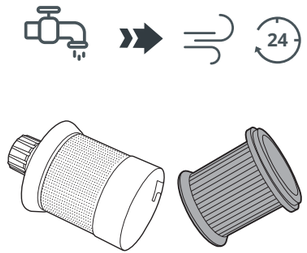

Rinse the filters with water. Allow them to dry completely.

6

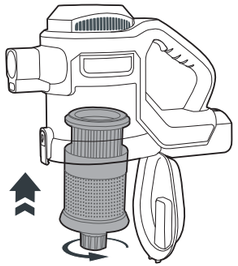


Reattach the filters. Lock the dust cup lid until it clicks.

Floor Brush


- All battery indicators flash indicating a tangled roller brush. Check and clear immediately.
- Clean the roller brush every 4–5 uses to avoid blockage or jamming.

1

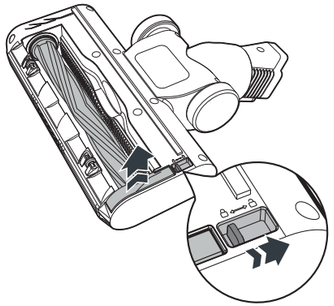


Detach the floor brush. Pull the release switch to 🔒 to unlock the roller brush.

2

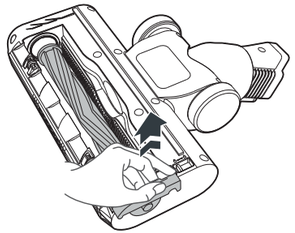


Hold the side cover to take the inside roller brush out.

3

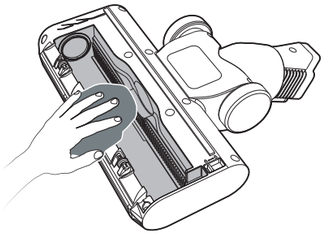


Clean the brush window and suction mouth with a soft, dry cloth.

4

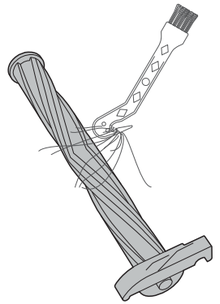


Remove any hair or fibres wrapped around the roller brush.

5

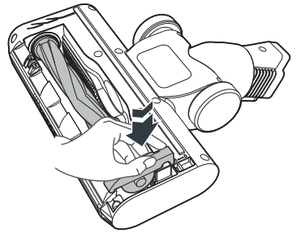

Insert the roller brush back, making sure the arc-shaped part is facing down.


6

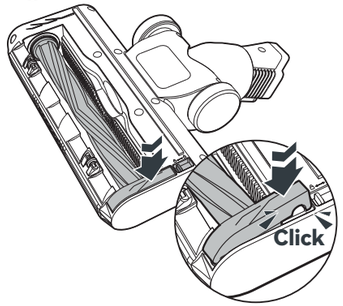

Press the side cover until the roller brush clicks to lock in place.

Looking for Blockages

- Disconnect your vacuum cleaner from the charger. Leave to cool down before looking for blockages.
- The vacuum cleaner will stop working automatically if the roller brush is tangled. Follow the instructions to locate the blockage.

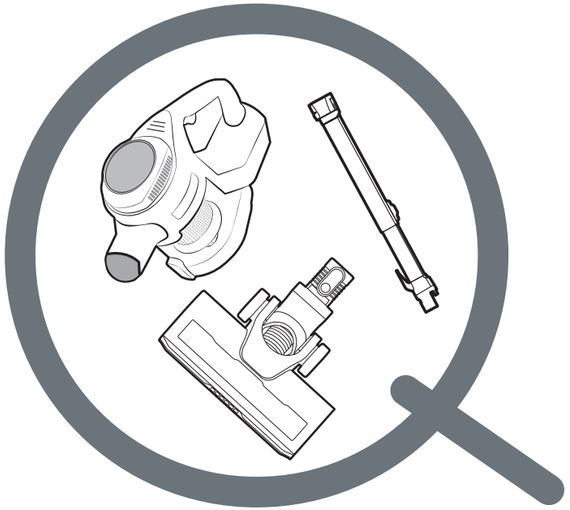

1

Remove the floor brush as instructed, check for blockage in brush window, suction mouth or on roller brush.

2

Remove the dust cup, filters in dust cup as instructed. Clear the blockage and wash when necessary.

3

Check the extension wand and 2-in-1 tool for any blockages. Clean when necessary.

4

Dry completely and re-install all parts securely for next use.

05 TROUBLE-SHOOTING GUIDE



The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support via **email: support@osoeri.com**

Q: The vacuum cleaner does not work or stops working suddenly.

A:
- Make sure the battery is properly installed in place.
- If the last indicator keeps flashing, the vacuum cleaner may run out of battery or battery low. Charge it promptly.
- Roller brush is tangle. Check and clear blockages in brush window, suction mouth or on roller brush.

Q: Weak suction power.

A:
- Check and empty the dust cup. Make sure the dust does not exceed the MAX line. We recommend emptying the dust cup after each use.
- Check and clean the inside filters. Wash the filters at least twice a month or replace every 2 months. For replacement filters, contact our customer support.
- Make sure the filters are properly installed in place.
- Clean the roller brush and remove any debris blocking the brush.
- Check for any blockages in wand, suction mouth or connection part. Clean when necessary.

Q: The battery is draining quickly.

A:
- Make sure the vacuum cleaner is fully charged with the included power adapter.
- Select Low speed mode for light-duty cleaning to save power.

Q: The vacuum cleaner does not charge.

A:
- Charge the vacuum cleaner with the original power adapter only.
- Outlet is not working. Try a different outlet to fully charge the vacuum cleaner.

06 WARRANTY AND SERVICE


Thank you for choosing Osoeri Vacuum Cleaner. This product is covered with Osoeri product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized.

We can only provide after sales service for products that are sold by Osoeri or Osoeri authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

*** Please have your order ID ready before contacting Customer Support.**

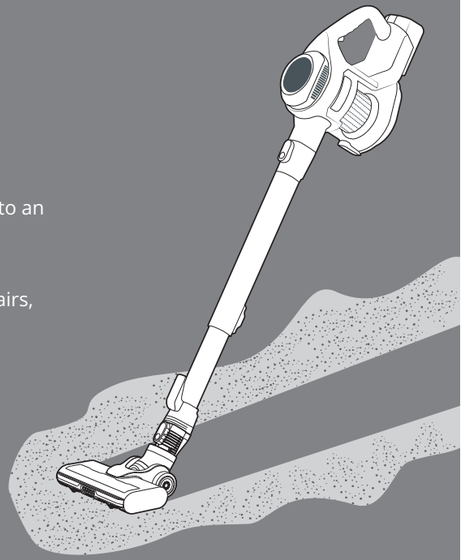

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)this device may not cause harmful interference, and
(2)this device must accept any interference received, including interference that may cause undesired operation.