

INSTALLATION
Product Manual


Version: 180079US-00-26A-FG

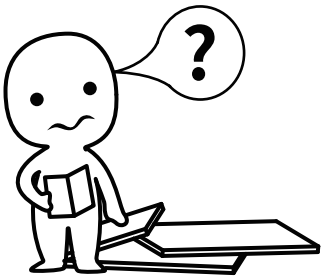

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

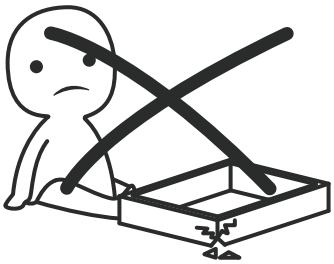


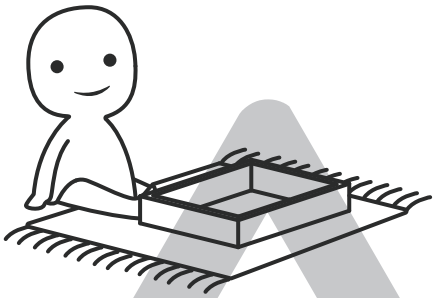

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



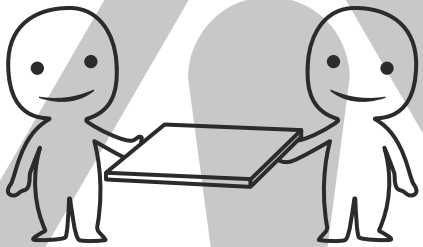

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

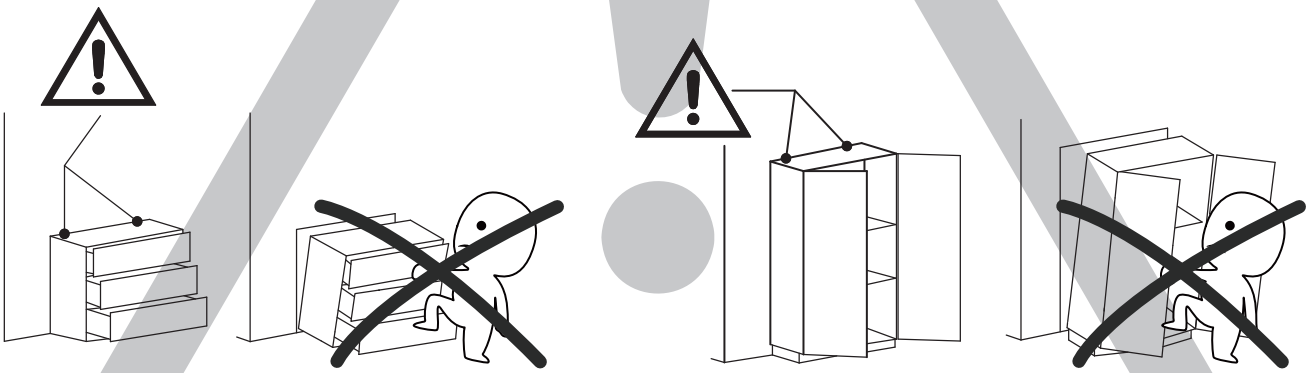

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.





For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.






Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.





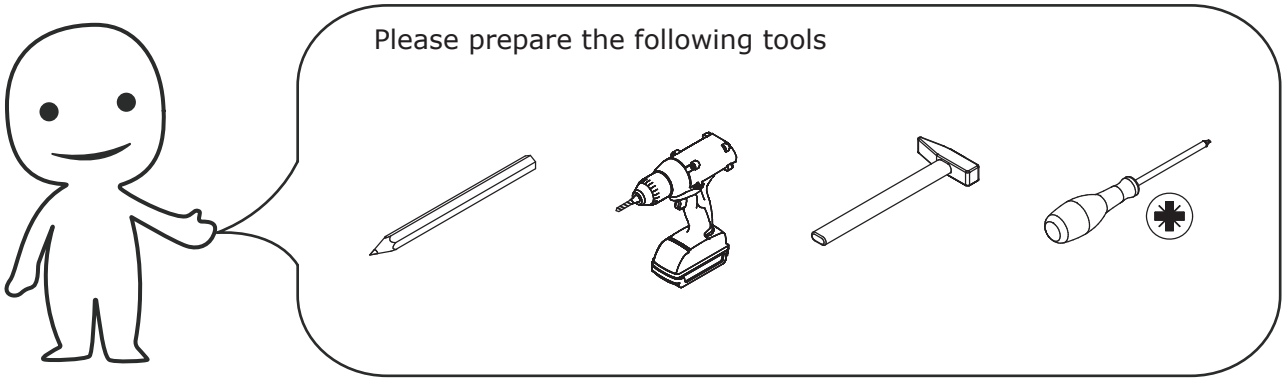










When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

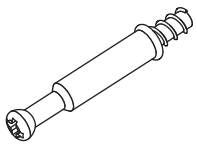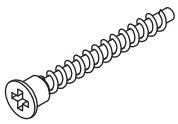A x 64+5	B x 64+3	C x 56+5	D x 46+5	E x 24+2
				
∅6 x 35 mm	∅15 x 9.5 mm	∅6 x 30 mm	∅3 x 12 mm	∅5 x 40 mm

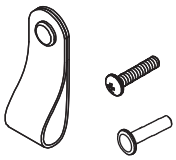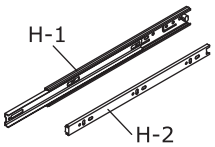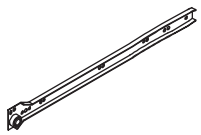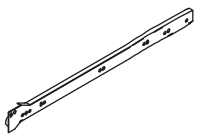F x 7	G x 2	H x 2	J-CL x 3	J-CR x 3
				
∅3 x 16 mm		L=290 mm	L=250 mm	L=250 mm

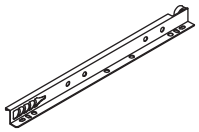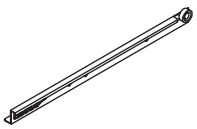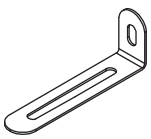J-DL x 3	J-DR x 3	K-1 x 1	K-2 x 1	K-3 x 1
				
L=250 mm	L=250 mm			

K-4 x 1	L x 50+5	N x 20+1	P x 12+2	Q x 3
				
∅3.5 x 14 mm		∅4 x 30 mm	∅3.5 x 14 mm	∅6 x 20 mm

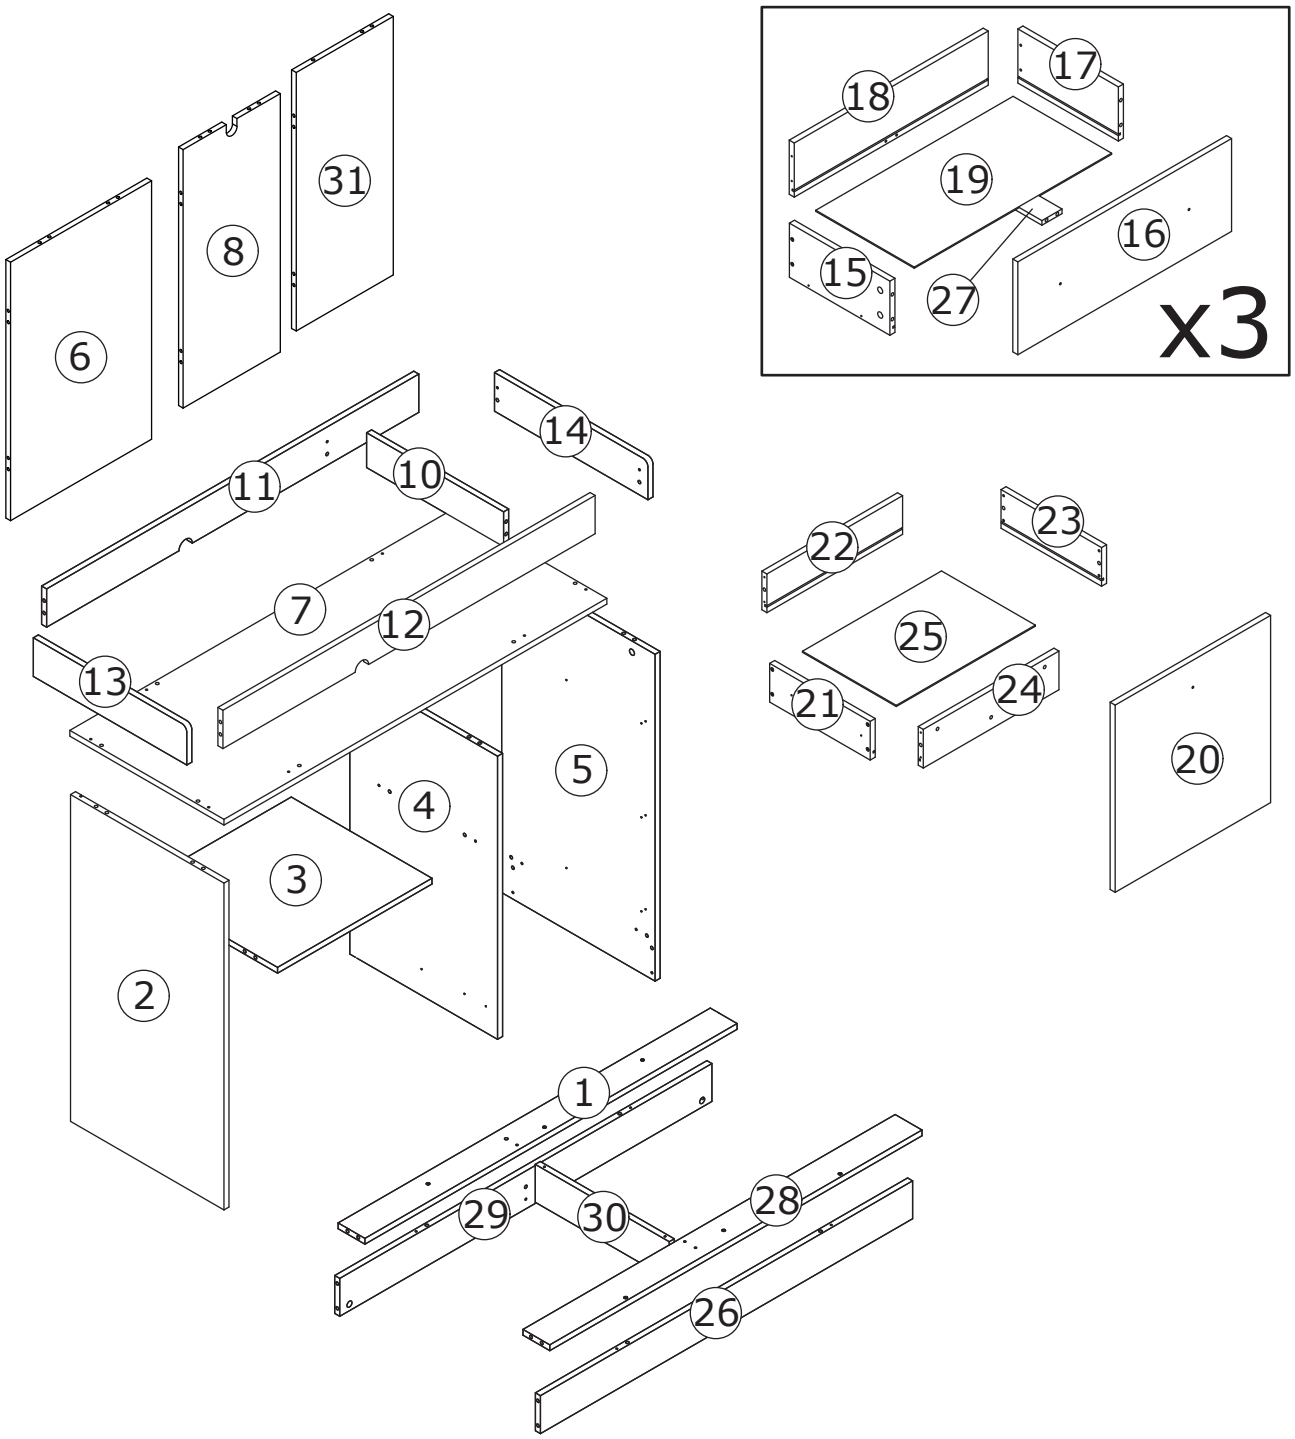

⚠WARNING






Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

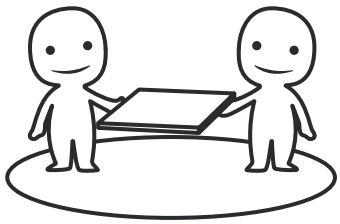


ASSEMBLED BY 2 ADULTS


Sllides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant I'assemblage.
Après la séparation, mettez de côté jusqu'au moment de I'assemblage.

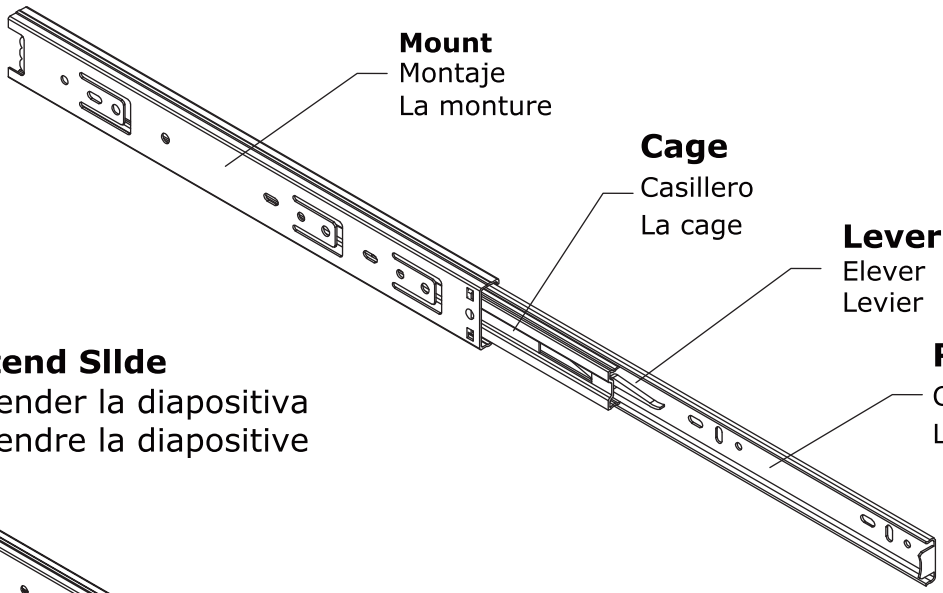


STEP 1: Extend Sllde
Extender la diapositiva
Extendre la diapositive



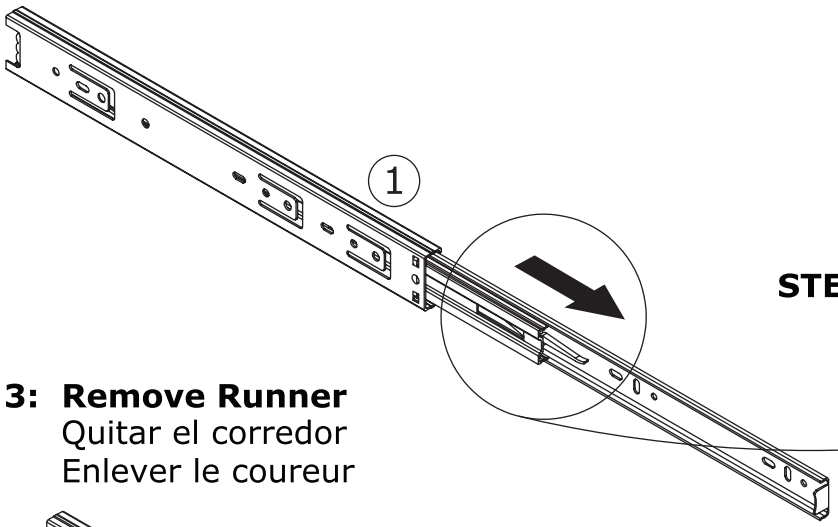



STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

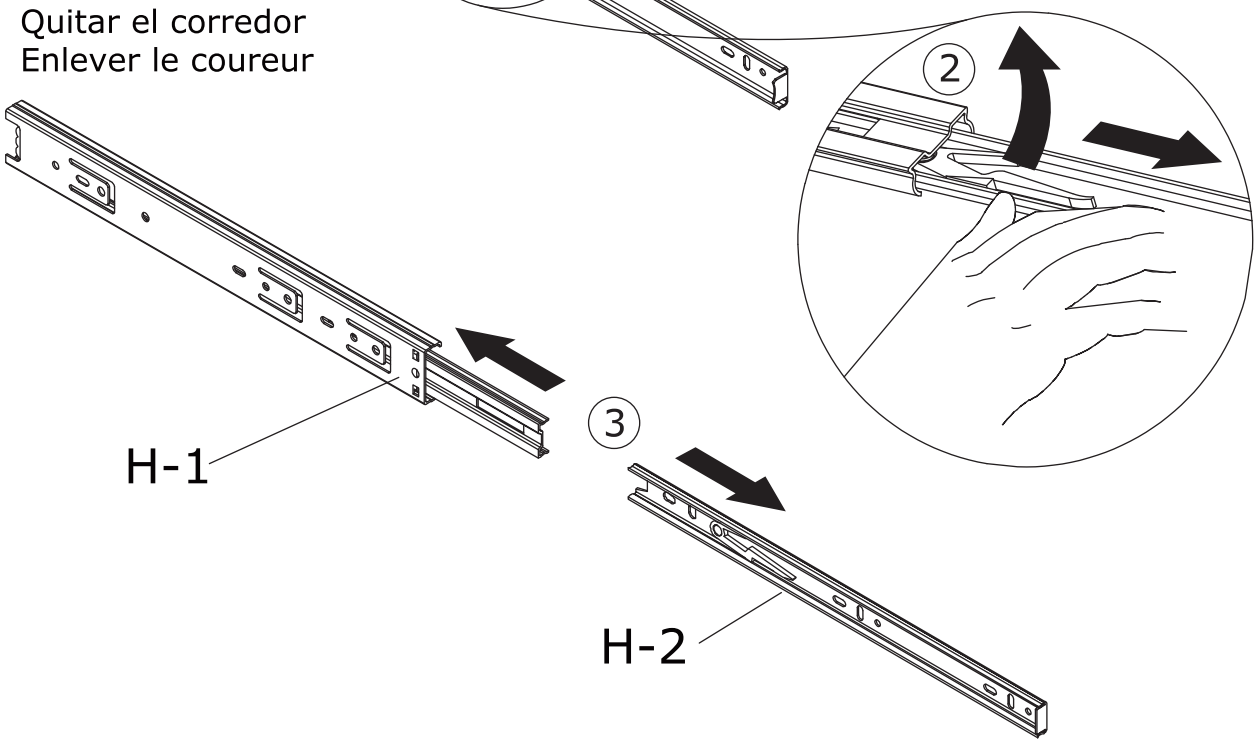


1

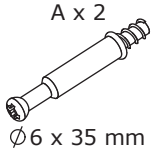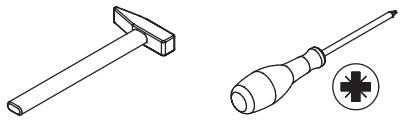A x 2	C x 2	
		
∅6 x 35 mm	∅6 x 30 mm	

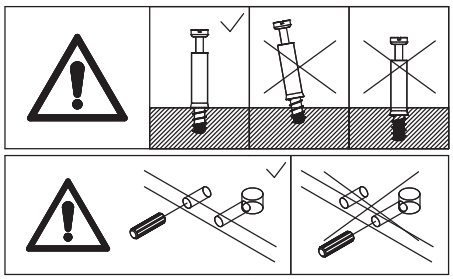

Screw eccentric rod (A) and insert wooden dowel (C) to part 26 and 29 as shown.

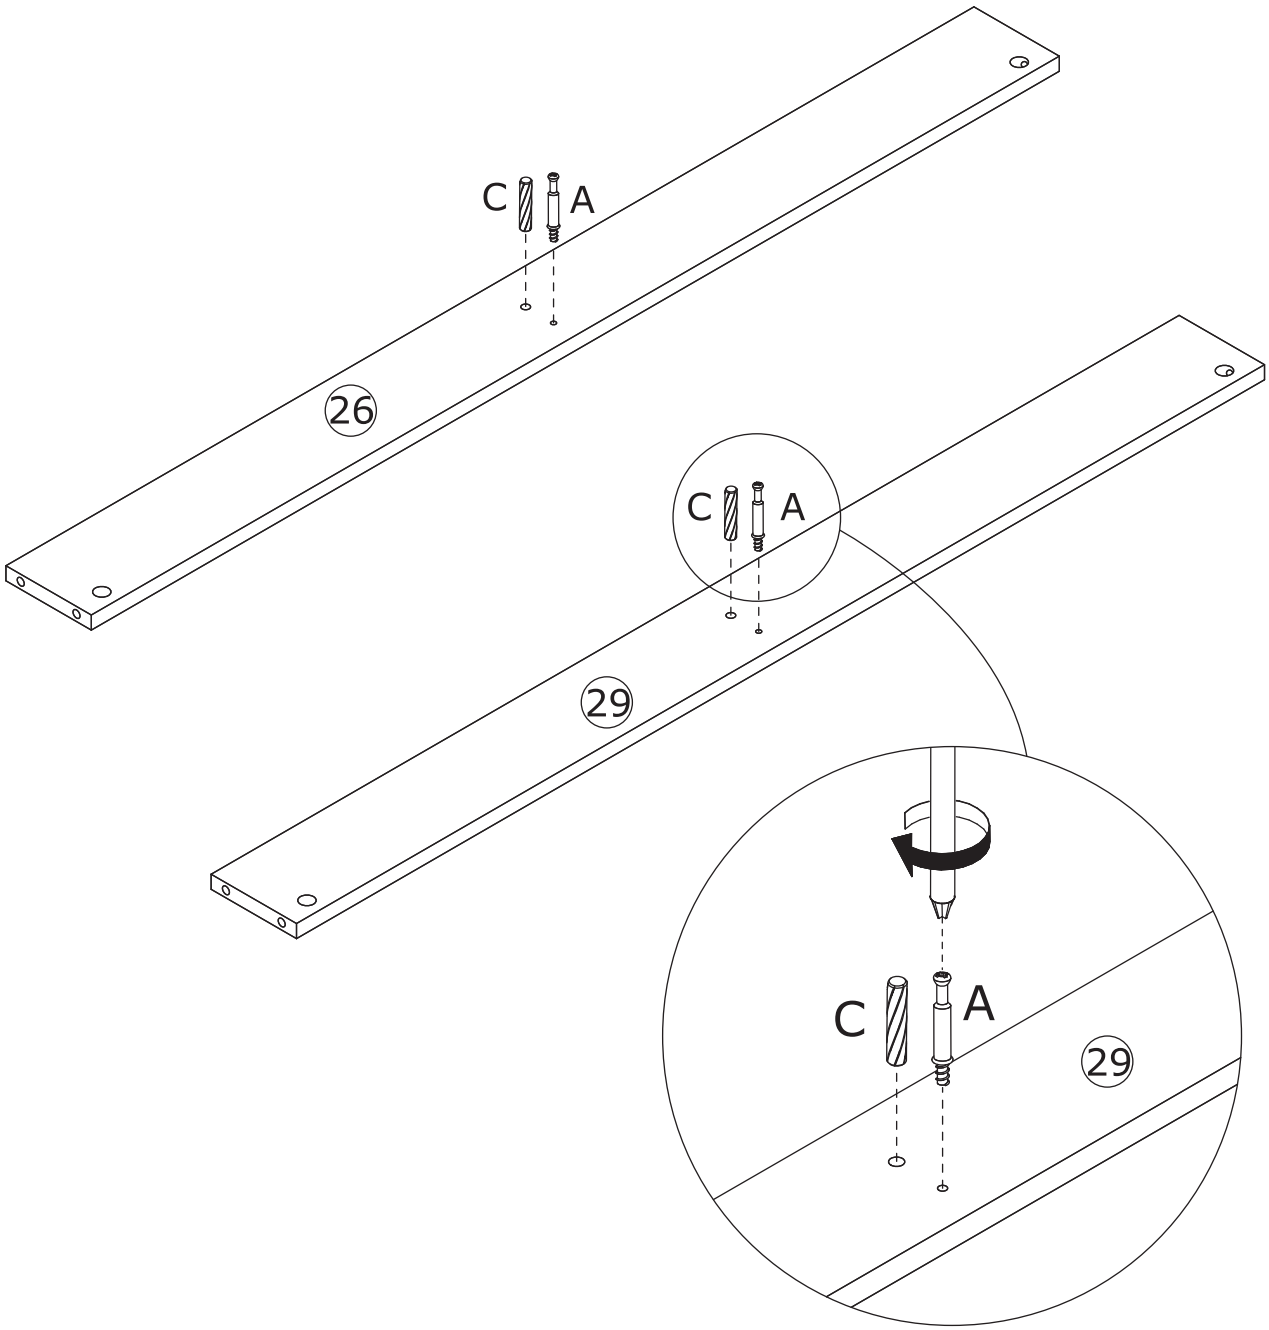



2

B x 2




∅15 x 9.5 mm






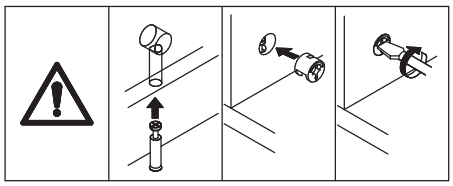


Connect part 30 to part 29 and 26, then tighten by turning eccentric cam (B) clockwise.

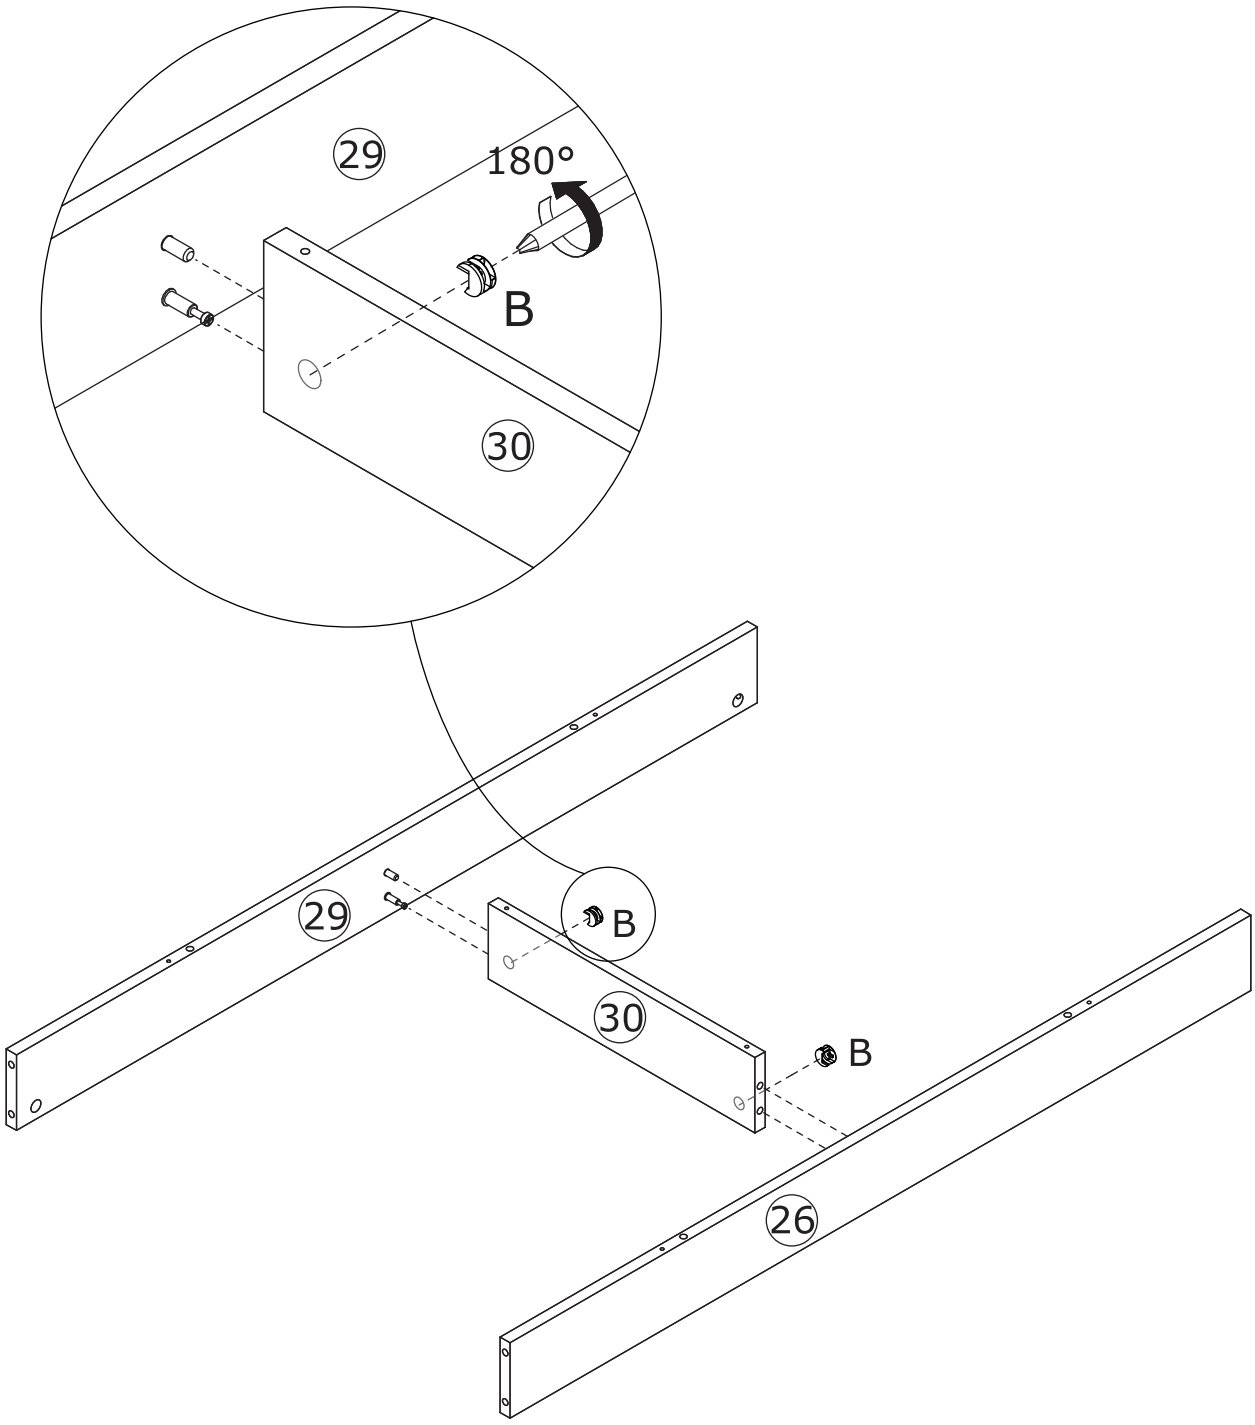


3



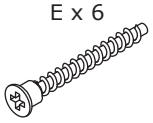
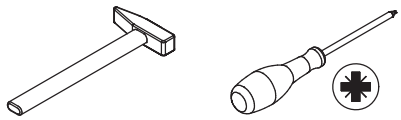
C x 4	E x 6	
		
∅6 x 30 mm	∅5 x 40 mm	

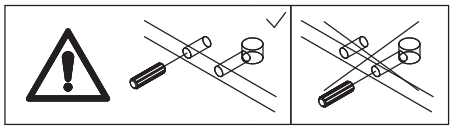


Connect part 1 and 28 to part 29 and 26 using wood dowel (C), then secure them with screw (E).

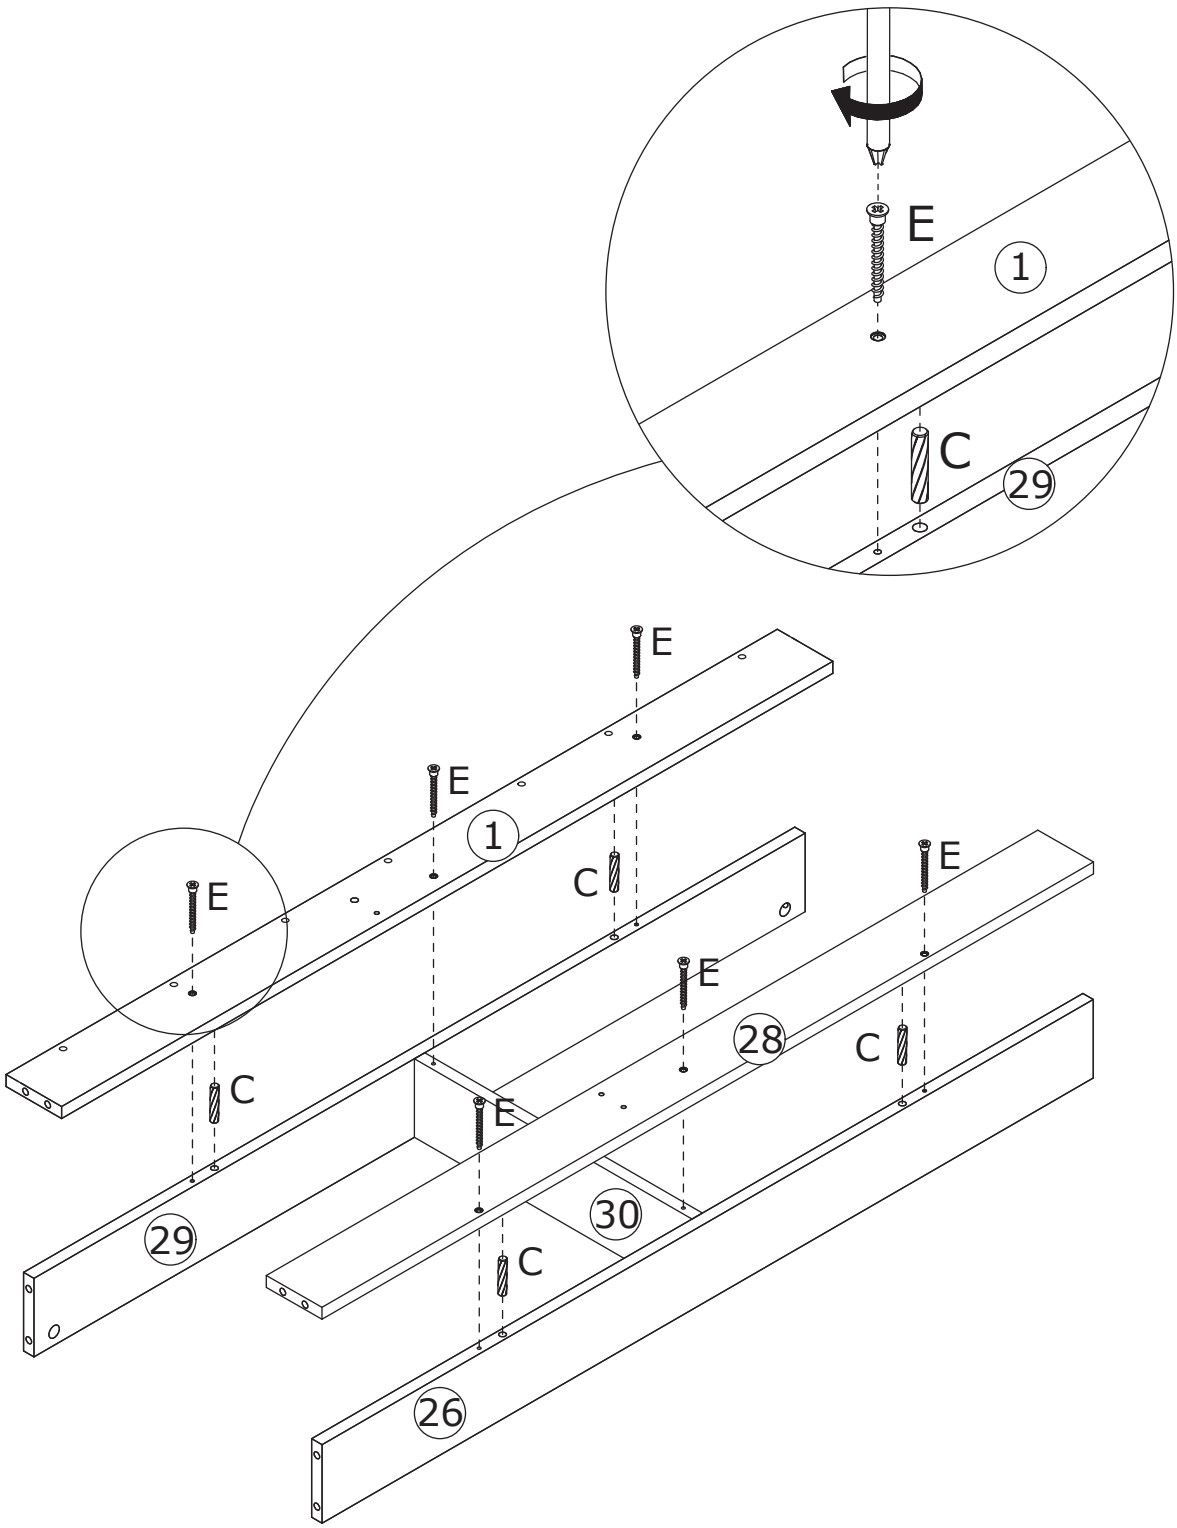


4

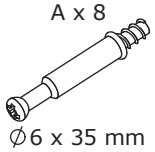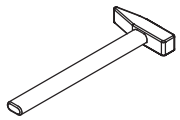A x 8	C x 8	
		 
∅6 x 35 mm	∅6 x 30 mm	

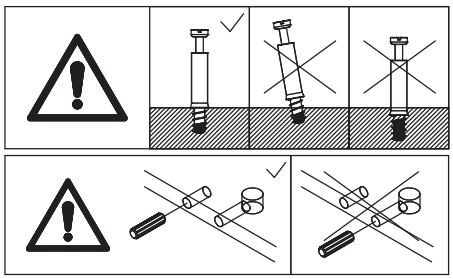

Screw eccentric rod (A) and insert wooden dowel (C) to part 2 as shown.

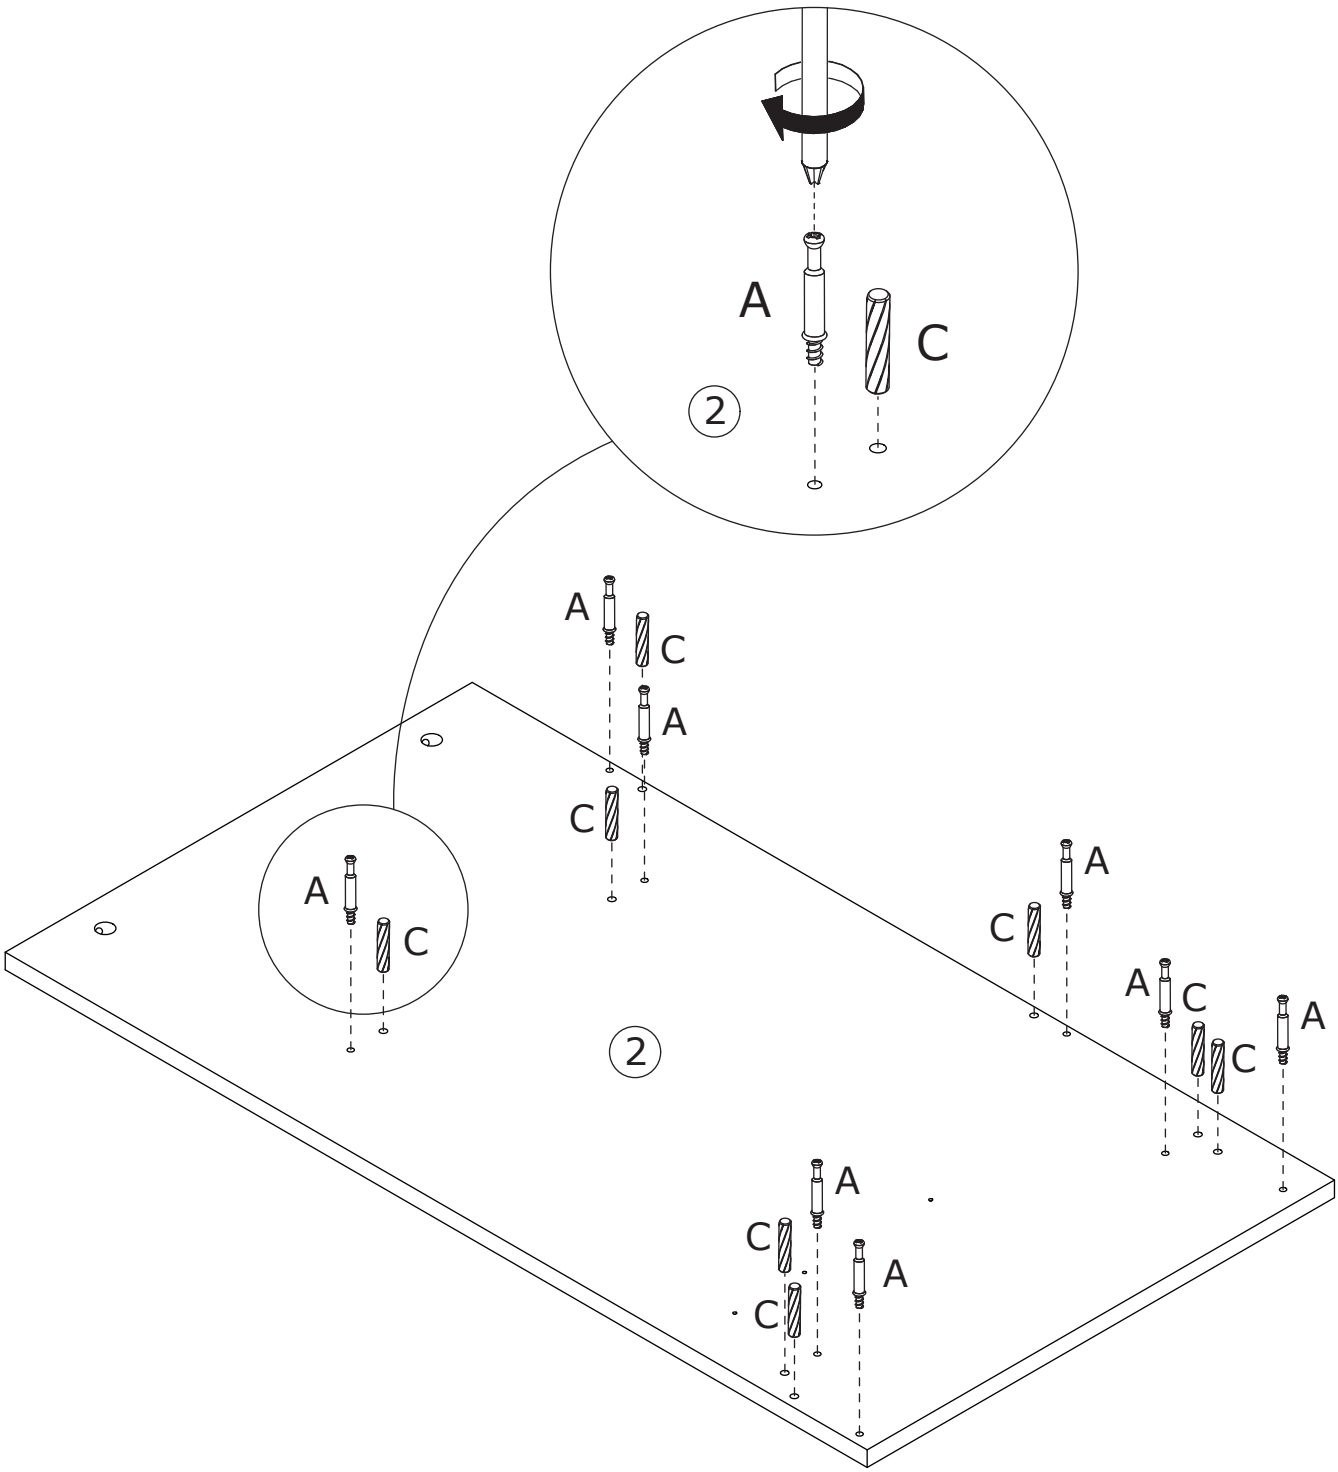



5

B x 2




∅15 x 9.5 mm



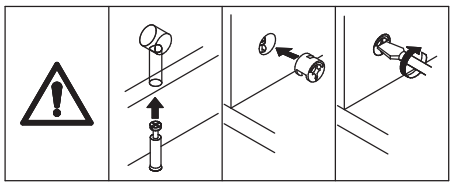

Connect part 2 and part 6, then tighten by turning eccentric cam (B) clockwise.

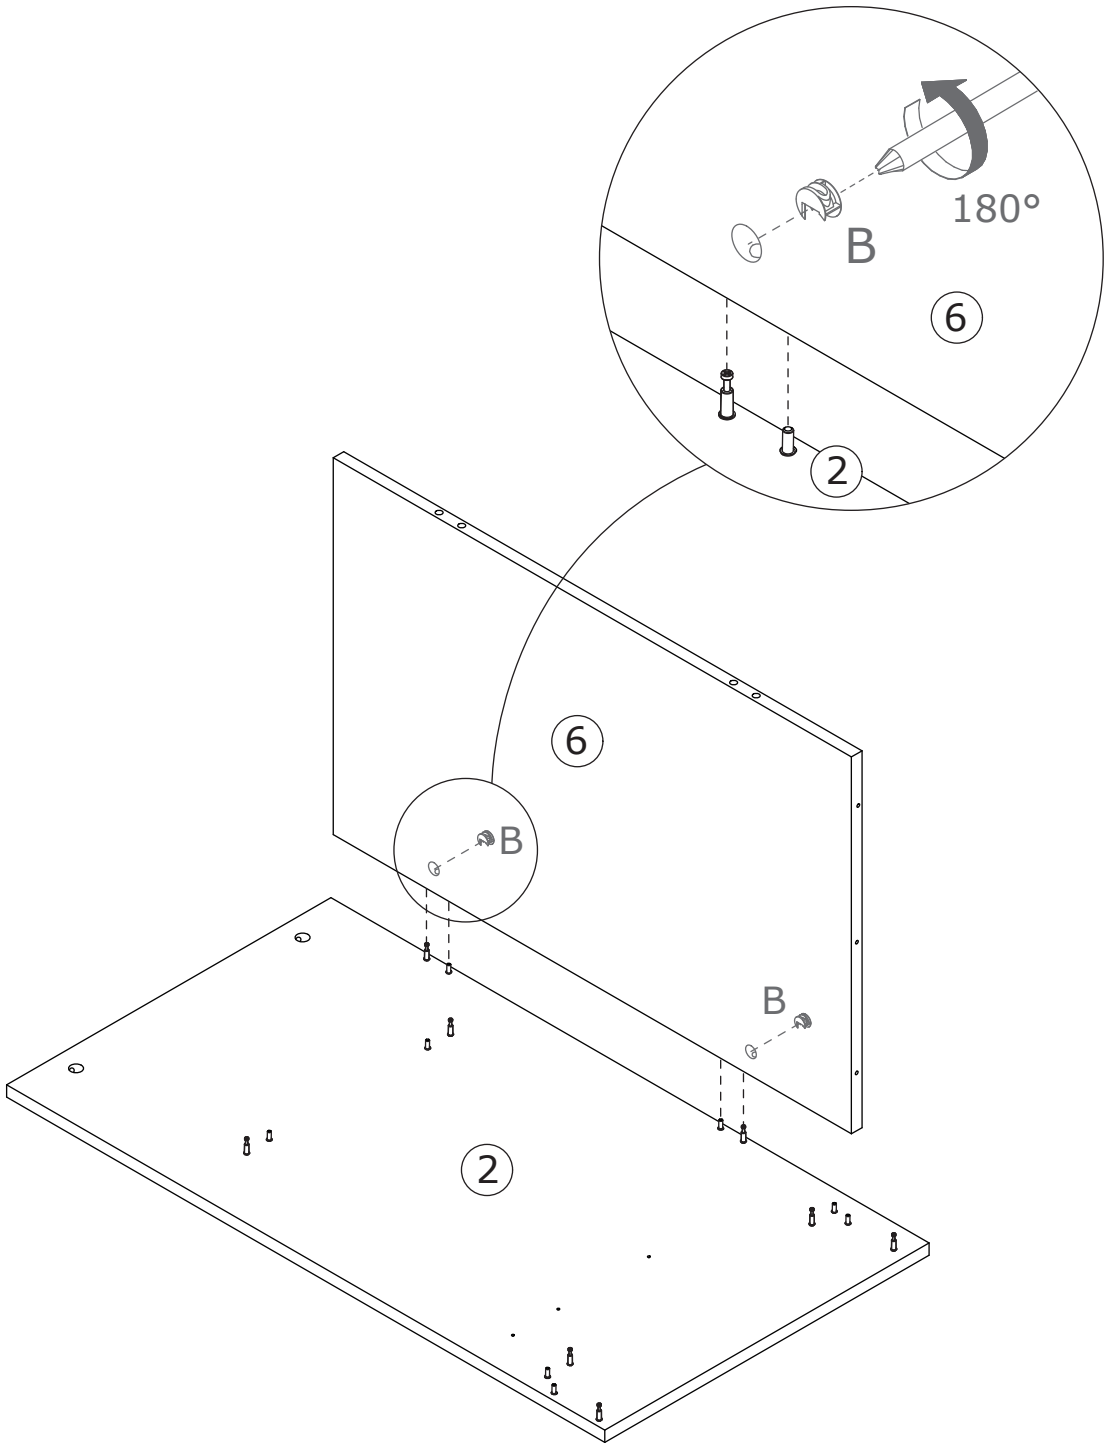



6

B x 2




∅15 x 9.5 mm



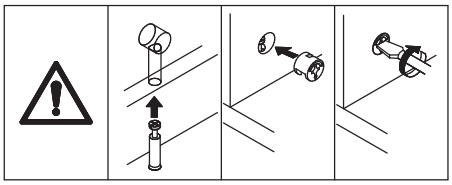

Connect part 3 and part 2, then tighten by turning eccentric cam (B) clockwise.

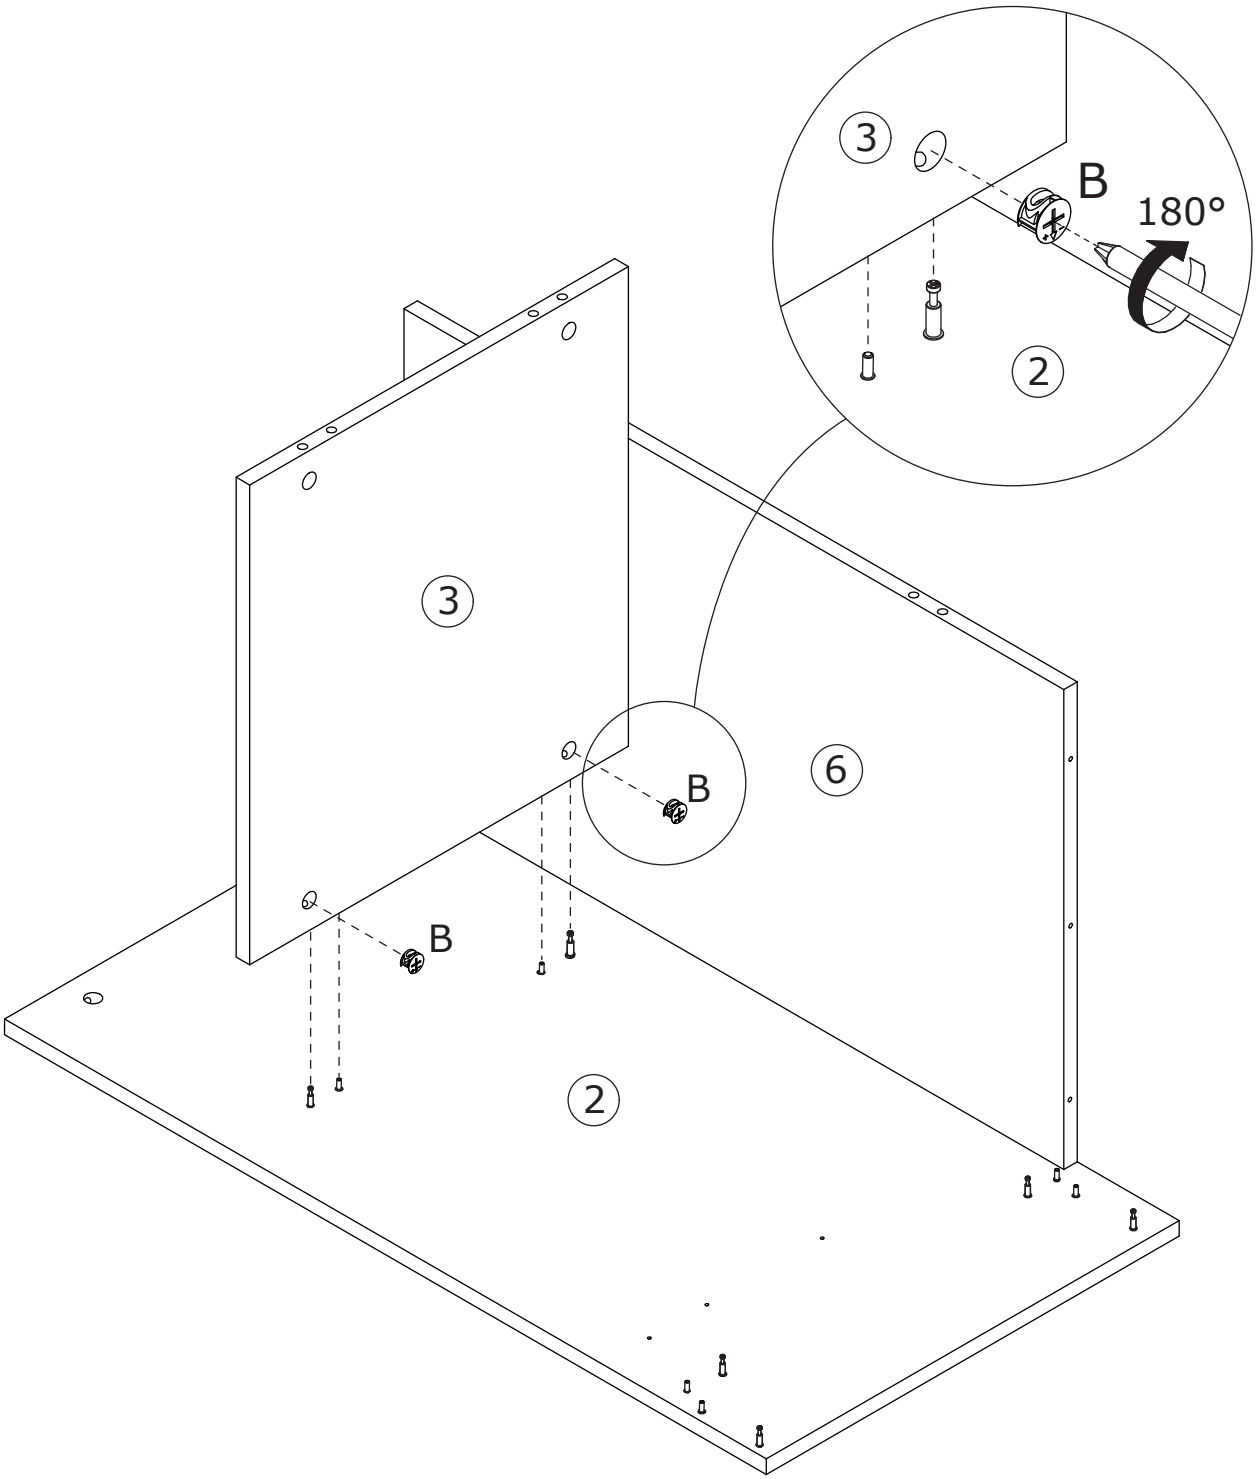



7

B x 4




∅15 x 9.5 mm






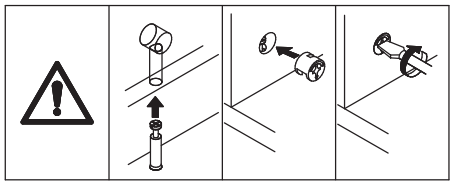


Connect part 2 to part 26, 28, 29 and 1, then tighten by turning eccentric cam (B) clockwise.

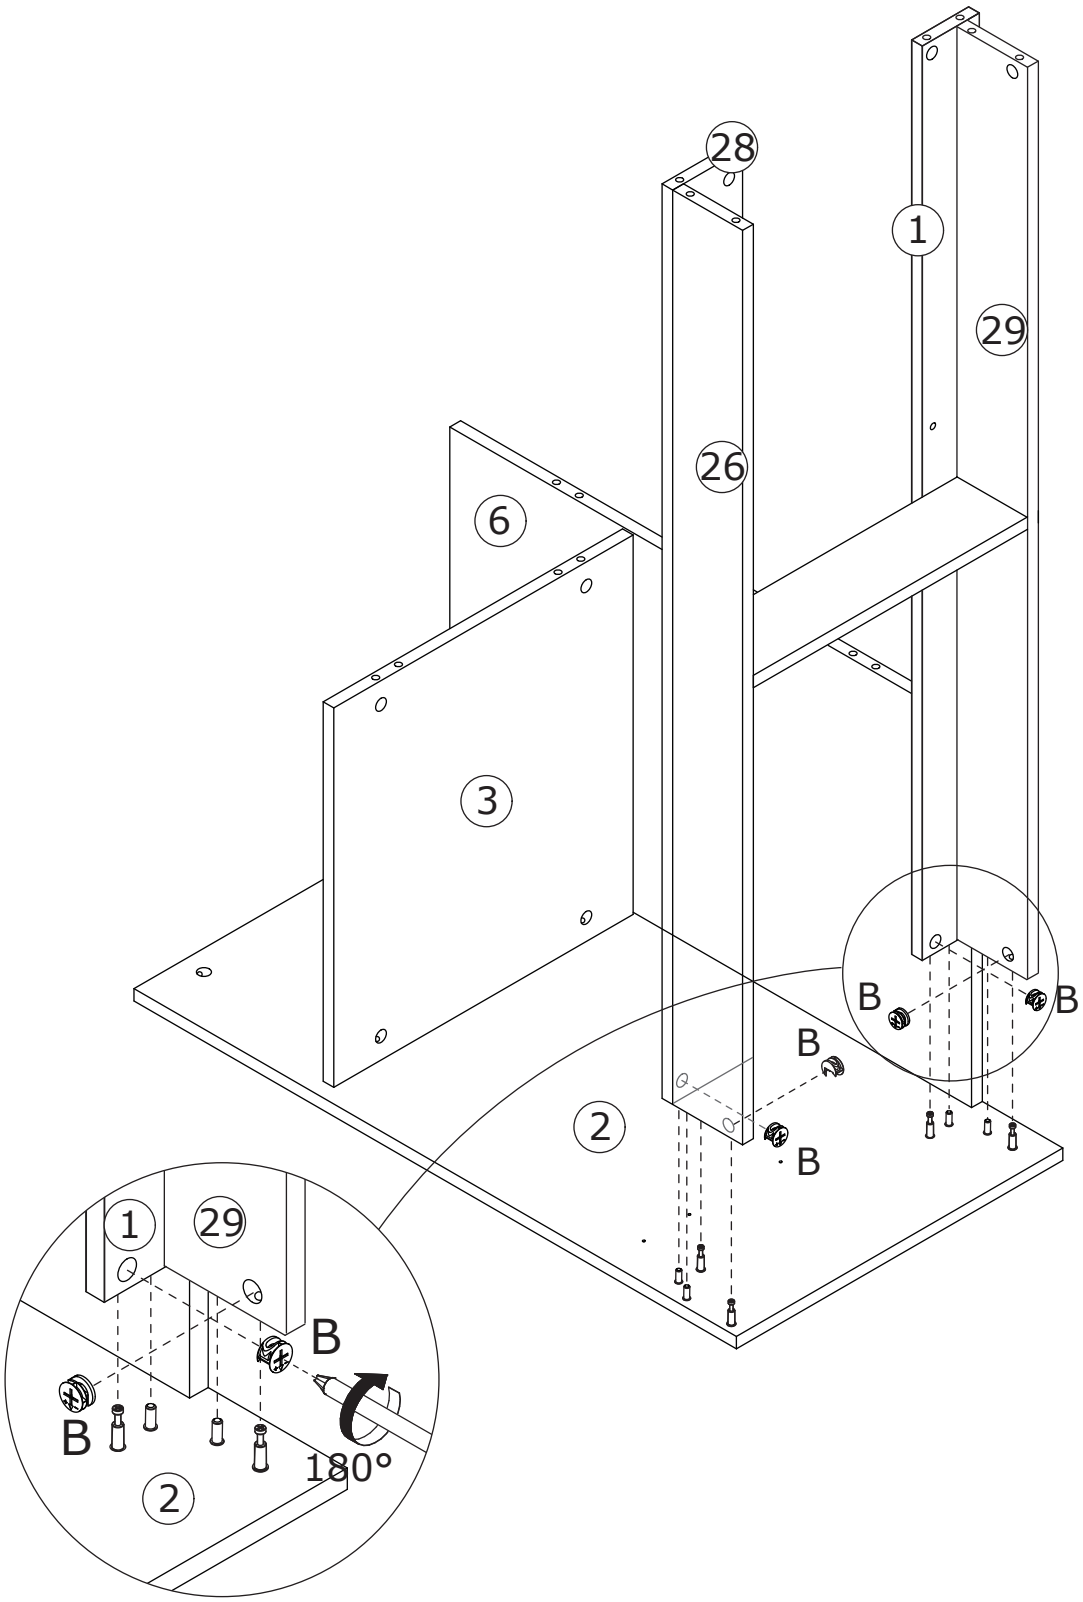


8

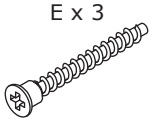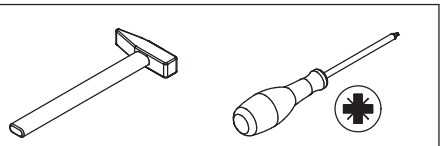C x 4	E x 3	
		
∅6 x 30 mm	∅5 x 40 mm	

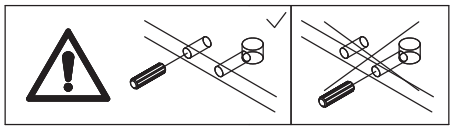



Insert wood dowel (C) into part 3 and 6, then secure part 1 to part 6 using screw (E).

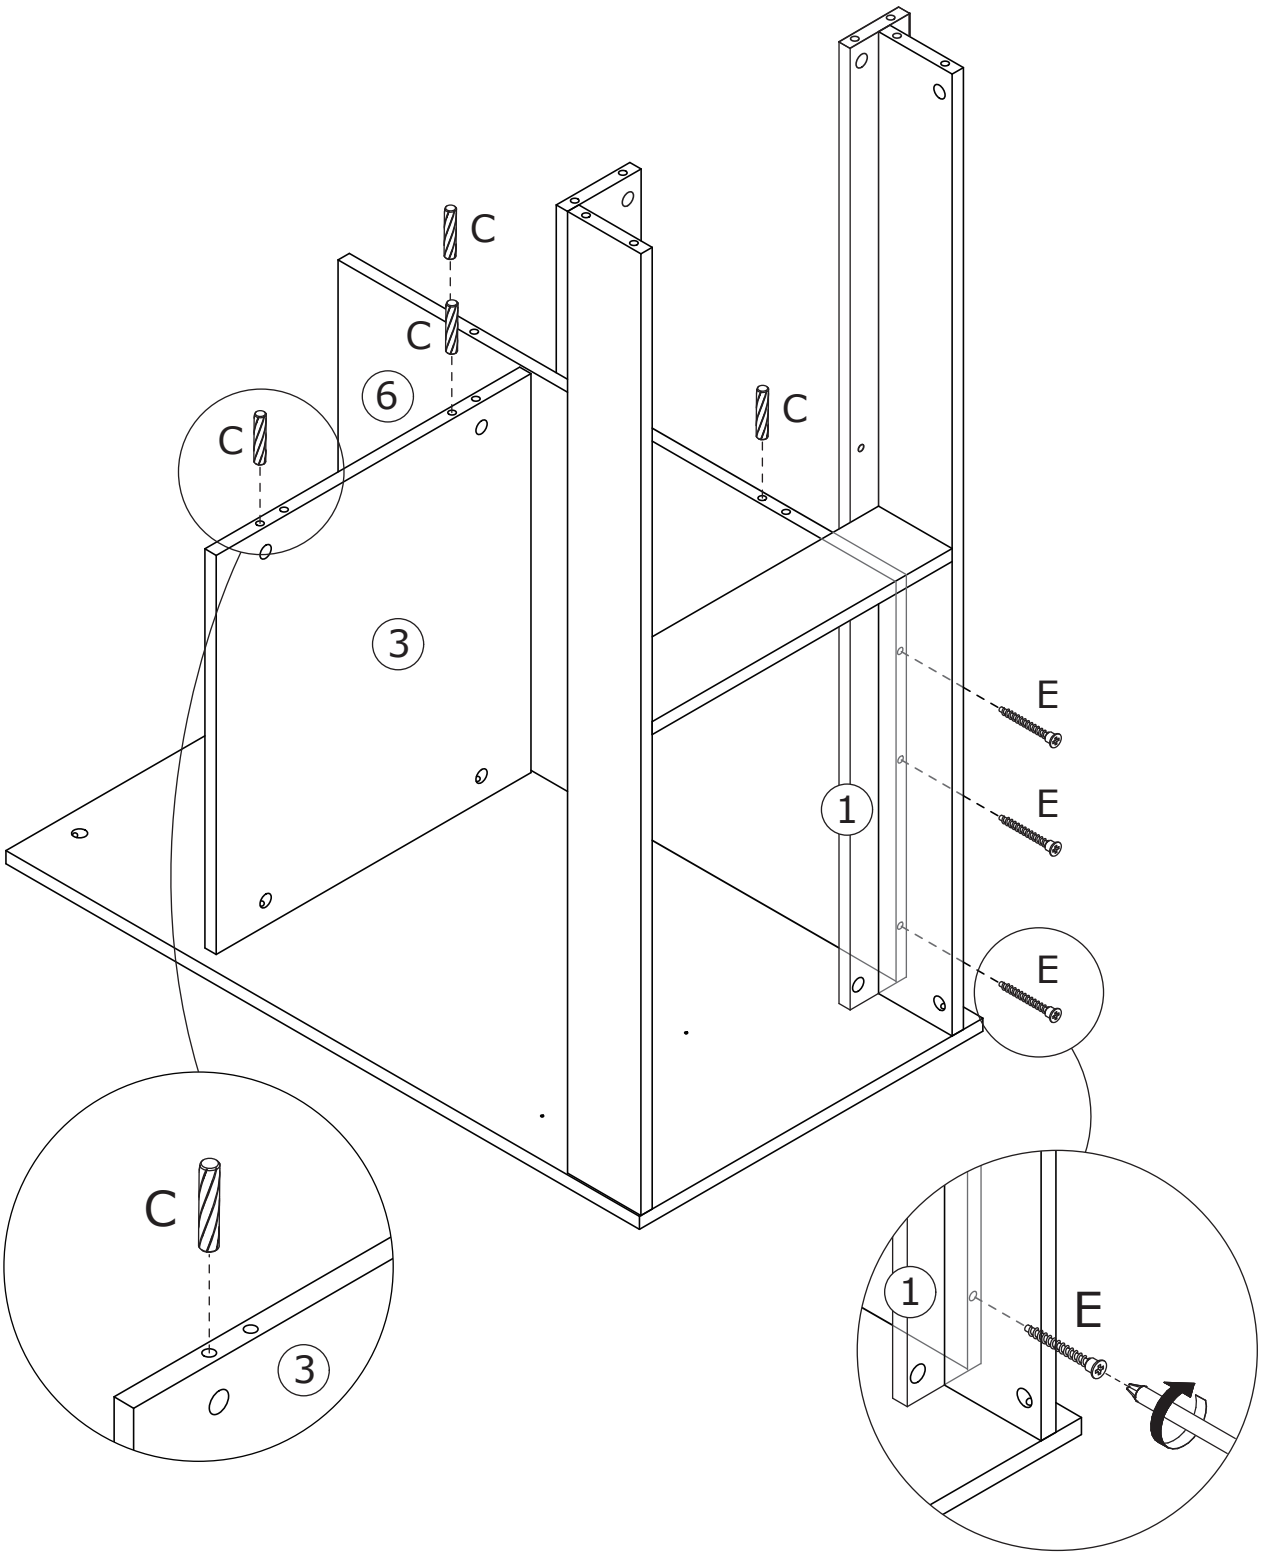


9





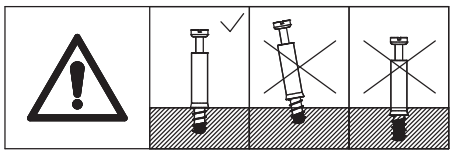

Screw eccentric rod (A) into **both sides of** part 4.

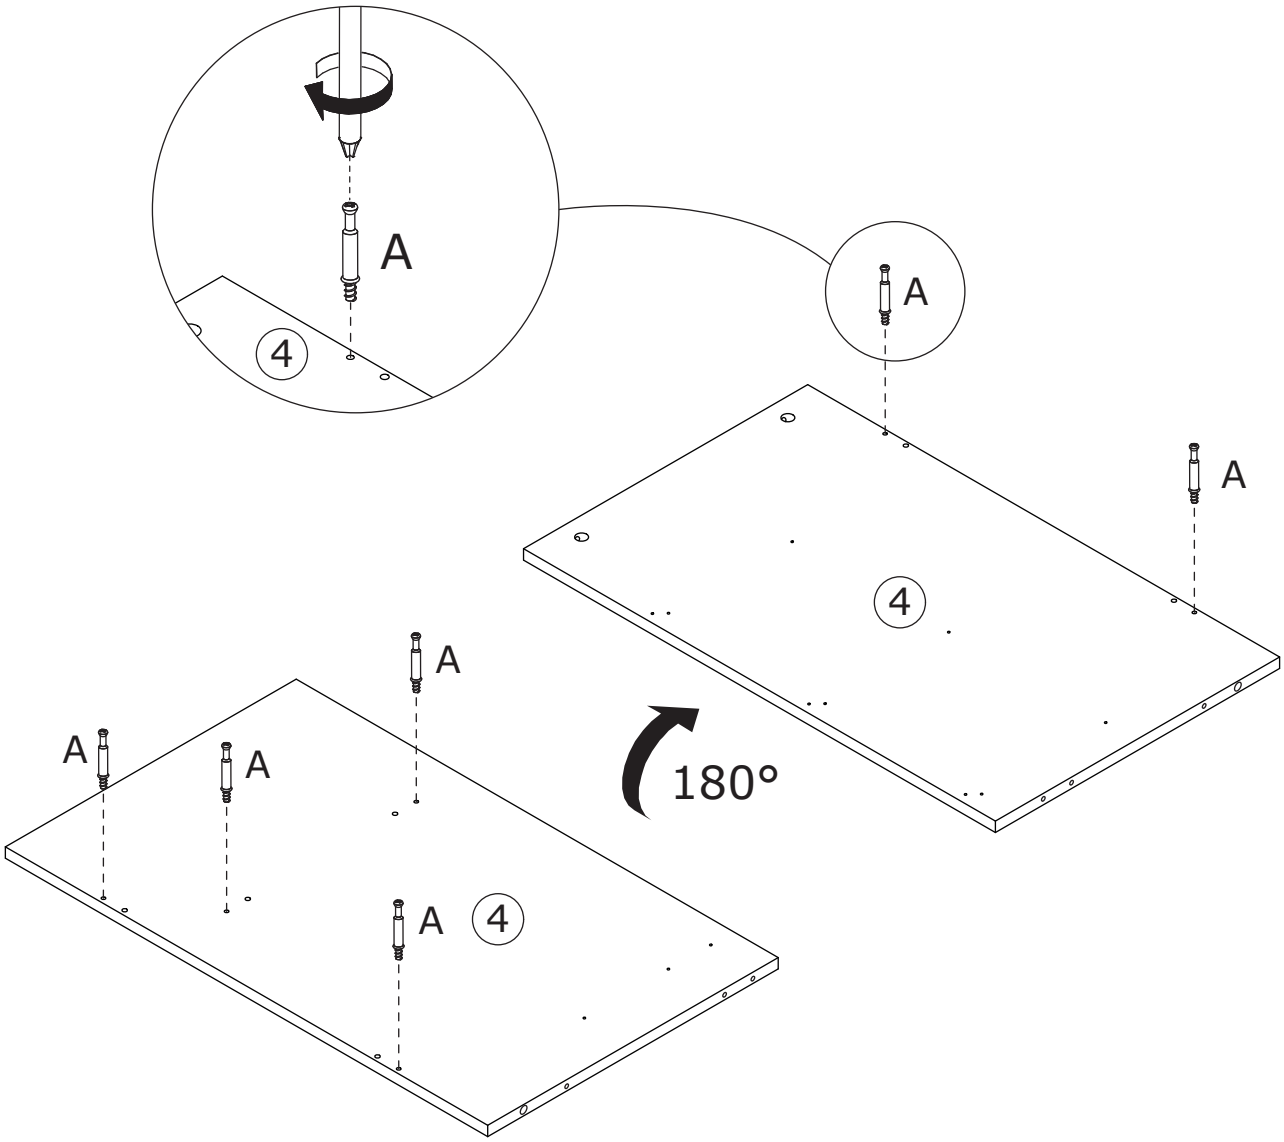



10

B x 4




∅15 x 9.5 mm



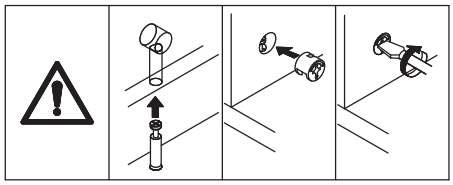


Connect part 4 to part 3 and 6, then tighten by turning eccentric cam (B) clockwise.

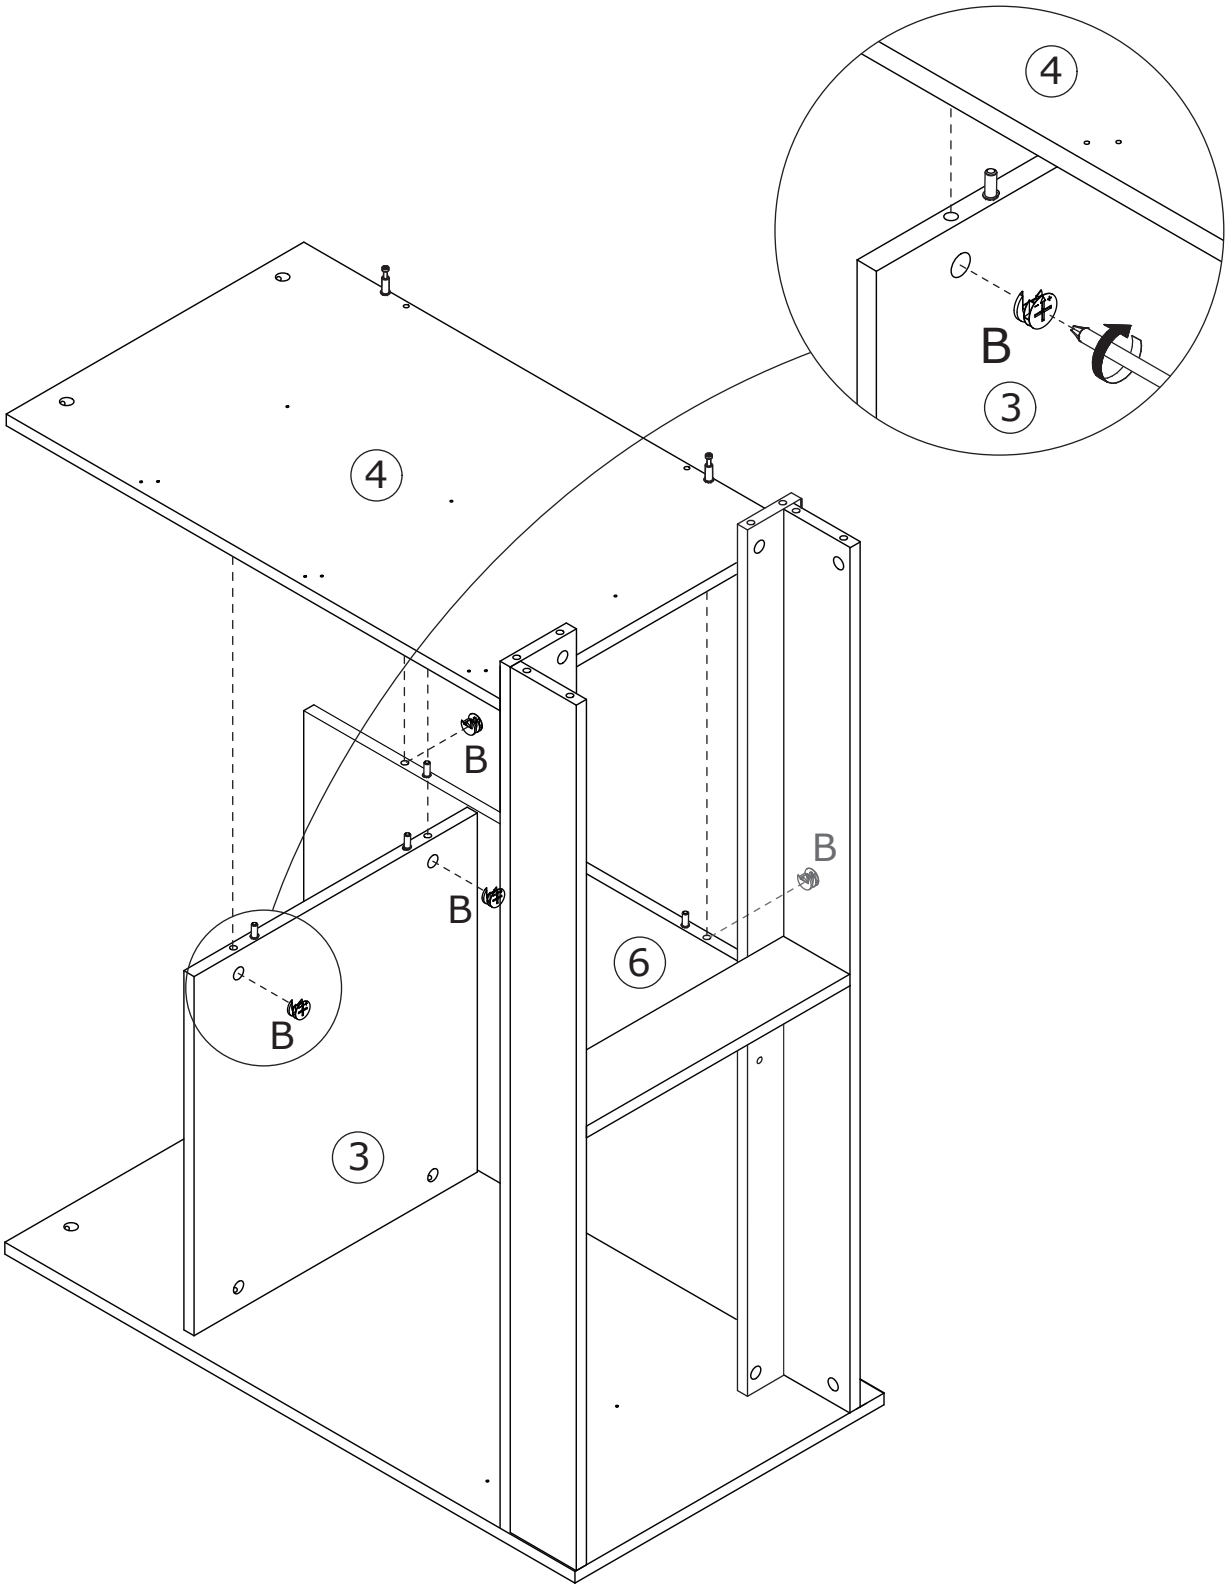


11


E x 3

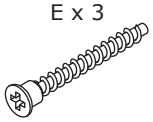



∅5 x 40 mm




Secure part 4 to part 28 and 1 using screw (E).

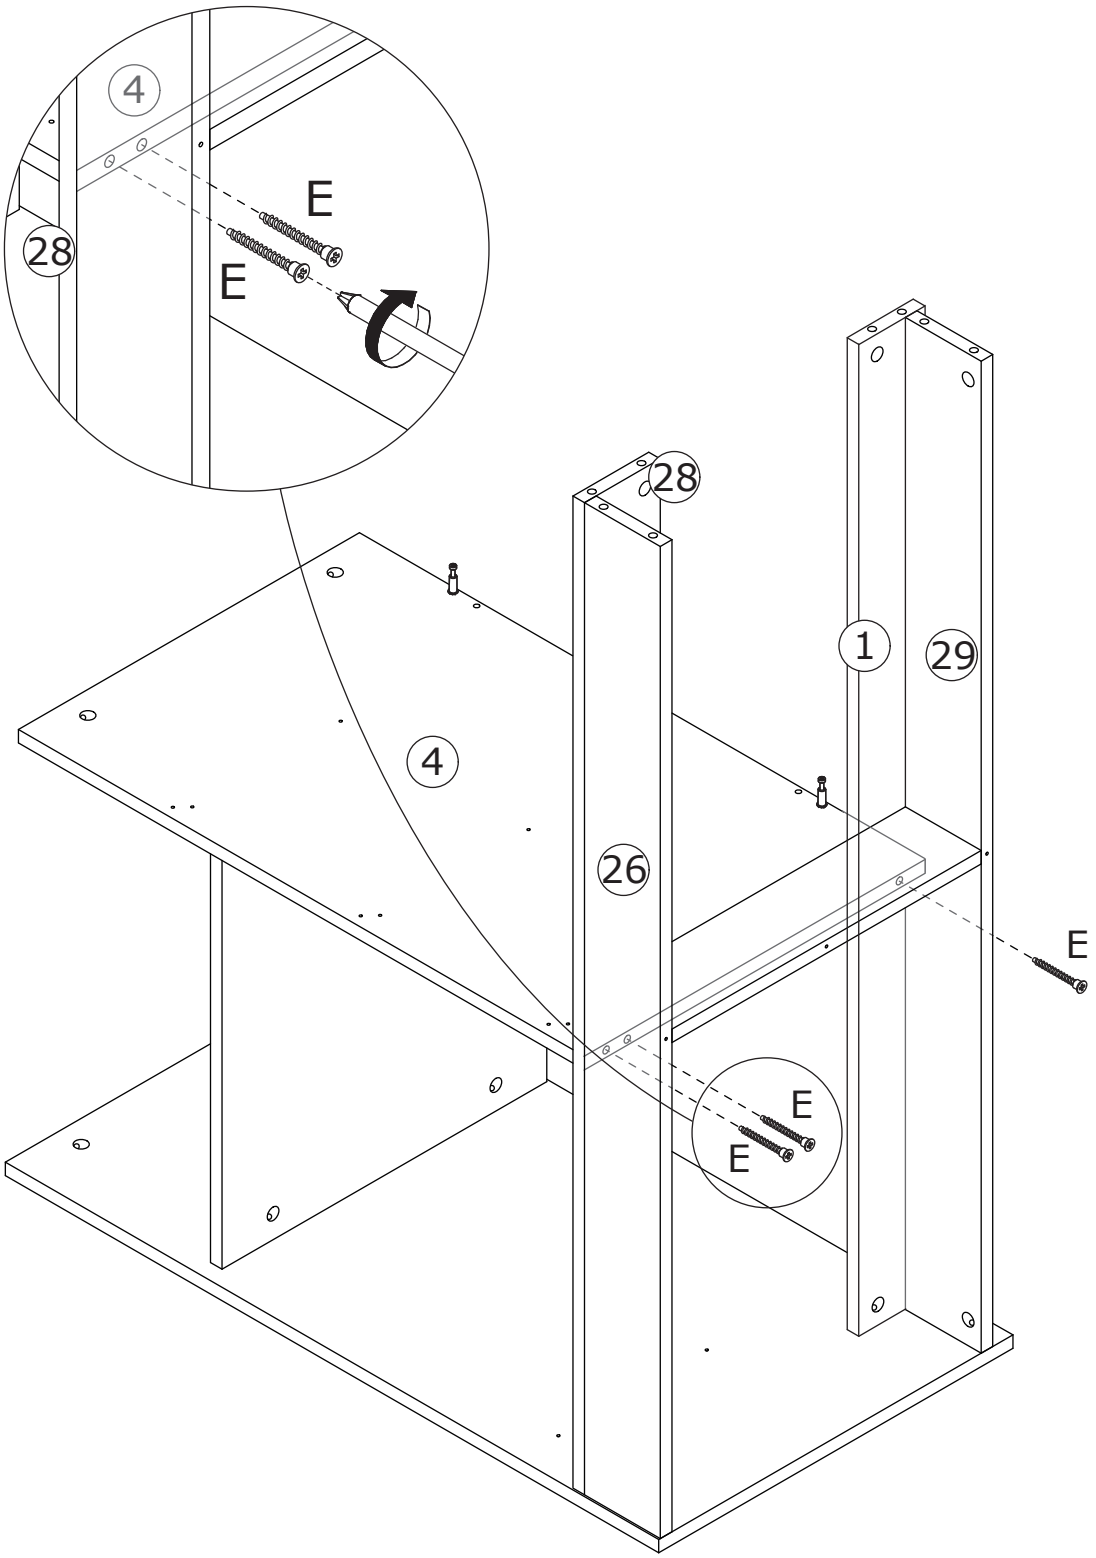


12

B x 2	C x 2	
		
∅15 x 9.5 mm	∅6 x 30 mm	

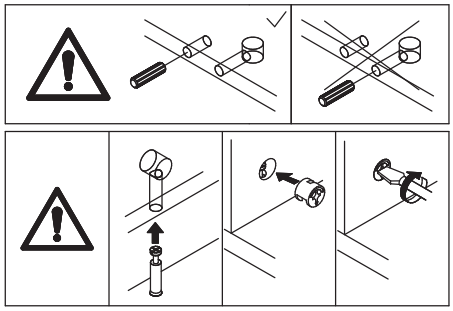


Connect part 8 and part 4 using wood dowel (C), then tighten by turning eccentric cam (B) clockwise.

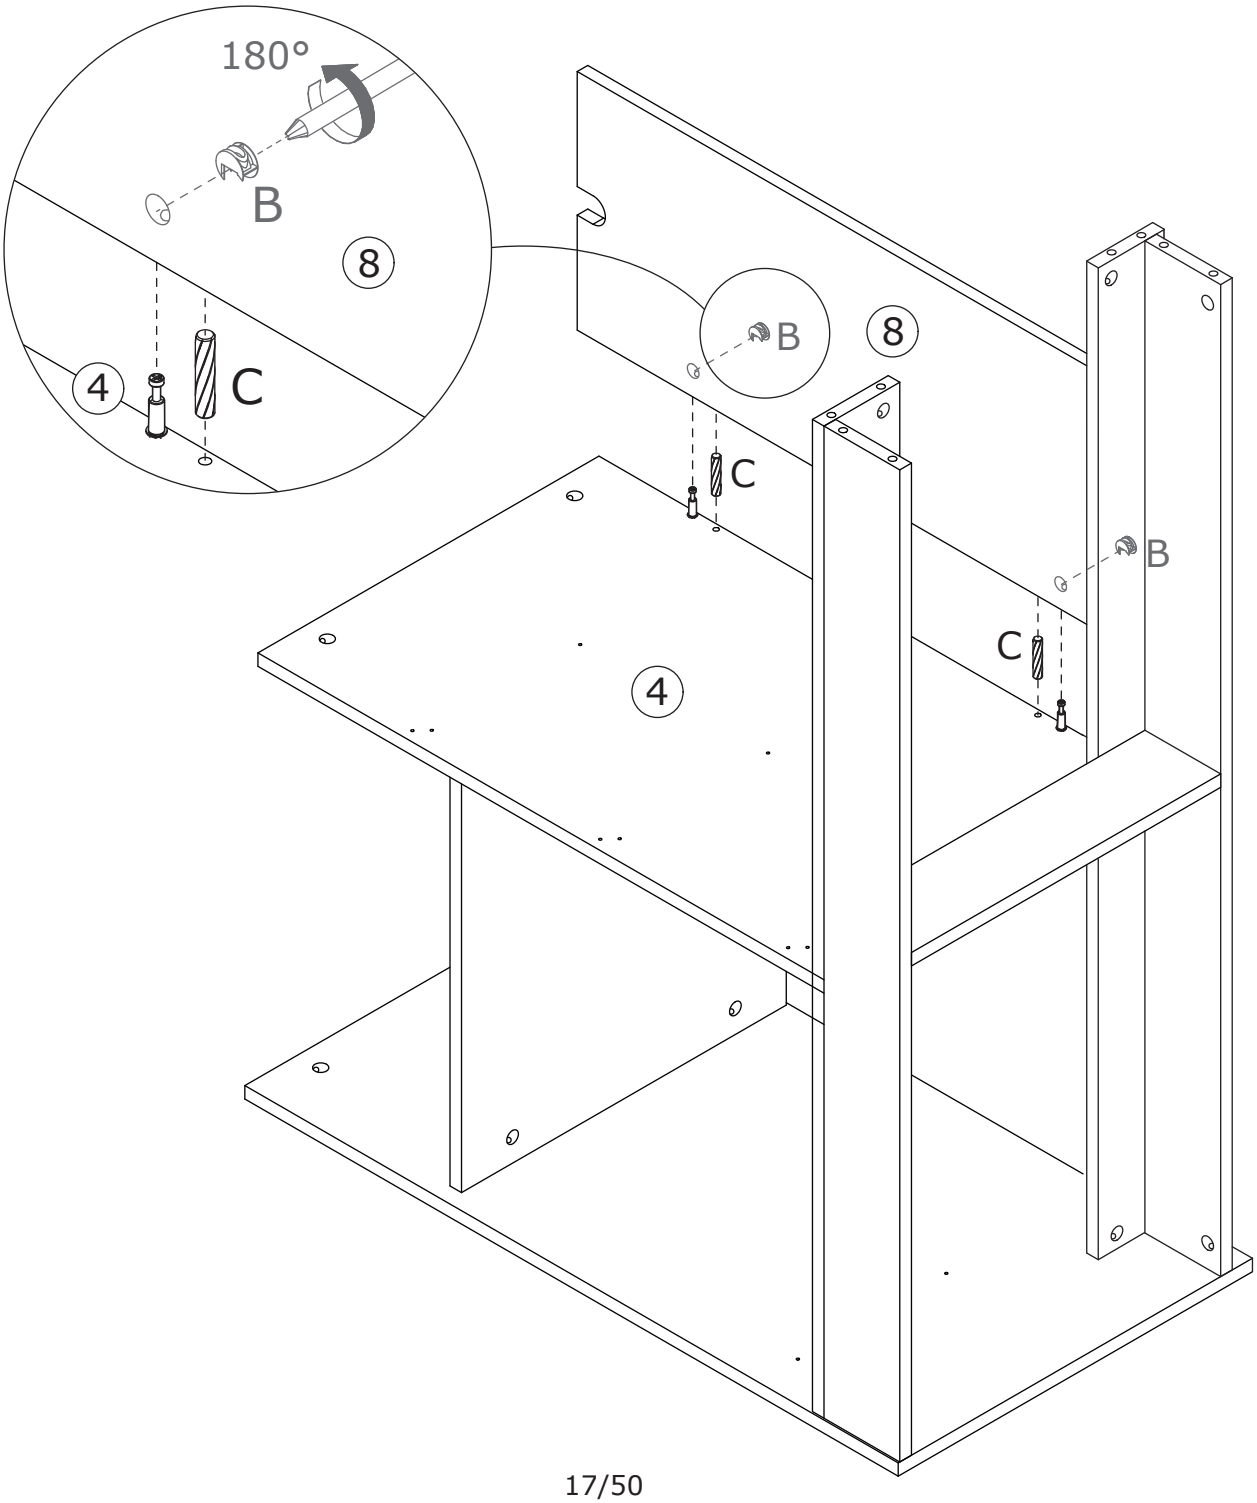


13


E x 2

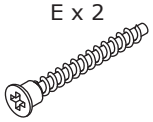




∅5 x 40 mm




Secure part 8 to part 1 using screw (E).

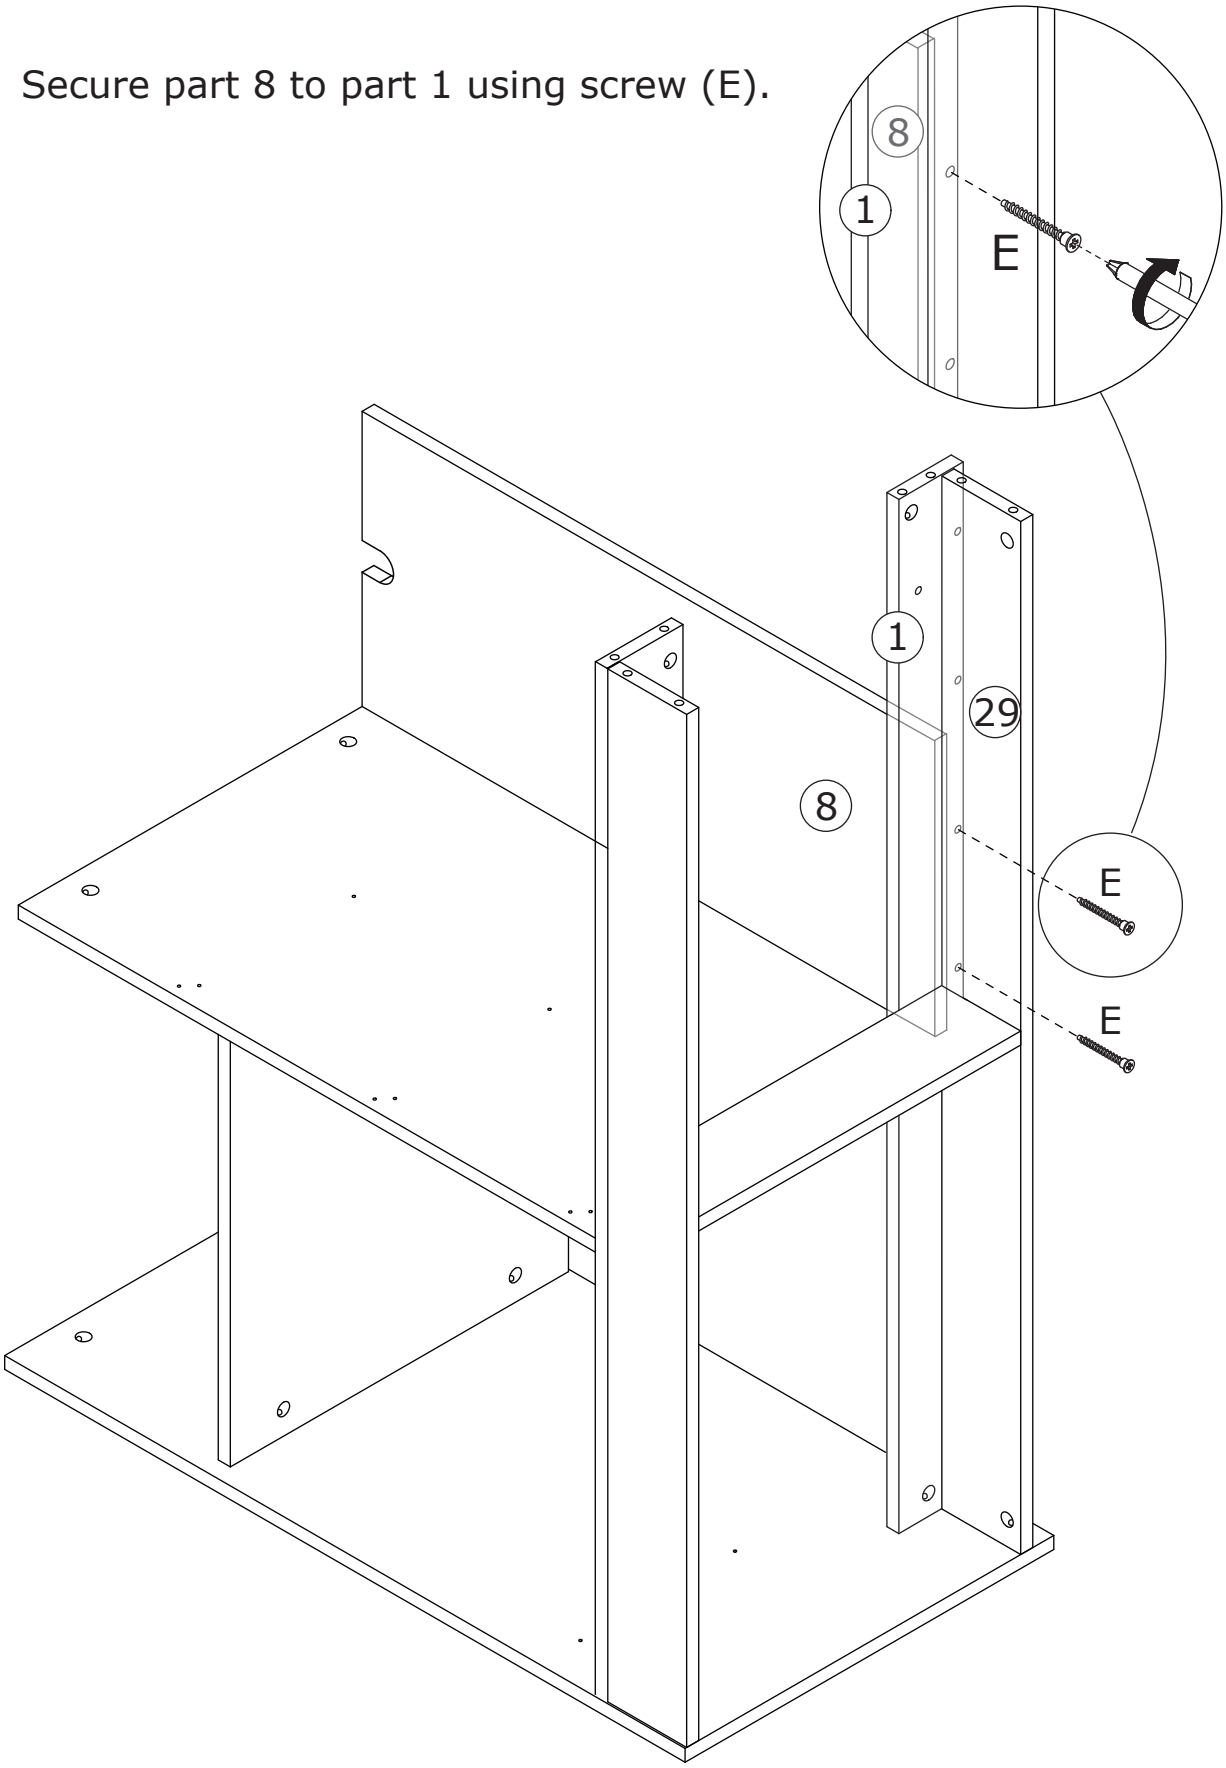


14

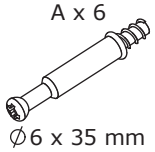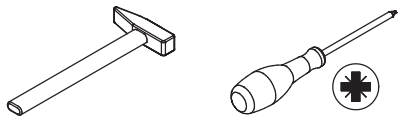A x 6	C x 2	
		
∅6 x 35 mm	∅6 x 30 mm	

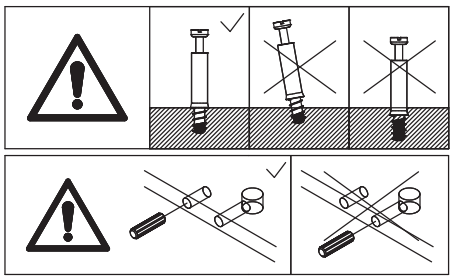

Screw eccentric rod (A) and insert wooden dowel (C) to part 5.

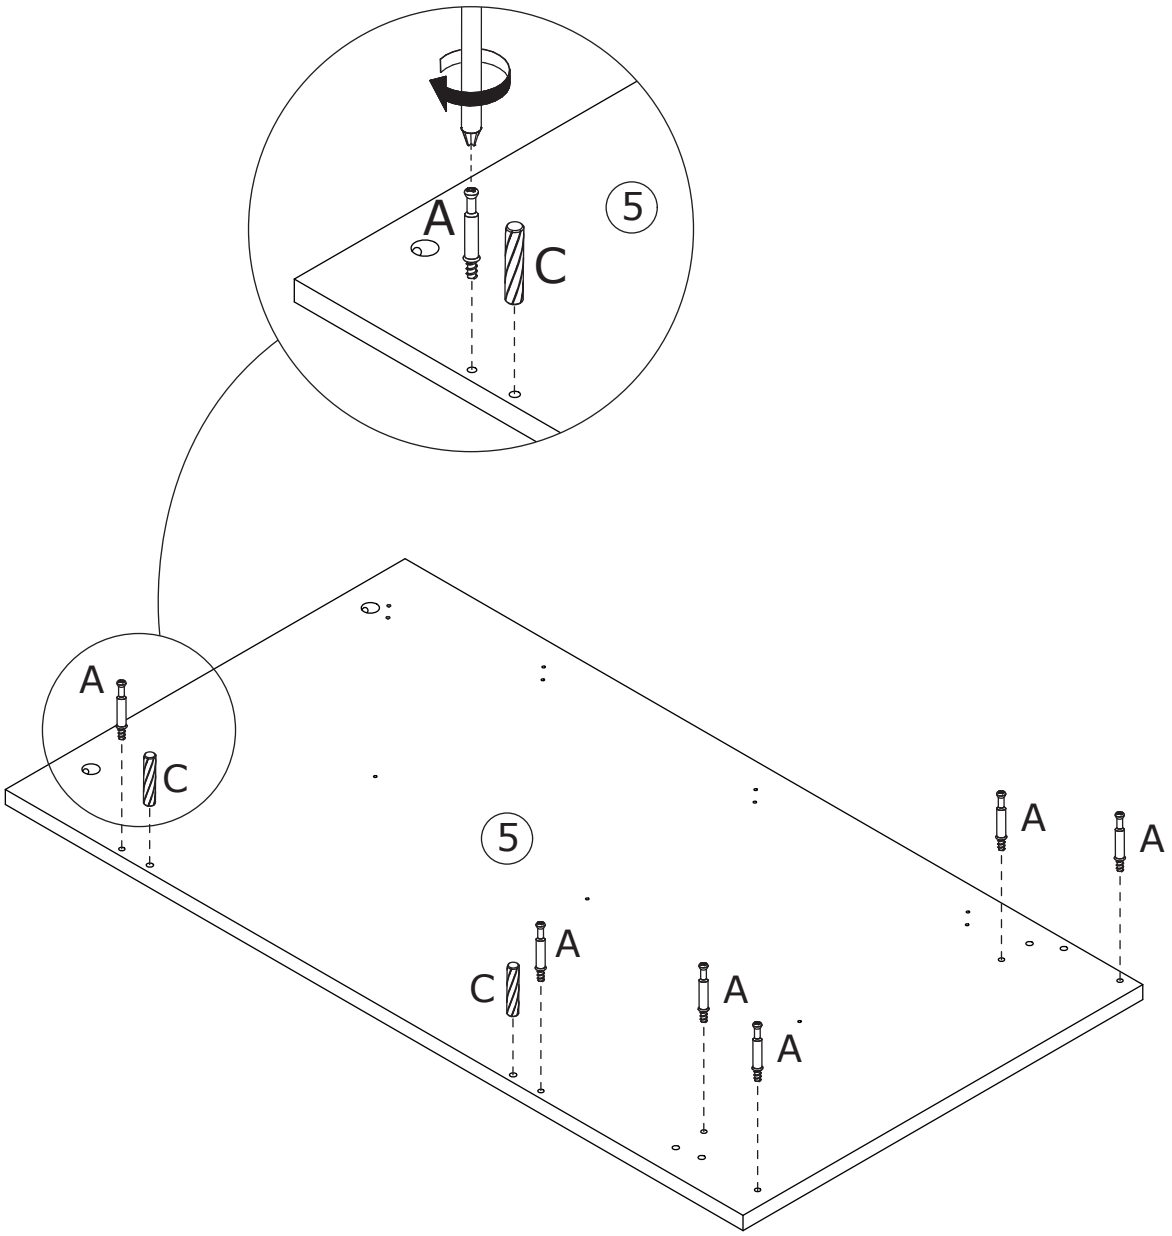



15

B x 2




∅15 x 9.5 mm





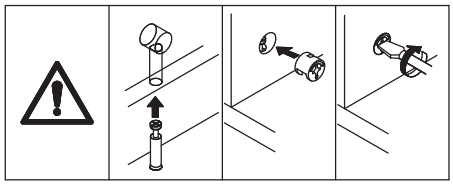


Connect part 31 to part 5, then tighten by turning eccentric cam (B) clockwise.

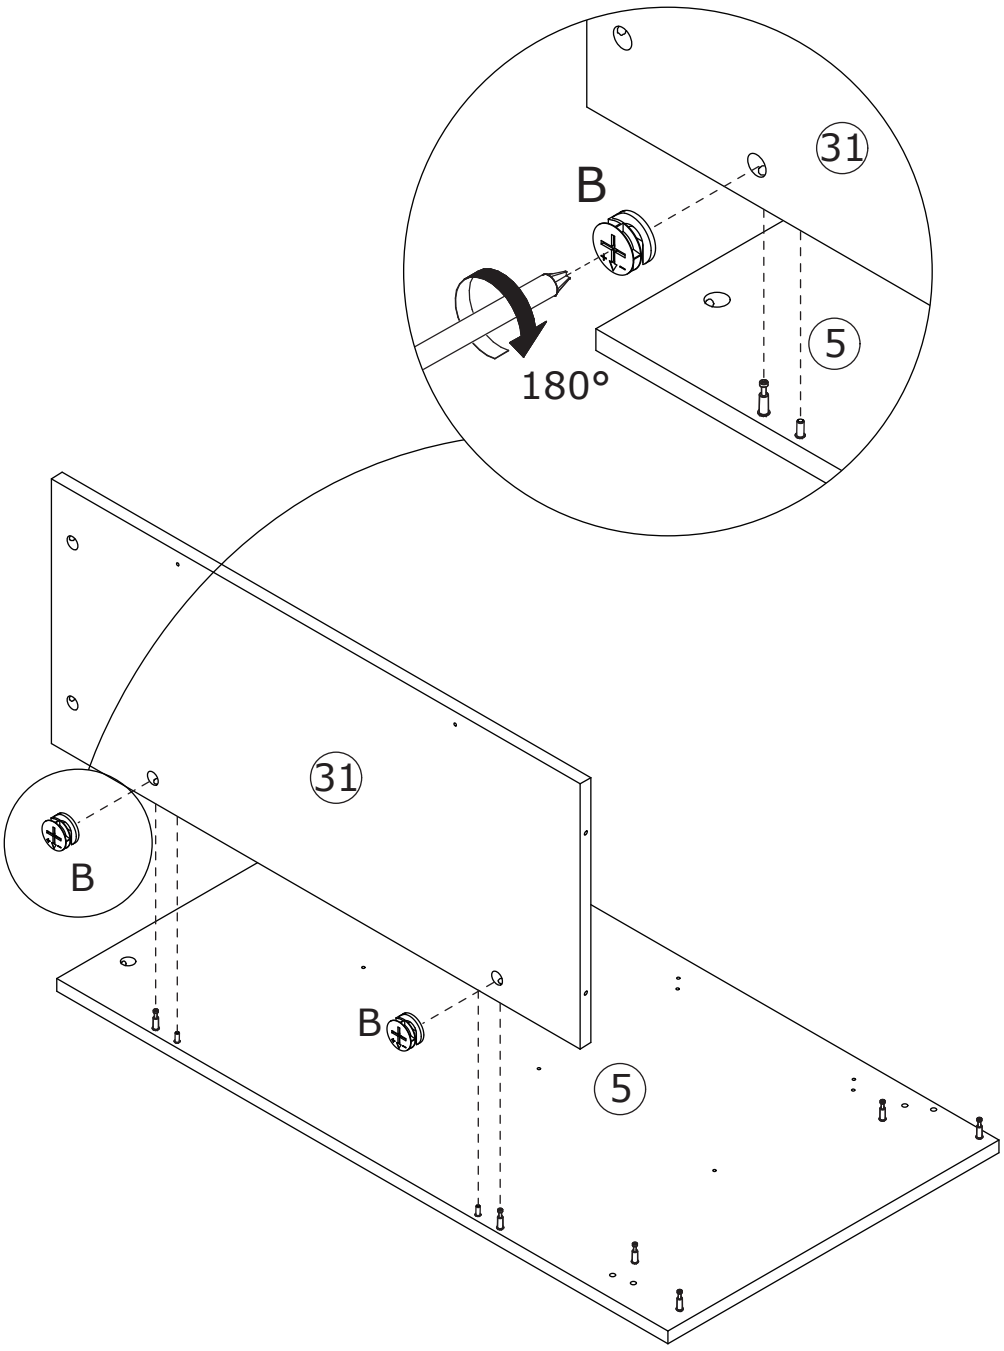


16

B x 4	C x 4	
		
∅15 x 9.5 mm	∅6 x 30 mm	

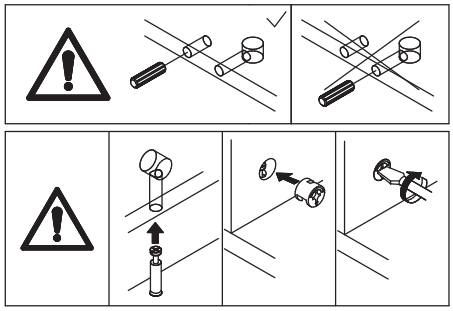


Connect part 5 to part 28, 26, 1 and 29 with wood dowel (C), then tighten by turning eccentric cam (B) clockwise.

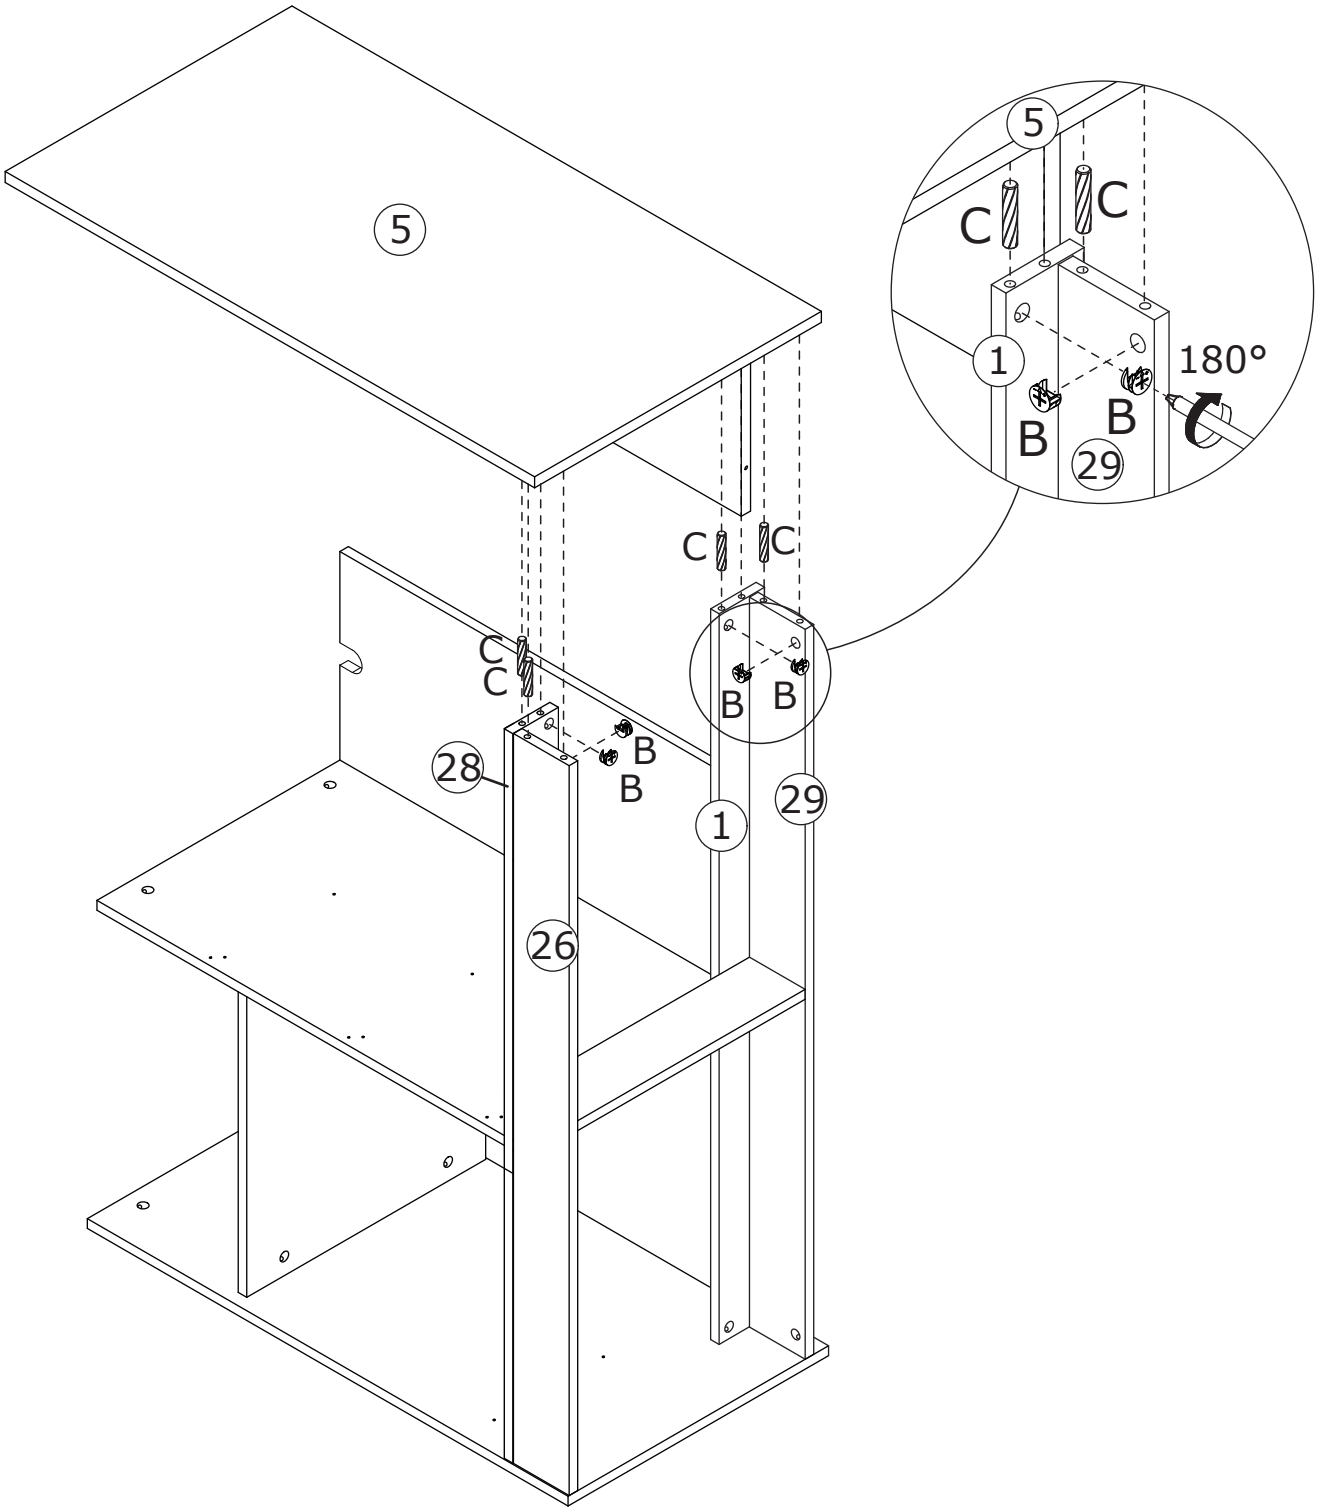


17


E x 2

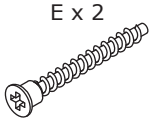

∅5 x 40 mm




Secure part 1 to part 31 using screw (E).

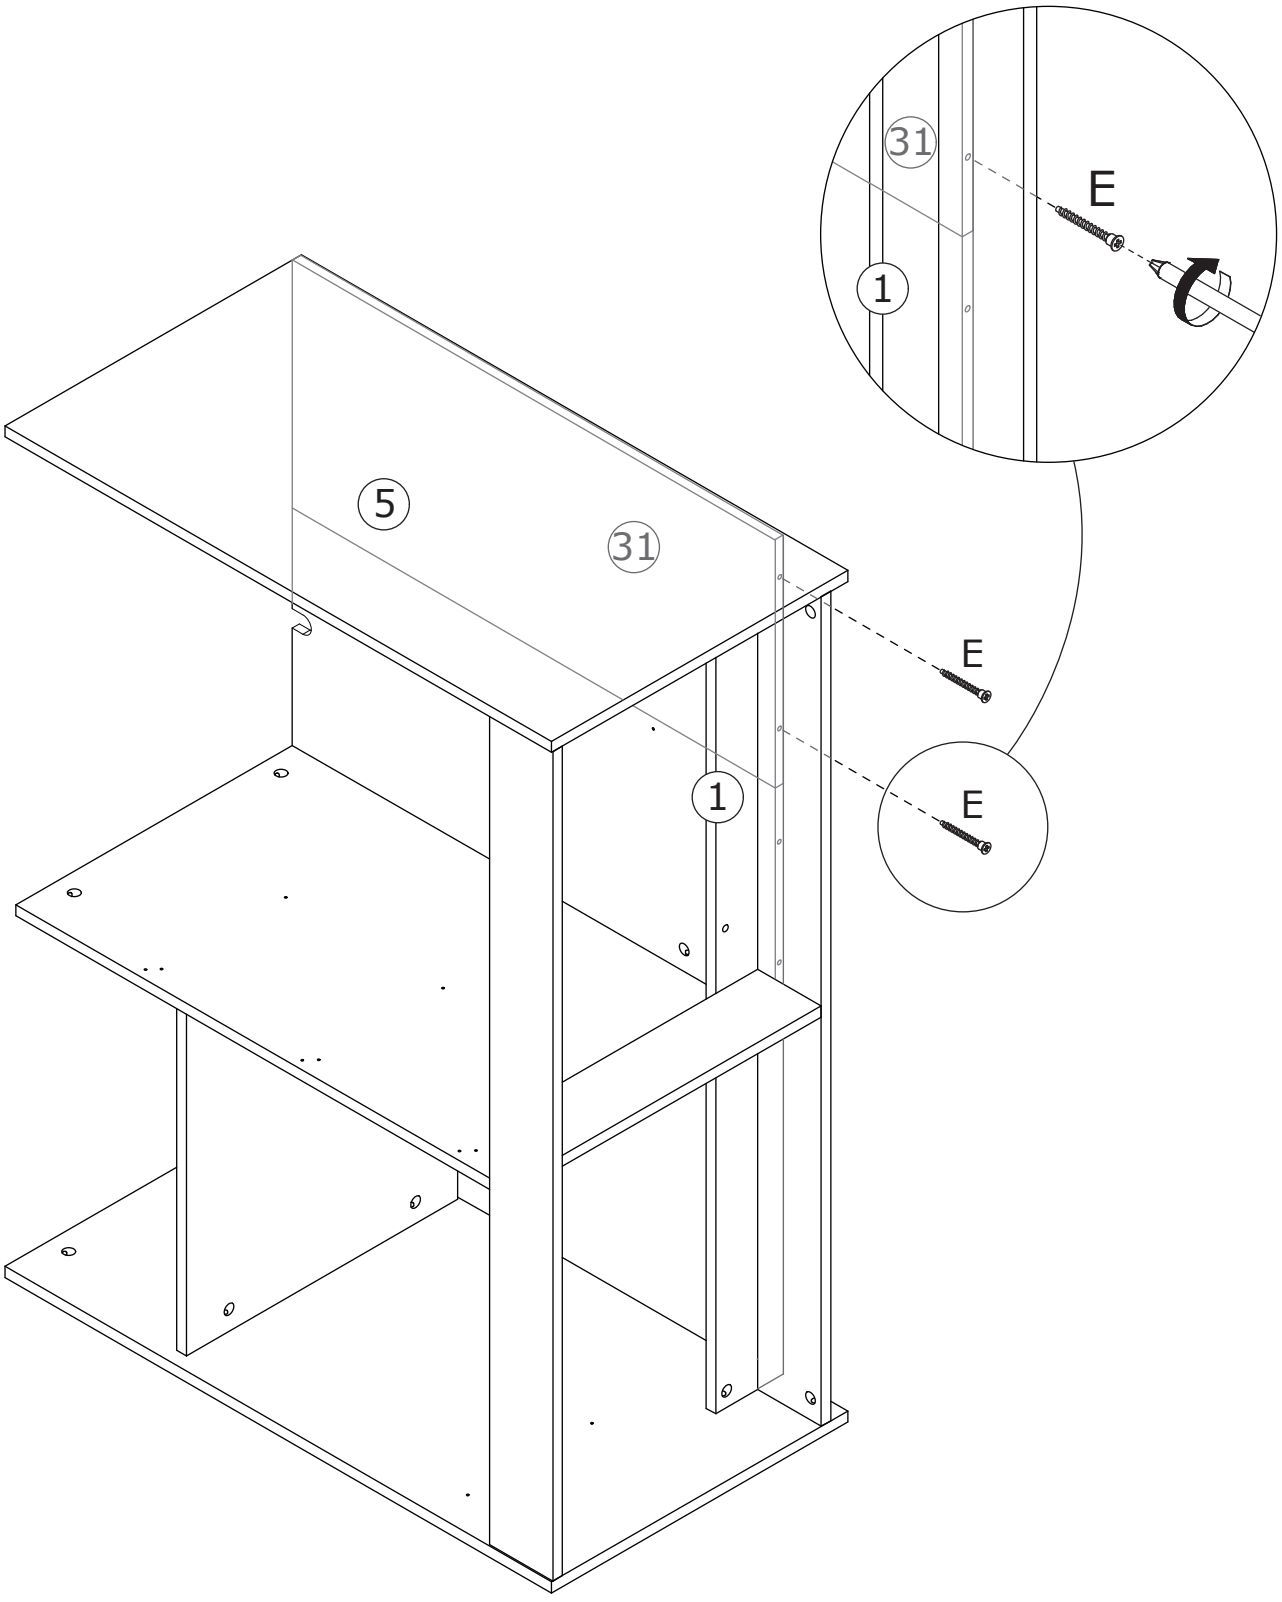



18

C x 12




∅6 x 30 mm






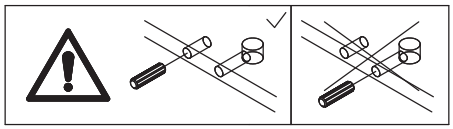


Insert wood dowel (C) into part 2, 4, 5, 6, 8 and 31 as shown.

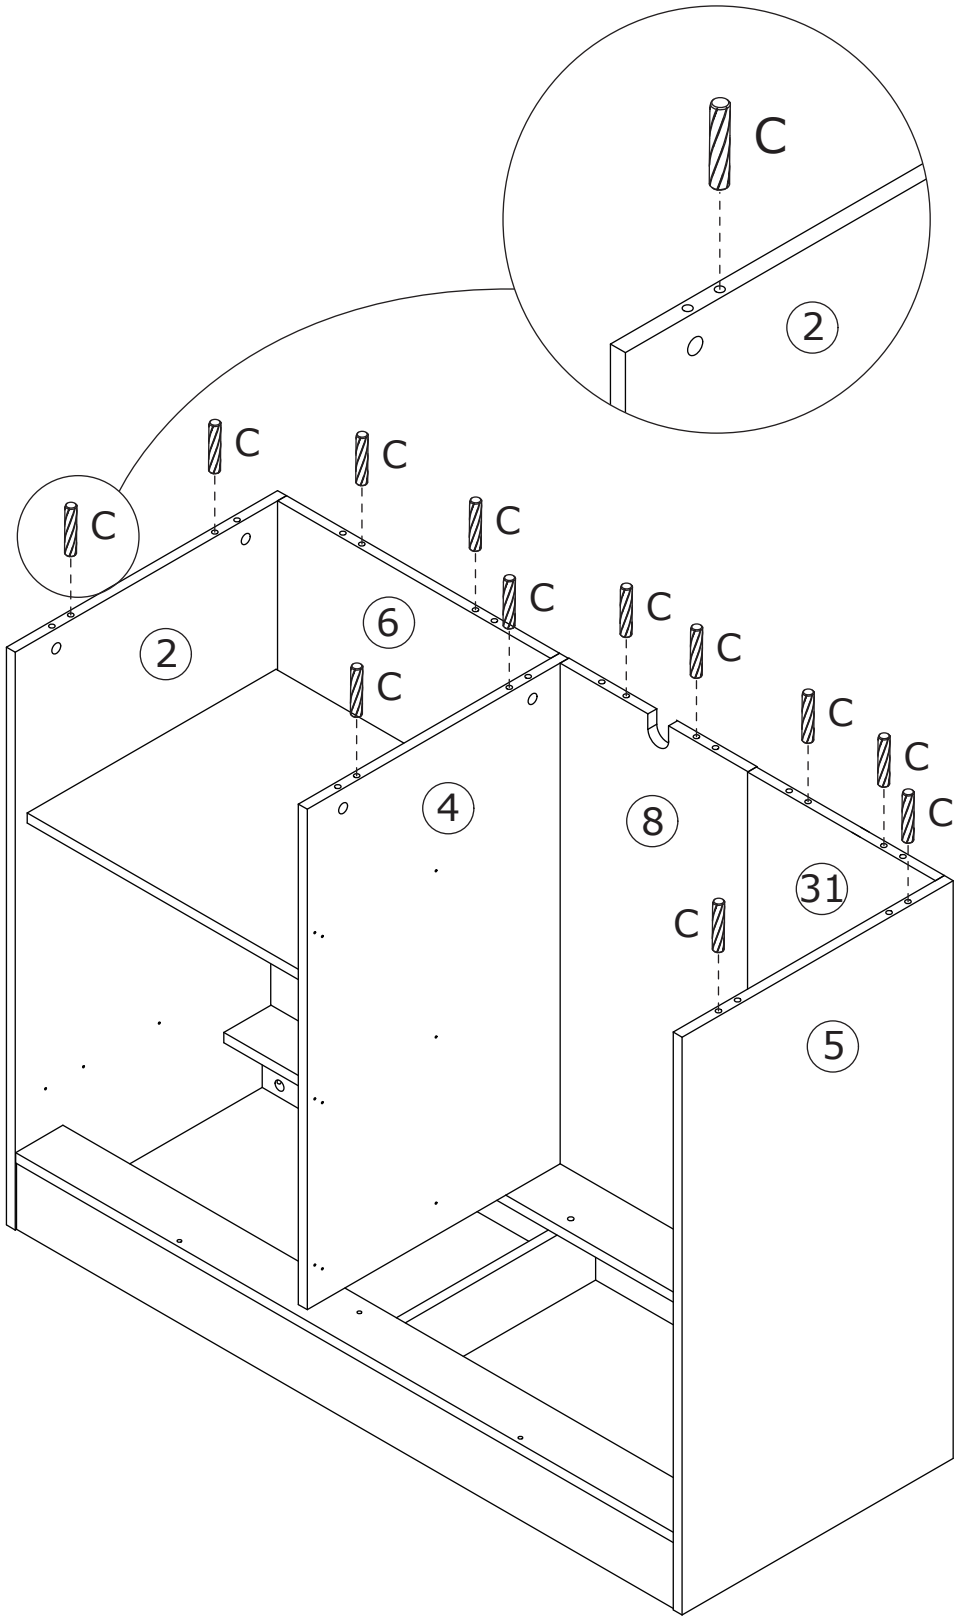


19

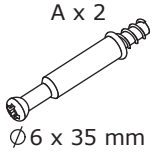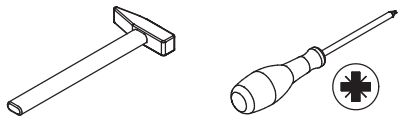A x 2	C x 2	
		
∅6 x 35 mm	∅6 x 30 mm	

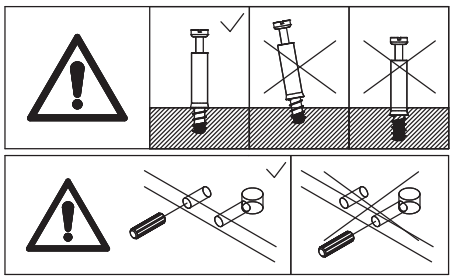

Screw eccentric rod (A) and insert wooden dowel (C) to part 11 and 12.

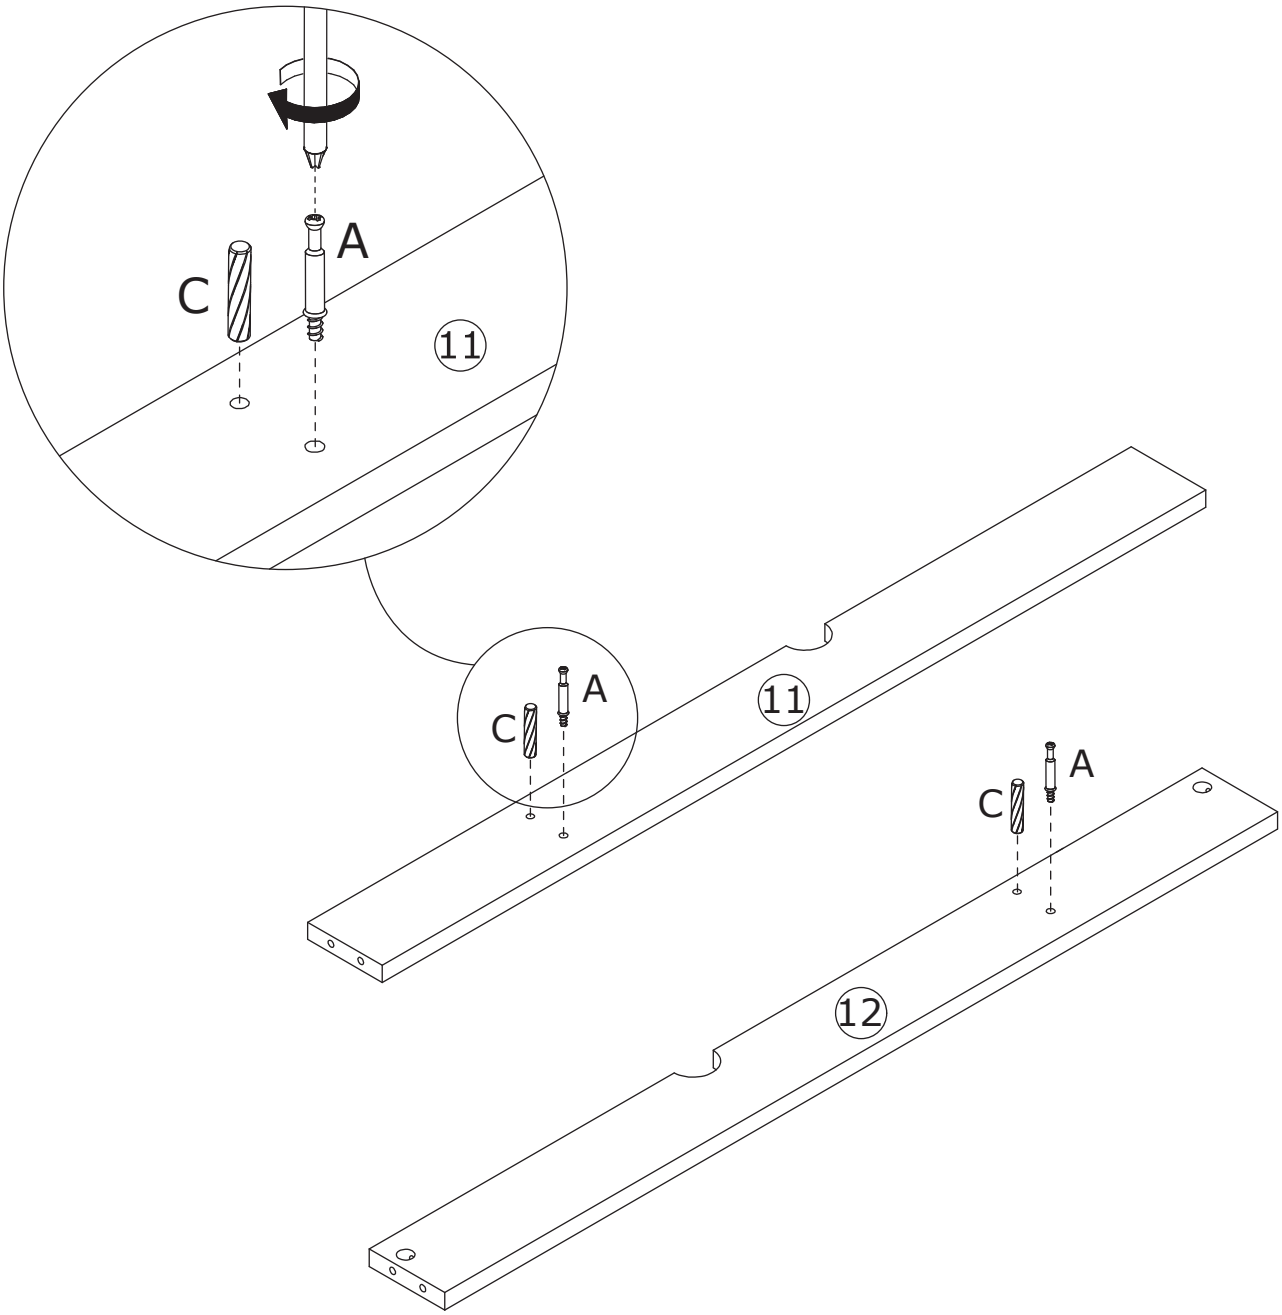



20

B x 2




∅15 x 9.5 mm






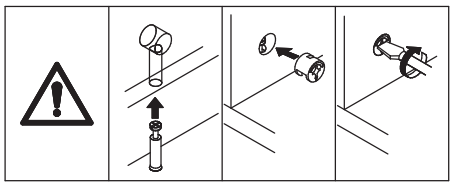


Connect part 10 to part 11 and 12, then tighten by turning eccentric cam (B) clockwise.

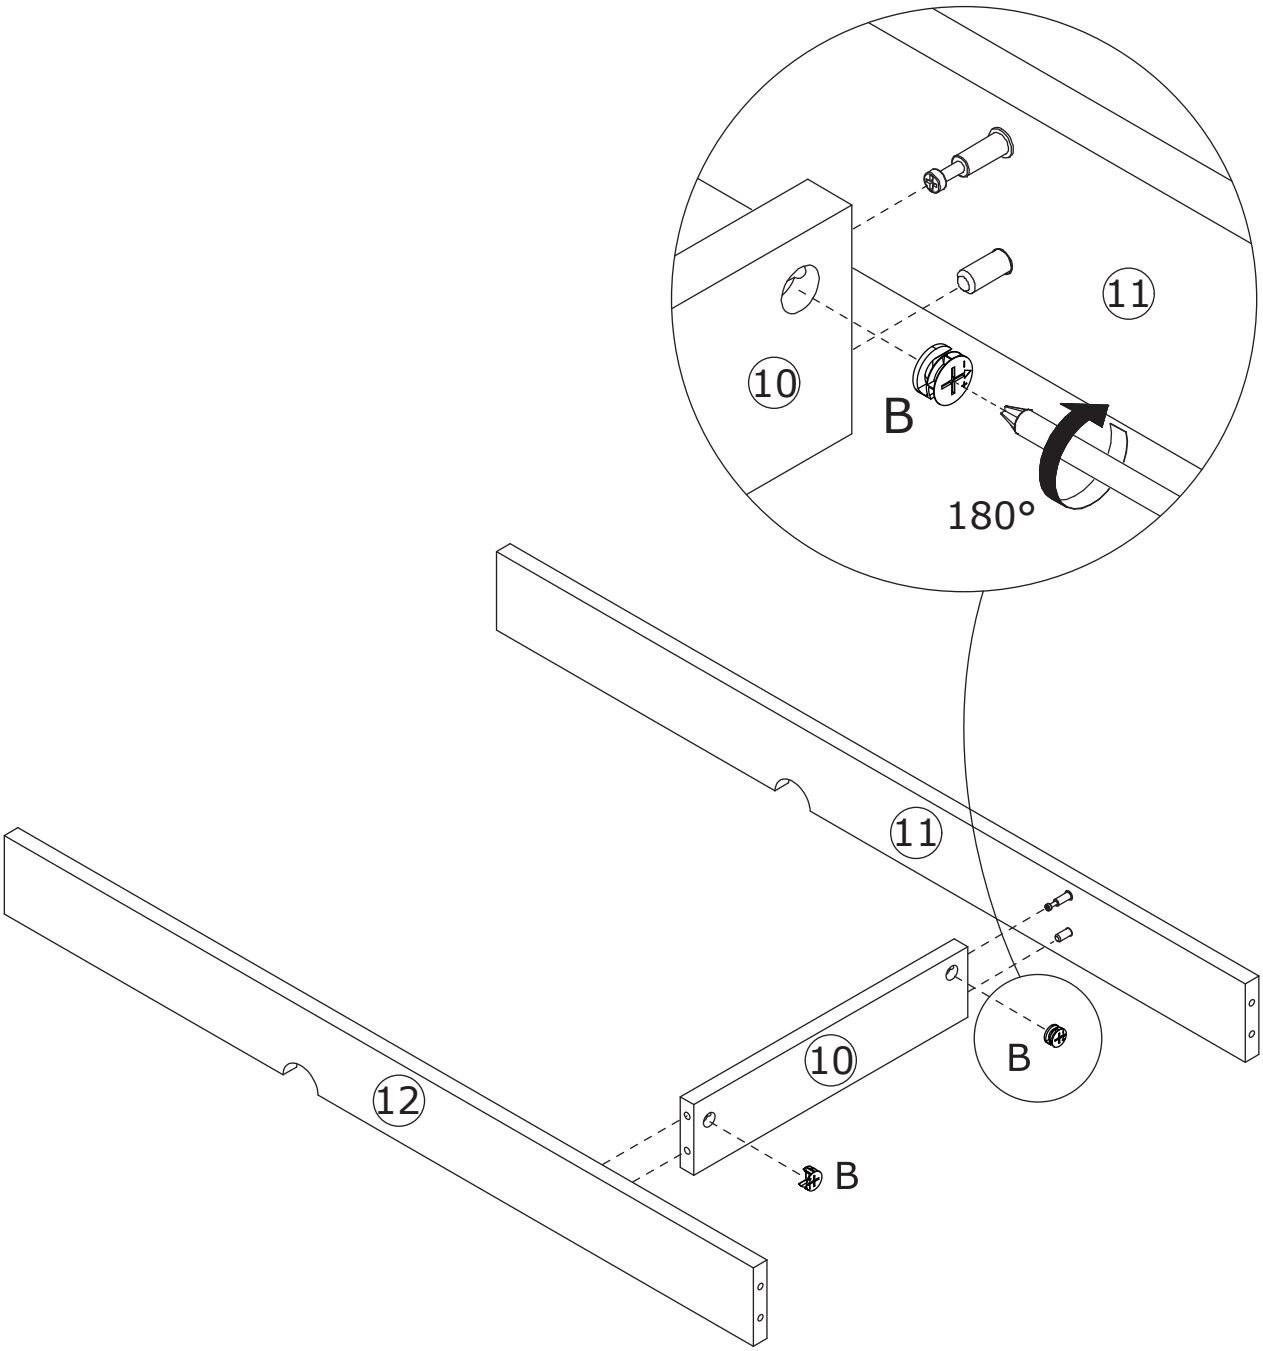


21

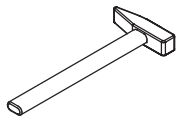A x 4	C x 4	
		 
∅6 x 35 mm	∅6 x 30 mm	

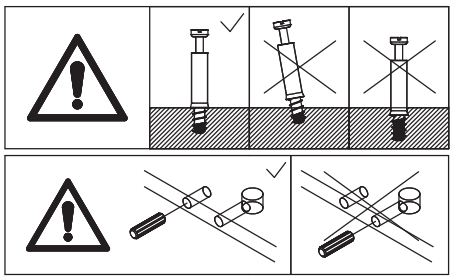

Screw eccentric rod (A) and insert wooden dowel (C) to part 13 and 14.

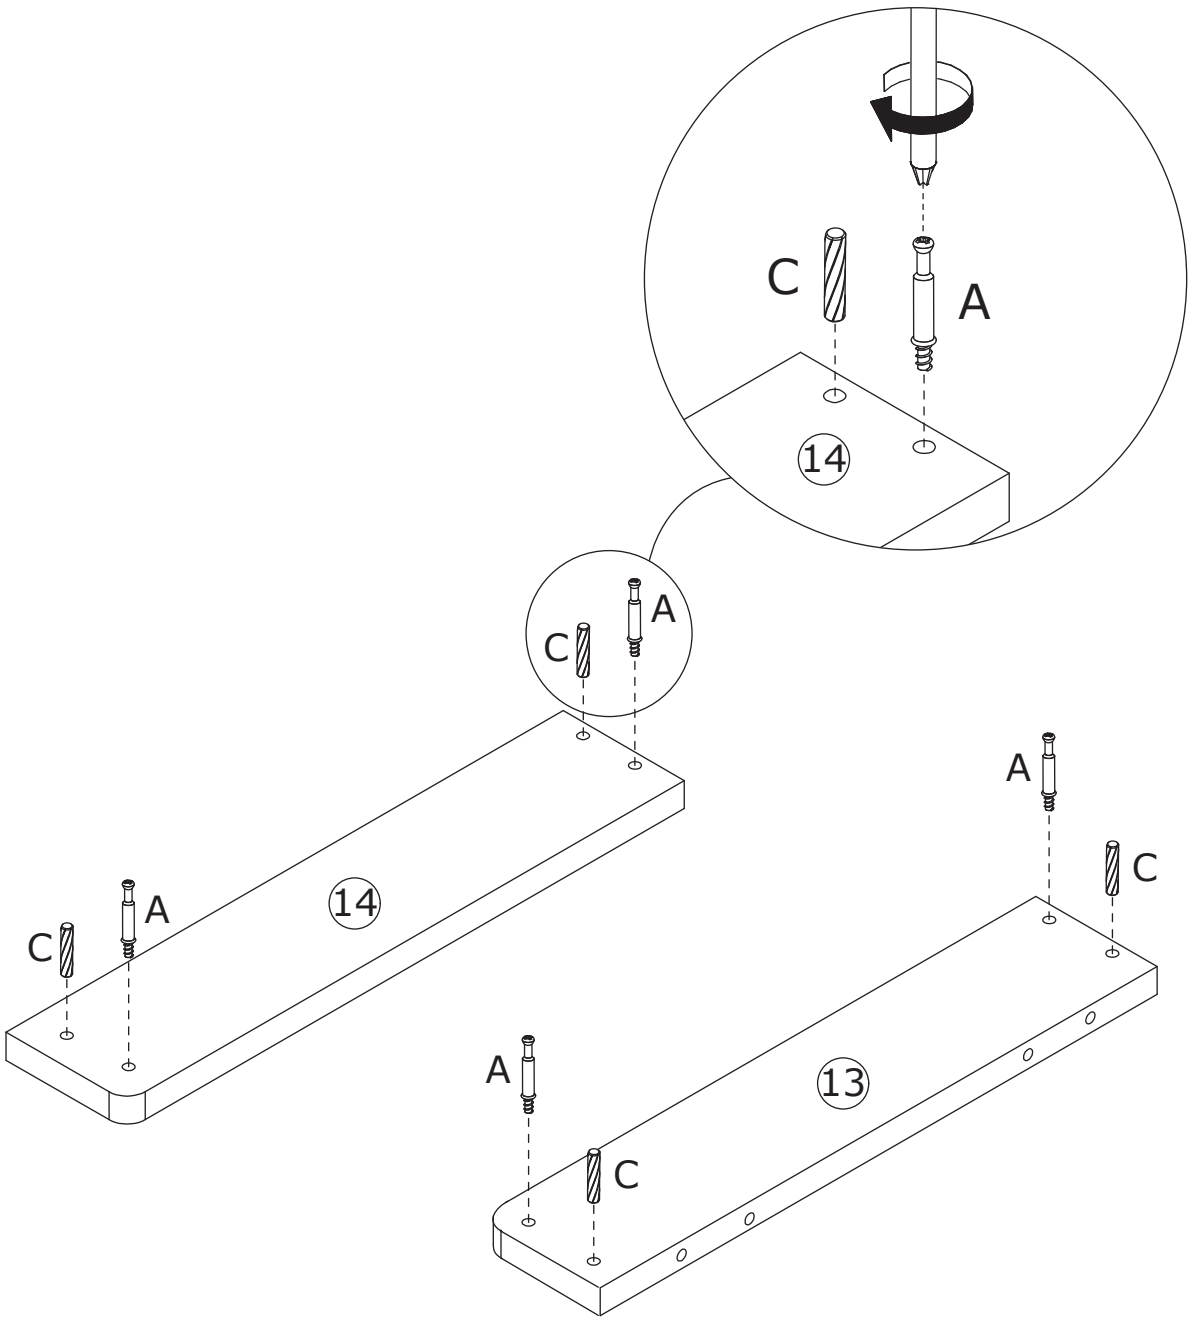



22

B x 4




∅15 x 9.5 mm







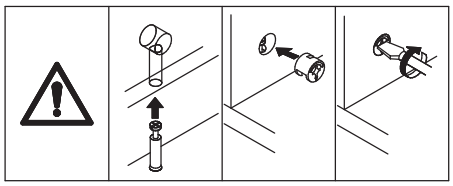


Connect part 13 and 14 to part 11 and 12, then tighten by turning eccentric cam (B) clockwise.

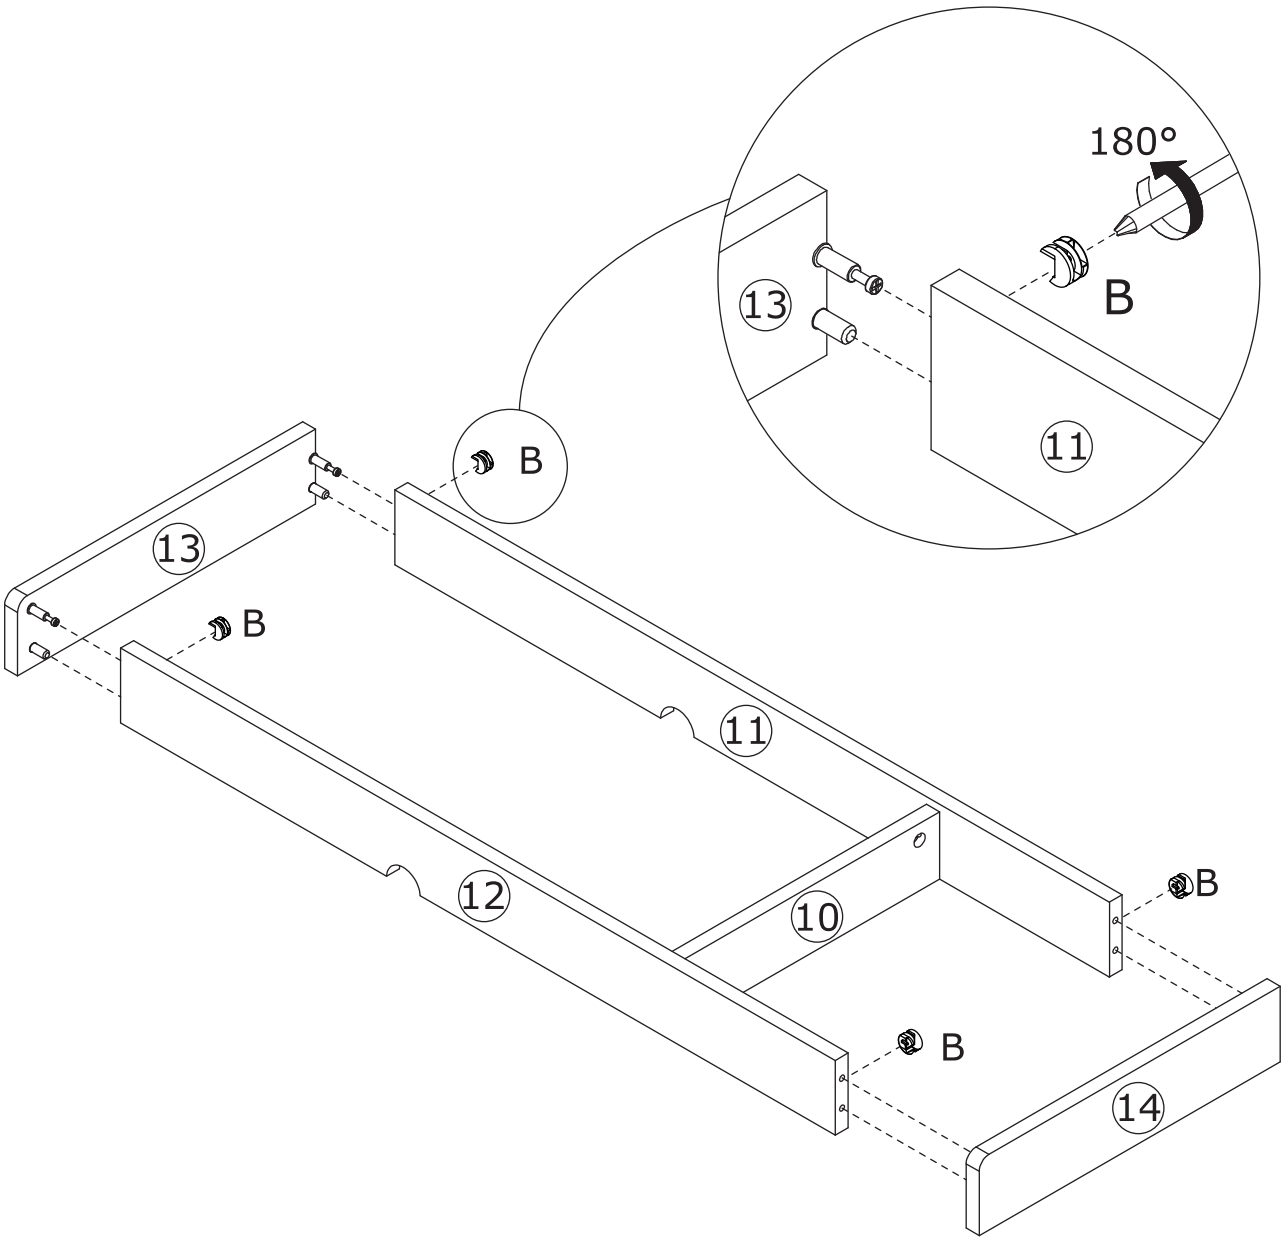


23


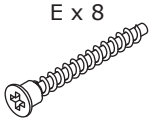
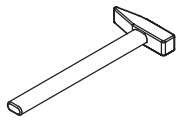

C x 8	E x 8	
		 
∅6 x 30 mm	∅5 x 40 mm	

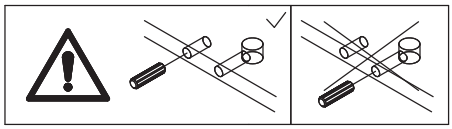


Secure part 7 to the component using wooden dowel (C) and screw (E).

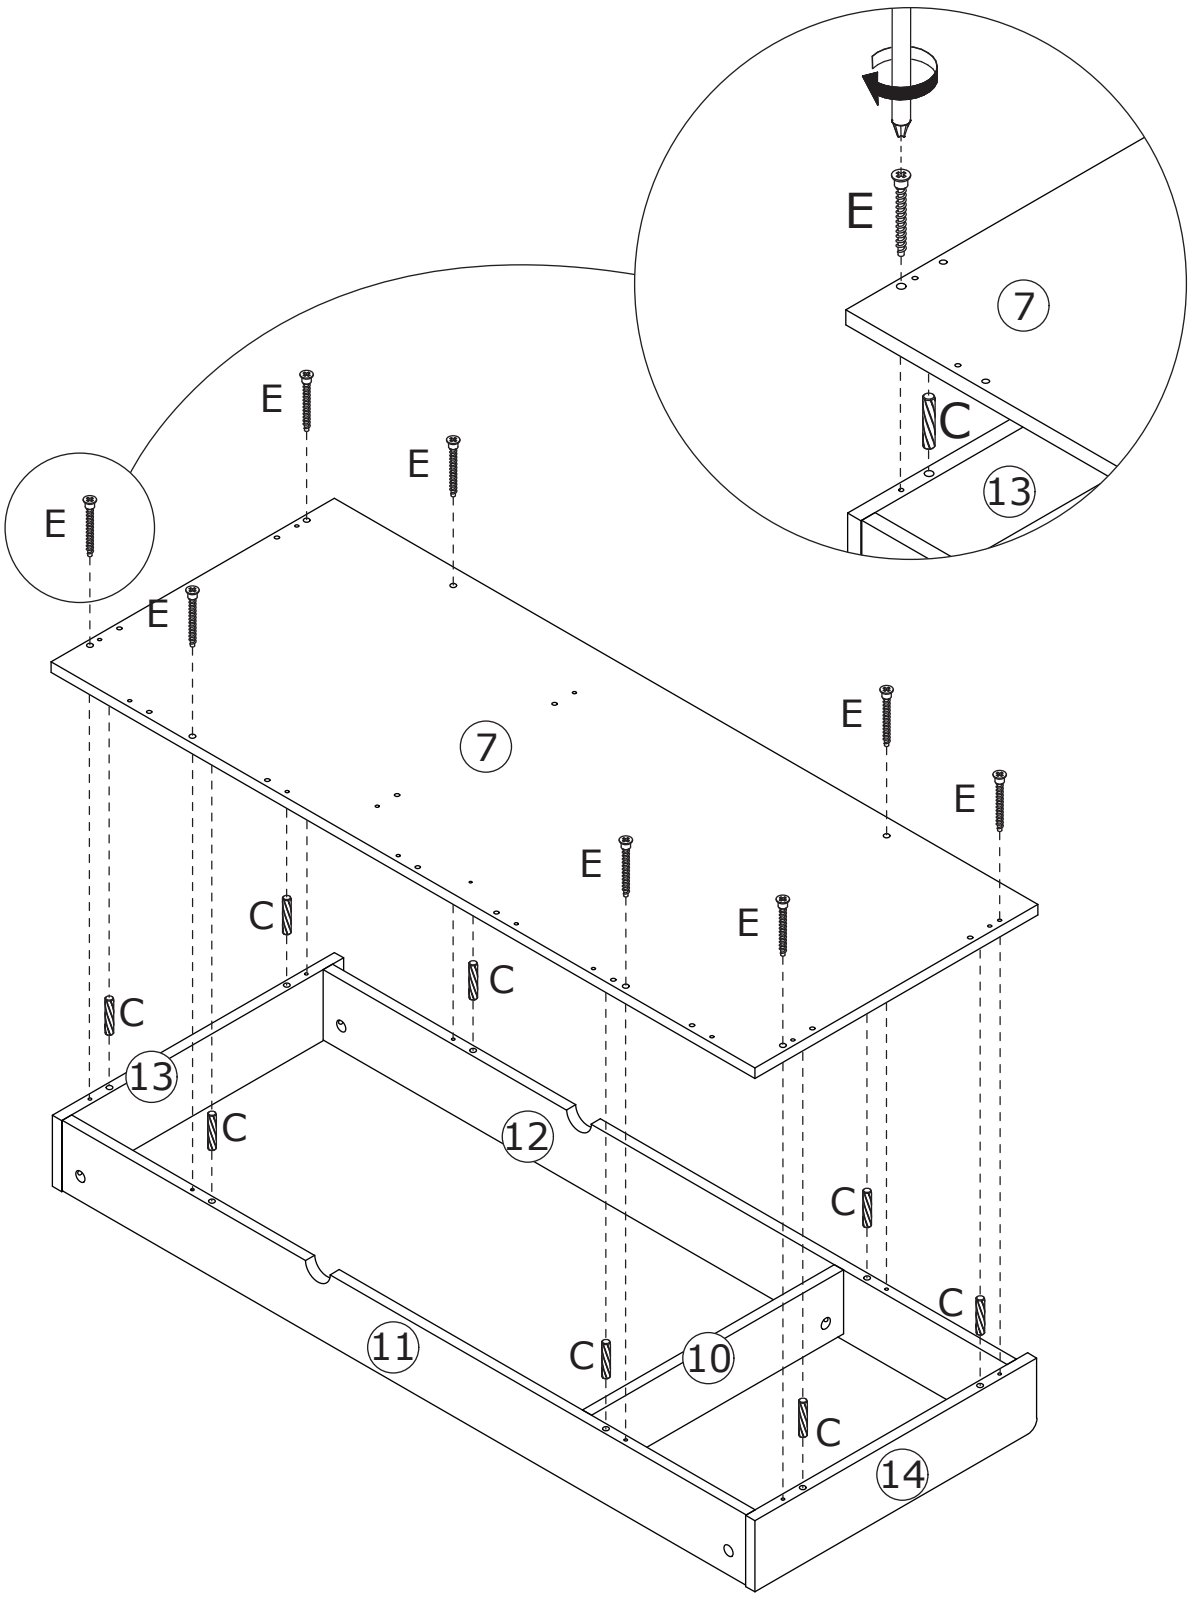


24

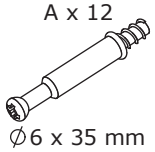A x 12	K-1 x 1	K-4 x 1	
 ∅6 x 35 mm		 ∅3.5 x 14 mm	

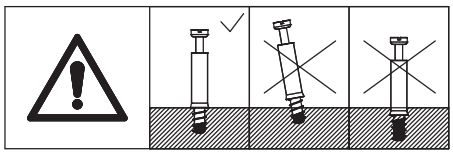

Screw eccentric rod (A) to part 7.
Secure bracket (K-1) to part 7.

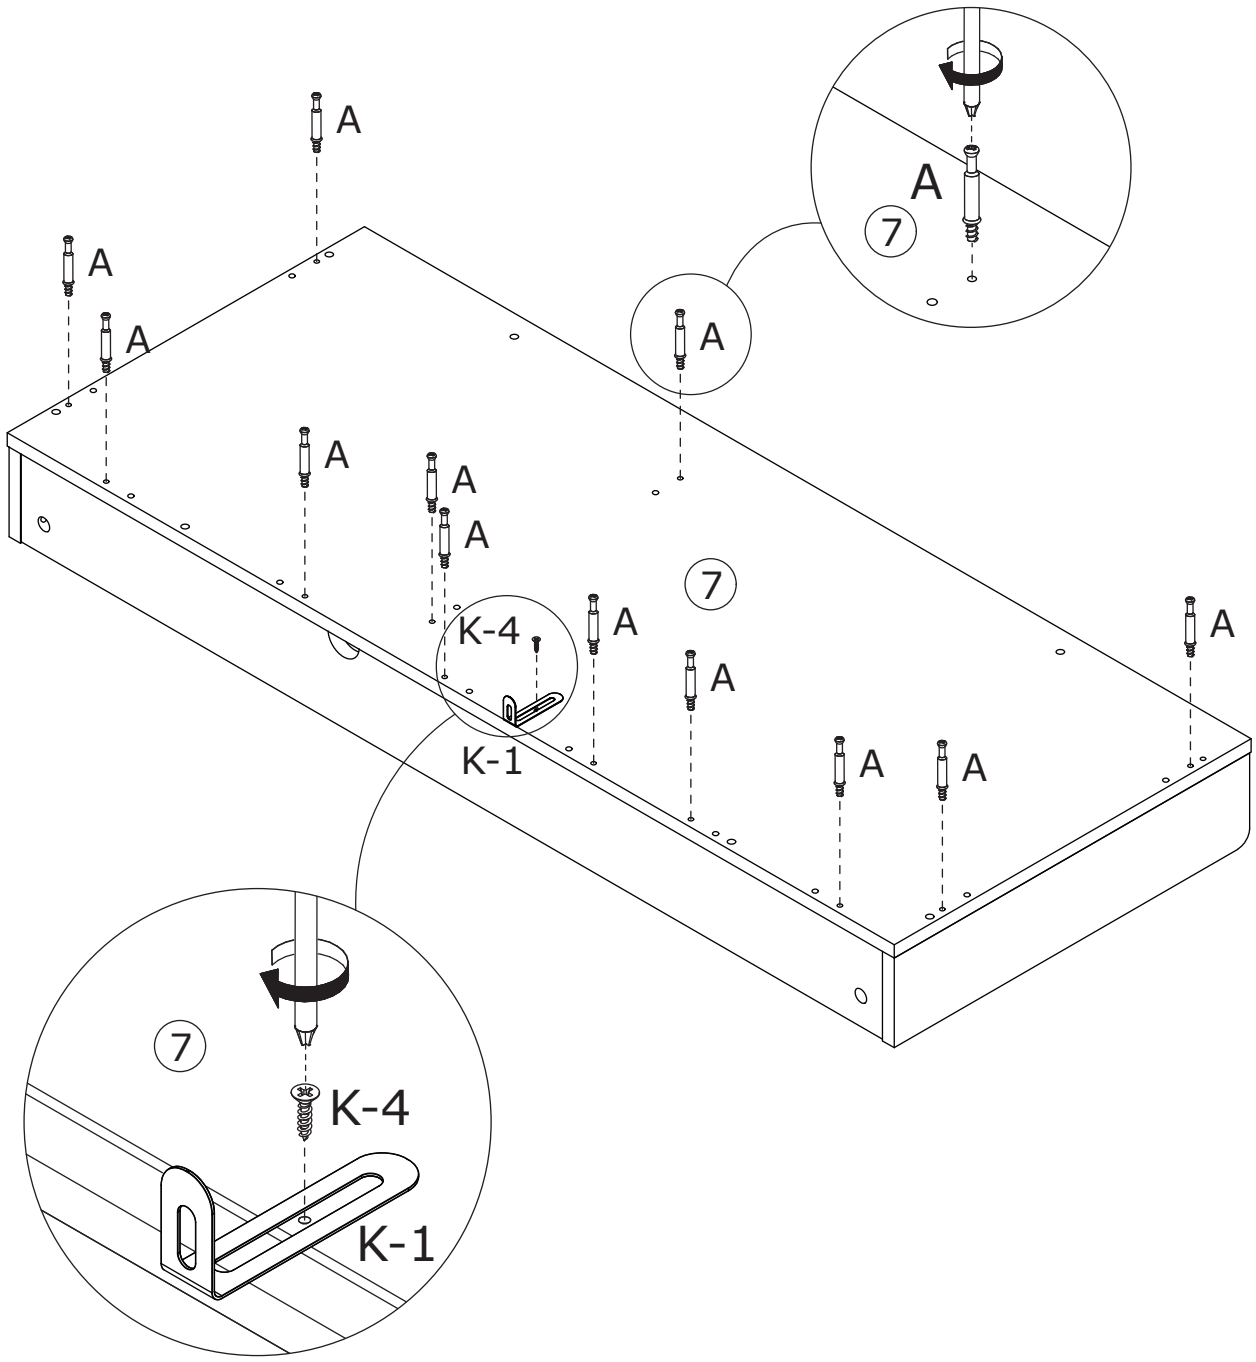



25

B x 12




∅15 x 9.5 mm



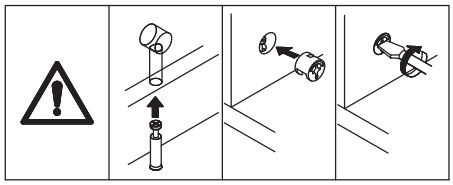


Connect part 7 to part 2, 4, 5, 6, 8 and 31, then tighten by turning eccentric cam (B) clockwise.

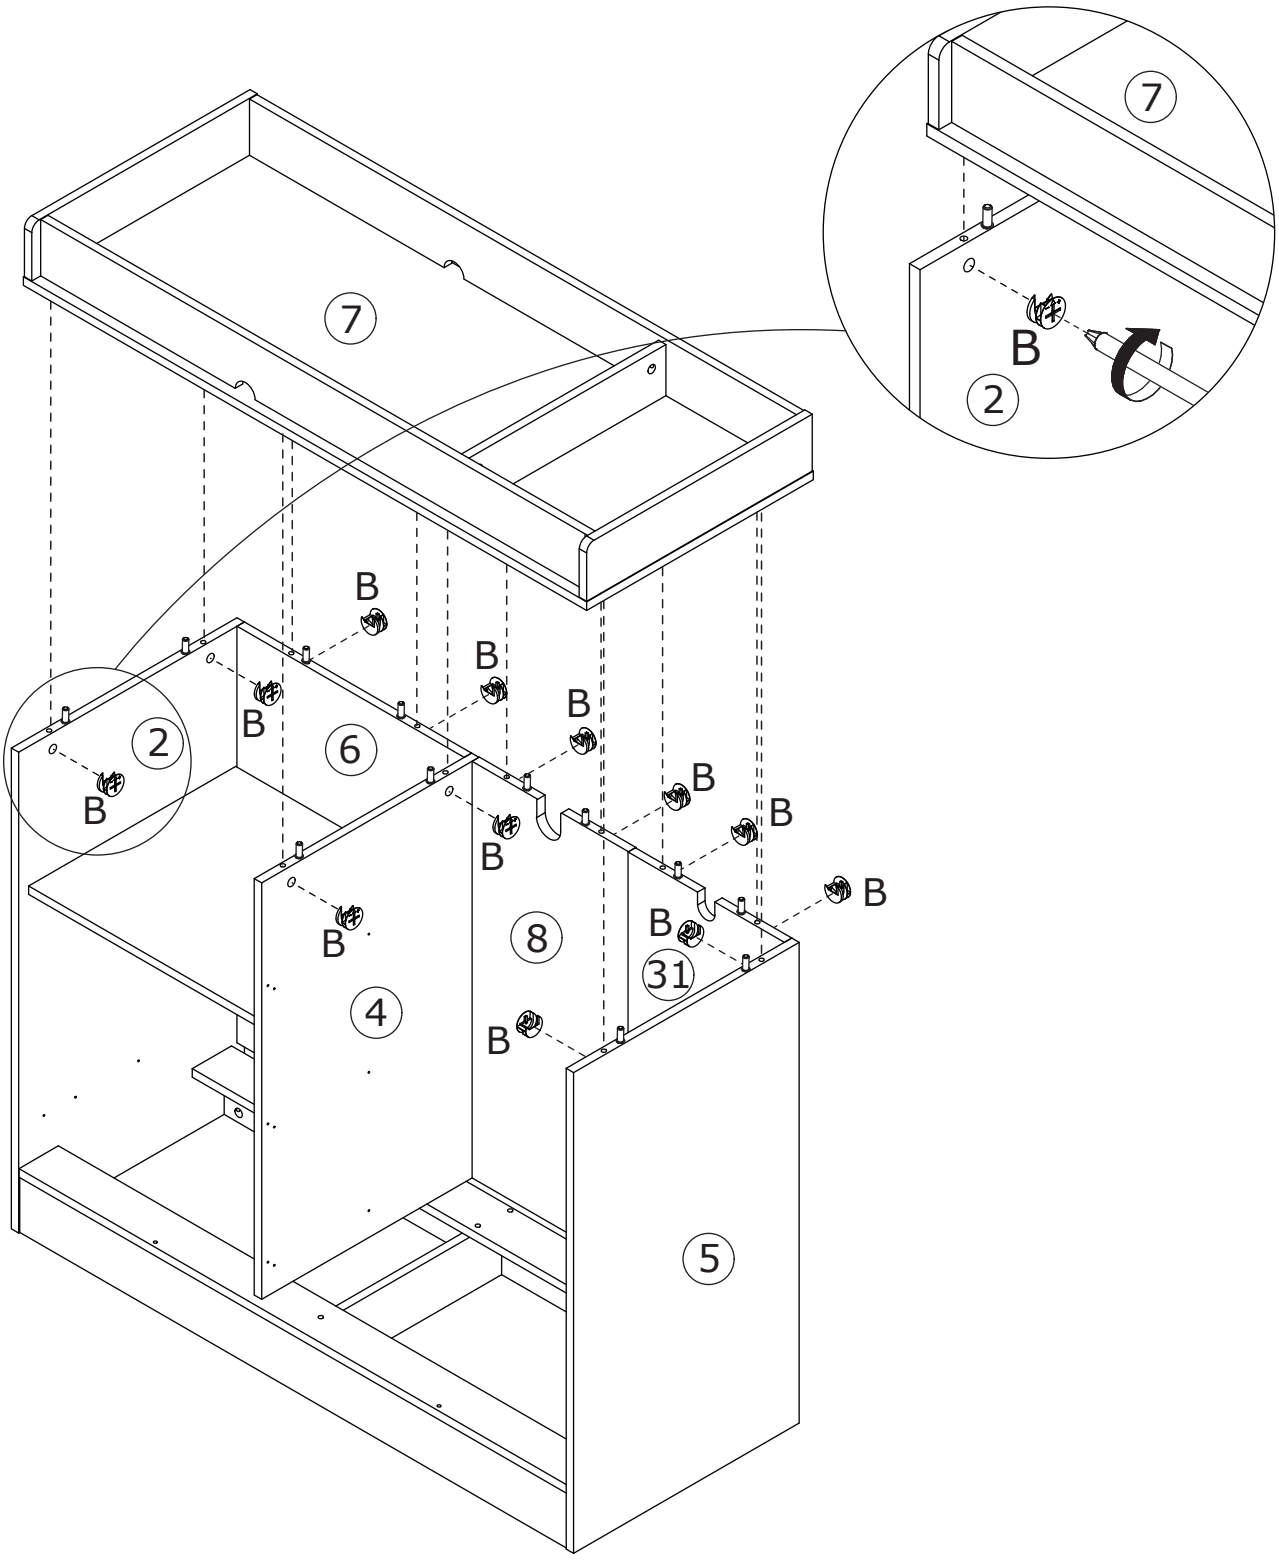



26

C x 4




∅6 x 30 mm

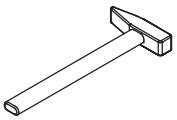

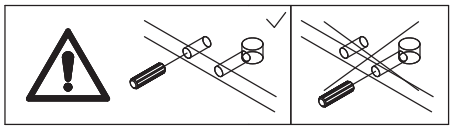


Insert wooden dowel (C) into part 21 and 23.

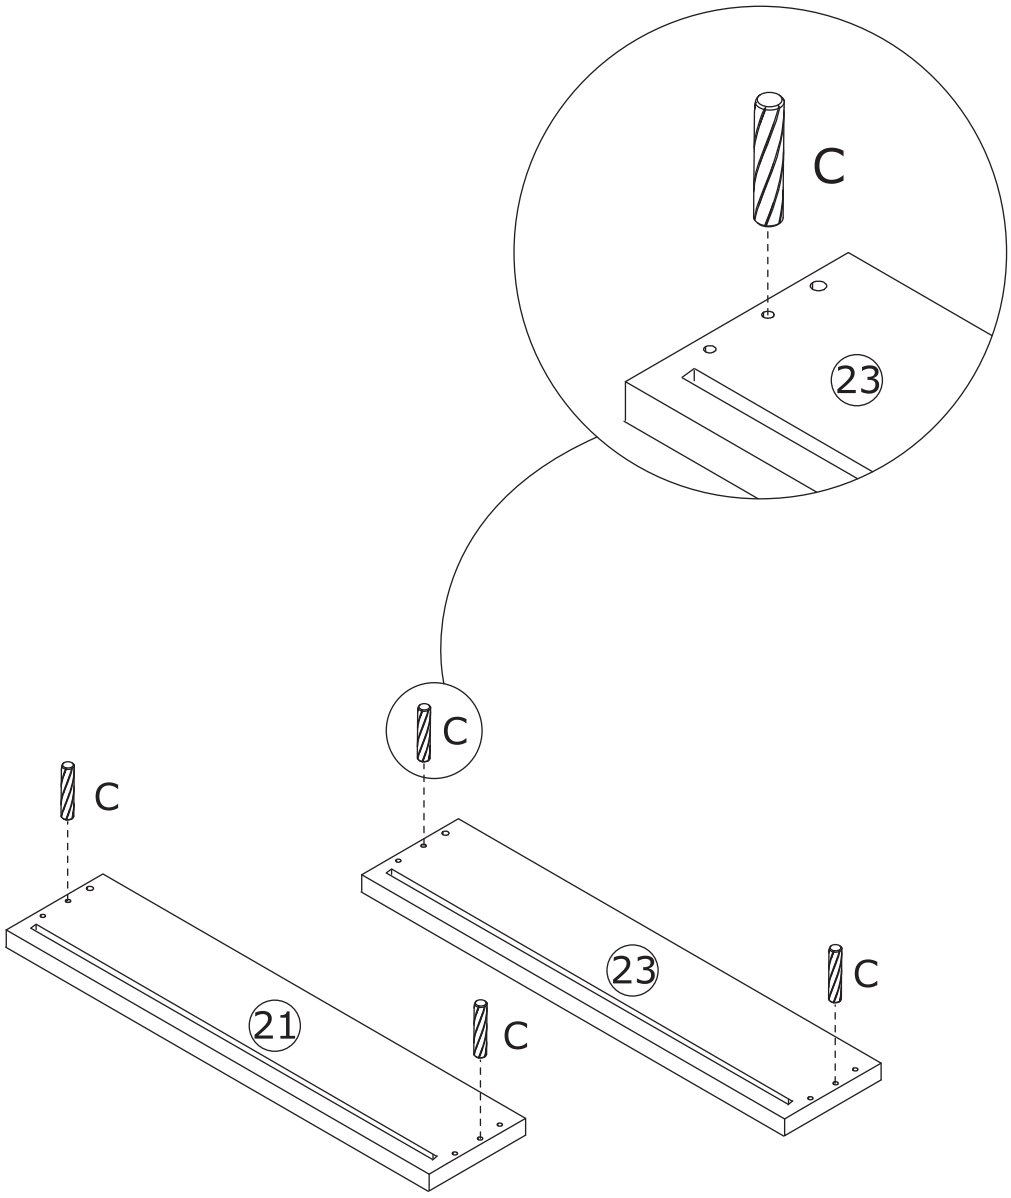


27


N x 4



∅4 x 30 mm




Secure part 21 to part 24 and 22 using screw (N).

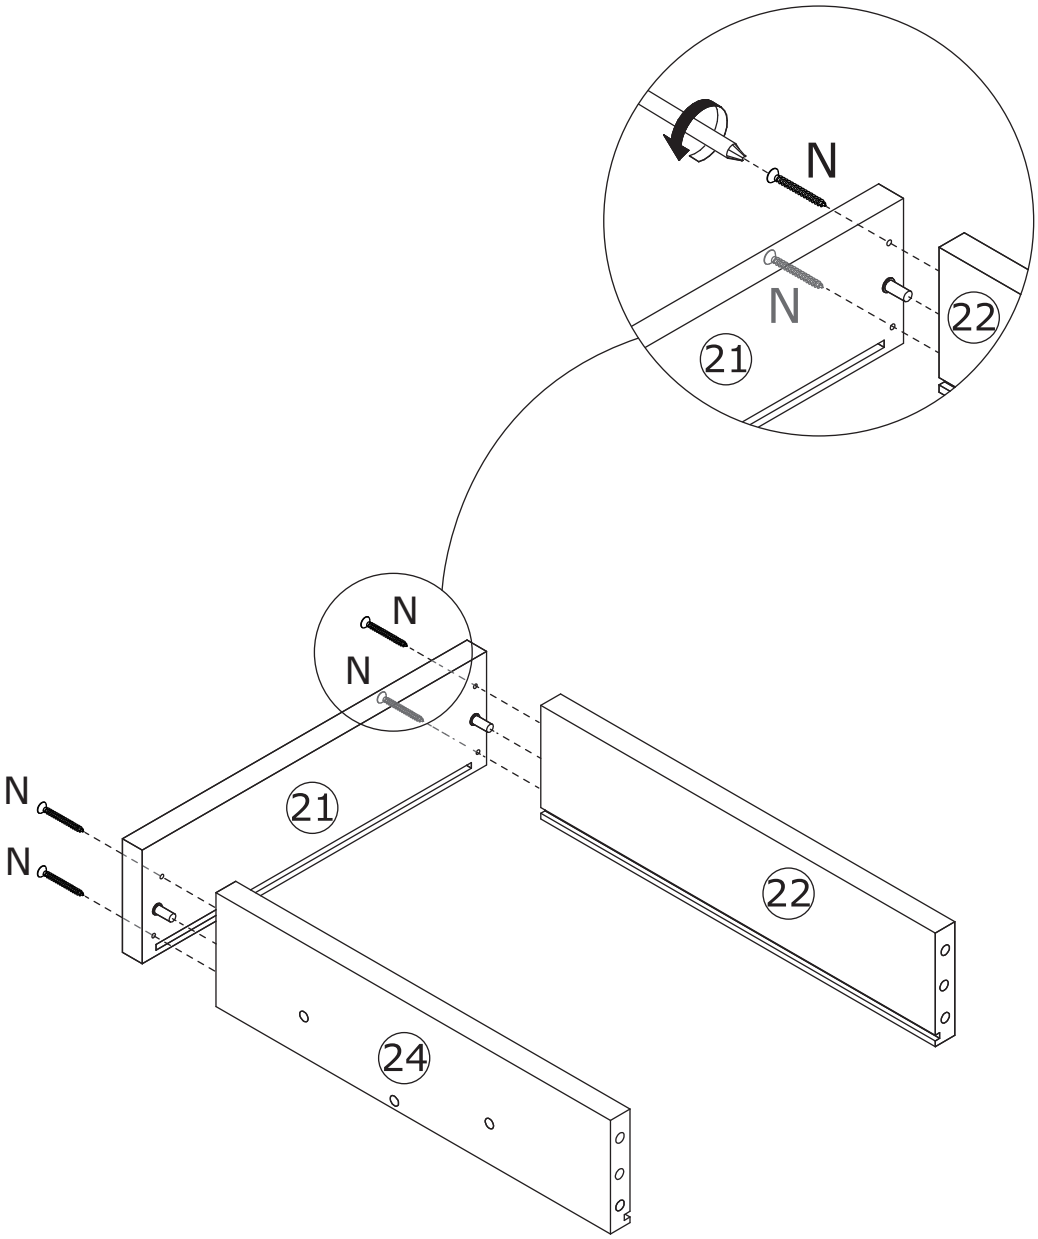


28

Insert part 25 along the grooves.

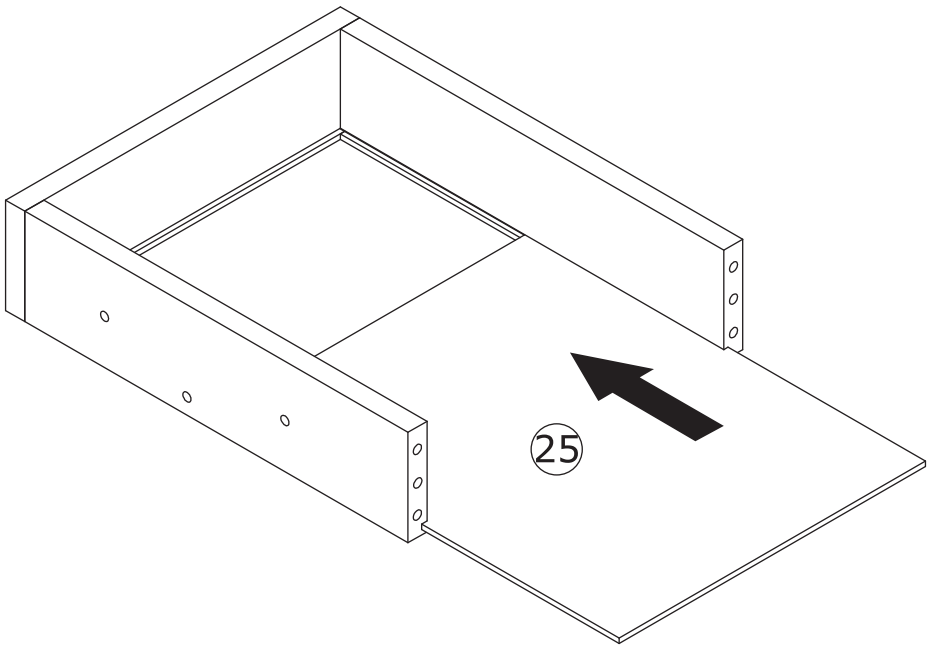


29


N x 4




∅4 x 30 mm




Secure part 23 to part 22 and 24 using screw (N).

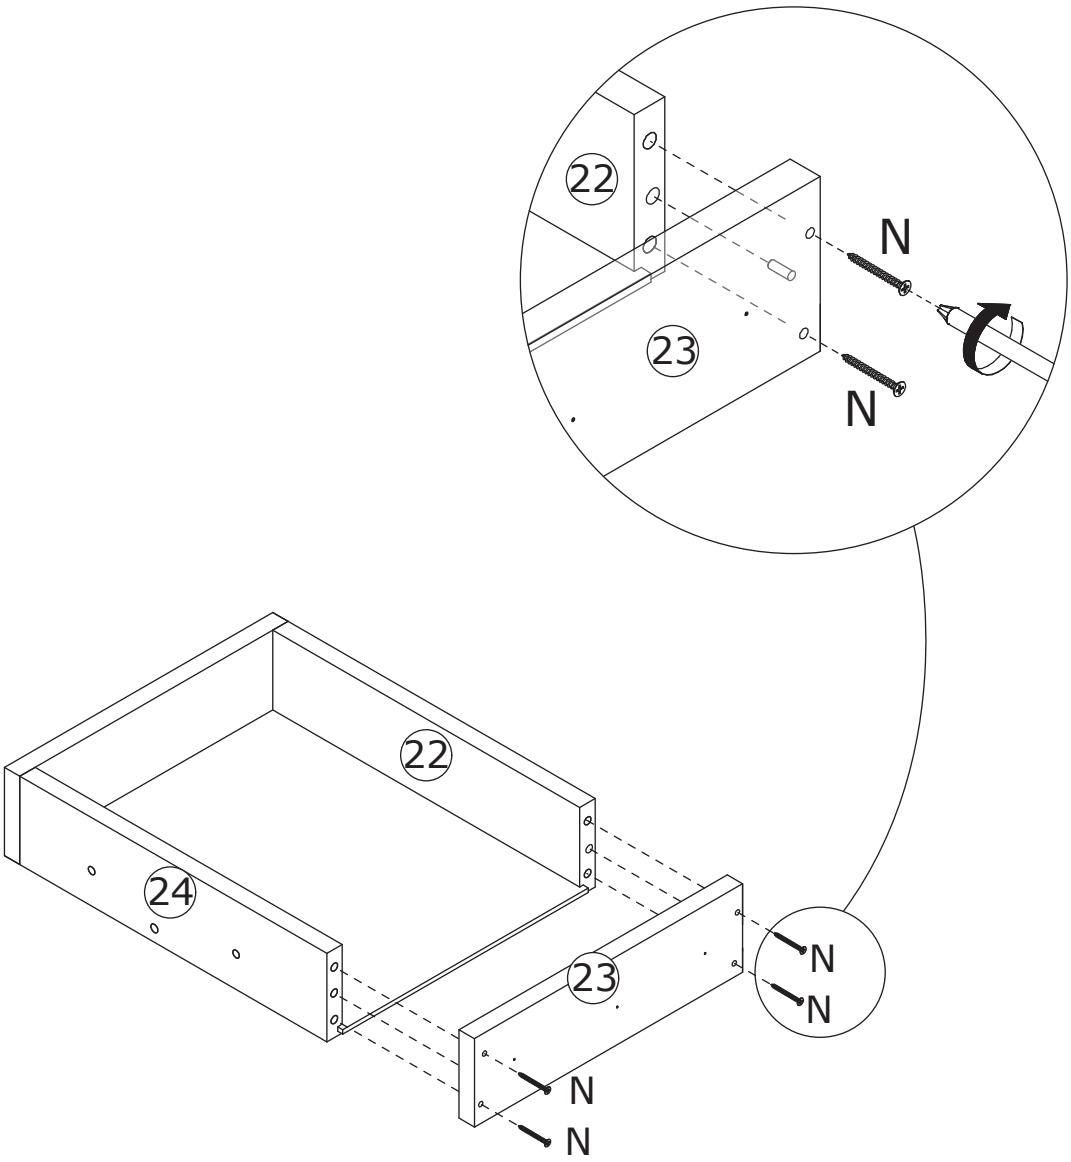



30

F x 1	Q x 3	
		
∅3 x 16 mm	∅6 x 20 mm	


Secure part 20 to part 24 using screw (Q).
Secure pull (F) to part 20 as shown.

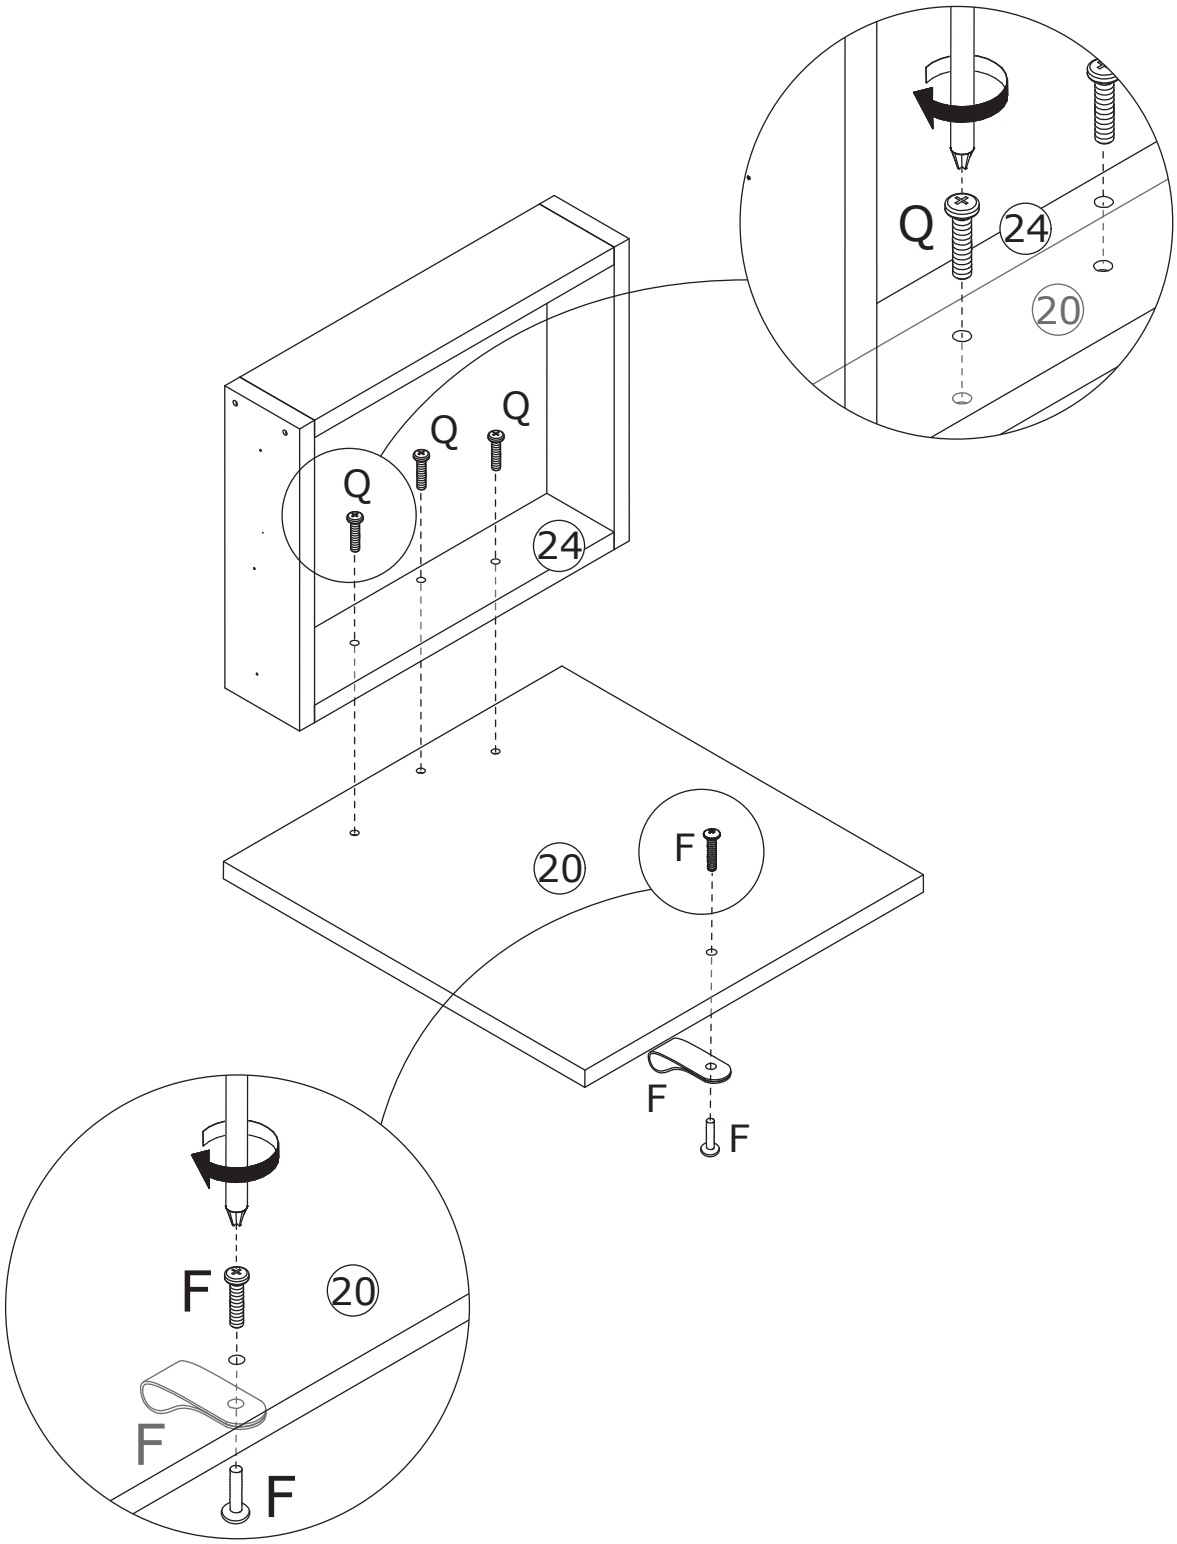


31

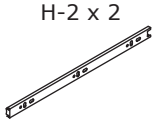H-2 x 2	P x 6	
		
L=290 mm	∅3.5 x 14 mm	


Secure rail (H-2) to part 21 and 23
using screw (P).

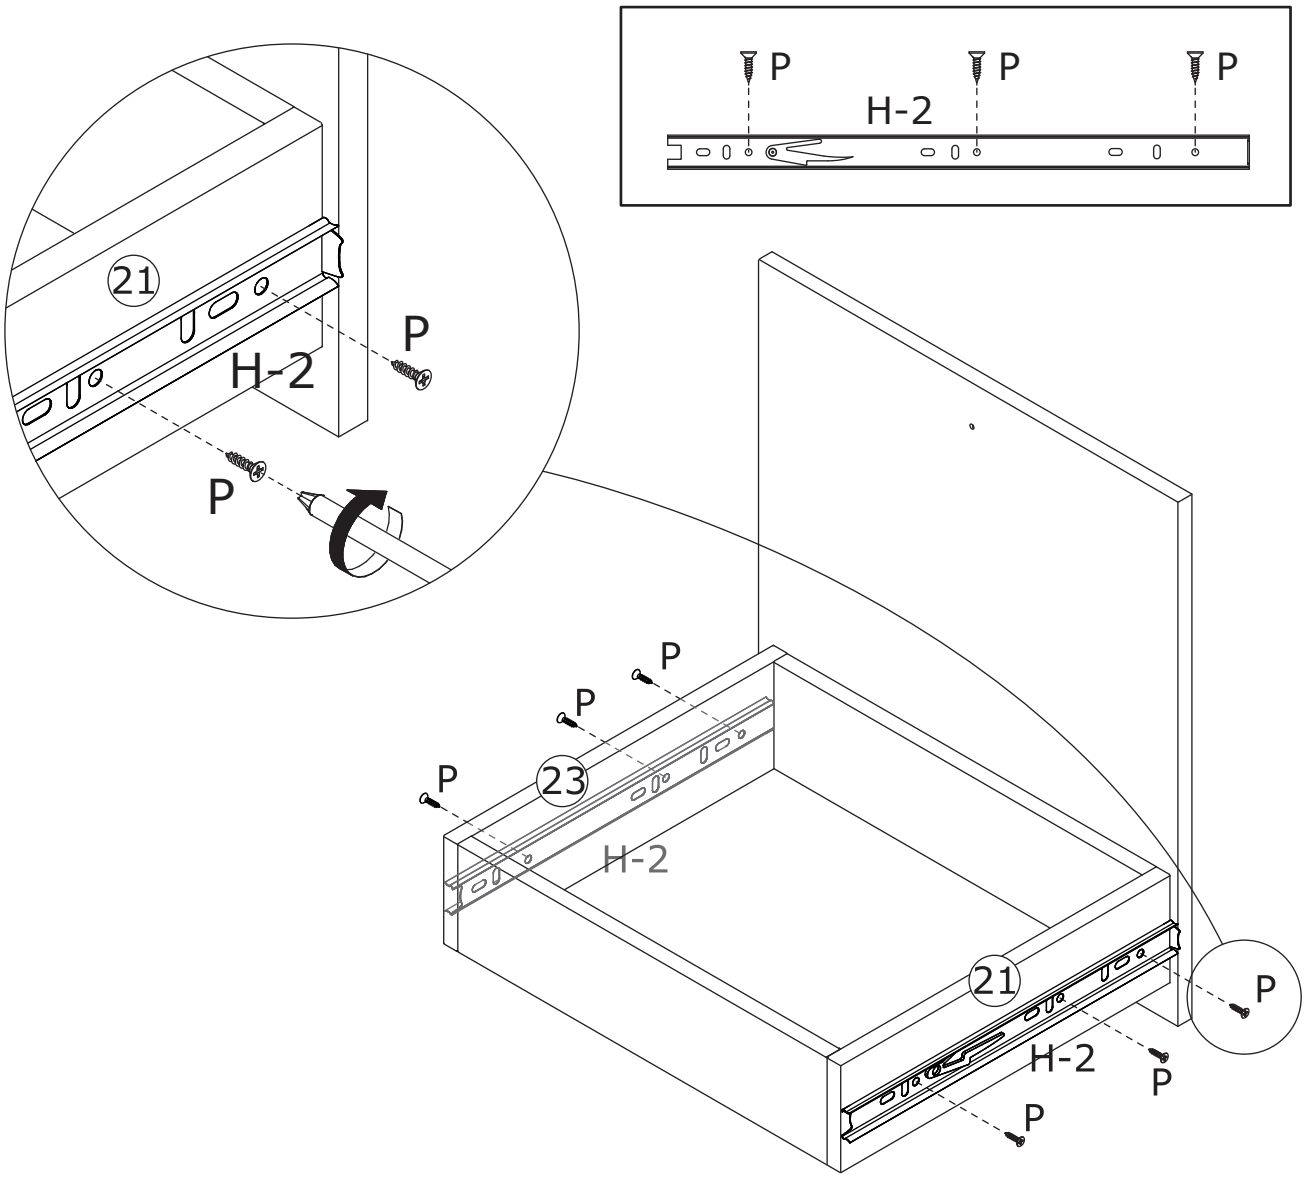




32

H-1 x 2	P x 6	
		
L=290 mm	∅3.5 x 14 mm	


Secure rail (H-1) to part 2 and 4
using screw (P).

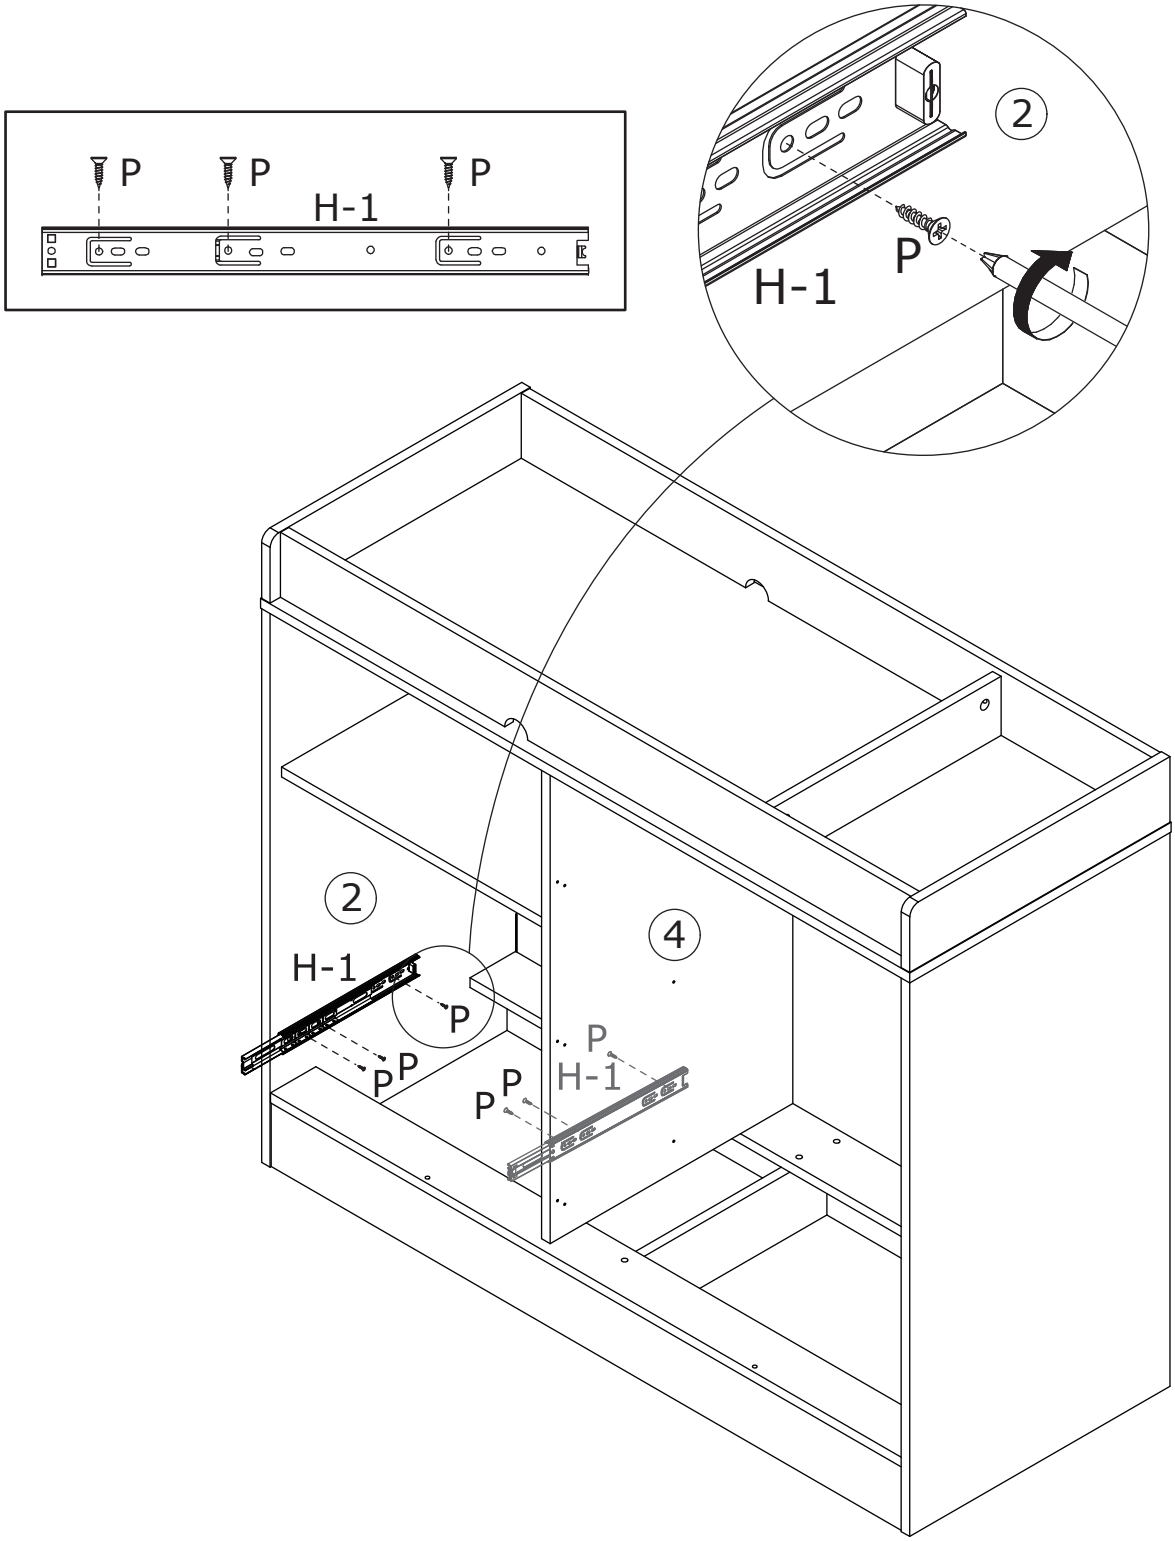

33

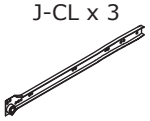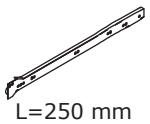
D x 18	J-CL x 3	J-CR x 3	
			
∅3 x 12 mm	L=250 mm	L=250 mm	

Secure rail (J-CL) and (J-CR) to part 4 and 5 using screw (D).

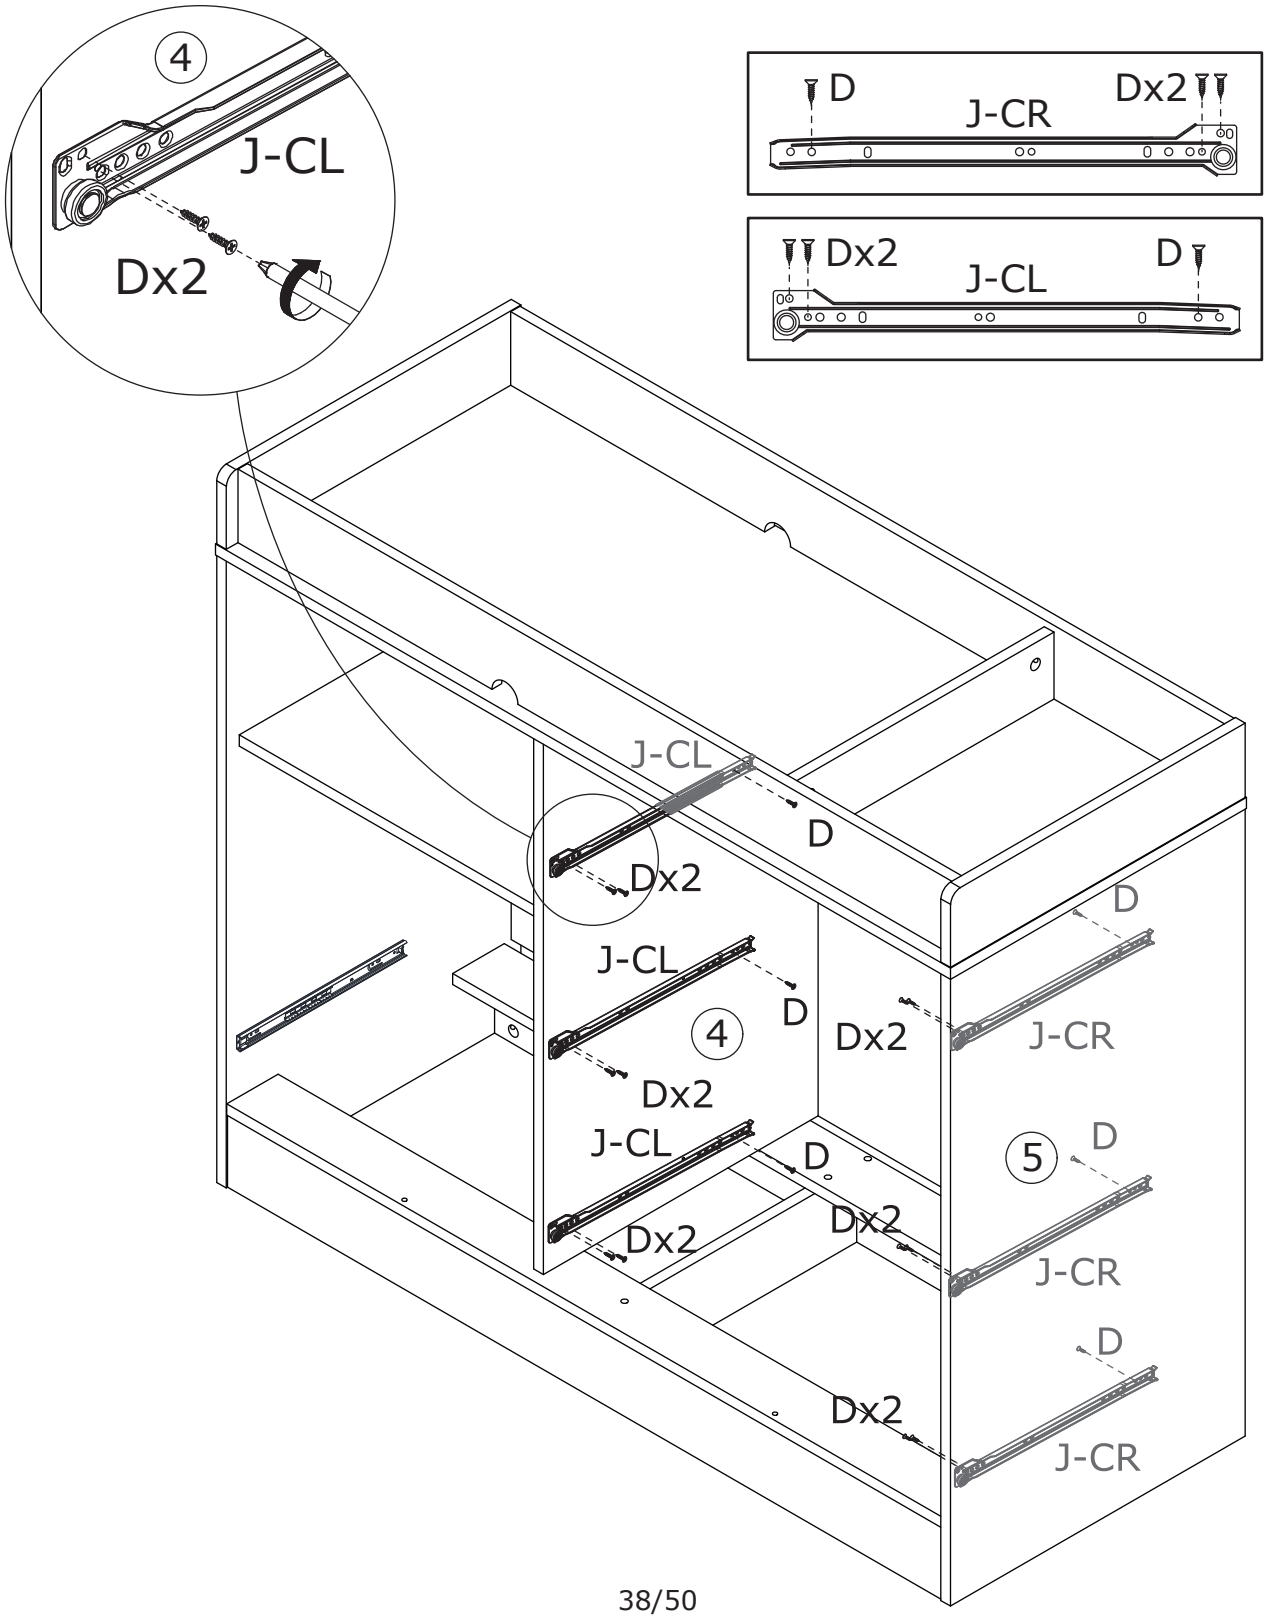


34


Align rails, insert the drawer in.

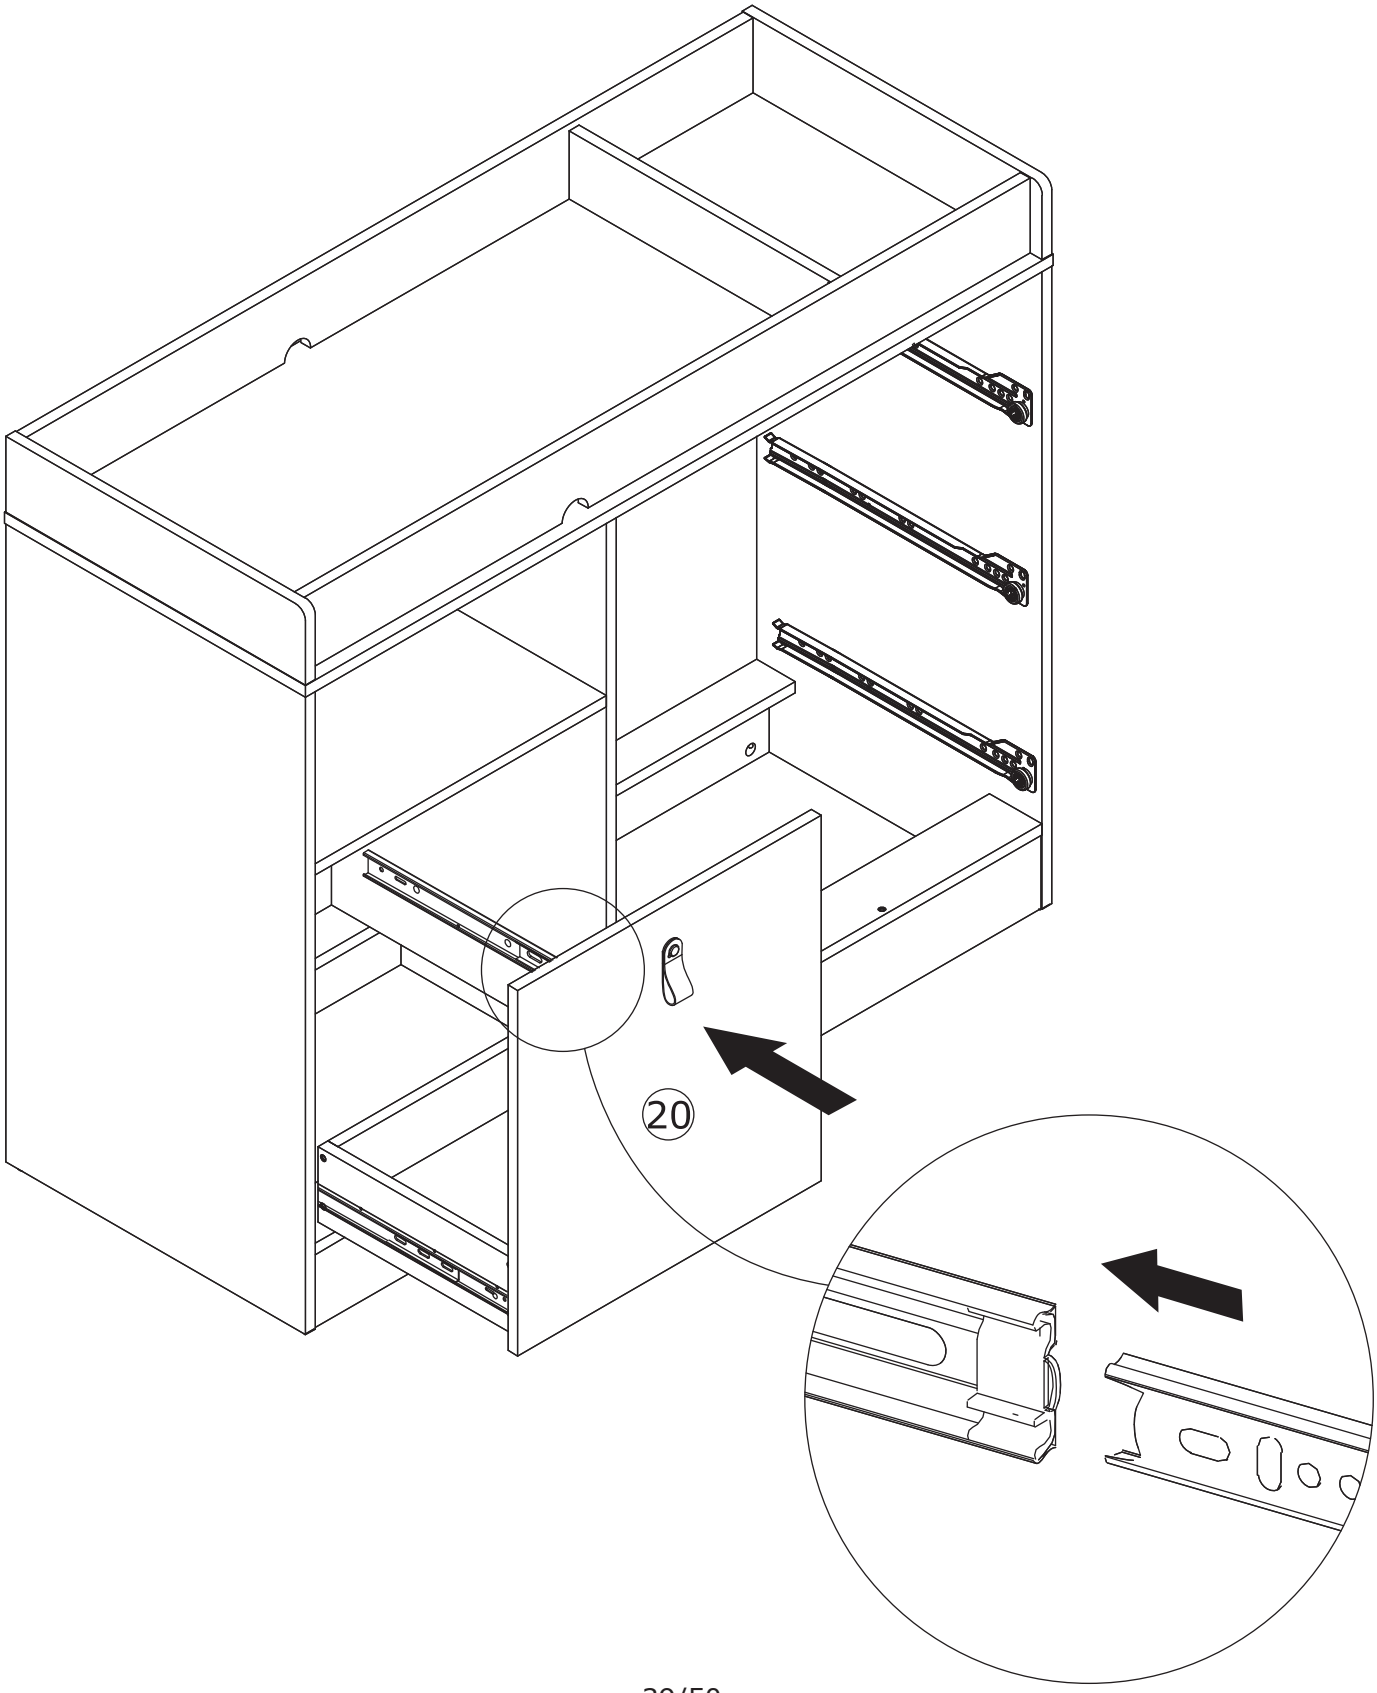


35






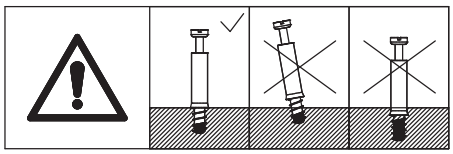

Screw eccentric rod(A) onto part 16 and 18.

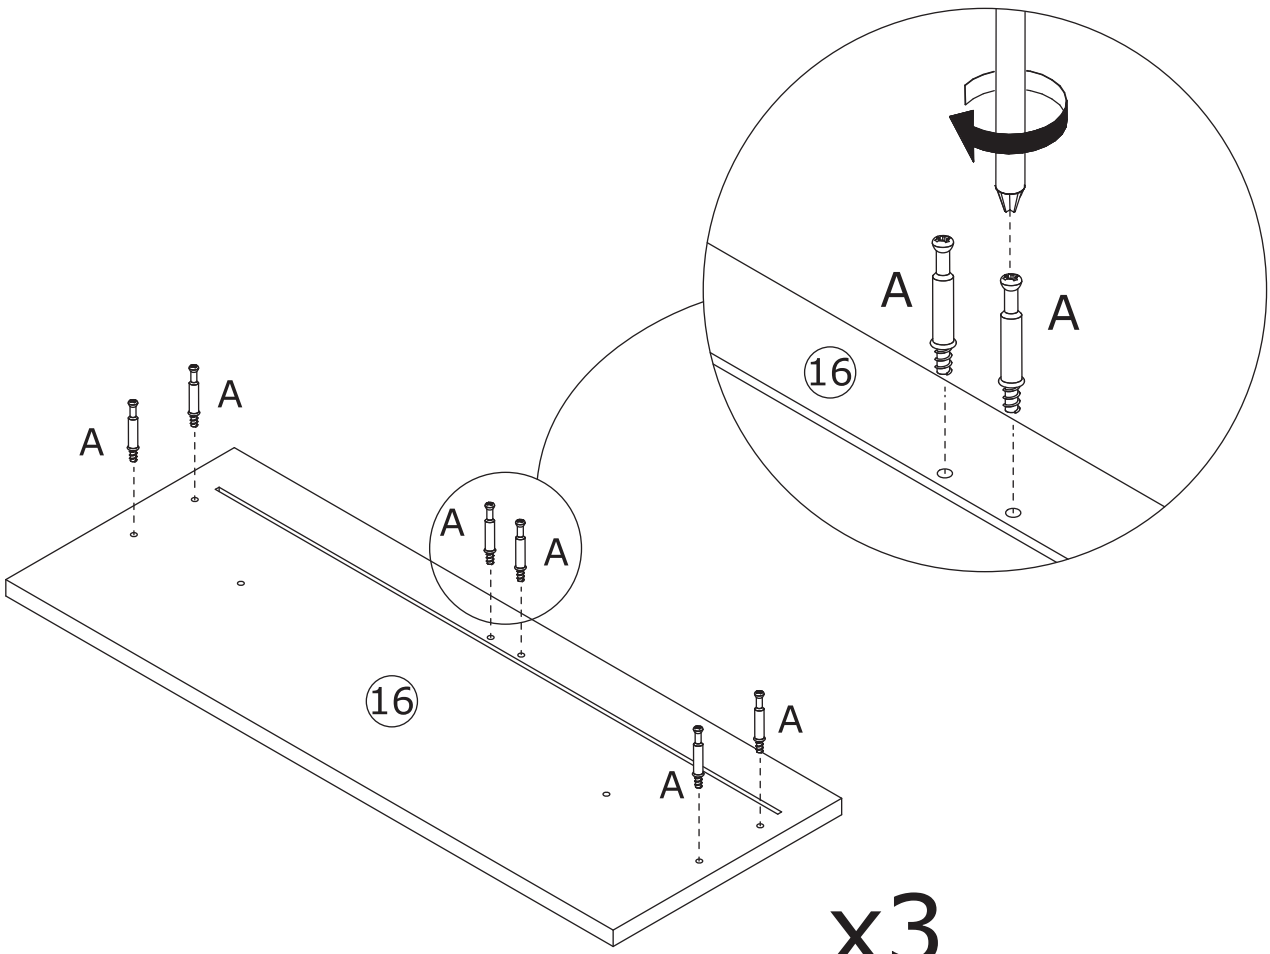


x3

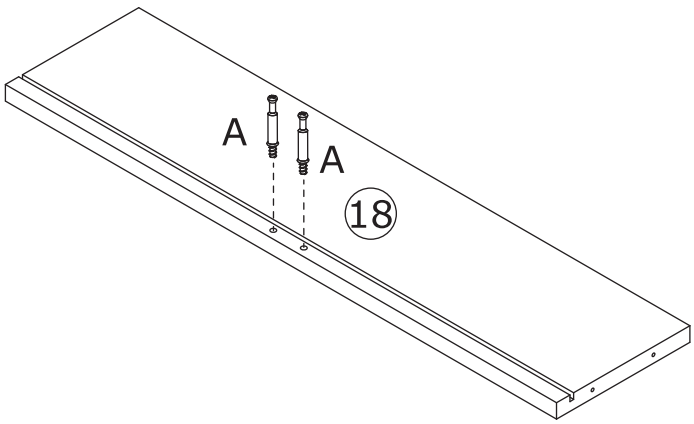


x3

36


N x 12



∅4 x 30 mm



Secure part 18 to part 15
and 17 using screw (N).

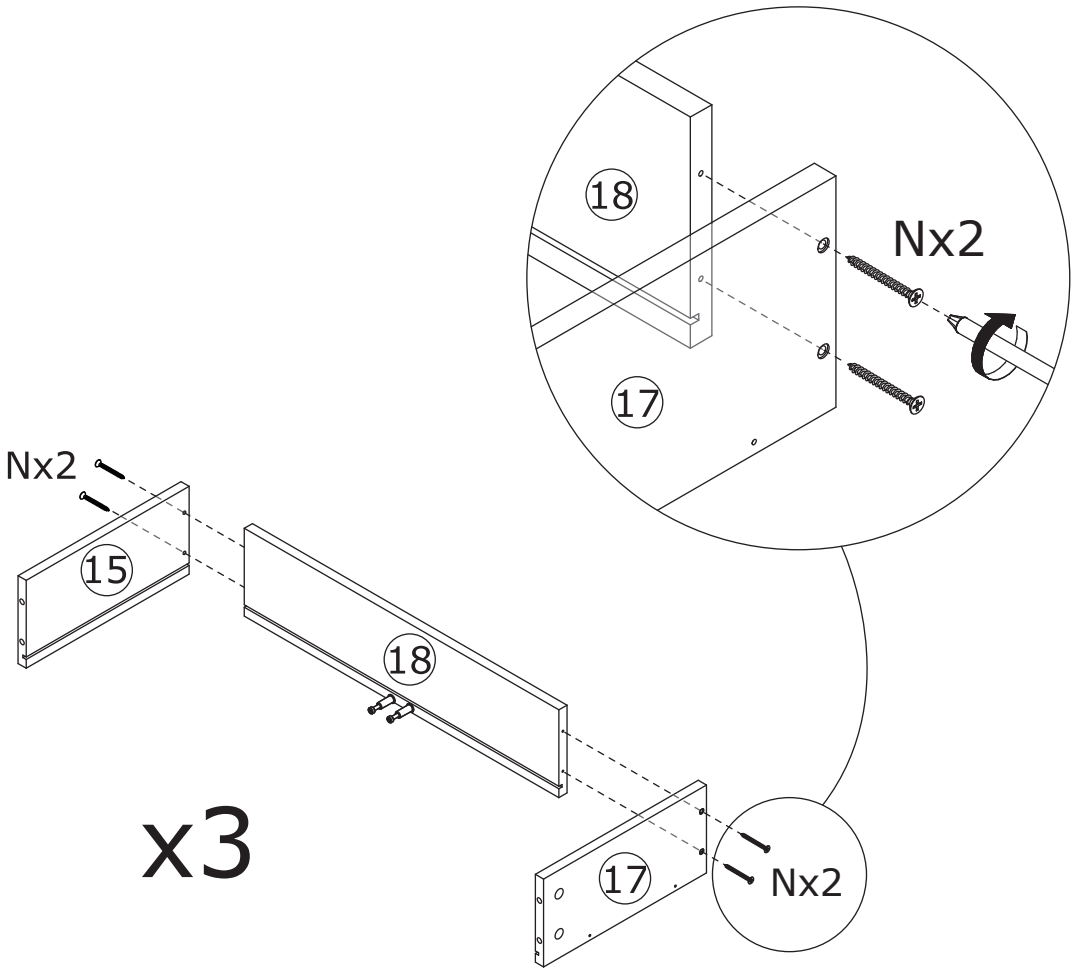



37

B x 6




∅15 x 9.5 mm



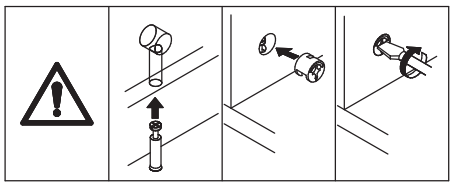


Connect part 27 to part 18, then tighten by turning eccentric cam (B) clockwise.

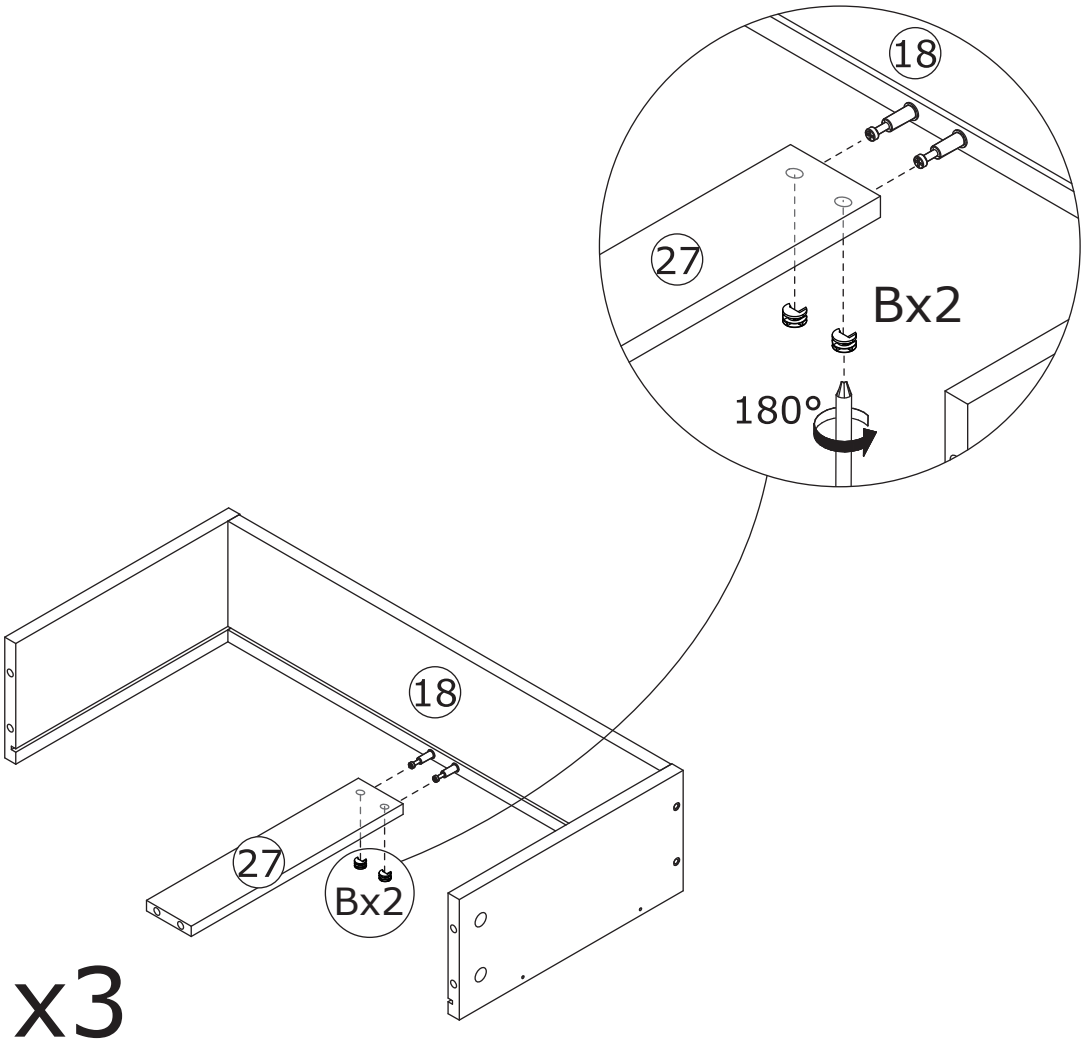

x3

38

Insert part 19 along the grooves.

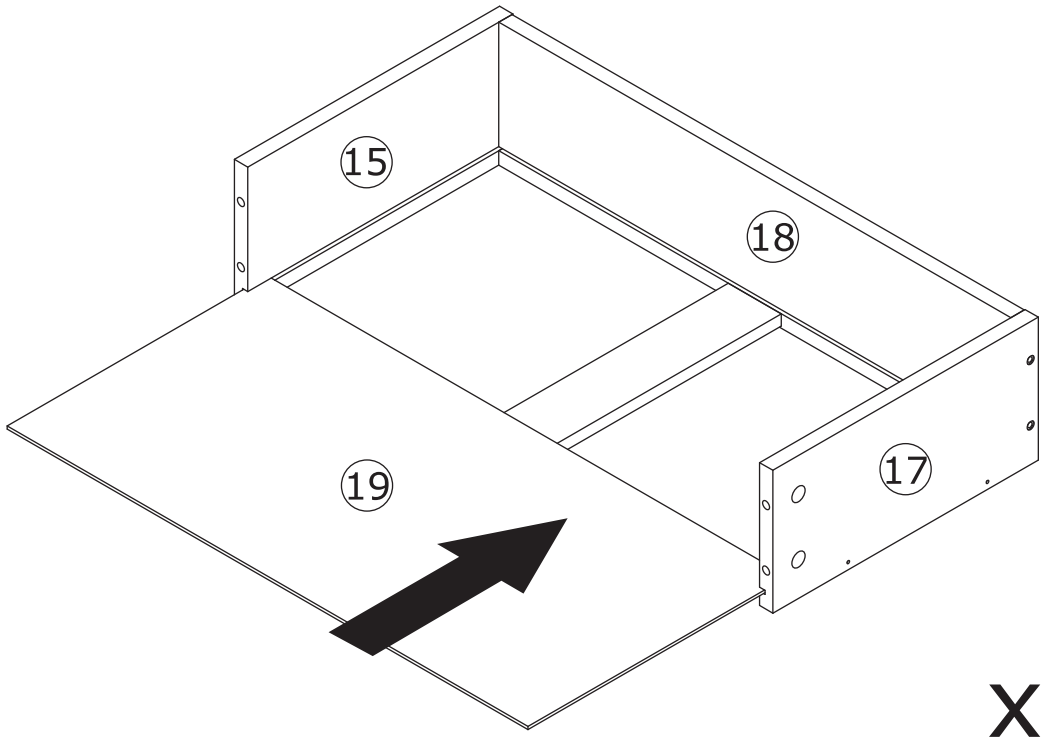


x3


39

B x 18




∅15 x 9.5 mm



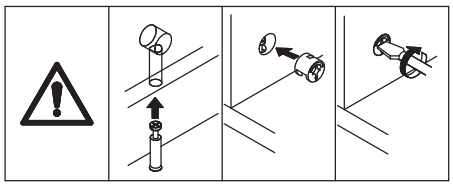

Connect part 16 to part 15, 27 and 17 then tighten by turning eccentric cam (B) clockwise.

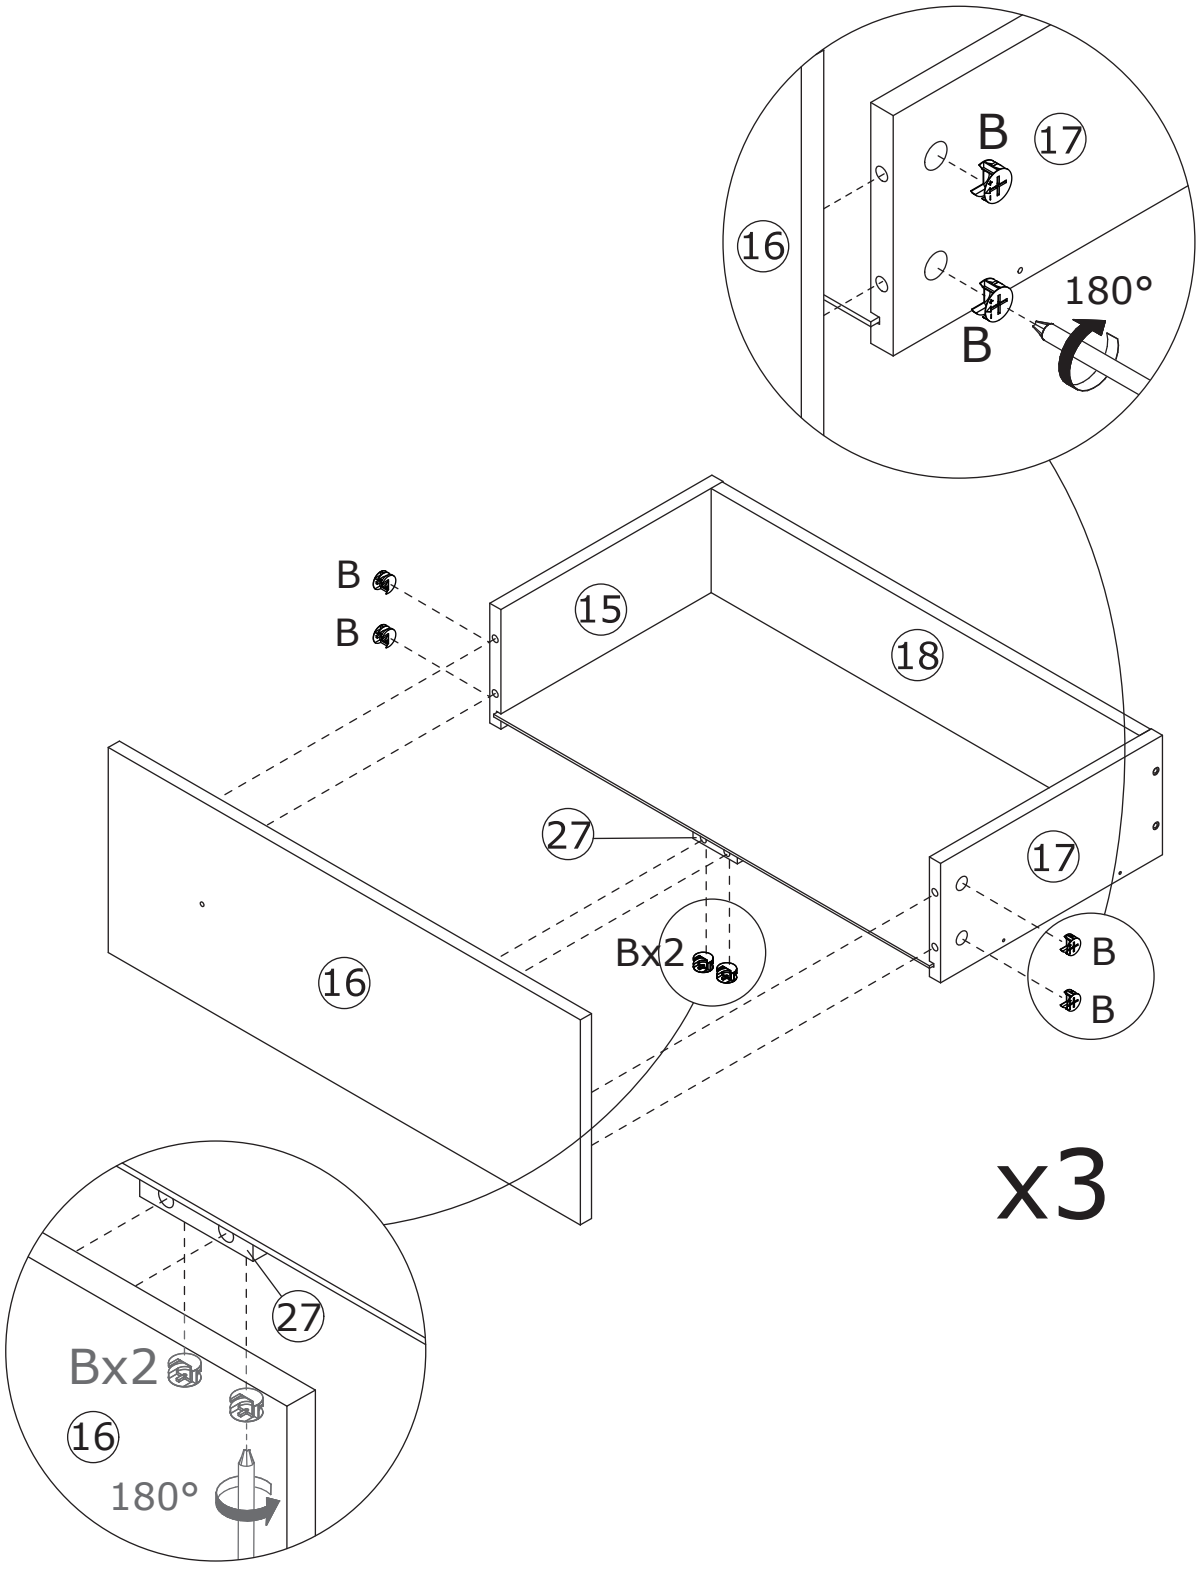


40


F x 6



∅3 x 16 mm





Secure pull (F) to part 16.

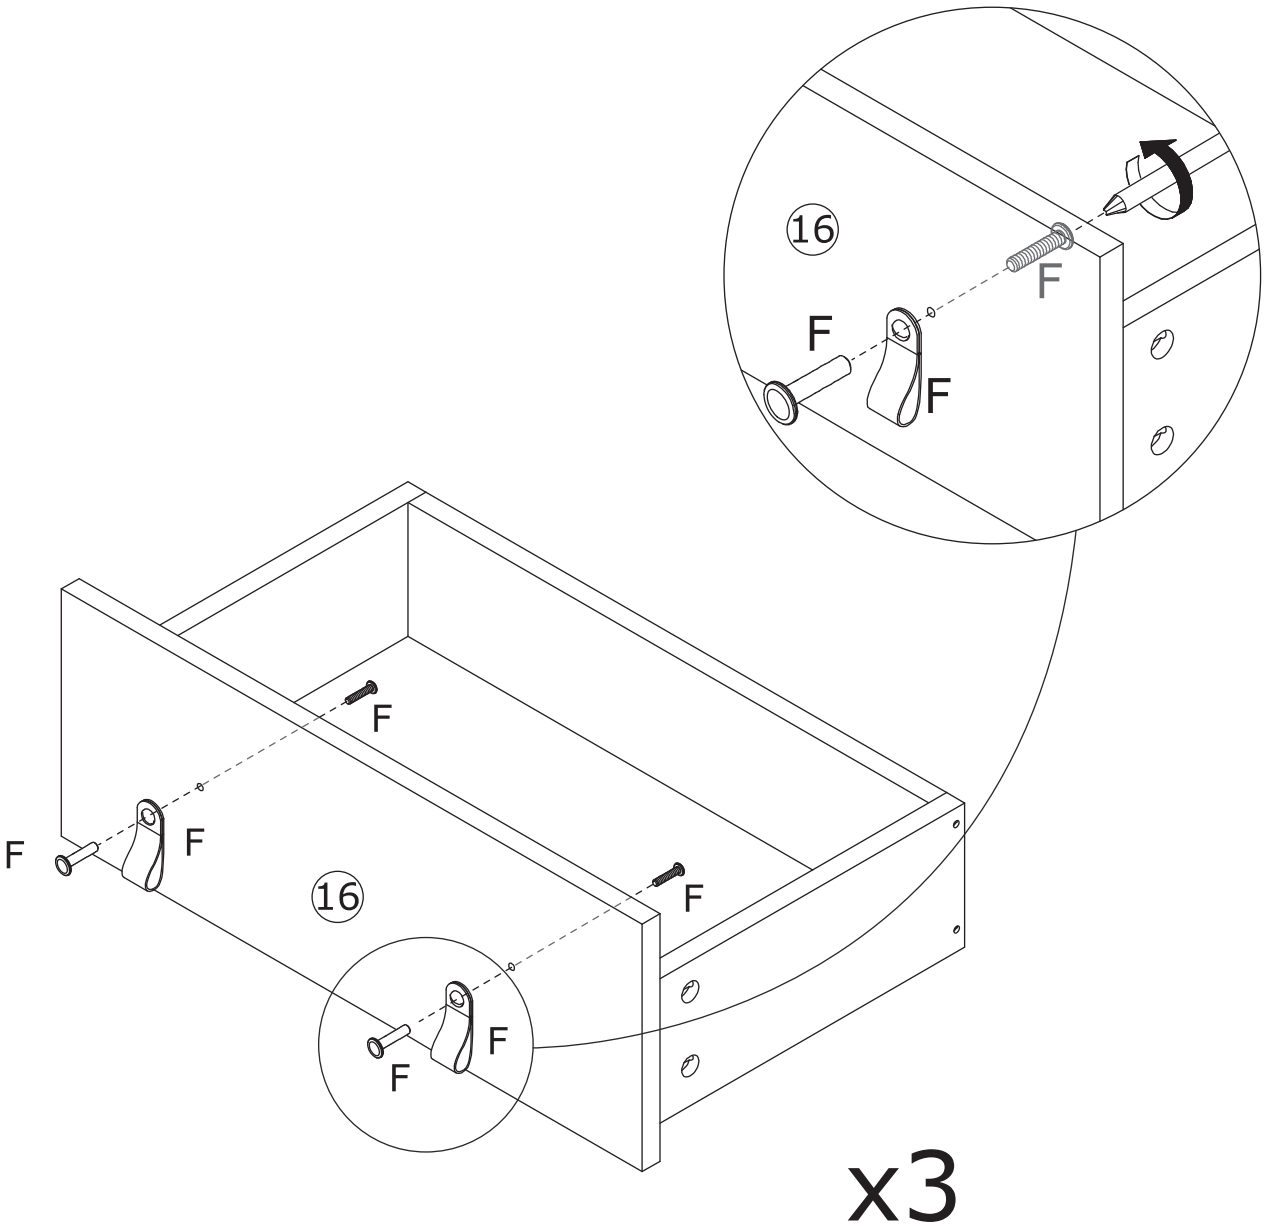


x3

41


D x 24	J-DL x 3	J-DR x 3	
			
∅3 x 12 mm	L=250 mm	L=250 mm	

Fix rail (J-DL) and (J-DR) to part 15 and 17, respectively, using screw (D).

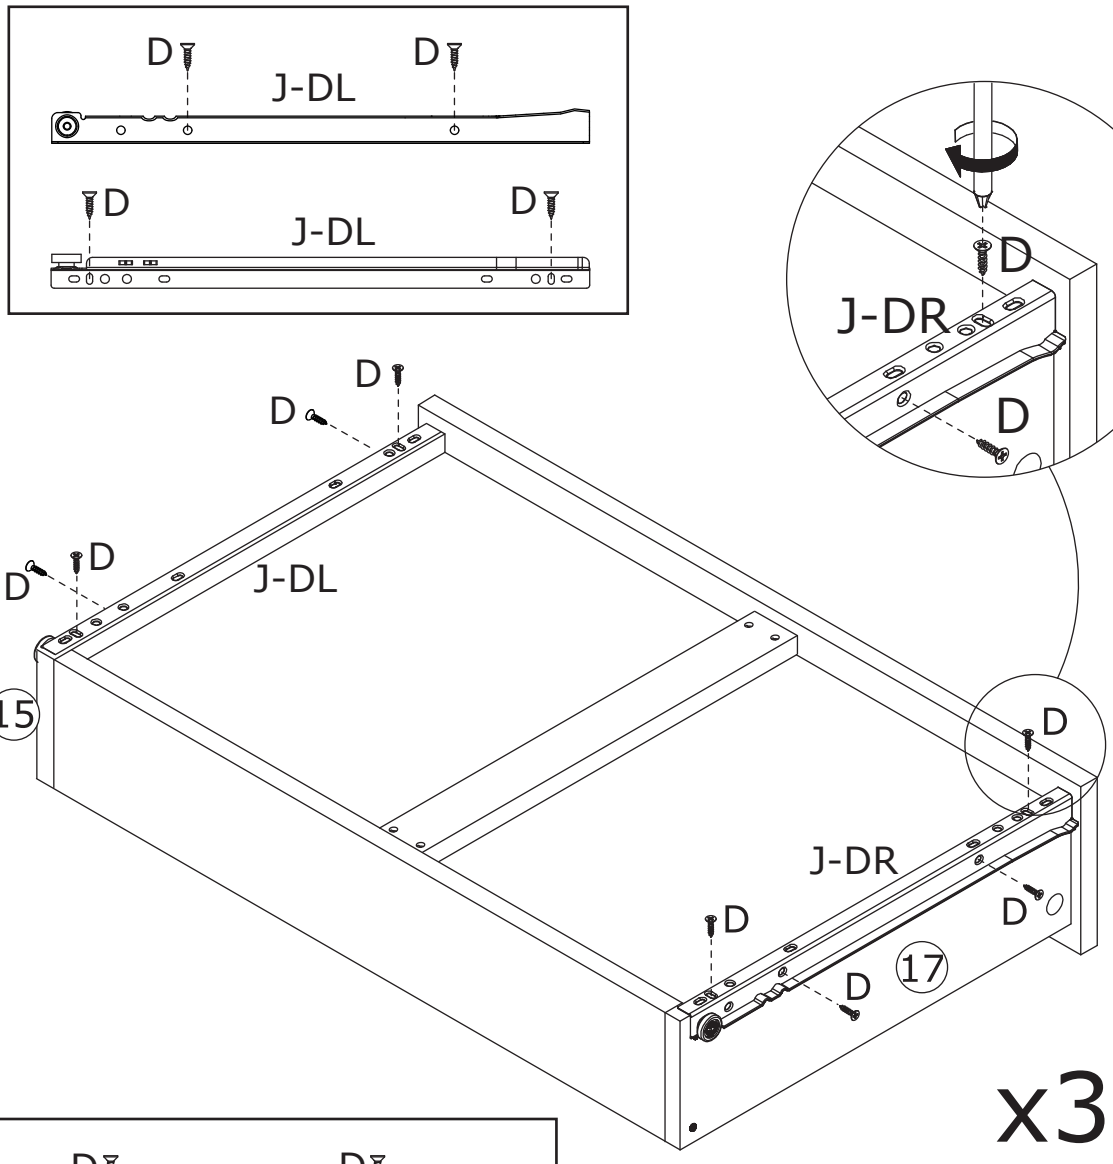


42


Align rails, insert all drawers in.

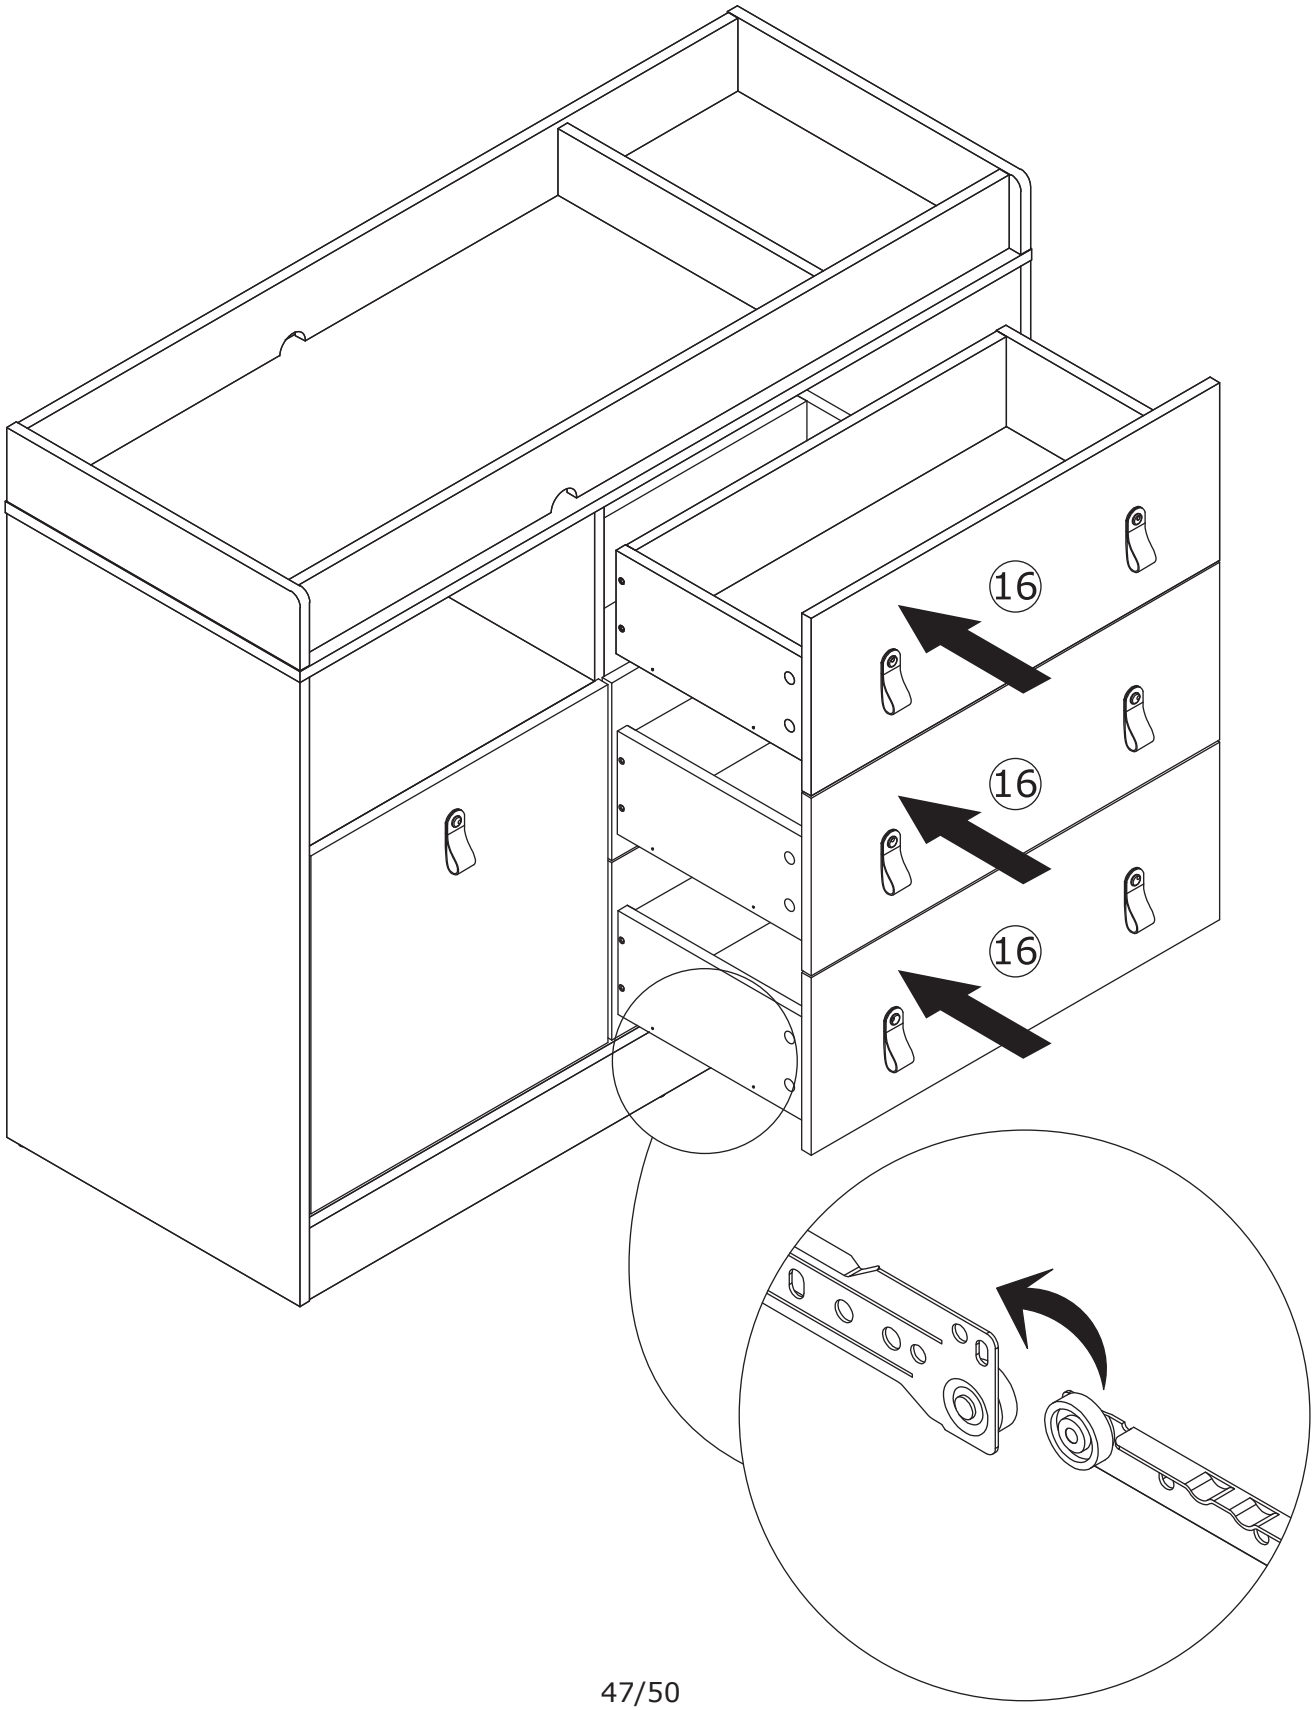

43

D x 4	G x 2	
 ∅3 x 12 mm		

Secure iron plate (G) to part 31 and 8 using screw (D).

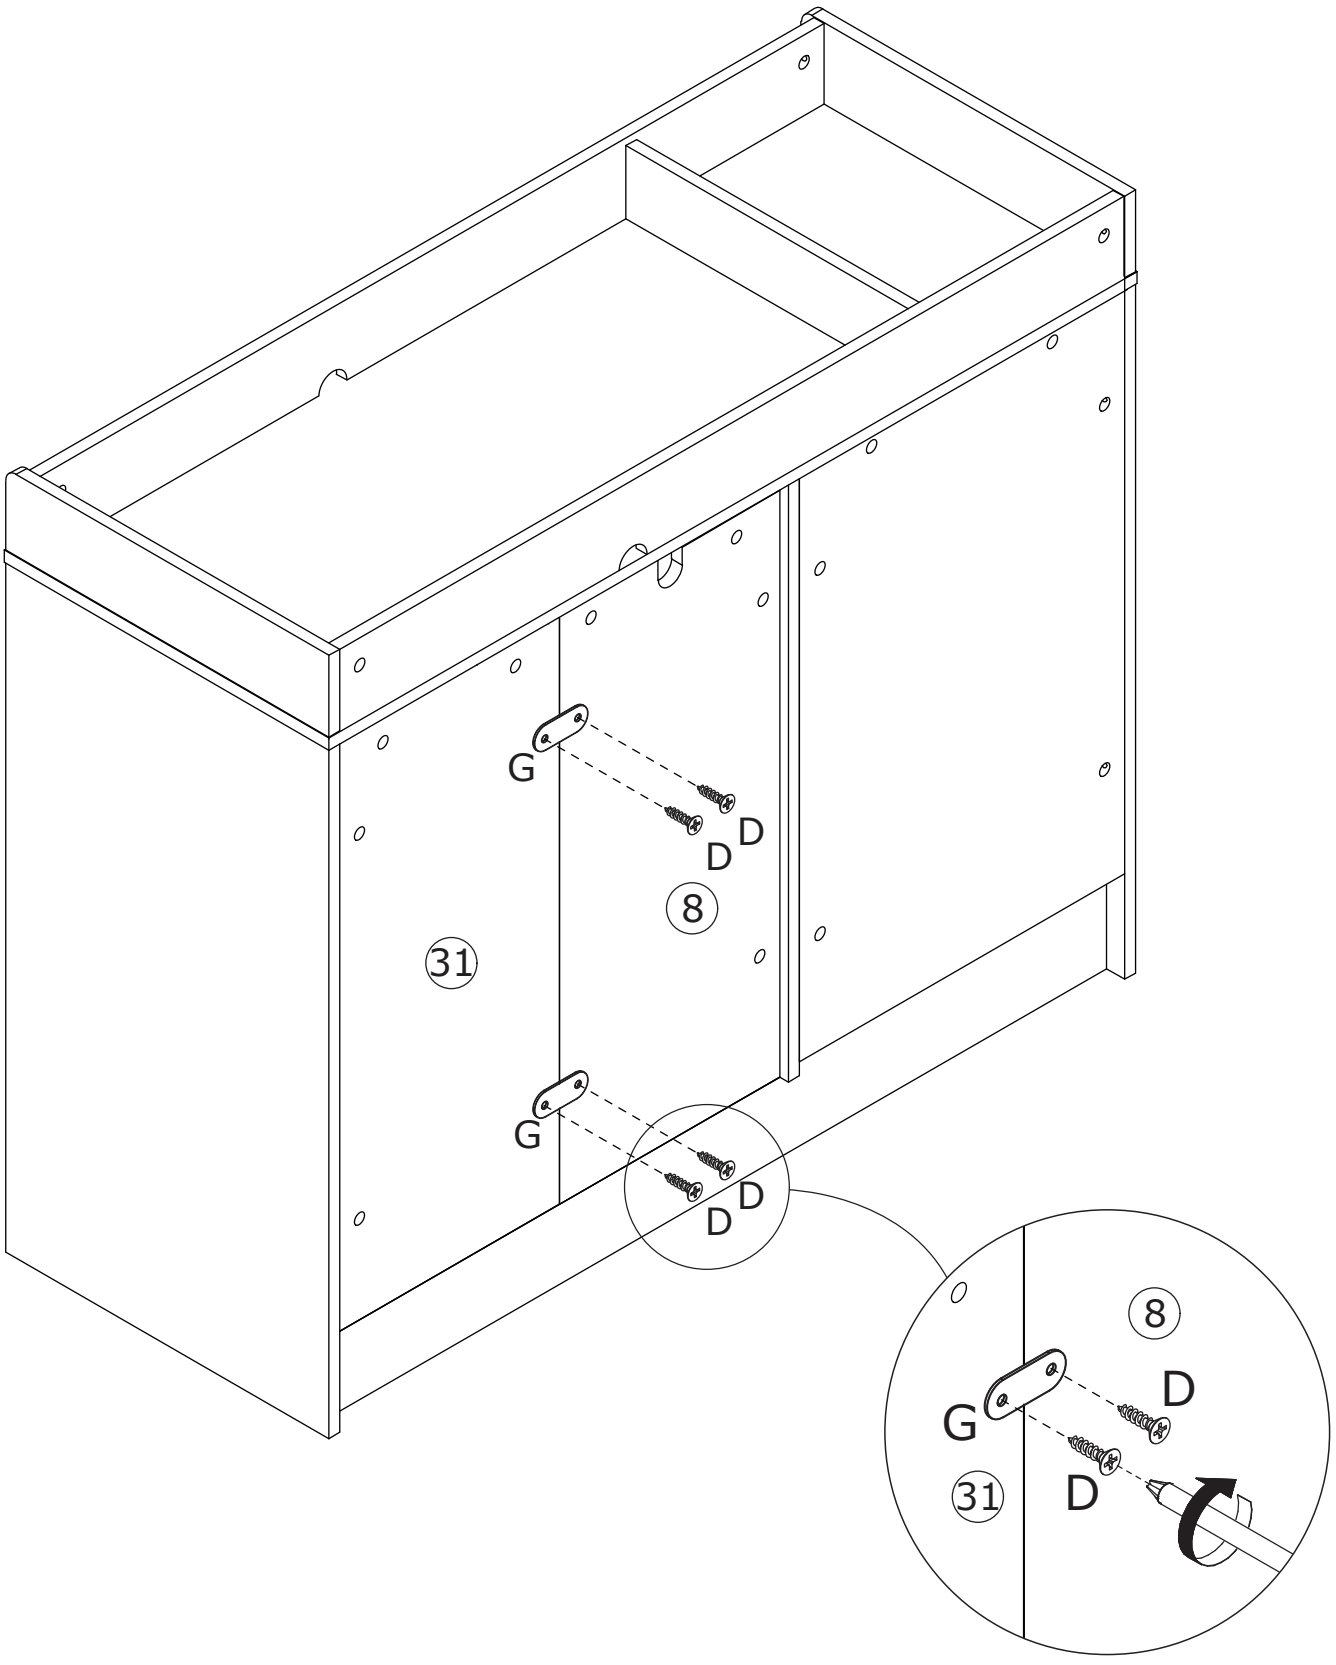



44

L x 50








Cover the cam lock holes.

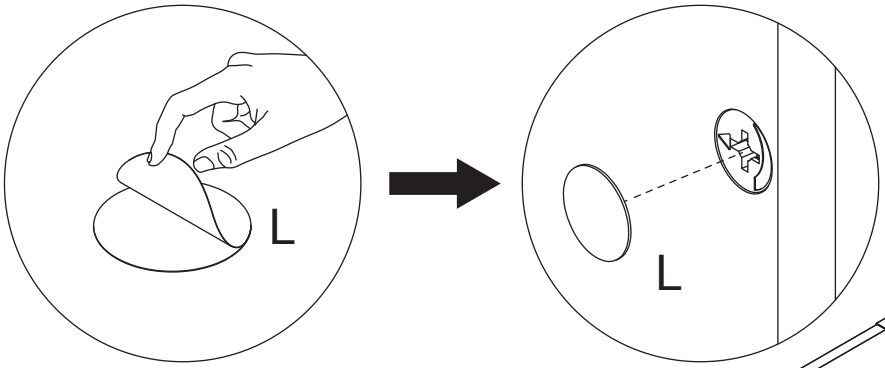


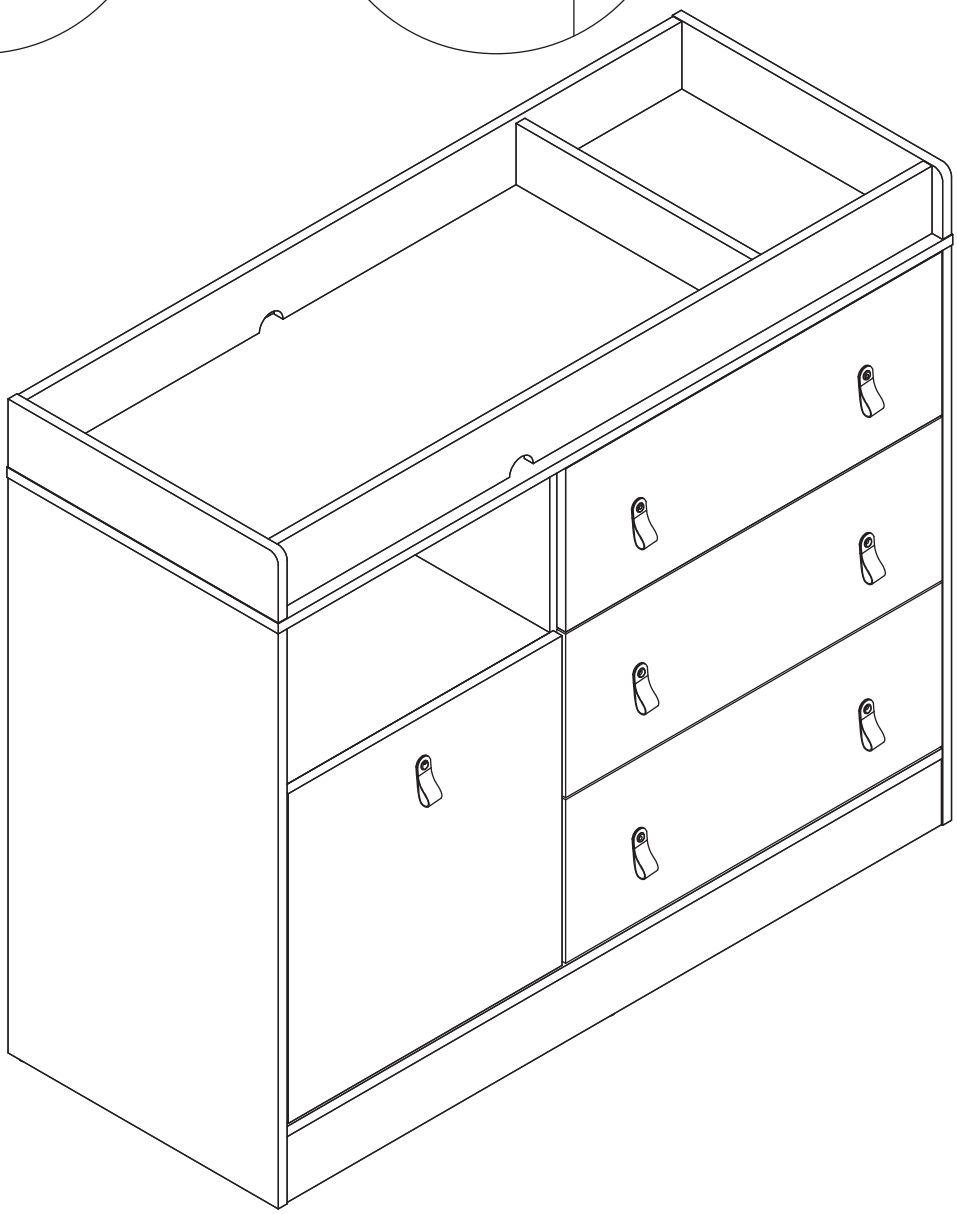


45


K-2 x 1	K-3 x 1				
					

Install anti-tip device as shown.

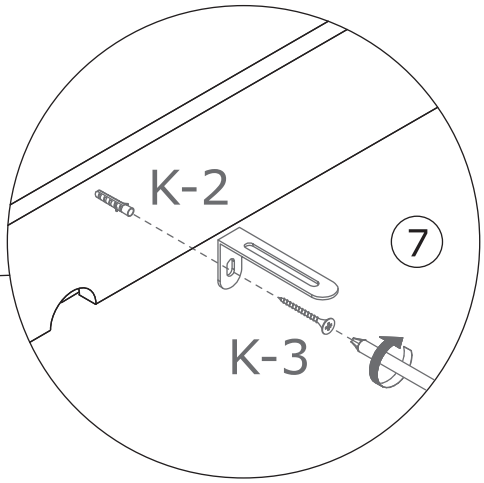


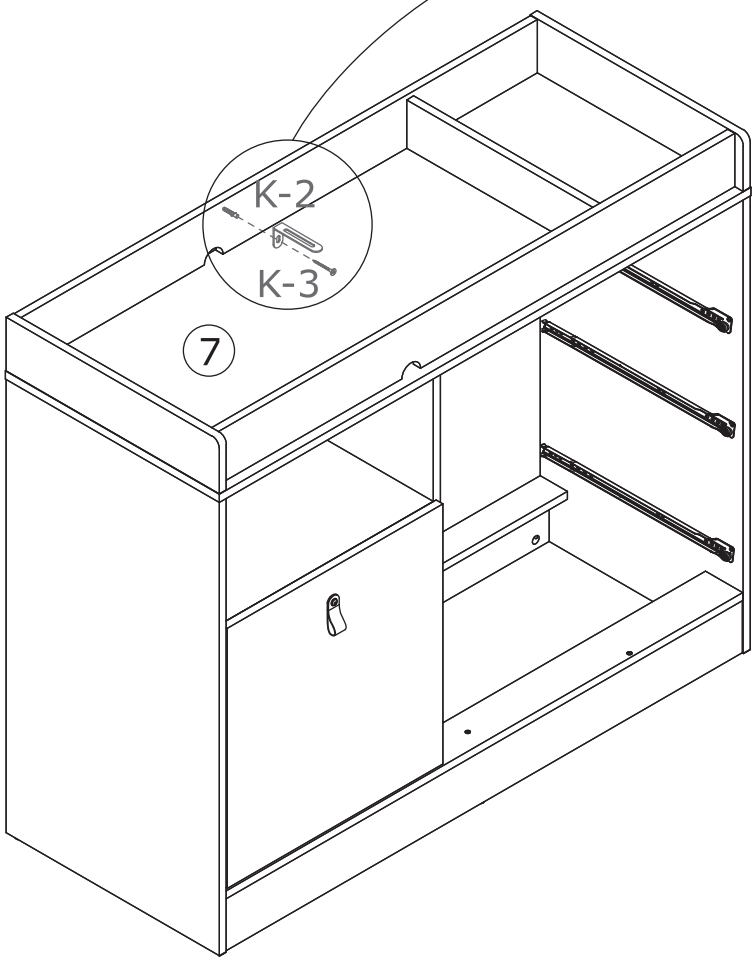


1.

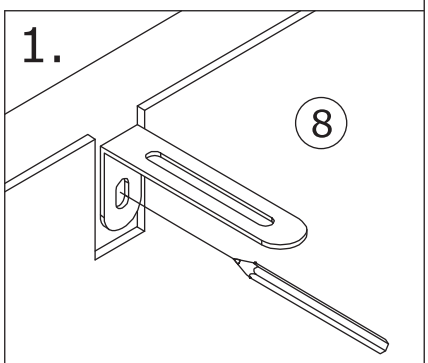


2.

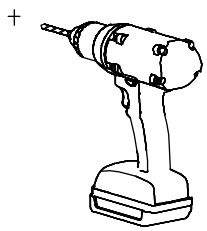

3.

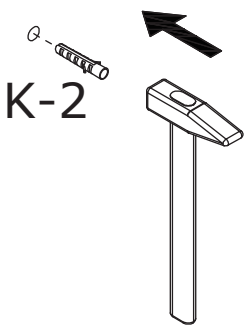

4.

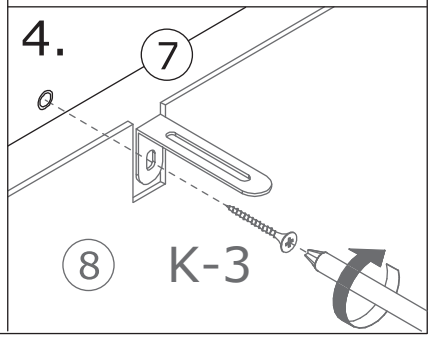

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068