





CLIMBER

For the delight and amusement of all people age 14 and over. For indoor use only.


A. DESCRIPTION

Thank you for purchasing the **CLIMBER**. This product features a Climber with a string of lights over his shoulder climbing up and down his Christmas ladder helping decorate your tree. Plays 15 Christmas carols. For indoor use only.


B. SETTING UP THE UNIT

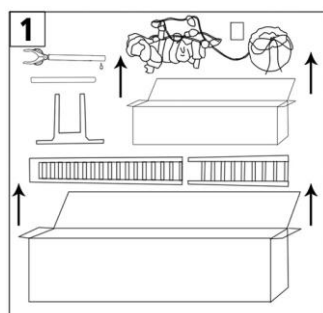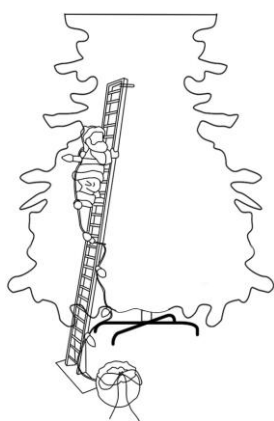


A. Gently lift the unit from the packaging and remove the unit from the polybag.

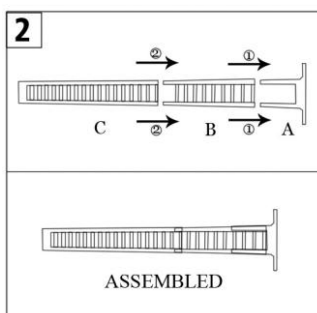


B. Layout the ladder parts on a flat surface. Insert ladder Part B into ladder stabilizer Part A. Insert the combined ladder into the pre-assembled ladder Part C.

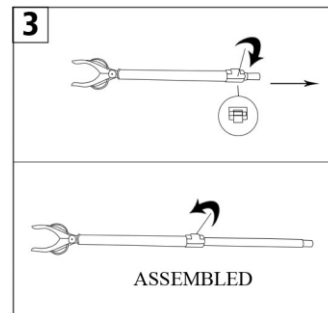


C. Loosen the clip to extend the pole to the desired length, tighten the clip to lock.

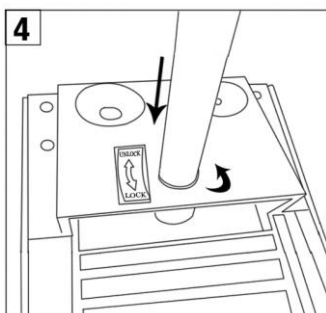


D. Insert the extendable ladder support bar into the hole located at the ladder top. Turn to the "LOCK" position to secure with screw head, twist counterclockwise to lock in position.

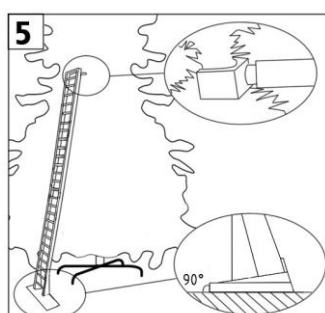


E. Position the ladder next to your Christmas tree or any vertical, flat surface. To secure the support bar on the tree, fit the clamp around the trunk of the tree and carefully push forward. Please make sure the ladder is stable.

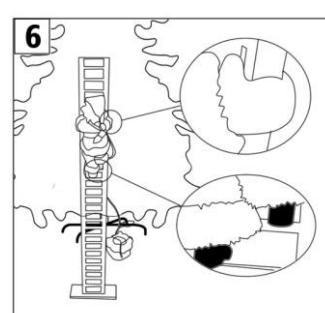


F. Place the control box (Climber's bag) in front of the ladder and the Climber in the middle of the ladder. First engage one of his hands and then the other on the ladder rails and place one of his feet on a ladder rung.

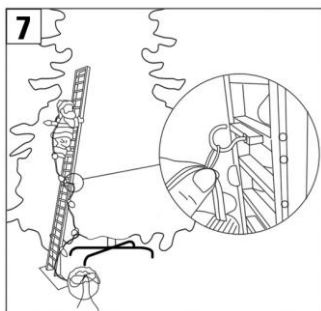


G. To make sure the string of lights does not obstruct the Climber's feet when he climbs up and down the ladder, place the light string's metal ring on the hook located at the rear of the ladder.

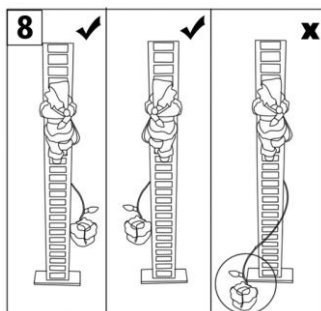

H. The control box should be in front of the ladder between the tree and ladder. Do not place behind the ladder as indicated by "X" in the figure above. Make sure there are no branches in between the ladder rungs as they may impede the Climber's motion.

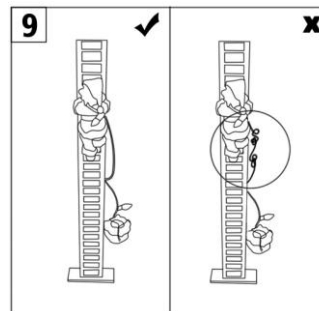

I. Make sure the light string hangs in a straight line. A twisted light string will obstruct the Climber from climbing up and down.

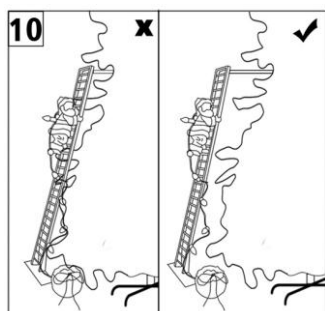

J. If the Climber has trouble climbing the ladder, please refer to the following for suggested solutions:

1. A light bulb may be stuck between the ladder rungs or in the way of the Climber's feet. Reposition the light bulb and the Climber should resume climbing.
2. If you are still experiencing a problem, make sure the light string is not twisted. Unplug the adapter jack from the bottom of the gift bag, remove the light string ring from the hook at the back of the ladder, and take the Climber off the ladder. Lift the gift bag and let the Climber hang as the light string un-twists. Place the Climber back on the ladder.
3. To make sure the light string does not obstruct the Climber's feet when he climbs up and down the ladder, place the light string's metal ring on the hook located at the rear of the ladder.
4. Remove branches / tips from between the ladder rungs and side of the ladder as they may interfere with the Climber's climbing or get caught in the hands or beard.
5. Make sure the control box (Climber's bag) is positioned properly. Please see Fig. 8.
6. The power may be interrupted. Turn the volume wheel to OFF, reposition the Climber, and turn the volume dial to ON.

C. OPERATION

1. Insert the adapter plug into the unit jack at the rear of the control box. Plug the adapter into a nearby working outlet. **The adapter is intended to be correctly oriented in a vertical or floor mount position.**
 2. Turn the VOLUME / ON-OFF dial from OFF to ON. Music will start to play, the Climber will begin to climb and the lights will go on.
 3. Press the RESET button to hear a different song.
 4. Turn the VOLUME dial to adjust the volume of music.
- Note:** No music can be heard at the minimum setting.

D. TROUBLESHOOTING

Your **CLIMBER** has been designed to provide many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

PROBLEM	LIKELY CAUSE	SOLUTION
No music, lights or motion	No power	1. Make sure the adapter is plugged into a working outlet 2. Make sure the adapter jack is securely attached to the back of the control box
	VOLUME dial OFF	Turn VOLUME dial from OFF to ON
Music is not playing but there is motion	Pause between songs	Wait one or two seconds for the next song to start
	Volume dial is at MIN	Turn volume control toward MAX position
Music is playing but figures are not moving	Power is interrupted	Turn power off and then on again
	Platform is obstructed	Turn power OFF and remove obstruction

Music is too loud, too soft, or not audible	Volume dial is incorrectly adjusted	Adjust volume dial to your preference
	Power is interrupted	1. Make sure the adapter is plugged into both the wall and the unit 2. Turn power off and then on again
Climber is having trouble climbing	Ladder not positioned correctly	Make sure the ladder is on a flat surface and the climbing angle is not too steep or too flat. Be sure to remove all branches which the Climber may step on.
	Tree or branches are in the way	Be sure to remove all branches from the ladder rungs which could cause the Climber to trip or get caught in the hands or fabric
	Control box is not positioned properly or the light string is not hanging on the hook	1. See Fig. 8 for proper positioning 2. The control box should be in front of the ladder between the tree and the ladder 3. Place the light string's metal ring on the hook at the back of the ladder
	Light string twisted The bottom of Santa's feet are dirty	Untangle the light string by following the directions in J2 Clean the bottom of Santa's feet with a damp cloth
White powder on the ladder	Climber's hands are rubbing against the ladder	Clean the ladder with a damp cloth

E. CARE INSTRUCTIONS

1. Do not expose this item to moisture or outdoors. This item is for indoor use only.
2. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
3. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
4. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
5. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

The following is only applicable to customers in the USA:

FEDERAL COMMUNICATIONS COMMISSION, PART 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



GRIMPEUR

Pour le plaisir et l'amusement de toutes les personnes âgées de 14 ans et plus.
Pour un usage intérieur uniquement.


A. DESCRIPTION

Merci d'avoir acheté le **GRIMPEUR**. Ce produit présente un Grimpeur avec une guirlande lumineuse sur ses épaules qui monte et descend sur son échelle de Noël pour vous aider à décorer votre sapin. Joue 15 chants de Noël. Pour usage intérieur seulement.


B. INSTALLATION DE L'UNITÉ

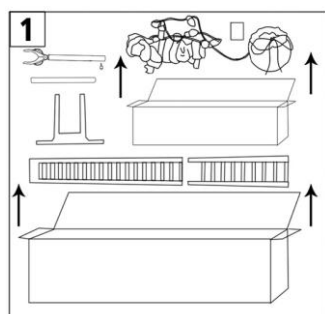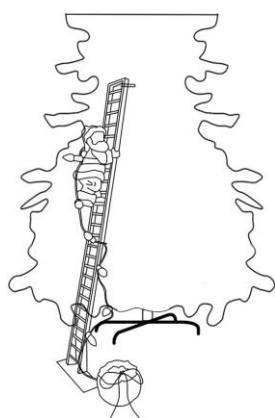


A. Soulever doucement l'unité de l'emballage et la retirer du sac de polyéthylène.

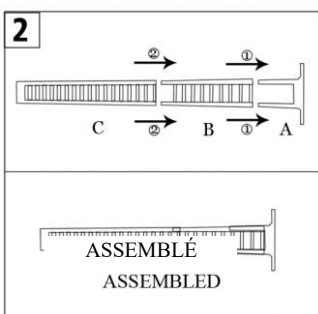


B. Disposer les pièces de l'échelle sur une surface plane. Insérer la pièce B de l'échelle dans la pièce A du stabilisateur d'échelle. Insérer l'échelle combinée dans la pièce de l'échelle C pré-assemblée.

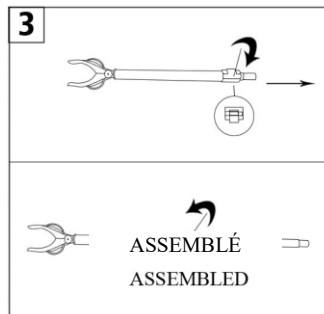


C. Desserrer la pince pour allonger la tige à la longueur désirée, serrer la pince pour verrouiller.

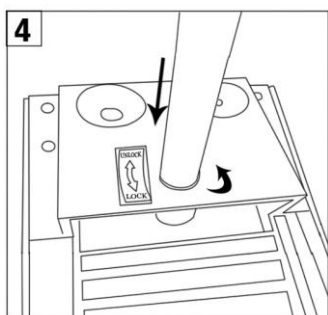


D. Insérer l'échelle extensible dans la tige située au haut de l'échelle. Tourner en position « LOCK ». Pour fixer avec la tête de vis, tourner dans le sens antihoraire pour verrouiller en position.

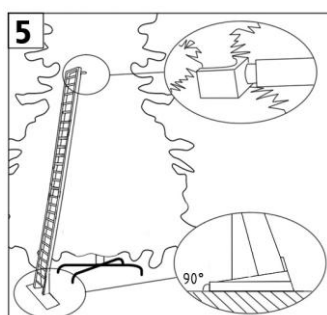


E. Positionner l'échelle à côté de votre sapin de Noël ou sur toute surface plane verticale. Pour fixer la barre de support sur l'arbre, ajuster la pince autour du tronc et pousser doucement vers l'avant. Veuillez vous assurer que l'échelle est stable.

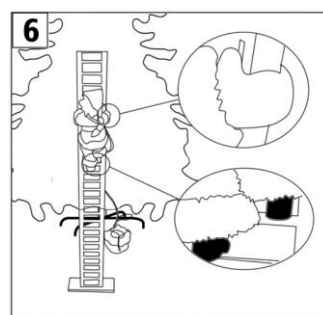


F. Placer la boîte de contrôle (sac du Grimpeur) à l'avant de l'échelle et le Grimpeur au centre de l'échelle. Engager d'abord une de ses mains et placer un de ses pieds sur un échelon de l'échelle.

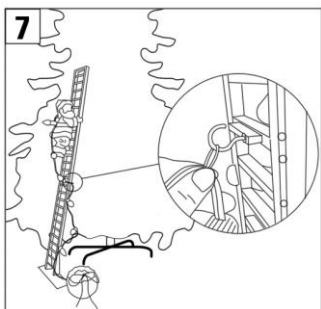


G. Pour assurer que la guirlande lumineuse n'obstrue pas les pieds du Grimpeur lorsqu'il monte ou descend sur l'échelle, placer l'anneau métallique de la guirlande sur le crochet situé à l'arrière de l'échelle.

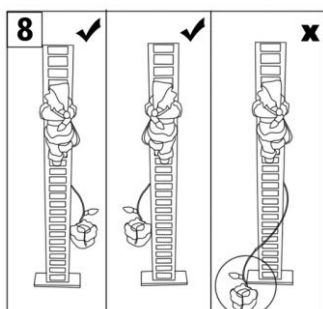

H. La boîte de contrôle doit être à l'avant de l'échelle entre l'arbre et l'échelle. Ne pas la placer derrière l'échelle comme indiqué par le « X » dans la figure ci-dessus. Assurez-vous qu'il n'y a pas de branche entre les échelons de l'échelle car ils pourraient obstruer le mouvement du Grimpeur.

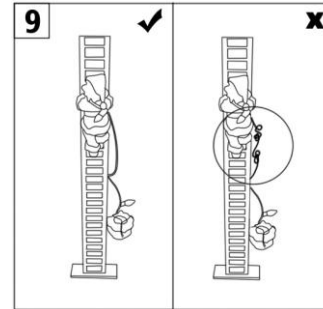

I. S'assurer que la guirlande lumineuse est en ligne droite. Une guirlande torsadée empêchera le Grimpeur de monter et de descendre.

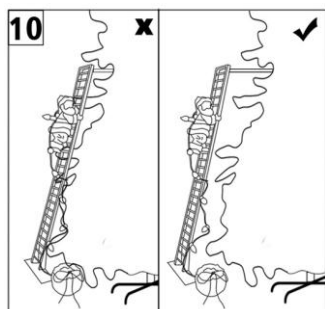

- J. Si le Grimpeur ne grimpe pas bien sur l'échelle, veuillez consulter les solutions suivantes suggérées :
1. Une ampoule peut être prise entre les échelons ou dans le chemin des pieds du Grimpeur.
 2. Si vous avez toujours des problèmes, assurez-vous que la guirlande de Noël n'est pas torsionnée. Débrancher l'adaptateur du bas du sac de cadeaux, retirer la guirlande lumineuse du crochet à l'arrière de l'échelle et retirer le Grimpeur de l'échelle. Soulever le sac de cadeaux et laisser le Grimpeur pendre pour faire détorsionner la guirlande lumineuse. Placer le Grimpeur à l'arrière de l'échelle.
 3. Pour s'assurer que la guirlande de Noël n'obstrue pas les pieds du Grimpeur lorsqu'il monte et descend sur l'échelle, placer l'anneau de métal de la guirlande lumineuse sur le crochet situé à l'arrière de l'échelle.
 4. Retirer les branches/embouts entre les échelons de l'échelle et sur les côtés de l'échelle puisque ceux-ci pourraient interférer avec la montée du Grimpeur ou se prendre dans les mains ou la barbe.
 5. S'assurer que la boîte de contrôle (sac du Grimpeur) est positionnée de façon appropriée. Voir la Fig. 8.
 6. L'alimentation peut être interrompue. Tourner la roulette de volume à « OFF », repositionner le Grimpeur et tourner la roulette de volume à « ON ».

C. FONCTIONNEMENT

1. Insérer la fiche d'adaptation dans la prise de l'unité à l'arrière de la boîte de contrôle. Brancher l'adaptateur dans une prise fonctionnelle à proximité. **L'adaptateur est destiné à être orienté correctement en position verticale ou monté sur le plancher.**
2. Tourner la roulette « VOLUME/ON-OFF » de « OFF » à « ON ». La musique commence à jouer, le Grimpeur commencera à grimper et les lumières s'allumeront.
3. Appuyer sur le bouton RÉINITIALISER pour entendre une chanson différente.
4. Tourner la roulette de VOLUME pour ajuster le volume de la musique.
Remarque : Aucune musique ne peut être entendue au réglage minimum.

D. DÉPANNAGE

Votre **GRIMPEUR** a été conçu pour fournir de nombreuses saisons de fonctionnement sans problème. Dans le cas où un problème se produirait, veuillez consulter le tableau suivant pour connaître les solutions suggérées.

PROBLÈME	CAUSE PROBABLE	SOLUTION
Pas de musique, de lumière ou de mouvement	Pas d'alimentation	1. S'assurer que l'adaptateur est branché dans une prise de courant fonctionnelle 2. S'assurer que le connecteur de l'adaptateur est bien fixé à l'arrière de la boîte de contrôle
	Roulette VOLUME à « OFF »	Tourner la roulette de VOLUME de « OFF » à « ON »
La musique ne joue pas mais il y a du mouvement	Pause entre les chansons	Attendez une ou deux secondes que la prochaine chanson commence
	La roulette de volume est à « MIN »	Tourner le contrôle du volume vers la position « MAX »
La musique joue mais les figures ne bougent pas	L'alimentation est interrompue	Mettre hors tension et remettre sous tension
	La plate-forme est obstruée	Mettre hors tension et retirer l'obstruction
Le volume de la musique est trop haut, pas assez haut ou non audible	La roulette de volume n'est pas ajustée correctement	Ajuster la roulette de volume selon votre préférence
	L'alimentation est interrompue	1. S'assurer que l'adaptateur est branché dans le mur et dans l'unité 2. Mettre hors tension et sous tension de nouveau
Le Grimpeur ne	L'échelle n'est pas positionnée correctement	S'assurer que l'échelle est sur une surface plate et que l'angle de montée n'est pas trop prononcé ou insuffisant. S'assurer de retirer toutes les branches sur lesquelles pourrait marcher le Grimpeur.

monte pas bien	L'arbre ou la branche est dans le chemin	S'assurer de retirer toutes les branches des échelons de l'échelle qui pourrait faire tomber le Grimpeur ou se prendre dans les mains ou dans le tissu
	La boîte de contrôle n'est pas positionnée correctement ou la guirlande lumineuse n'est pas suspendue sur le crochet	1. Voir la Fig. 8 pour connaître le positionnement correctement 2. La boîte de contrôle doit être à l'avant de l'échelle entre l'arbre et l'échelle 3. Placer l'anneau de métal de la guirlande sur le crochet à l'arrière de l'échelle
	La guirlande lumineuse est tordue	Démêler la guirlande lumineuse en suivant les instructions dans J2.
Poudre blanche sur l'échelle	Les mains du Grimpeur frottent sur l'échelle	Nettoyer l'échelle avec un chiffon humide

E. DIRECTIVES D'ENTRETIEN

1. N'exposez pas cet article à l'humidité ou aux conditions météorologiques extérieures. Cet article doit être utilisé à l'intérieur seulement.
2. Inspectez soigneusement le produit avant toute utilisation. Jetez le produit en cas de fissure du boîtier ou de fils exposés.
3. Lorsque vous entreposez le produit, retirez-le soigneusement de son emplacement pour éviter toute tension ou pression sur les conducteurs, connecteurs et fils.
4. Lorsque vous ne l'utilisez pas, rangez le produit correctement dans un endroit frais et sec, à l'abri du soleil et de la chaleur.
5. Au besoin, nettoyez le produit à l'aide d'un chiffon doux et sec. N'utilisez pas de nettoyeur corrosif ou de solution chimique sur cet article.

CAN ICES-3 (B) / NMB-3 (B)

Made by Mr. Christmas Inc. / Fabriqué par Mr. Christmas Inc.
6045 E. Shelby Dr., Suite 2, Memphis TN 38141-7601
Email: customerservice@mrchristmas.com