
# TV STAND

## ASSEMBLY INSTRUCTIONS

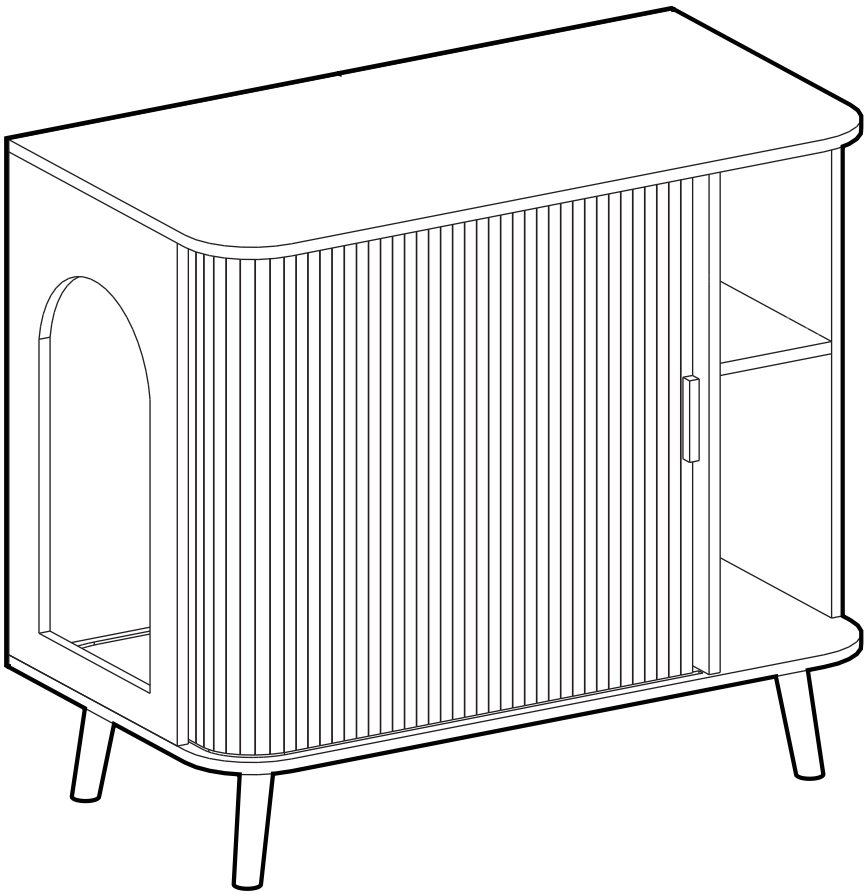


# ⚠ WARNING





**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawer.

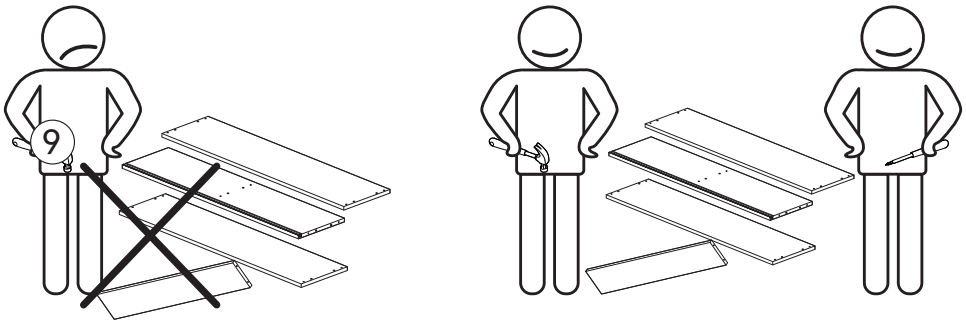



**We recommend at least 2 people for the assembly.**

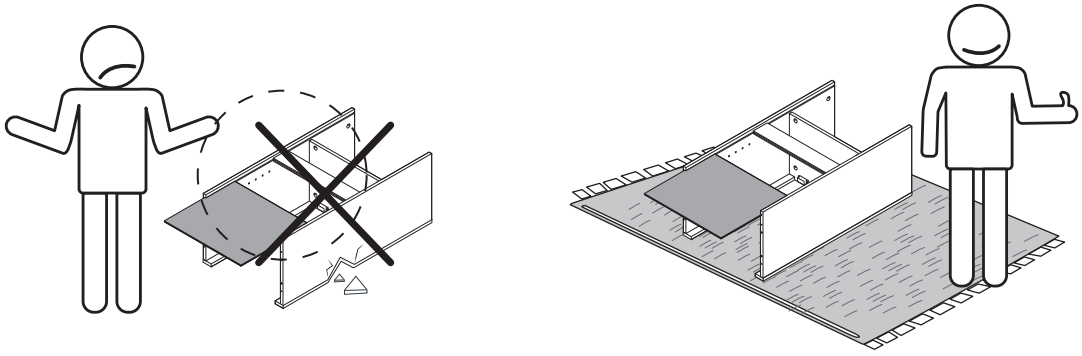


**To prevent any damage during assembly, place a mat under the pieces.**




# PARTS DIAGRAM

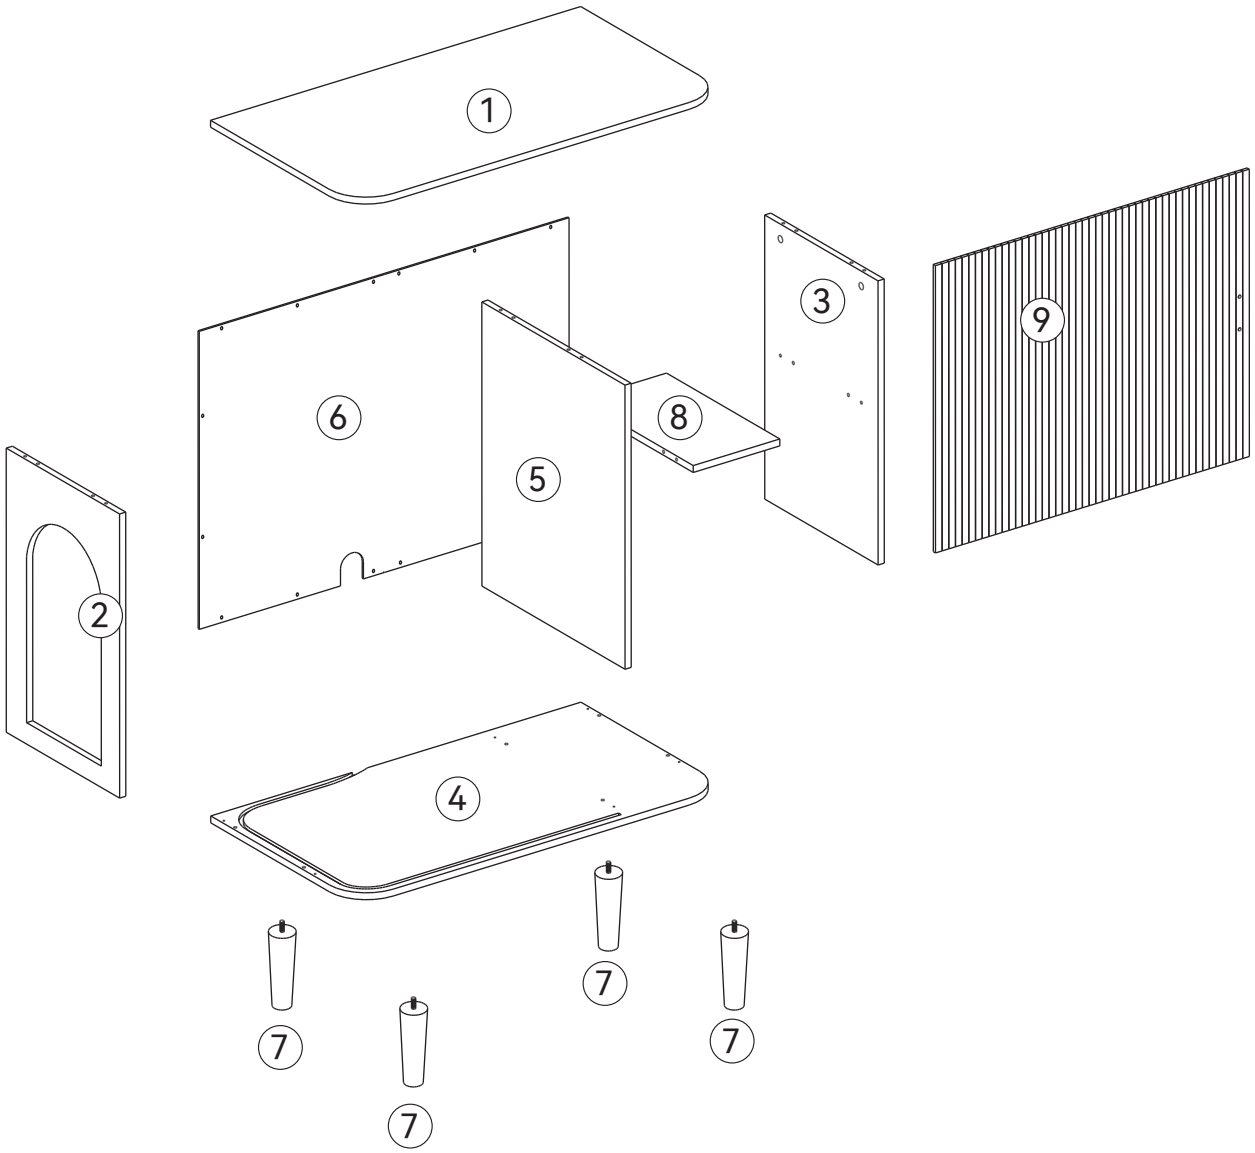


# PARTS LIST

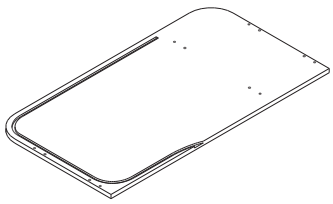


❶ x 1

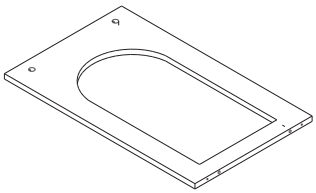


❷ x 1

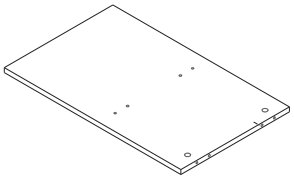


❸ x 1

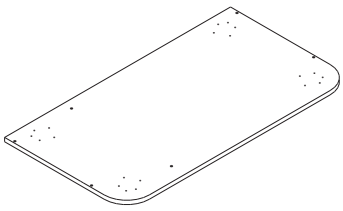

❹ x 1

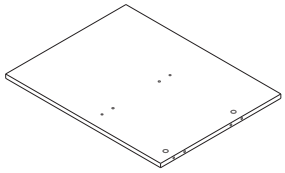


❺ x 1

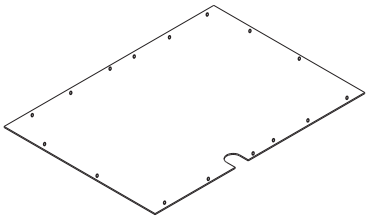


❻ x 1



❼ x 4

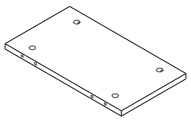


❽ x 1

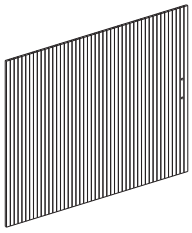

❾ x 1

# HARDWARES

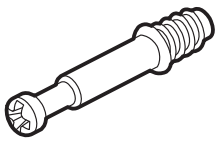


Ø6x35mm

**A** x 10




Ø15x10mm

**B** x 10

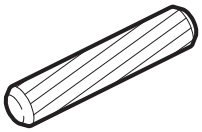

Ø6x20mm

**C** x 16

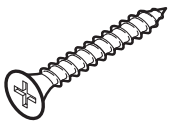


M4x35mm

**D** x 6




M4x14mm


**E** x 2

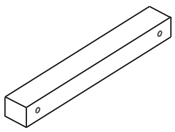

**F** x 1




**G** x 4



M4x14mm


**H** x 36

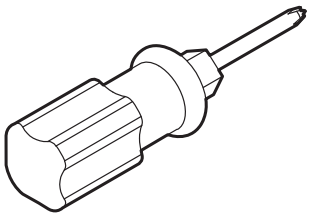

x 1

# SPARE PARTS

The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

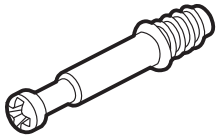


Ø6x35mm

**A** x 1




Ø15x10mm

**B** x 1

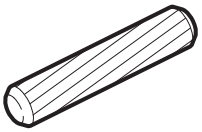


Ø6x30mm

**C** x 1

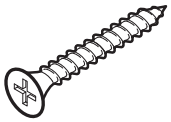

M4x35mm

**D** x 1




M4x14mm

**H** x 3


# CAM LOCK FASTEN SYSTEM

⚠ Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

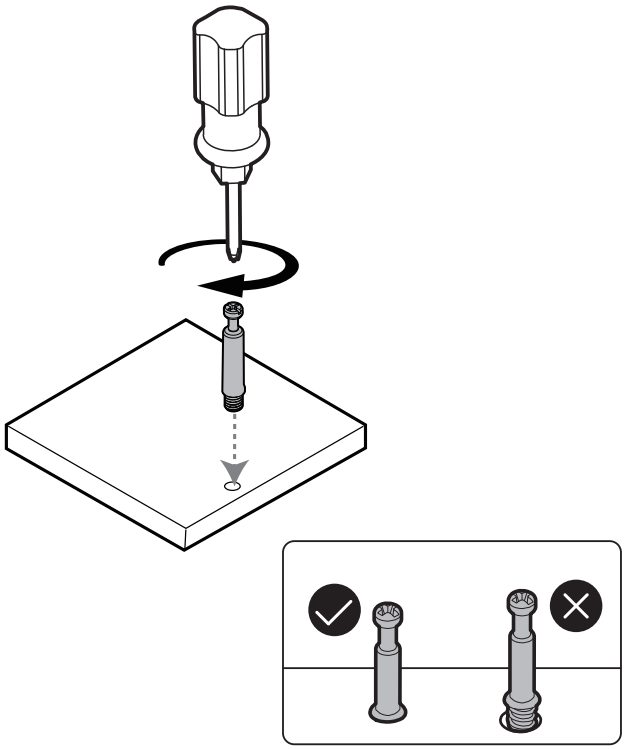


2

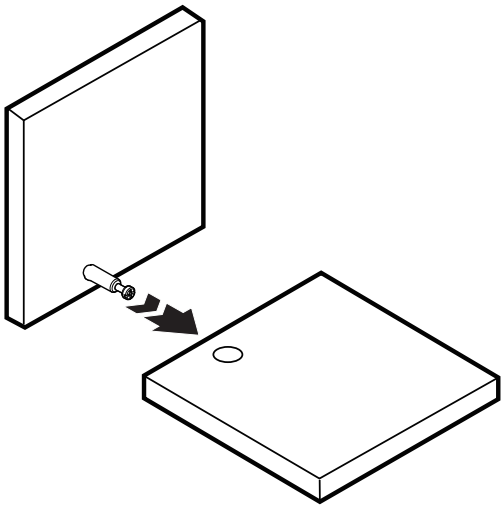

3

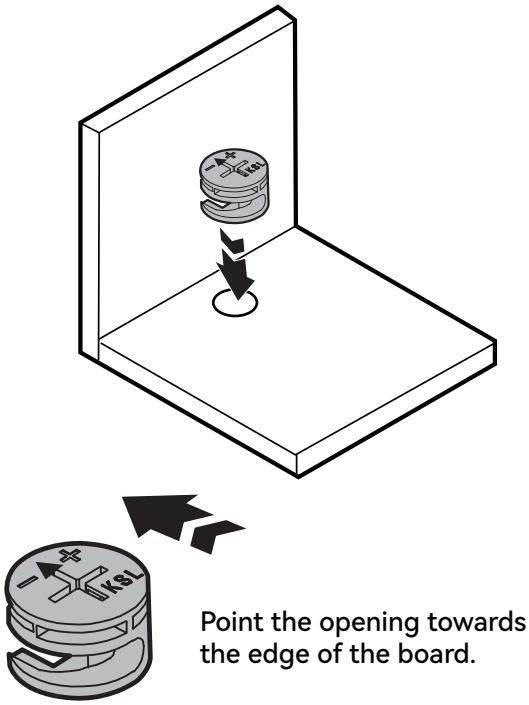




4

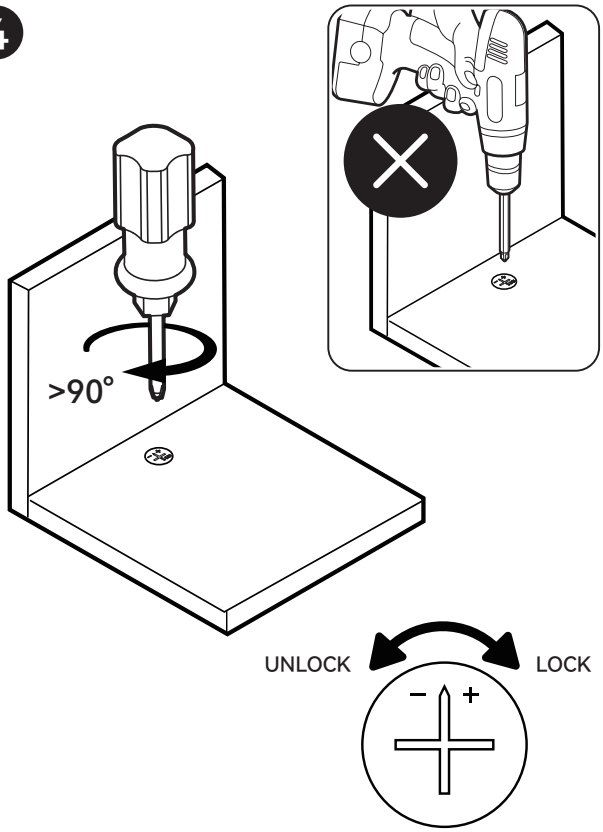


# ASSEMBLY


1

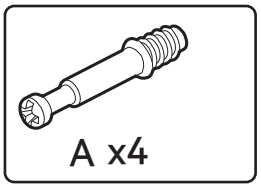

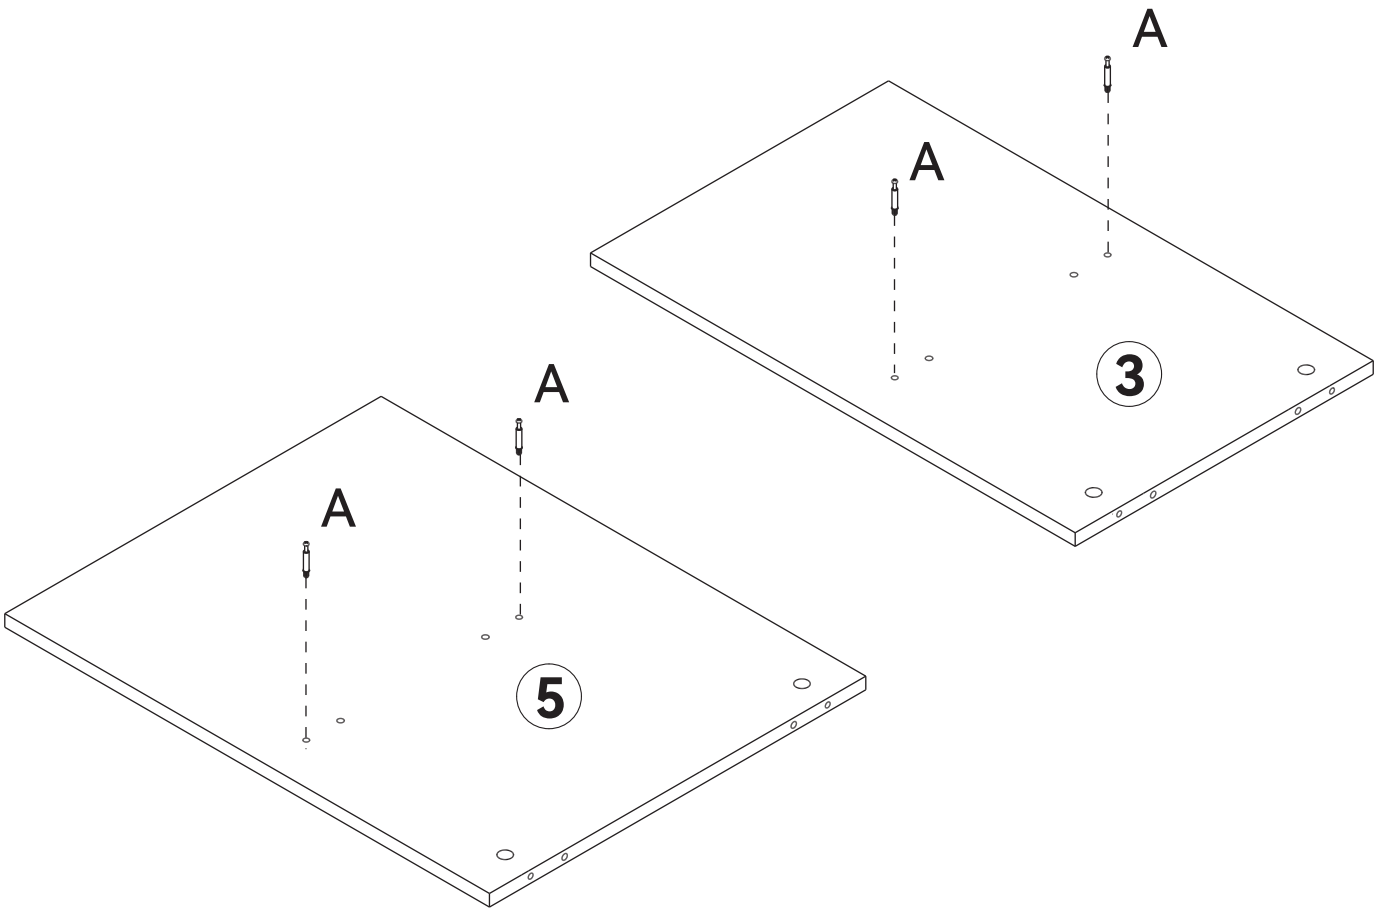


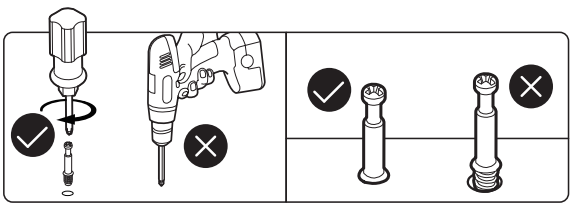
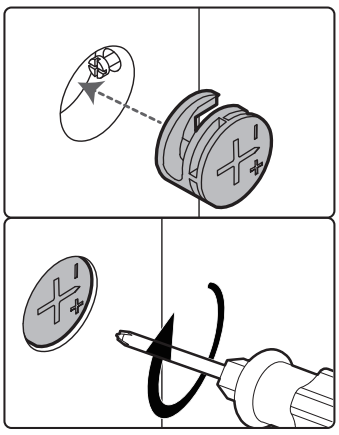



# 2

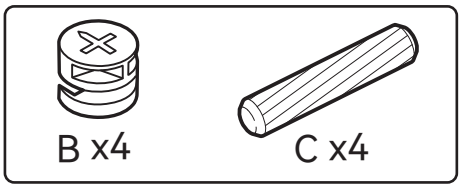




Attention:The side with the edge banding facing upwards.

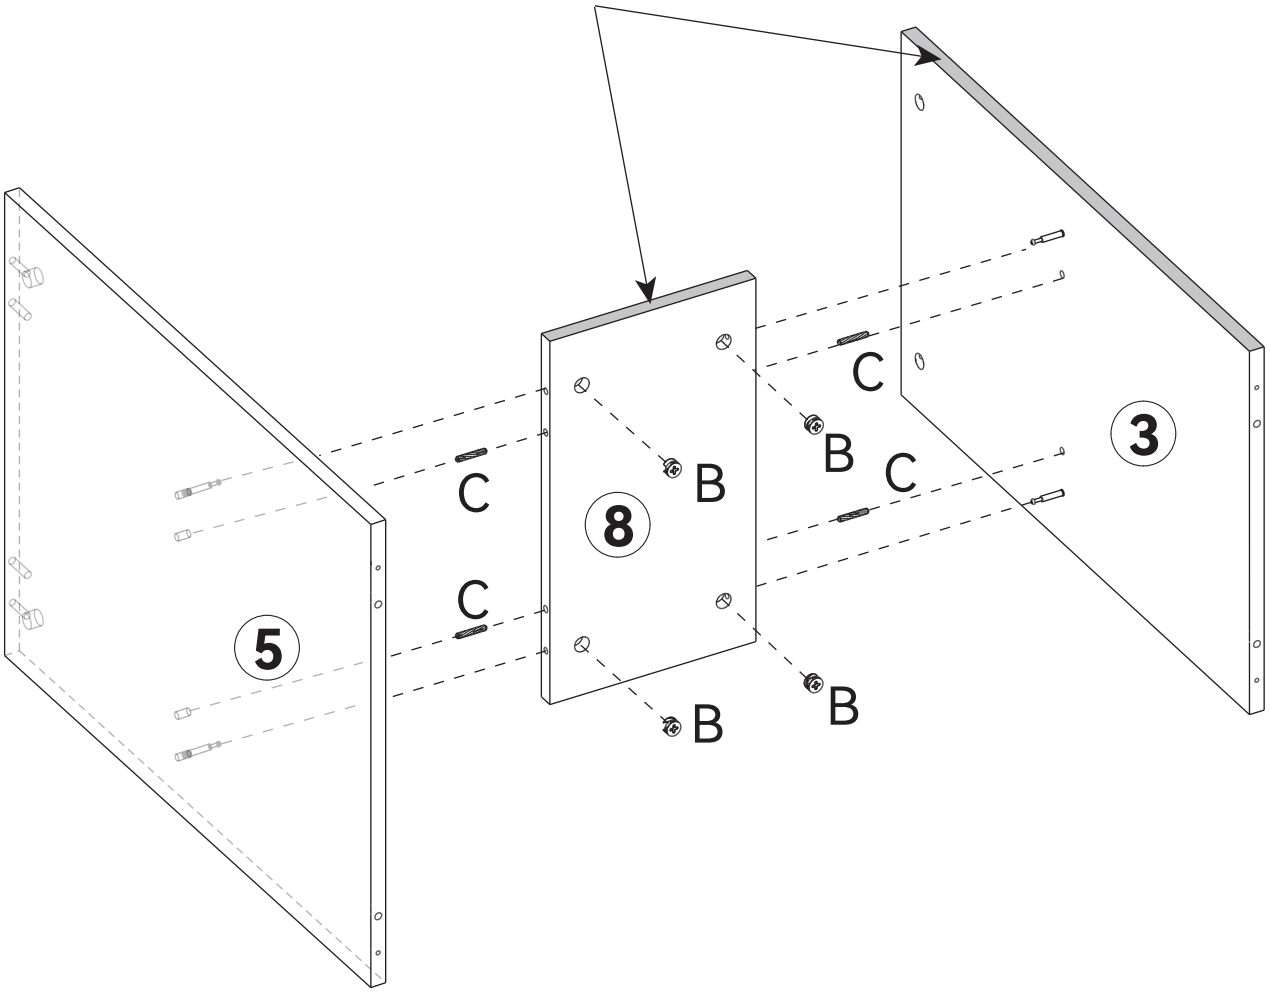



# 3




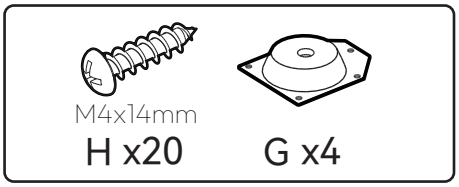


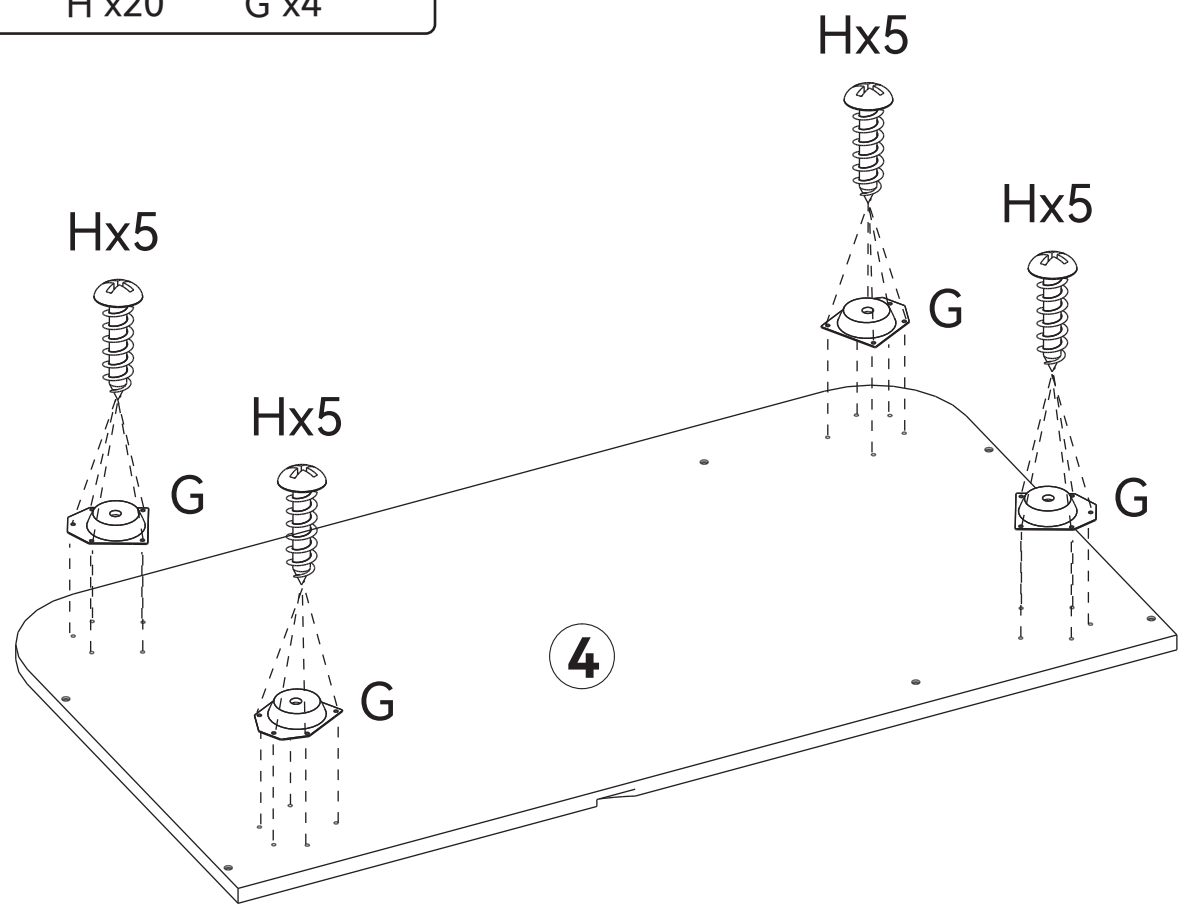
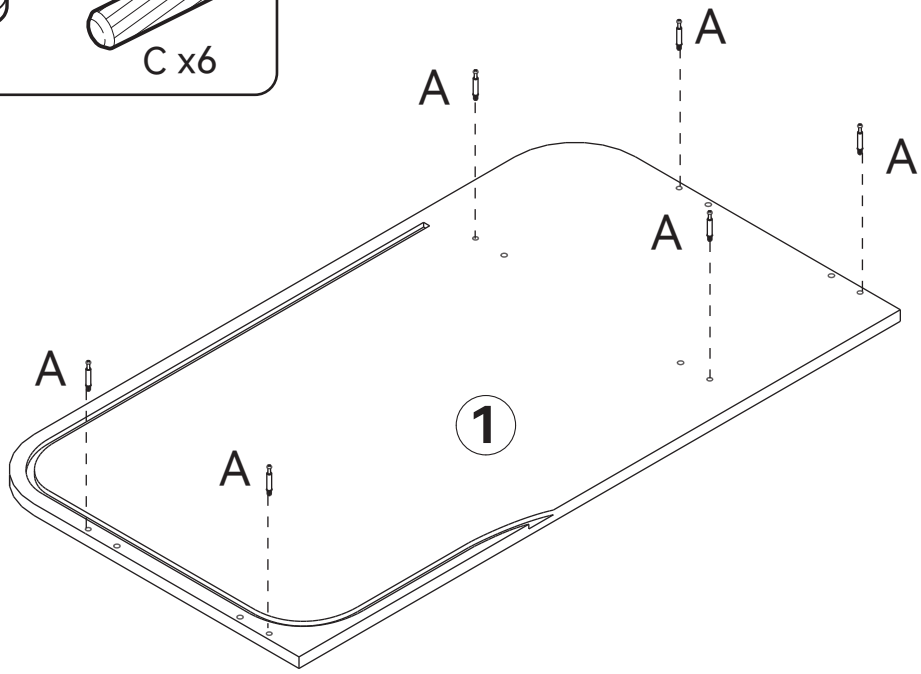
# 4

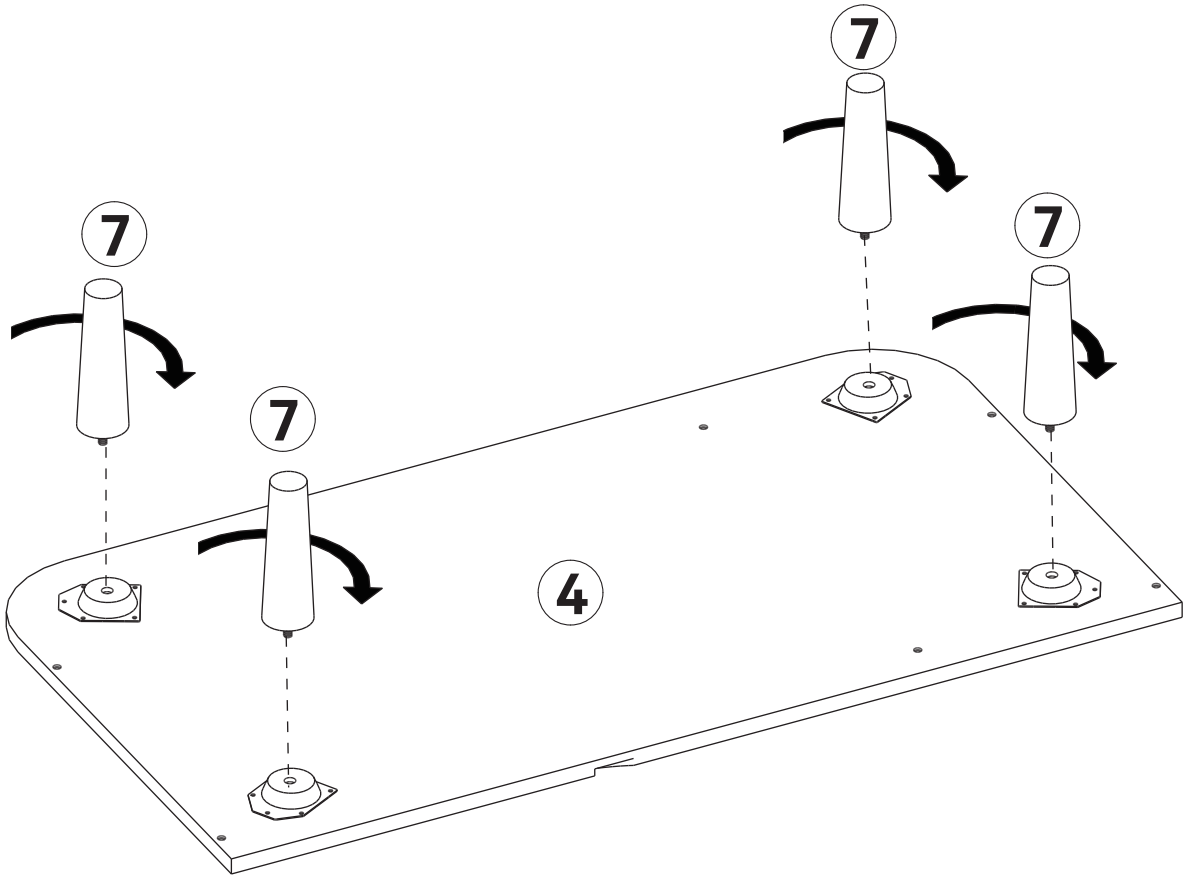


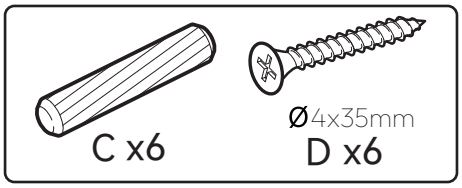


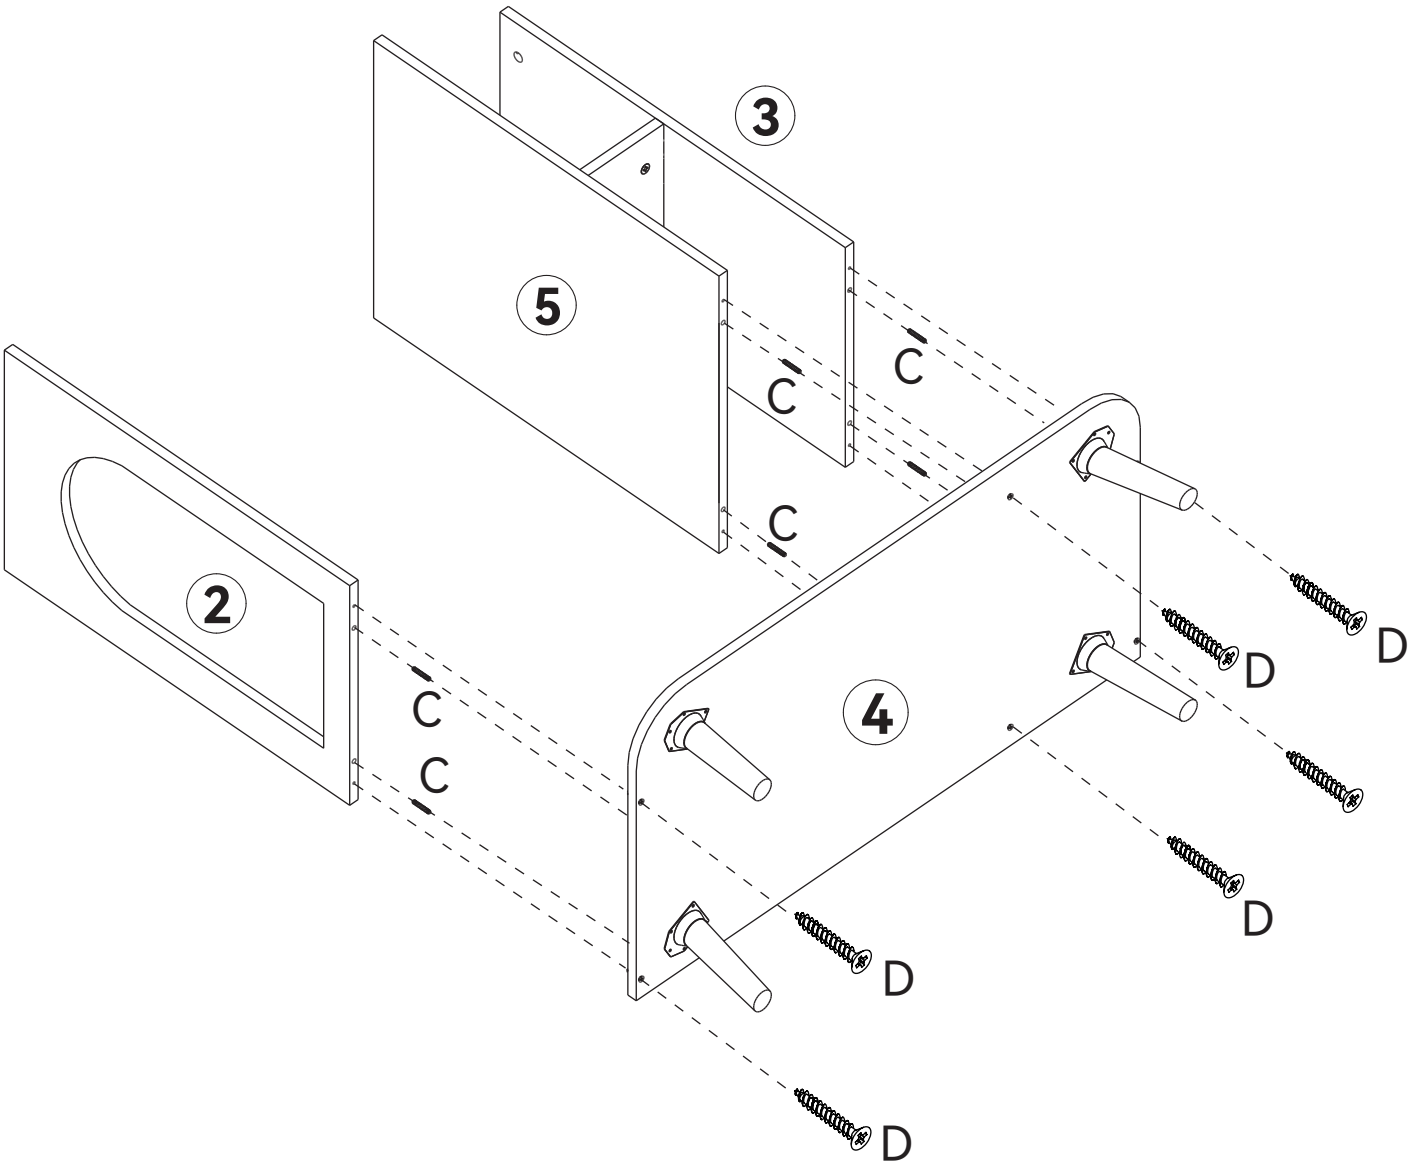
# 5

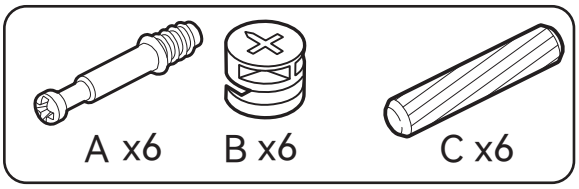


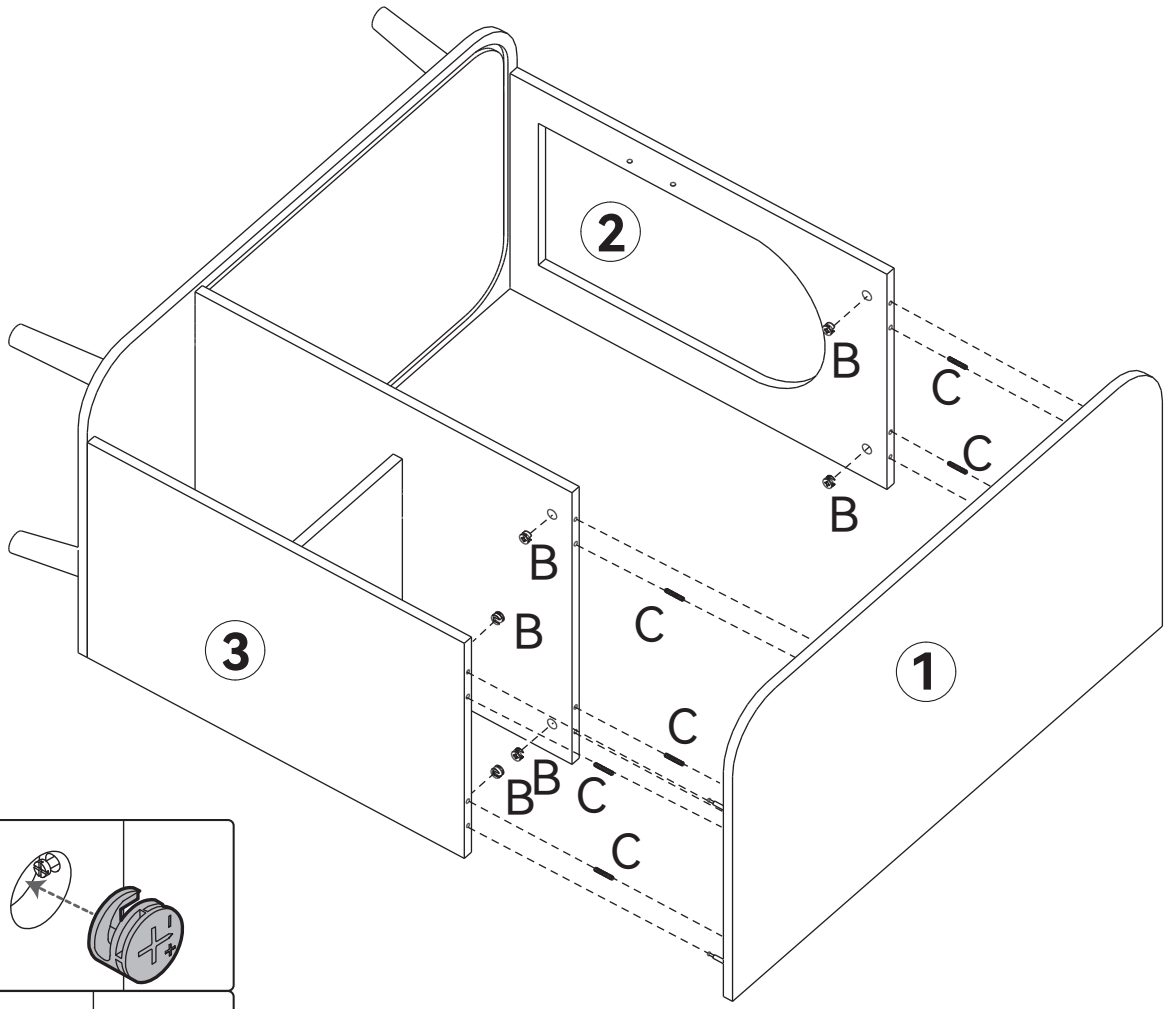



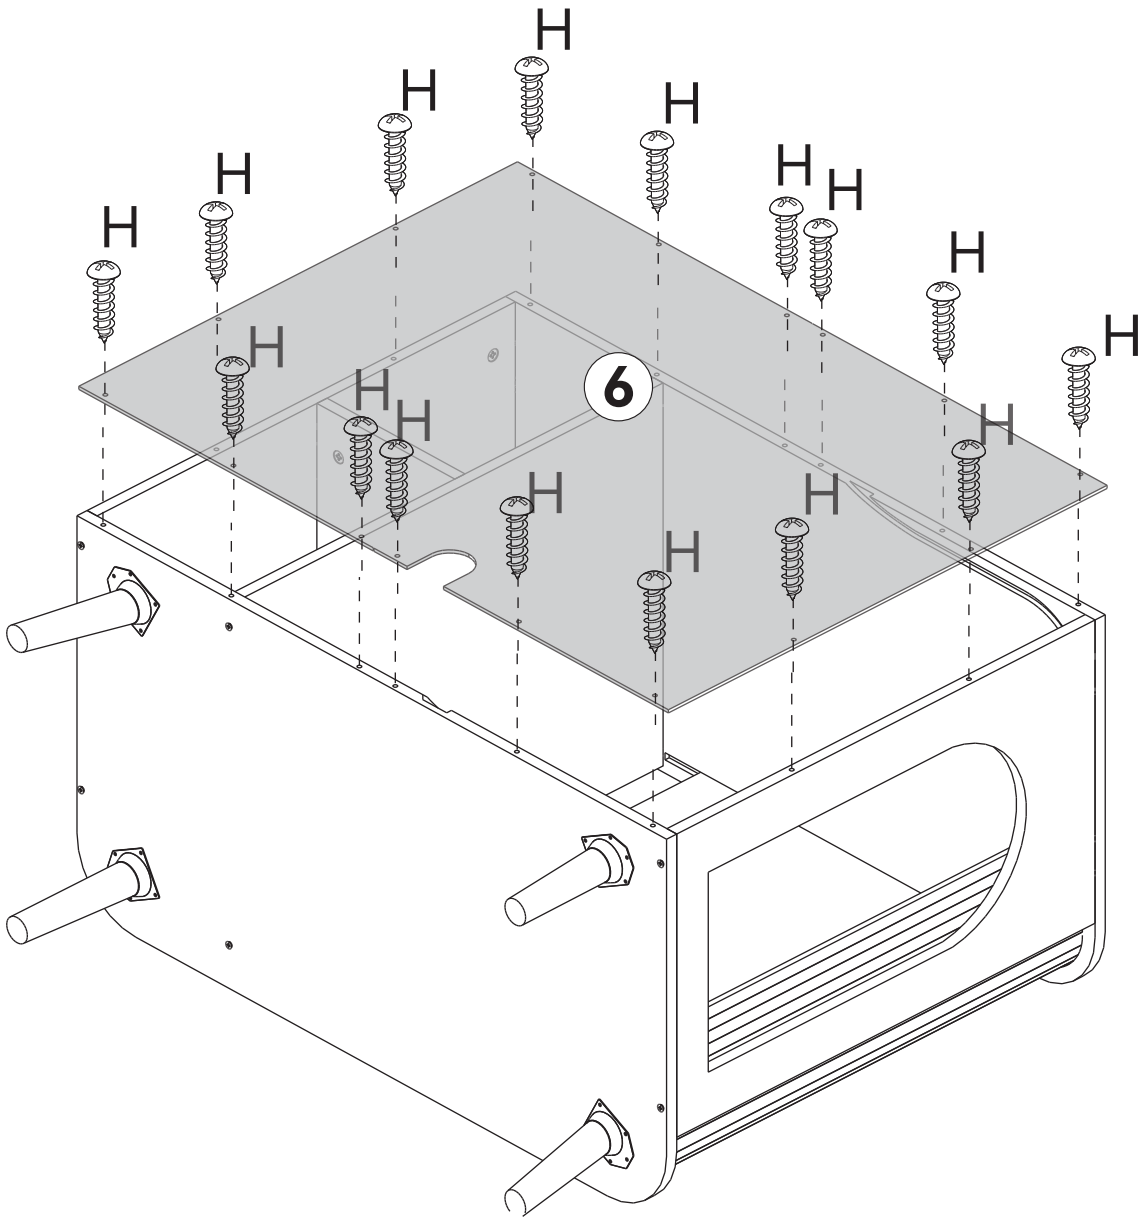


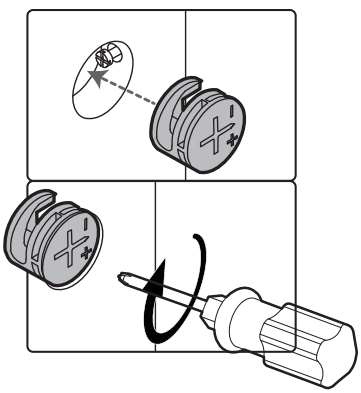
# 6

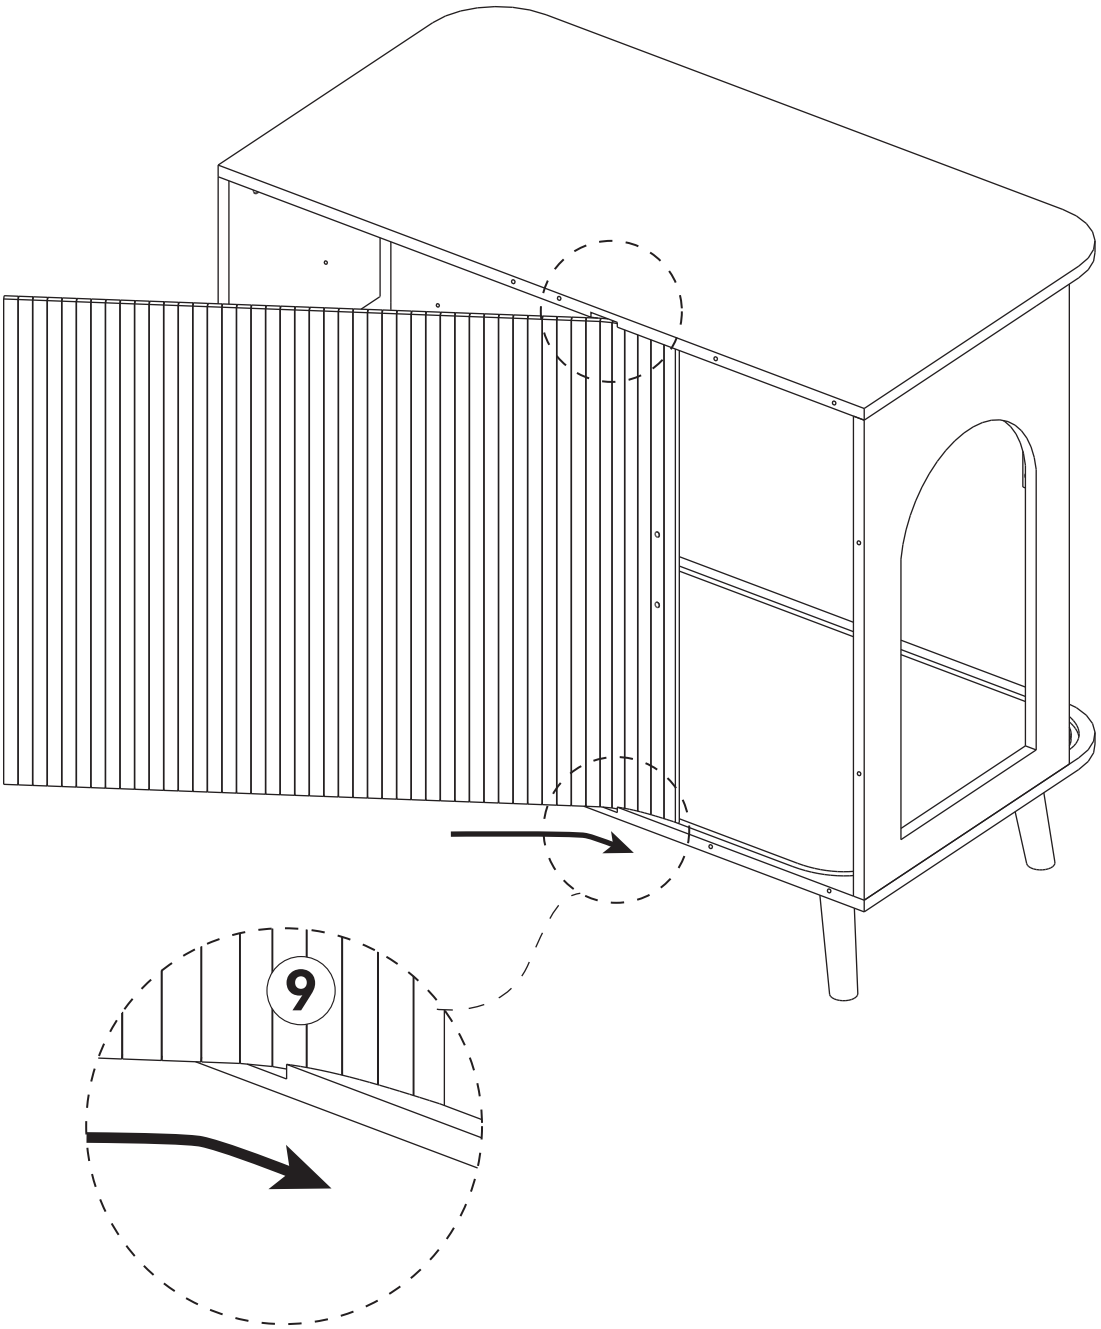

# 7

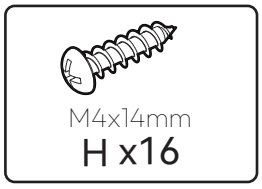

# 8

