
































ASSEMBLY INSTRUCTION
This installation manual is the correct version


Note: Distinguishing between the numbers 6 and 9 is different, with the number 9 underlined; Please tighten all screws by 60% first, and then tighten them by 100% after installation is complete.

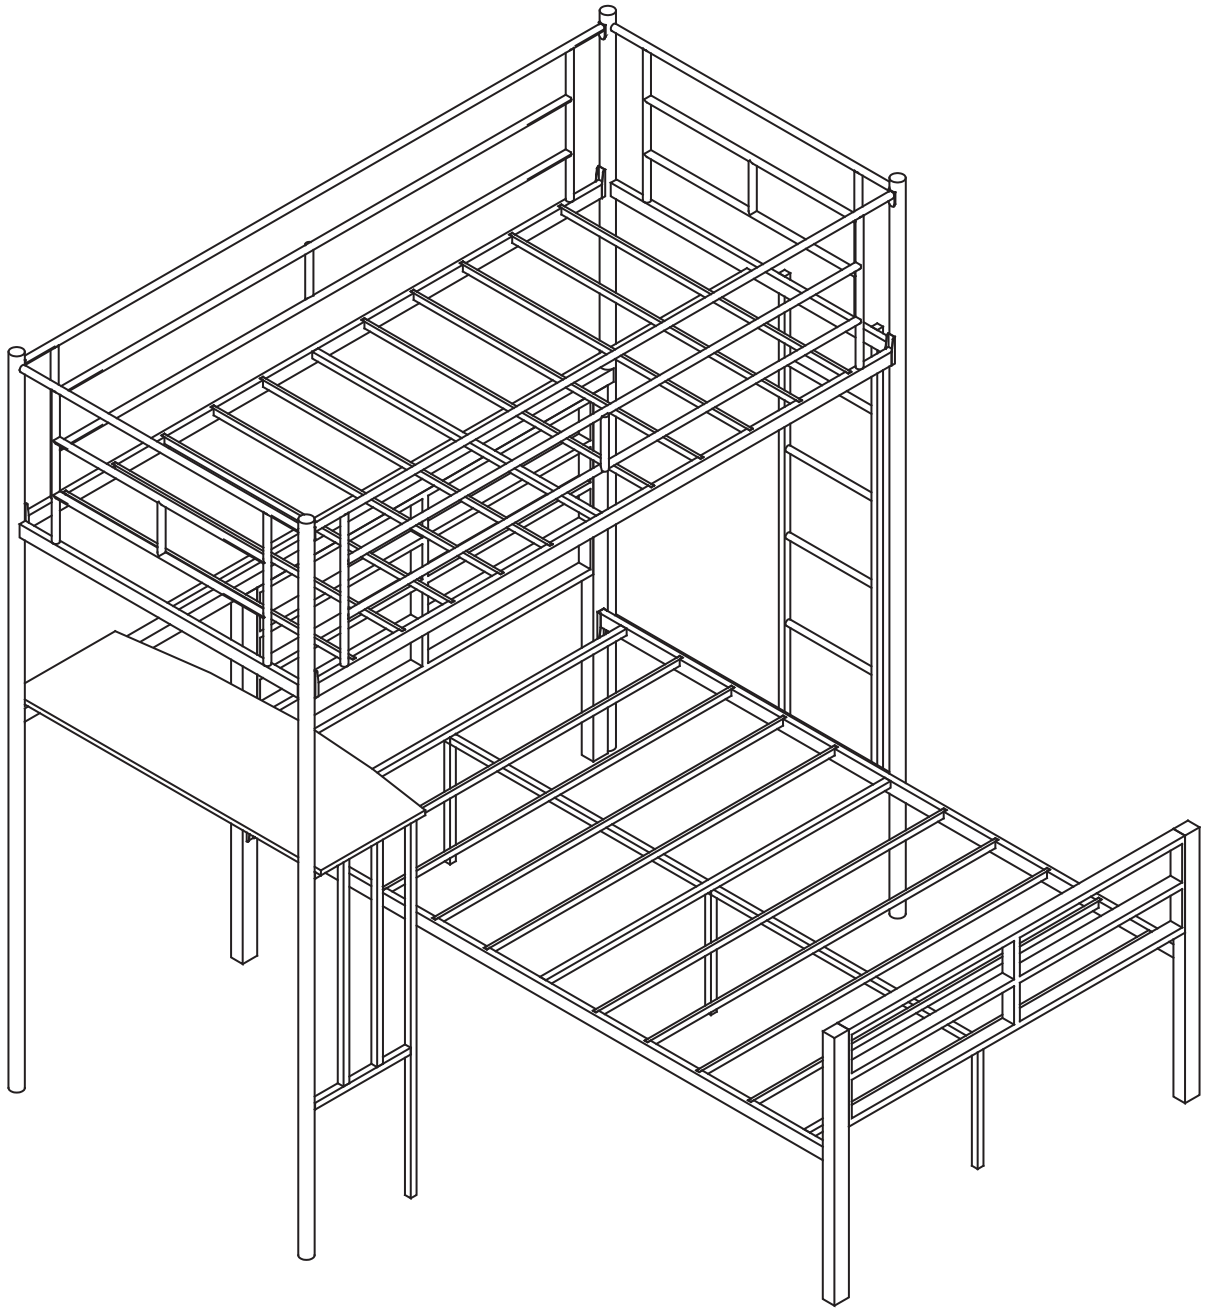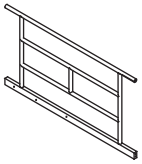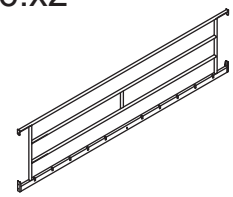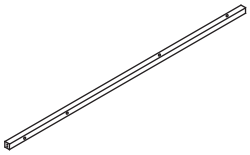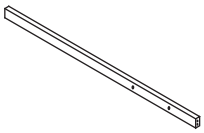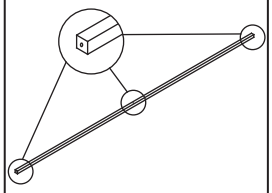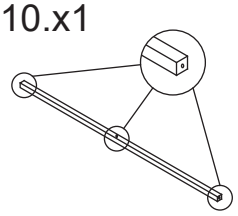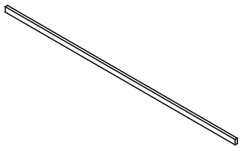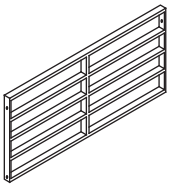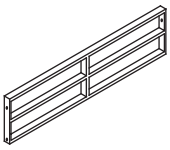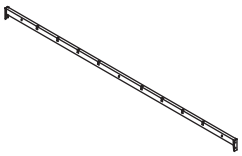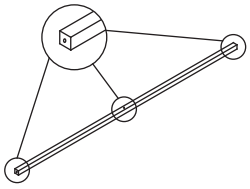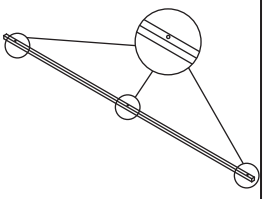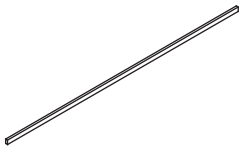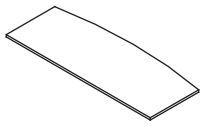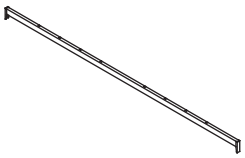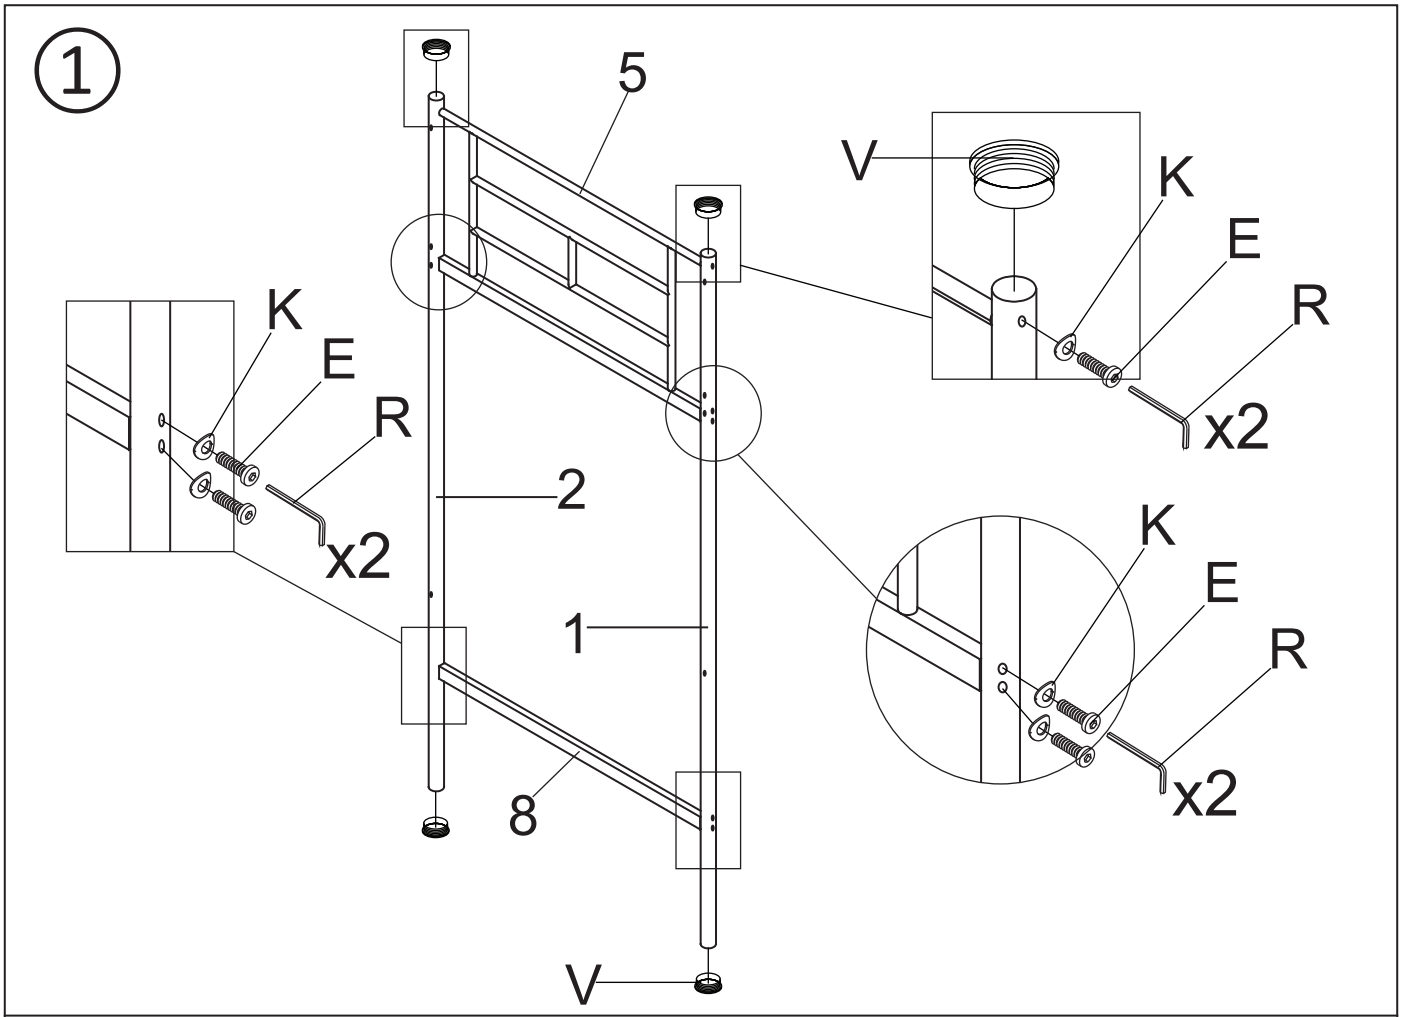



1.x1 	2.x1 	3.x1 	4.x1 	5.x2 
6.x2 	7.x1 	8.x1 	9.x1 	10.x1 
11.x10 	12.x2 	13.x4 	14.x1 	15.x1 
16.x2 	17.x2 	18.x1 	19.x3 	20.x1 
21.x8 	22.x3 	23.x1 	24.x2 	25.x1 
26.x1 				

A.x8pcs  M8x50mm	B.x8pcs  M8x35mm	C.x1pcs  M6x70mm	D.x4pcs  M6x60mm	E.x42pcs  M6x55mm
F.x23pcs  M6x35mm	G.x6pcs  M6x30mm	Hx8pcs  M8	I.x14pcs  M6	J.x8pcs  M8x22mm
K.x28pcs  M6x16mm	L.x8pcs  M8x18mm	M.x52pcs  M6x16mm	N.x1pcs  M6	O.x36pcs 
P.x4pcs 	Q.x1pcs  M8	R.x1pcs  5#	S.x1pcs  4#	T.x6pcs  20x40mm
U.x3pcs  20x20mm	V.x8pcs  Ø38	W.x1pcs 	X.x1pcs 	Y.x5pcs  20x20mm



1
5
V
K
E
R
x2
K
E
R
x2
2
1
8
K
E
R
x2
V

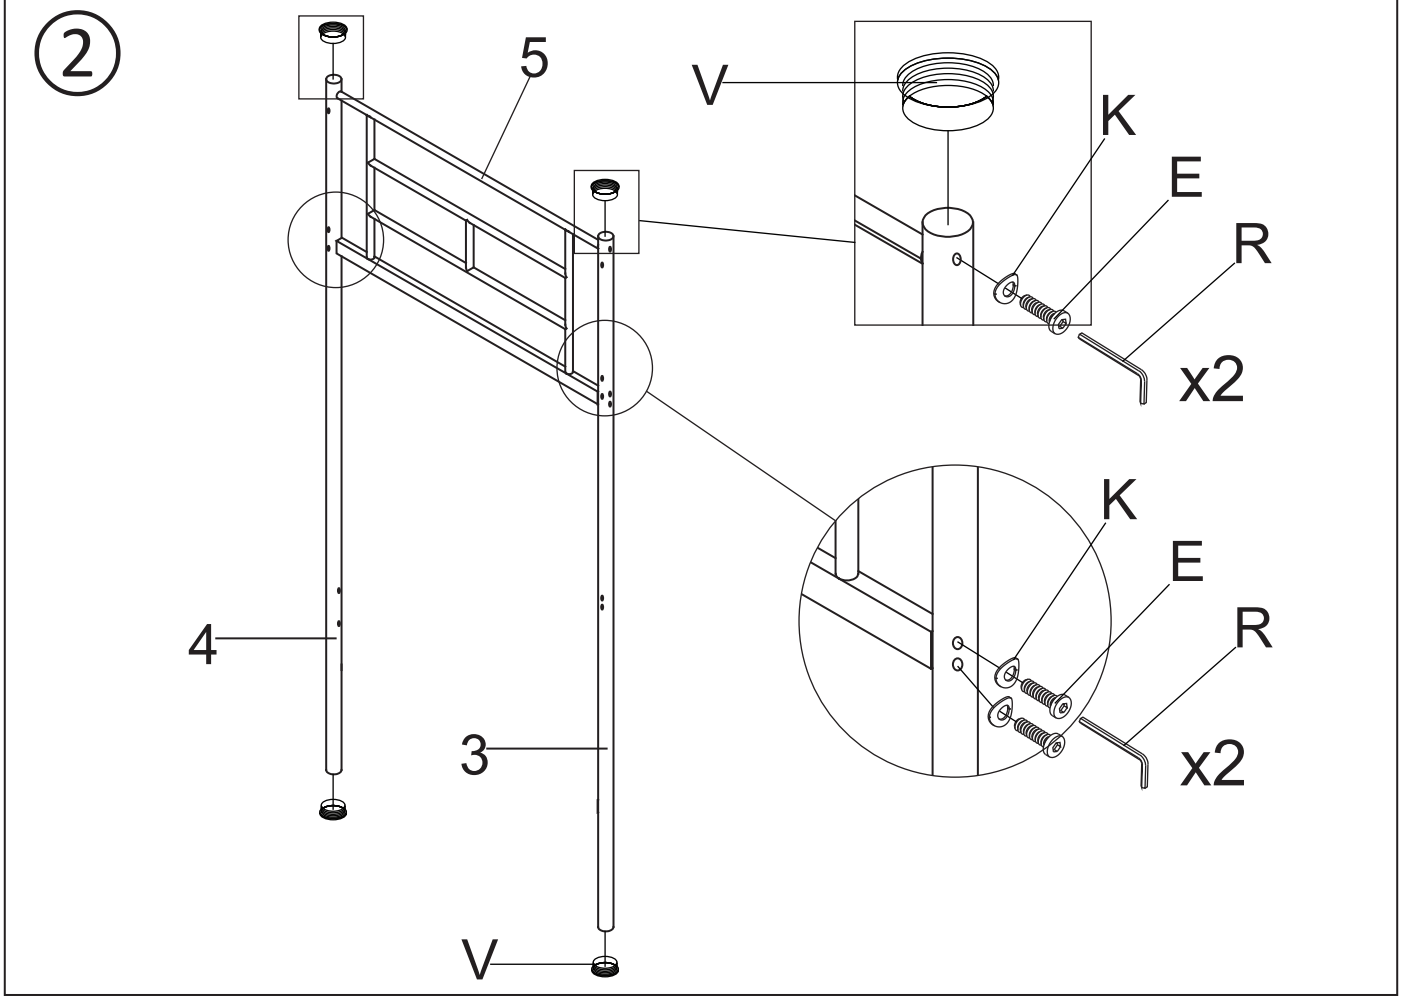
2
5
V
K
E
R
x2
4
3
K
E
R
x2
V

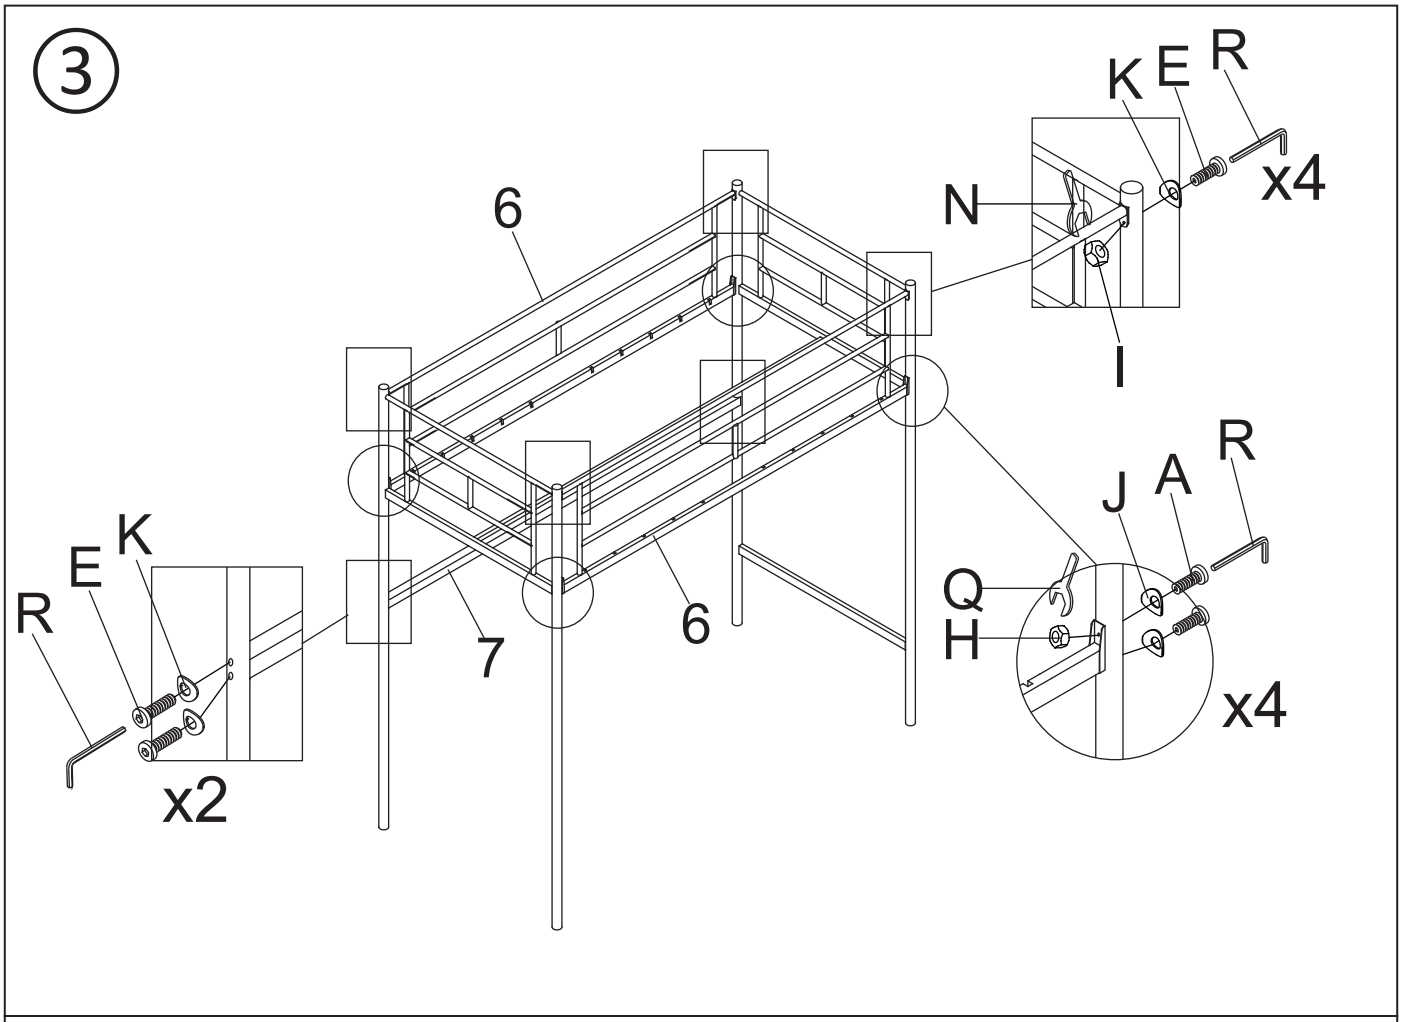

3
K
E
R
x4
N
6
I
R
J
A
K
E
R
Q
H
6
7
x4
x2

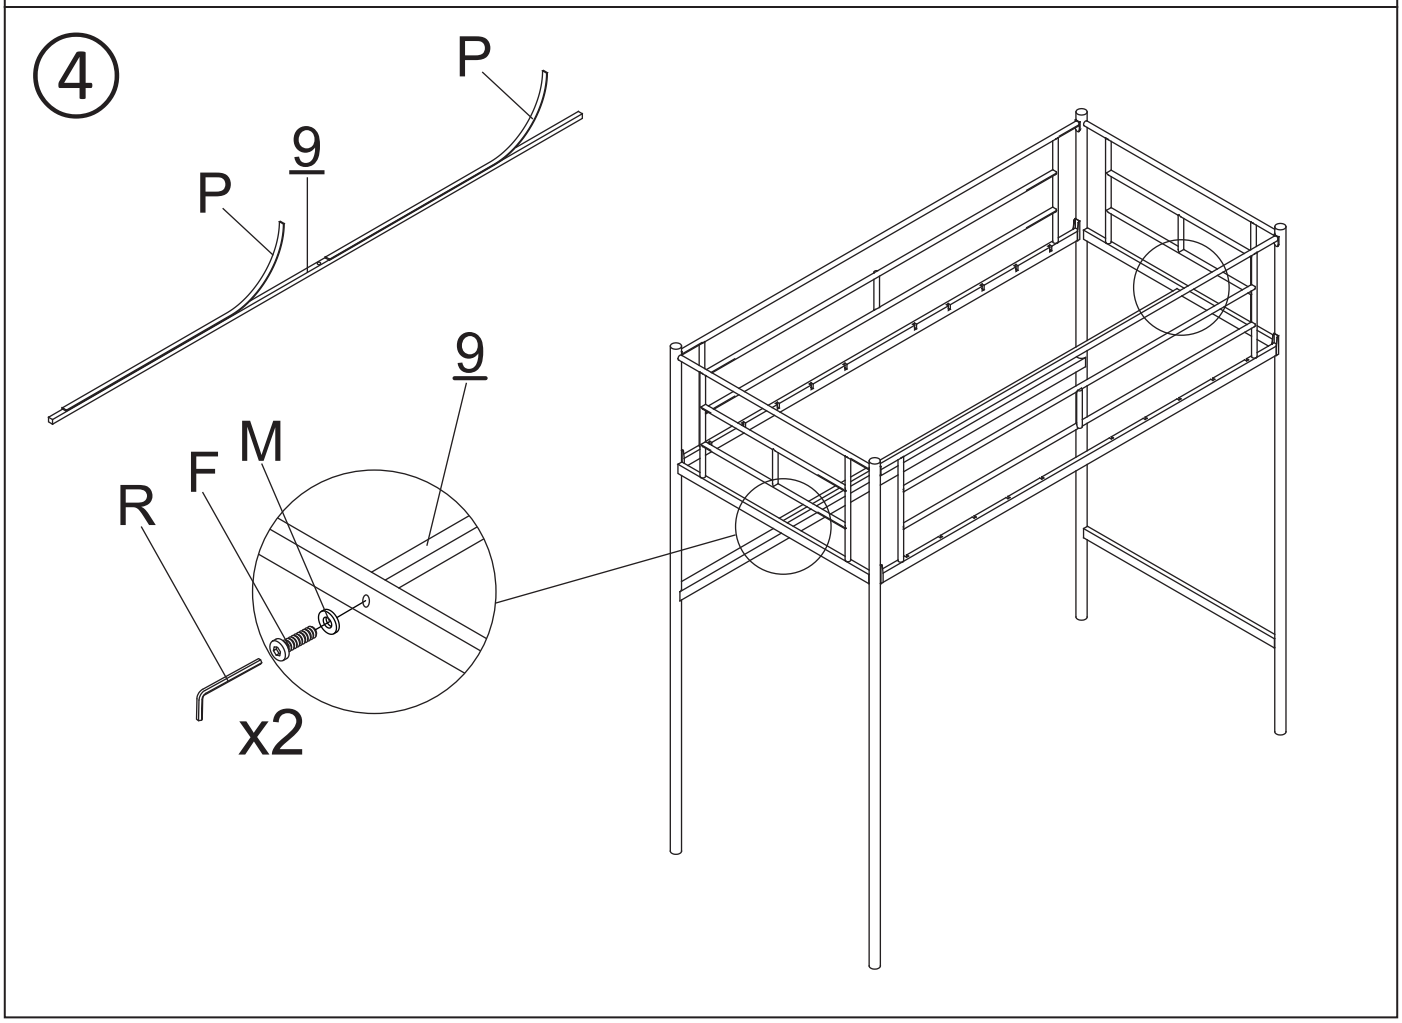

4
P
9
P
9
M
F
R
x2

5

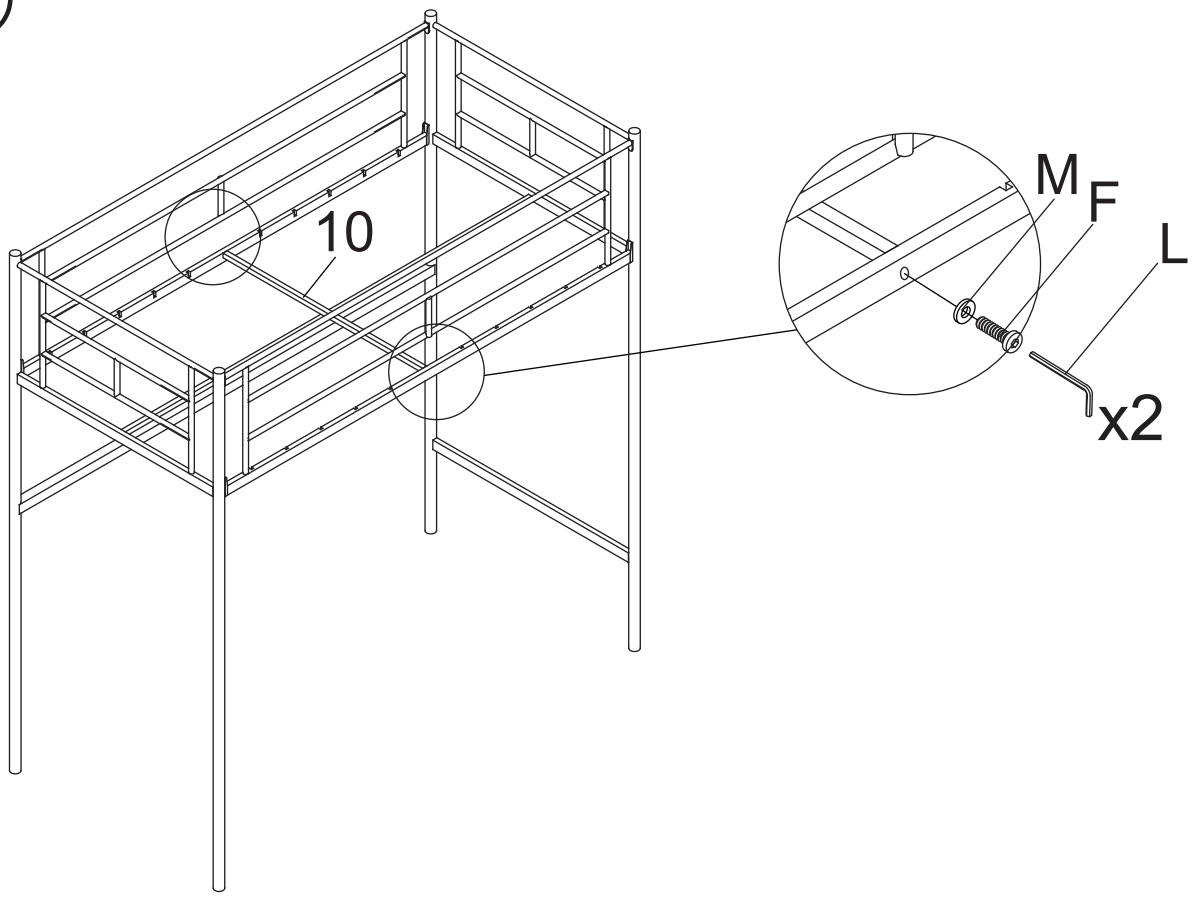


6

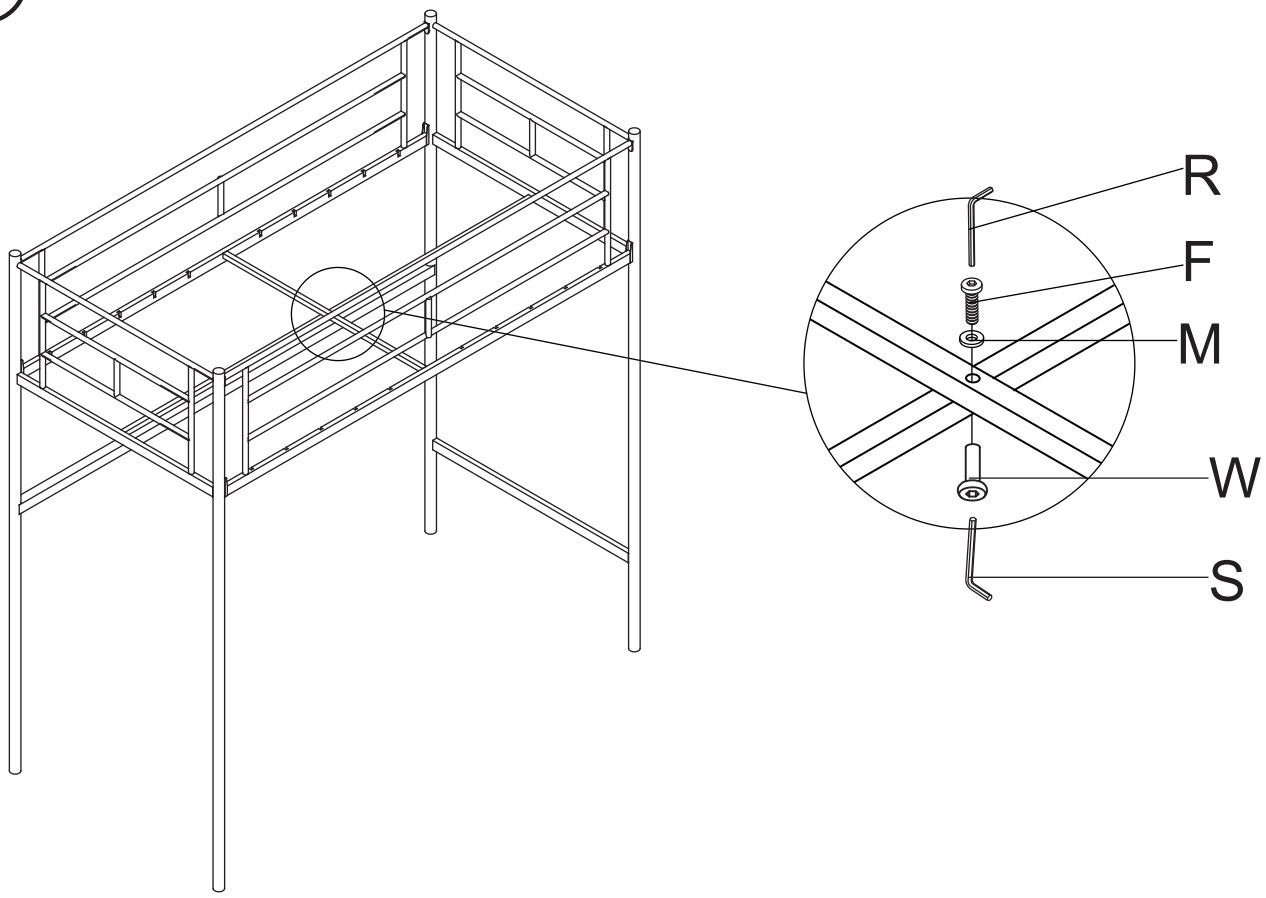


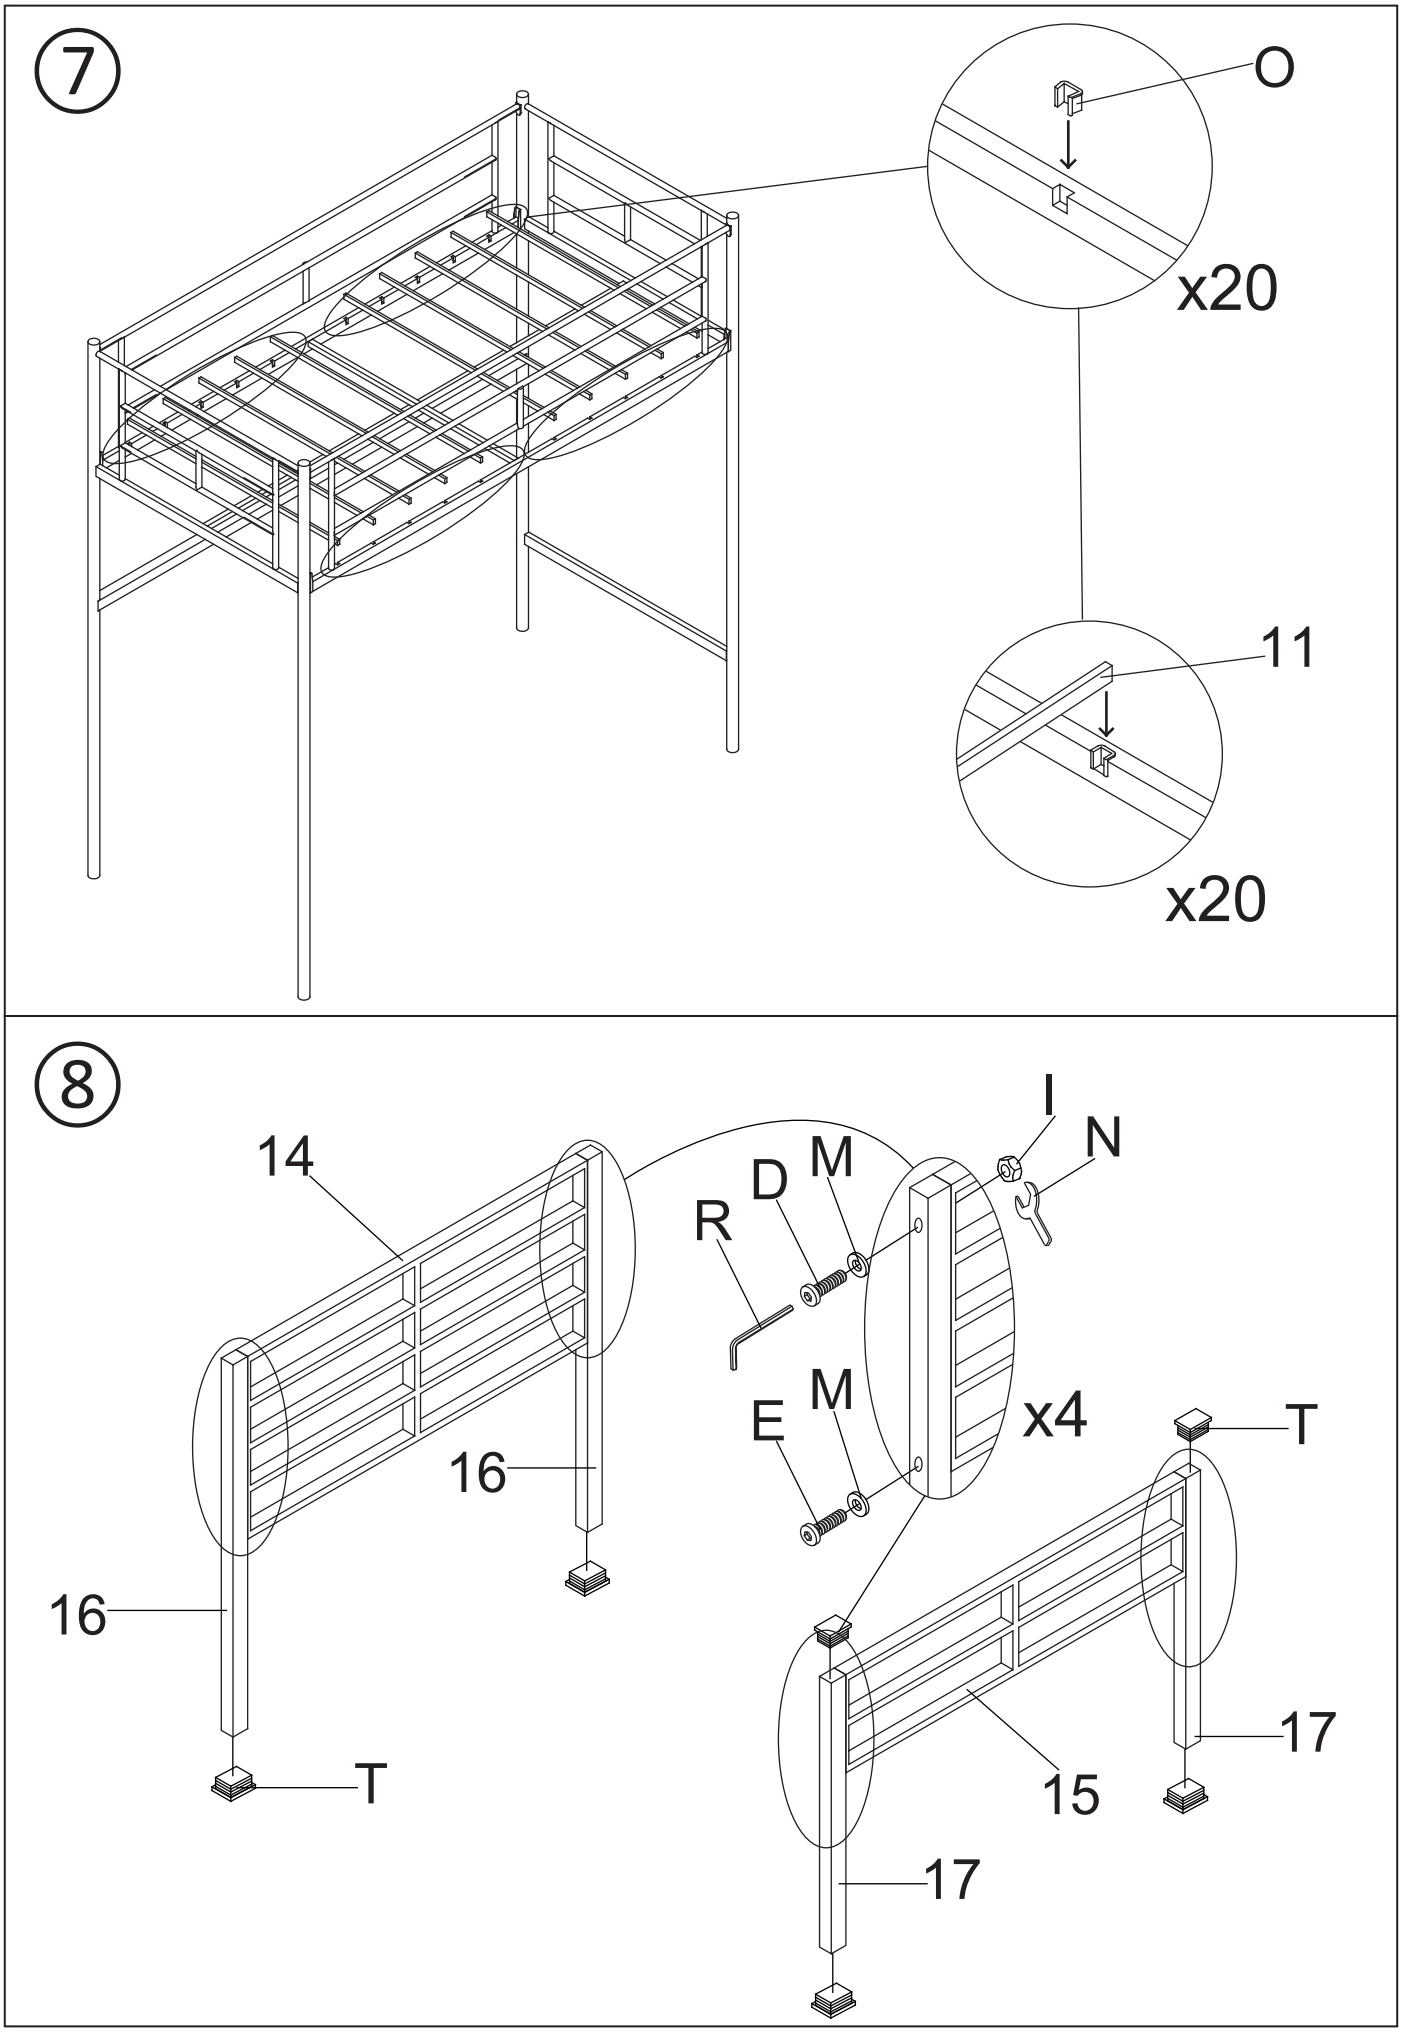

7
O
x20
11
x20
8
14
16
16
T
I
N
M
D
R
M
E
x4
T
17
15
17

⑨

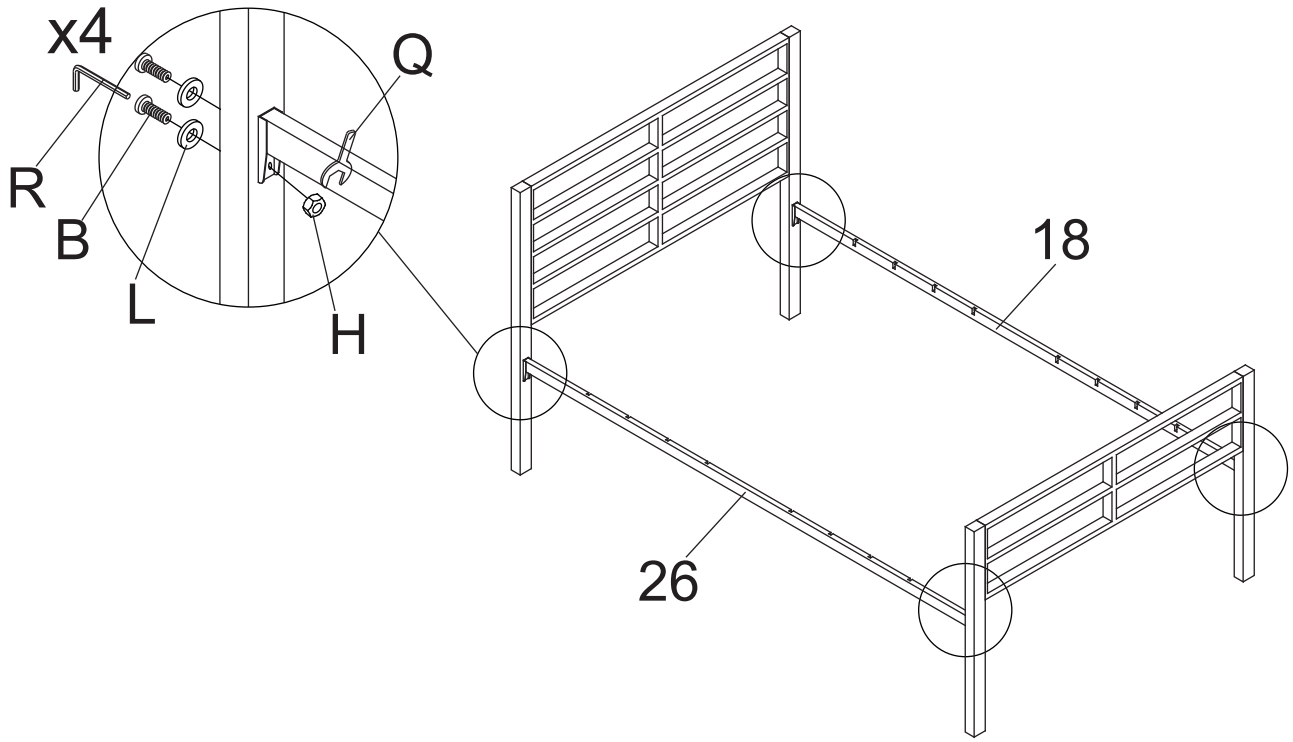


⑩

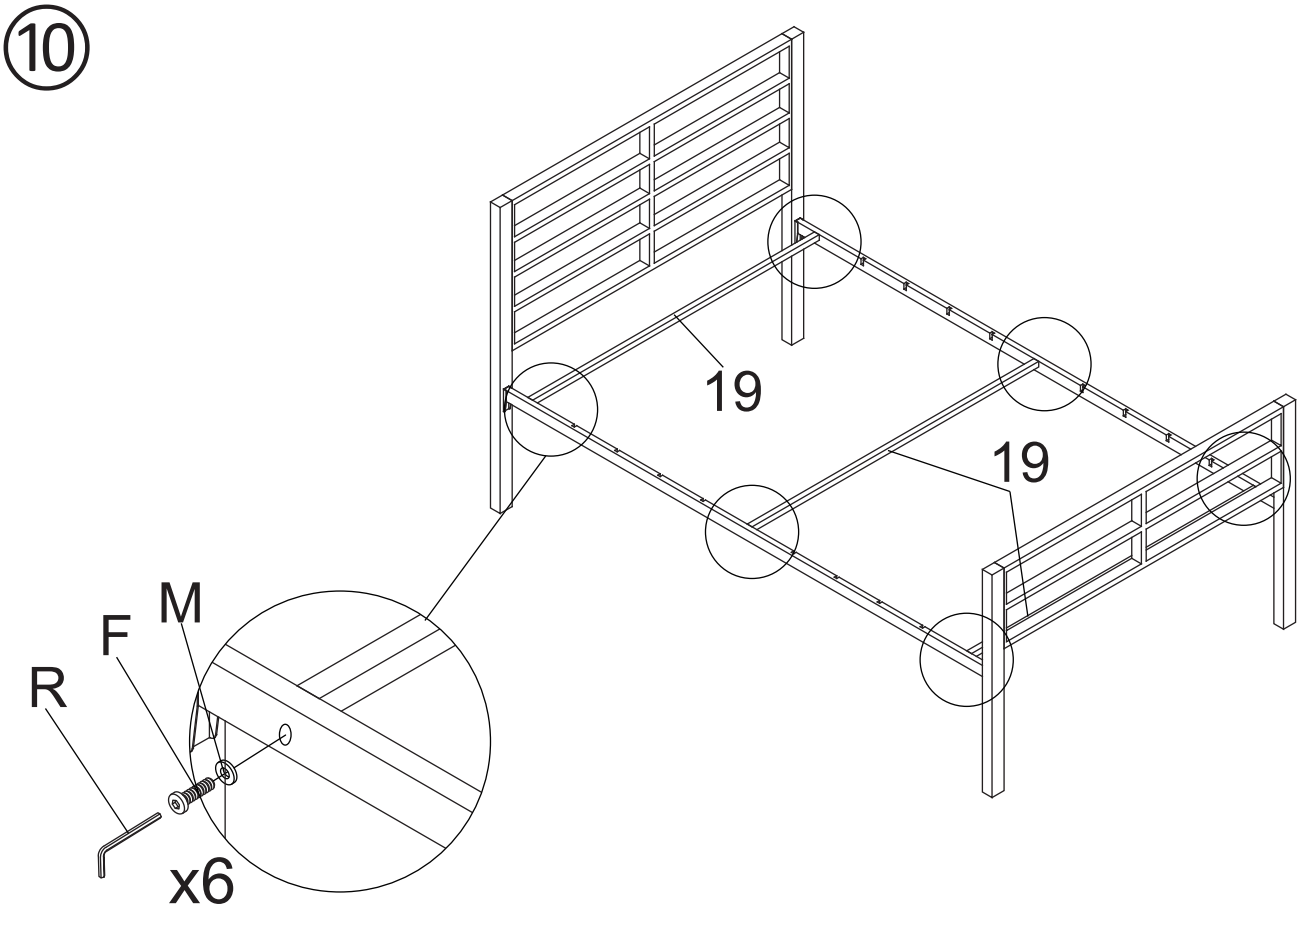


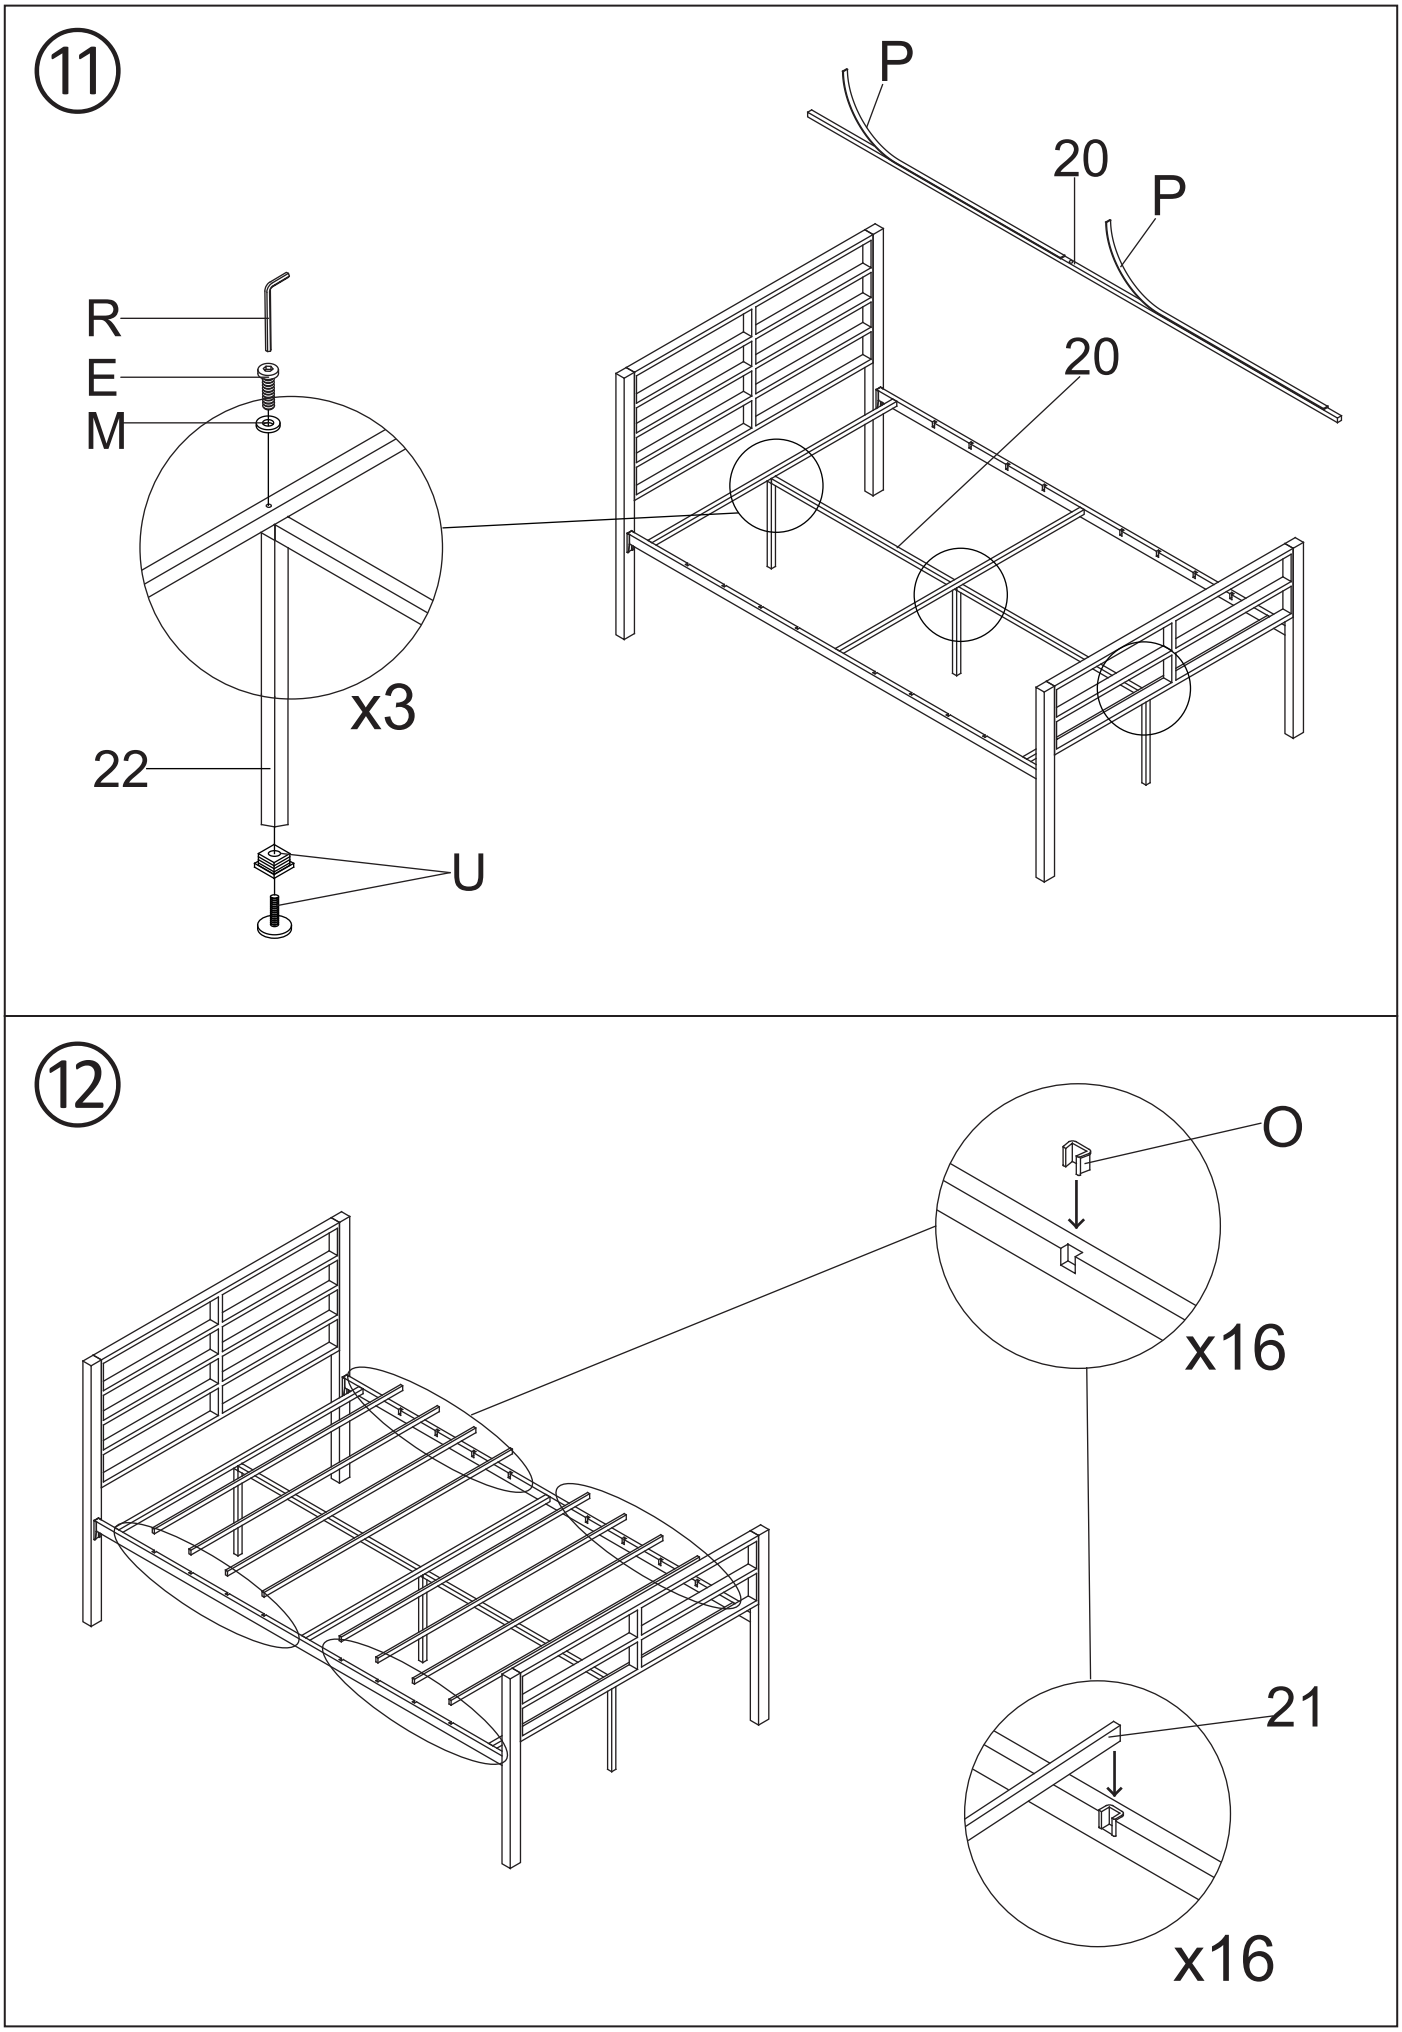
11
P
20
P
R
E
M
20
x3
22
U
12
O
x16
21
x16


13

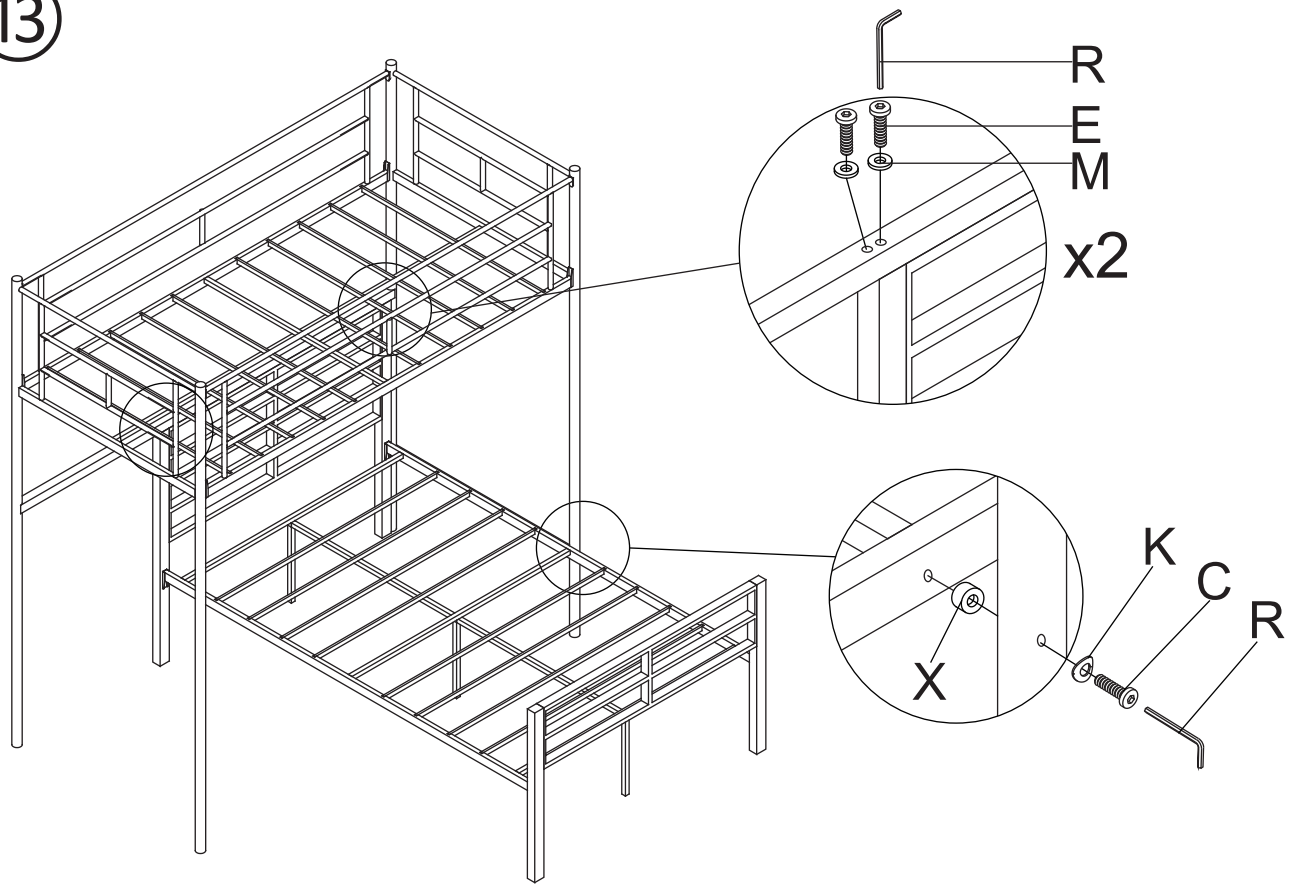


14

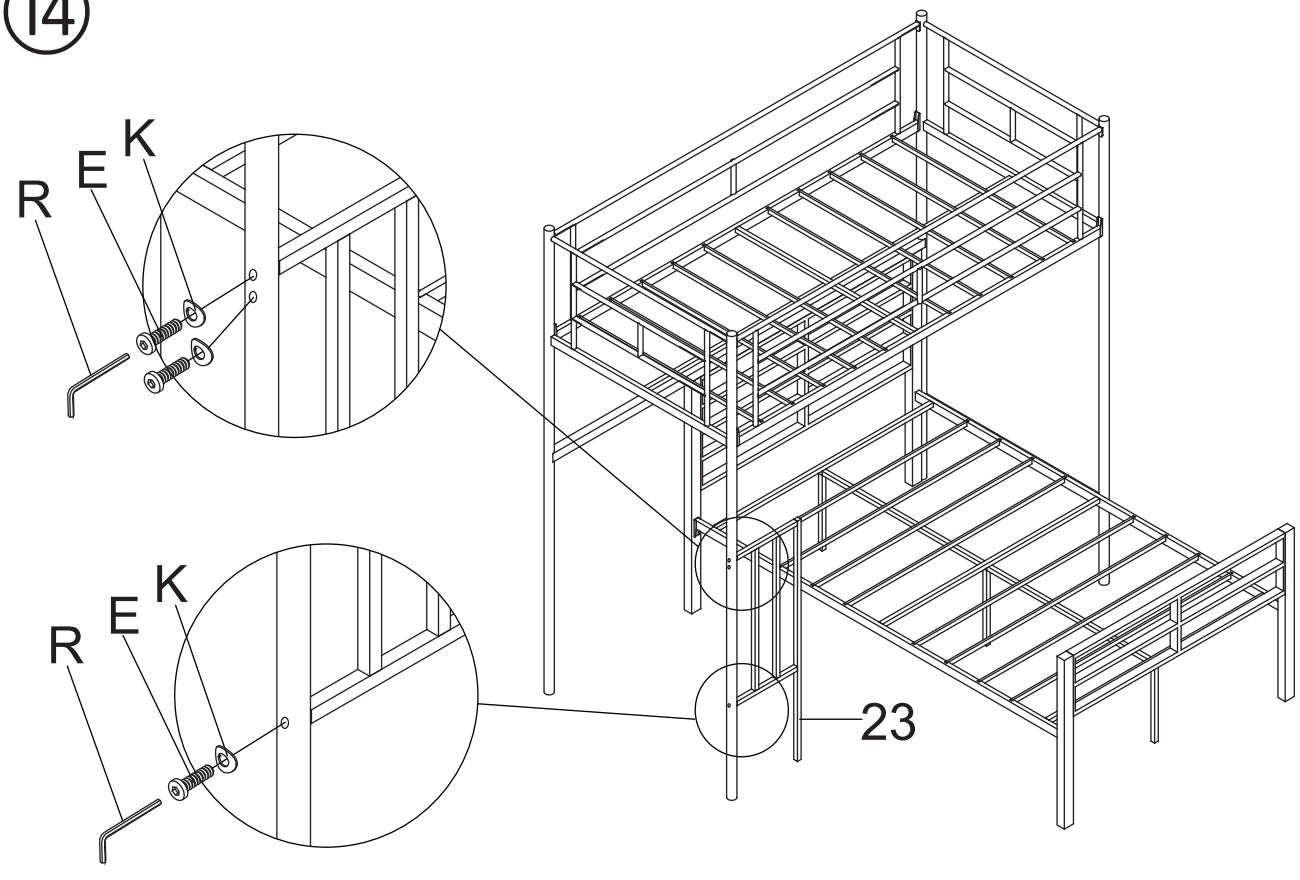


15

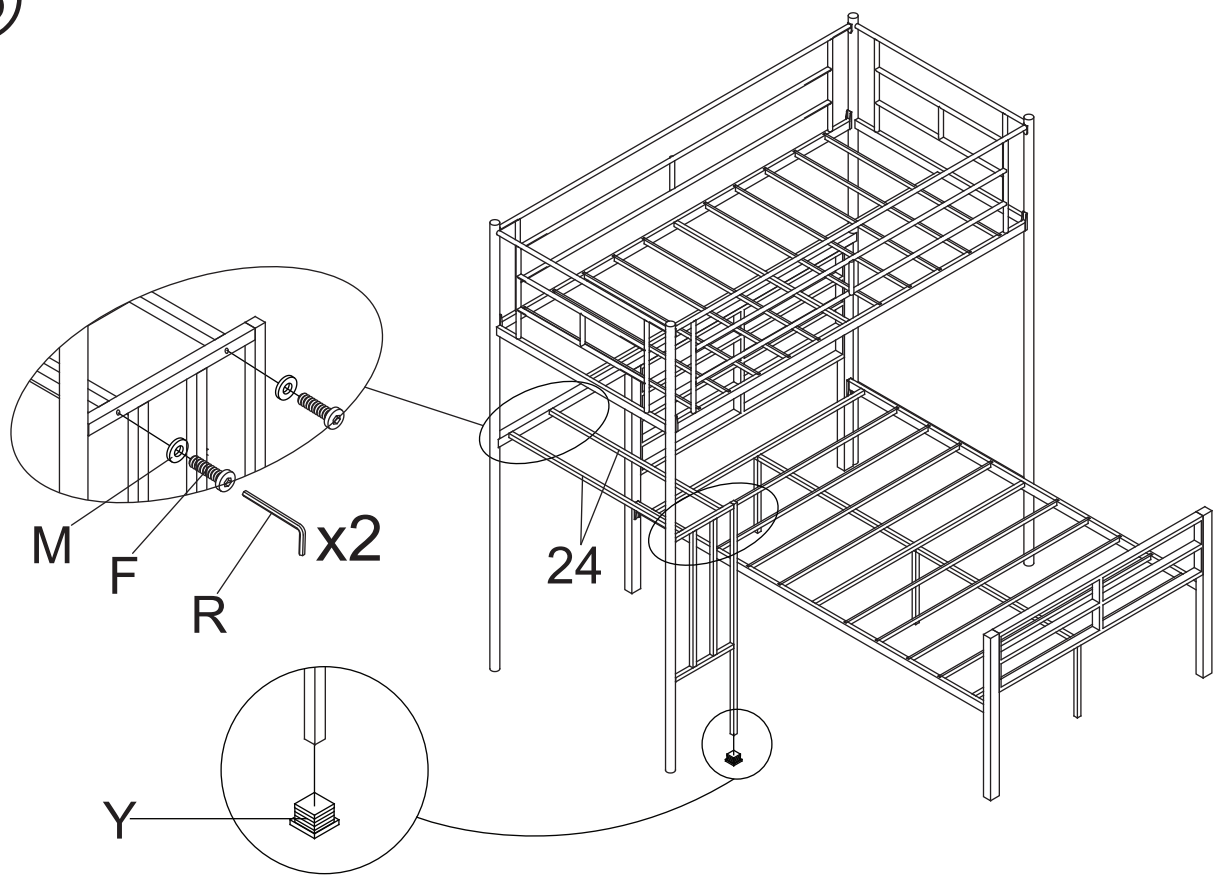

16

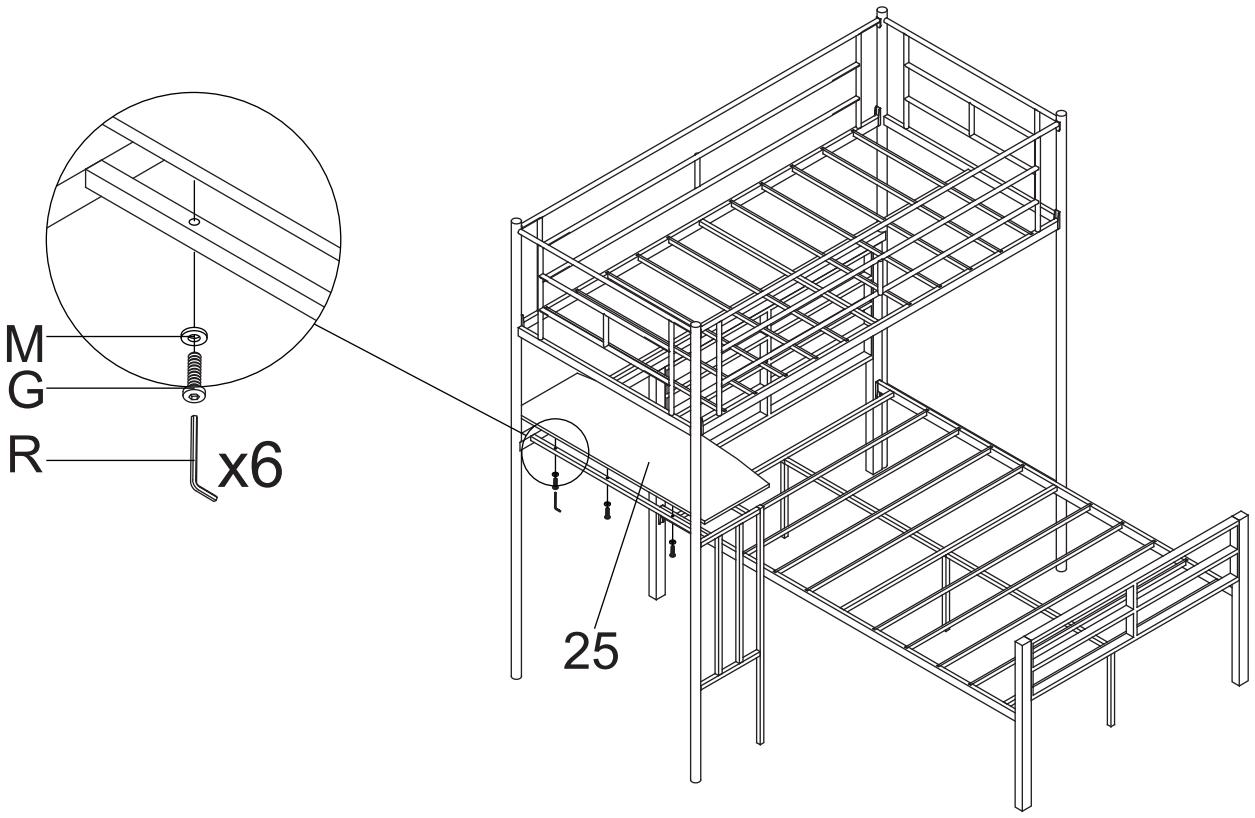

⑰

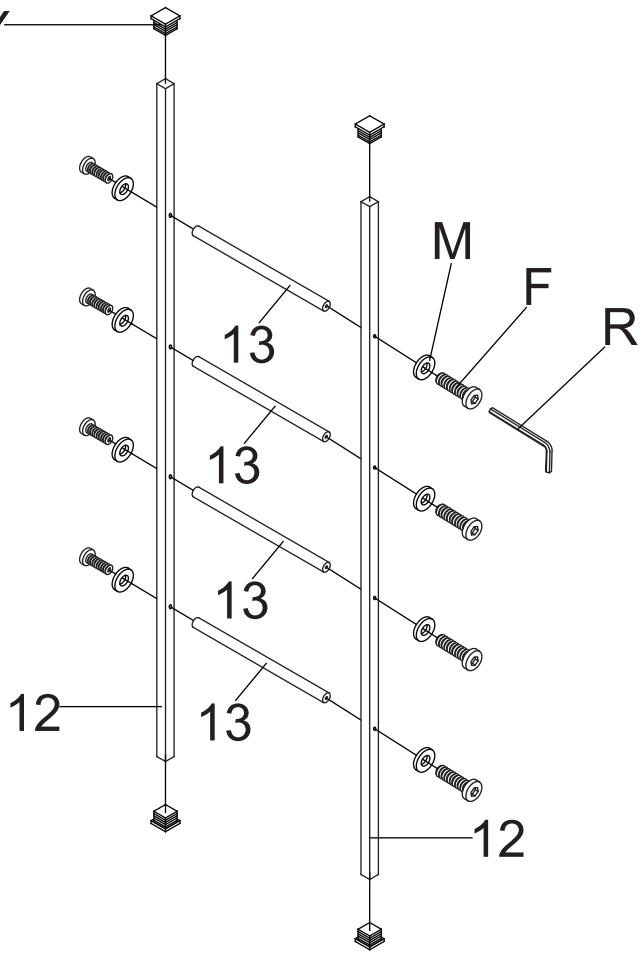

⑱

