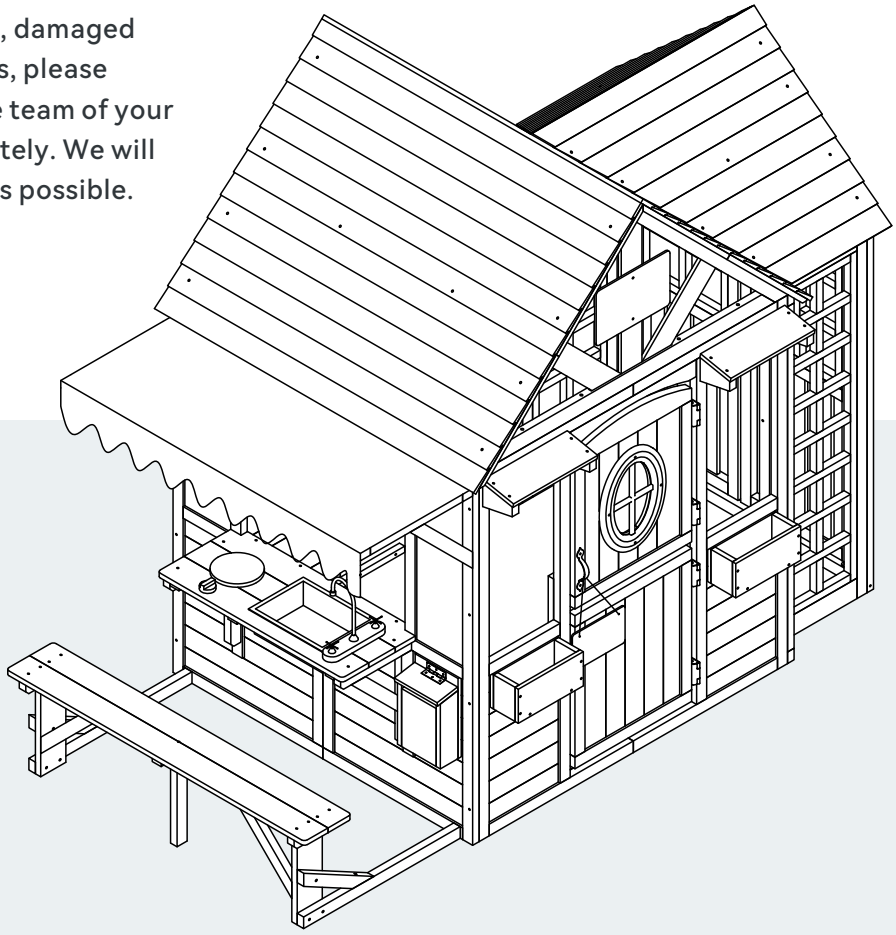
Children's Wooden Playhouse

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.



Arrive in 2 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

CONTACT US

3.7X6.8 FT

- **Email: service@grandtunnel.com**
  In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the **"Parts List"** in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., "Missing 5 pieces of M6X30mm screws."

Contact Us:

· **By Email:**

Send an email to **service@grandtunnel.com**, with the subject line "Missing Parts Issue." Include the following in the email:

· A description of the missing parts and a photo of the parts list.
· Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line "Product Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

· Customer Service Email: **service@grandtunnel.com**

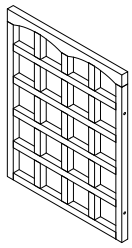
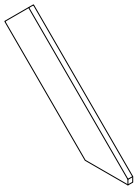
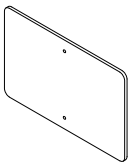
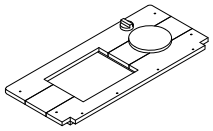
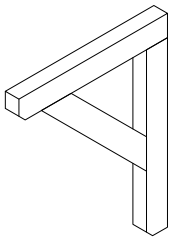
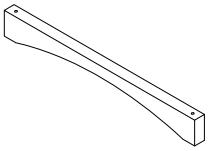
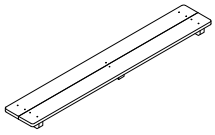
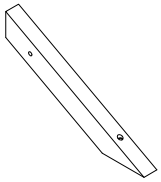

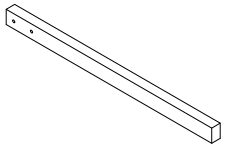

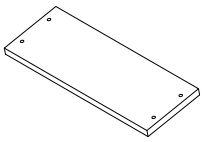
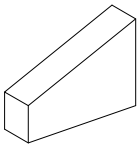
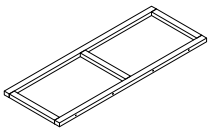

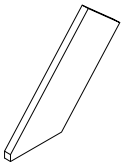
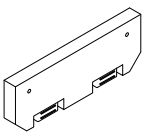
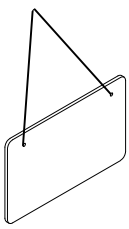
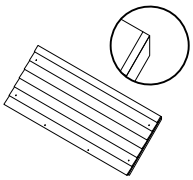
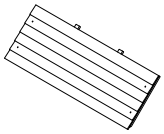
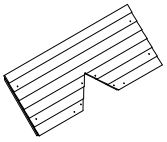

Helpful Tips


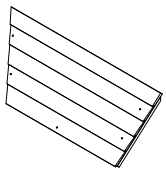
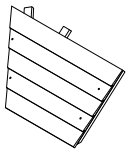
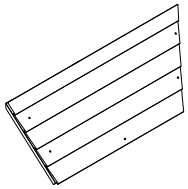
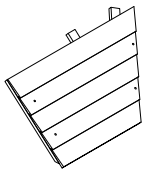



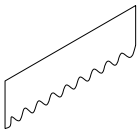

To process your issue efficiently, please prepare the following information:

· Order details (order number, purchase platform, purchase date).
· Clear photos or videos.
· We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.







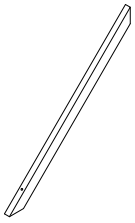
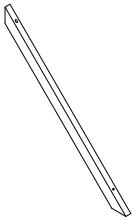
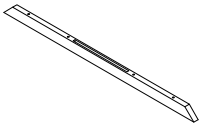


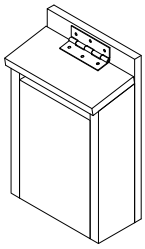
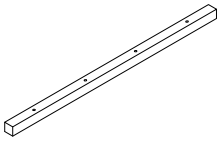


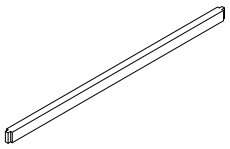
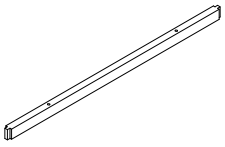
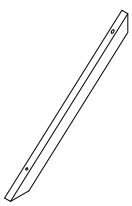
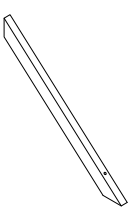
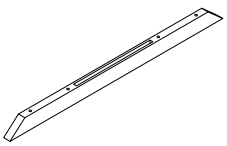

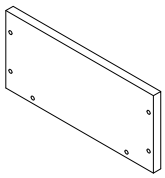
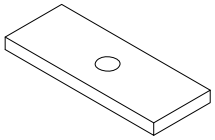
Thank you for your trust and support! We hope you enjoy using our product!

Parst List (Box 1)





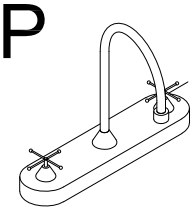

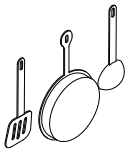
7  540X426MM	13  458X70MM	14  299X70MM	15  250X160MM	18  625X270MM	19  299X240MM
X1	X2	X4	X2	X1	X2
21  425X50MM	28  1010X160MM	29  270X34MM	30  280X85MM	31  530X34MM	32  268X34MM
X1	X1	X2	X2	X2	X1
33  300X34MM	34  285X105MM	35  100X70MM	36  1014X380MM	40  302X70MM	41  202X70MM
X4	X2	X4	X1	X1	X2
45  200X70MM	46  230X135MM	49  1080X423MM	50  1080X405MM	51  1080X434MM	52  433X387MM
X2	X1	X1	X1	X1	X1




Parst List (Box 1)					
53  433X387MM	54  745*298MM	55  552X355MM	56  745X298MM	57  552X355MM	
X1	X1	X1	X1	X1	
A  3.5*60	B  3.5*50	C  3.5*45	D  3.5*40	E  3.5*35	F  3.5*30
X19+1	X21+1	X48+2	X4+1	X30+2	X32+2
G  3*22	H  3*18	I  3*12	J  3*15	K  6*30	L  Ø6*20
X52+2	X90+2	X4+1	X4+1	X10+1	X18+1
M 	N 	O 	R 	S 	U 
X8	X6	X3	X1	X1	X3

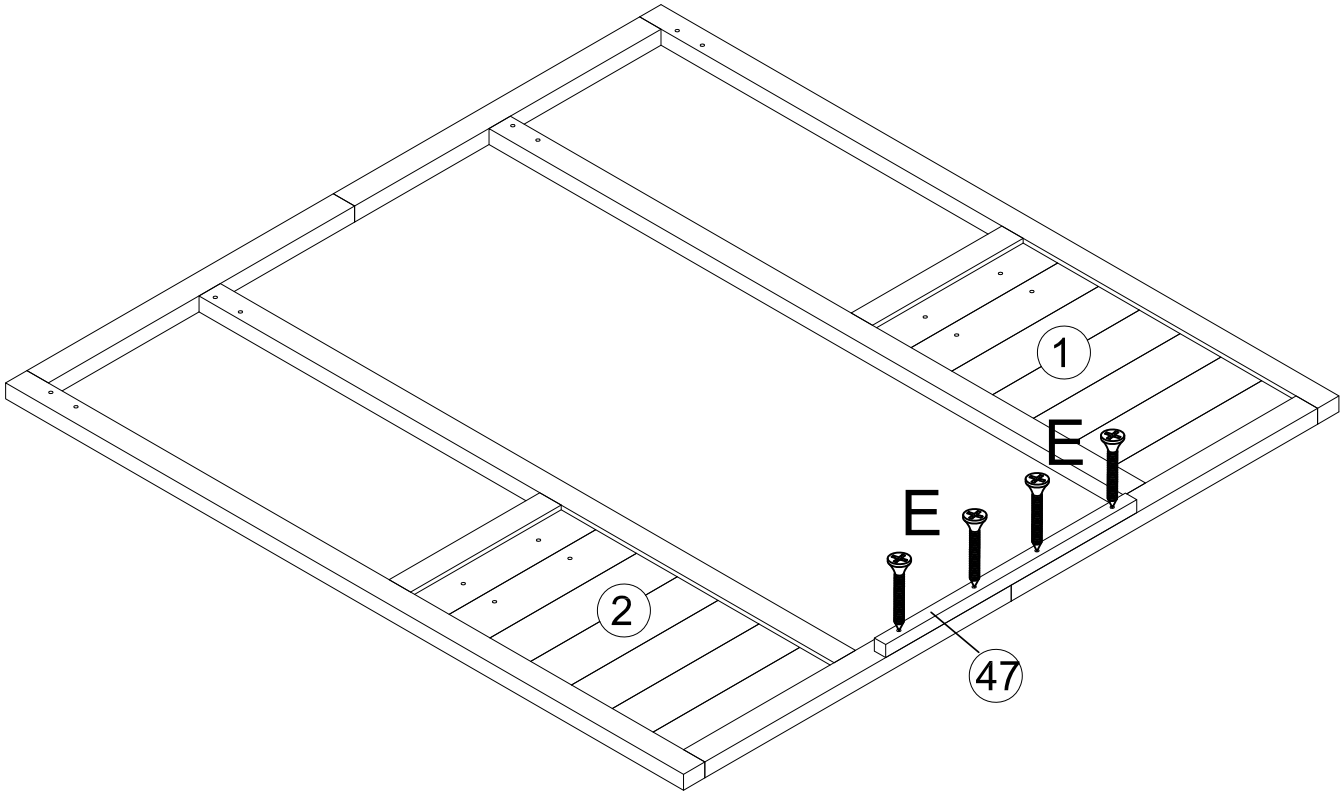
Parts List (Box 2)

1  1080X522MM	2  1080X522MM	3  1080X507MM	4  1080X507MM	5  1080X522MM	8  489X396MM
X1	X1	X1	X1	X1	X1
10  769X45MM	11  769X45MM	12  960X45MM	16  980X377MM	17  980X377MM	20  230X145MM
X2	X2	X2	X1	X1	X1
22  555X22MM	23  1080X95MM	24  1050X320MM	25  1080X34MM	26  820X34MM	27  820X34MM
X1	X2	X2	X2	X1	X1
37  580X45MM	38  580X45MM	39  732X45MM	42  100X73MM	43  220X100MM	44  192X73MM
X1	X1	X1	X4	X4	X2

Parts List (Box 2)

47  400X18MM	48  700X70MM	58  700X70MM	59  453X396MM	60  1080X522MM	
X3	X1	X1	X1	X1	
P 	Q 	T 			
X1	X1	X1			

1	 1 X1	 2 X1	 47 X1			




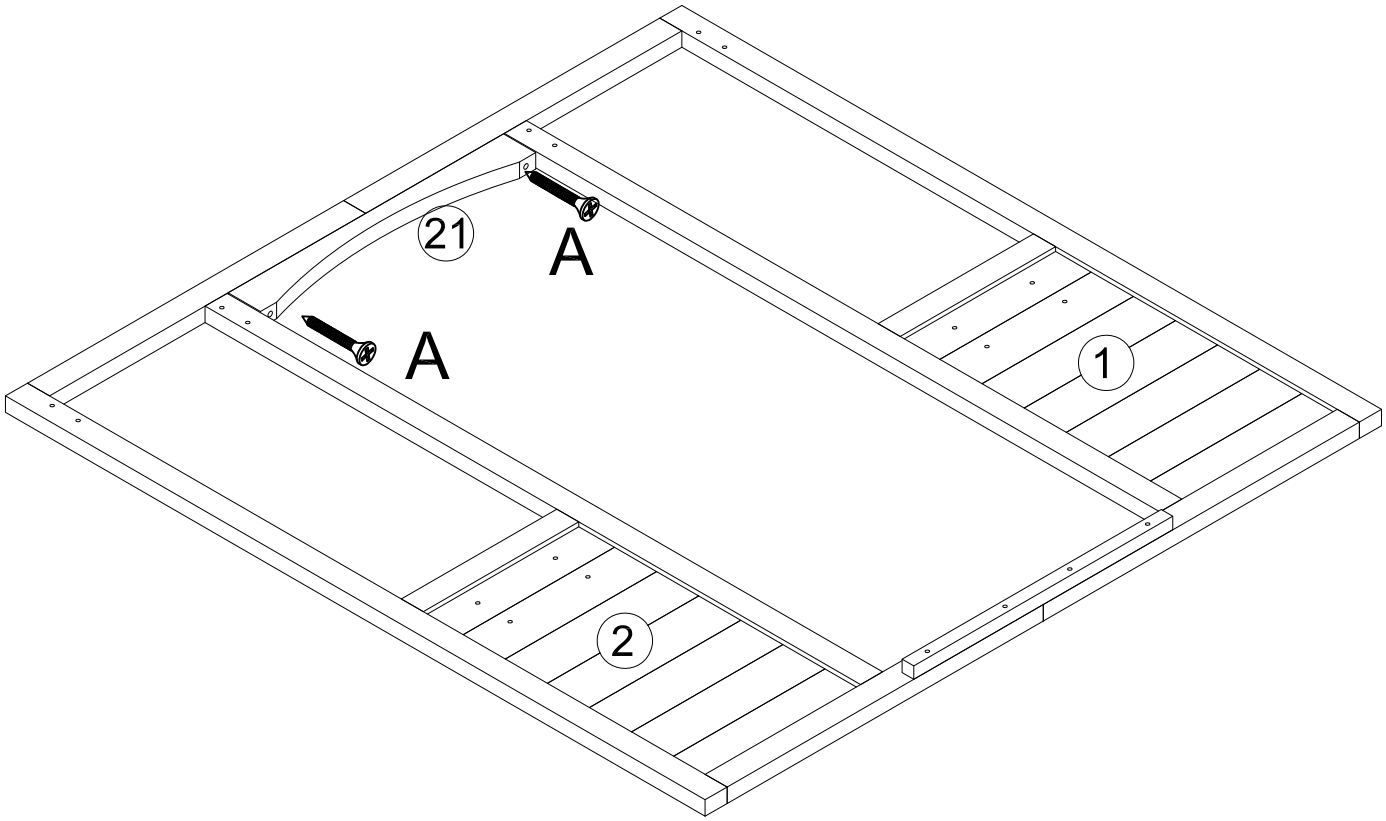
Use screws (E) to fix part (47) to parts (2) and (1).

EX4



3.5*35

2	 21 X1					

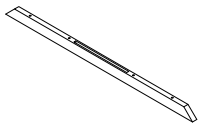


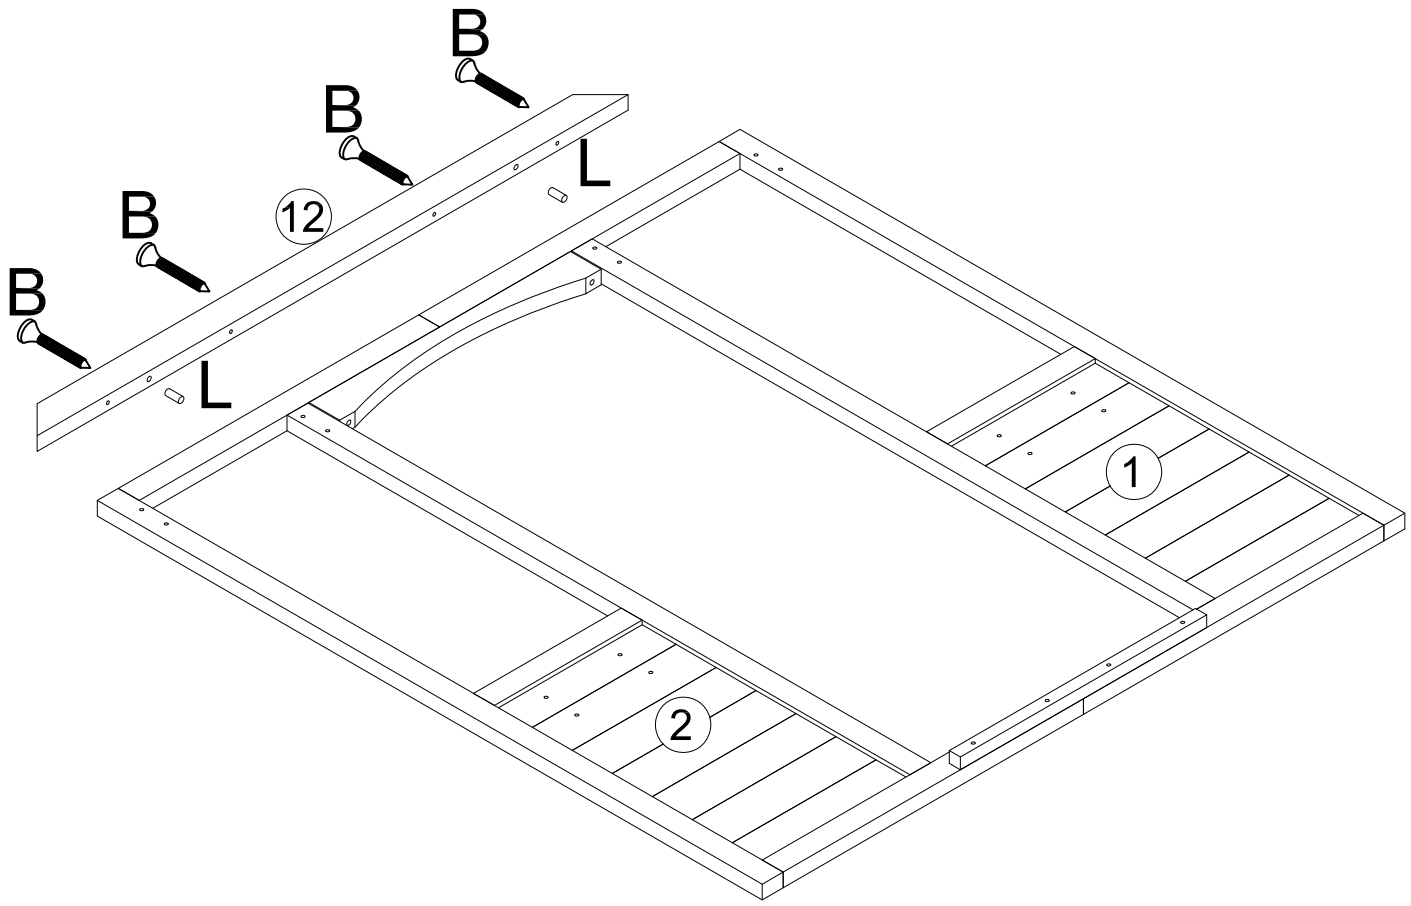
Use screws (A) to fix part (21) to parts (2) and (1).

AX2







3.5*60

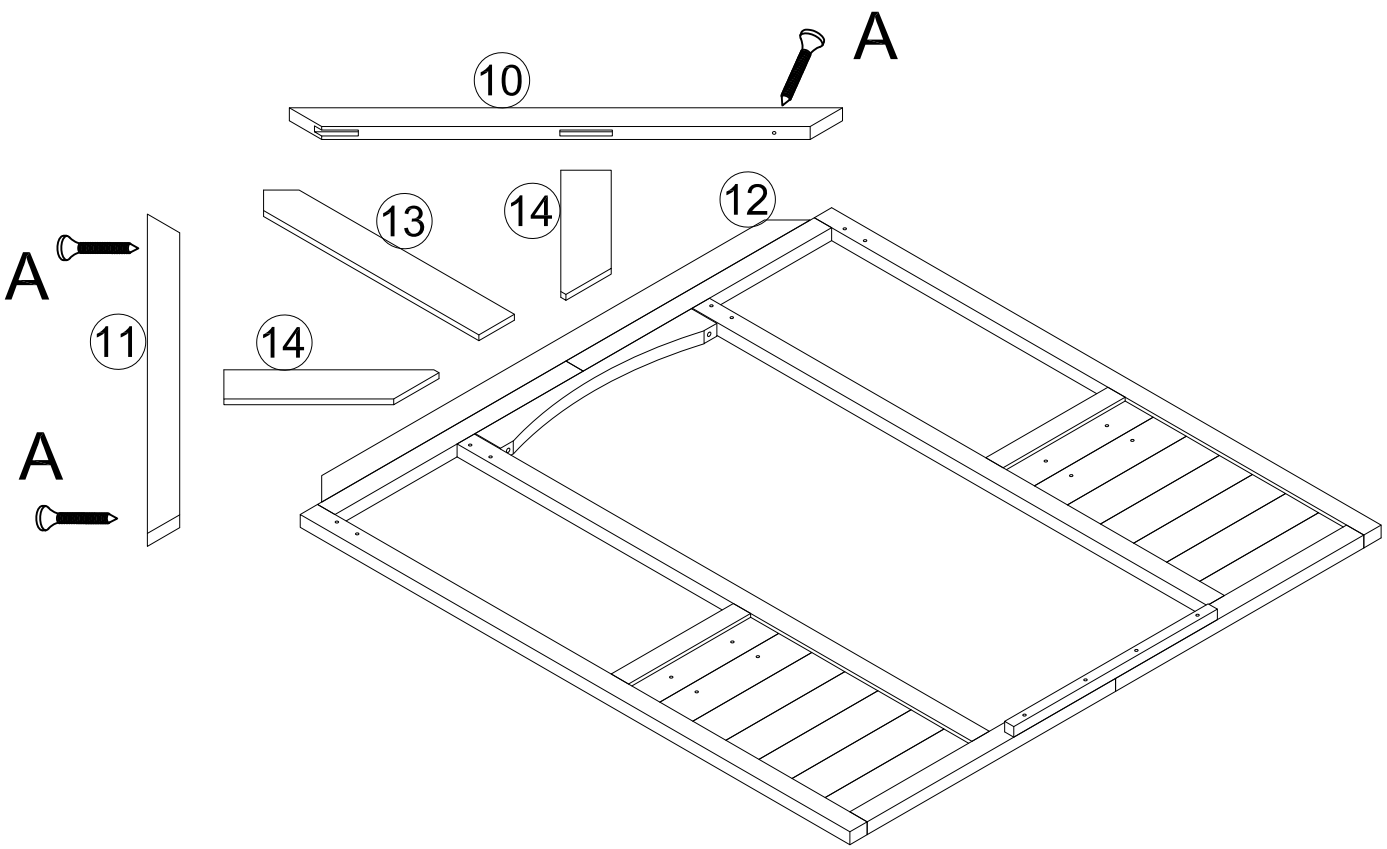
3	 12 X1					

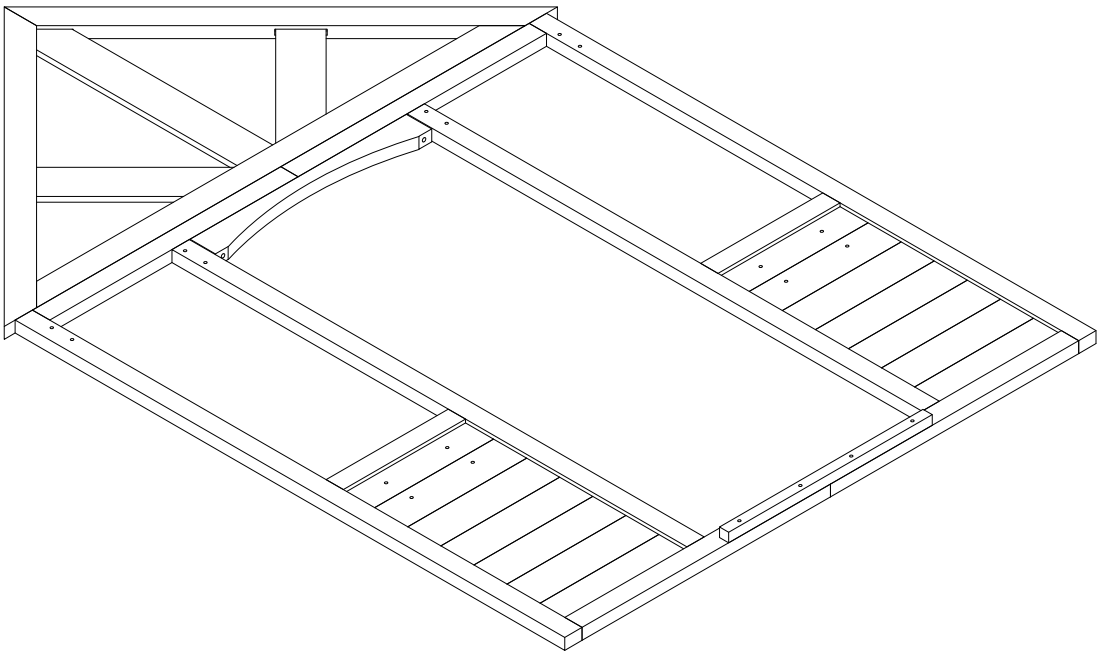


Assemble part (12) with parts (2) and (1) using accessory (L), then secure with screws (B).

BX4	LX2
 3.5*50	 Ø6*20

4	 10 X1	 11 X1	 13 X1	 14 X2		







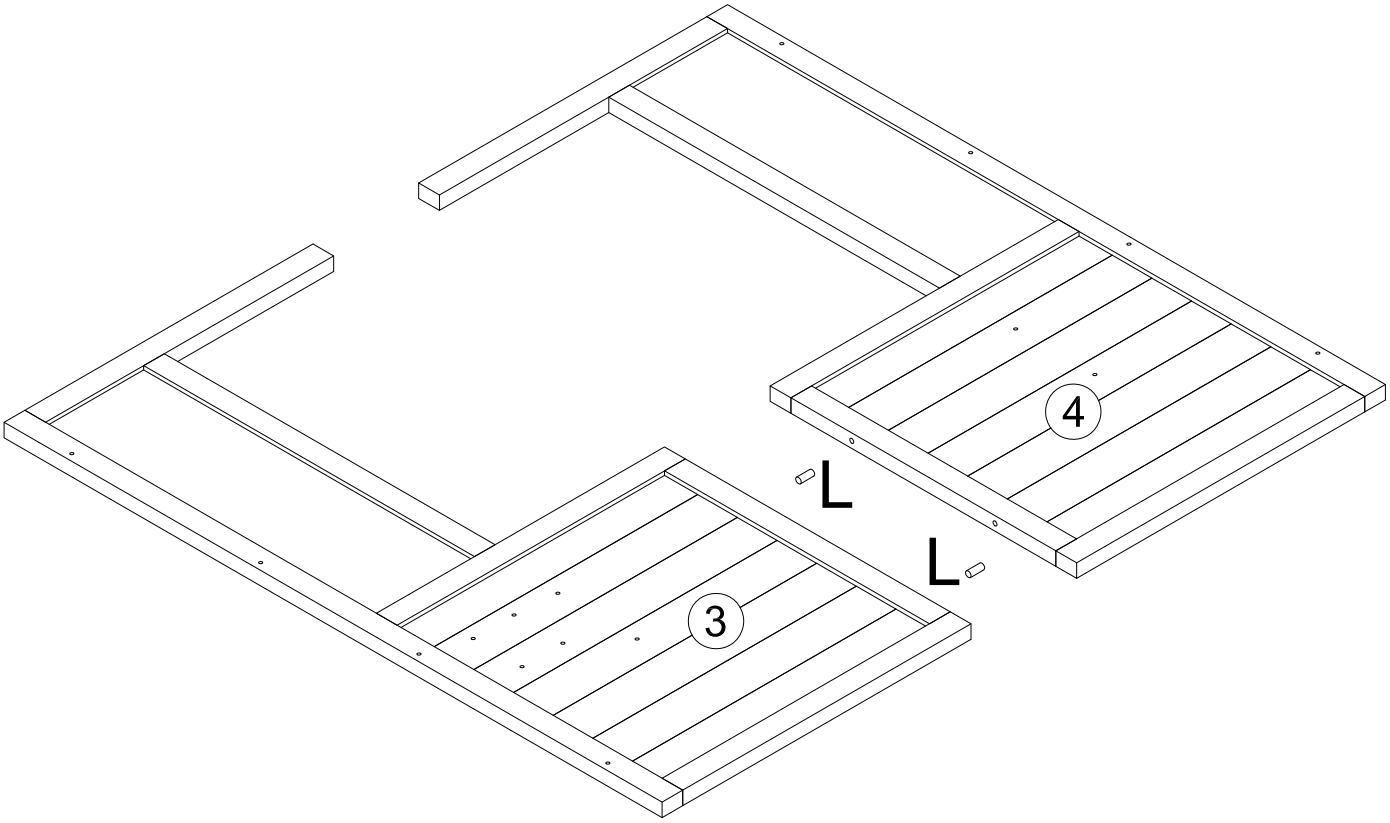
Assemble parts (10), (11), (13), and (14) with part (12), then secure with screws (A).

AX3



3.5*60

5	 3 X1	 4 X1				

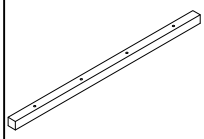



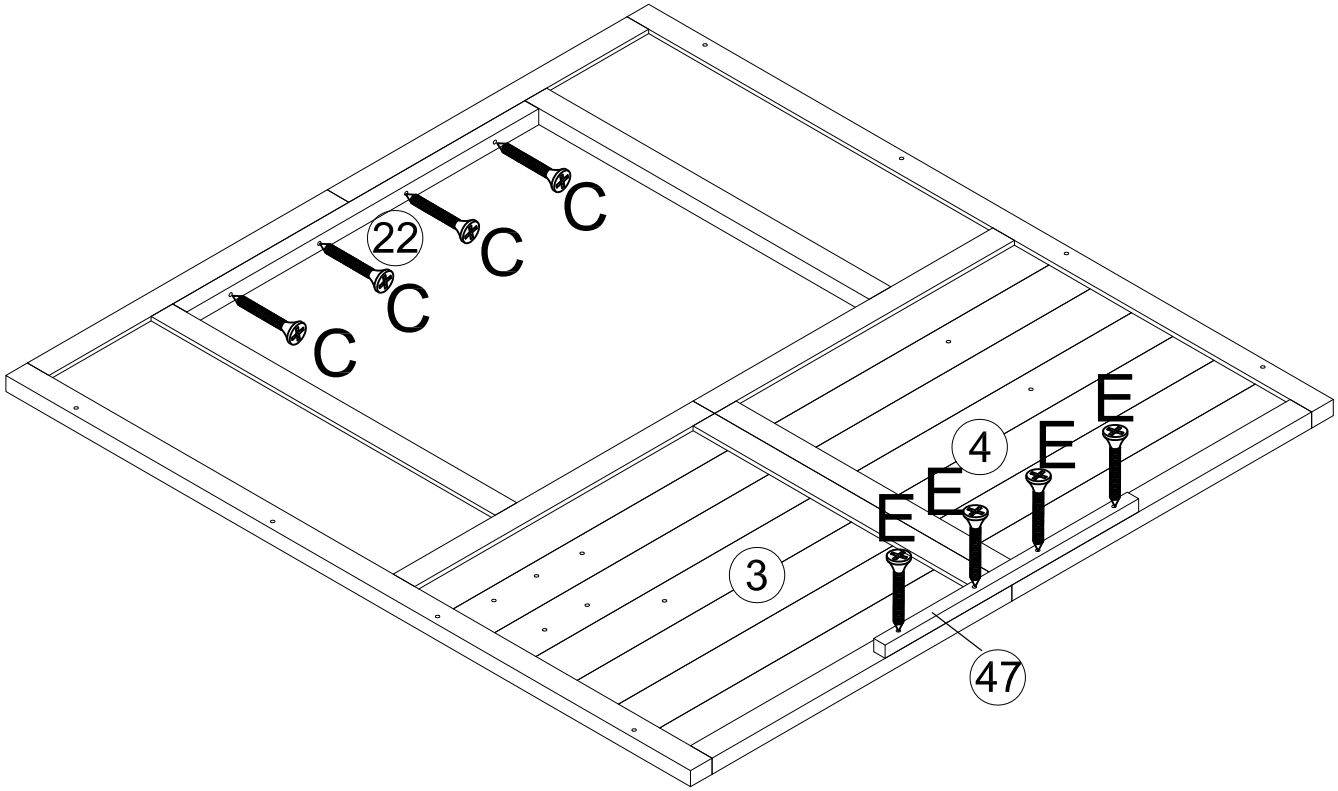
Assemble parts (3) and (4) using accessory (L).

LX2




Ø6*20

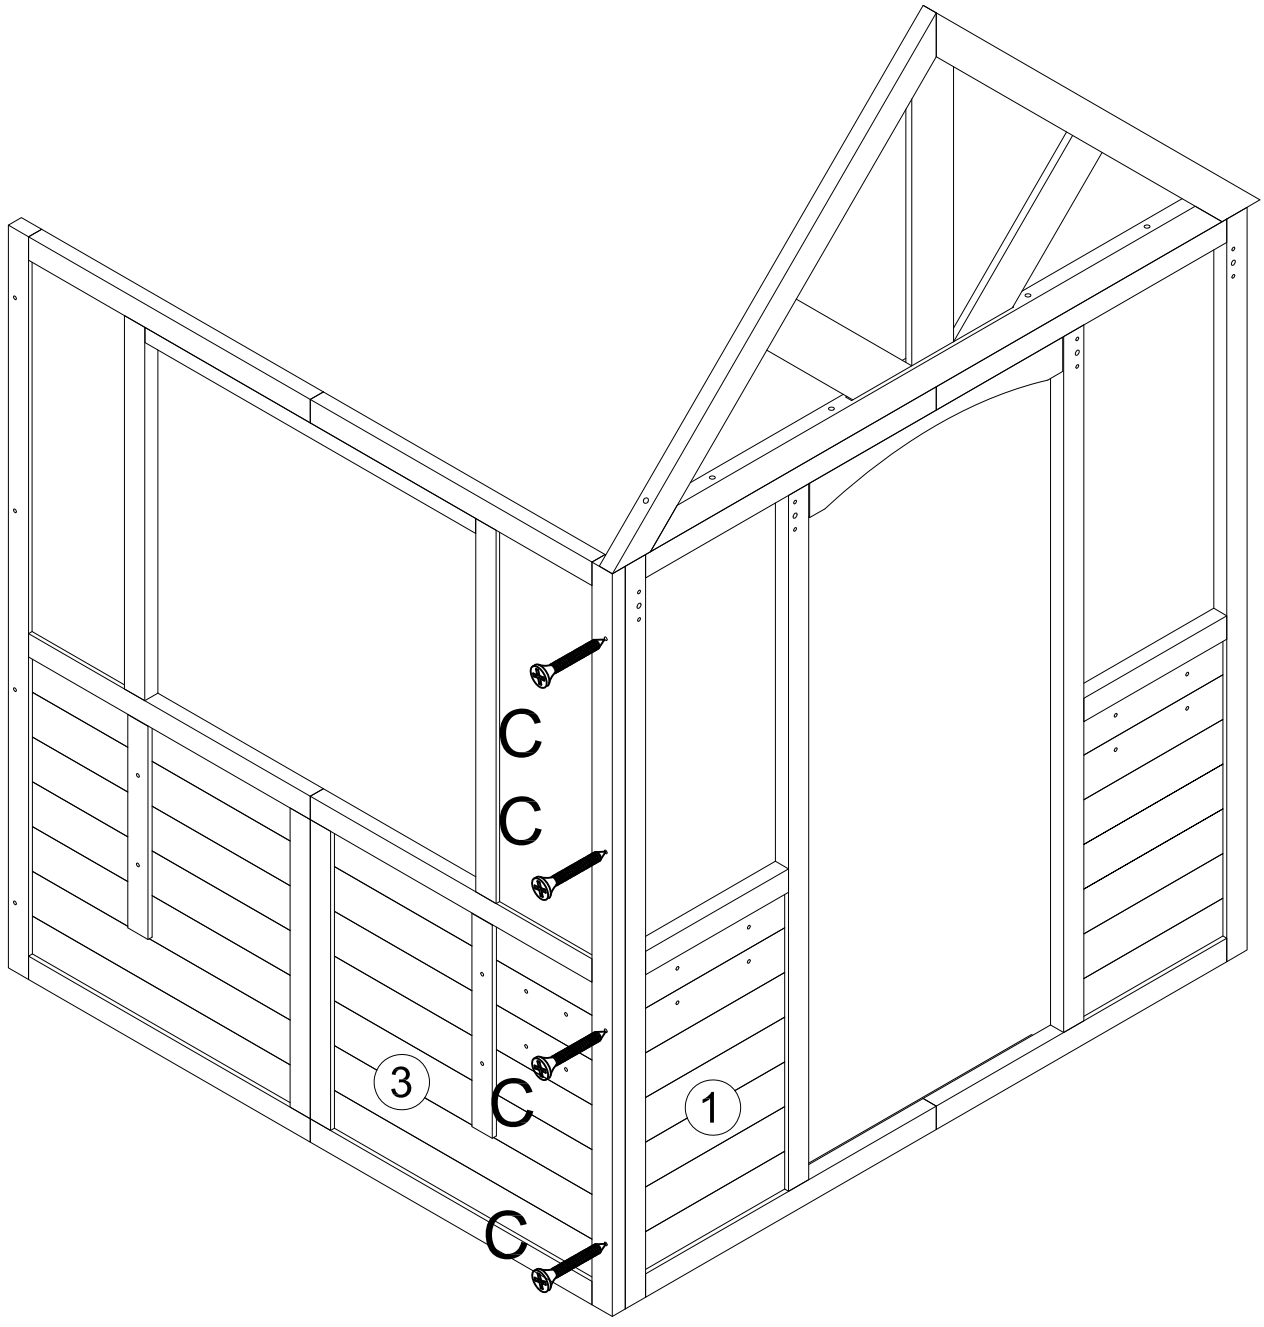
6	 22 X1	 47 X1				



a. Fix part (47) to parts (3) and (4) using screws (E).
b. Fix part (22) to parts (3) and (4) using screws (C).

CX4	EX4
 3.5*45	 3.5*35

7						





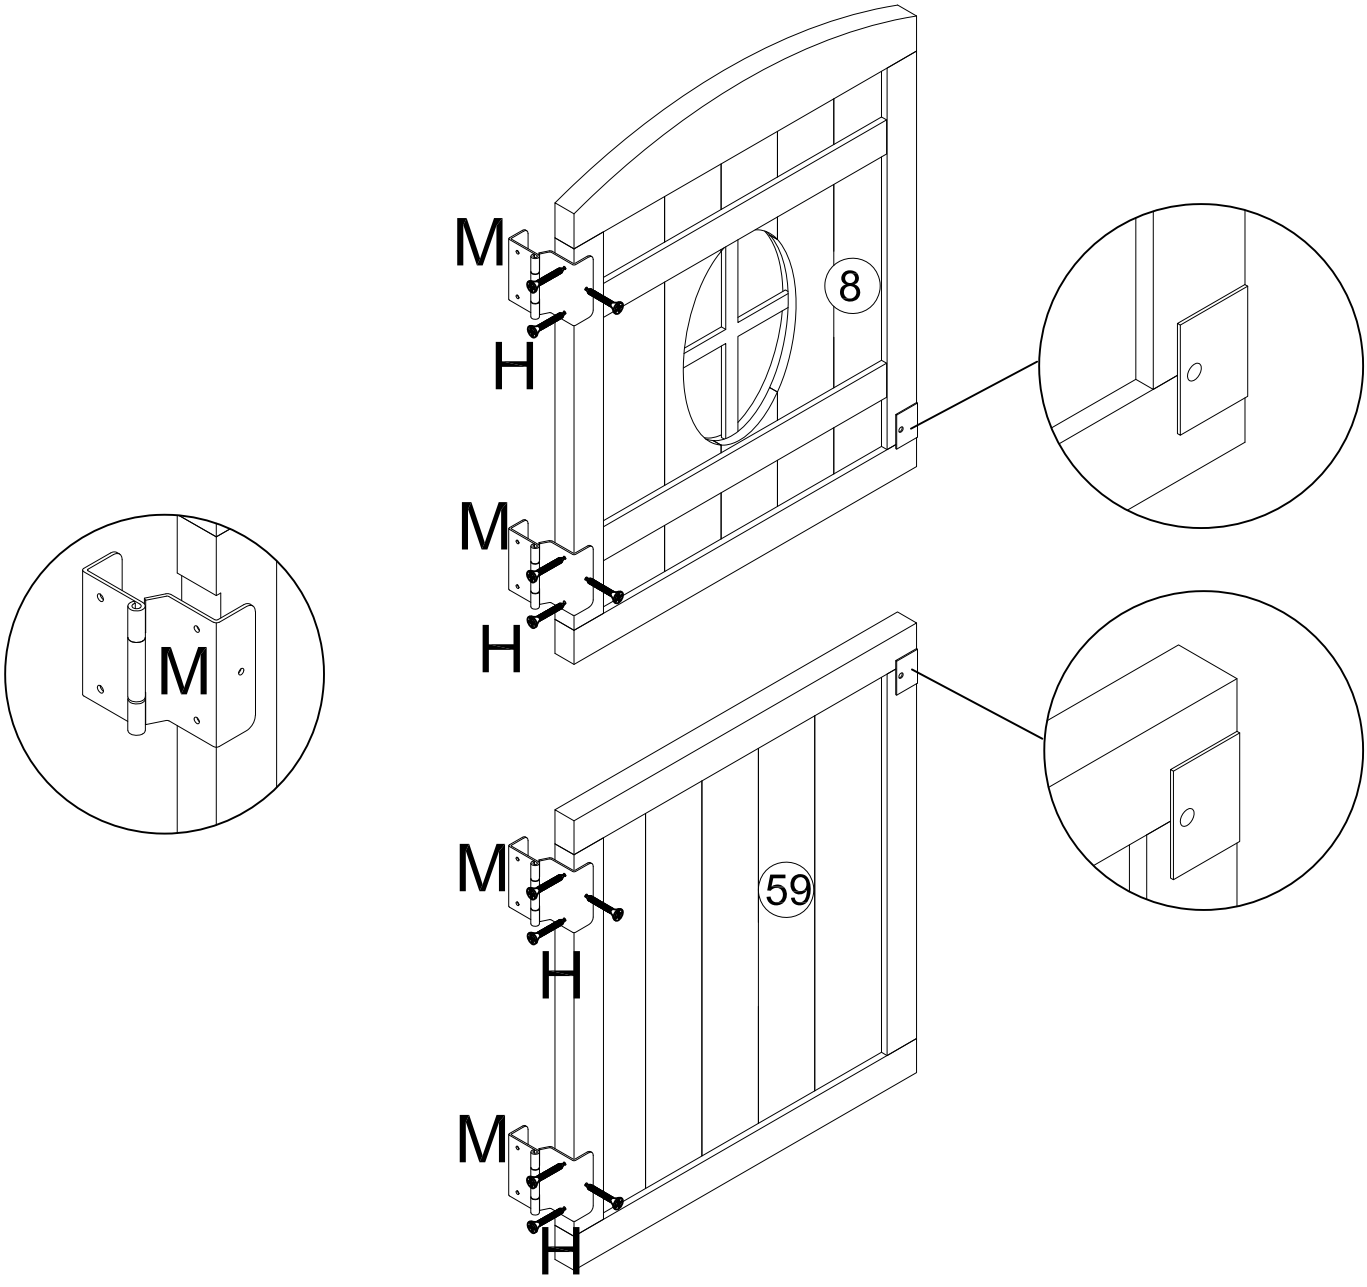
Fix part (3) to part (1) using screws (C).

CX4




3.5*45

8	 8 X1	 59 X1				

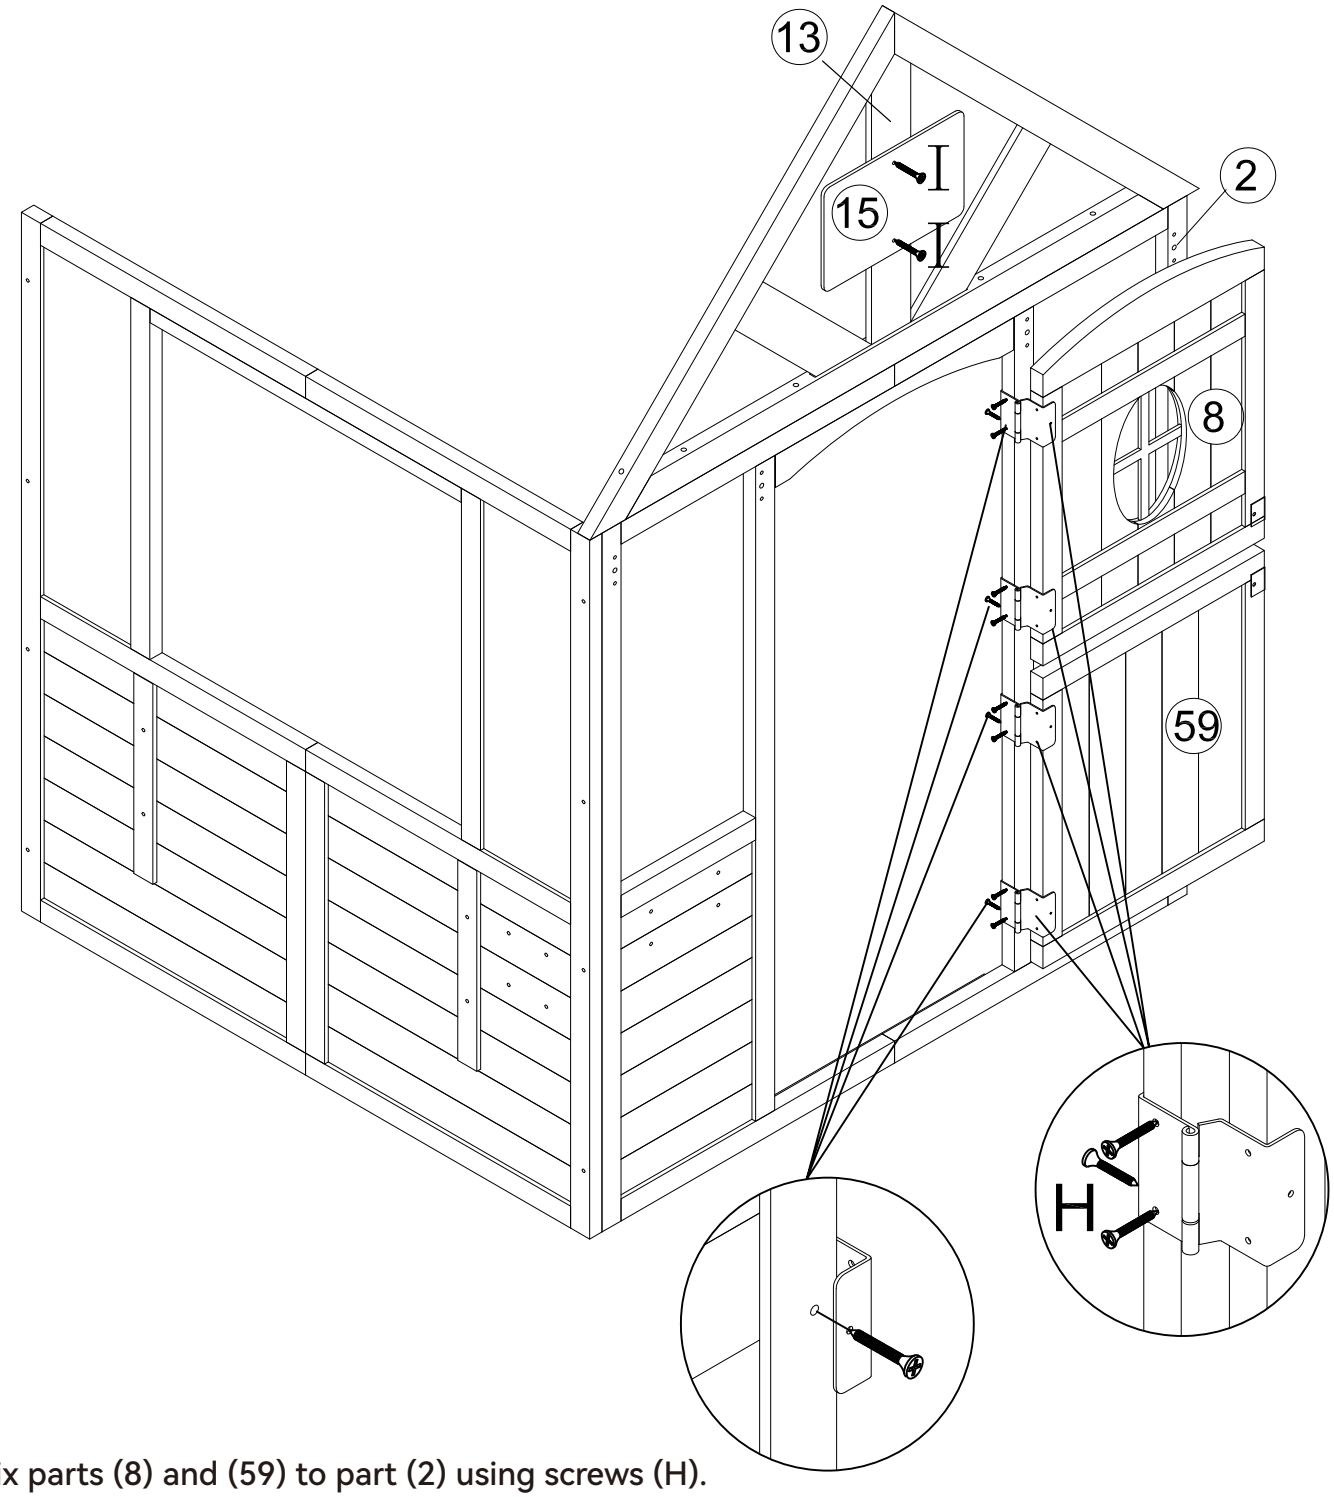


Attach accessory (M) to parts (8) and (59) using screws (H).


Note: Insert accessory (M) into the slot as shown.

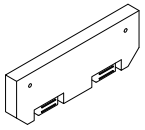
HX12  3*18	MX4 

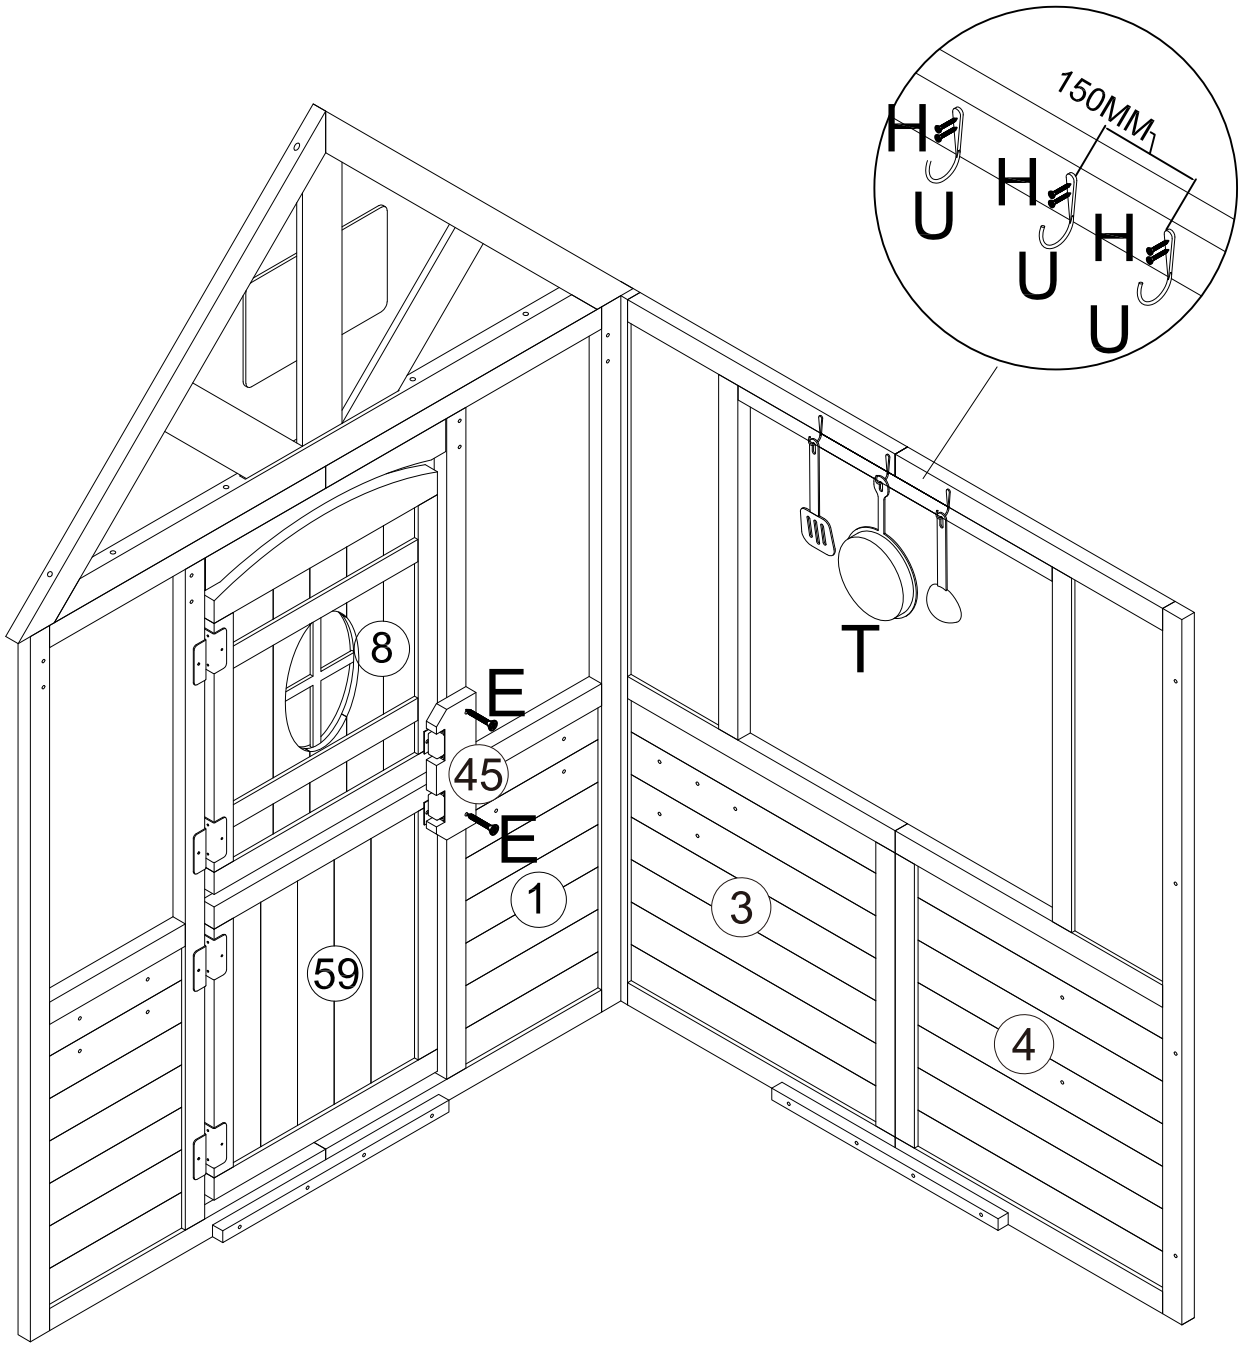
9	15 X1					



a. Fix parts (8) and (59) to part (2) using screws (H).
Note: Align accessory (M) with the pilot holes.
b. Fix part (15) to part (13) using screws (I) (as shown).

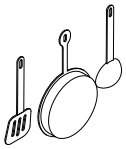
HX12	IX2
	
3*18	3*12

10	 45 X1					

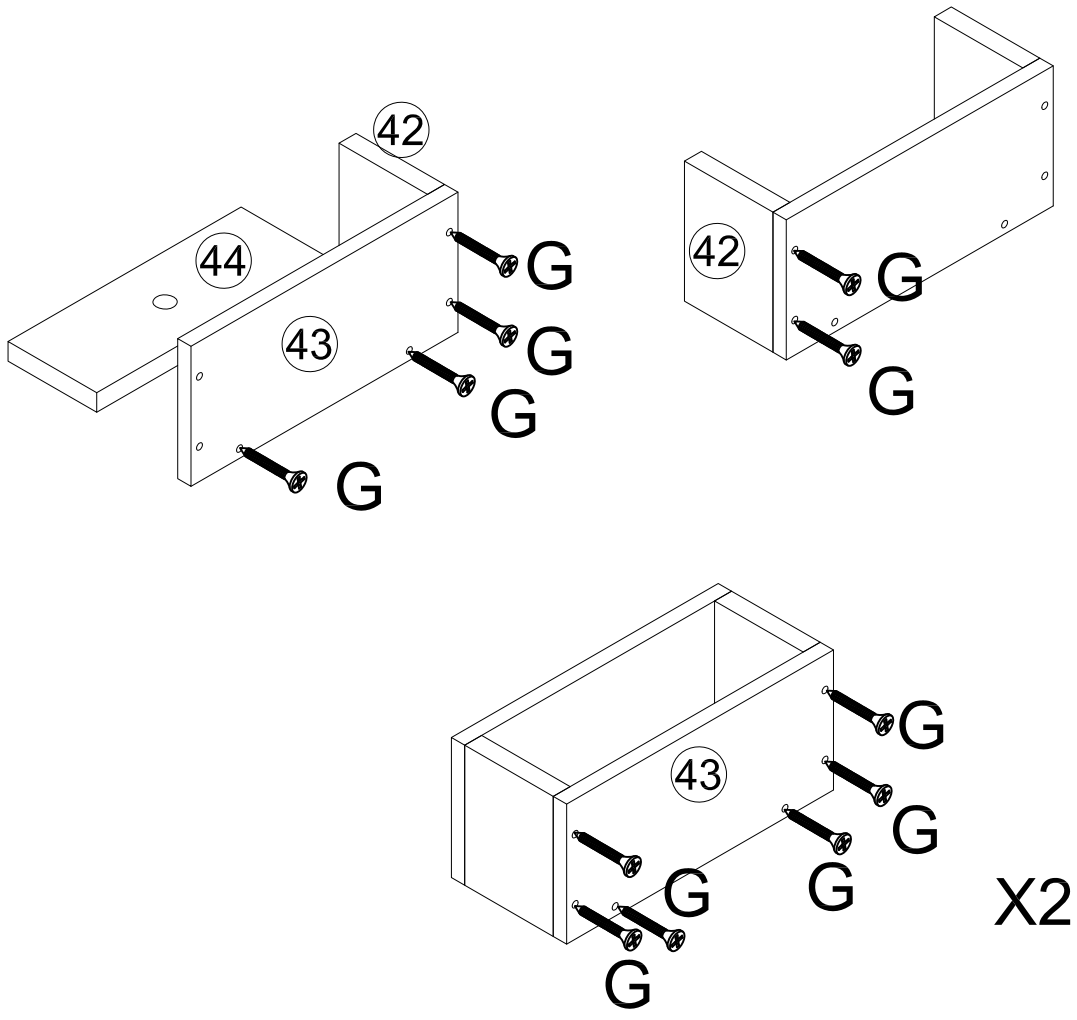


a. Fix accessory (U) to parts (3) and (4) using screws (H) (spacing approx. 150 mm).
b. Hang accessory (T) onto accessory (U).
c. Fix part (45) to part (1) using screws (E).

Note: Align with magnetic catches on parts (8) and (59).


EX2	HX6	TX1	UX3
 3.5*35	 3*18		

11	42 X4	43 X4	44 X2			

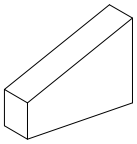


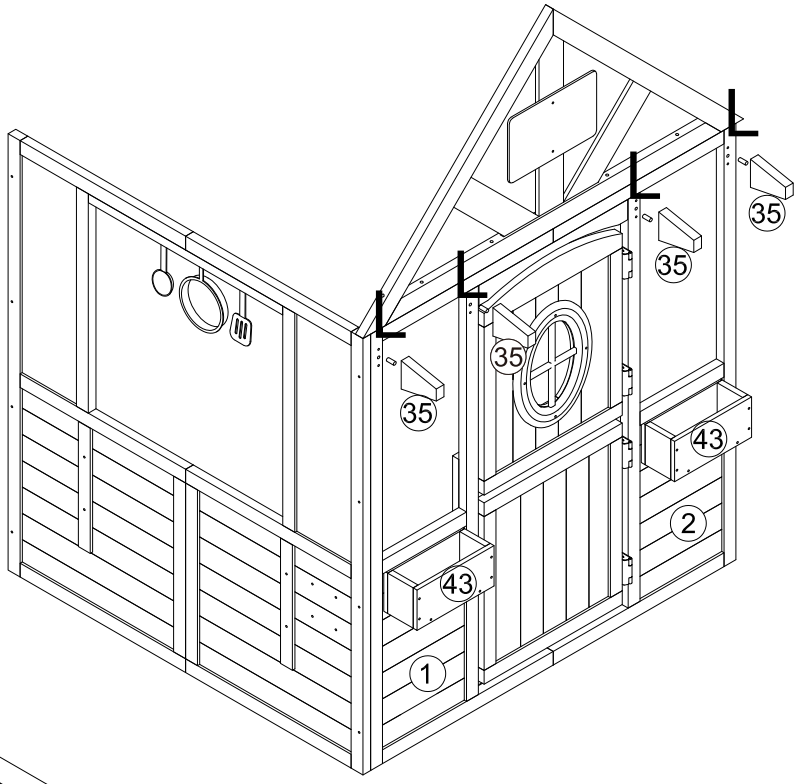
Fix parts (42), (43), and (44) using screws (G). (Repeat twice)

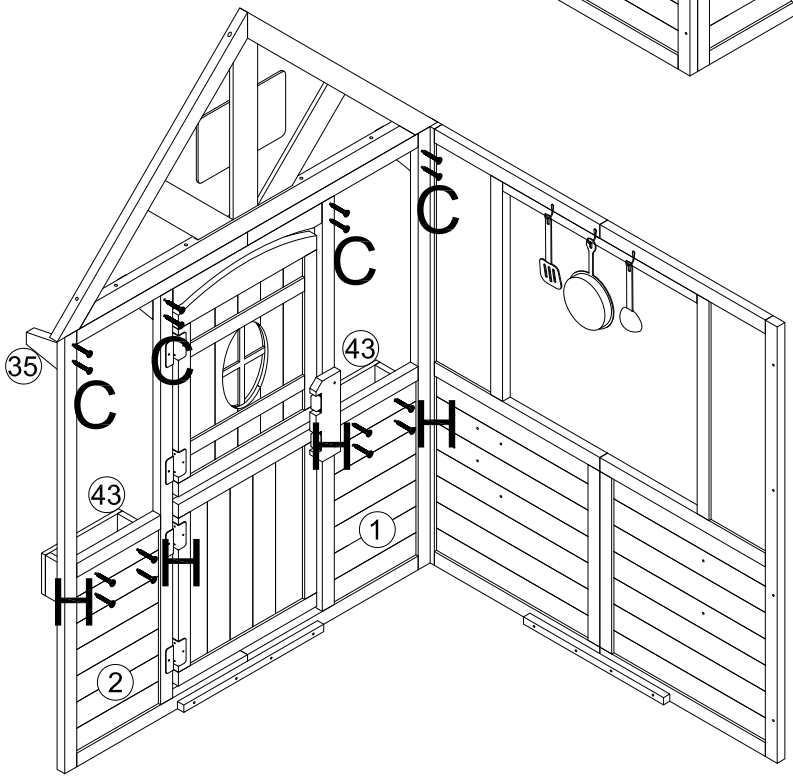
GX24




3*22

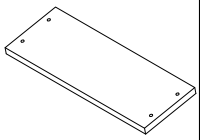
12	 35 X4					

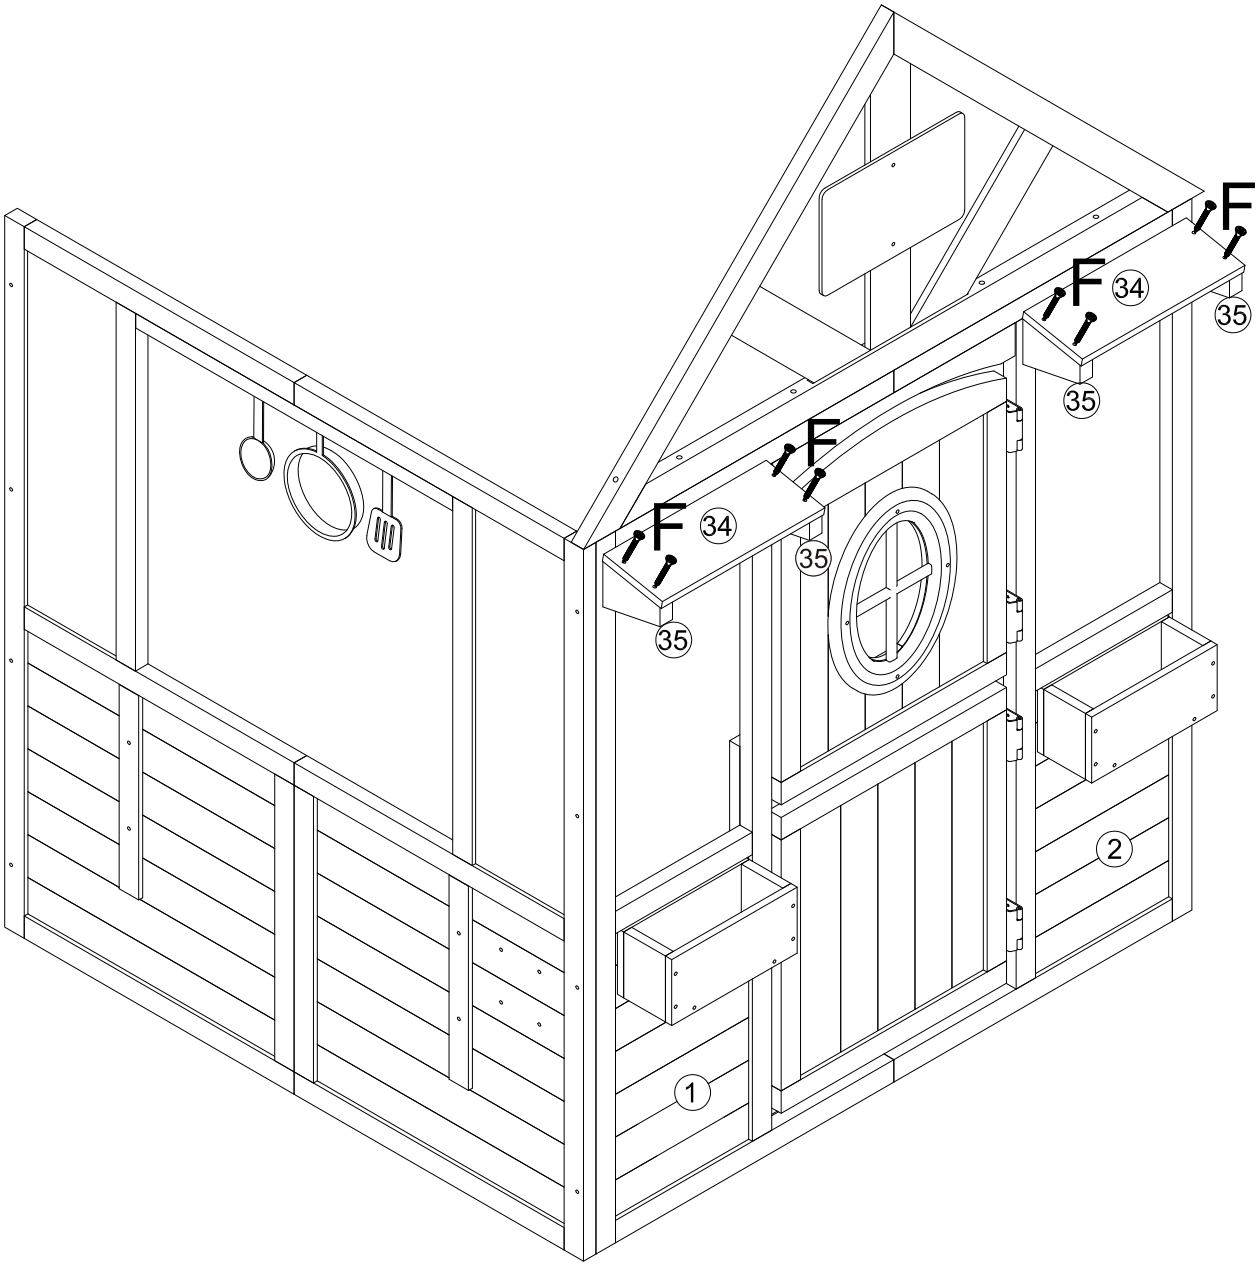




a. Assemble part (35) with parts (1) and (2) using accessory (L), then secure with screws (C).
b. Fix part (43) to parts (1) and (2) using screws (H).

CX8	HX8	LX4
 3.5*45	 3*18	 Ø6*20

13	 34 X2					




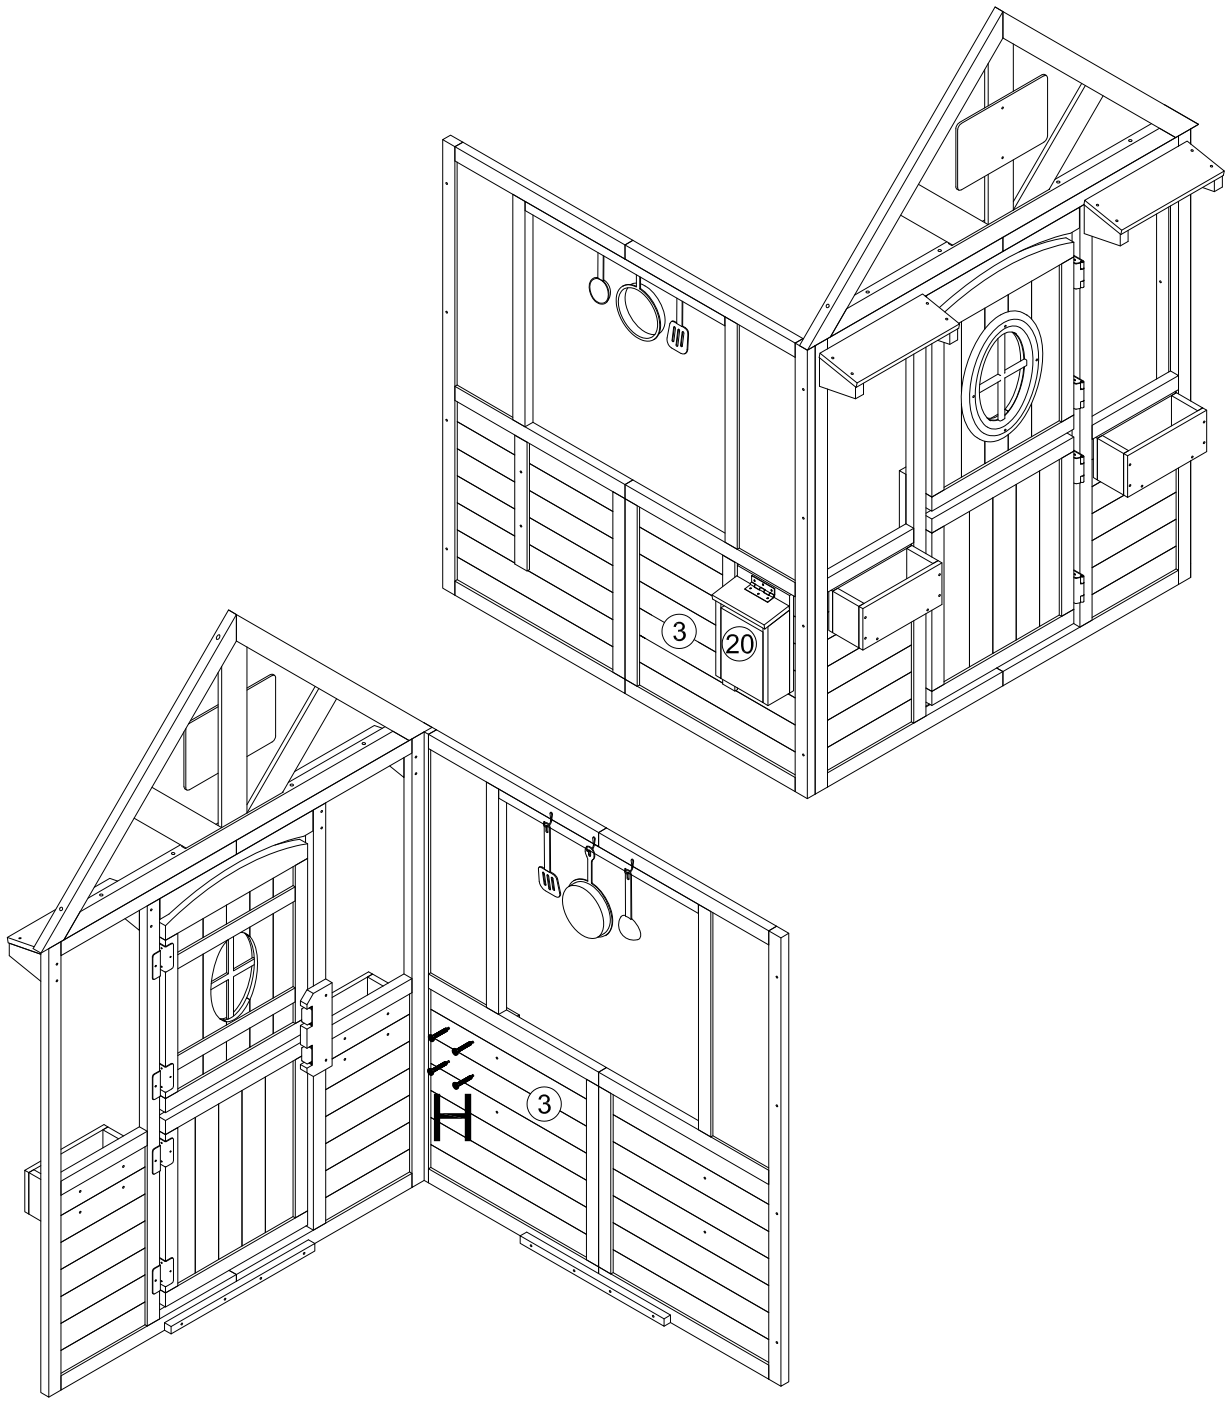
Fix part (34) to part (35) using screws (F).

FX8



3.5*30

14	 20 X1					

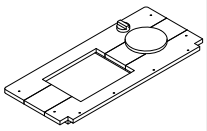
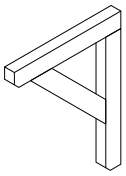


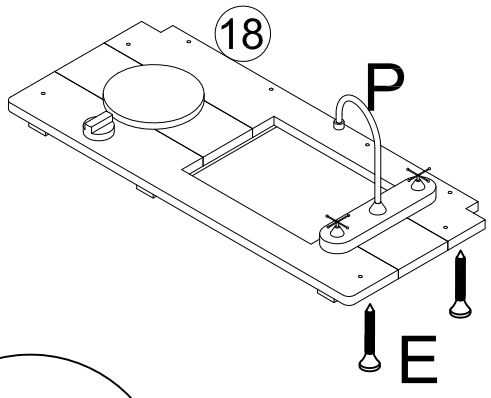
Fix part (20) to part (3) using screws (H).

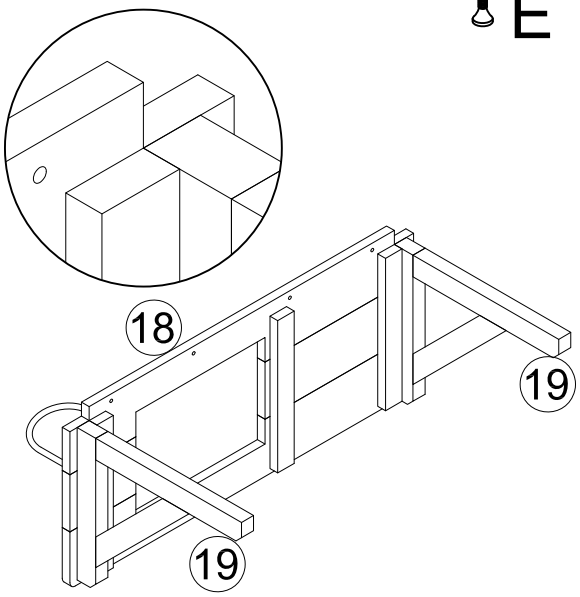
HX4

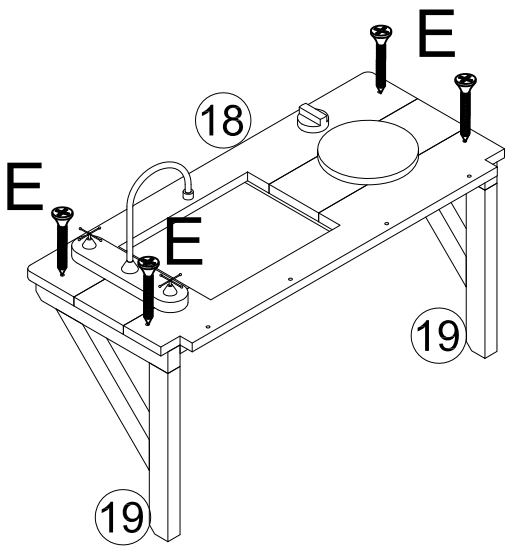


3*18


15	 18 X1	 19 X2				



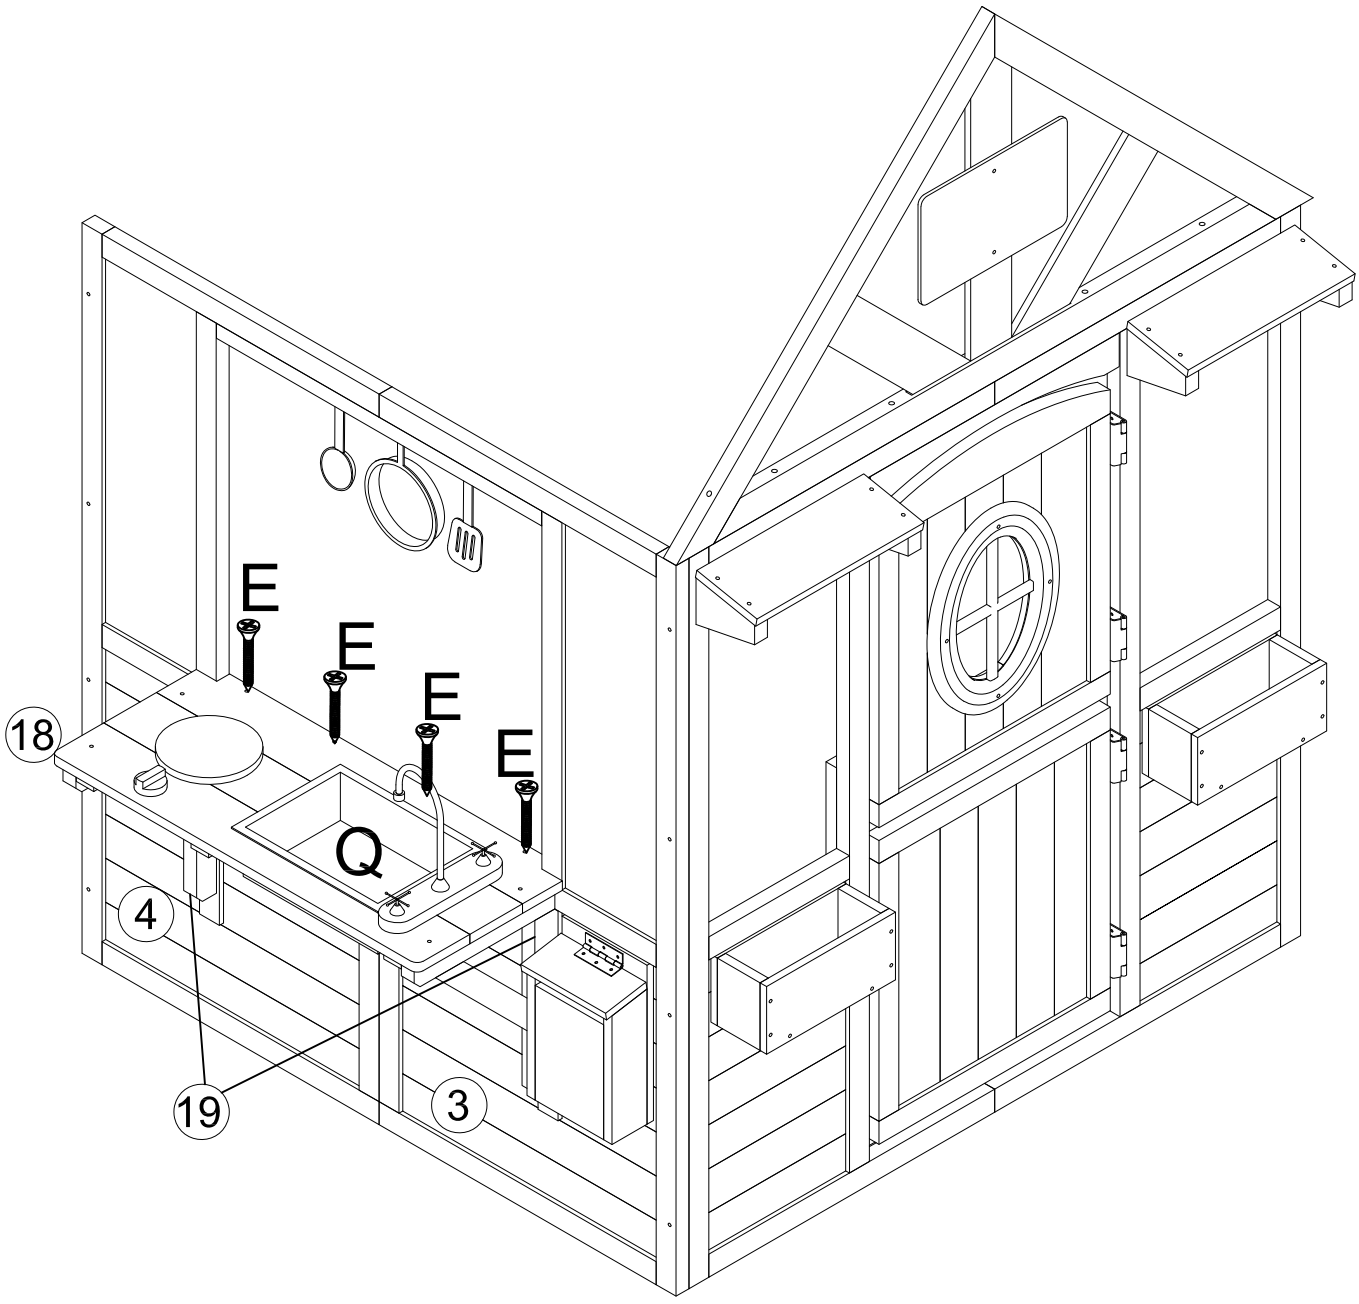






a. Fix accessory (P) to part (18) using screws (E).
b. Fix part (18) to part (19) using screws (E) (align as shown).

EX6  3.5*35	PX1 

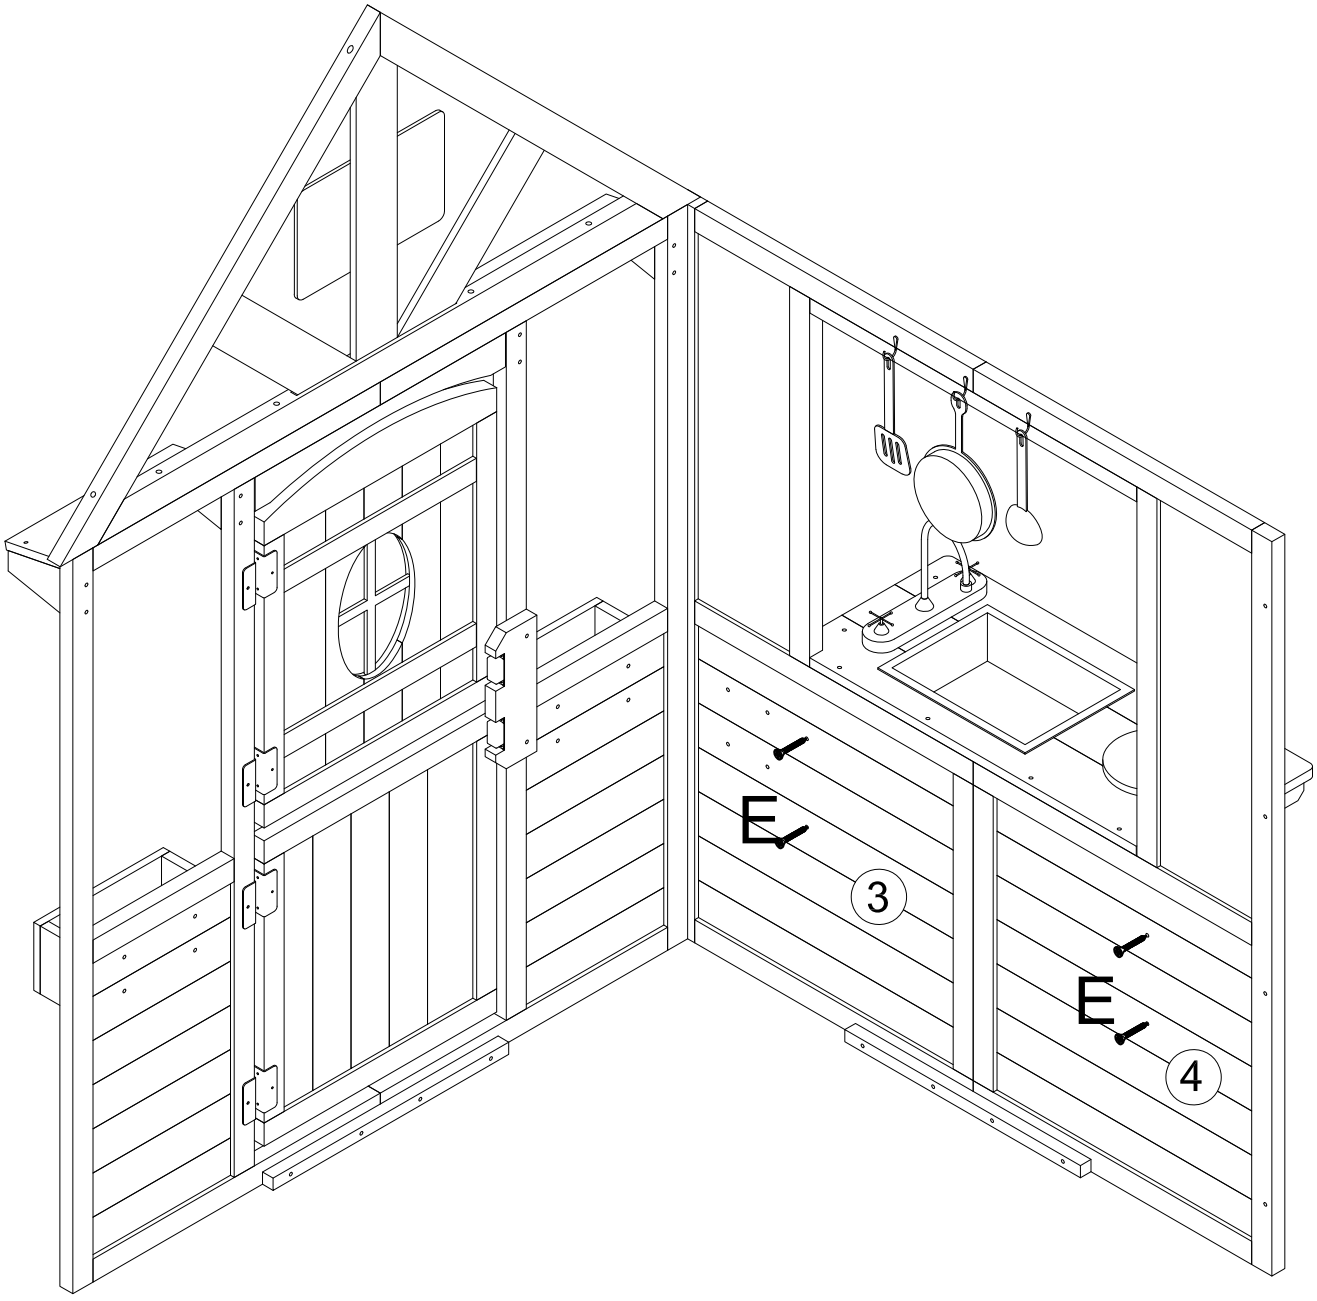
16



a. Place accessory (Q) onto part (18).
b. Fix part (18) to parts (4) and (3) using screws (E).


EX4	QX1
 3.5*35	

17						






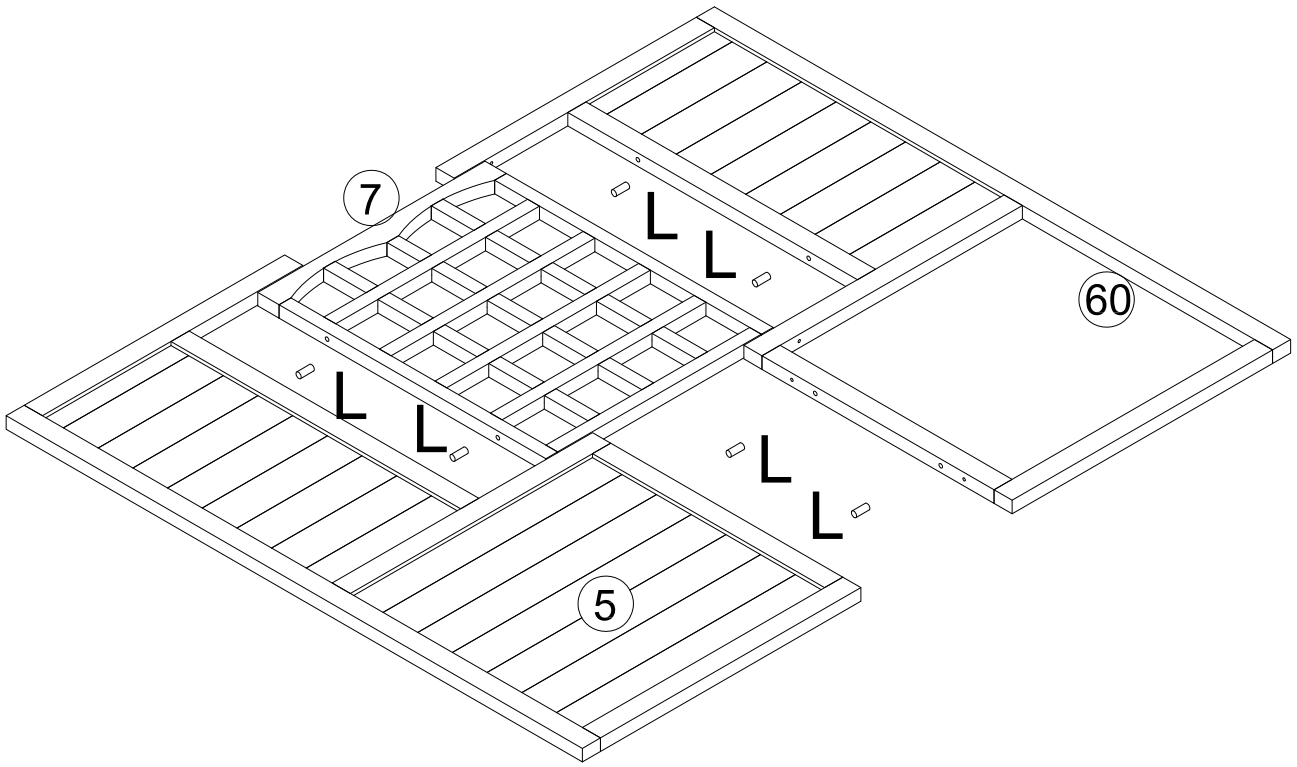
Reinforce part (19) from parts (3) and (4) using screws (E).

EX4



3.5*35

18	 5 X1	 7 X1	 60 X1			



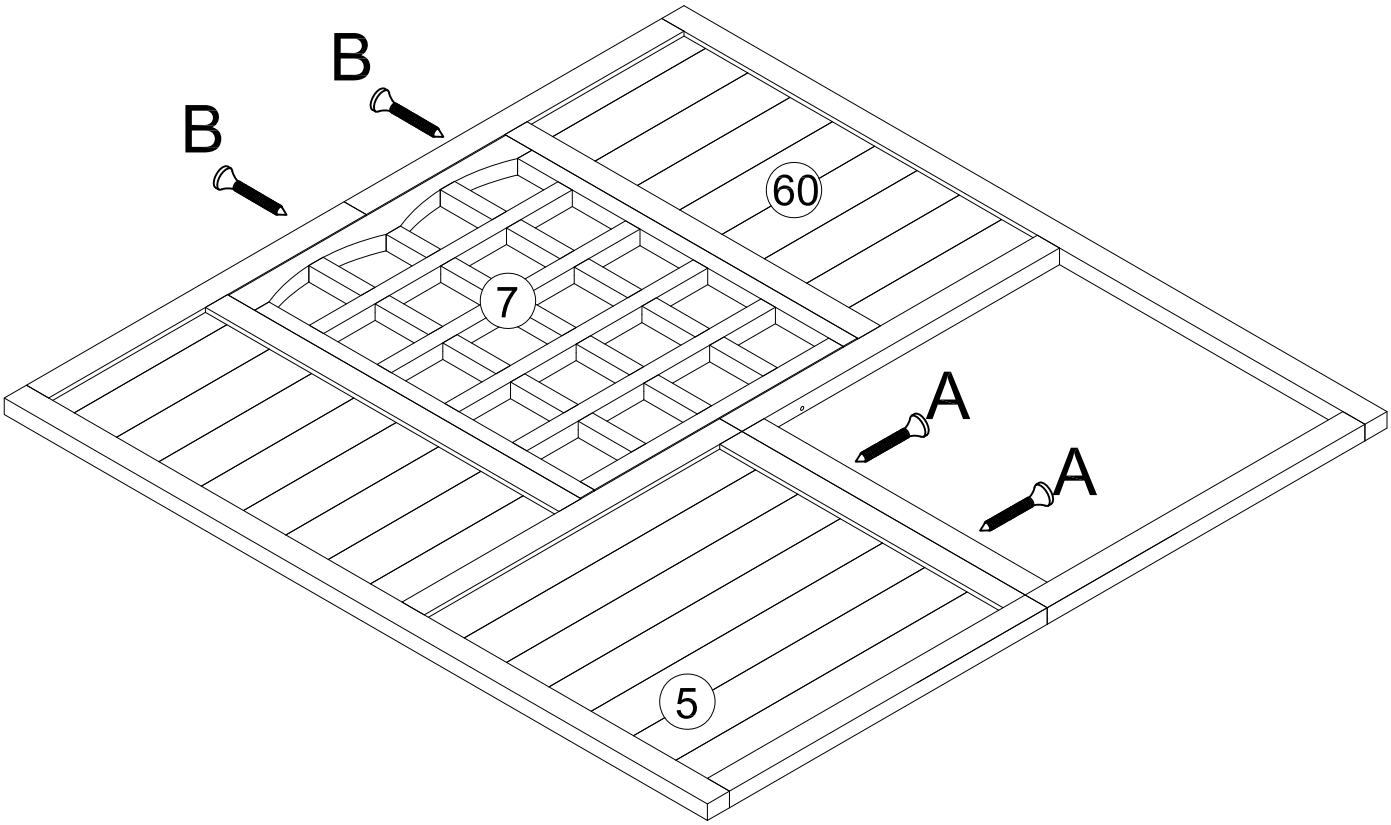
Assemble parts (5), (60), and (7) using accessory (L).

LX6



Ø6*20

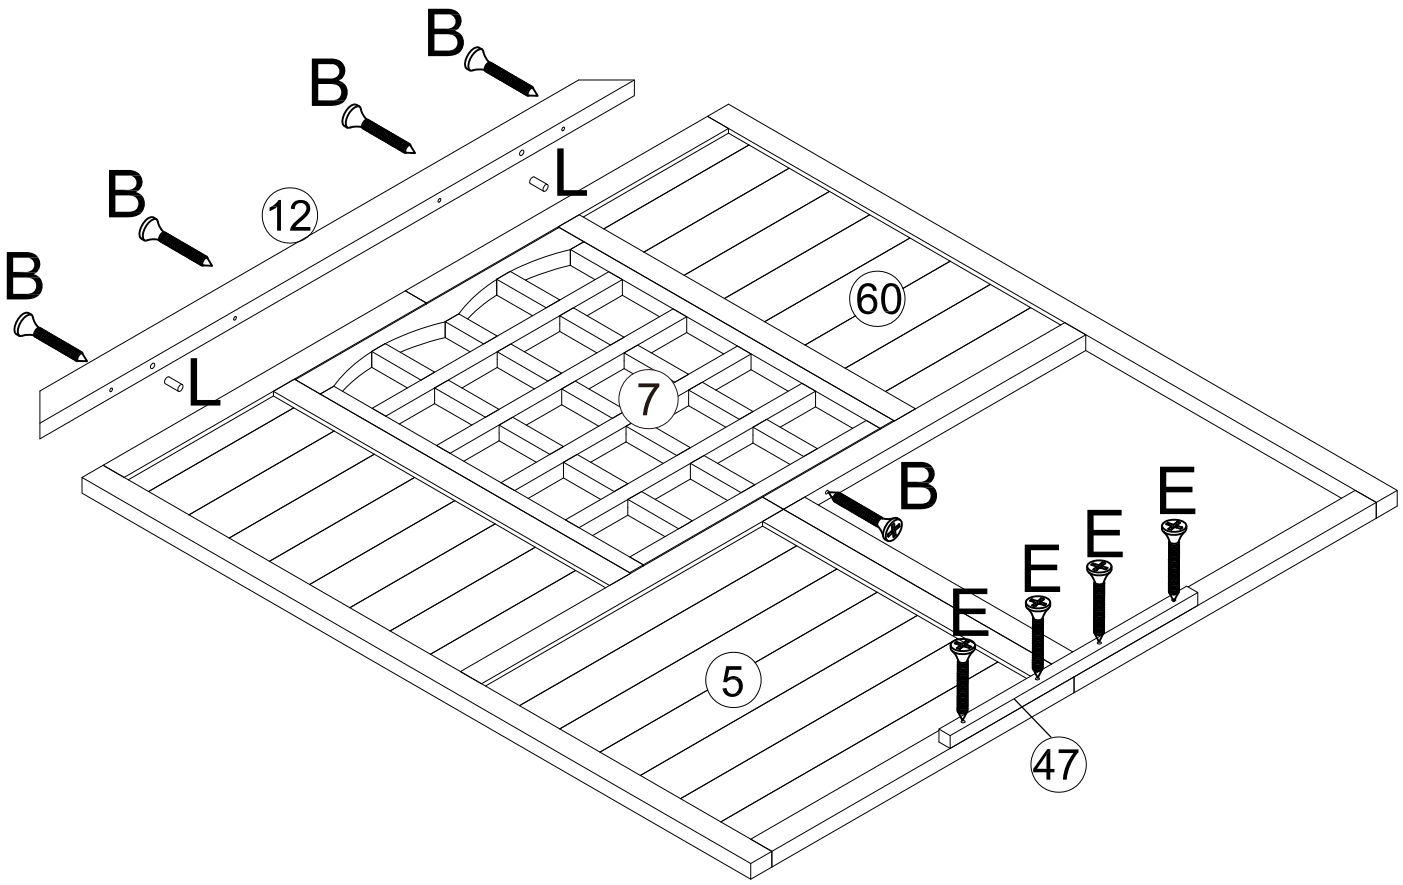
19						



a. Reinforce part (7) from the top using screws (B) through parts (5) and (60).
b. Fix part (60) to part (5) using screws (A).




AX2	BX2
 3.5*60	 3.5*50

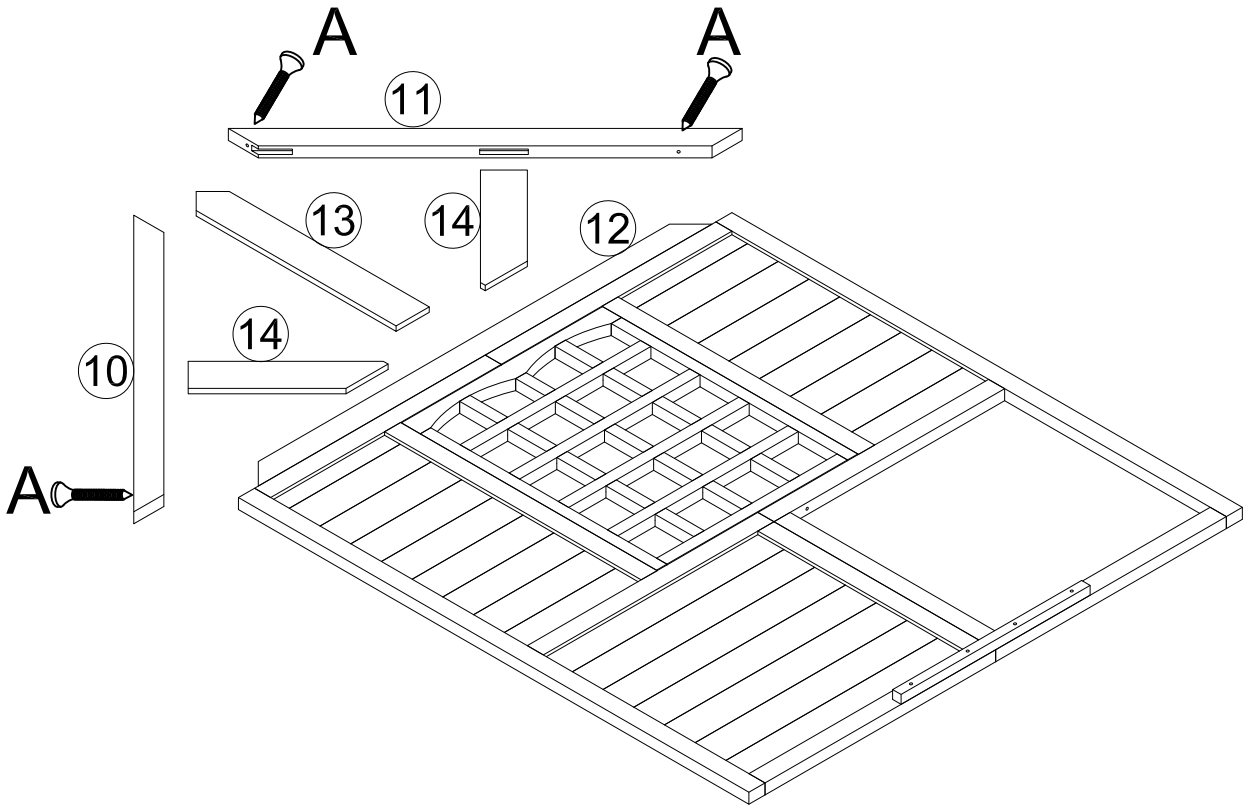
20	12 X1	47 X1				

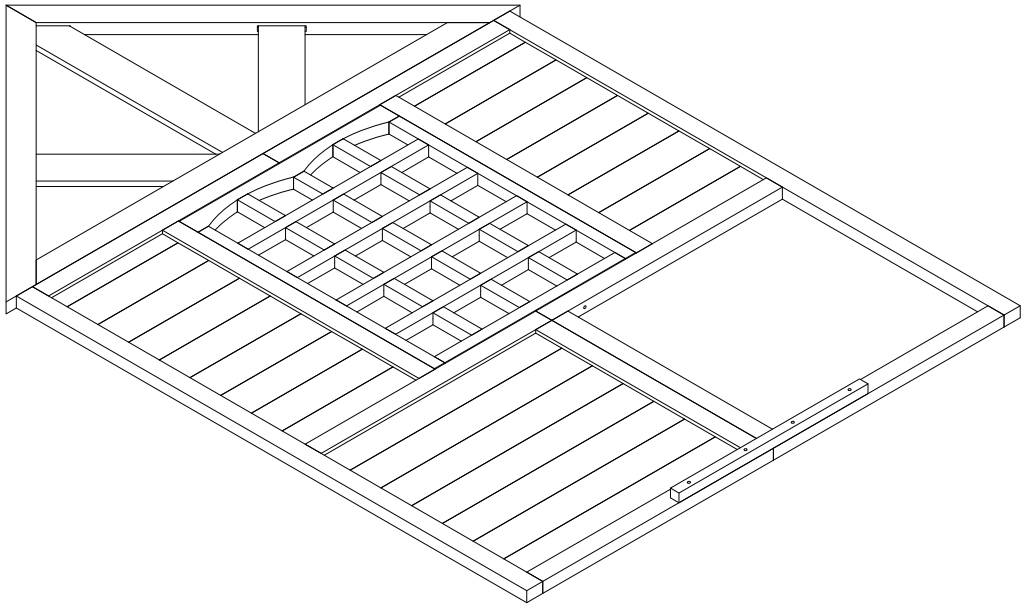


a. Assemble part (12) with parts (5) and (60) using accessory (L), then secure with screws (B).
b. Reinforce part (7) from the bottom using screws (B).
c. Fix part (47) to parts (5) and (60) using screws (E).

BX5	EX4	LX2
3.5*50	3.5*35	Ø6*20

21	 10 X1	 11 X1	 13 X1	 14 X2	






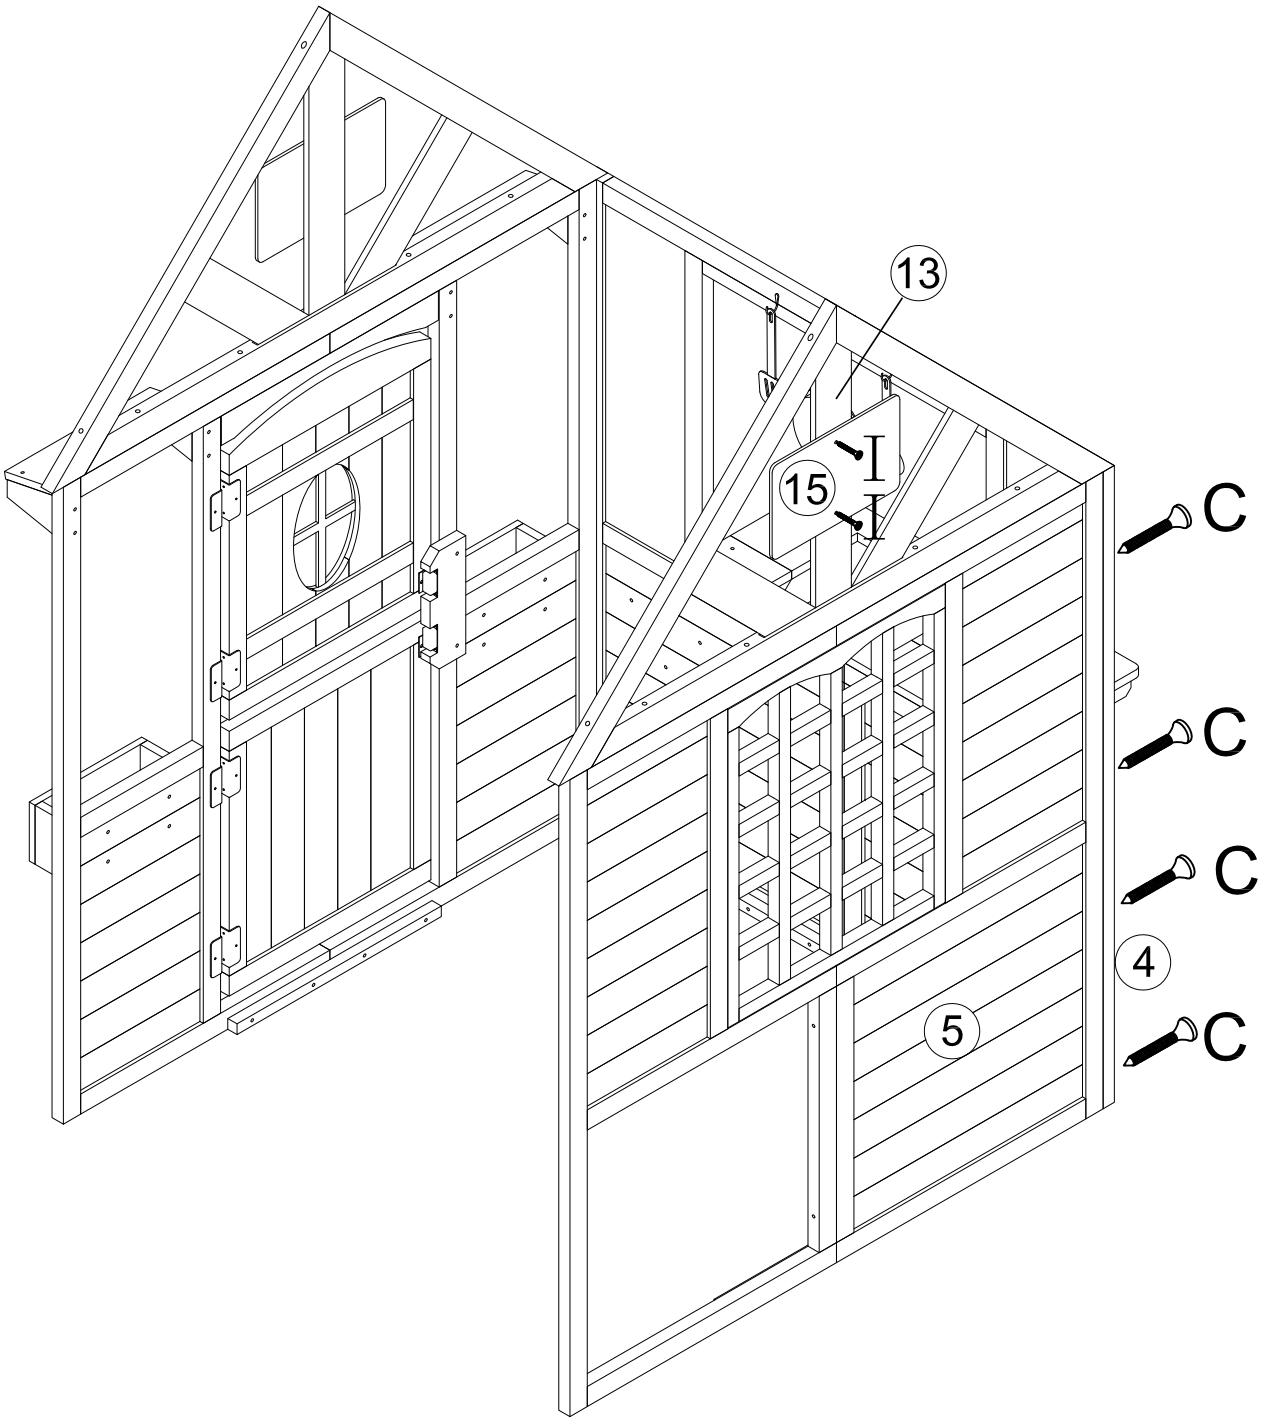
Assemble parts (10), (11), (13), and (14) with part (12), then secure with screws (A).

AX3






3.5*60

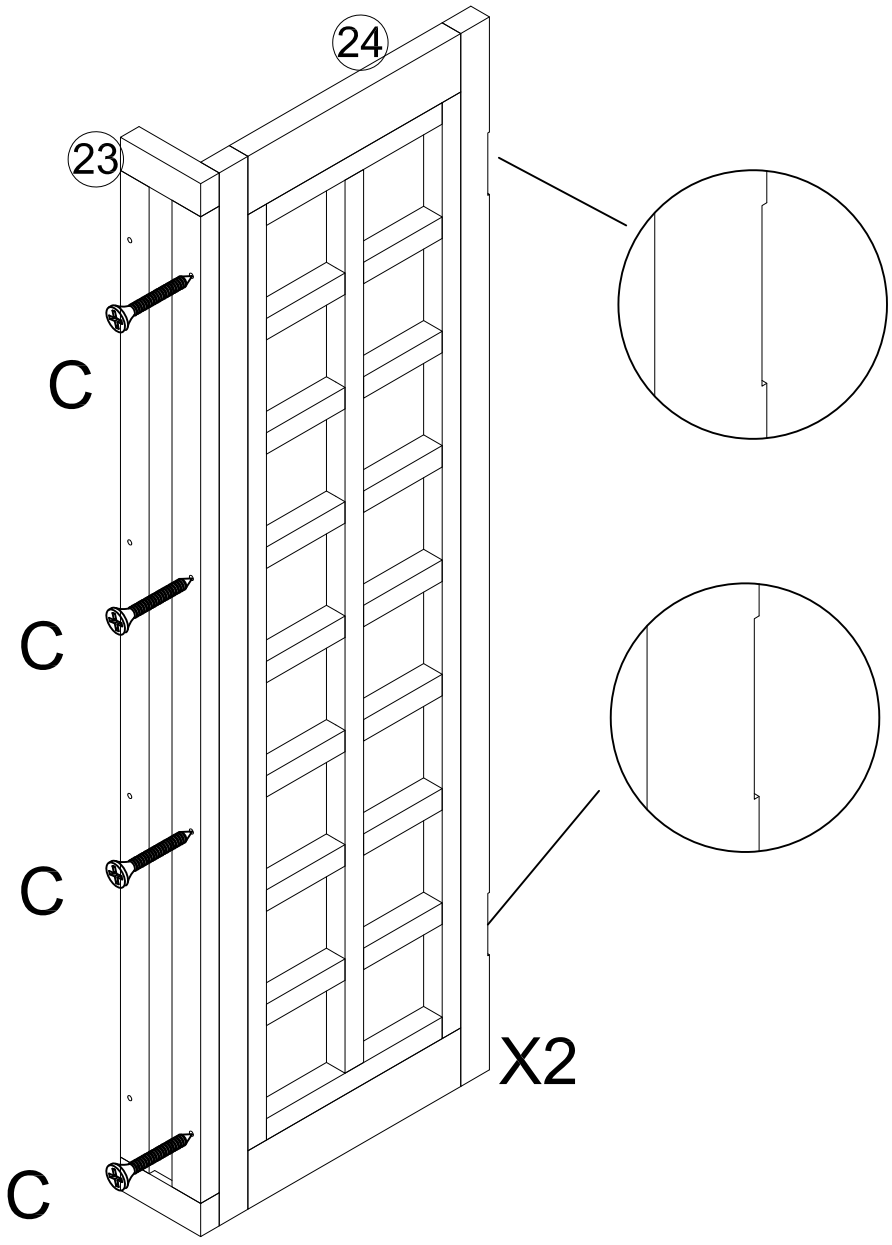
22	 15 X1					



a. Fix part (4) to part (5) using screws (C).
b. Fix part (15) to part (13) using screws (I).

CX4	IX2
 3.5*45	 3*12

23	 23 X2	 24 X2				



Fix part (23) to part (24) using screws (C).

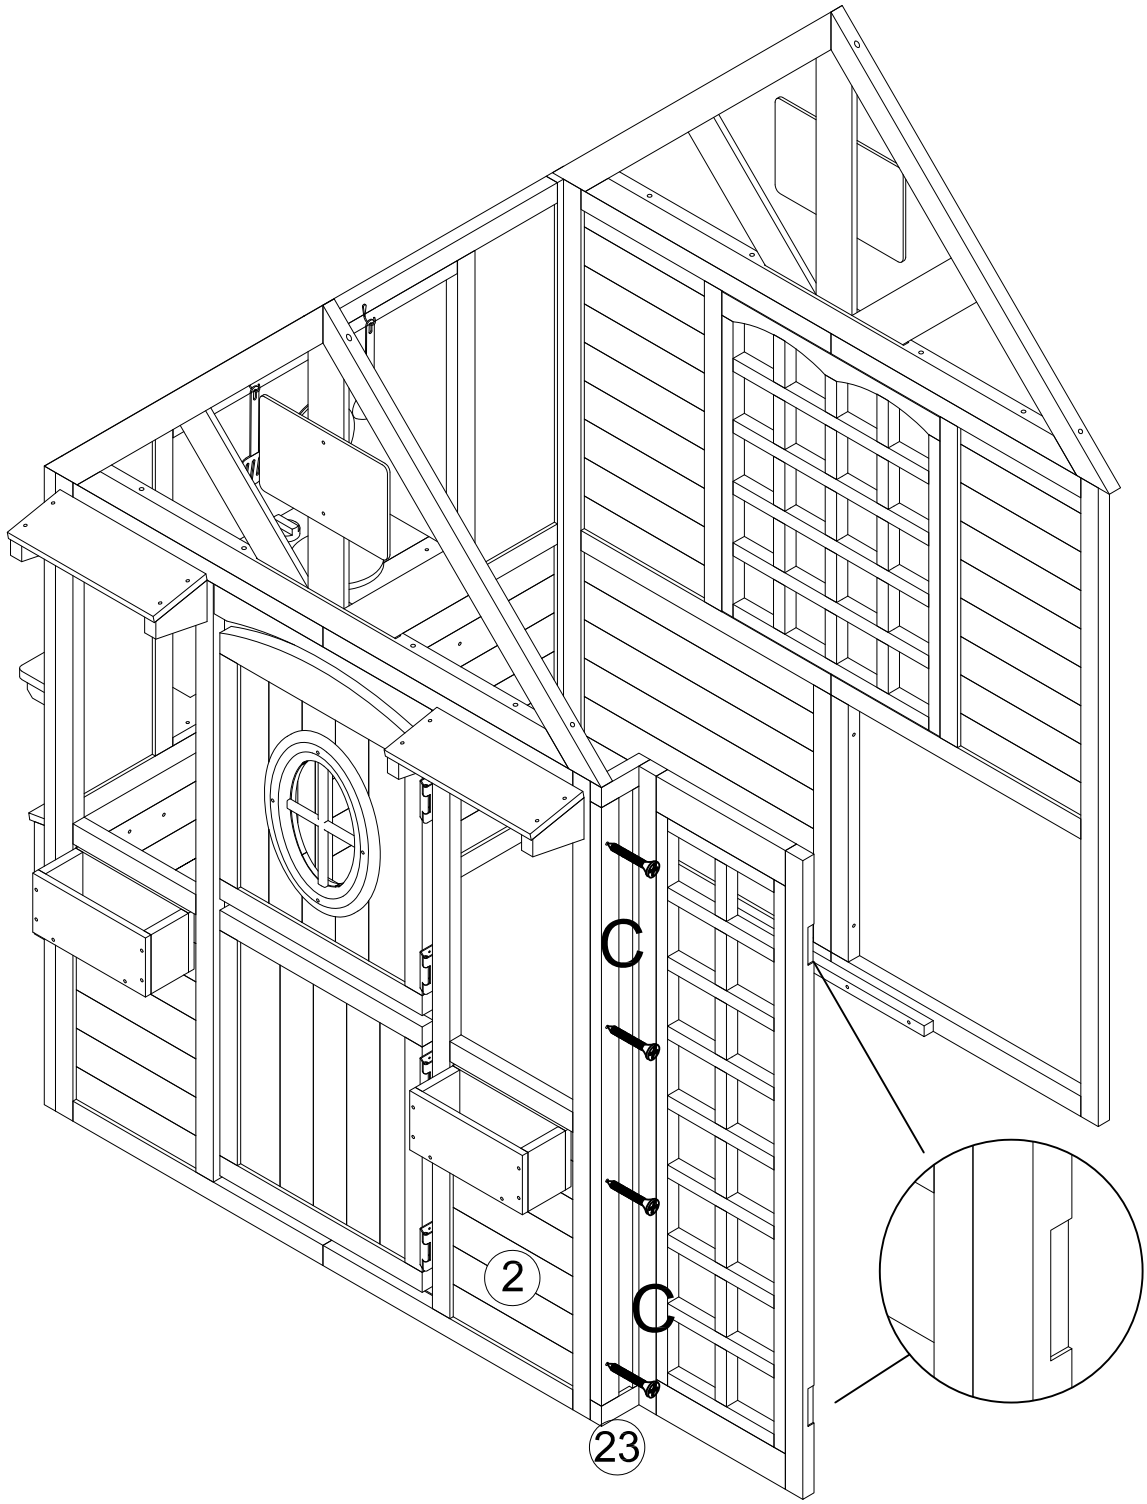
Note: Ensure the open side of part (24) faces outward.

CX8



3.5*45

24



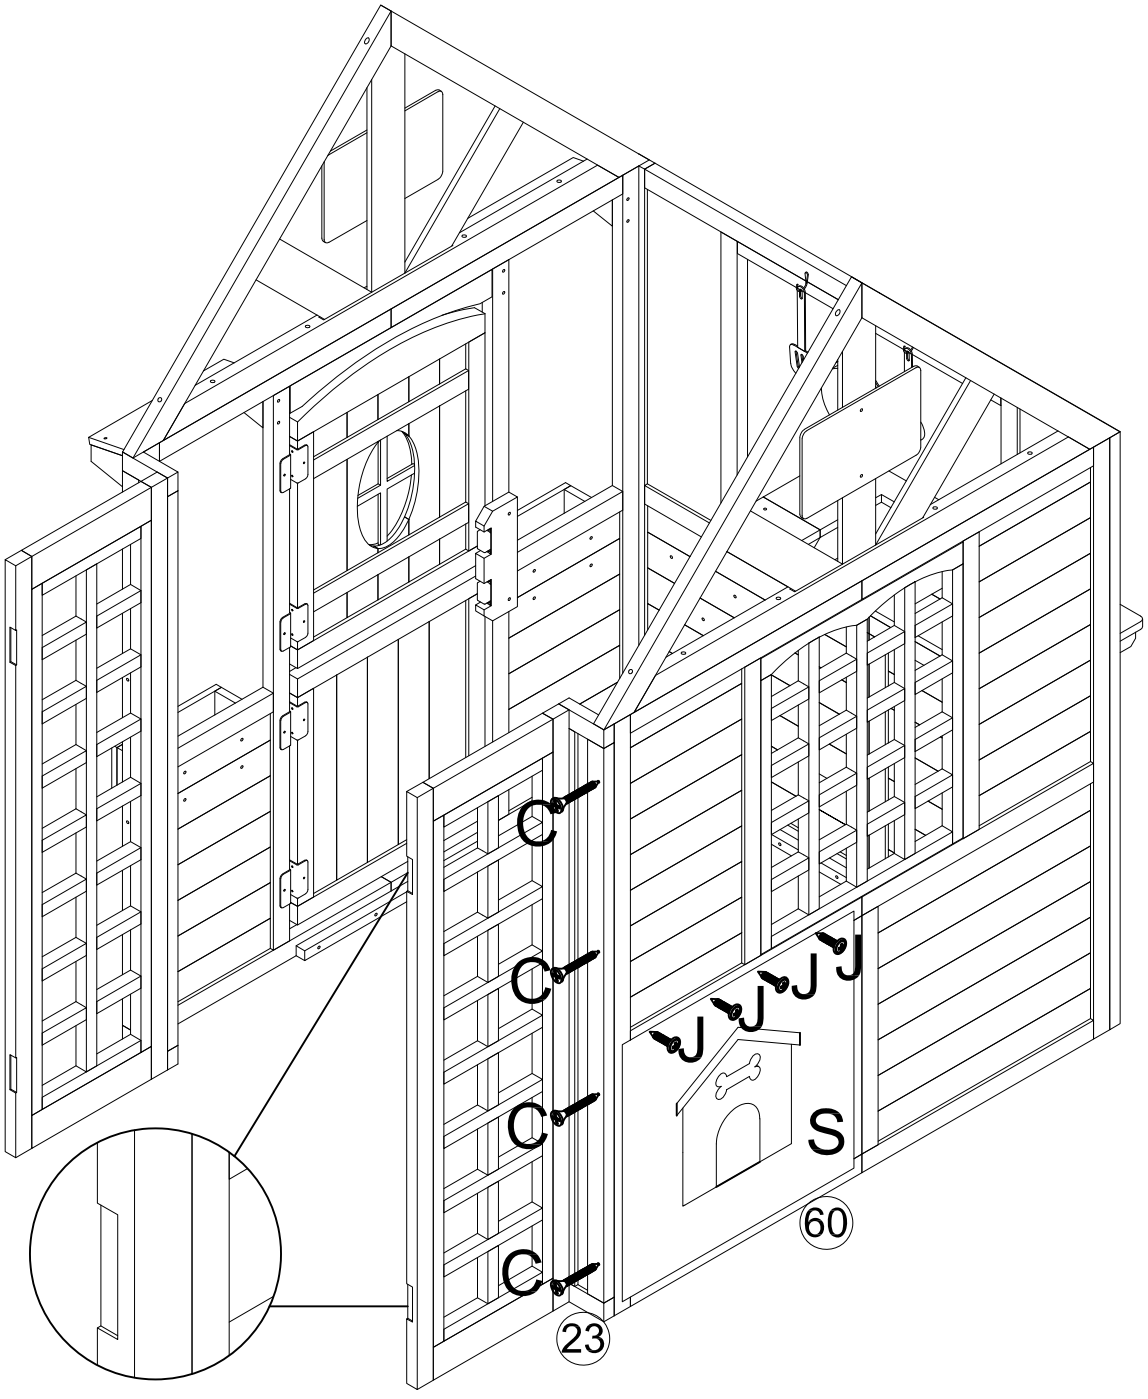
Fix part (23) to part (2) using screws (C).

CX4





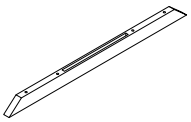
3.5*45

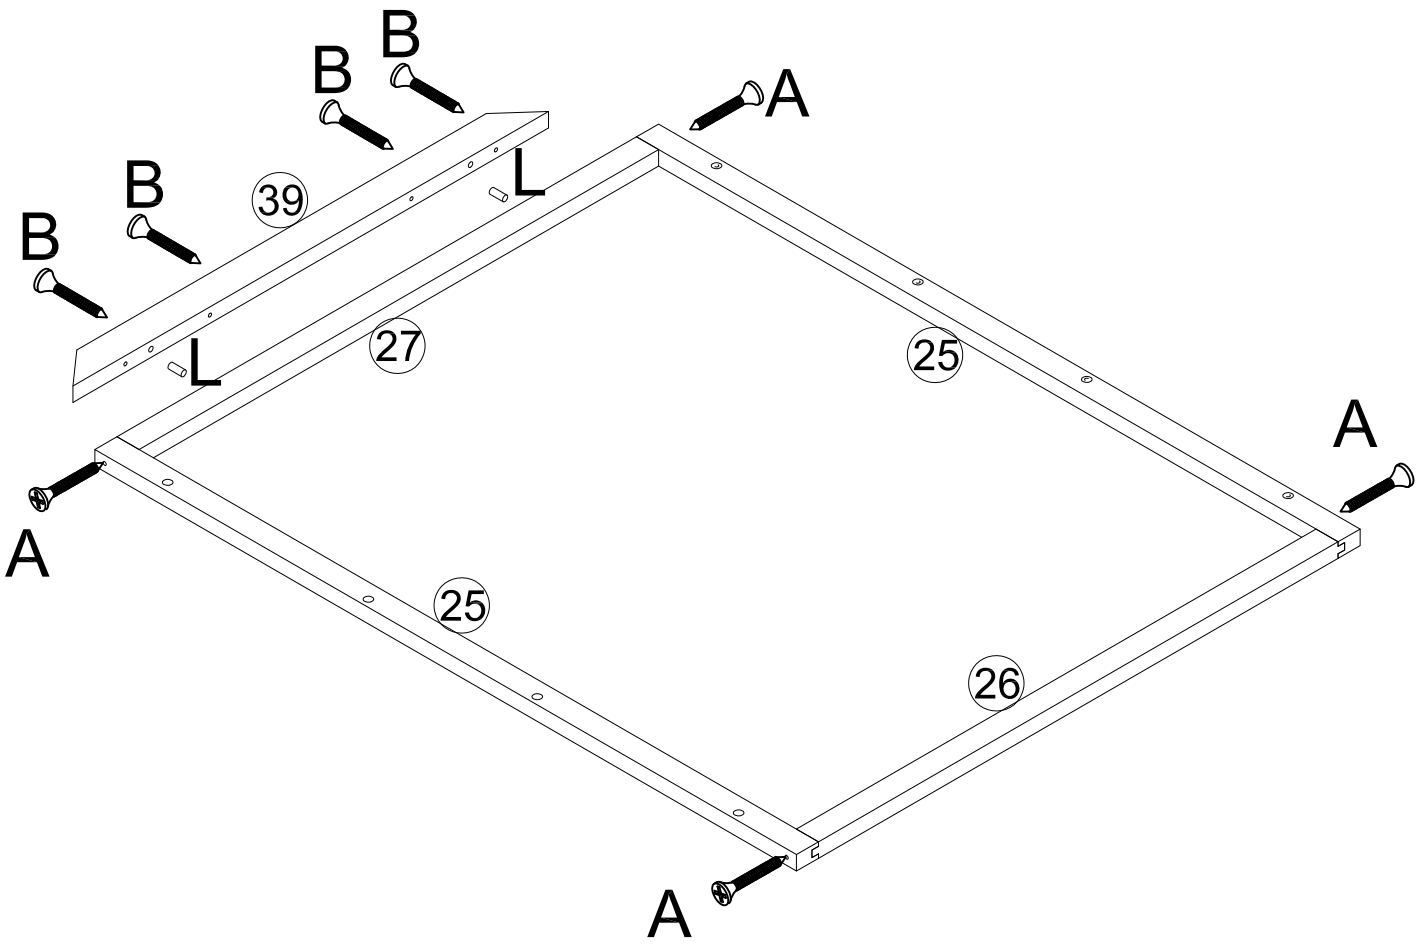
25						




a. Fix part (23) to part (60) using screws (C).
b. Fix accessory (S) to part (60) using screws (J).




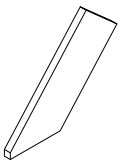
CX4	JX4	SX1
 3.5*45	 3*15	

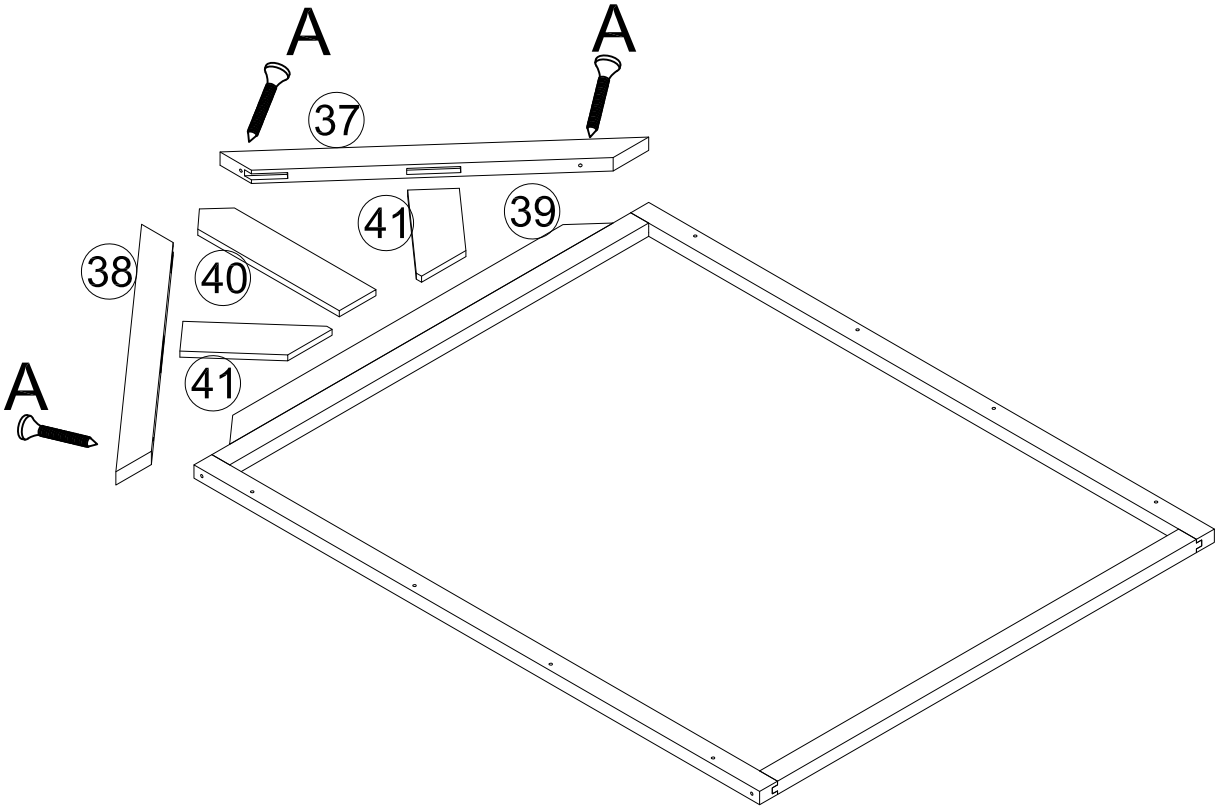
26	25 X2	 26 X1	 27 X1	 39 X1		

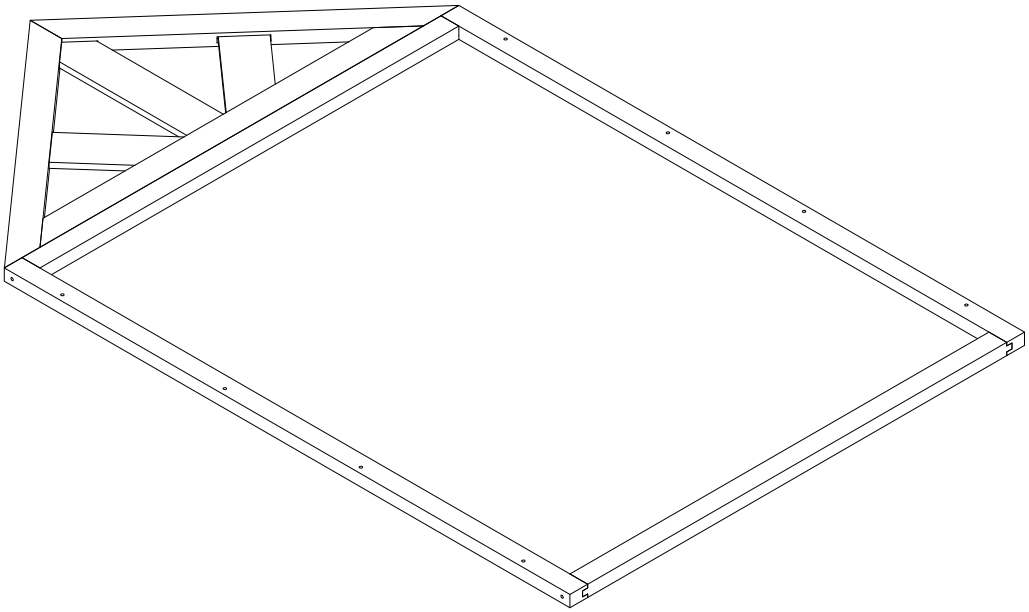


a. Assemble part (39) with part (27) using accessory (L), then secure with screws (B).
b. Assemble parts (25), (26), and (27), then secure with screws (A).

AX4	BX4	LX2
 3.5*60	 3.5*50	 Ø6*20

27	 37 X1	 38 X1	 40 X1	 41 X2		





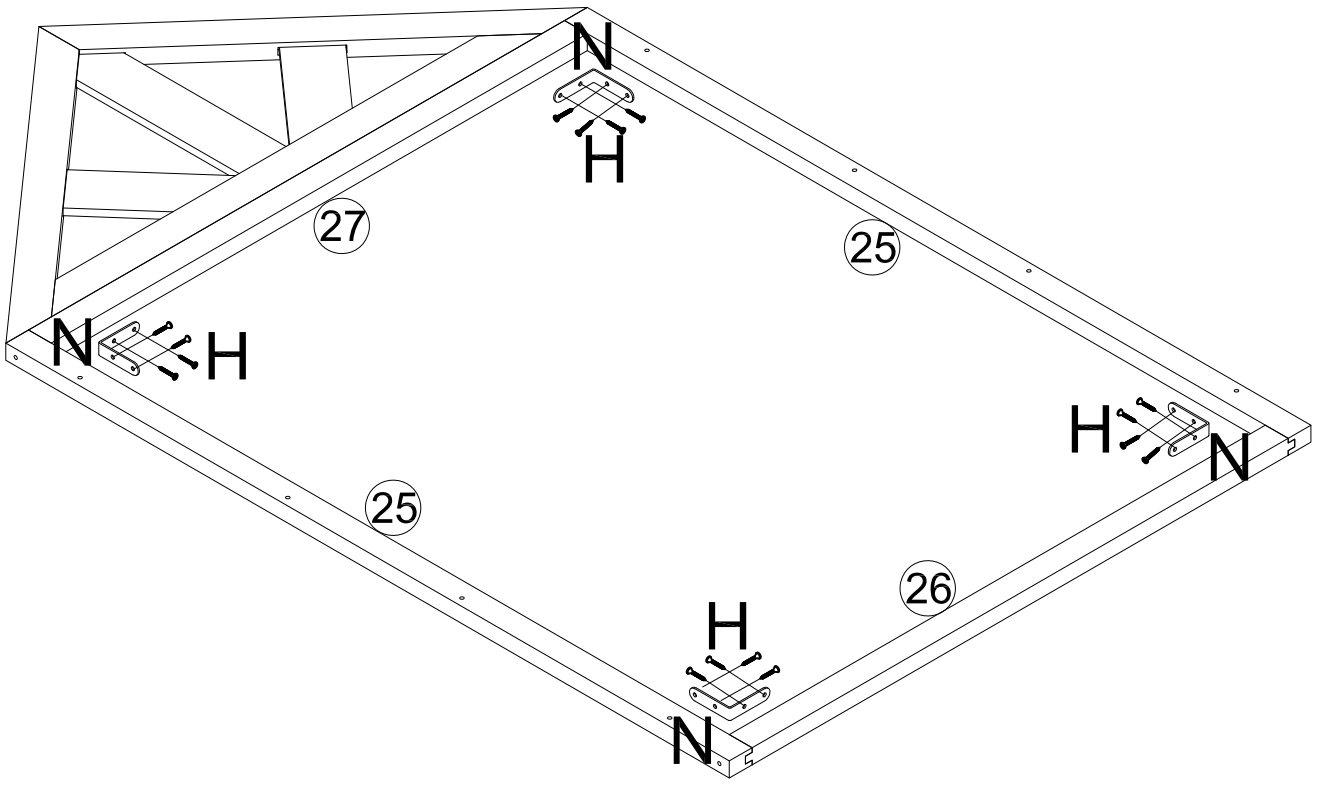
Assemble parts (37), (38), (40), and (41) with part (39), then secure with screws (A) (as shown).

AX3






3.5*60

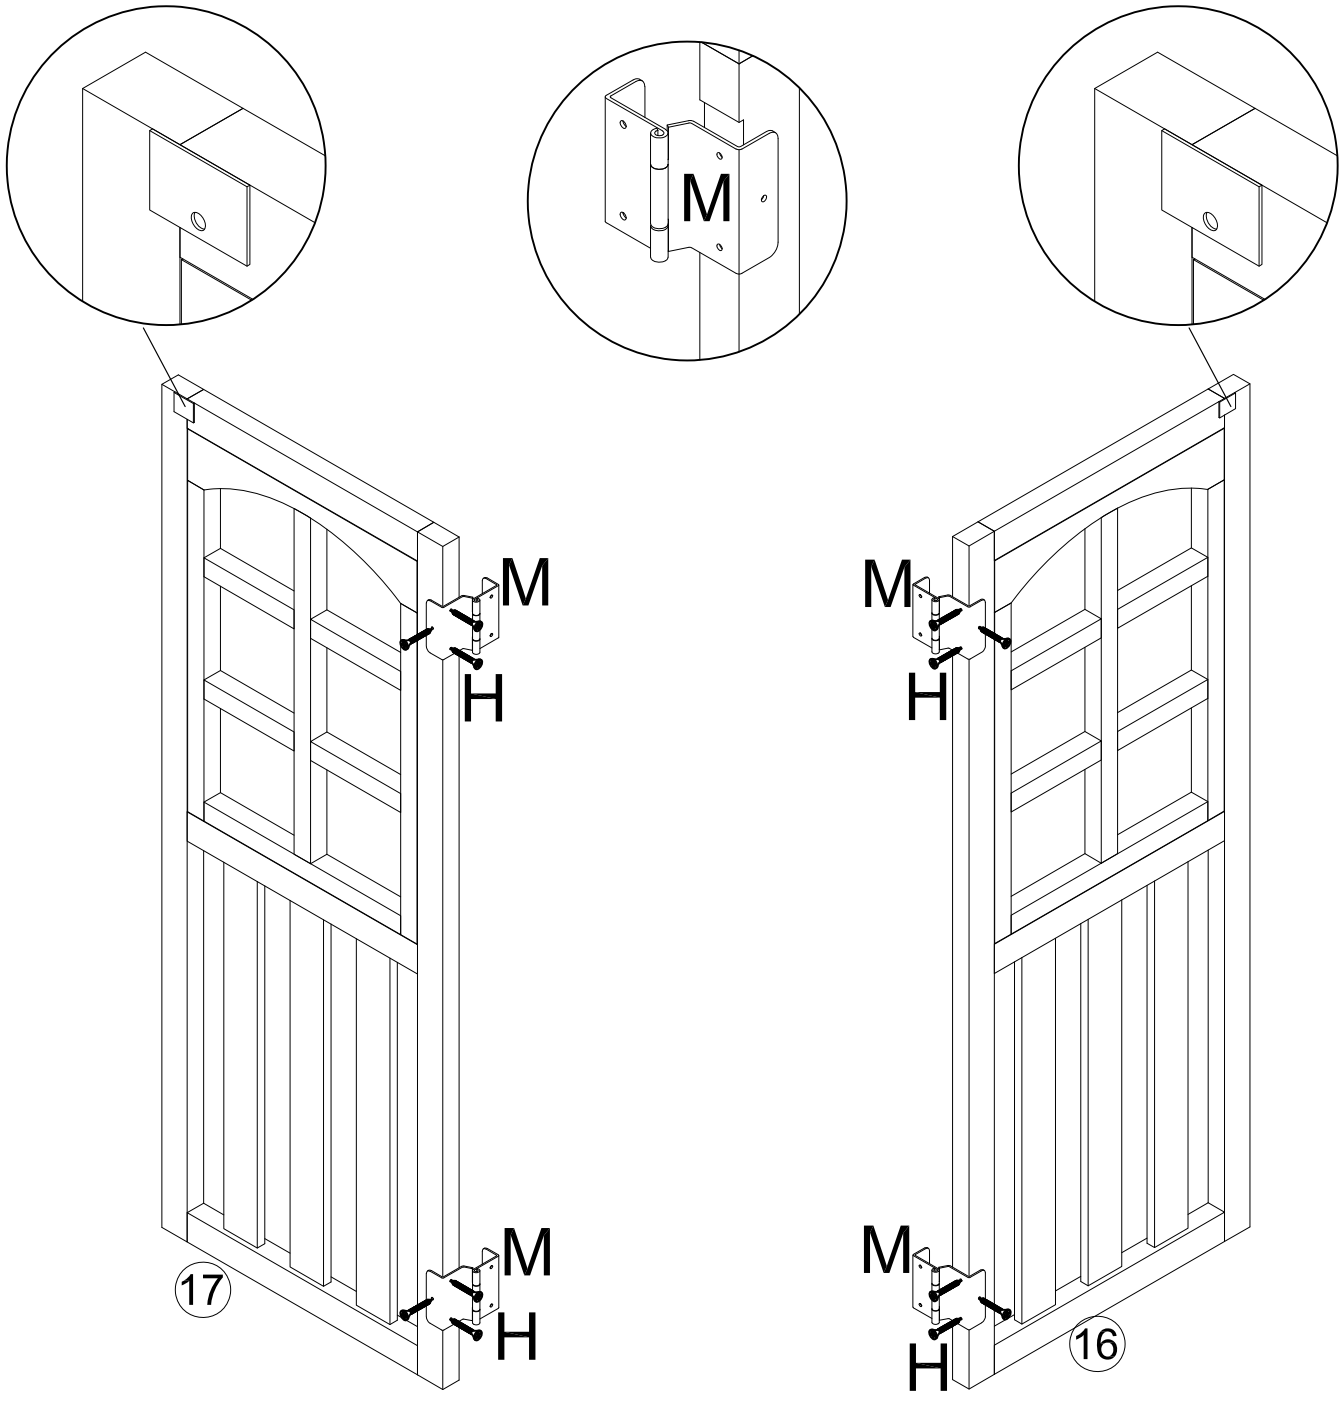
28						



Fix accessory (N) to the corners of parts (25), (26), and (27) using screws (H) (as shown).


HX16	NX4
 3*18	

29	 16 X1	 17 X1				

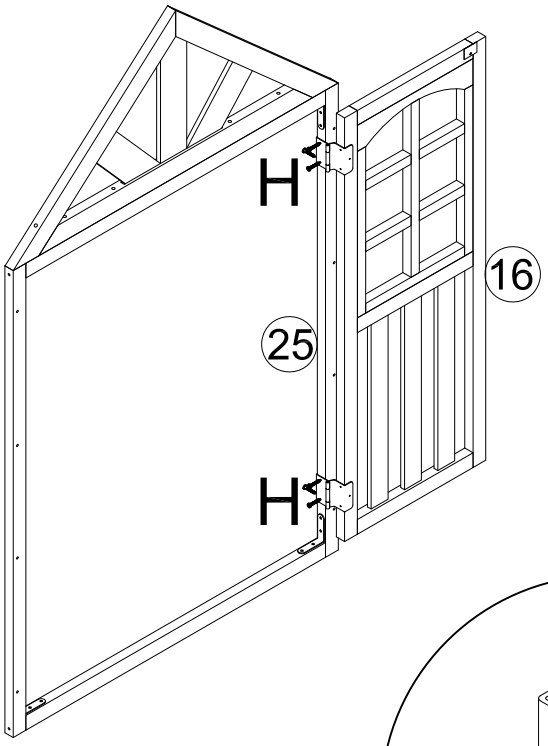


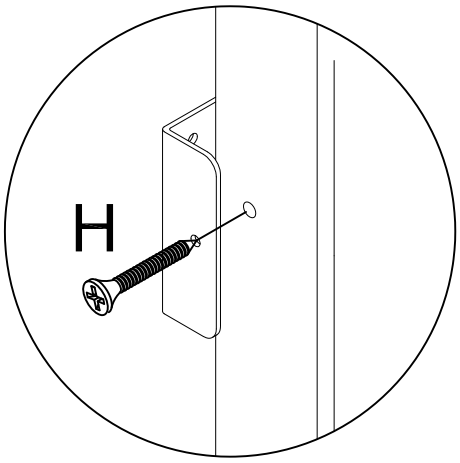
Attach accessory (M) to parts (16) and (17) using screws (H).

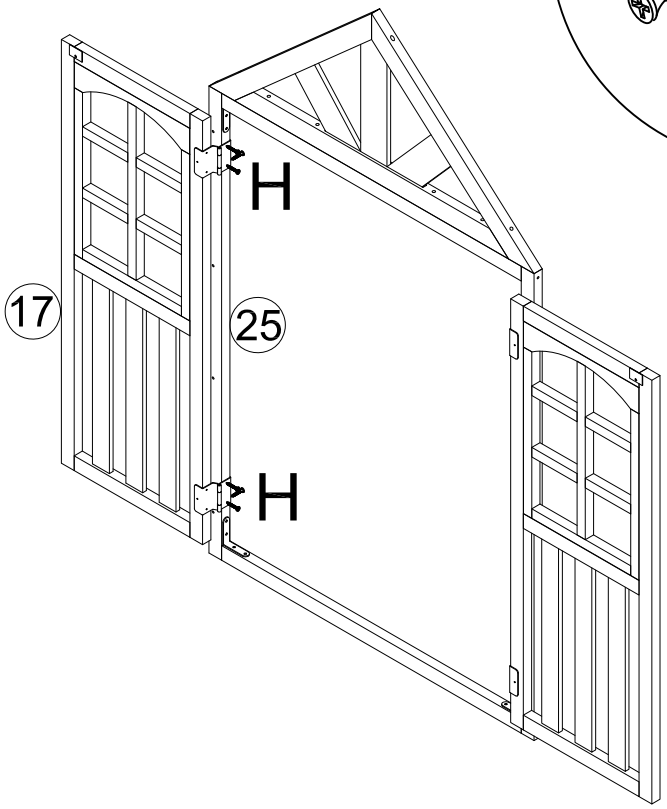
Note: Insert into slot as shown.

HX12	MX4
 3*18	

30						








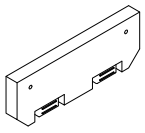
Fix parts (16) and (17) to part (25) using screws (H).

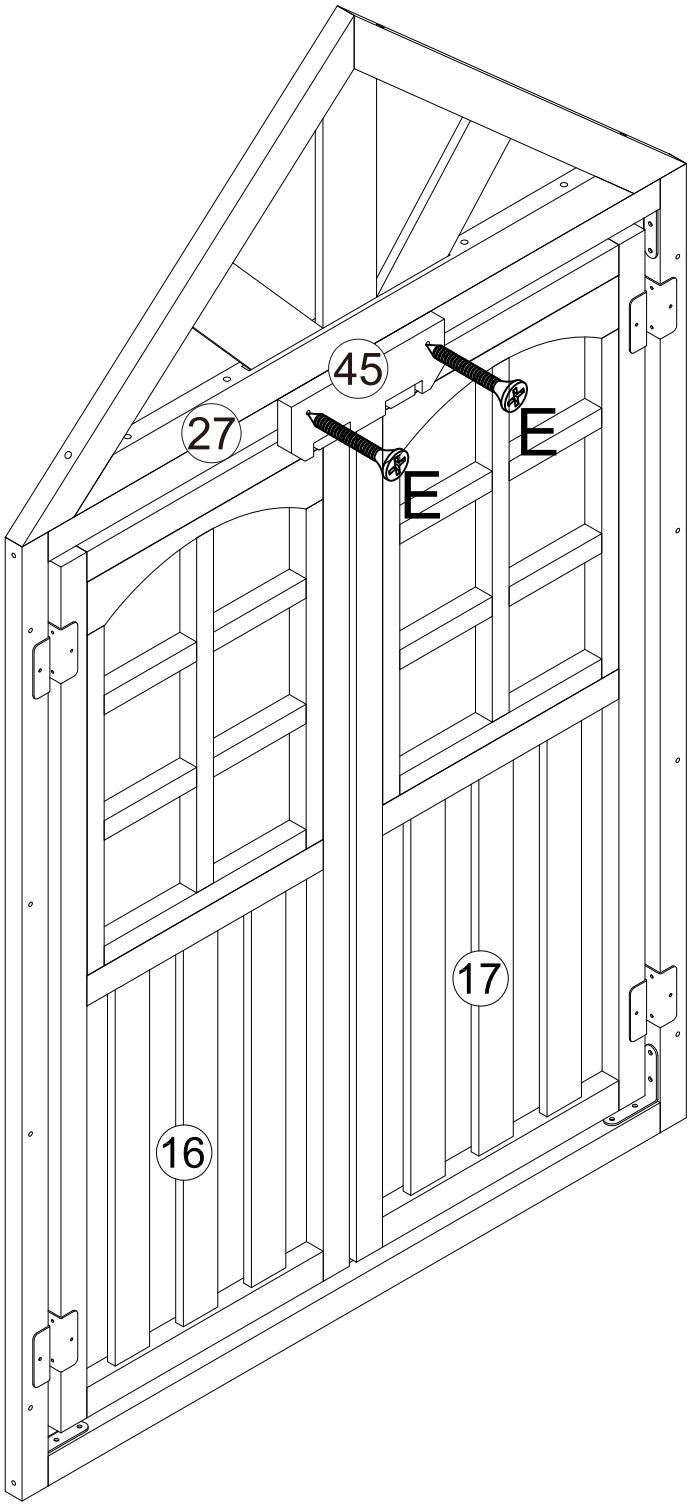
Note: Align with pilot holes.

HX12



3*18

31	 45 X1					



Fix part (45) to part (27) using screws (E).

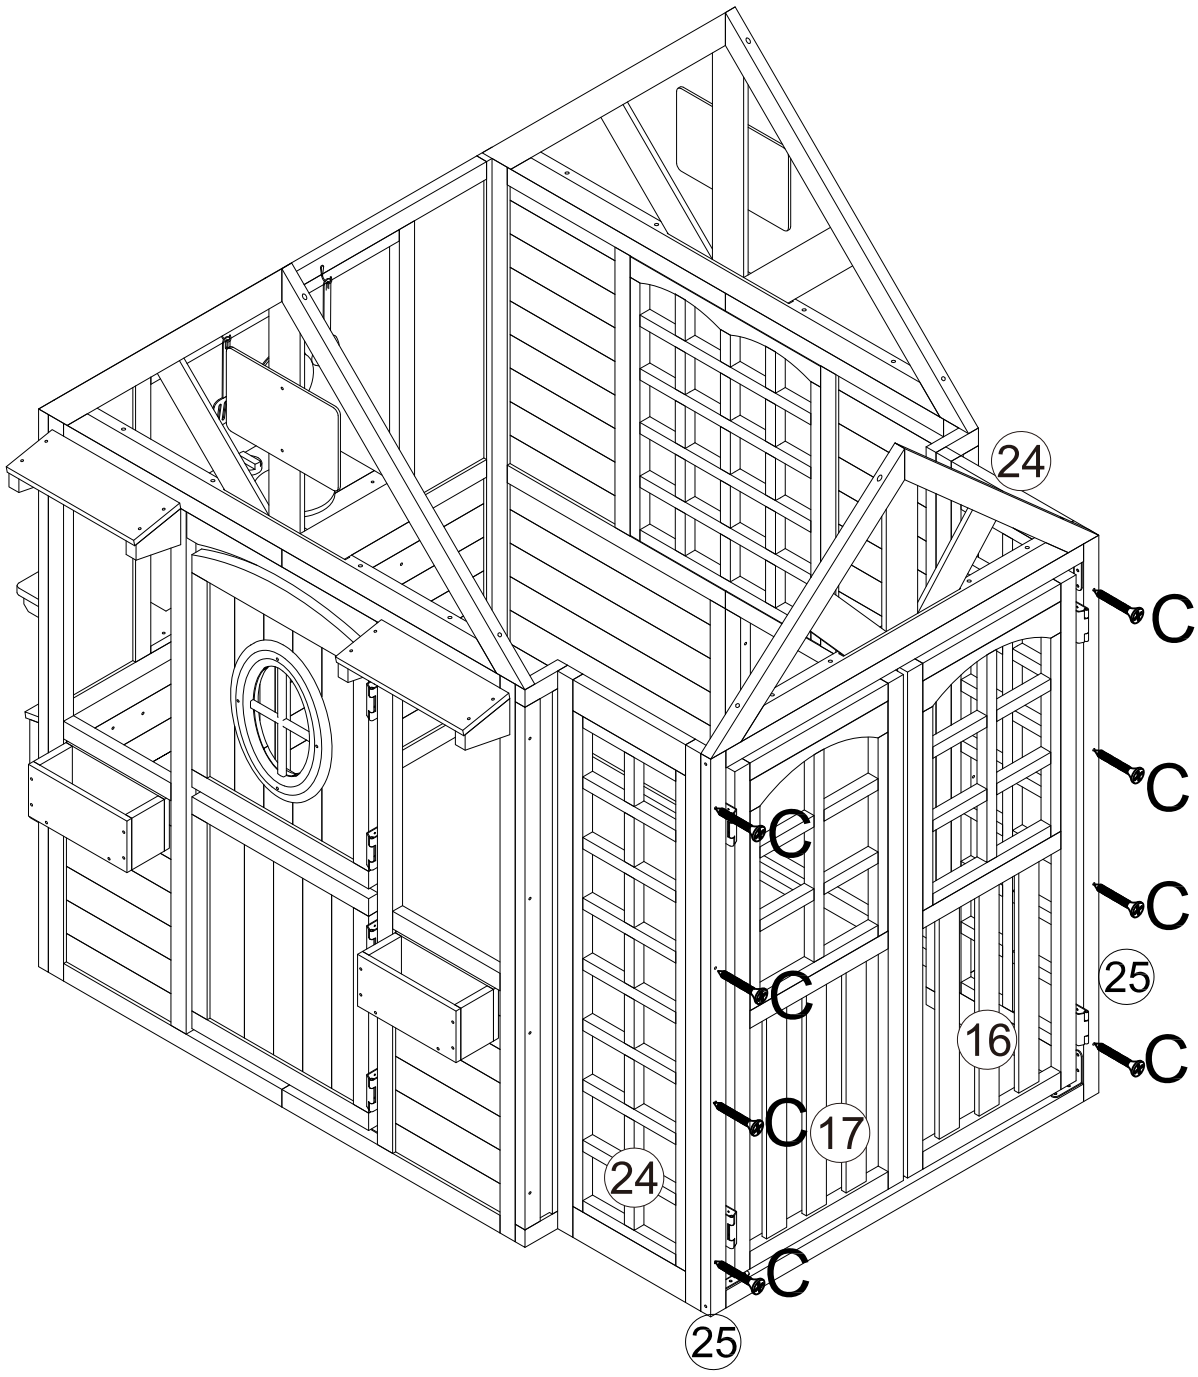
Note: Align with magnetic catches on parts (16) and (17).

EX2




3.5*35

32						



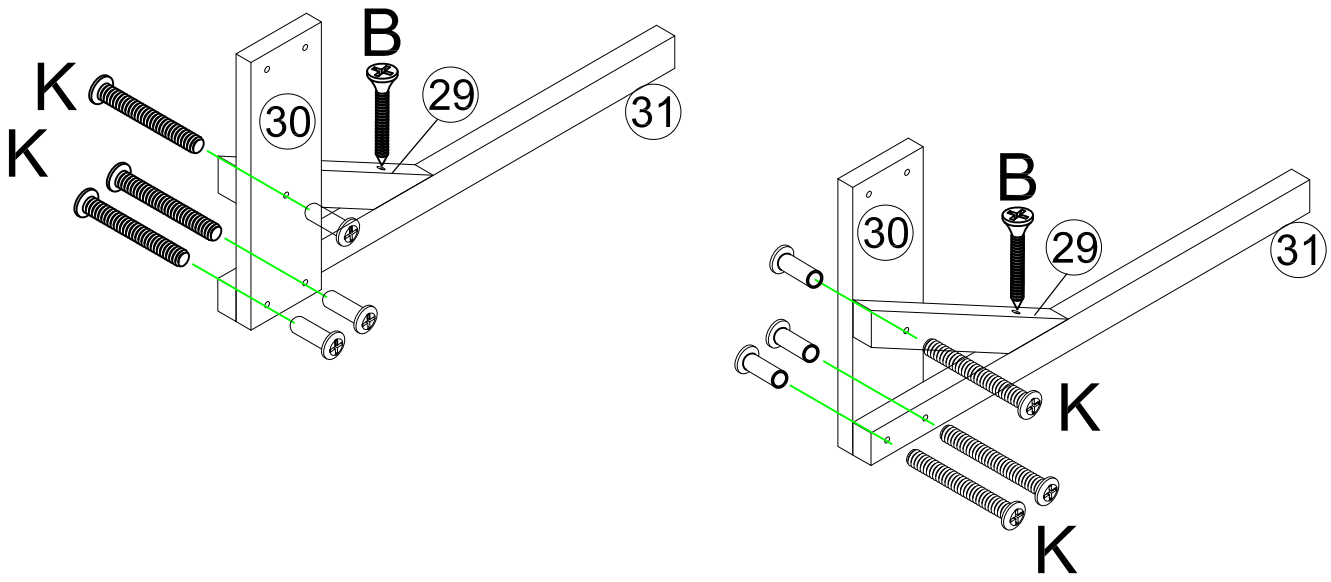
Fix part (25) to part (24) using screws (C) (as shown).

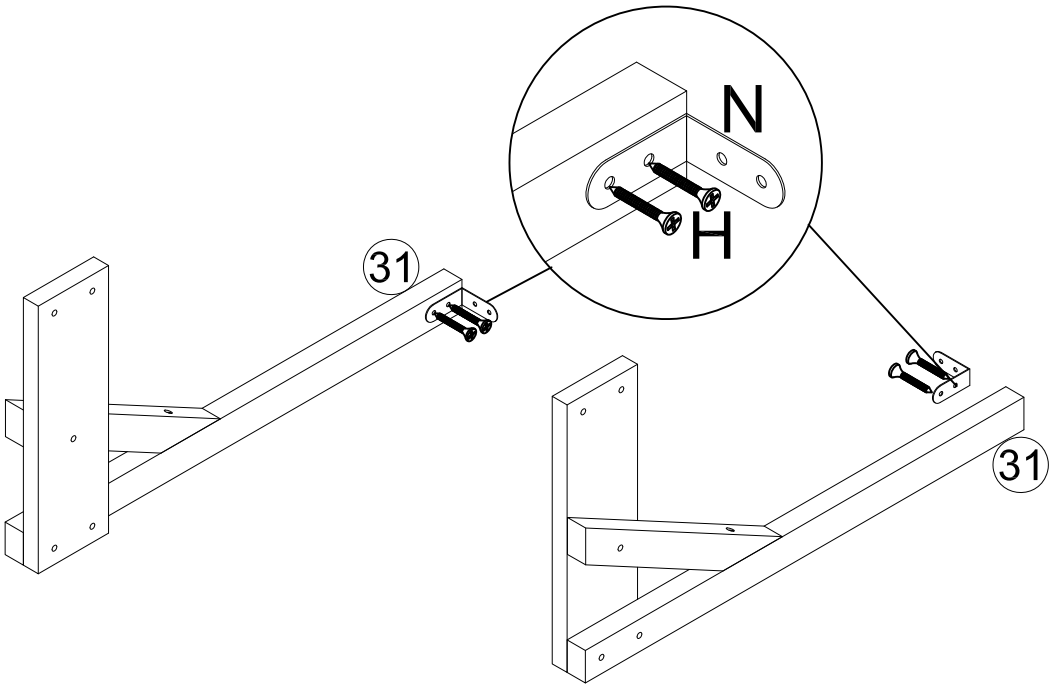
CX8



3.5*45

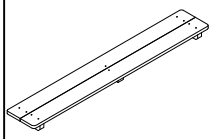

33	29 X2	30 X2	31 X2			

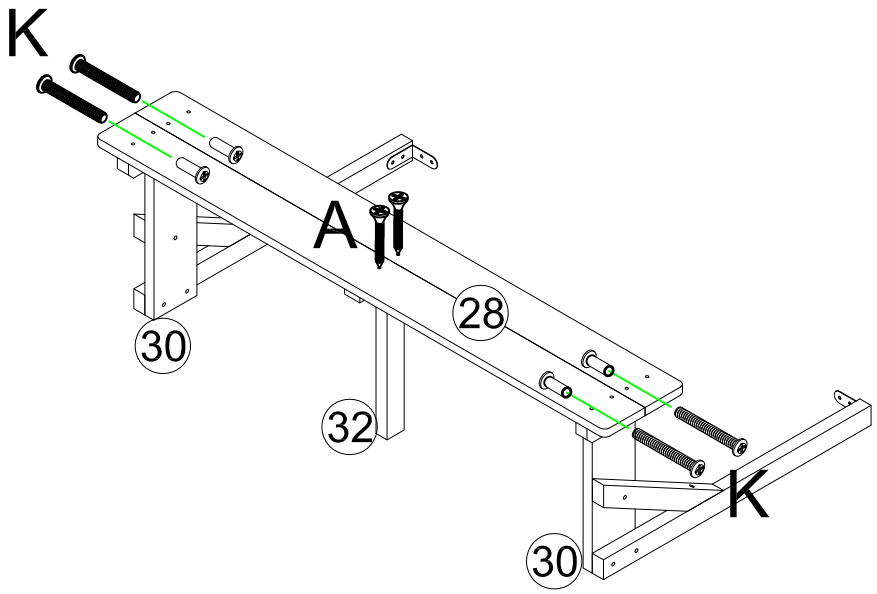


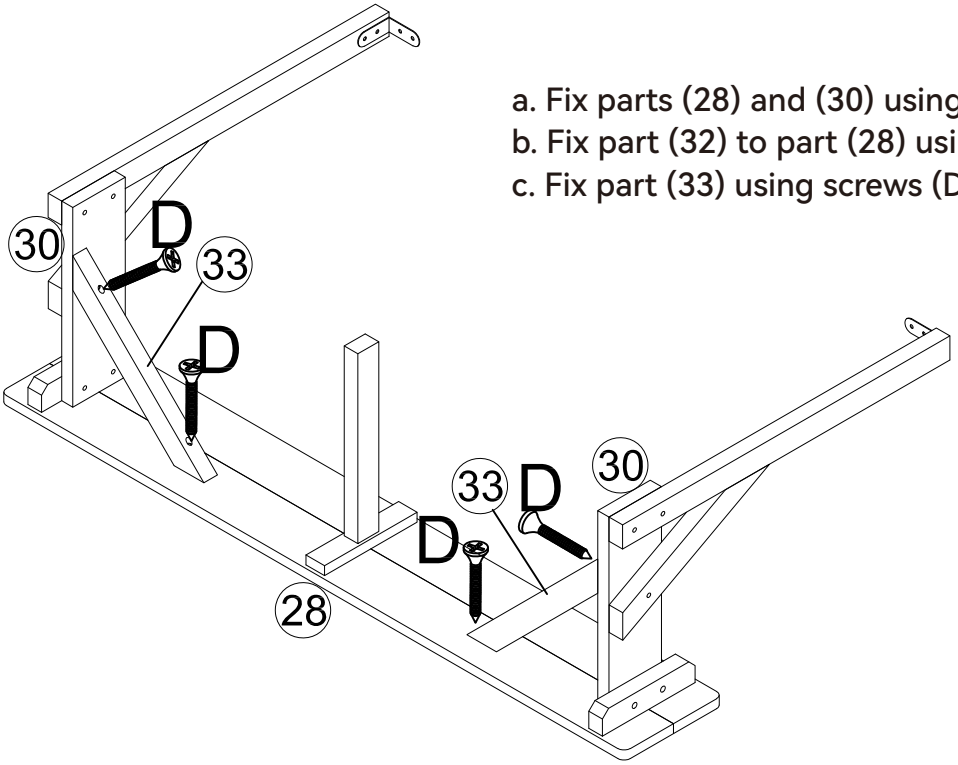


a. Fix parts (29), (30), and (31) using bolts (K) (as shown).
b. Reinforce part (31) using screws (B).
c. Fix accessory (N) to part (31) using screws (H).


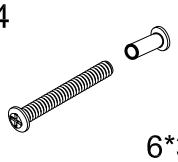
BX2	HX4	KX6	NX2
3.5*50	3*18	6*30	

34	 28 X1	 32 X1	 33 X2			

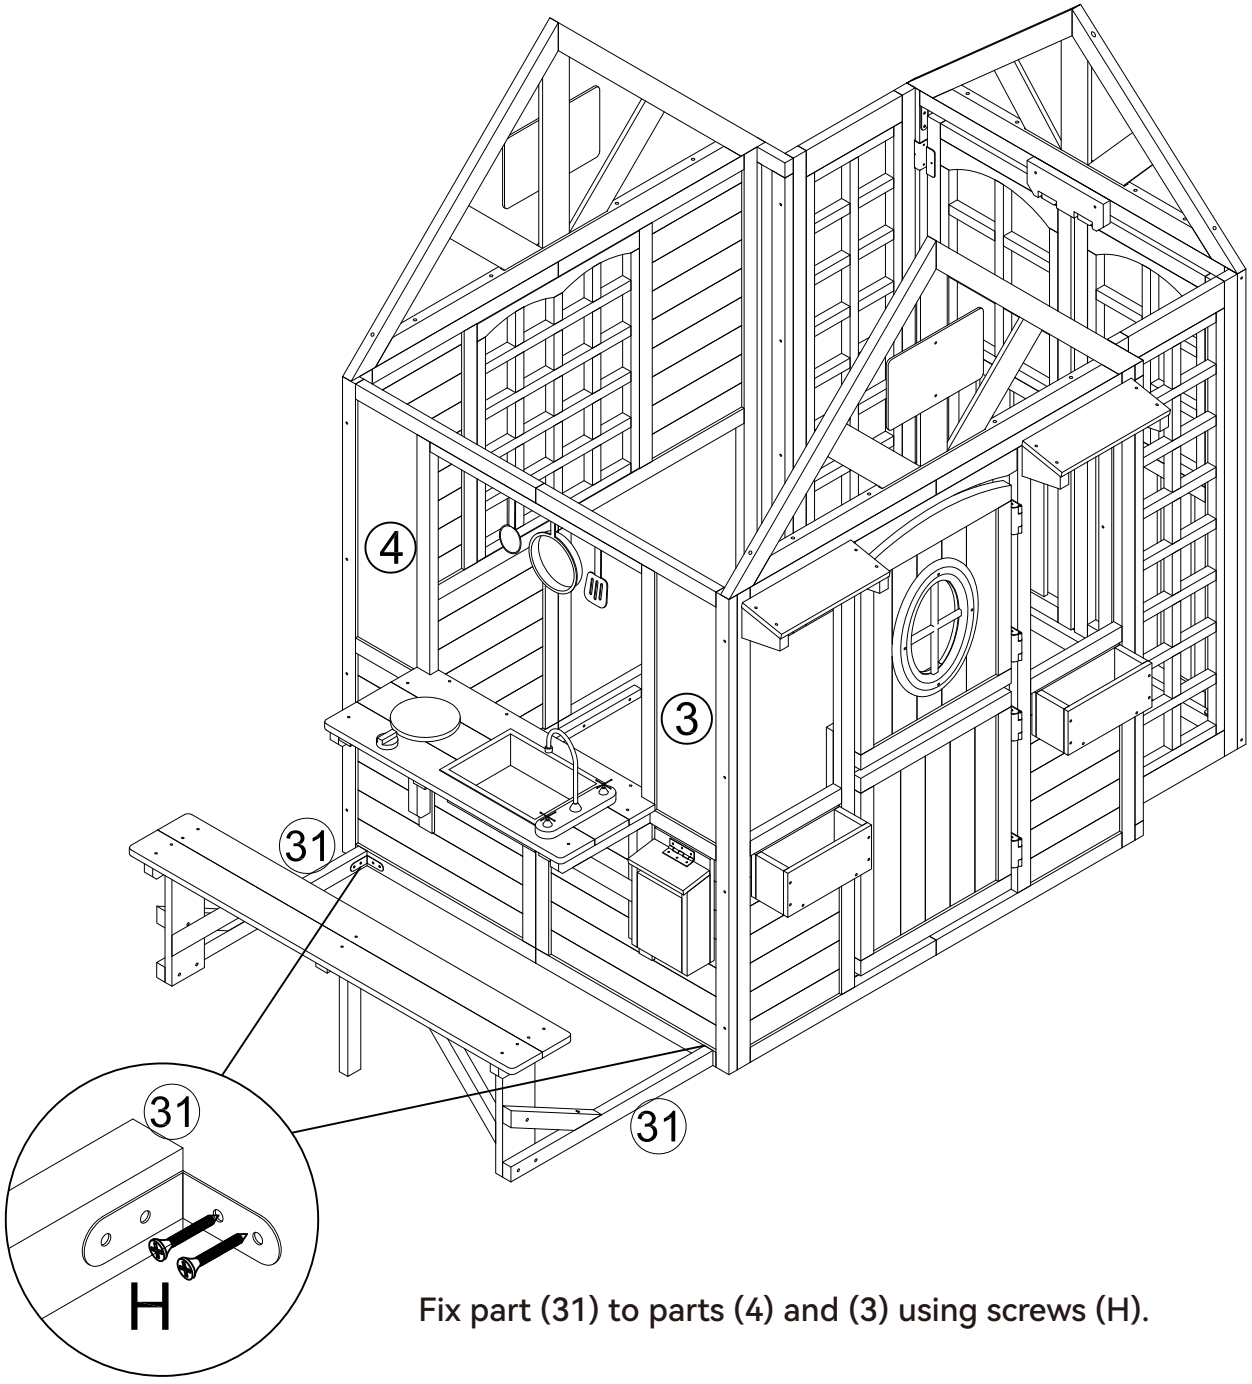




a. Fix parts (28) and (30) using bolts (K).
b. Fix part (32) to part (28) using screws (A).
c. Fix part (33) using screws (D) (as shown).

AX2	DX4	KX4
 3.5*60	 3.5*40	 6*30

35						

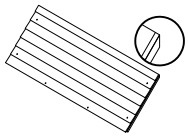
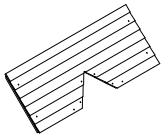


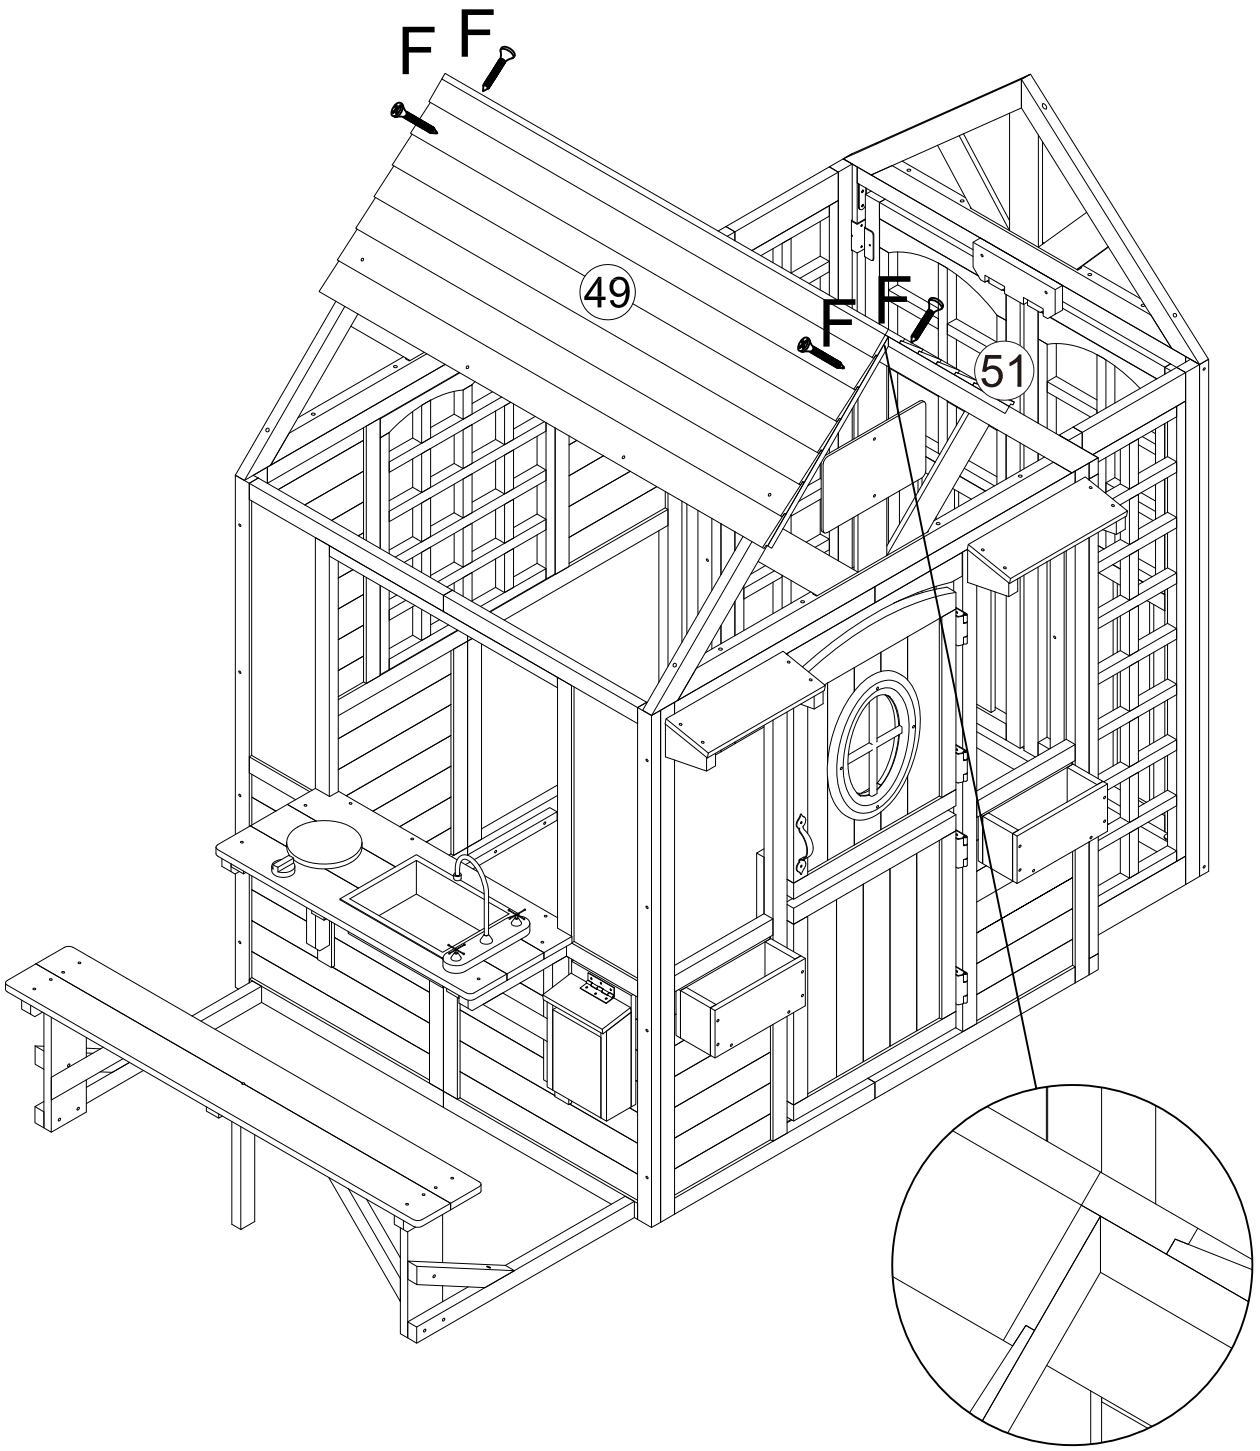
Fix part (31) to parts (4) and (3) using screws (H).

HX4



3*18

36	 49 X1	 51 X1				

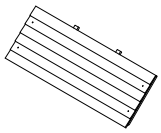


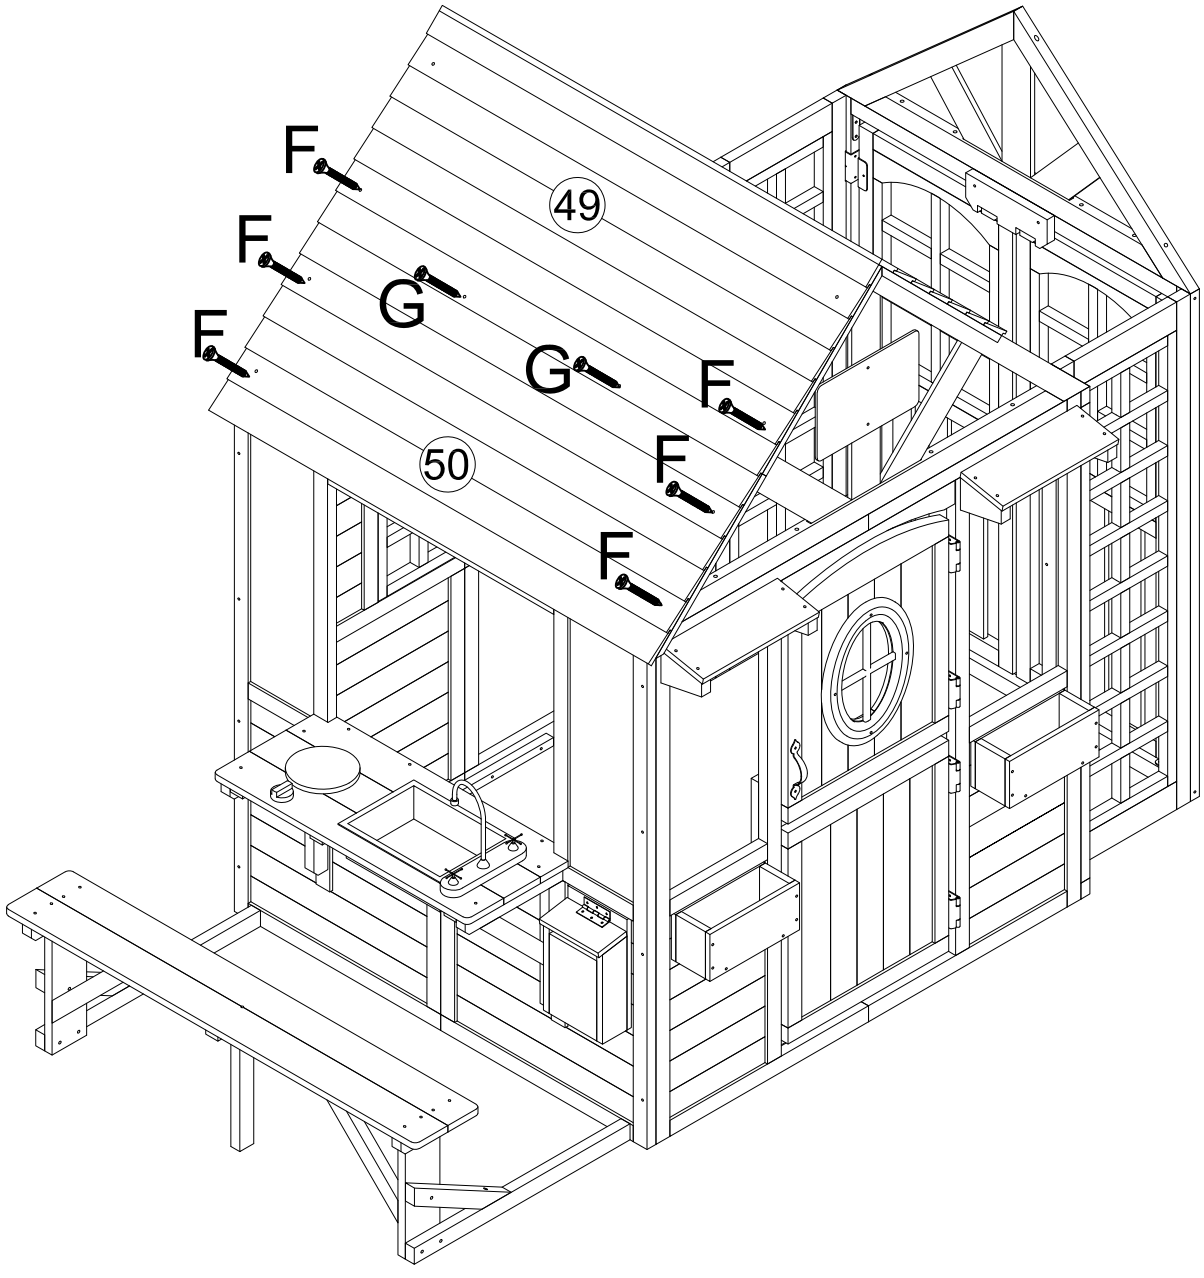
Fix parts (49) and (51) using screws (F) (as shown).

FX4




3.5*30

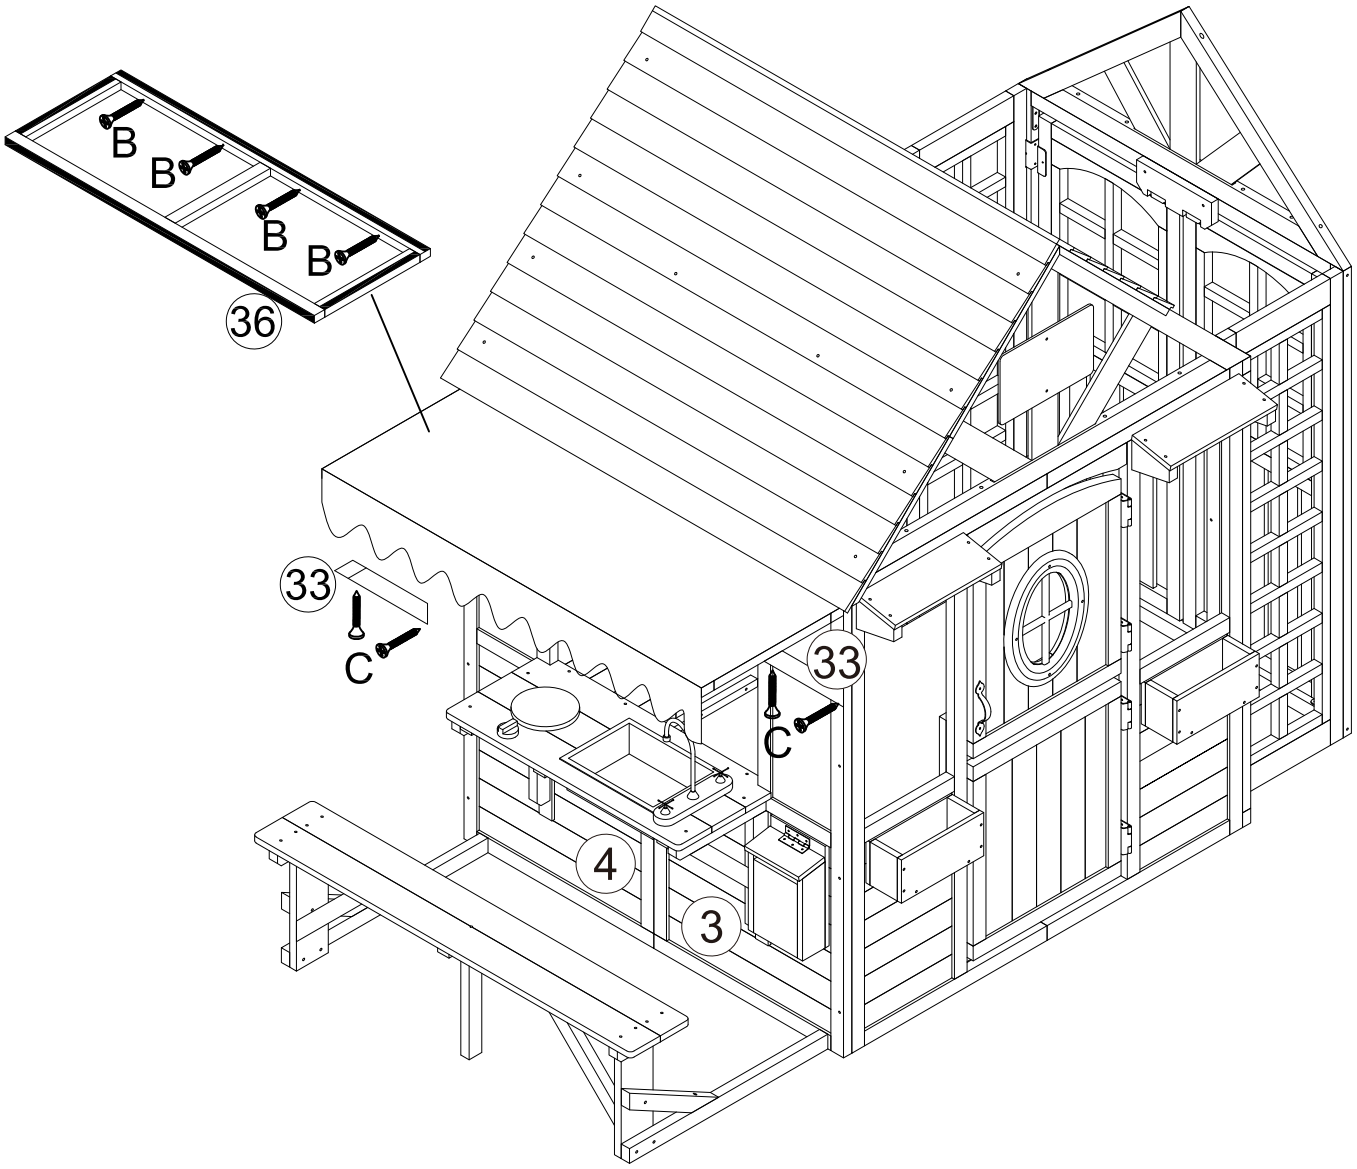
37	 50 X1					



Connect parts (49) and (50) using screws (G), then secure with screws (F).

FX6	GX2
 3.5*30	 3*22

38	 33 X2					

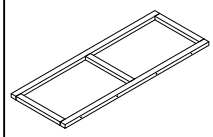


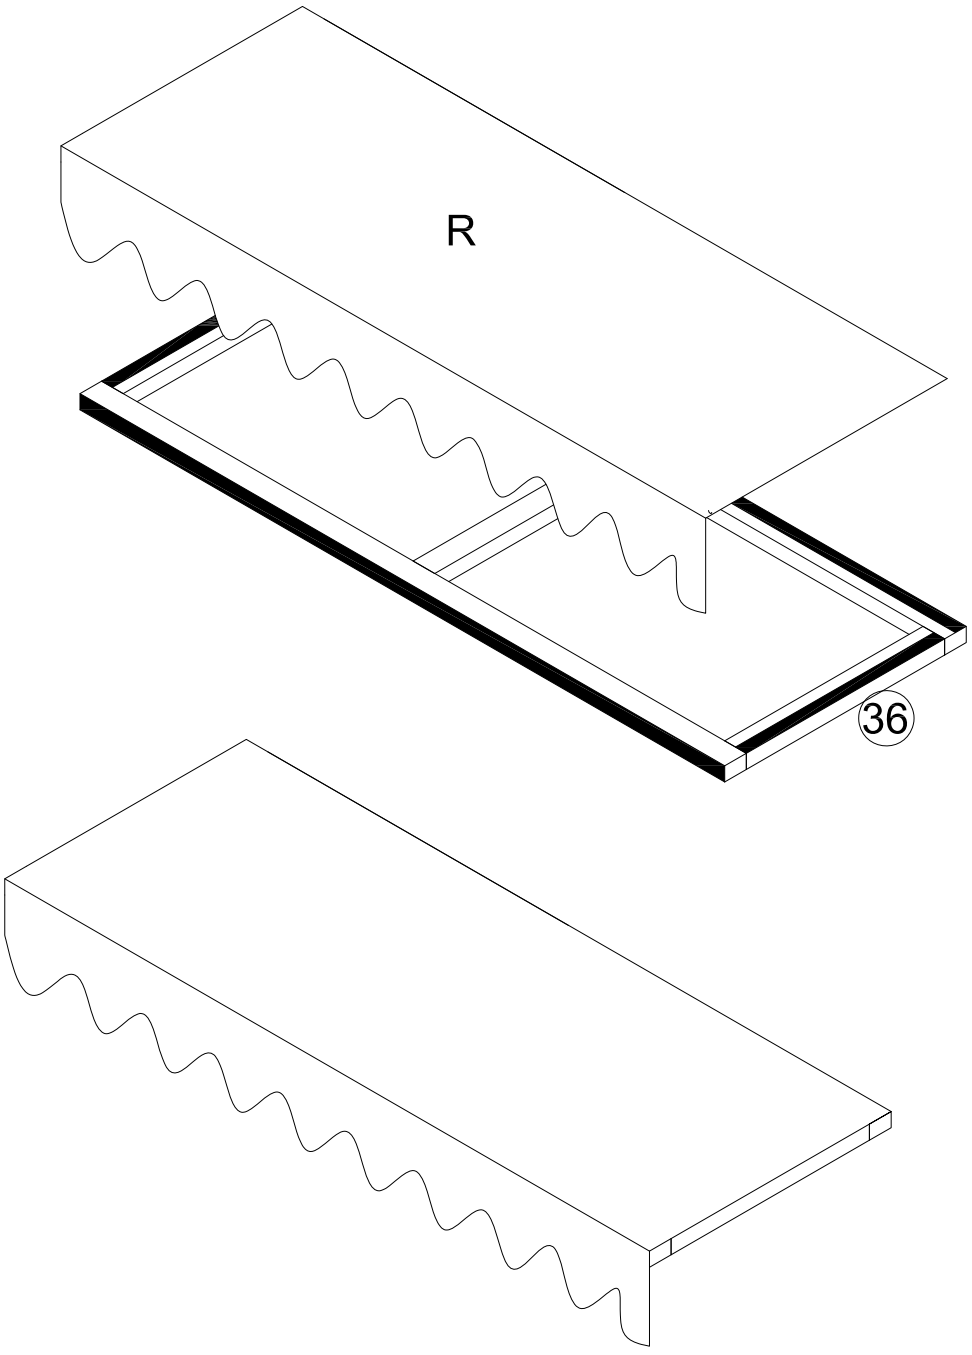
a. Fix part (36) to parts (4) and (3) using screws (B).

Note: Tighten screws from underneath accessory (R).

b. Fix part (33) to parts (4), (3), and (36) using screws (C) (as shown).

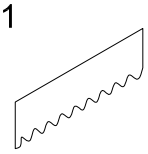
BX4	CX4
 3.5*50	 3.5*45



39	 36 X1					

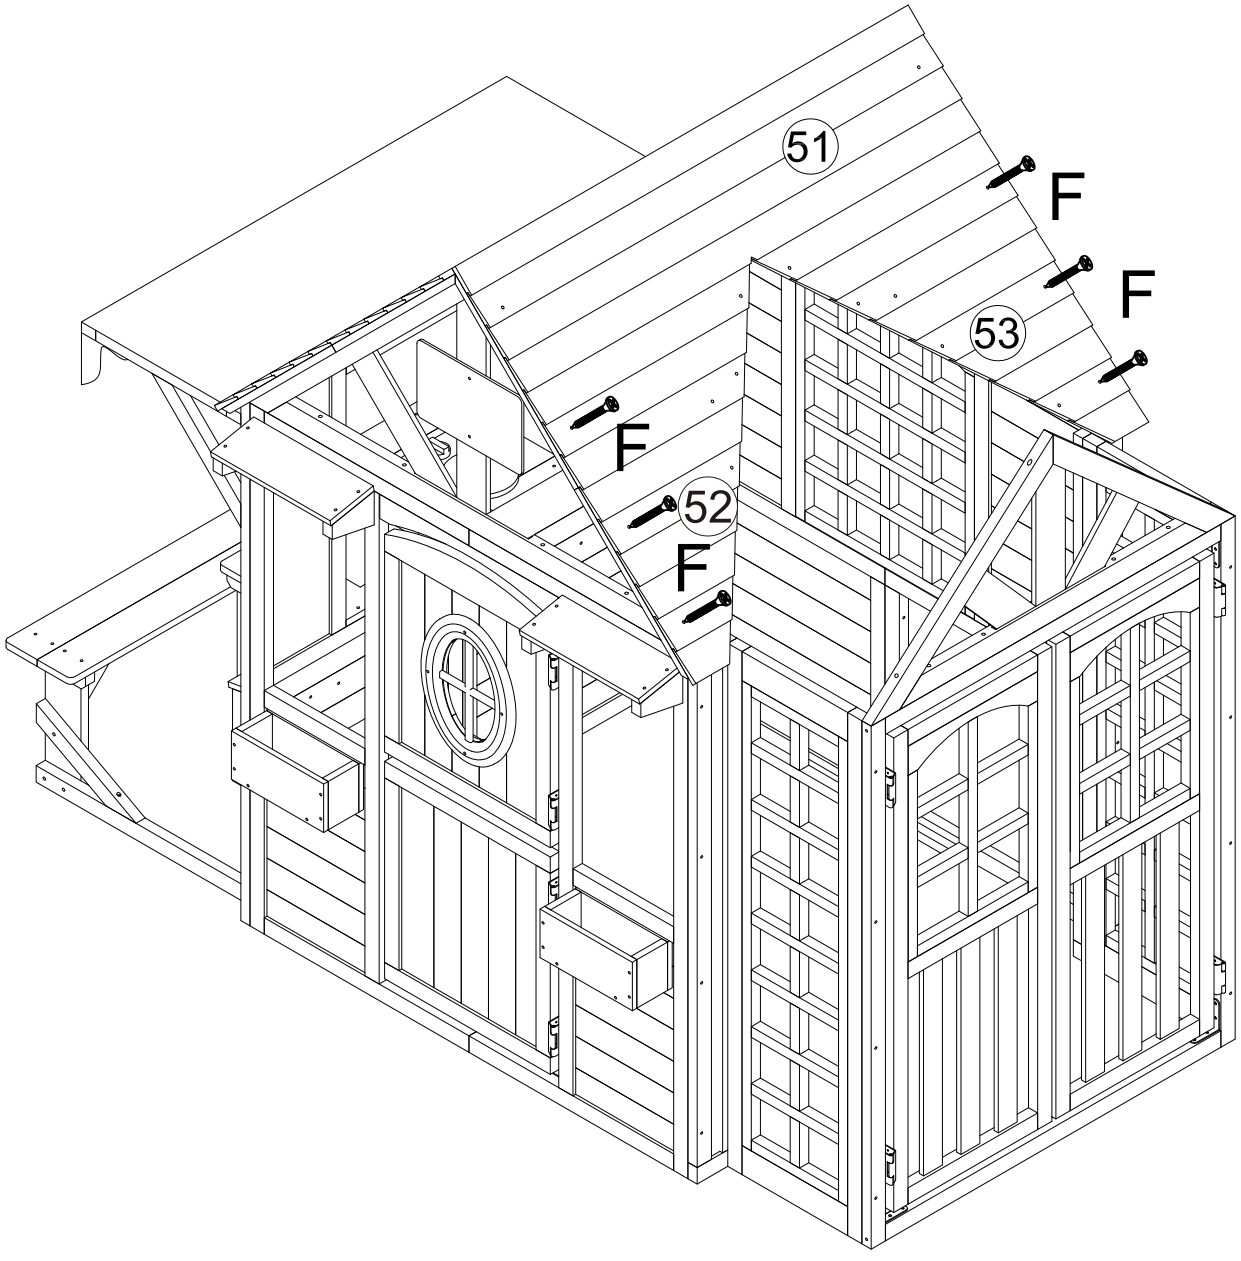


Stick accessory (R) onto part (36) (as shown).

RX1




40	 52 X1	 53X1				



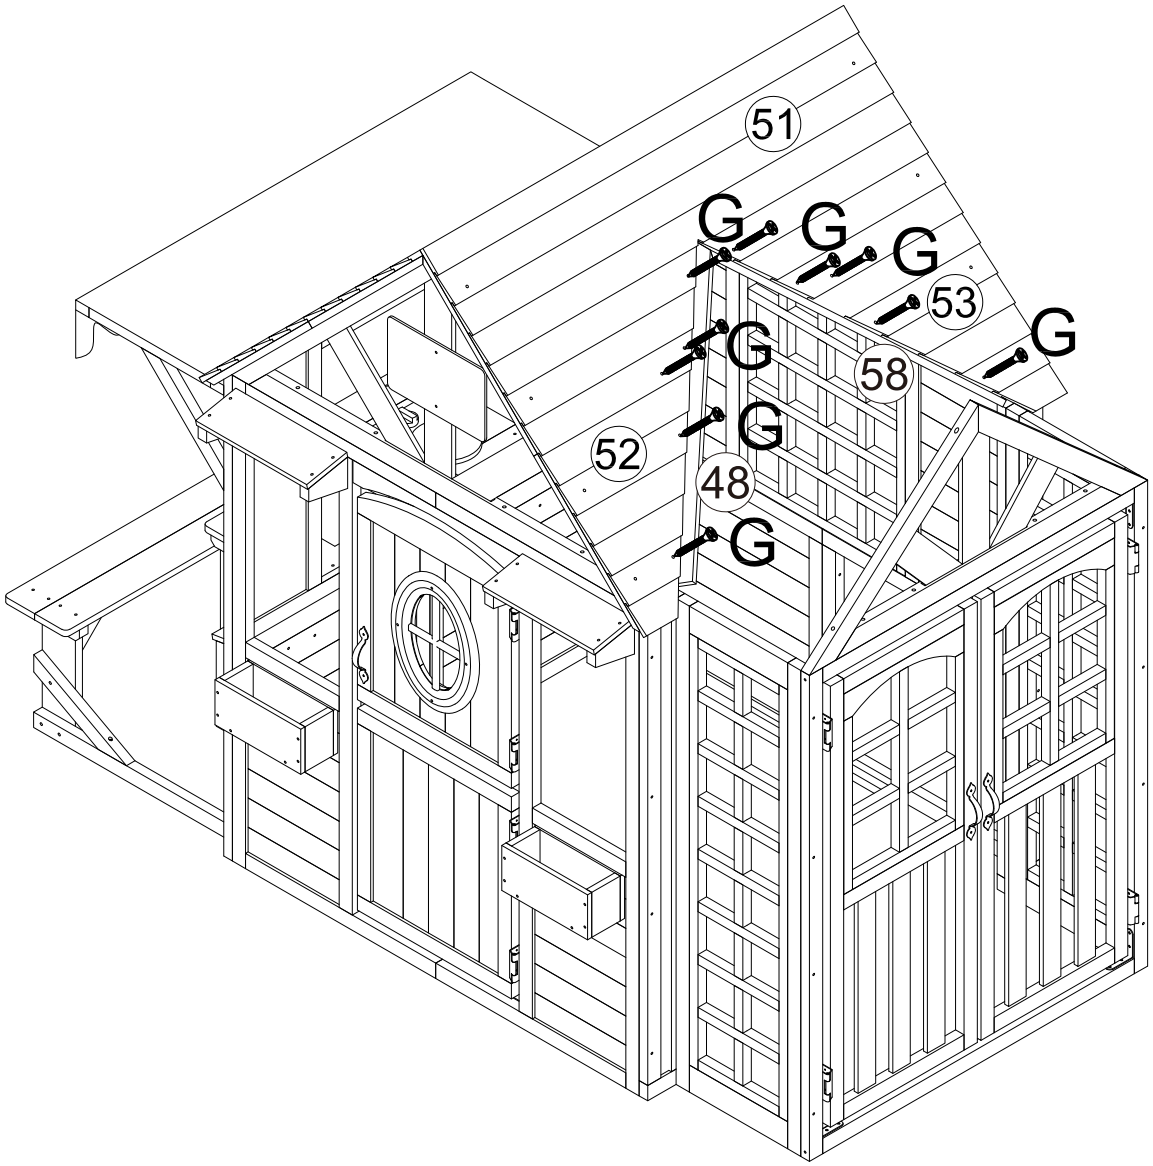
Fix parts (51), (52), and (53) using screws (F).

FX6



3.5*30

41	 48 X1	 58 X1				

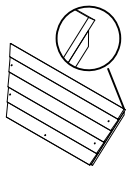
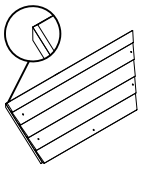


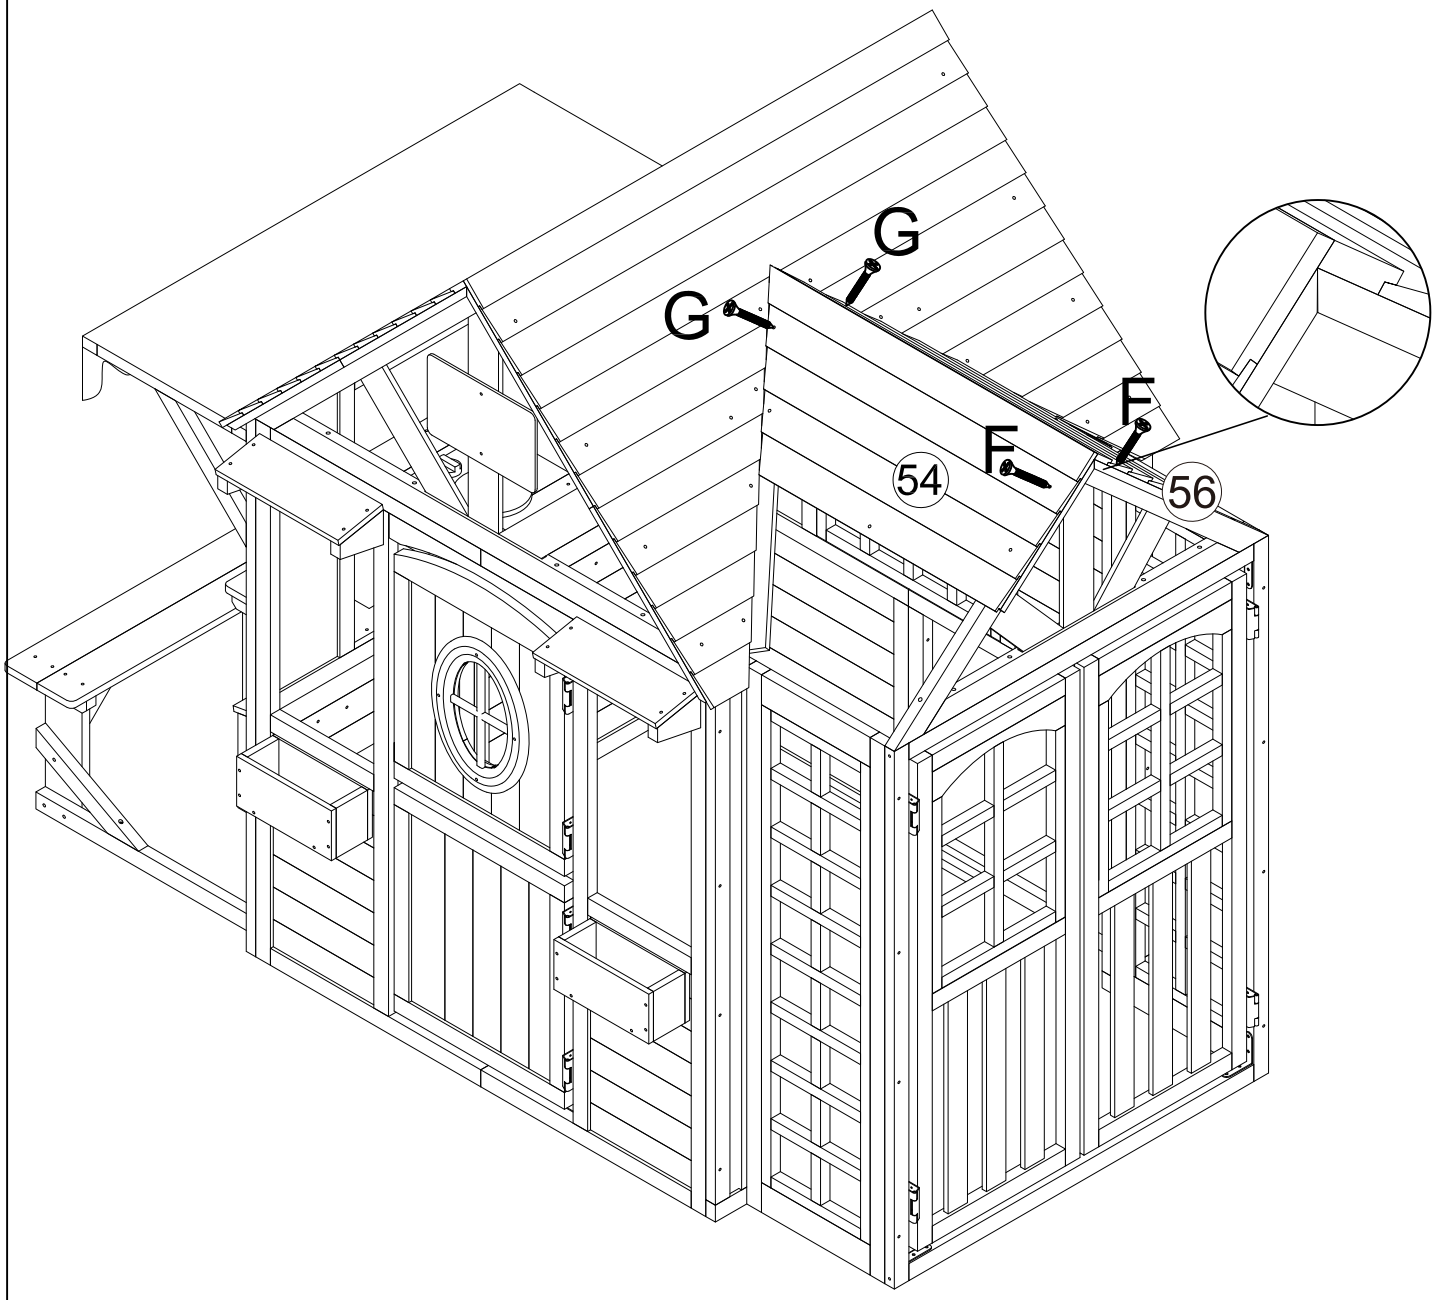
Fix parts (51), (52), and (53) to parts (48) and (58) using screws (G).

GX10



3*22

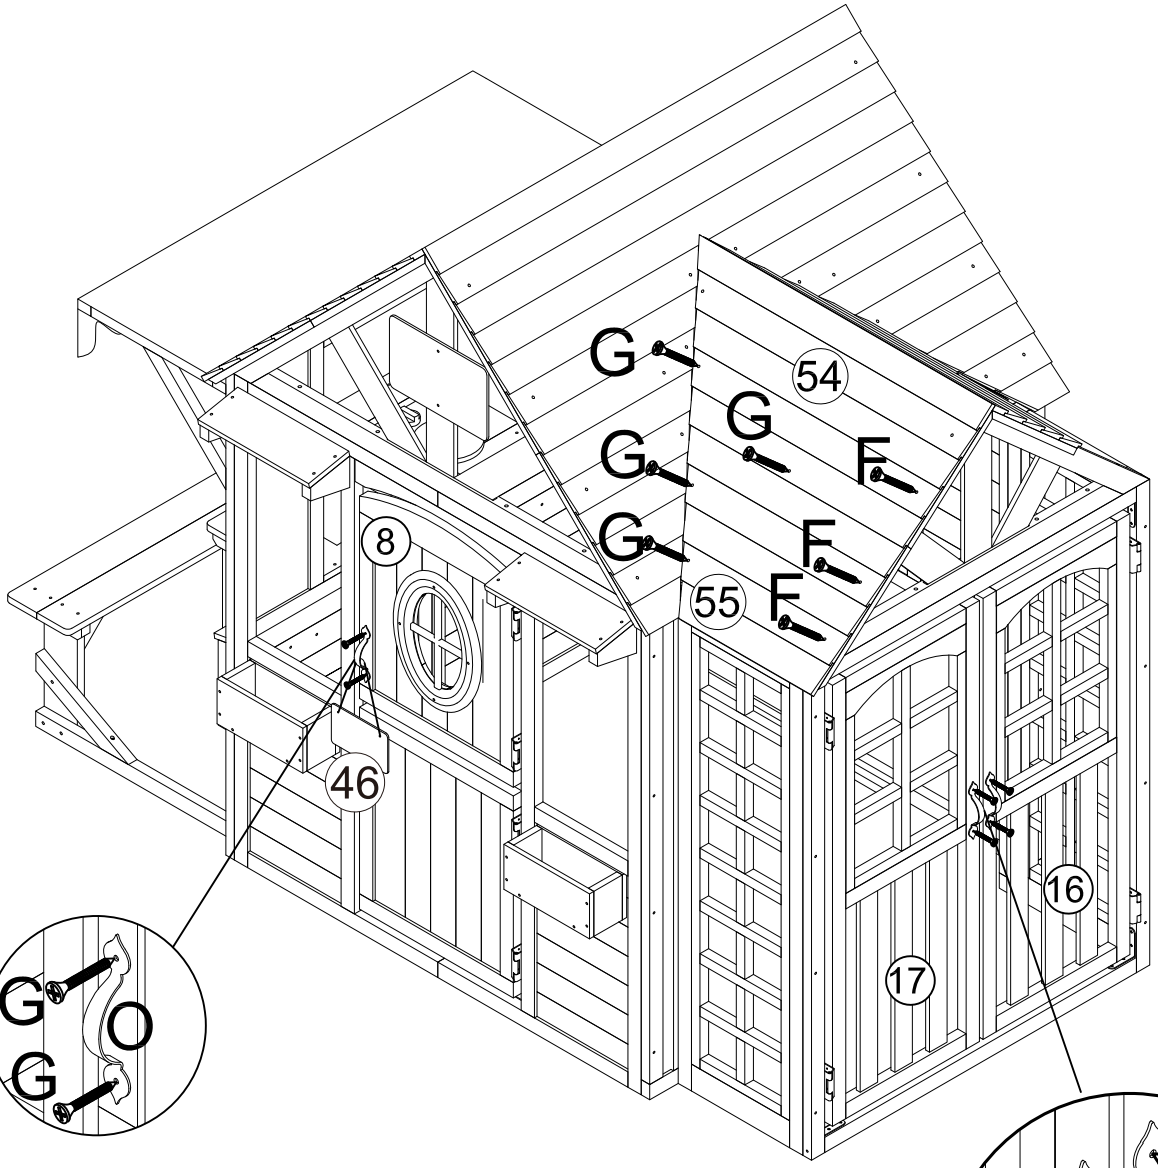
42	 54 X1	 56 X1				

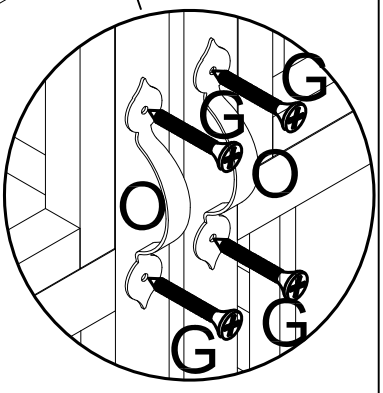


Fix parts (54) and (56) using screws (F), then fix to parts (48) and (58) using screws (G) (as shown).


FX2	GX2
 3.5*30	 3*22

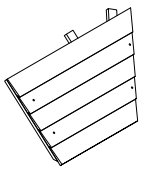
43	46 X1	55 X1				

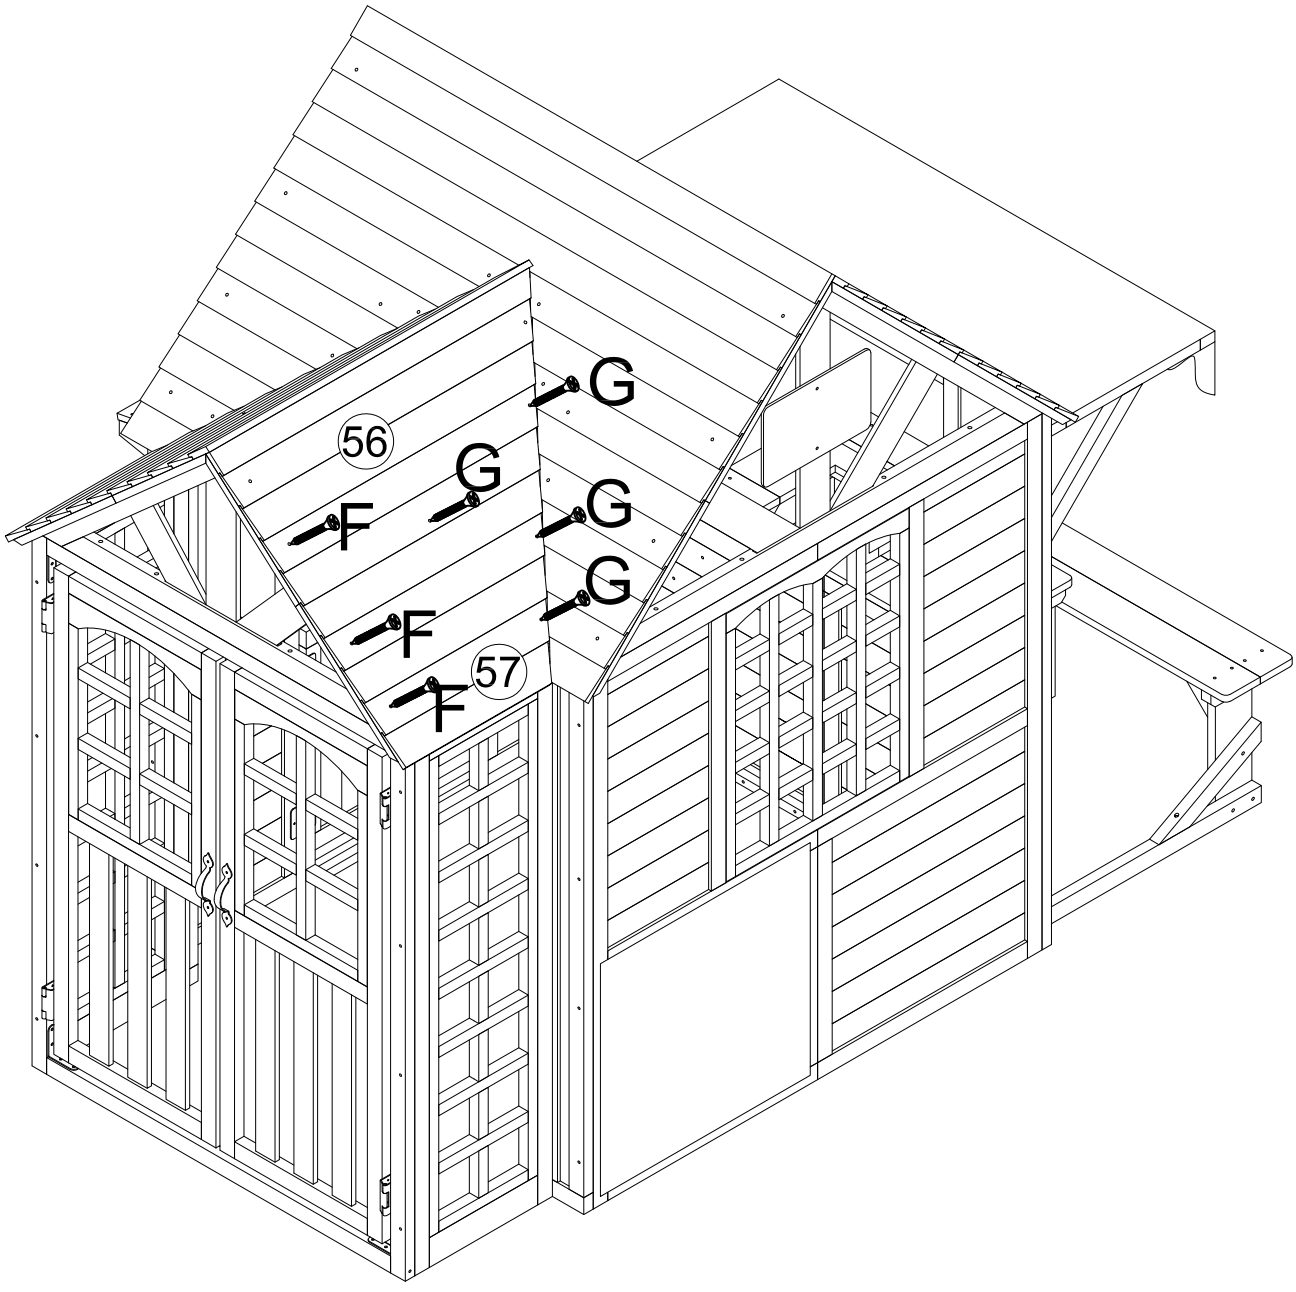




a. Connect parts (54) and (55) using screws (G), then secure with screws (F).
b. Fix onto part (48) using screws (G).
c. Hang accessory (O) onto part (46), then fix to part (8) using screws (G).
d. Fix accessory (O) to parts (17) and (16) using screws (G).

FX3	GX10	OX3
 3.5*30	 3*22	

44	 57 X1					



a. Connect parts (56) and (57) using screws (G), then secure with screws (F).
b. Fix onto part (58) using screws (G).

FX3	GX4
 3.5*30	 3*22

Children's Wooden Playhouse

SKU:
C000939031
C000939032

V2.0