
LEFTON®

INSTALLATION MANUAL

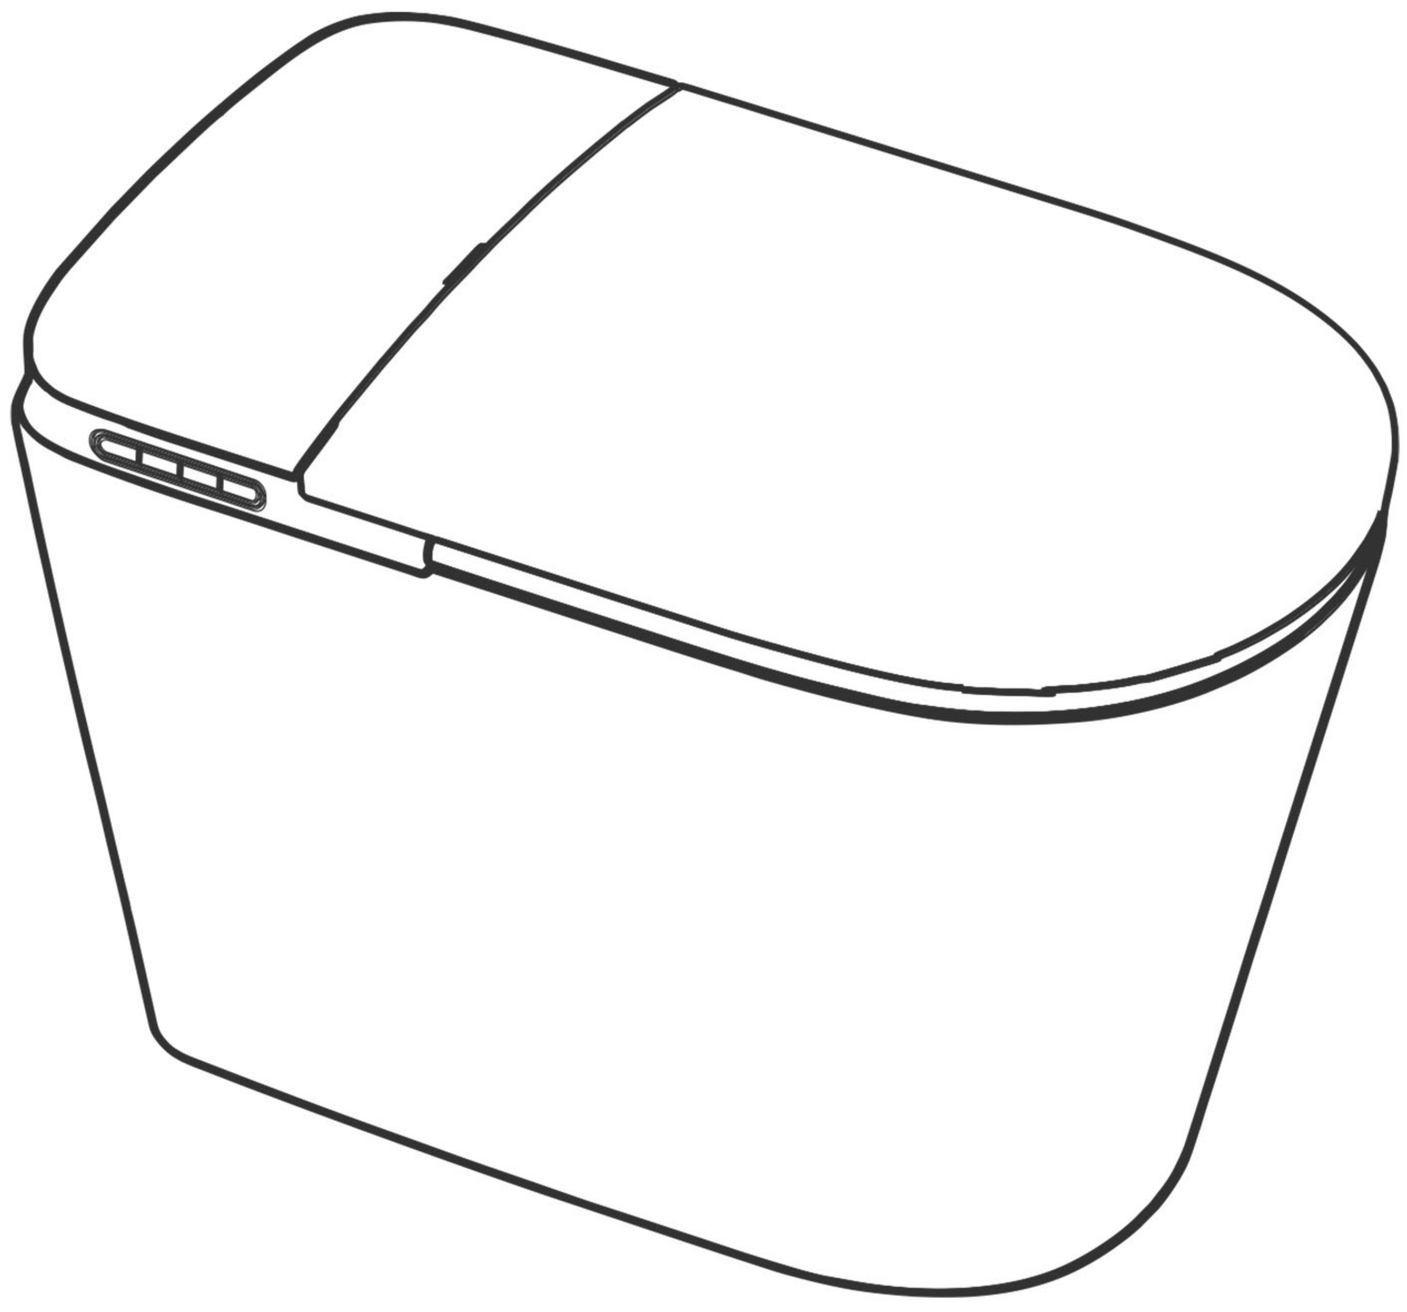

Smart Toilet

ST01

www.leftonhome.com | customer@leftonhome.com

Contents

Before Using

Safety Instructions 1
Package Inspections 4
Parts List 4
Product Overview 5
Tool Required 5
Product Specifications 6

Product Installation

Smart Toilet Installation 7
Backup Battery Installation 13
Remote Control Holder Installation 14
Toilet Cleaner & Fragrance Tablet Installation 15
Foam Liquid Installation & Replacement 16
Product Test Run 17

Usage Instructions

Automatic Sensing Function 18
Side Button Operations 19
Remote Control Operations 20
Advanced Function Settings 23

Appendix

Cleaning & Maintenance 24
Troubleshooting 25
Warranty 26

Safety Instructions

Please read the safety instructions carefully before using.
Failure to follow these instructions may result in electric shock, fire, personal injury, or product damage.

Symbols and Meanings

⚠ **WARNING:** May cause death or serious injury
⚠ **CAUTION:** May result in injury or property damage

Symbol	Meaning
	This symbol means prohibition
	This symbol means that it must be observed.

• Make sure the unit is connected to a properly grounded 3-prong electrical outlet.

• Install this product where a GFCI (Ground Fault Circuit Interrupter) electrical outlet is accessible.

• Install the outlet away from bathtubs, showers, and other sources of water.

• When installing this product in a bathroom, ensure adequate ventilation, such as an exhaust fan or ventilation opening.

• Children should be supervised to ensure that they do not play with the appliance.

⚠ WARNING	
	• **This product must be properly grounded.** (If you are unsure, consult a qualified electrician.) *Risk of electric shock. • **Do not use any power supply other than the specified rating (AC 120V, 60 Hz).** *Risk of fire, malfunction, or overheating. • **Do not plug in or unplug the power cord with wet hands.** *Risk of electric shock. • **Do not use a damaged power cord, loose outlet, or extension cord.** (If the power cord is damaged, to prevent any injuries or accidents, it should be replaced by a qualified technician.) *Risk of fire or electric shock.

⚠ WARNING

- **Do not disassemble, repair, or modify this product.**
*Risk of fire, electric shock, burns, or short-circuiting.

- **Do not pull, twist, bend, stretch, or place heavy objects on the power cord.**
*Risk of fire or electric shock.

- **Do not install the product in areas exposed to excessive moisture or water splashes.**
*Risk of fire or electric shock.

- **Do not use the product during thunderstorms. Unplug the power cord during storms.**
*Risk of fire or electric shock.

- **Do not place lit cigarettes, matches, or burning materials inside the toilet.**
*Risk of fire.

- **Do not use industrial or contaminated water. Only use tap water or potable well water.**
*Risk of health problems or internal corrosion.

- **Do not spray water directly onto the product or wash it with water.**
*Risk of fire or electric shock.

- **Do not place your hand or objects into the warm dryer outlet. Do not cover the outlet with clothing or other materials.**
*Risk of burns, electrical shock, or malfunction.

- **Do not use the unit if it malfunctions. Unplug the power cord and close the water supply valve.**
*Risk of fire, electric shock, burn, short circuiting, or injury.

⚠ CAUTION

- Do not use the product if the top unit is not securely installed.

- Individuals with reduced physical, sensory, or mental capabilities, including children, should use this product only under supervision.

- Do not apply any force to the seat and lid. Do not stand on the lid or open or close the lid and the seat forcefully.

- Do not kink, bend, or crush the water supply hose.

- Do not use high seat temperature or warm air dryer settings for extended periods.

- When cleaning plastic components, do not use corrosive chemicals, such as strong acids, solvents, gasoline, kerosene, or alcohol.

- Do not flush items such as newspapers, diapers, or sanitary products, as they may cause blockages.

- Do not strike the ceramic bowl with heavy objects, as this may cause cracks or water leakage.

⚠ CAUTION

- If a water leak occurs, immediately close the water supply valve.
- While using the product, ensure that your body is in contact with the seat sensor area; otherwise, the unit may not operate properly.
- Periodically unplug the power plug and wipe dust from it to prevent fire caused by poor insulation.
- Always turn off the water supply valve before removing the filter.
- Ensure the filter is tightened securely after installation to prevent leakage.
- When a power outage occurs, turn off the water valve and unplug the product to prevent leakage.
- If the product will not be used for an extended period, unplug the power cord, turn off the water supply, and drain any remaining water to prevent freezing damage.
- Do not use or store the product in temperatures below 32°F (0°C), as water inside may freeze and cause damage.
- Avoid direct sunlight exposure to prevent discoloration.

⚠ Battery Warning

- Install batteries correctly according to the polarity markings.
- Remove batteries if the product is not used for a long period.
- Do not mix new and old batteries.
- Do not disassemble batteries or dispose of them in fire or water.
- Keep batteries out of reach of children.
- If battery liquid contacts skin or eyes, rinse immediately with clean water and seek medical attention.

Package Inspection


Open the box and carefully remove the toilet and all included accessories. Check all items against the parts list to ensure that nothing is missing or damaged. If any parts are cracked or broken, do not proceed with installation. Please contact our customer service team at customer@leftonhome.com for assistance.

Parts List

Please check that all accessories listed below are included.




Smart Toilet

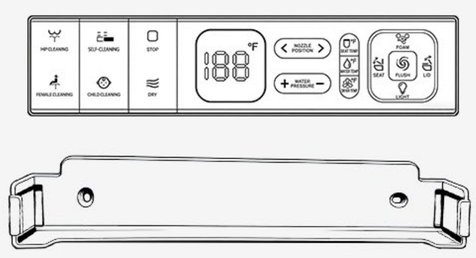


Remote Control & Holder




Power Outage Flushing Battery Box

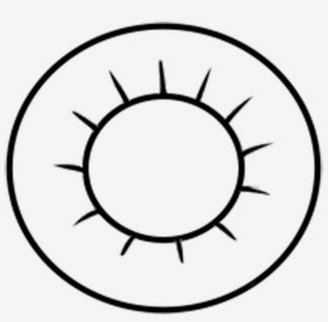


Wax Ring

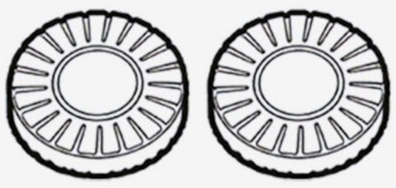

Toilet Cleaner Tablets x 2

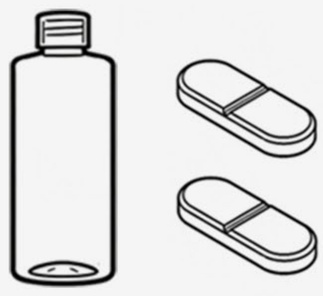


Bottle x1 & Foam Liquid Effervescent Tablets x 2

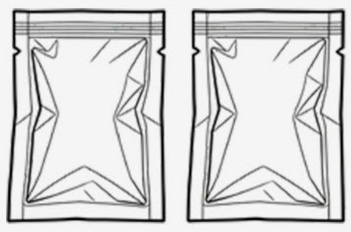

Fragrance Tablets x 2




Floor Flange & Mounting Accessories

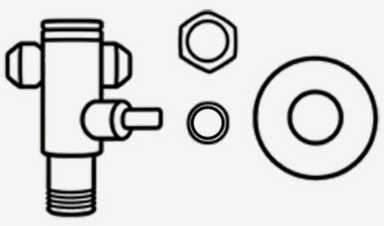

Angle Valve



3/8" Female - 1/2" Male Adapter

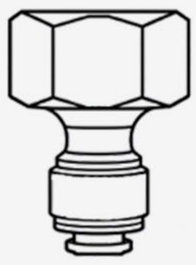


Adapter

Instruction

*Replacement toilet cleaner tablets, fragrance tablets, and foam tablets are available in our online store.

Product Overview

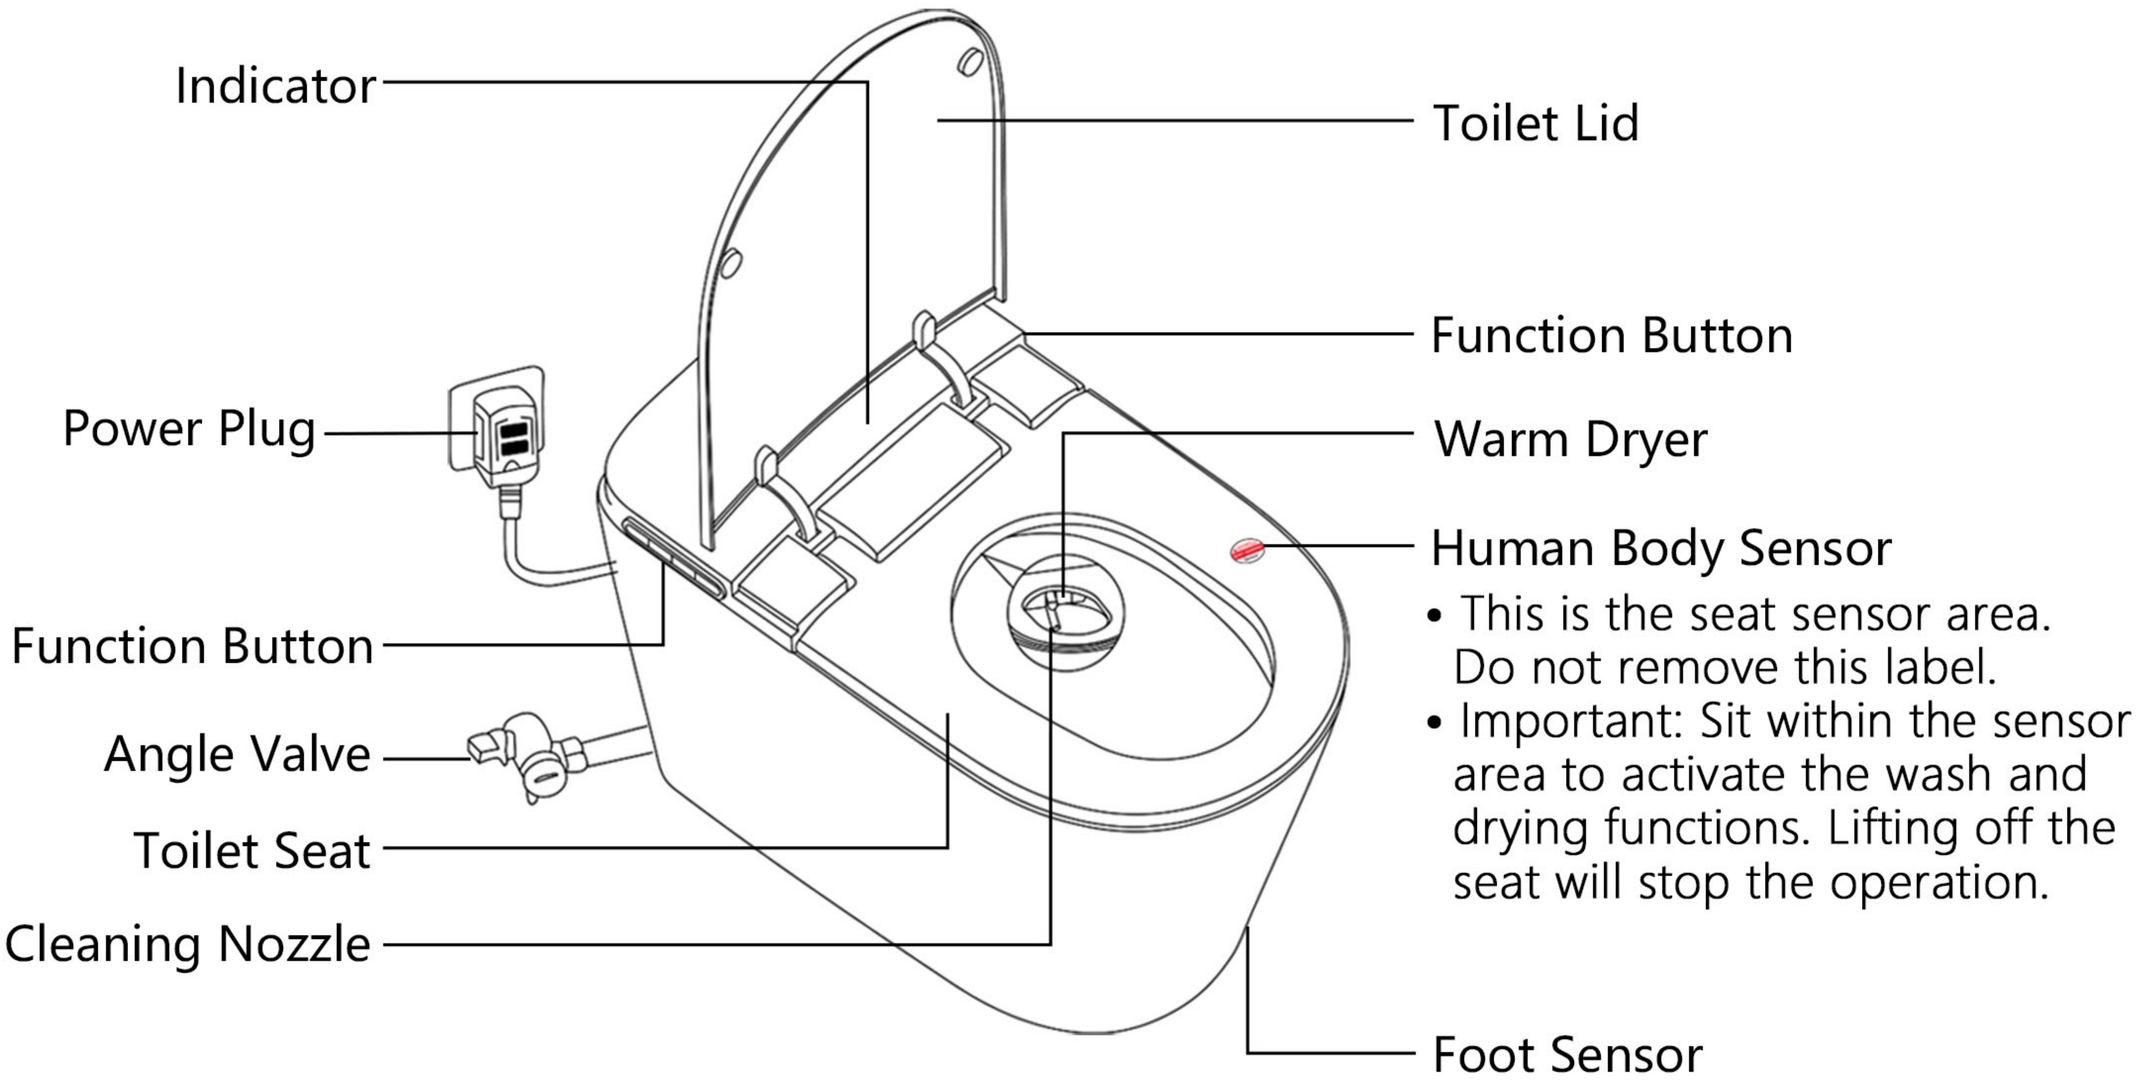


Tool Required



Safety Goggles



Drill

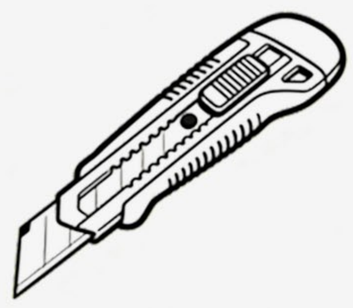

Utility Knife



Phillips Screwdriver



Adjustable Wrench



Tape Measure



Teflon Tape



Sealant



Pencil




Gloves

Product Specifications


Dimensions	26.77"(L)*15.35"(W)*18.5"(H)		
Rated Power Supply	AC 110~120V / 60Hz		
Rated Power	1250W		
Power Cord Length	1.5m (59")		
Cleaning	Water Outlet	Hip Cleaning	Approx. 0.3L/min-0.7 L/min
		Female Cleaning	
	Outlet Water Temperature		Off / 93℉ / 99℉ / 104℉ (4 Levels)
	Water Heating		Instant Heating
	Heater Power		1400W
Seat Heating	Seat Temperature		Off / 93℉ / 99℉ / 104℉ (4 Levels)
	Heater Power		45W
Warm Drying	Warm Air Temperature		Off / 113℉ / 122℉ / 131℉ (4 Levels)
Spray Position	Adjustable (Forward & Backward)		
Water Supply Pressure	Minimum required water pressure: 0.12 MPa (17.4 PSI), ensuring a flow of water at least 5.3 GPM. Maximum required water pressure: 0.6 MPa (87 PSI) <static>		
Working Ambient Temperature	35.6℉-104℉		
Waterproof Level	IPX4		


Smart Toilet Installation


Installation Drawings

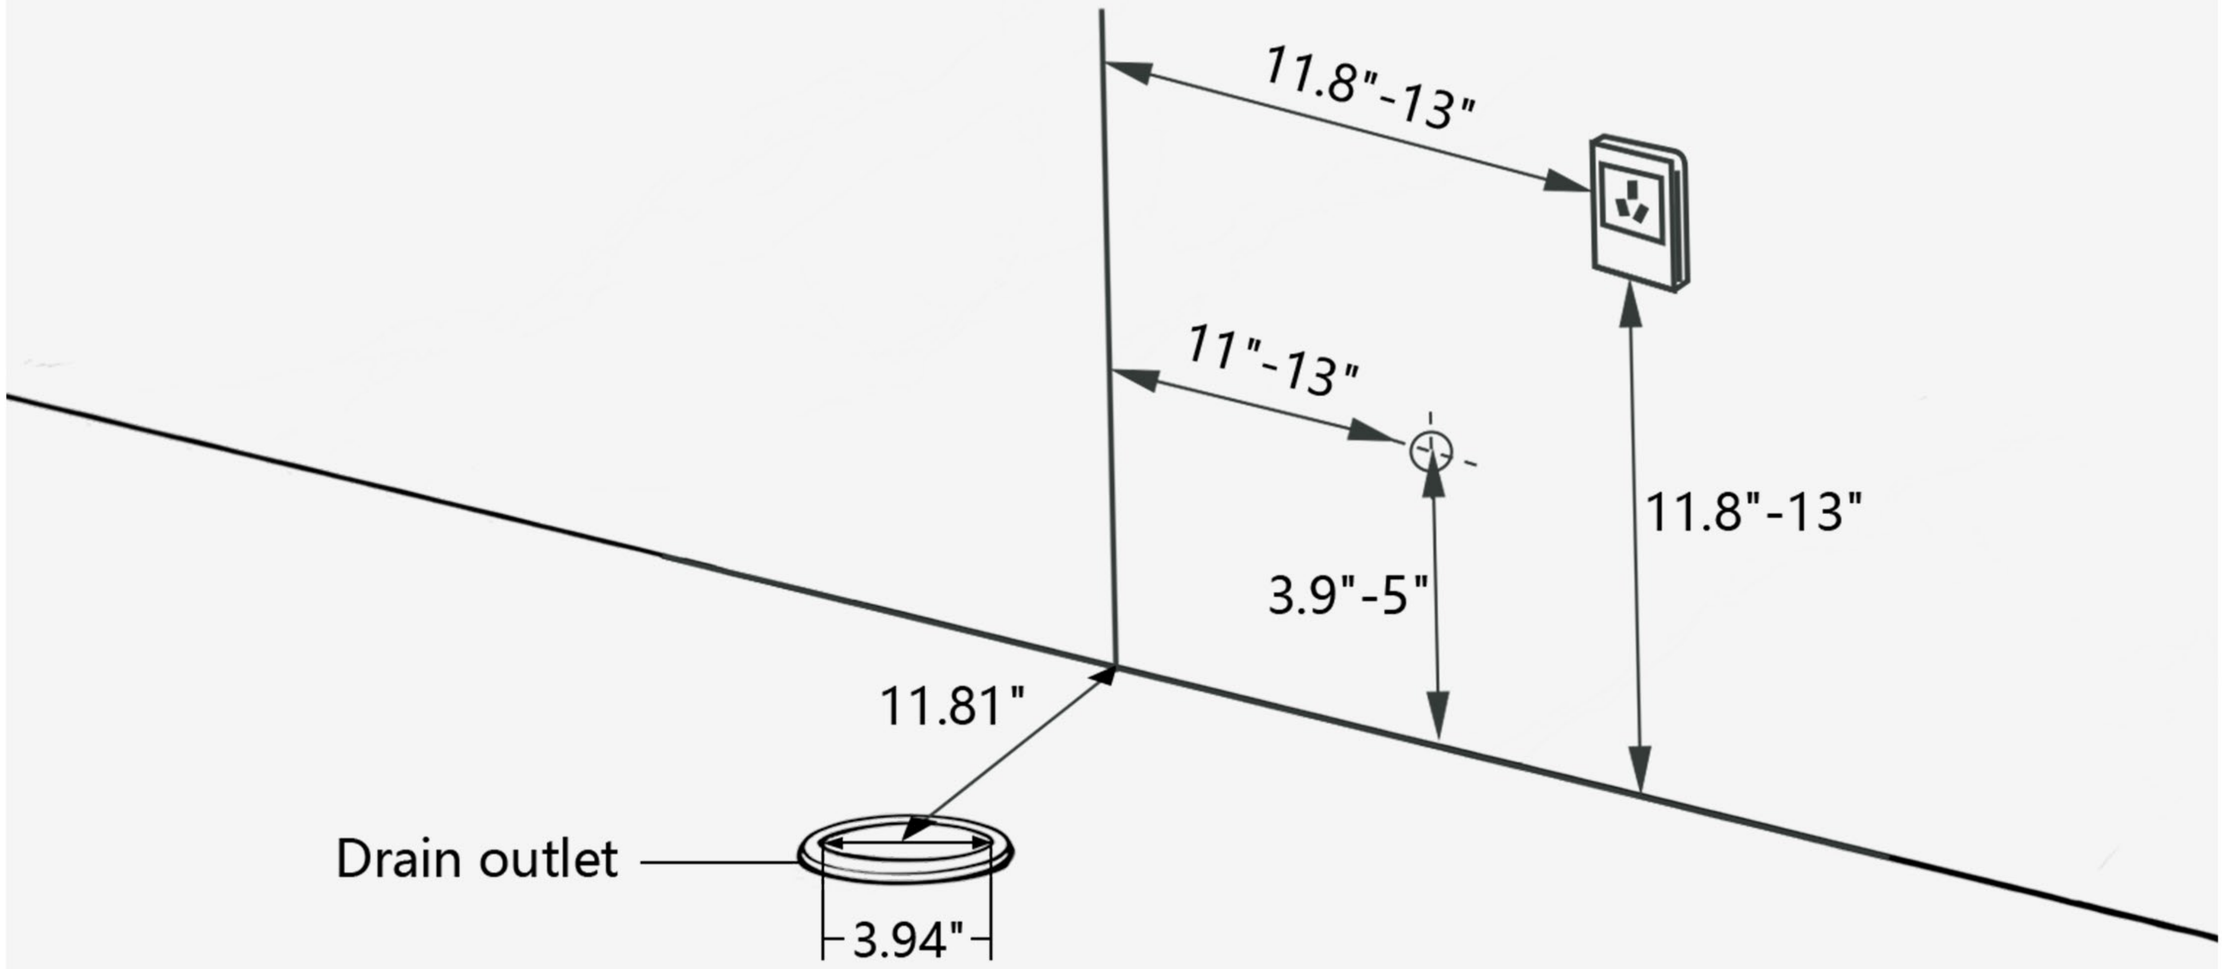

Size Drawings

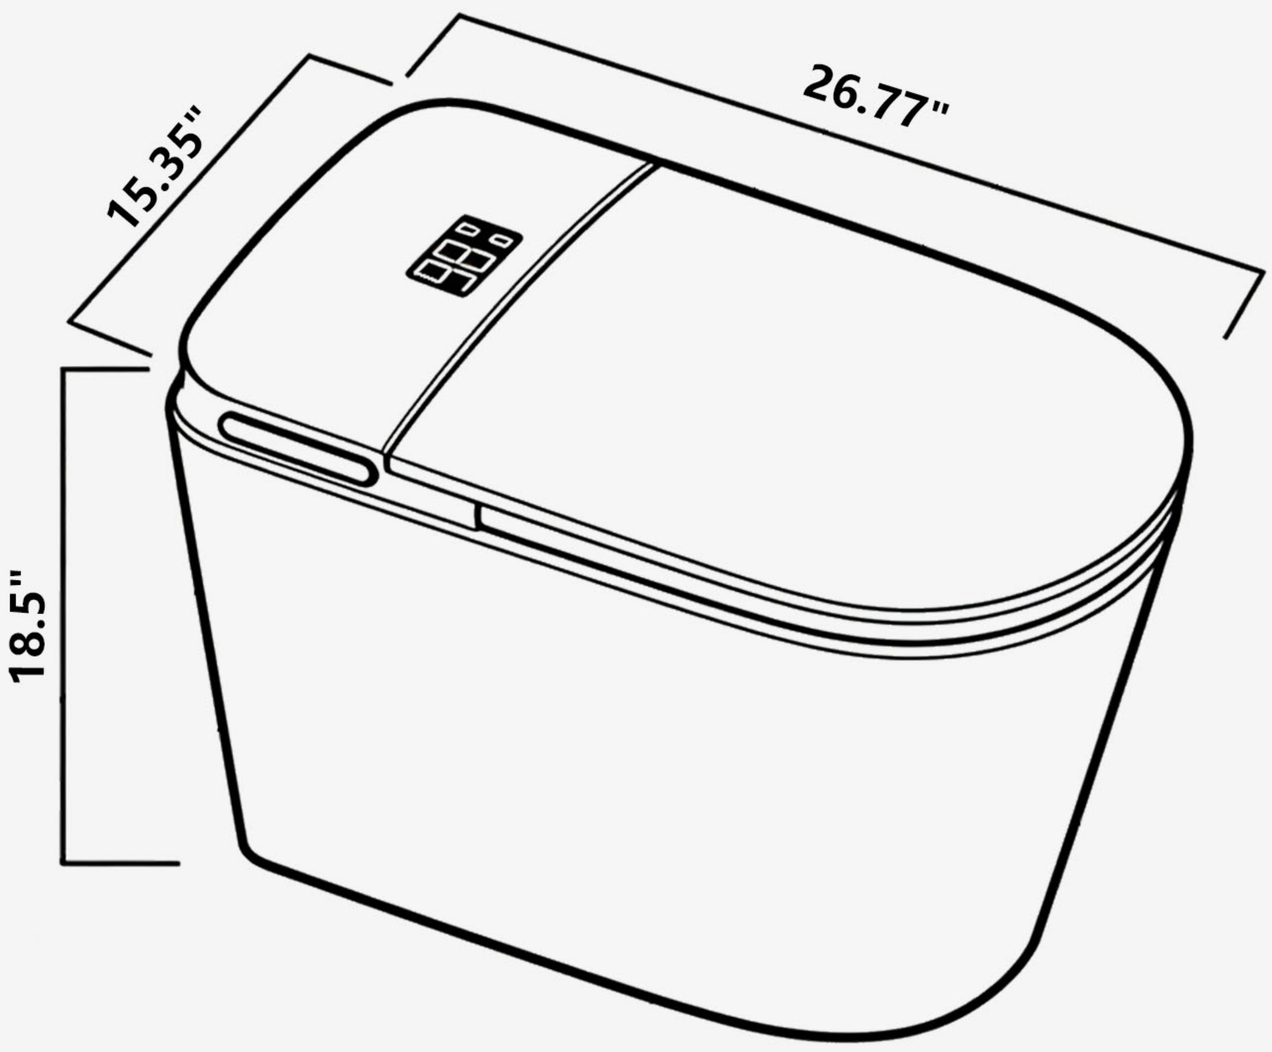

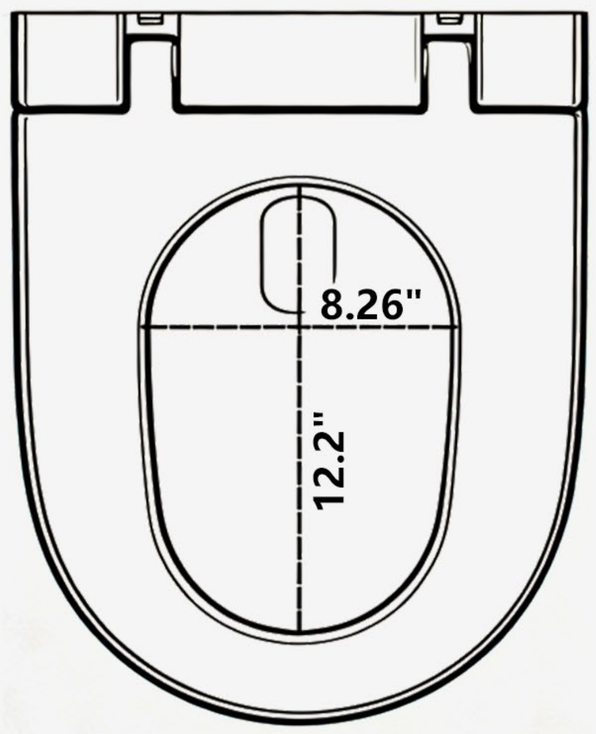


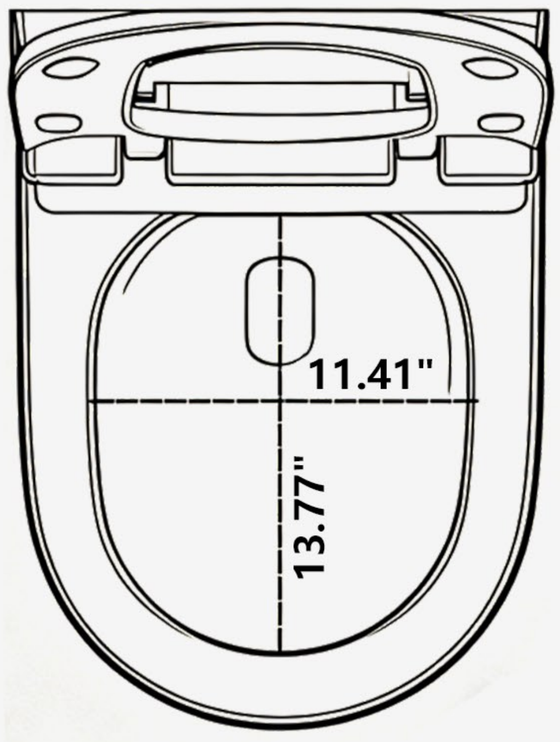

* Dimensions are measured manually and may vary slightly.
  Please refer to the actual product for final sizing.


Step 1. Check the Installation Conditions

Confirm that the rough-in distance from the wall to the center of the drain outlet is 11.81" (300 mm) or greater.

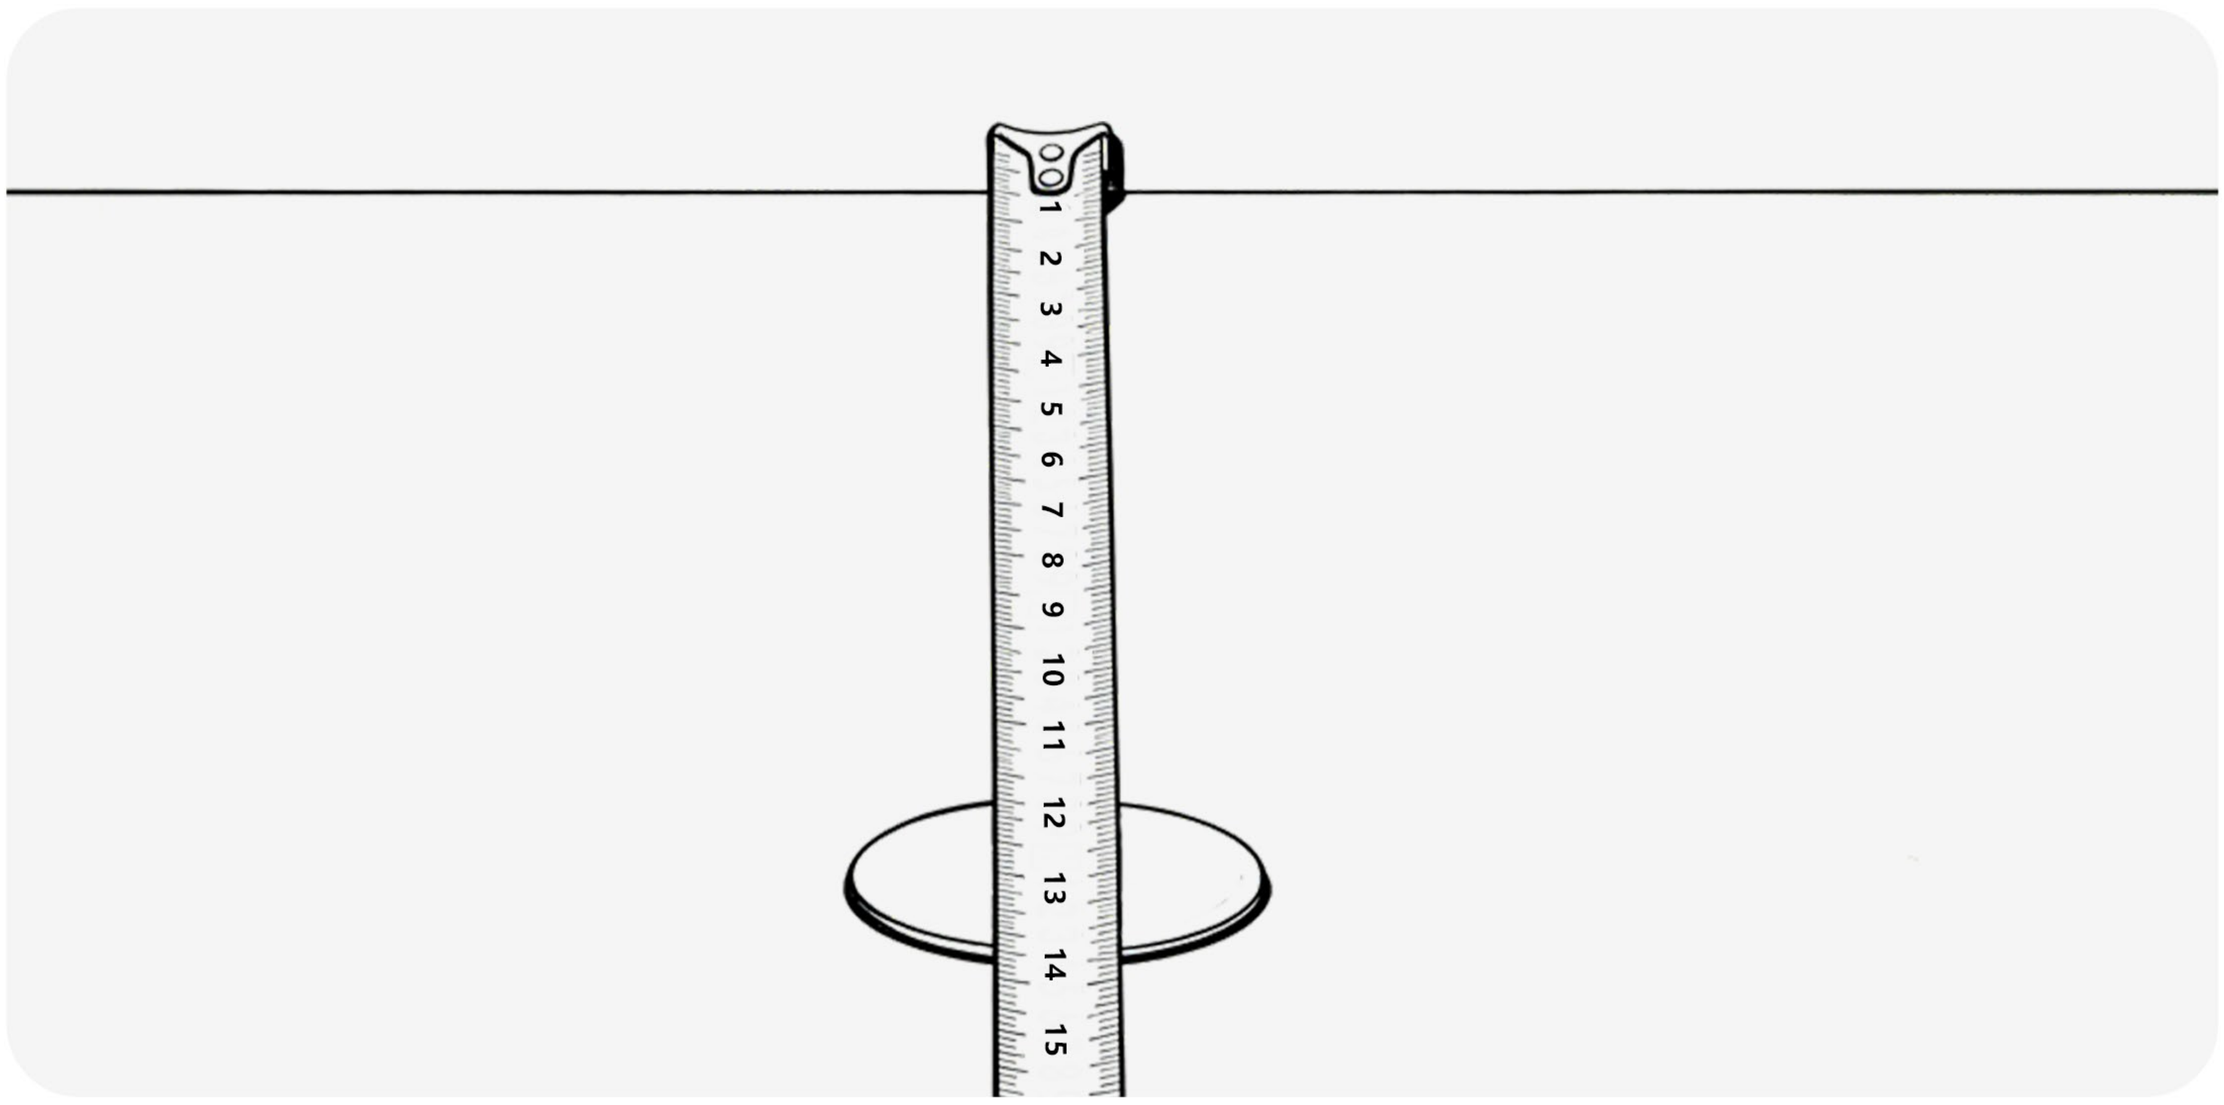


Step 2. Install the Floor Flange

• Place the floor flange over the drain outlet and mark the screw hole positions.
• Drill holes at the marked locations and insert the anchors. Secure the floor flange to the floor with screws.
*If an applicable flange is already in place, there is no need to install the new one.

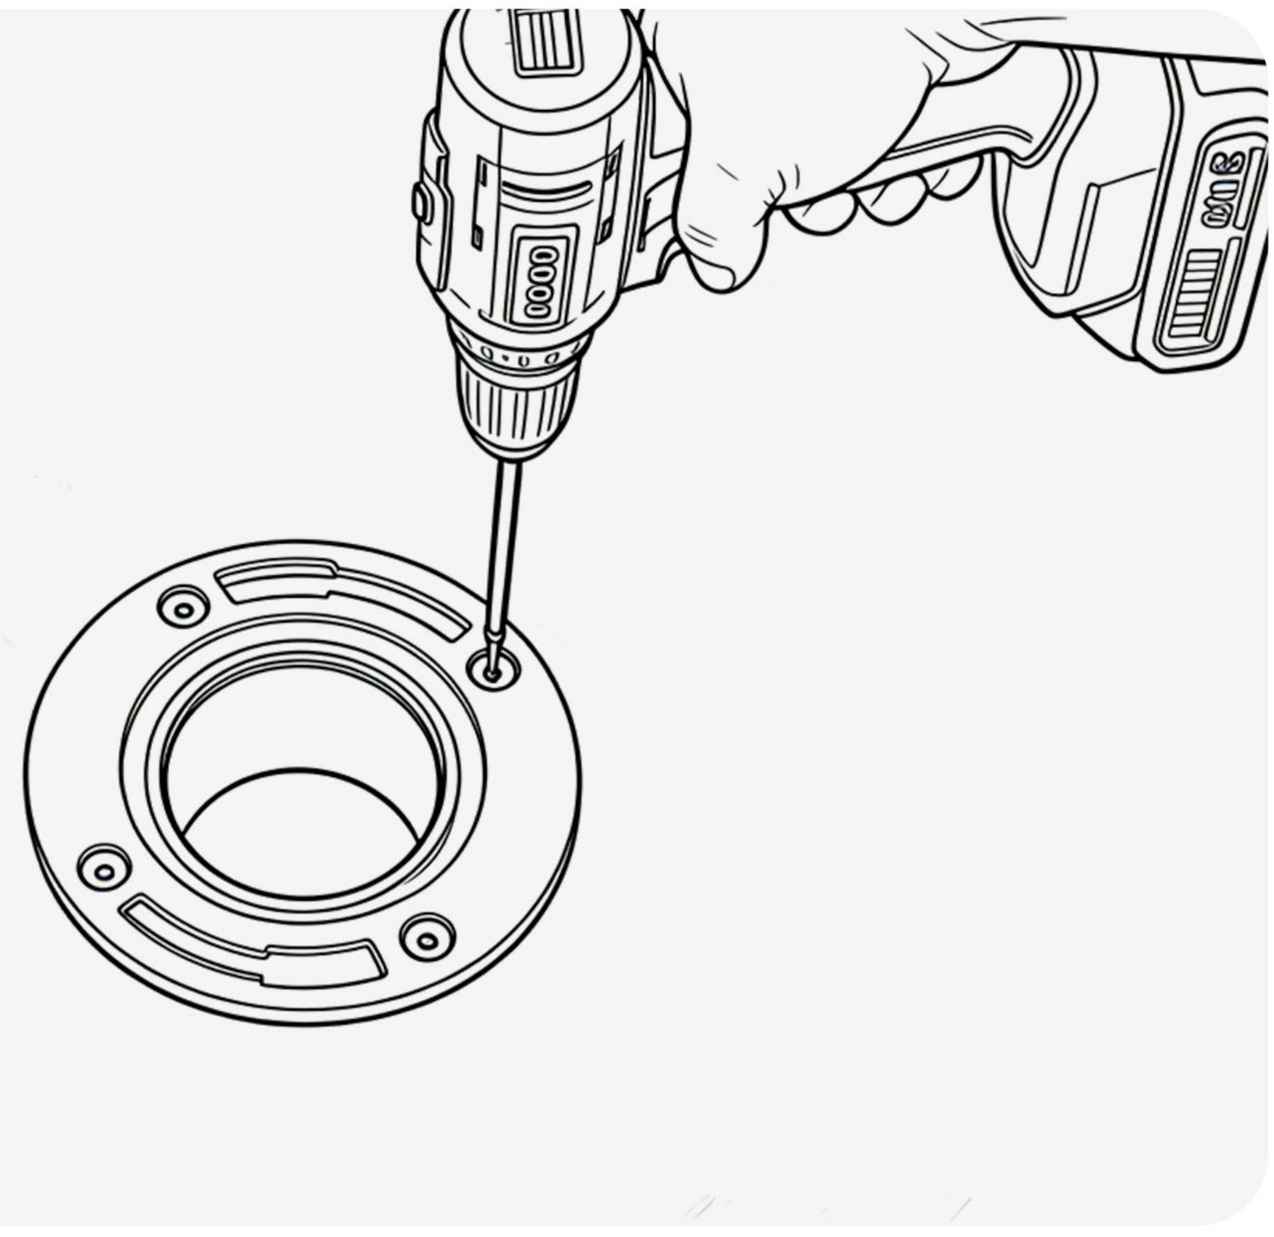


Accessories / Quantities:

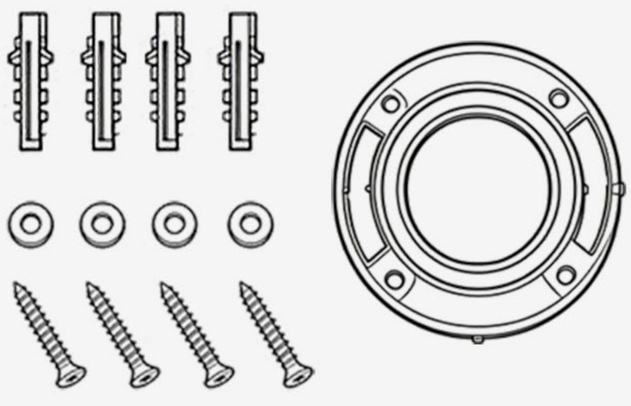

Step 3. Install the Mounting Blocks

Assemble the mounting blocks with bolts, position the two mounting blocks on opposite sides of the flange on the ground, and secure them with washers and nuts.

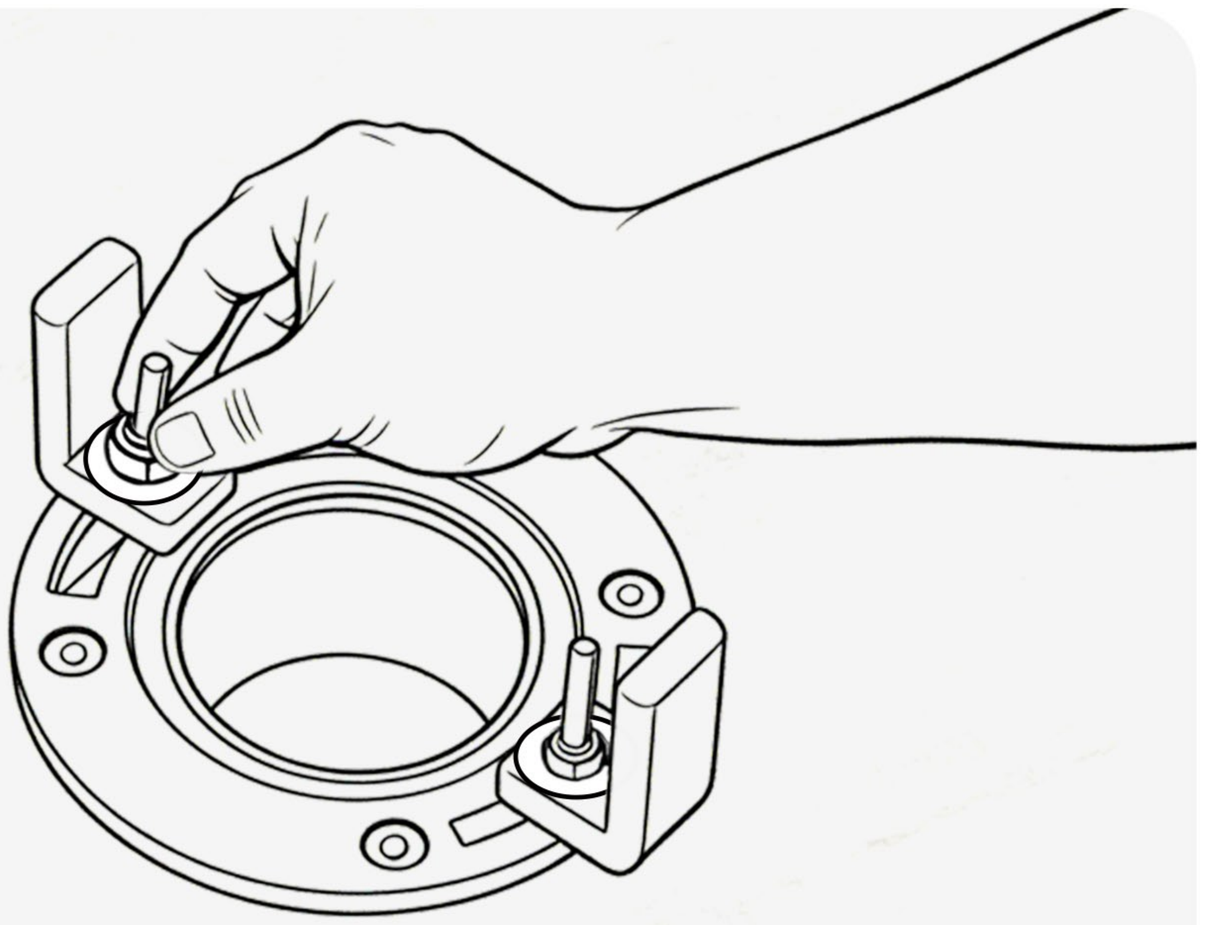


Accessories / Quantities:




Step 4. Install the Wax Ring

Turn the toilet over carefully and install the wax ring onto the outlet at the bottom of the toilet.

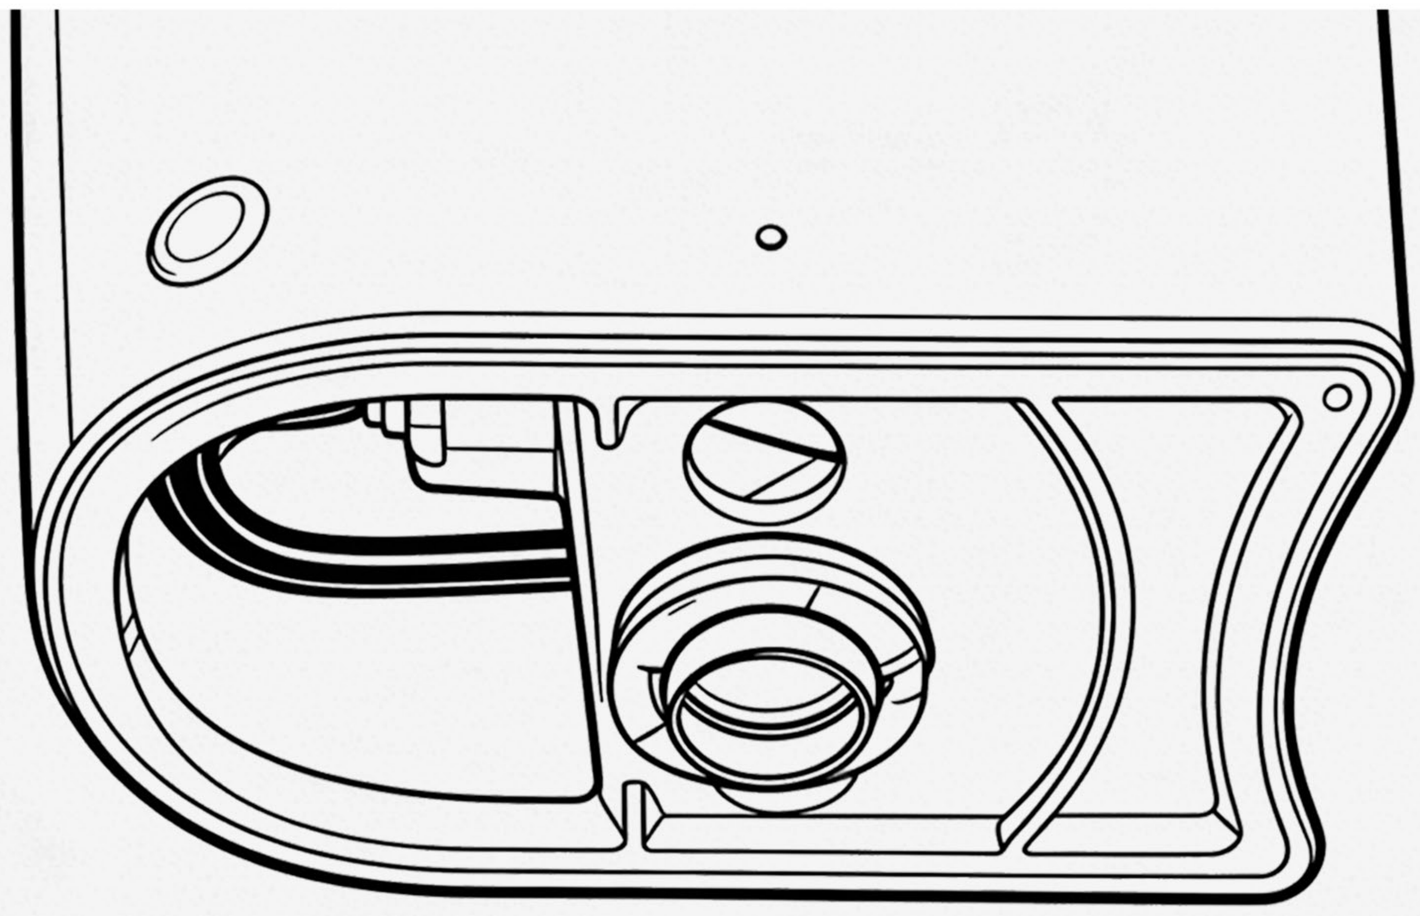


Accessory / Quantity:

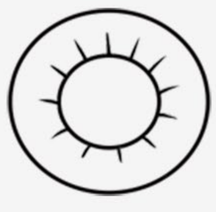


Step 5. Position the Toilet

- Carefully place the toilet over the floor flange, aligning the mounting holes with the mounting blocks.
- Press down firmly to ensure the wax ring forms a tight seal.

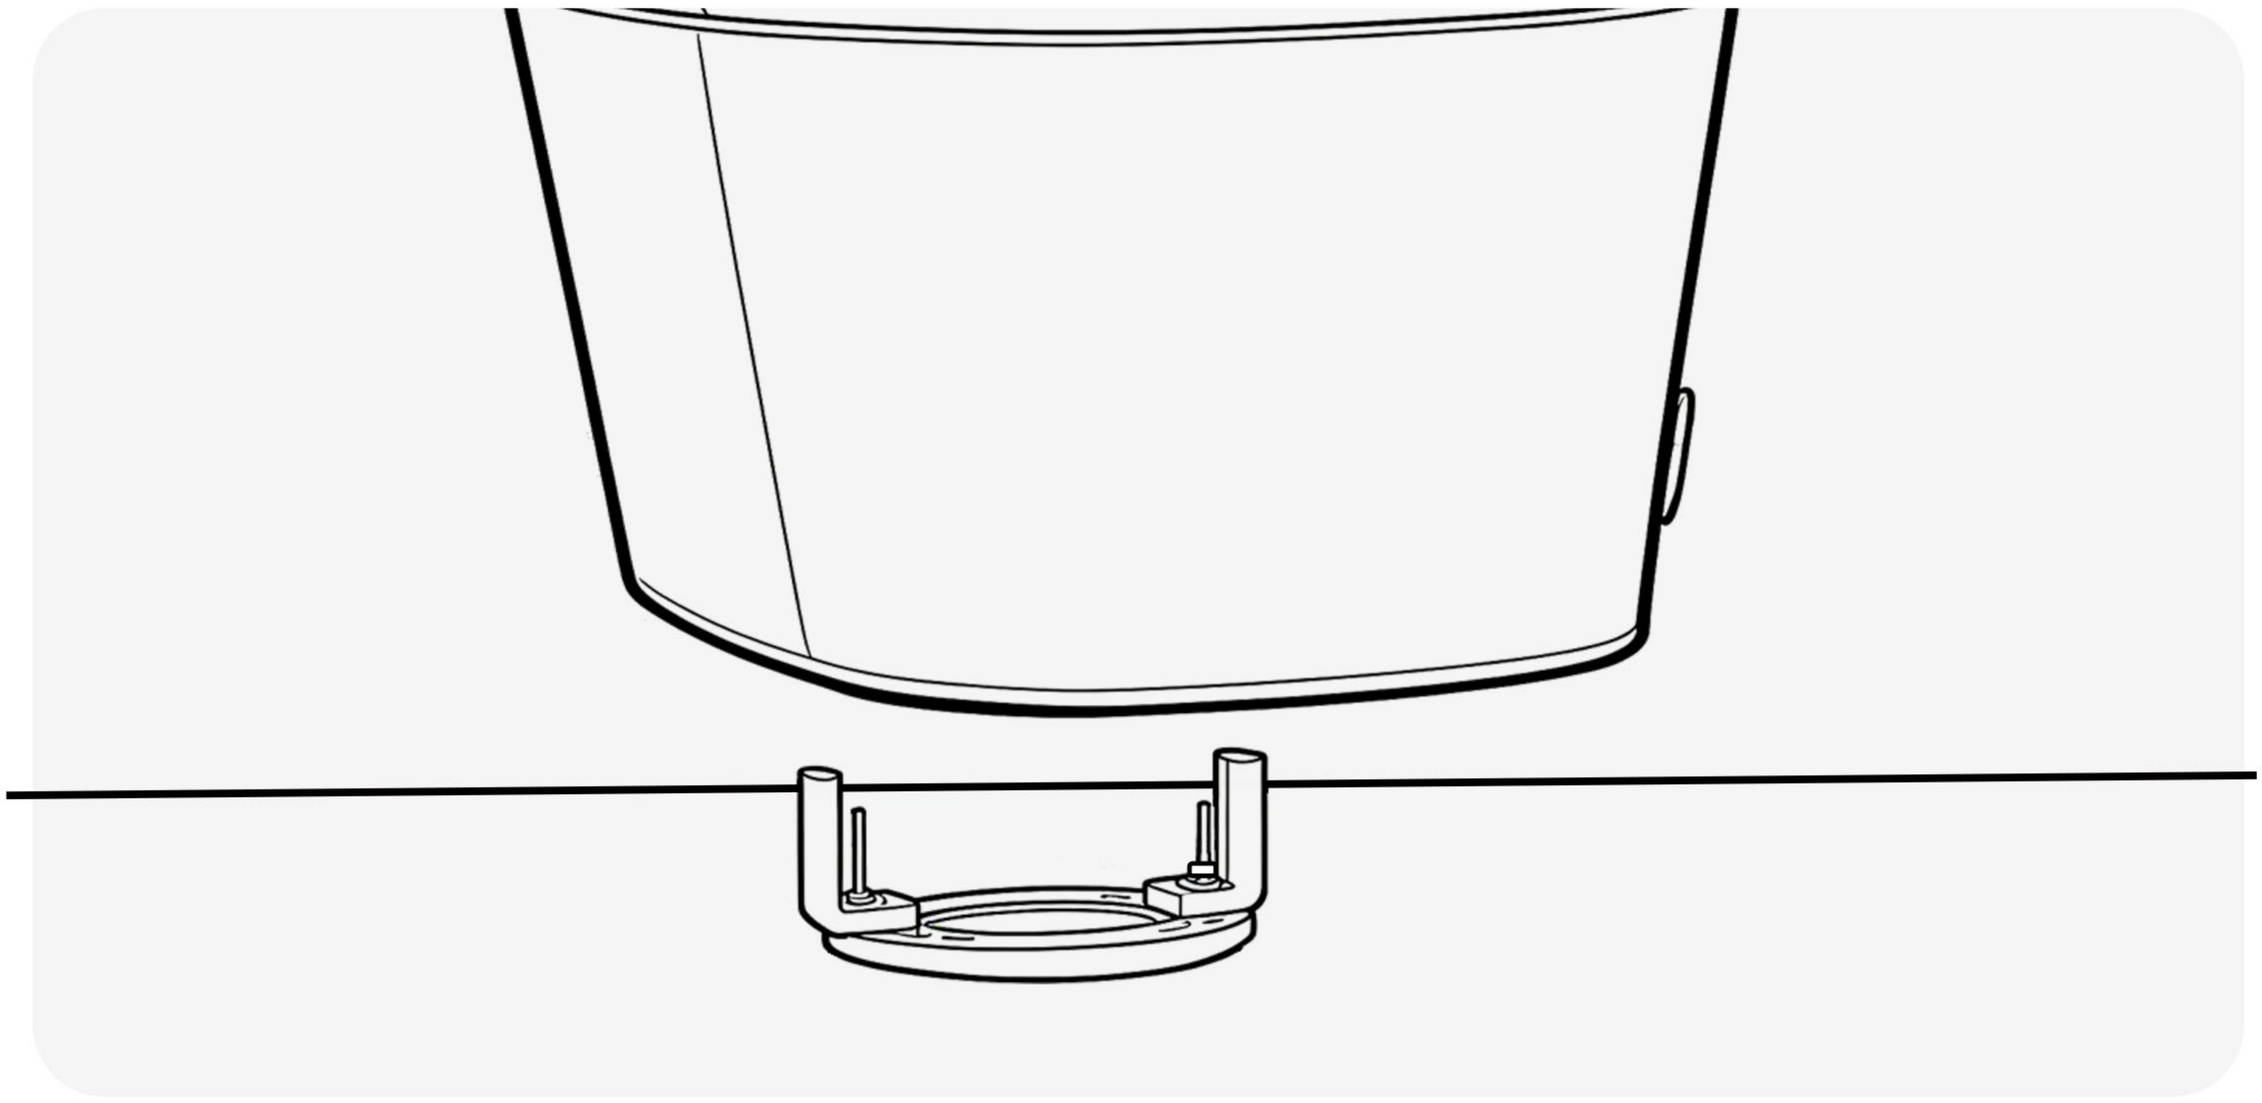

Step 6. Secure the Toilet


Insert the fixing screws into the mounting holes on both sides of the toilet base. Tighten them securely using a screwdriver. Install the decorative bolt caps after tightening.

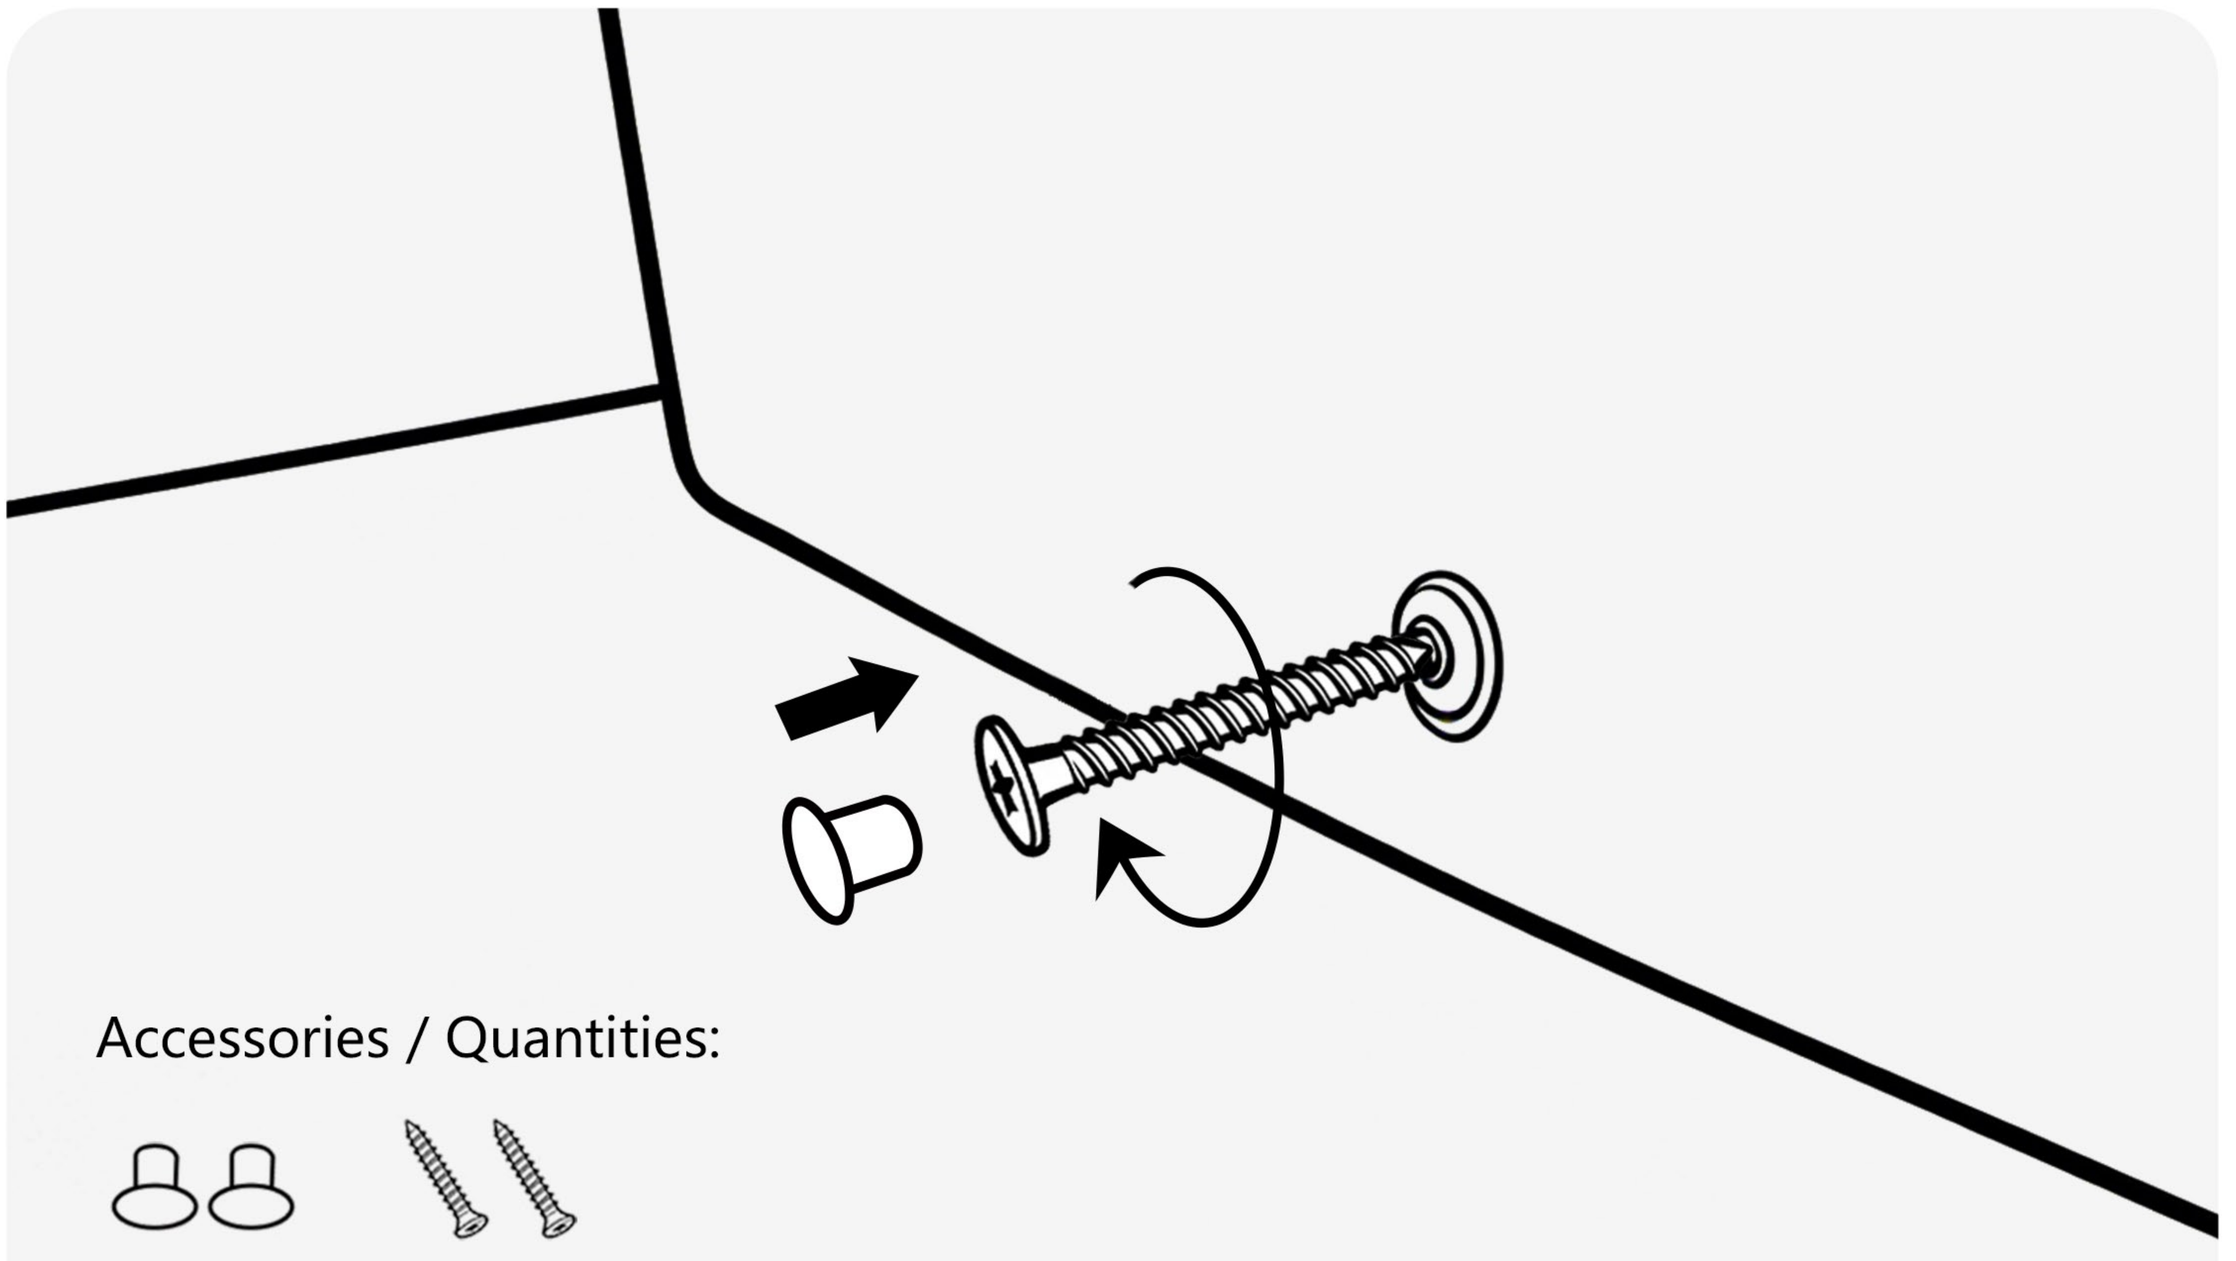

Accessories / Quantities:

Step 7. Apply Sealant


Apply a bead of silicone sealant around the base of the toilet where it meets the floor to prevent water or debris from entering.

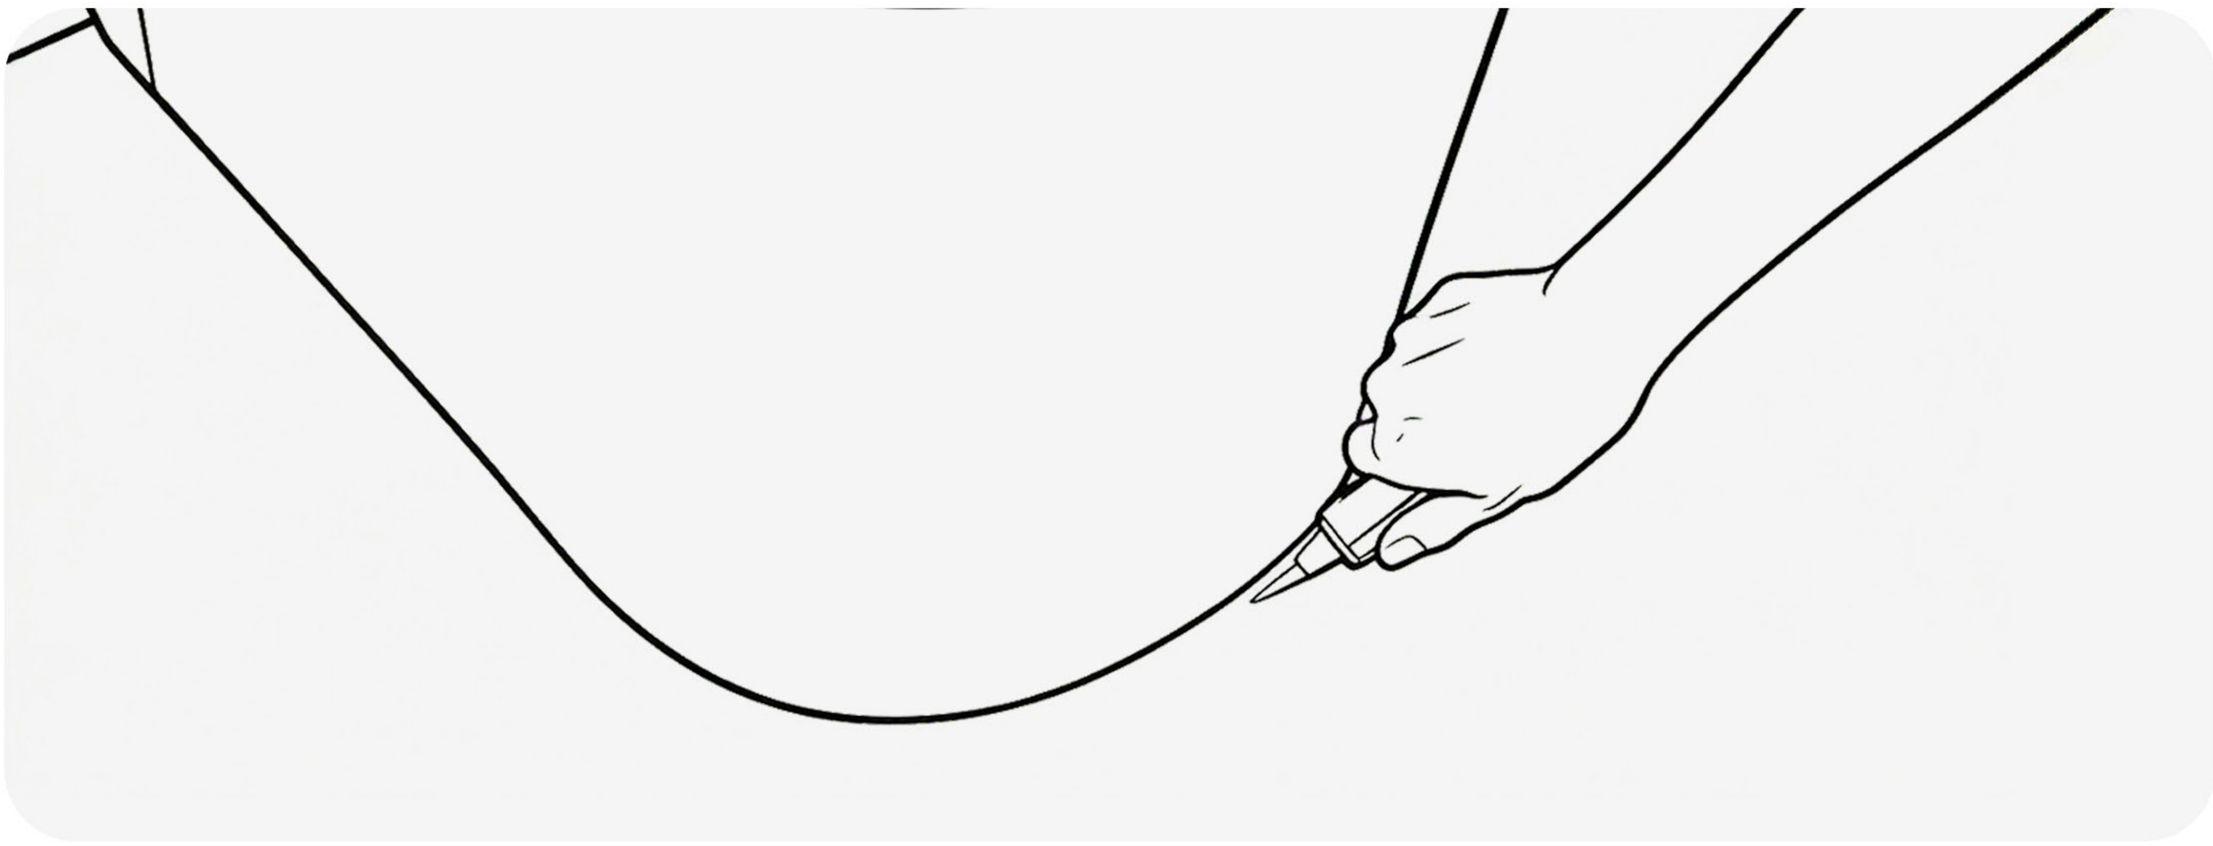

Step 8. Connect the Water Supply

1. **Installation Method A:** Attach the base and 1/2" nut to the water supply pipe, then insert the gold wash. Connect the angle valve to the assembled fitting and tighten securely.
Installation Method B: Attach the base and conncet the angle valve to the water supply pipe.
2. Attach the adapter to the angle valve first. Then connect the 1/4" PE pipe to the adapter.
3. Connect the flexible water supply hose to the angle valve inlet.


Note: If your water valve is 1/2", you can directly connect the angle valve. If your water valve is 3/8", please use the 3/8" female × 1/2" female adapter provided, then connect it. Use Teflon tape on all threaded connections to ensure a watertight seal.

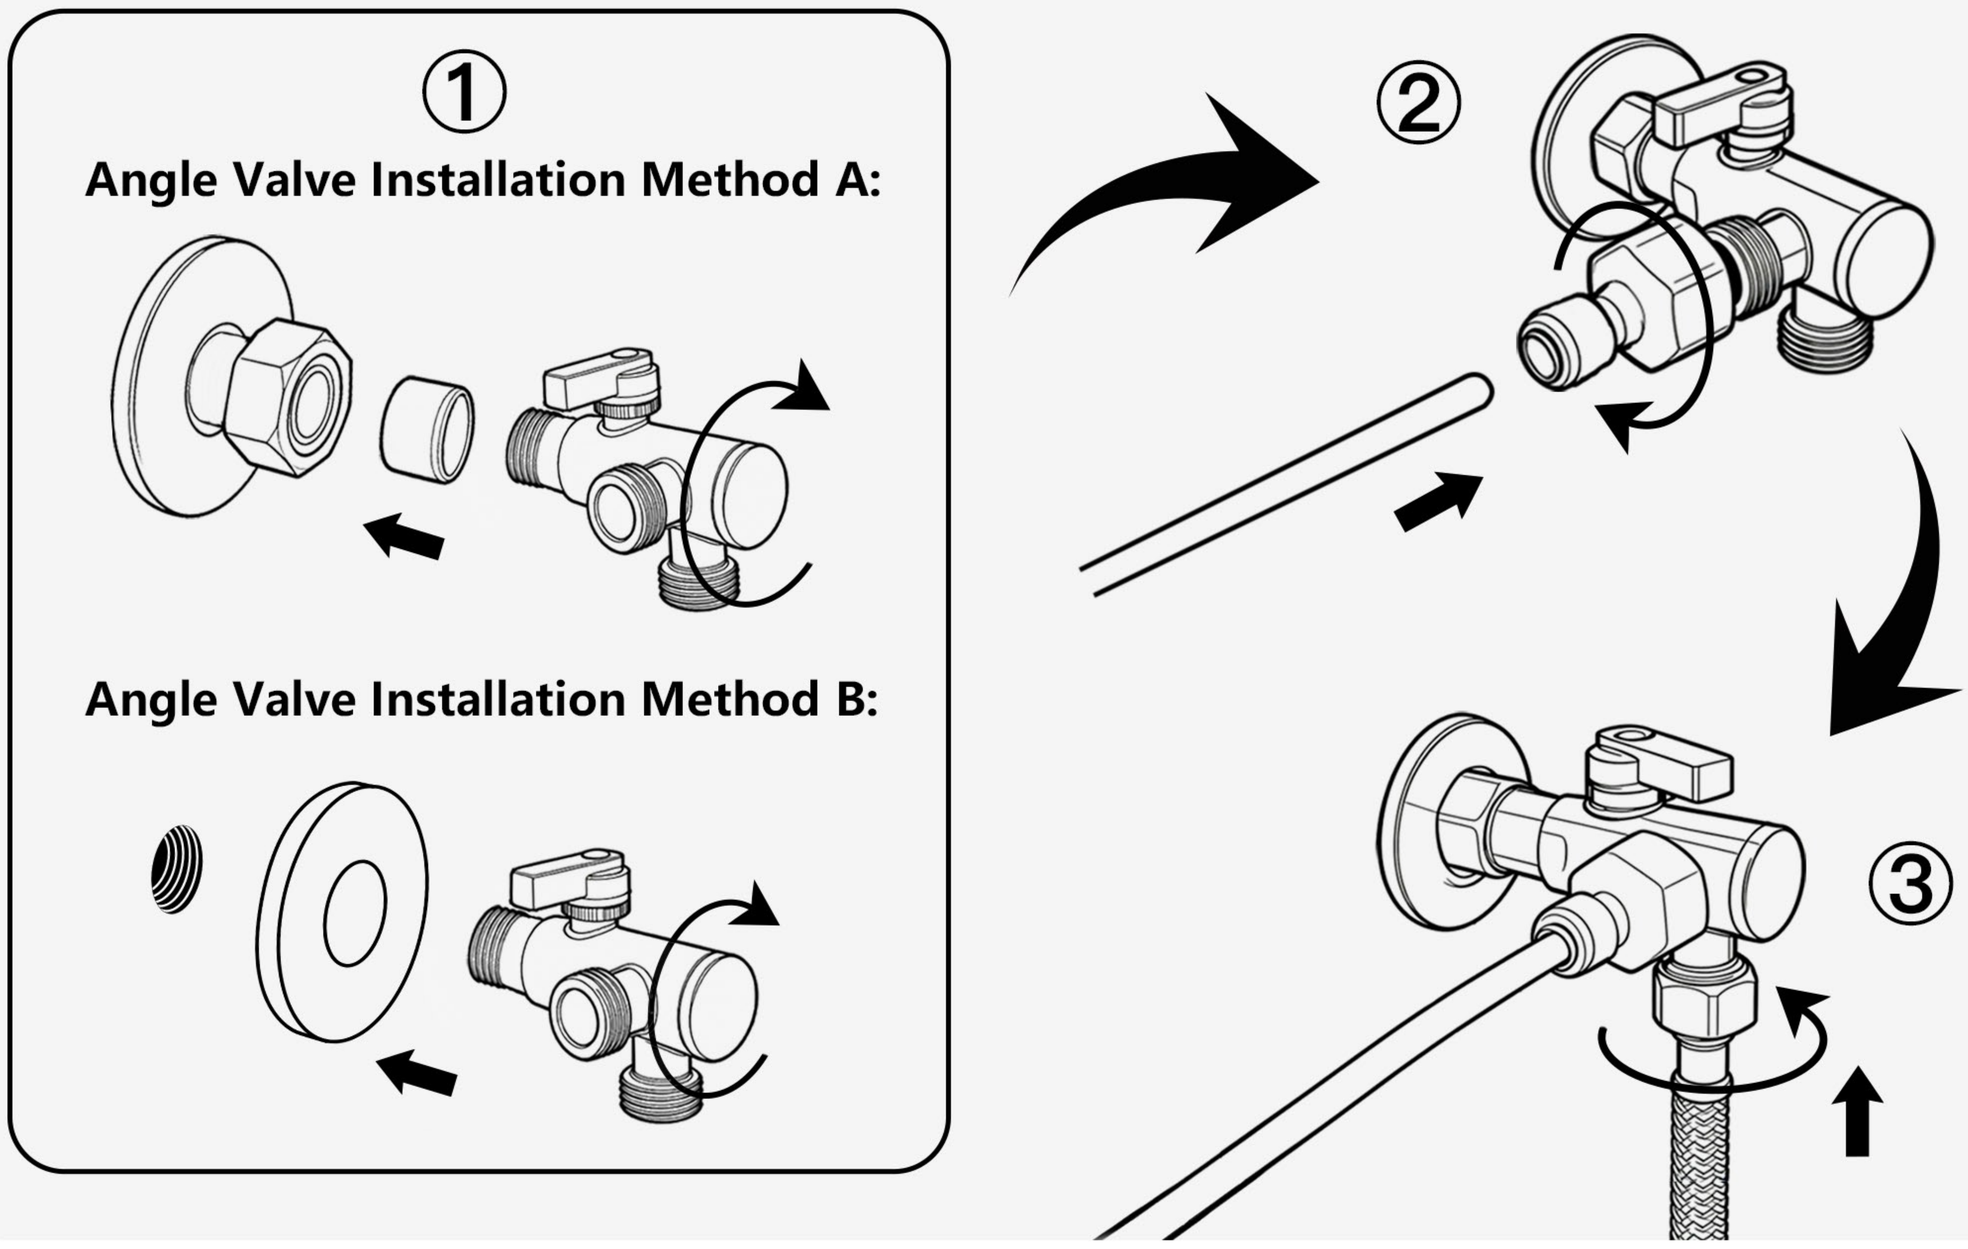

Step 9. Check for Leakage


Turn on the valve and carefully check for leaks.

Note: If leaks occur, retighten all nuts and reinstall them as necessary. If the water pressure is too high, slightly close the angle valve to reduce the water flow.

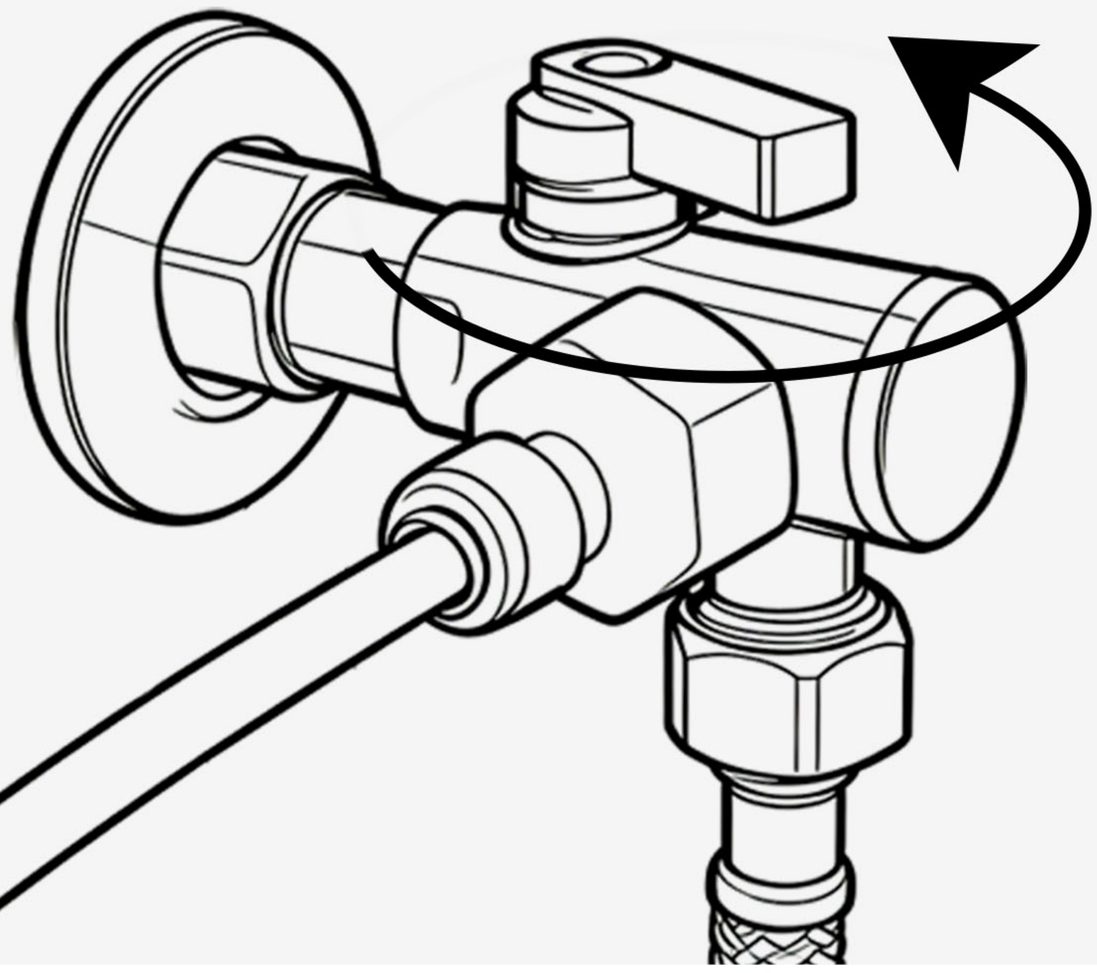

Step 10. Connect the Power Supply

Plug the power cord. Press the RESET button on the power plug. When you hear a beep and the display lights up, the power is on. Press the TEST button to verify the power protection function.

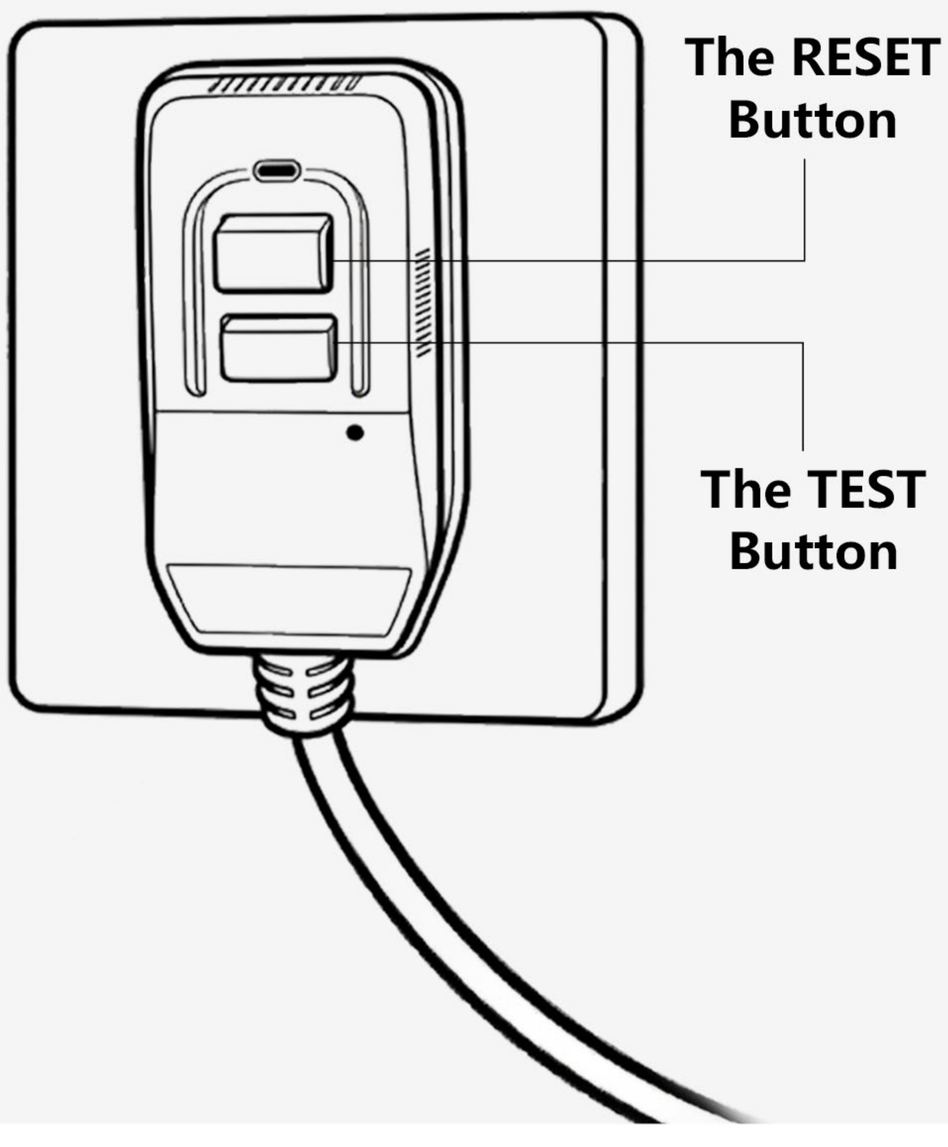

Monthly Test

Test Procedure

1. Plug the unit into the outlet.
2. Press RESET.
3. Press TEST.

Expected Result

The RESET button should pop out and power should be cut off.

Warning


If the device does not trip:

- Stop using the product immediately.
- Disconnect the power.
- Contact a qualified technician.


Backup Battery Installation

If a power outage occurs, the toilet can be flushed using the backup battery.
(A backup battery must be installed when the toilet is first set up.)


Install Batteries

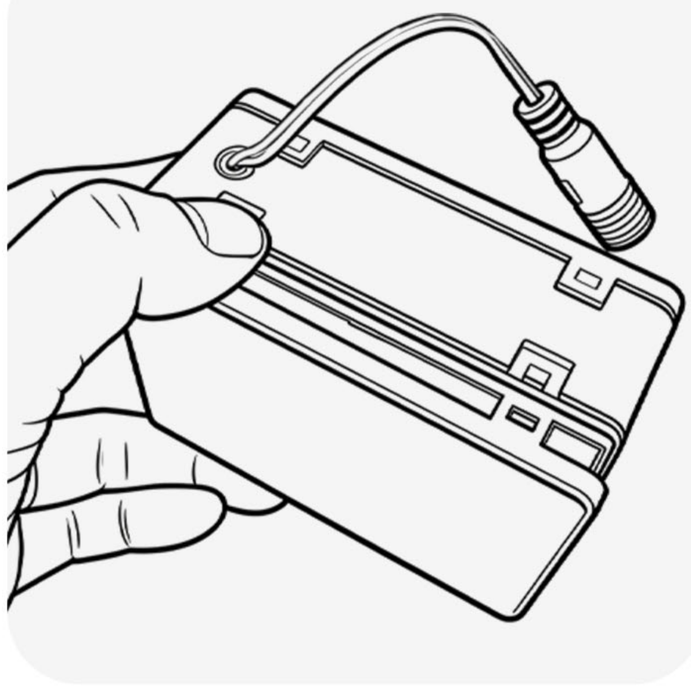

1. Gently open the battery compartment cover.

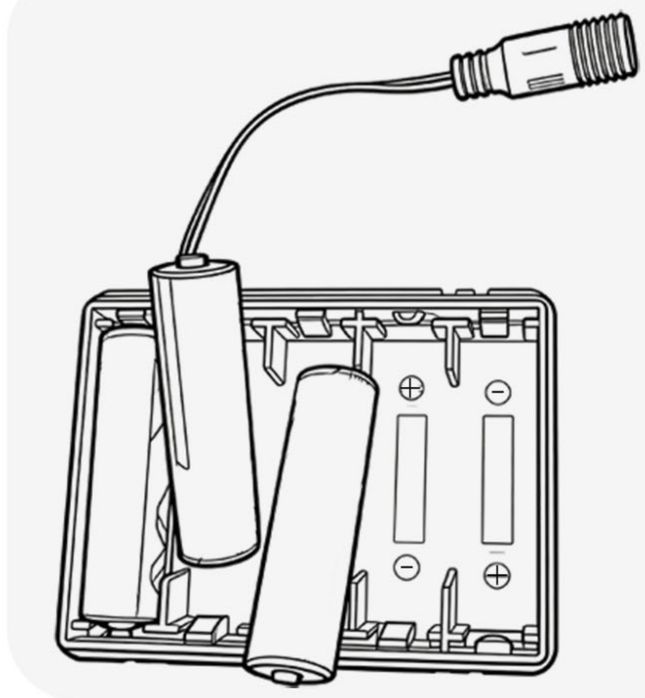


2. Insert 10 AA batteries with the polarity markings facing up.

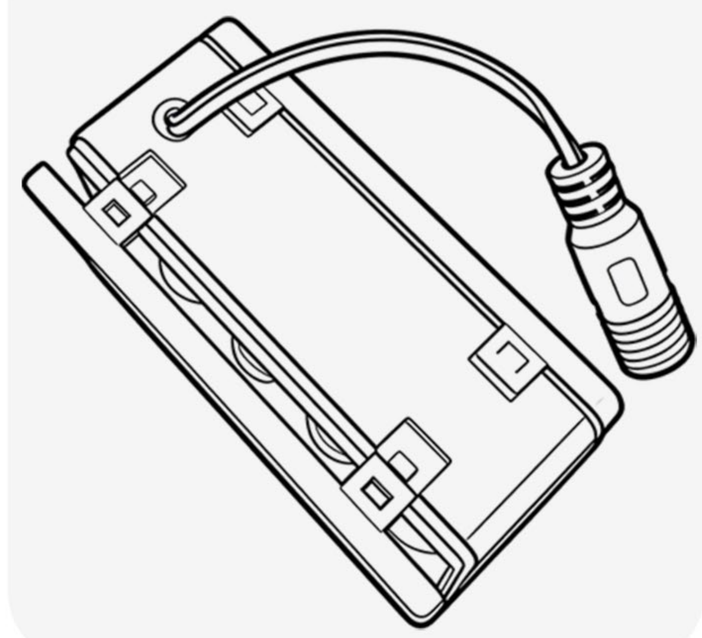


3. After inserting all batteries, close the battery cover securely.

Connect the Backup Battery

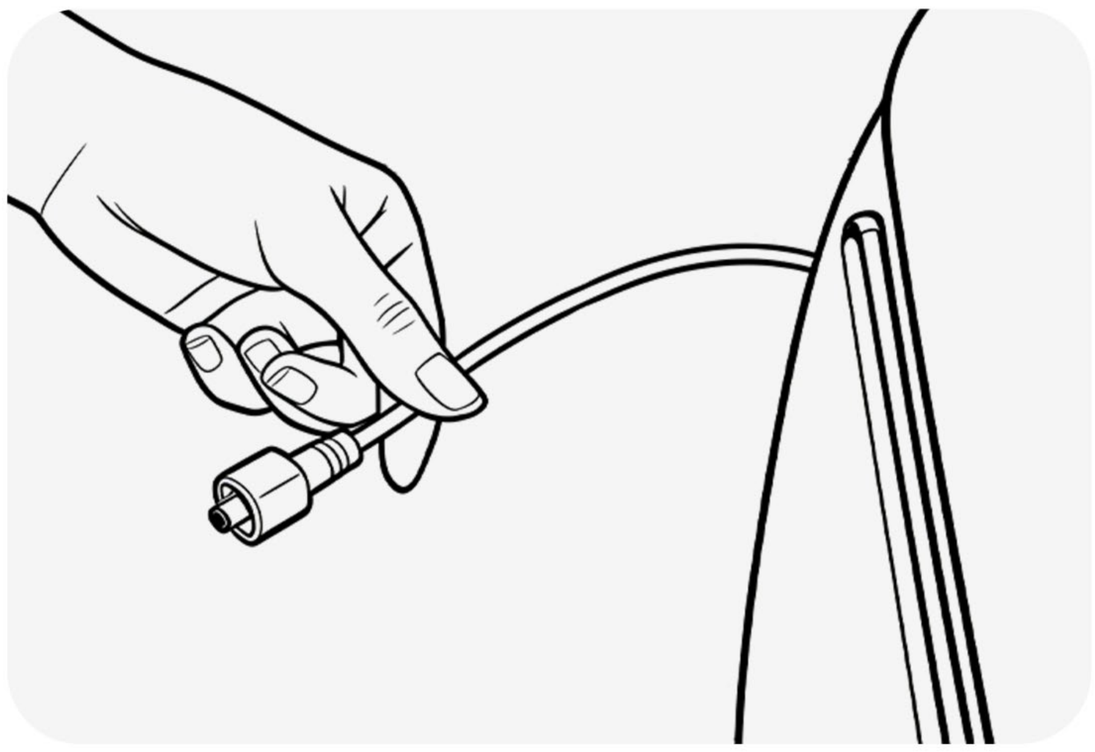

1. Disconnect the main power supply and find the power-outage flushing wire interface at the back of the toilet.

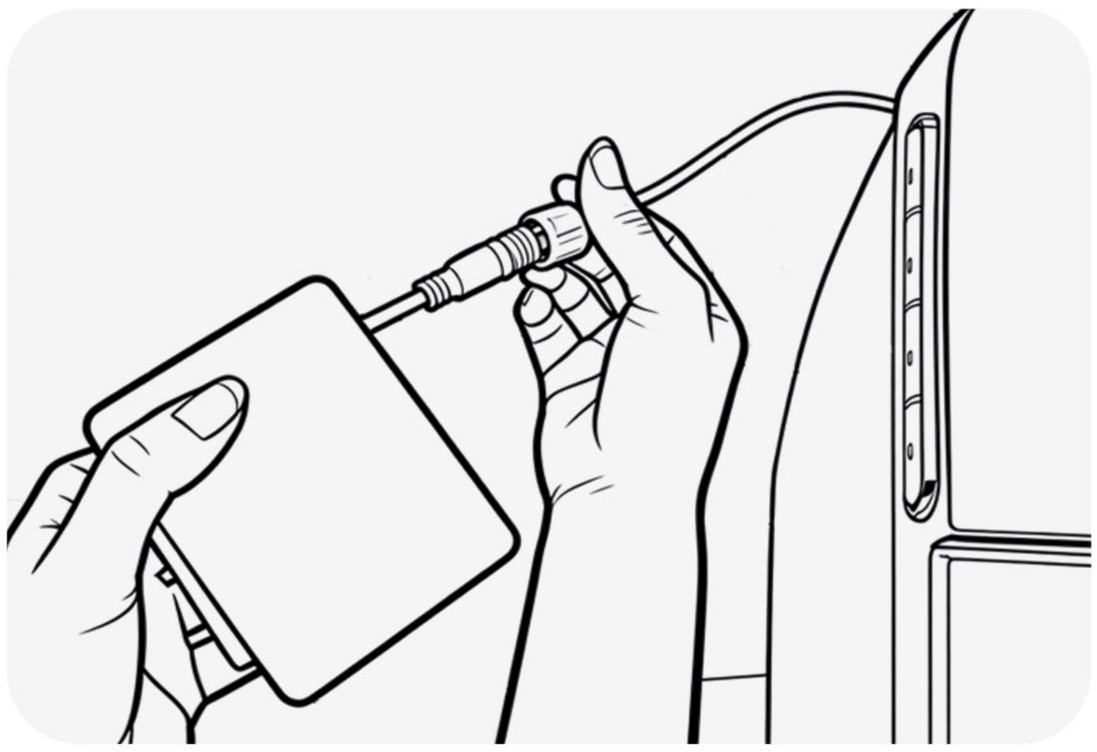


2. Plug the 16V backup battery into the toilet’s connection cable, then place the battery in a dry area behind the toilet.


Note: Press and hold the FLUSH button for 3 seconds to flush during a power outage.

Remote Control Holder Installation

Tape Installation

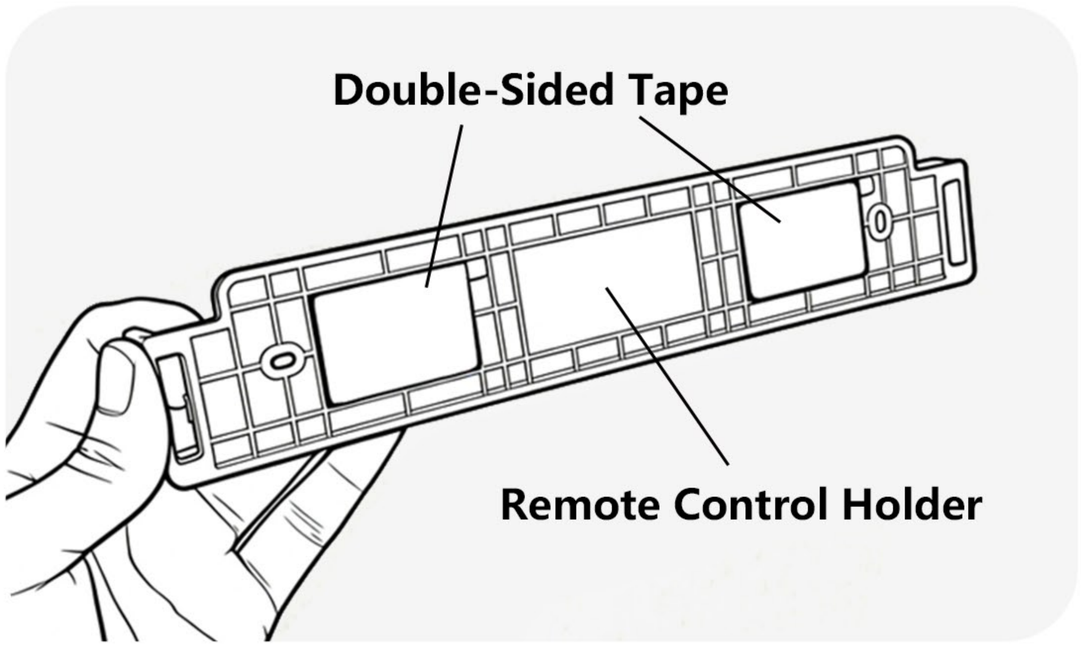

1. Peel the protective backing from the double-sided tape.

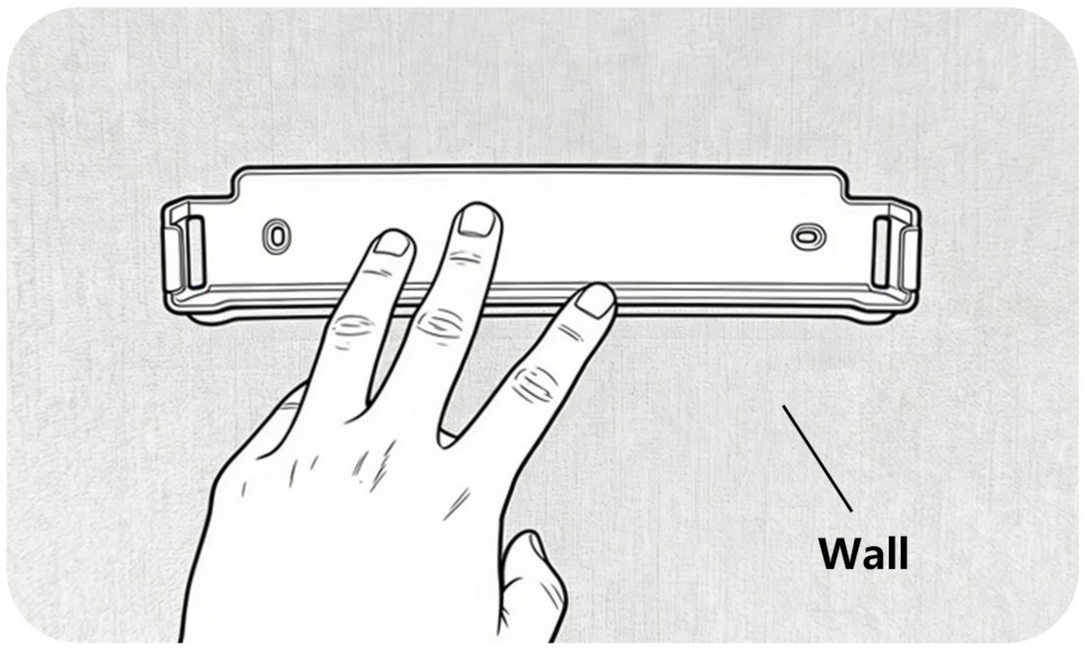


2. Firmly press the Remote Control Holder onto the wall.

Note:


• Clean and dry the installation area thoroughly before applying the tape. Press firmly and evenly across the tape to ensure maximum bond. Allow 15 minutes for the adhesive to set before use.

• The double-sided tape is designed for use on smooth, flat tile walls. Do not use on wallpapered, textured, or porous surfaces.

Screw Installation

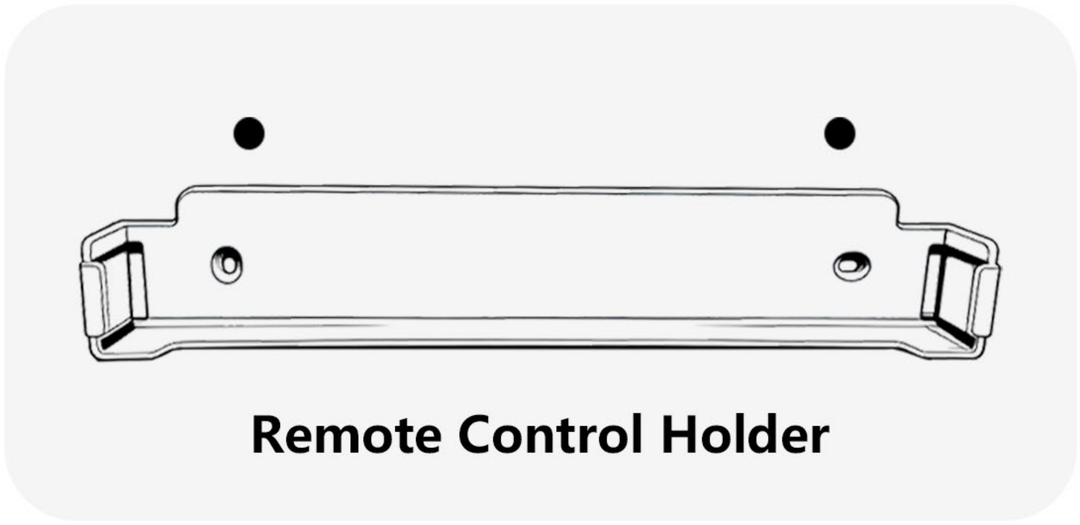


1. Hold the remote control holder against the wall and mark the screw hole positions. Drill holes at the marked positions.

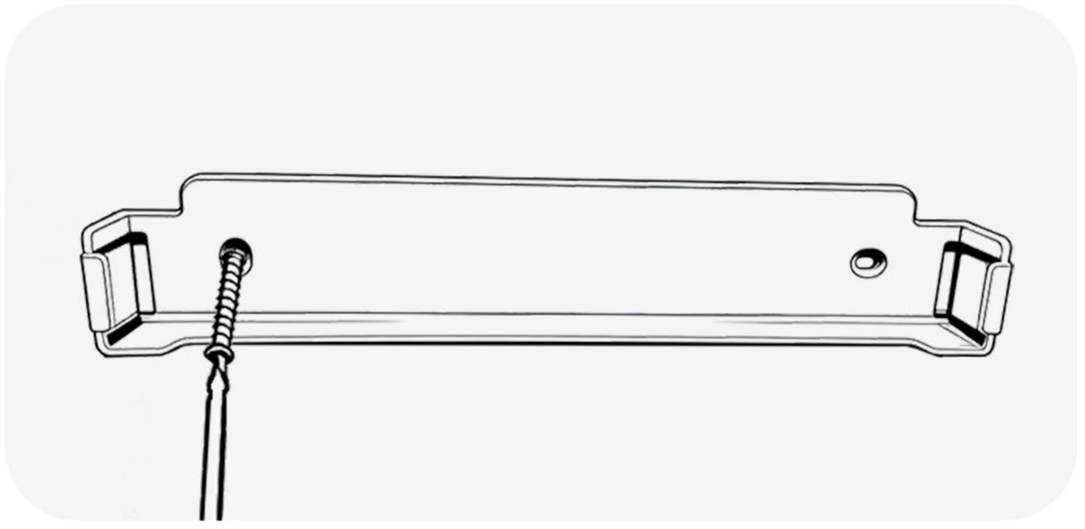


2. Insert the wall anchors into the holes. Align the holder with the holes and secure it using the screws with a screwdriver.

Remote Control Installation

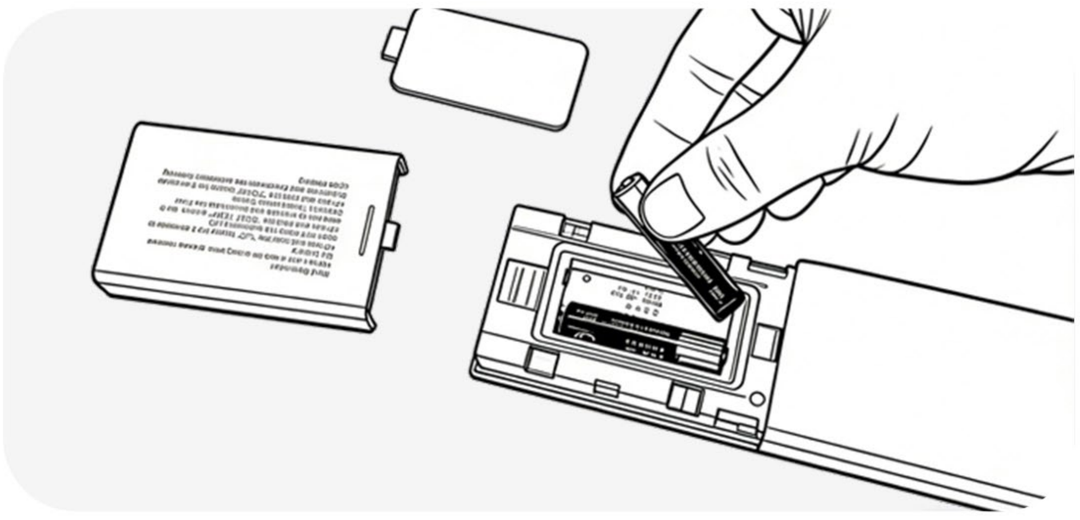


1. Insert two AAA batteries into the remote control, ensuring correct polarity.

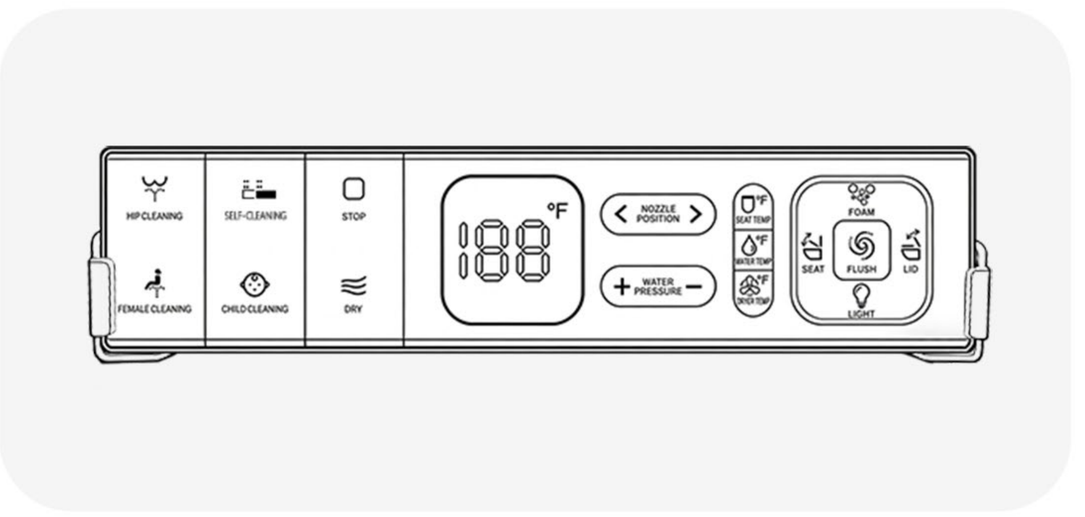


2. Place the remote control onto the holder.


Toilet Cleaner & Fragrance Tablet Installation

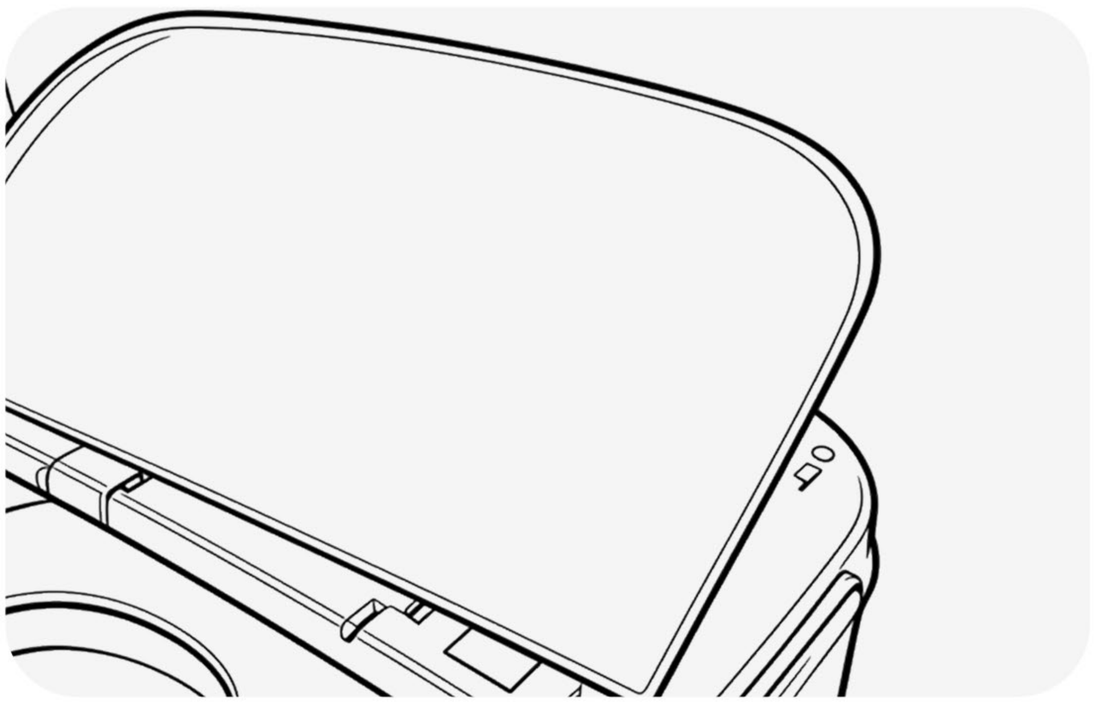

1. Gently slide the back cover backward, then lift it to open.

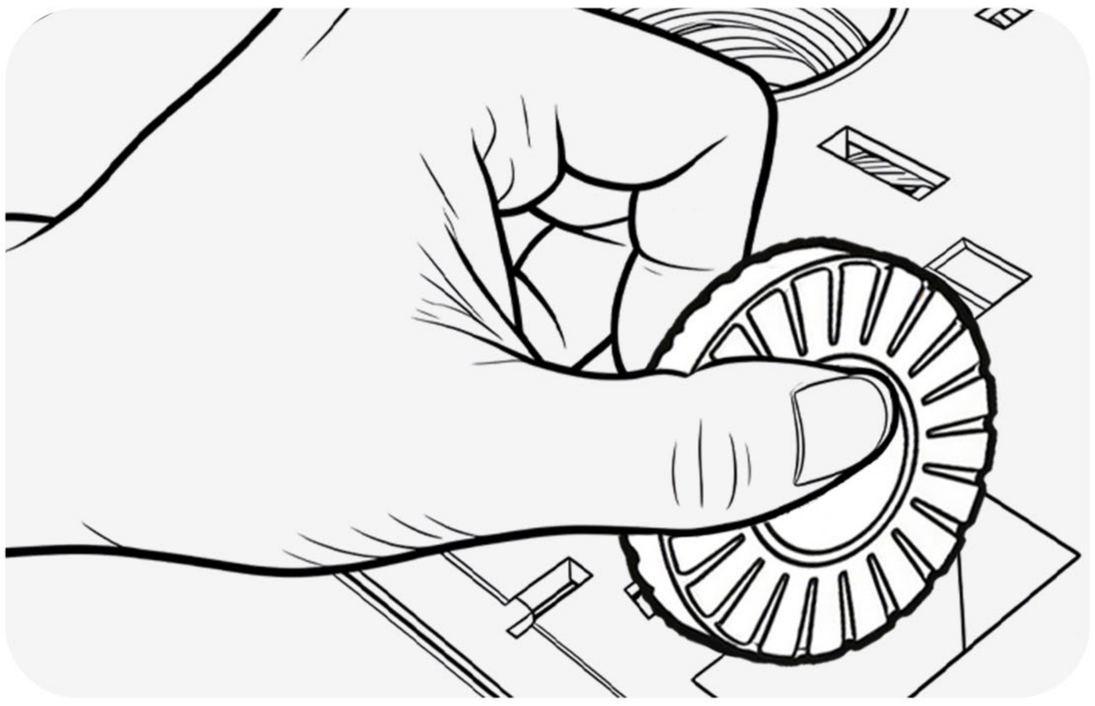

2. Open the toilet cleaner package and place it into the designated compartment.

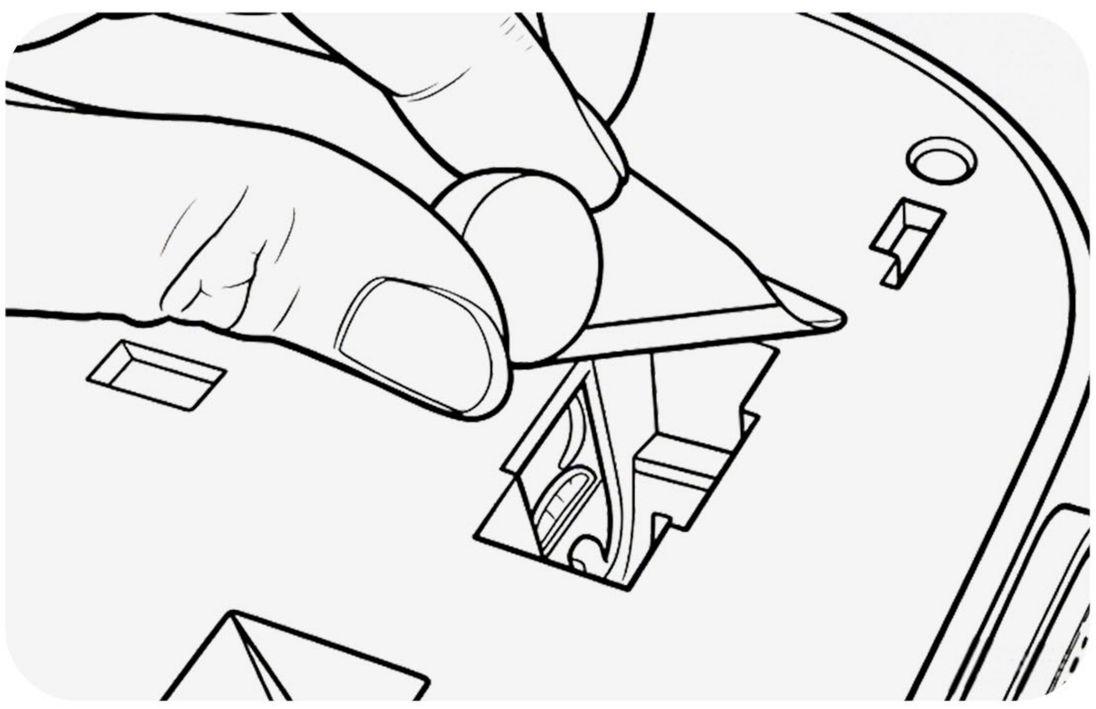

3. Peel off the sticker from the built-in fragrance compartment, insert the fragrance tablet, then reattach the sticker.

Toilet Cleaner – Usage & Precautions

• Keep the blue protective film intact. Do not remove it—it dissolves naturally in the water tank.

• Removing the film may affect dissolution and performance.

• Place the toilet cleaner in the tank and allow at least 20 minutes for full dissolution (until the water turns blue) before flushing.

• Replace the toilet cleaner when the blue color fades completely to maintain effective cleaning.

• This is not a replacement for a toilet brush. It helps keep the toilet bowl clean and reduce residue buildup; stubborn stains still require manual cleaning with a brush.


Fragrance Tablet – Usage & Precautions

• Lift the edge of the sticker on the fragrance compartment (do not remove it completely).


• Tear open the fragrance tablet package, place it into the compartment, then reattach the sticker.

• Replace the fragrance tablet when the scent fades, or add a few drops of essential oil to the existing fragrance pad to refresh the scent.


Foam Liquid Installation & Replacement

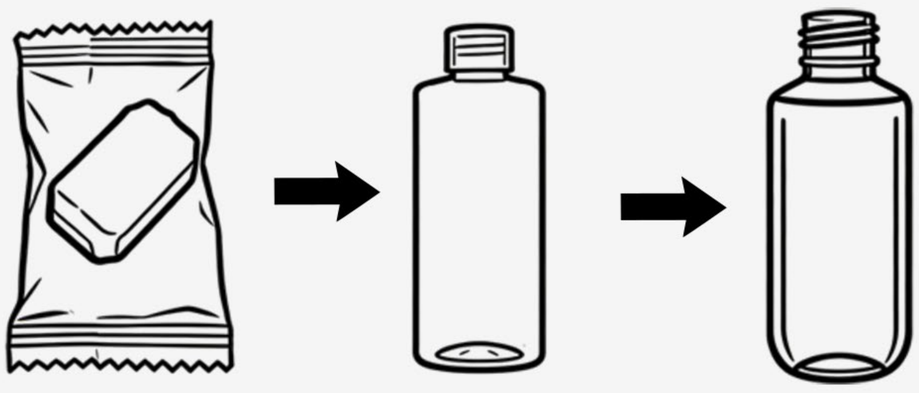


1. Fill the empty bottle with tap water, then add the effervescent tablets and allow them to dissolve completely.

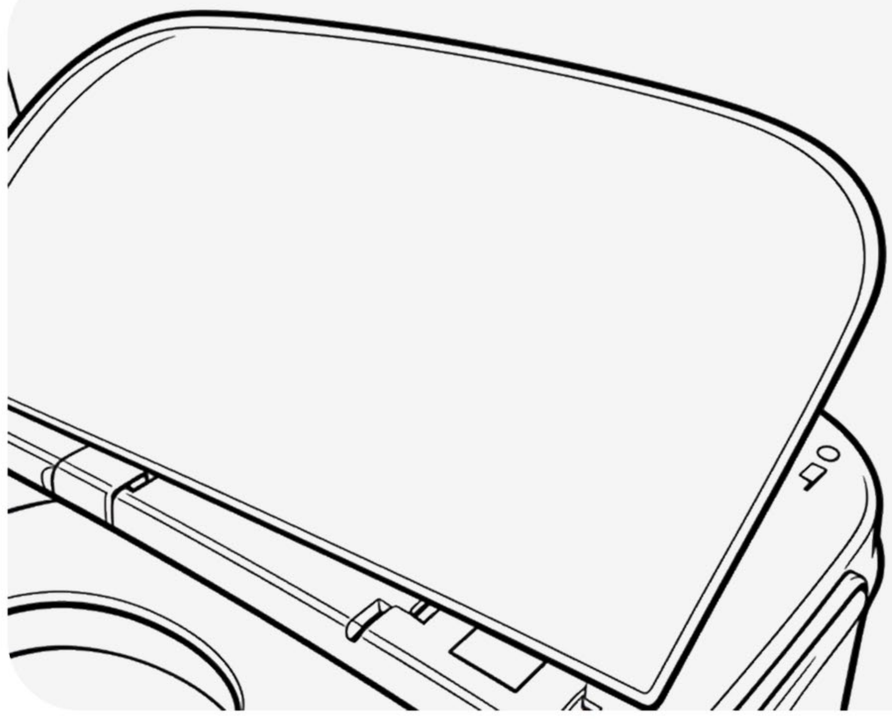


2. Gently slide the back cover backward, then lift it to open.

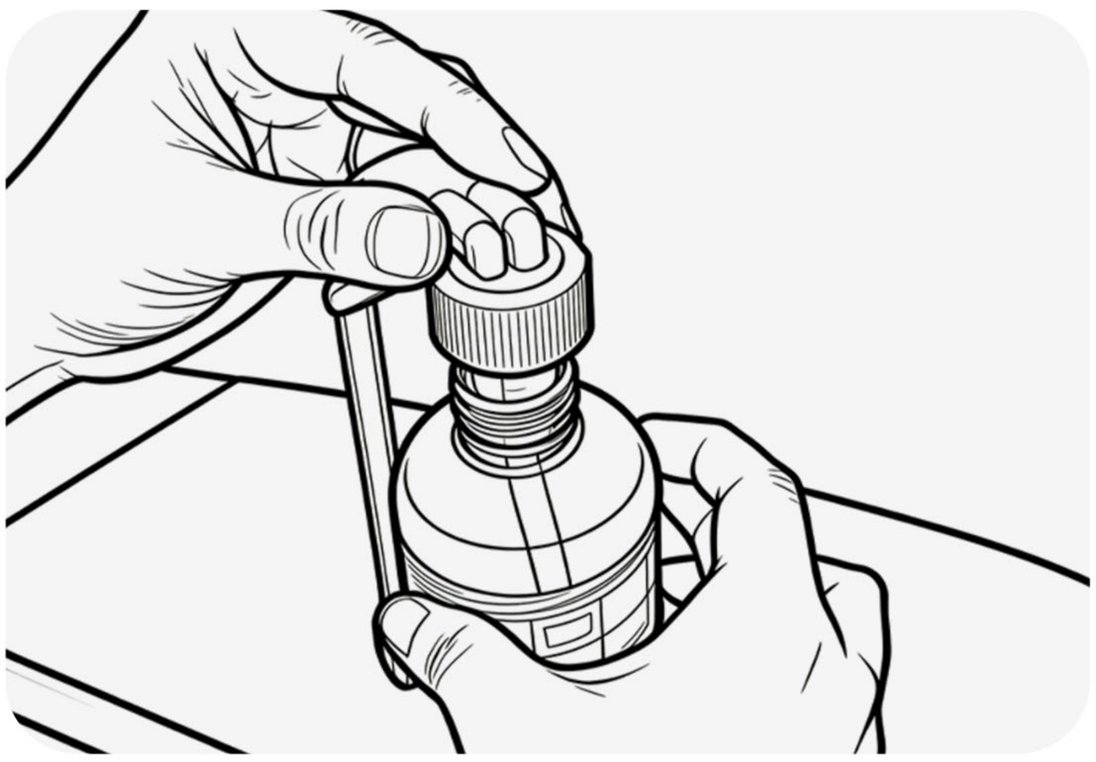

3. Connect the hose to the filled foam bottle and tighten the cap securely.

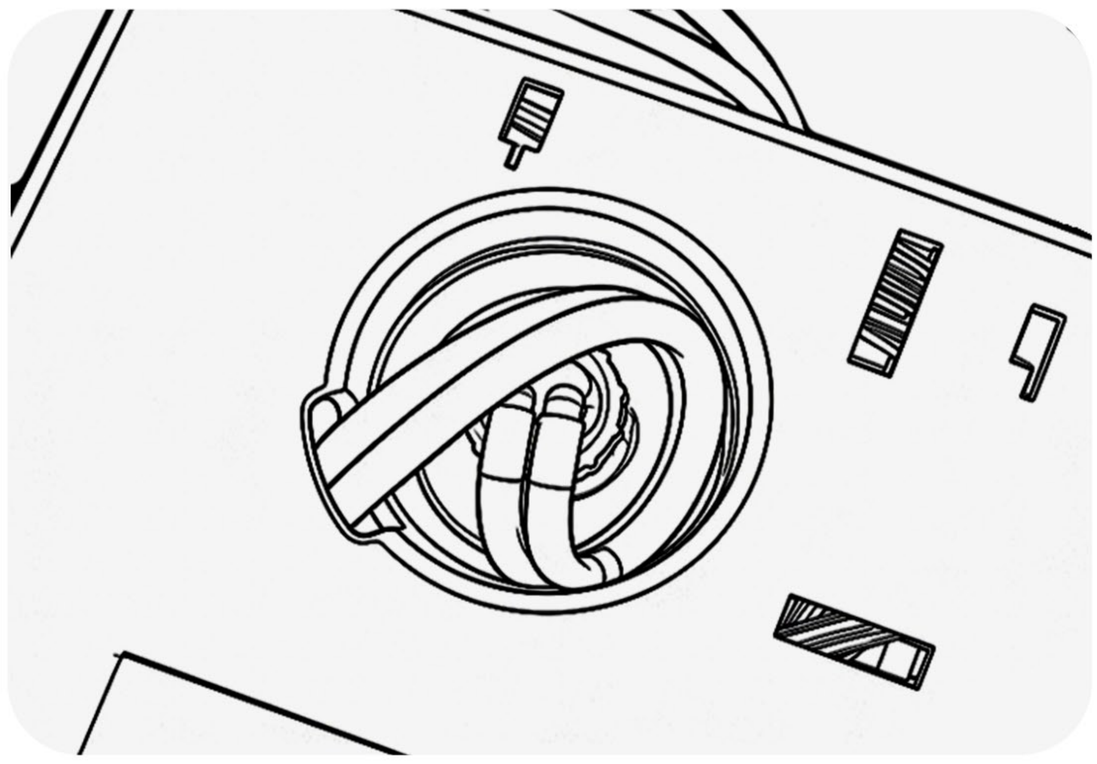

4. Place the foam bottle back into position and reinstall the back cover.

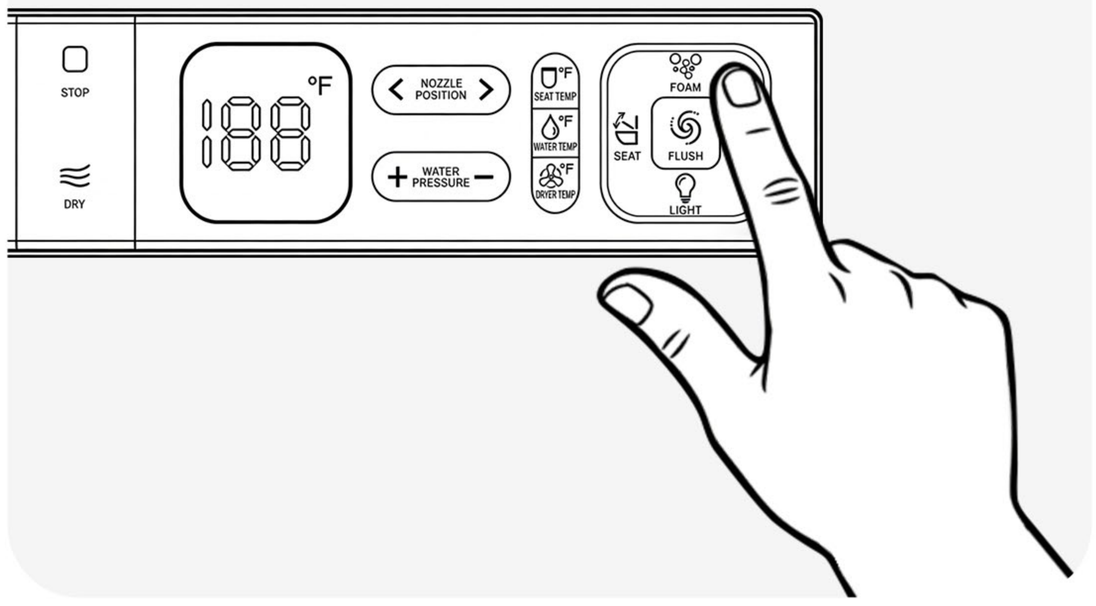

5. Press the "FOAM" button on the remote control and check that the foam function operates normally. Make sure there is no water leakage from the bottle cap.

Note: Make sure the hose is not kinked or twisted, as this may affect foam generation and performance.


Product Test Run

Before using the toilet for the first time, perform the following checks.

1. Power Connection

• Plug the power cord into a 120V AC grounded outlet.


• Confirm that the digital display panel lights up, indicating that power is supplied.

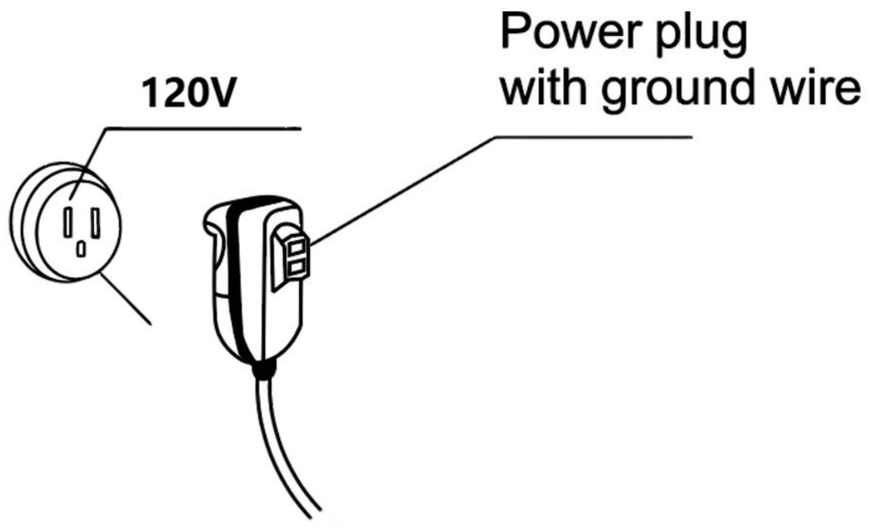

2. Water Connection

• Ensure the water supply angle valve is fully open.

• Check that the water supply hose between the wall water supply angle valve and the toilet inlet valve is properly connected.

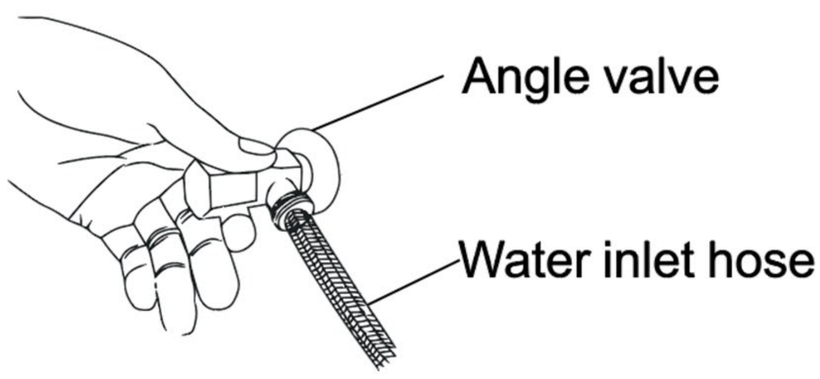

3. Smart Toilet Running

• Press the seat near the sensor and check for a response beep.

• Approach the toilet sensor area to test the automatic open lid. Kick the foot sensor to raise the toilet seat automatically.

• Test all functions using the remote control and side buttons. (Place one hand over the sensor area on the seat to activate cleansing functions.)

Verify the following functions:

• Rear Wash


• Feminine Wash

• Water Pressure Adjustment

• Nozzle Position Adjustment

• Warm Air Dryer

• Air Temperature Adjustment

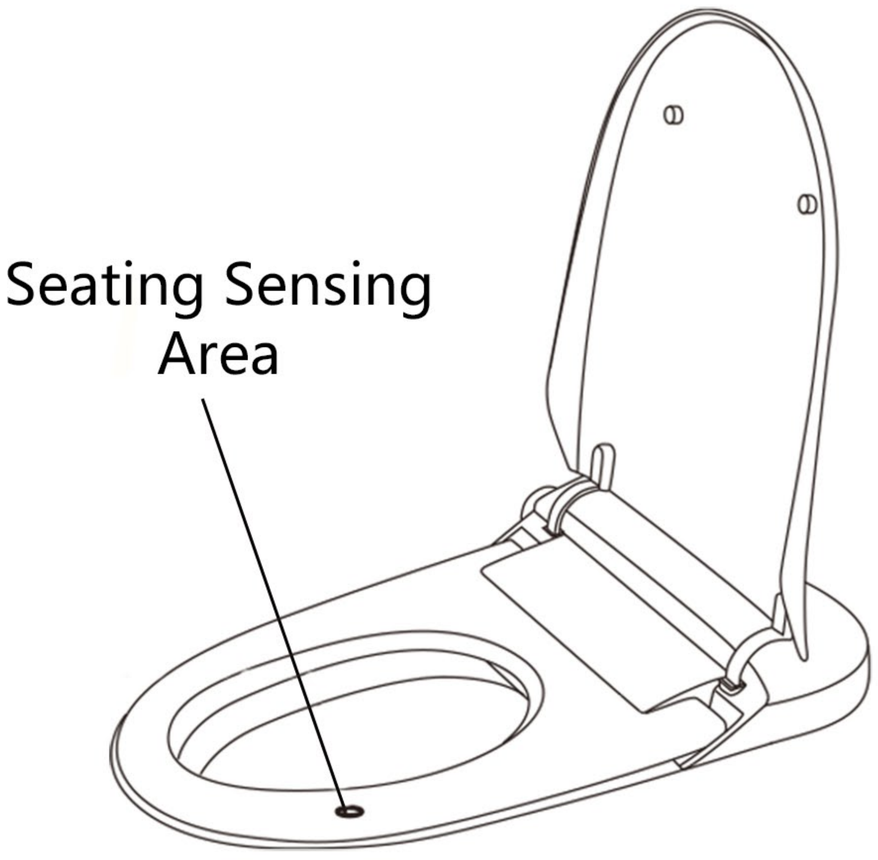

Automatic Sensing Function

Radar Sensing Operation



1. When a person approaches, the lid automatically opens.
2. Kick the foot sensor once to lift the seat ring.
3. Begin using the toilet.
4. Flush starts automatically after 90 seconds.
5. The seat ring/lids will be automatically closed.

Foot Sensor Mode (Auto-Sensing Off)



1. 1st kick: Lift the lid.
2. 2nd kick: Lift the seat ring.
3. Begin using the toilet.
4. Kick the foot sensor again to close the lid/seat and flush.
5. If no further kicks are made, the lid/seat will close and flush automatically 90 seconds after the user leaves.

Side Button Operations

Left Side Buttons

- Press: Flush the toilet.
- Press and hold (3 sec): Turns the auto-flush function ON or OFF.

- Press: Stop any activated wash functions.
- Press and hold (3 sec, when no one is seated): Powers off the toilet and enters minimum power-saving mode.

- Activates only when a user is seated.
- 1st press: Starts rear wash (fixed position).
- 2nd press: Switches to movement wash mode (move back and forth).
- Auto-stops after 90 seconds, or press the Stop Button to end early.

- Activates only when a user is seated.
- 1st press: Starts feminine wash (fixed position).
- 2nd press: Switches to oscillating wash mode.
- Auto-stops after 90 seconds, or press Stop to end early.


Right Side Buttons

- Activates only when a user is seated.
- Press: Starts the warm air dryer and automatically stops after 240 seconds.
- If pressed after a wash function, the toilet will flush first and then start drying.

- Activates only when a child is seated.
- Press: Activates child wash mode, then press Rear Wash or Feminine Wash to start a 90-second cleaning.
- After cleaning, the toilet will flush automatically and activate the dryer function for 240 seconds.

- Automatically activates when seated.
- Press: Pauses fragrance function for the current use.
- Press and hold (3 sec): Turns the auto-fragrance function ON or OFF.

Remote Control Operations

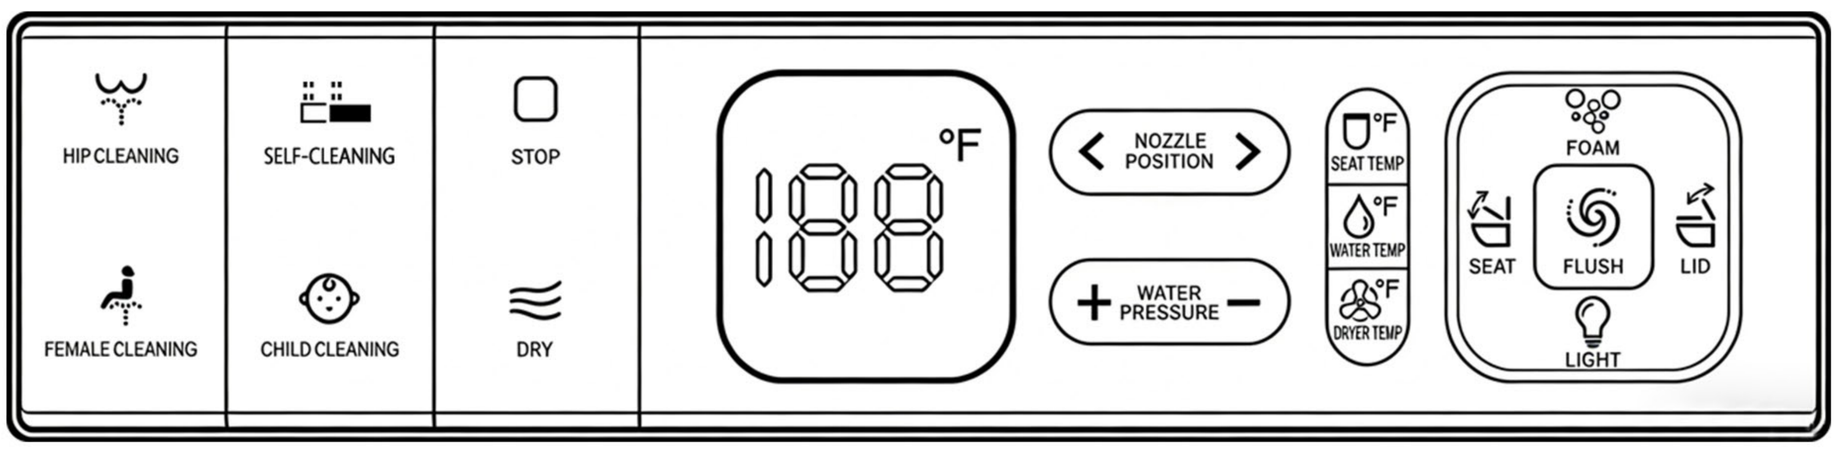

Remote Control Pairing

If the remote control does not respond, pair it with the toilet as follows:
1. Make sure the toilet is powered on and no one is seated on the toilet seat.
2. Press and hold the (HIP CLEANING) button on the side control panel for 3 seconds until you hear a long beep.
3. Immediately press any button on the remote control. When you hear a short beep, the remote control has been successfully paired.

HIP CLEANING (Rear Wash)

Sit on the toilet seat and press HIP CLEANING button. The nozzle will extend for washing. Press the HIP CLEANING button again to activate the movement wash mode. The function stops automatically after 90 seconds, or press the STOP button.

FEMALE CLEANING (Feminine Wash)

Sit on the toilet seat and press FEMALE CLEANING button. The nozzle will extend for feminine wash. The function stops automatically after 90 seconds, or press the STOP button.

SELF-CLEANING (Nozzle Self-Cleaning)

Press the SELF-CLEANING button when the toilet is not in use. The nozzle will extend and clean itself automatically. Press the button again to stop movement and switch to a fixed position for manual cleaning if needed. The function stops automatically after 60 seconds, or press STOP to end it manually.
Note: Do not use excessive force when cleaning the nozzle.

CHILD CLEANING (Child Mode)

Press CHILD CLEANING button, then press HIP CLEANING button or FEMALE CLEANING button to start a 90-second wash cycle. After washing, the toilet will automatically flush and begin the 240-second drying function.
Note: For 5 minutes after child mode is activated, only HIP CLEANING, FEMALE CLEANING, or DRY can be used. Press CHILD CLEANING button again or STOP button to exit child mode.

▢ STOP

Press STOP button to stop any active function.
Press and hold STOP button for 3 seconds to turn the toilet power on or off.

≋ DRY

Sit on the toilet seat and press DRY button to start the warm air dryer.
Drying stops automatically after 240 seconds, or press STOP button.

< NOZZLE POSITION

During HIP CLEANING or FEMALE CLEANING, press this button to move the cleaning nozzle forward.

> NOZZLE POSITION

During HIP CLEANING or FEMALE CLEANING, press this button to move the cleaning nozzle backward.

+ WATER PRESSURE

During HIP CLEANING or FEMALE CLEANING, press the (+) button to increase water pressure.
Pressure levels: Low → Medium → High → Boost.
*Press and hold the (+) button for 3 seconds to turn energy-saving mode on/off.

— WATER PRESSURE

During HIP CLEANING or FEMALE CLEANING, press the (–) button to decrease water pressure.
Pressure levels: Boost → High → Medium → Low.
Press and hold the (–) button for 3 seconds to activate the nozzle self-cleaning.

℉ SEAT TEMP

Press the SEAT TEMP button to adjust the seat temperature. There are 4 levels: Room temp, 93°F, 99°F, 104°F.

Four-Season Auto Mode

When activated, water temperature, dryer temperature, and seat temperature adjust automatically based on ambient temperature. Manual temperature adjustment is disabled in Four-Season Mode. To adjust manually, you must first exit the mode. Press and hold SEAT TEMP button for 3 seconds: 1 beep means Four-Season Mode is ON, and 2 beeps mean it is OFF.

WATER TEMP

During HIP CLEANING or FEMALE CLEANING, press the WATER TEMP button to adjust water temperature. There are 4 levels: room temp, 93℉, 99℉, and 104℉.

DRYER TEMP

During the drying function, press the DRYER TEMP button to adjust the air temperature. Four adjustable levels are available.

FOAM

The automatic foam shield function is disabled by default. When enabled, the foam shield will activate automatically when the user sits on the toilet seat. To toggle this function, press and hold the FOAM button on the remote control for more than 3 seconds: one beep indicates the function is enabled, and two beeps indicate it is disabled. Press the FOAM button to activate the foam shield, whether seated or not.
Note: This function is available only after the foam liquid has been installed.

LID

Press the LID button to open the toilet lid. Press again to close the lid.

SEAT

Press the SEAT button to open the toilet seat ring. Press again to close the seat ring.

FLUSH

Press the FLUSH button to flush the toilet.

LIGHT

Press the LIGHT button to turn the night light on or off.
Press and hold the LIGHT button for 3 seconds to turn the side ambient light on or off.

*Some functions may take a few seconds to respond. This is normal system operation and does not indicate a malfunction.

Advanced Function Settings

Automatic Lid Opening (On/Off Setting)

The toilet lid opens automatically when a user approaches.
To disable: Press and hold the (LID) button on the remote control for 3 seconds. Two beeps indicate the function is disabled.

To enable: Repeat the same steps. One beep indicates the function is enabled.
Note: When disabled, the lid can still be opened via the foot sensor or remote control.

Pre-Wet Function (On/Off Setting)

The Pre-Wet function automatically wets the bowl when the user is seated to help prevent waste from sticking. This function is disabled by default.

To enable:
1. Press and hold the (STOP) button on the remote control for 3 seconds to turn off the toilet.
2. Within 3 seconds, press the (SEAT TEMP) button.
3. One beep indicates the Pre-Wet function is enabled.
4. Press the (STOP) button again to turn the toilet back on.

To disable: Repeat the same steps. Two beeps indicate the function is disabled.

Auto-Flush (On/Off Setting)

The toilet flushes automatically when the user leaves the seat after use.
To disable: Press and hold the (FLUSH) button on the remote for 3 seconds.
Two beeps confirm the function is off.

To enable: Repeat the same steps. One beep confirms the function is on.

Automatic UV Sterilization (On/Off Setting)

This function is enabled by default. The lid closes automatically 90 seconds after use. UV sterilization starts 60 seconds after lid closure and runs for 60 seconds. Sterilization stops automatically if the lid is opened.

To disable:
1. Press and hold the (STOP) button for 3 seconds to turn off the toilet.
2. Within 3 seconds, press the (HIP CLEANING) button once.
3. Two beeps will sound and the display will show "00", indicating the function is disabled.
4. Press and hold the (STOP) button again for 3 seconds to turn the toilet back on.

To enable: Repeat the same steps. One beep will sound and the display will show "01", indicating the function is enabled.

Cleaning & Maintenance

Regular maintenance is required to ensure normal use.

Cleaning the Unit




• Wipe dust or stains with a soft wet cloth.
• For easier cleaning, the toilet seat can be removed from the ceramic bowl, allowing access to the area between the seat and the bowl.

⚠ Important:

Do not use abrasive cleaners, such as alcohol, bleach, cresol, benzene, etc.

Cleaning the Power Plug

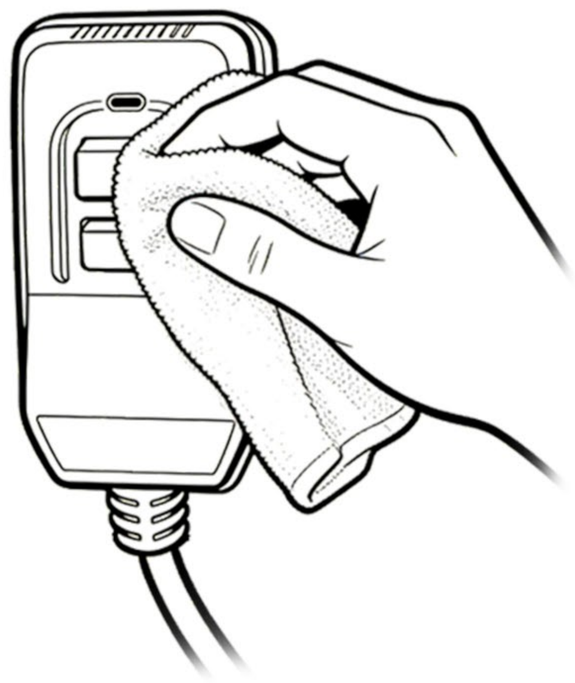

Dust may accumulate on the power plug over time.
Disconnect the power plug from the outlet.
Wipe the plug with a dry cloth.

⚠ Important:

Dust or moisture on the plug may reduce insulation and could create a fire hazard.

Nozzle Cleaning



If the spray nozzle becomes dirty, clean it with a soft brush.

⚠ Important:

Do not pull, stretch, or bend the nozzle during cleaning.

Troubleshooting

This troubleshooting guide is intended to help identify and resolve common issues.
If the problem cannot be resolved using the solutions below, please contact our customer service for assistance.

Problem	Possible Cause	Solutions
Power Button		
Not working	Check if the power plug is loose or not	Check the circuit
	Check whether there is any electric leakage or not	Unplug the unit, press RESET on the plug, then reconnect the power. If still unresponsive, unplug and contact a professional repair.
Cleaning Function		
No water spray	Check whether the water supply is cut off or not	Wait for the water supply restoration
	Check whether the angle valve switches off or not	Open the angle valve
	Check whether the water filter is blocked or not	Clean the filter mesh or change the water filter
	Check whether the inlet pipe is flexed or not	Straighten the hose
Weak spray pressure	Check whether the cleaning pressure is at the lowest level	Adjust the water pressure according to the manual
	Check whether the water filter is blocked or not	Clean the filter mesh or change the water filter
The water temperature is not warm enough	Check whether the water temperature is set to a low level	Adjust the water temperature according to the manual
Spray is not working properly	Abnormal operation	Unplug the attaching plug for one minute and then plug it again
The cleansing is always leaking	Solenoid valve malfunction	Please contact our customer service
Dryer		
Dryer blows cold air	Check whether the dryer switches off or not	Adjust the temperature according to the manual
	Check whether the dryer heating element is damaged or not	Please contact our customer service
Heated Seat		
Seat is not warm	Check whether the temperature of the toilet seat is off or not	Turn on the seat heating function
	Check whether the seat temperature is set to a low level	Adjust the seat temperature according to the manual
	Check whether the power-saving mode is enabled	Disable power-saving mode in the settings

Problem	Possible Cause	Solutions
Remote Control		
Remote control is not working	Low battery	Replace the batteries
	Check whether there is any water on the remote control or not	Wipe with a dry cloth
	Signal blocked or too far from the unit	Move closer to the toilet
Sensor Detection		
Cleaning function does not start	Check whether the sensor area is blocked	Remove objects near the seat sensor
	Check whether the user is not fully seated	Sit fully on the seat so the sensor can detect the user
	Sensor malfunction	Please contact our customer service
Flushing		
Toilet does not flush	No power supply	Restore the power supply
	The water supply is turned off	Turn on the water supply
	Internal component malfunction	Please contact our customer service

Warranty

Two-Year Limited Warranty

Our product is manufactured with high-quality materials and craftsmanship to ensure long-lasting durability. We offer a 2-year limited warranty. If you encounter any issues during use, please feel free to contact us at any time. We shall not be liable for any damage or loss resulting from improper installation, improper repair, or inadequate maintenance. We strongly recommend installation by a licensed professional plumber.

In requesting warranty service, please be ready to provide:
1. Proof of purchase
2. The item number & Qty of the defective item(s)
3. A complete description of the problem
For any questions or claims, please send emails to **customer@leftonhome.com**.