

INSTALLATION
Product Manual

Version: 150322US-01-26A-XD

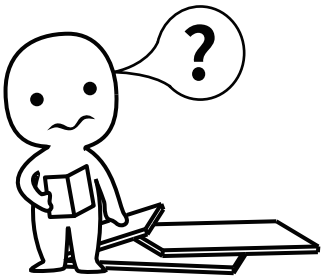


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

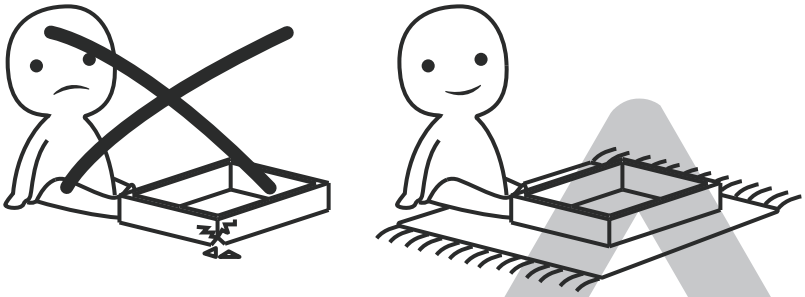


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

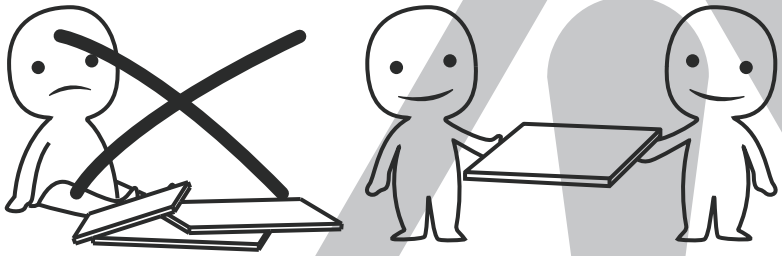

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

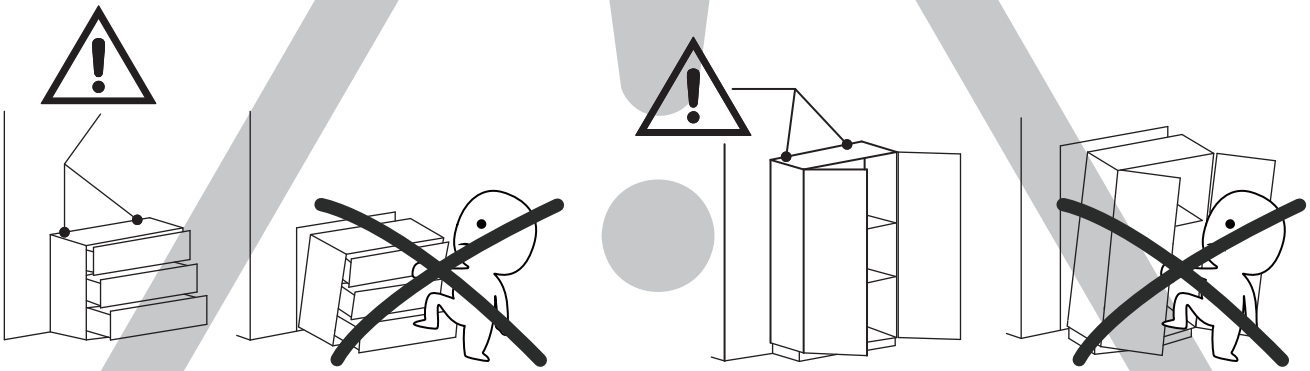

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.





For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




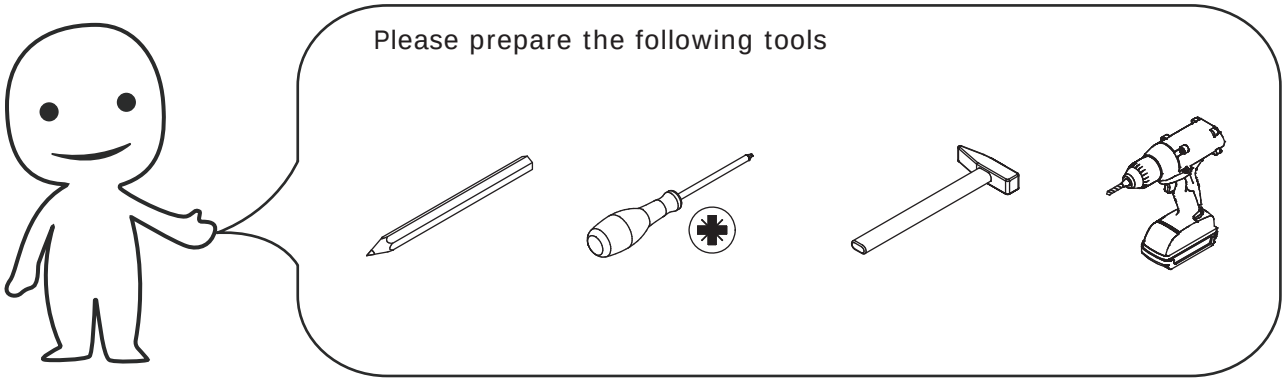





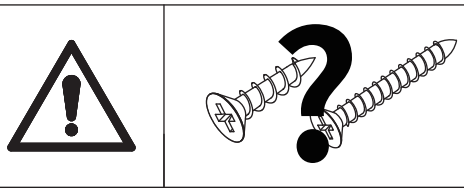





When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

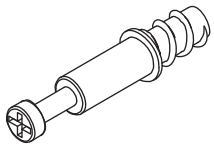


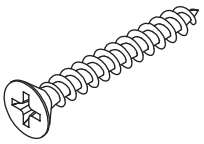
A x 132+4	B x 143+4	C x 102+4	D x 30+3
			
∅6 x 35 mm	∅15 x 9 mm	∅6 x 30mm	∅4 x 35mm


E x 64+4	F x 11+1	G x 16+2	H x 4
			
∅3 x 12 mm	∅6 x 60 mm	∅5 x 25 mm	

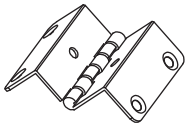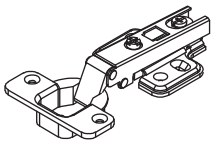J x 8	K x 2	L x 8+1	M x 8
			
		∅3 x 14 mm	

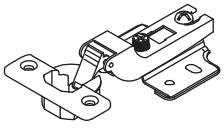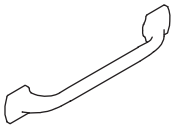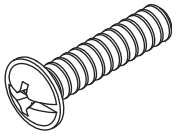N x 8	O x 96+4	P x 12	Q x 16+2
			
	∅4 x 14 mm		∅4 x 16 mm

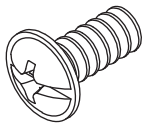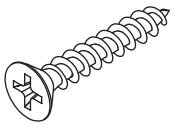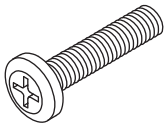R x 8+1	S x 4	T x 11+1	U x 8
			
∅4 x 8 mm	∅4 x 25 mm	∅6 x 10 mm	∅6 x 25 mm

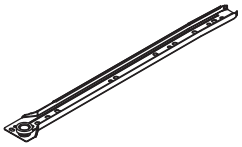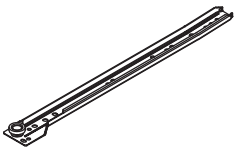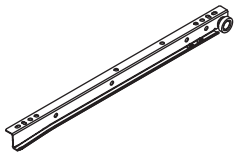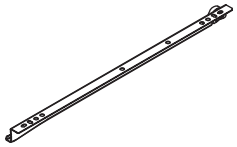CL x 4	CR x 4	DL x 4	DR x 4
			
350 mm	350 mm	350 mm	350 mm

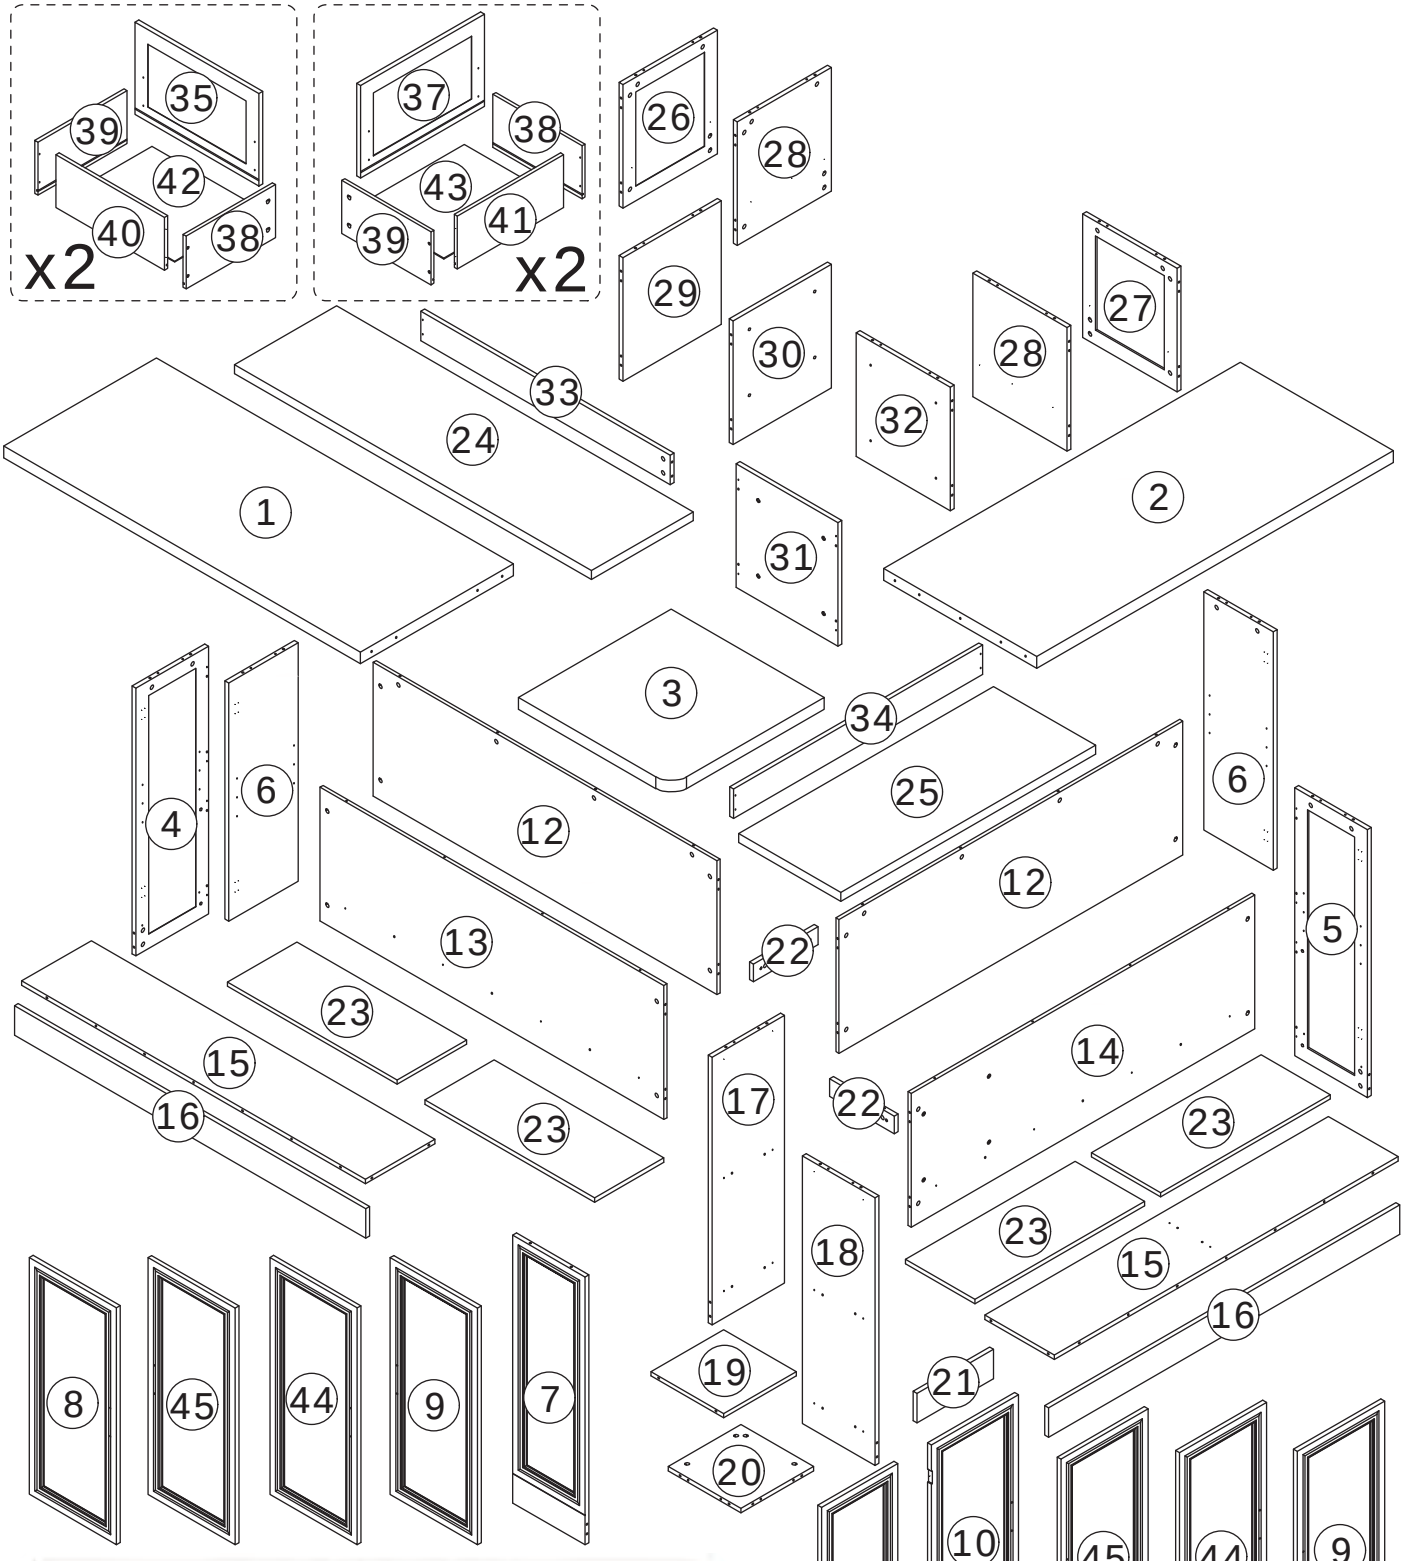


⚠WARNING
















Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

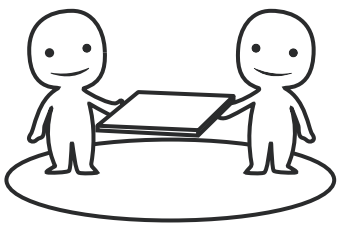


ASSEMBLED BY 2 ADULTS

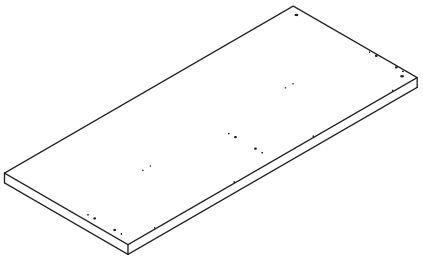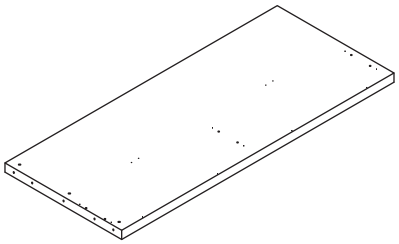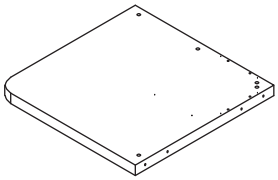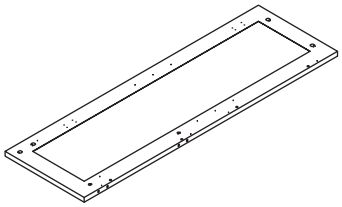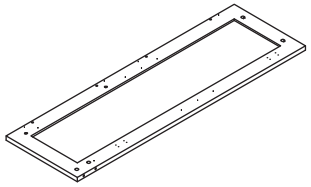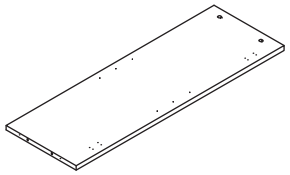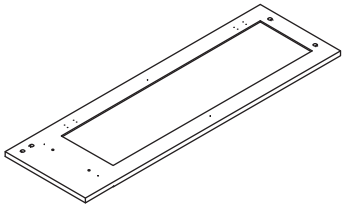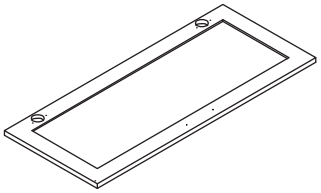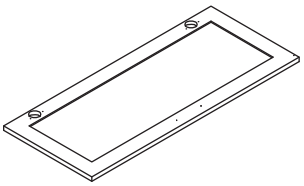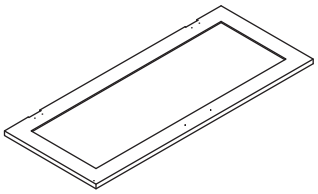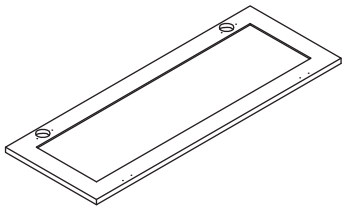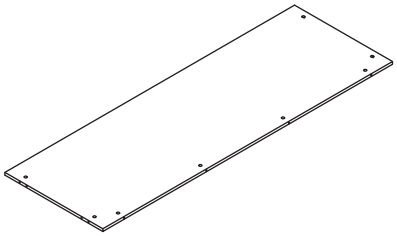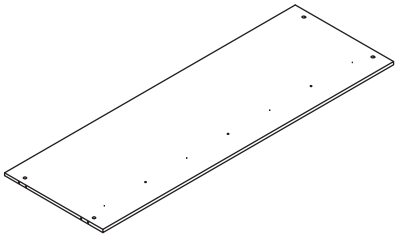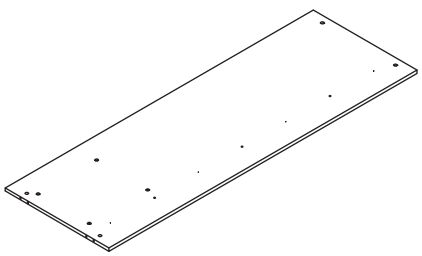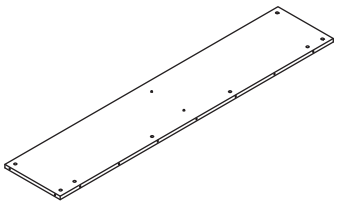1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x2 
7 x1 	8 x1 	9 x2 
10 x1 	11 x1 	12 x2 
13 x1 	14 x1 	15 x2 


16 x2

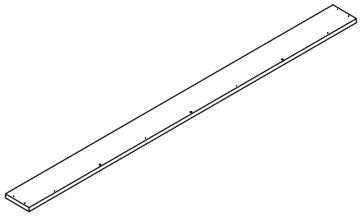


17 x1

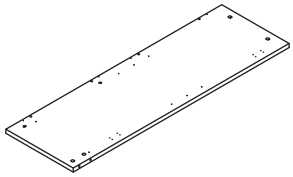


18 x1

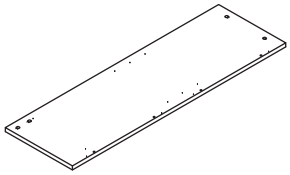


19 x1

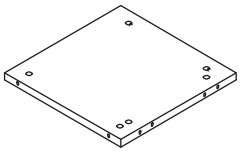


20 x1

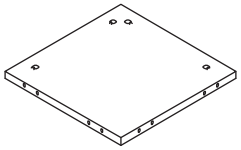


21 x1




22 x2




23 x4

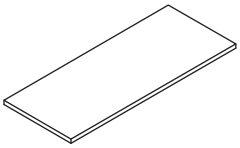


24 x1

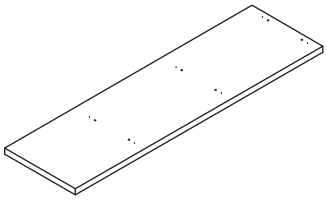


25 x1

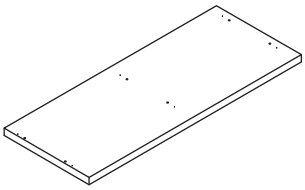


26 x1

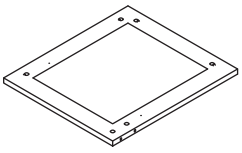


27 x1

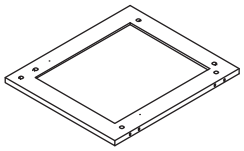


28 x2















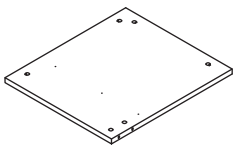


29 x1

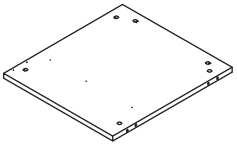


30 x1

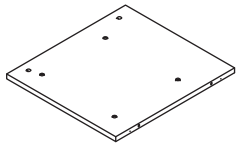

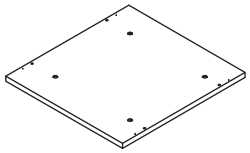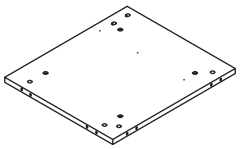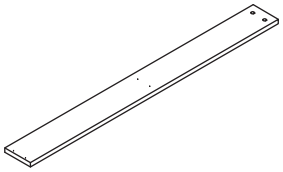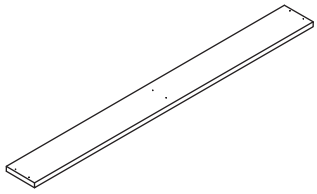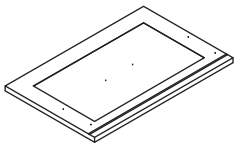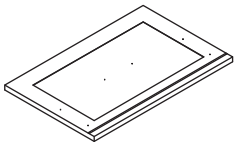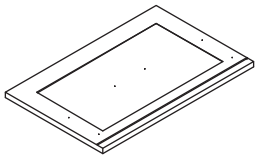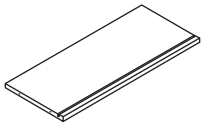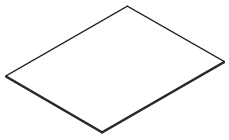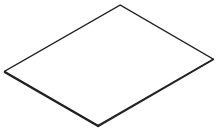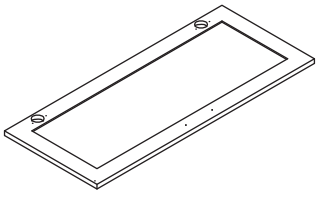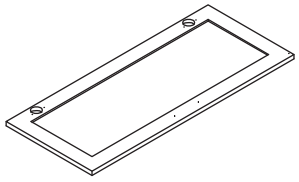
31 x1 	32 x1 	33 x1 
34 x1 	35 x2 	36 x1 
37 x1 	38 x4 	39 x4 
40 x2 	41 x2 	42 x2 
43 x2 	44 x2 	45 x2 


1

A x 10




∅6 x 35 mm



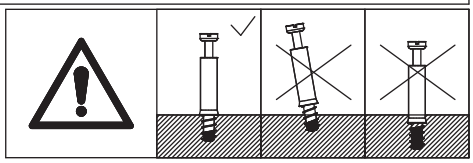


Screw eccentric rod A onto **both sides of** panel 18.

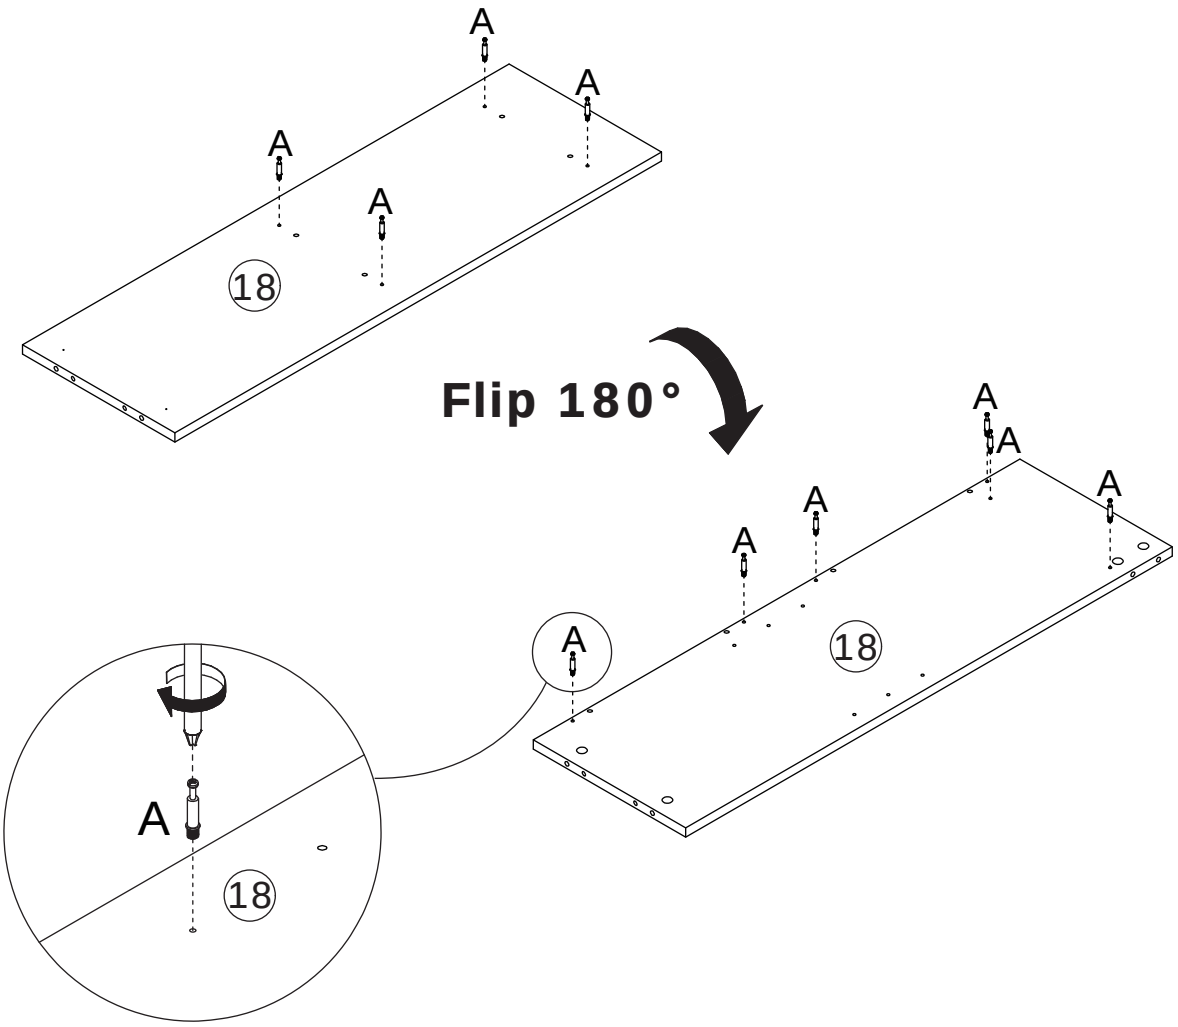


2


A x 26




∅6 x 35 mm




Screw eccentric rod A onto panels 5, 16, and 21.

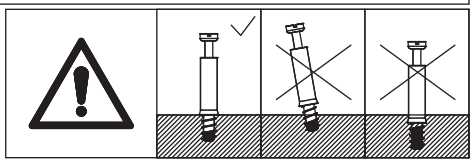

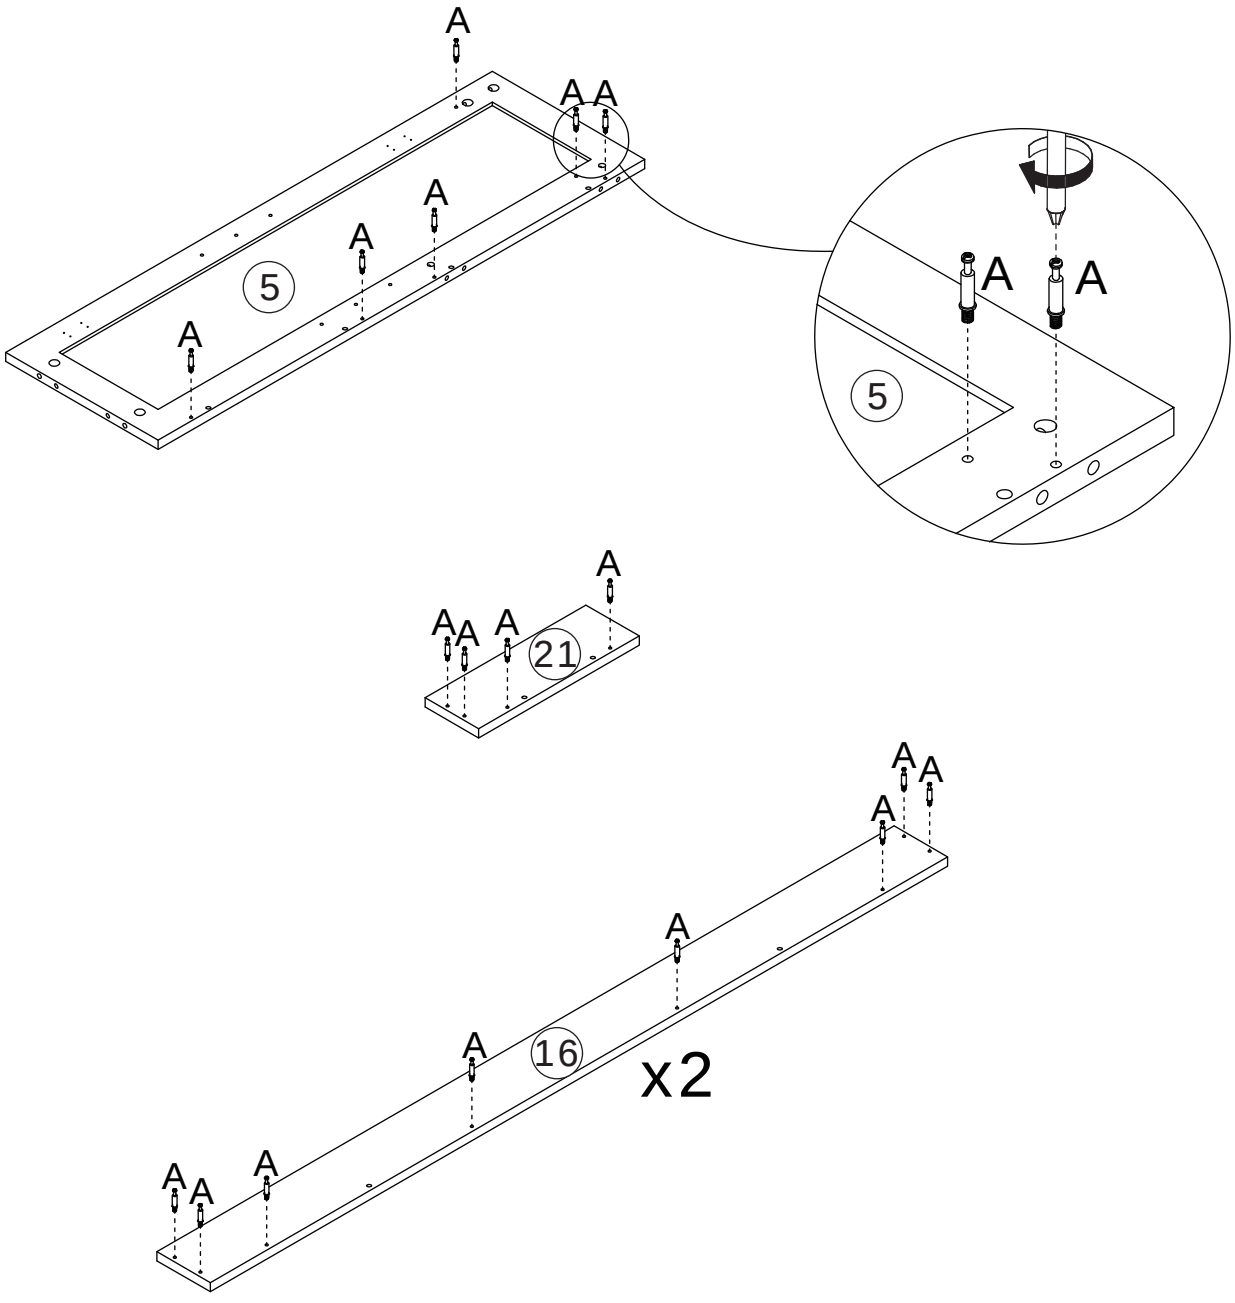


3


C x 4



∅6 x 30 mm

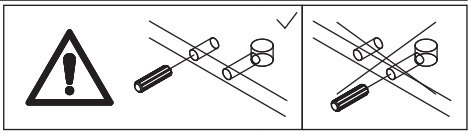


Connect panels 12 and 14 using wooden dowel C.

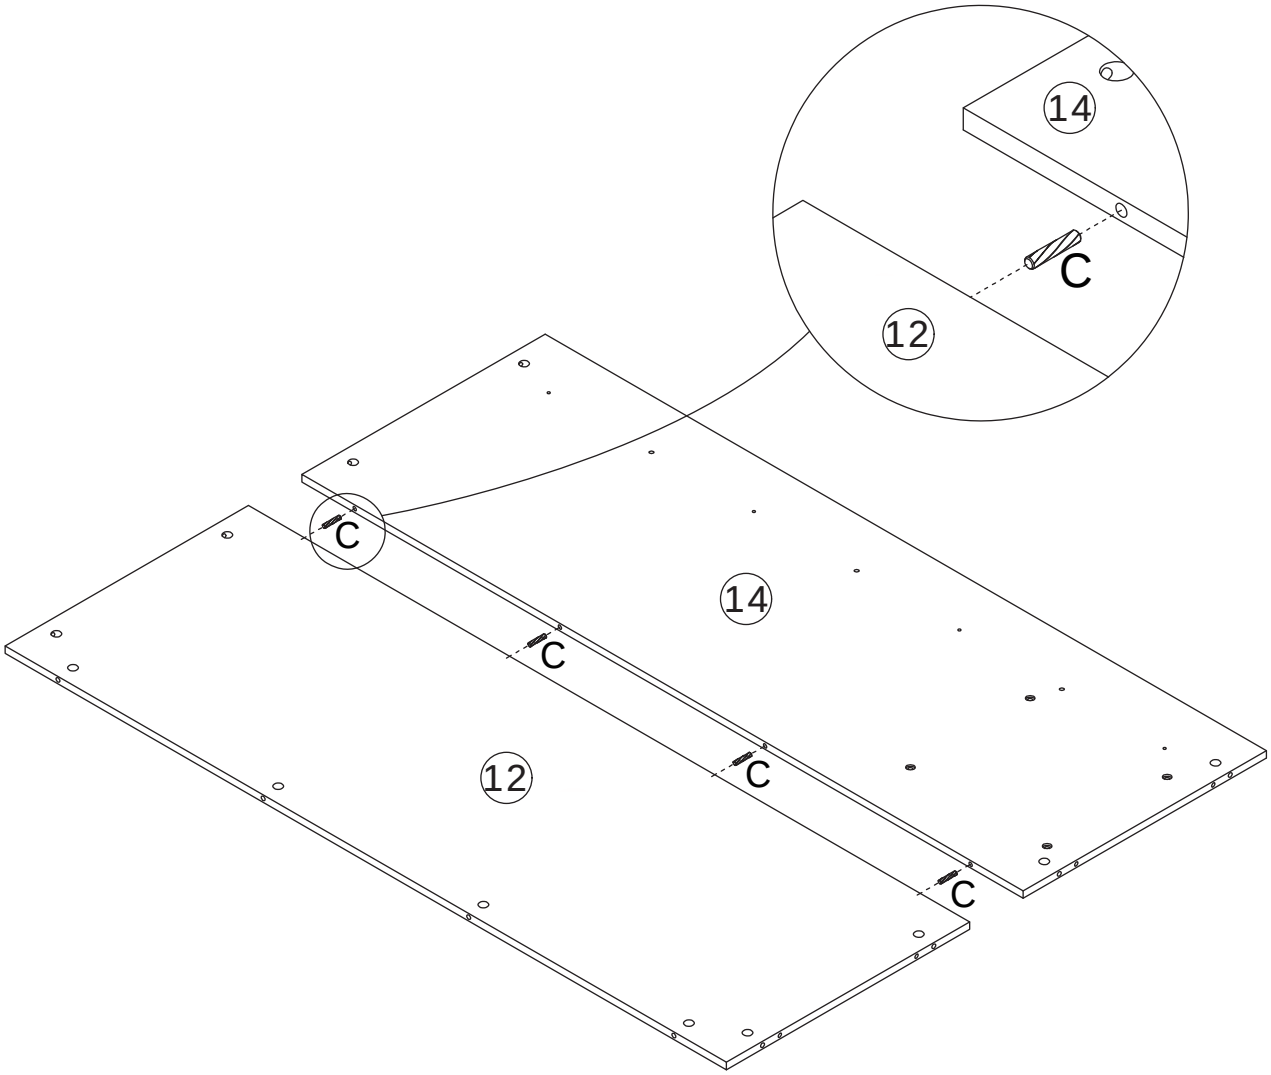


4


C x 3





∅6 x 30 mm

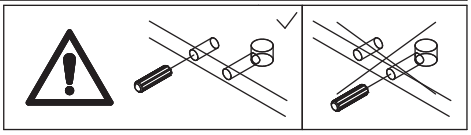


Connect panels 14 and 15 using wooden dowels C.

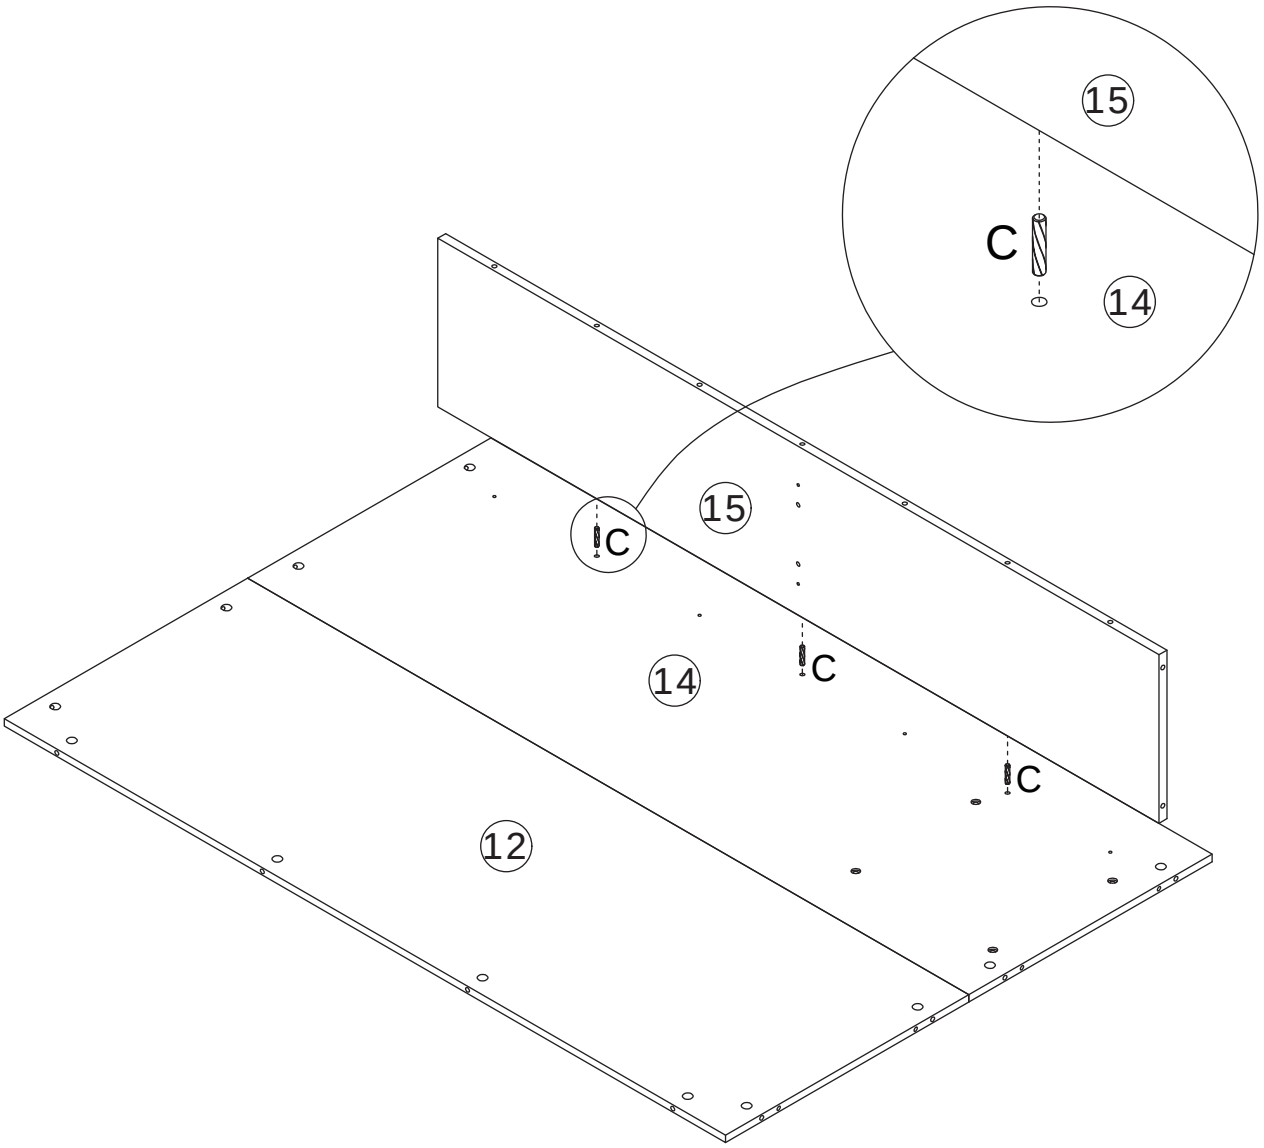


5



B x 6	C x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

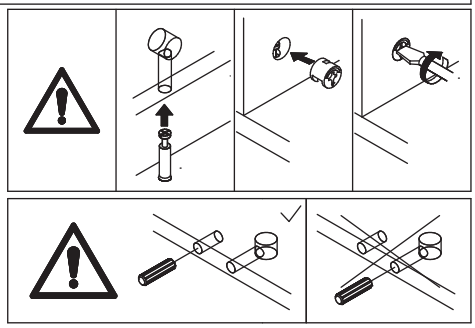


First connect panel 5 to panels 12, 14 and 15 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

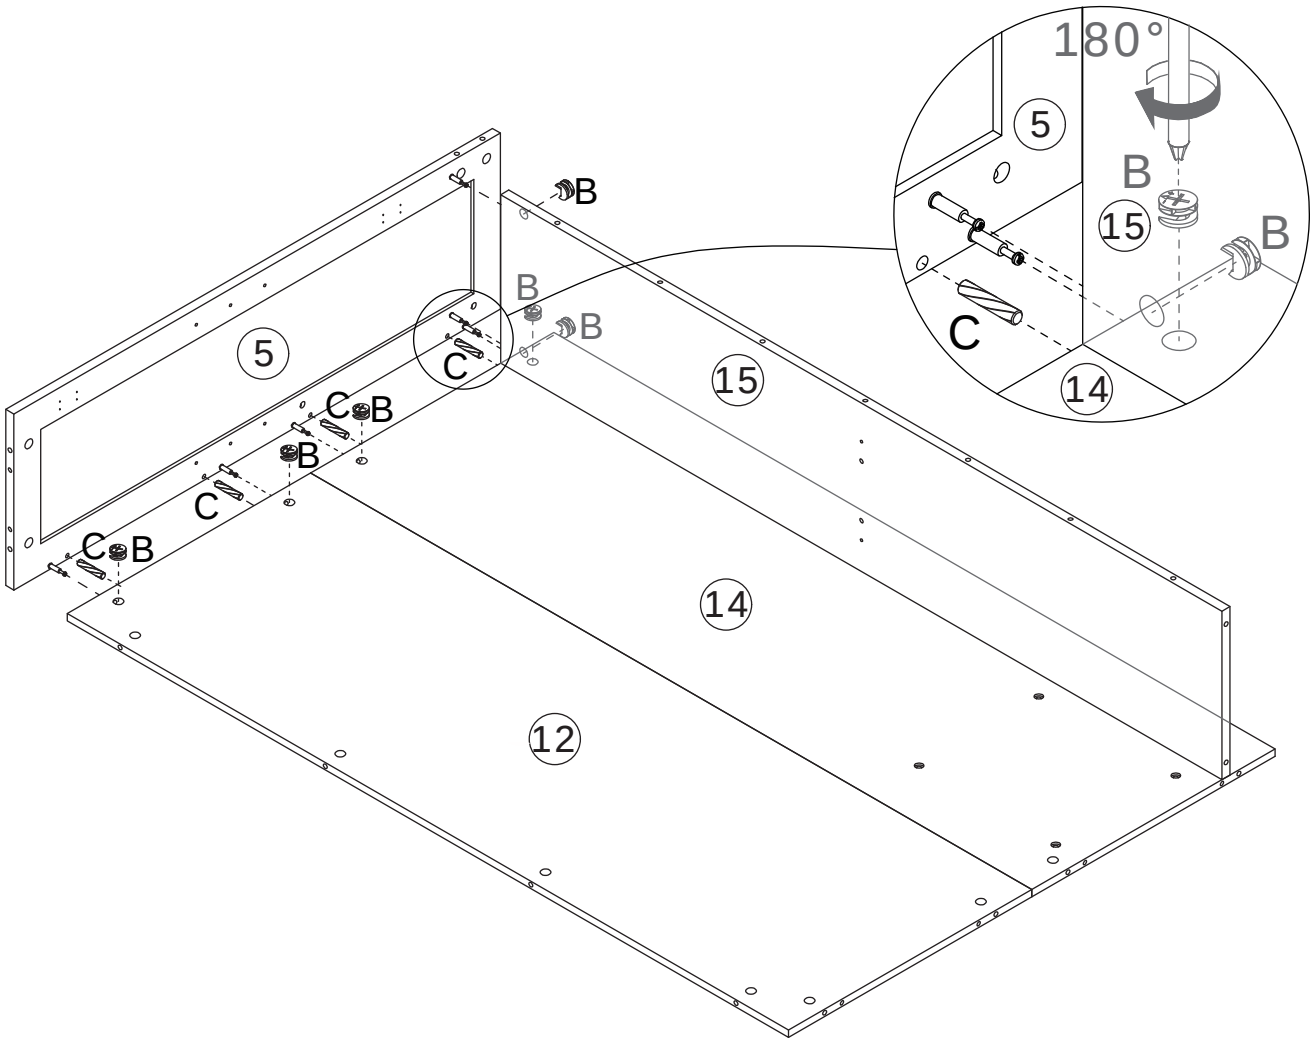


6



B x 6	C x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

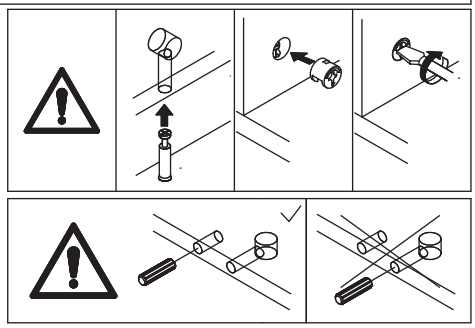


First connect panel 18 to panels 12, 14, and 15 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

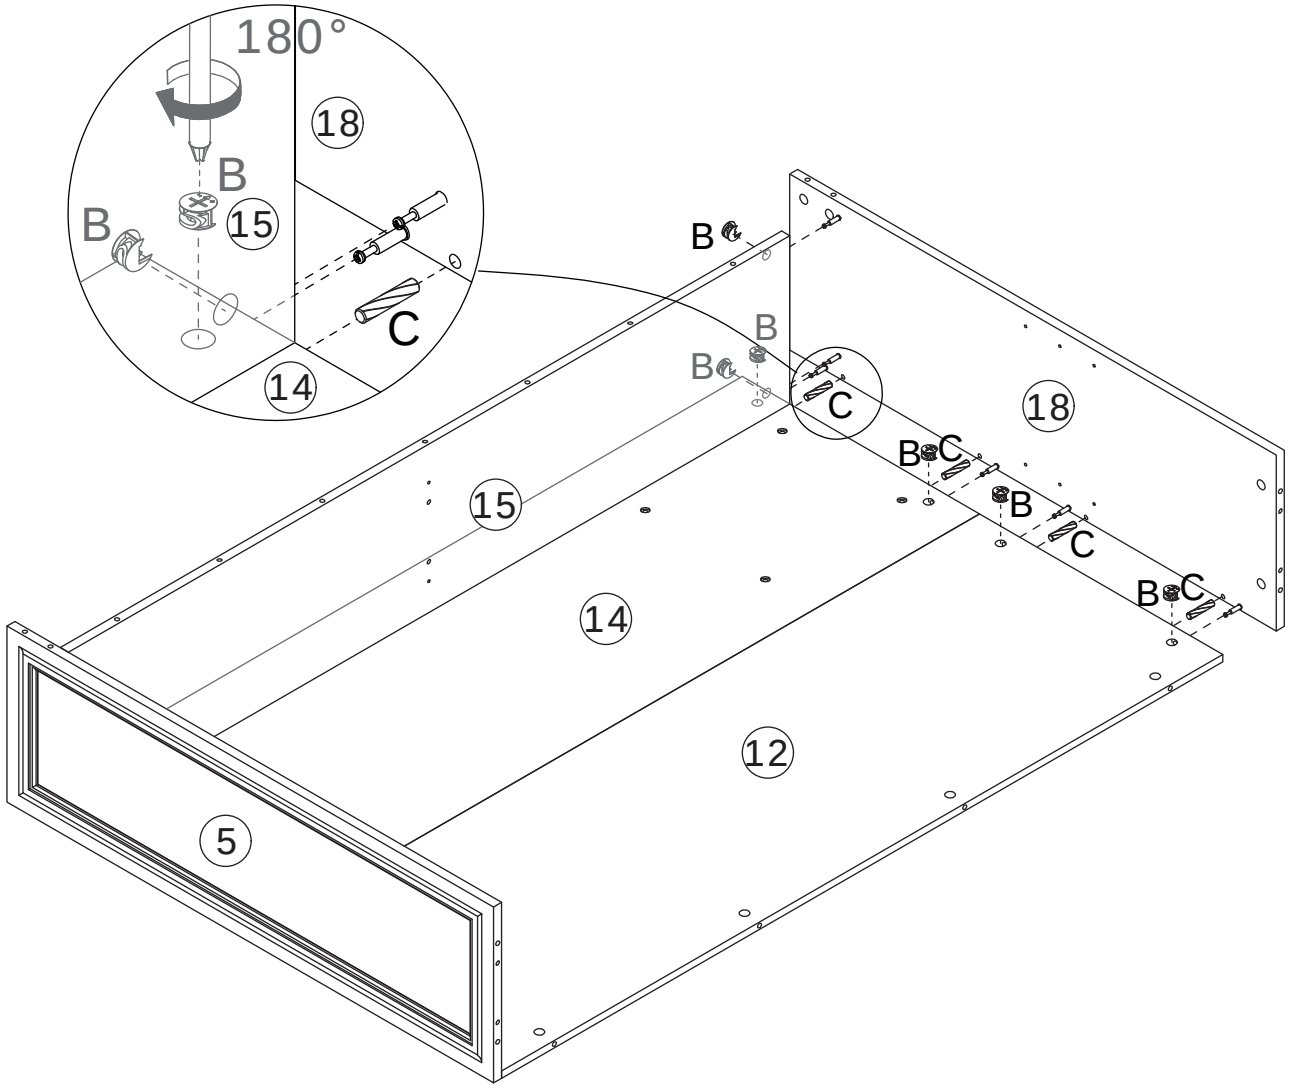


7




C x 2	D x 2	
		
∅6 x 30 mm	∅4 x 35 mm	


First connect panels 6 and 15 using wooden dowel C, then secure them firmly with screw D.

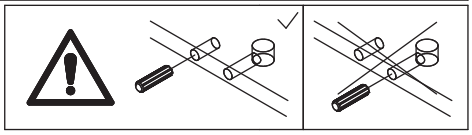

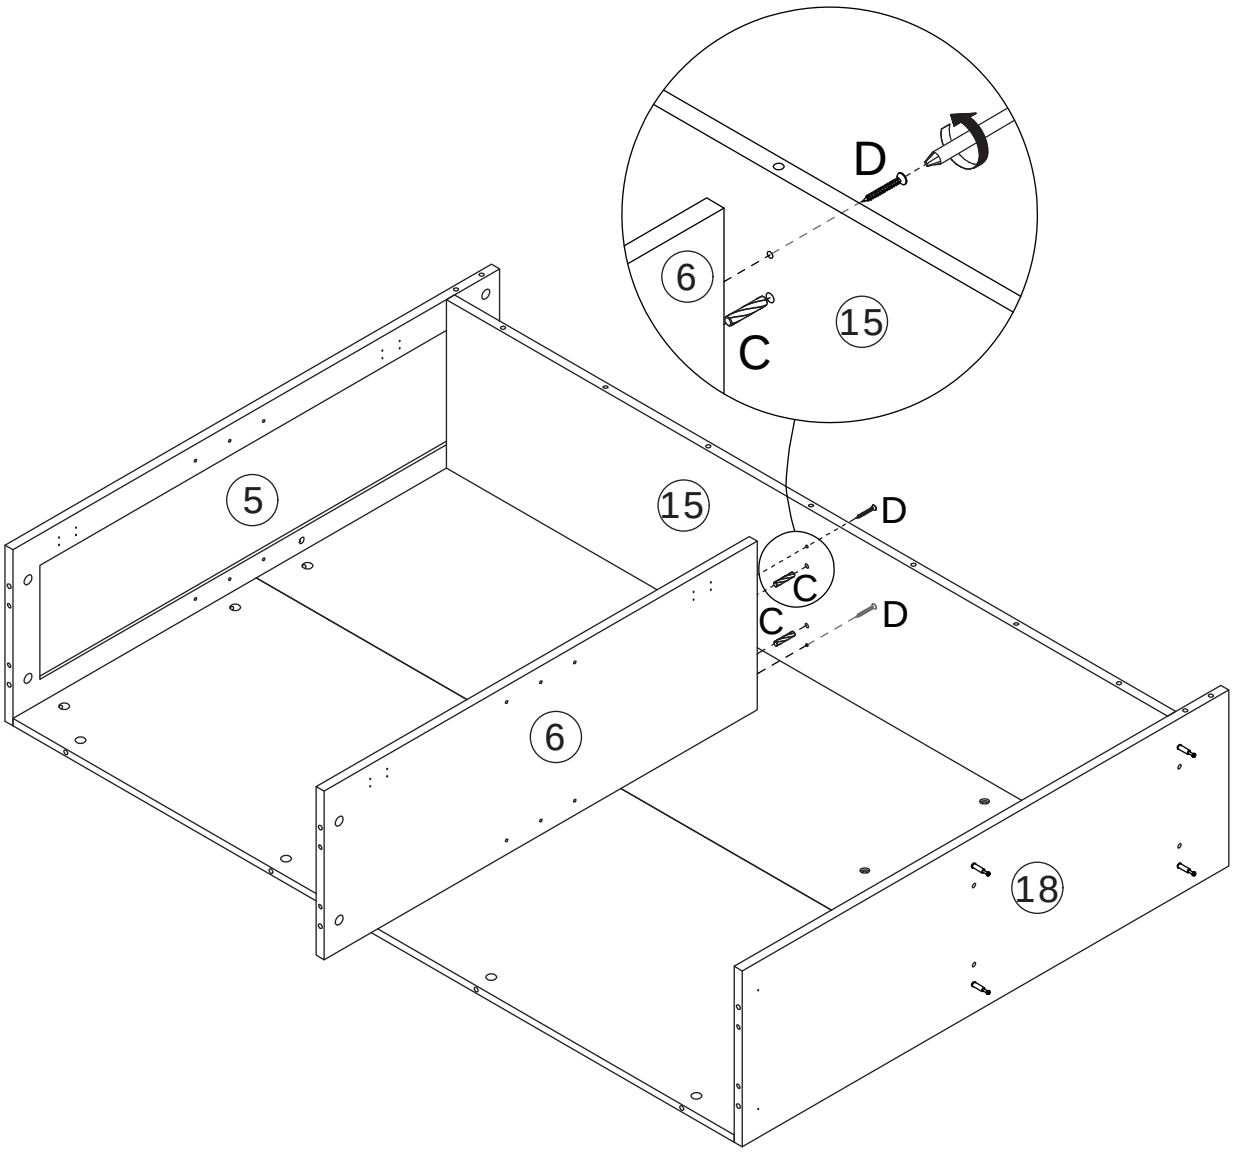


8

B x 4	C x 4	S x 2	
			
∅15 x 9 mm	∅6 x 30 mm	∅4 x 25 mm	

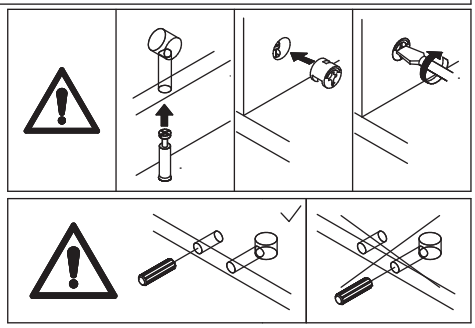


Secure panel 22 to panel 18 using screw S.

Connect panels 19 and 20 to panel 18 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

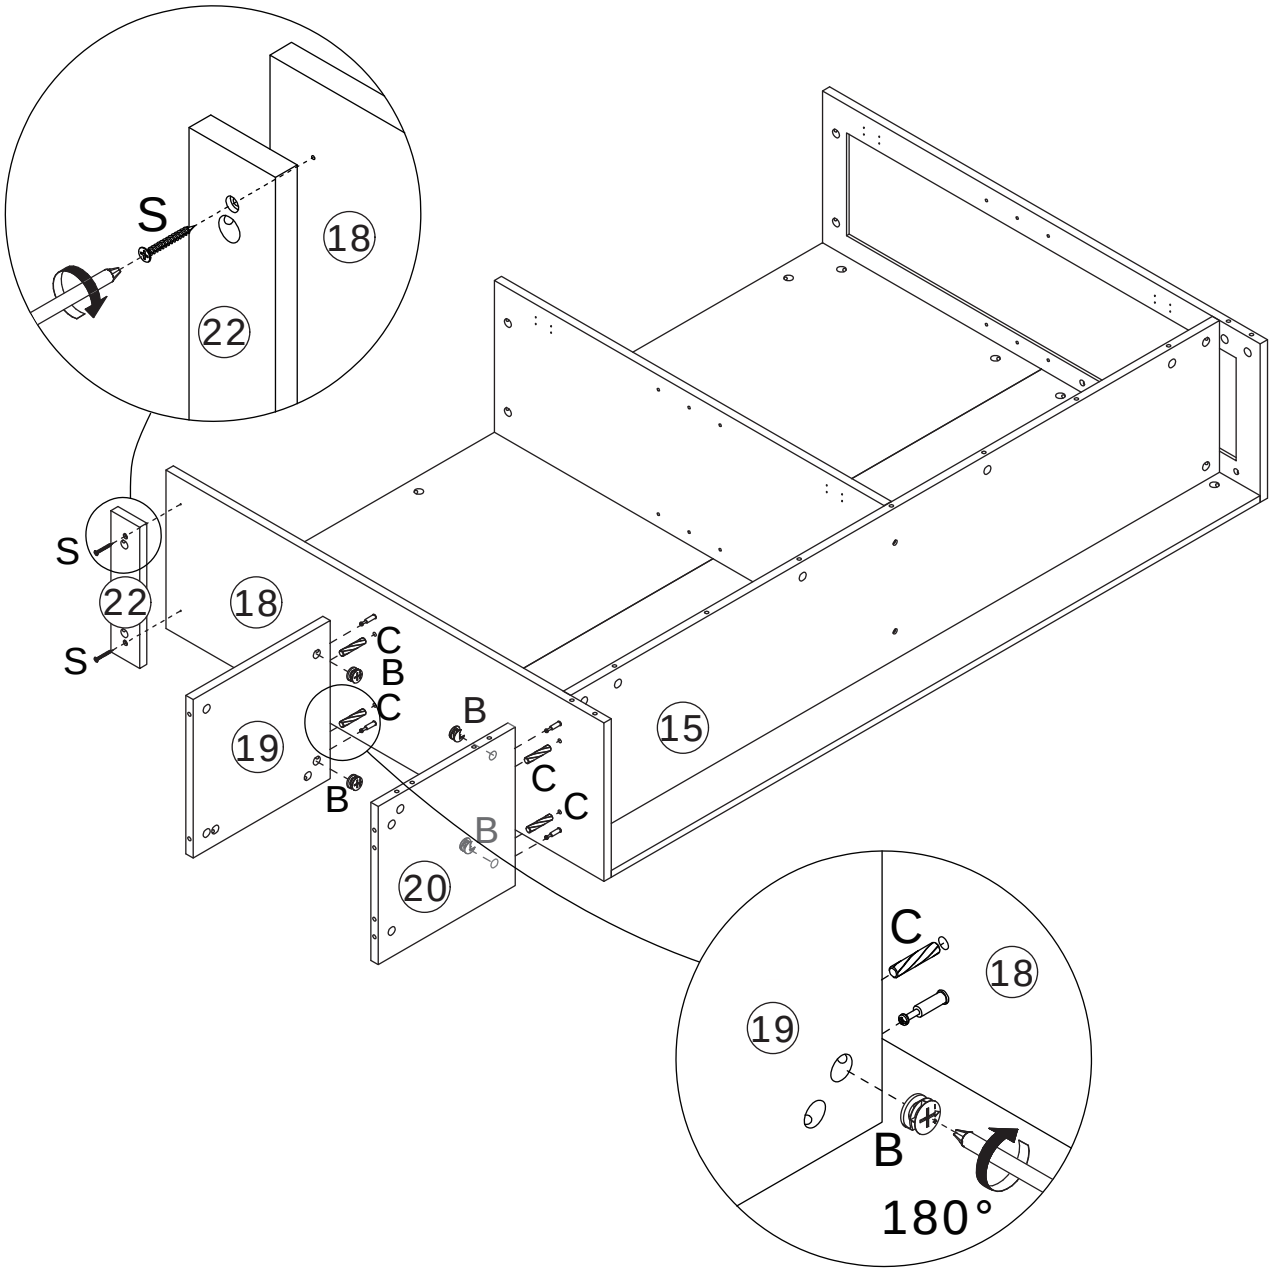



9

A x 4




∅6 x 35 mm





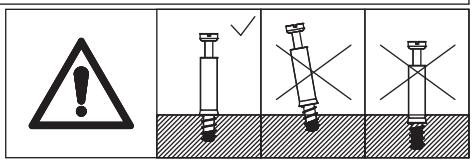


Screw eccentric rod A onto panel 7.

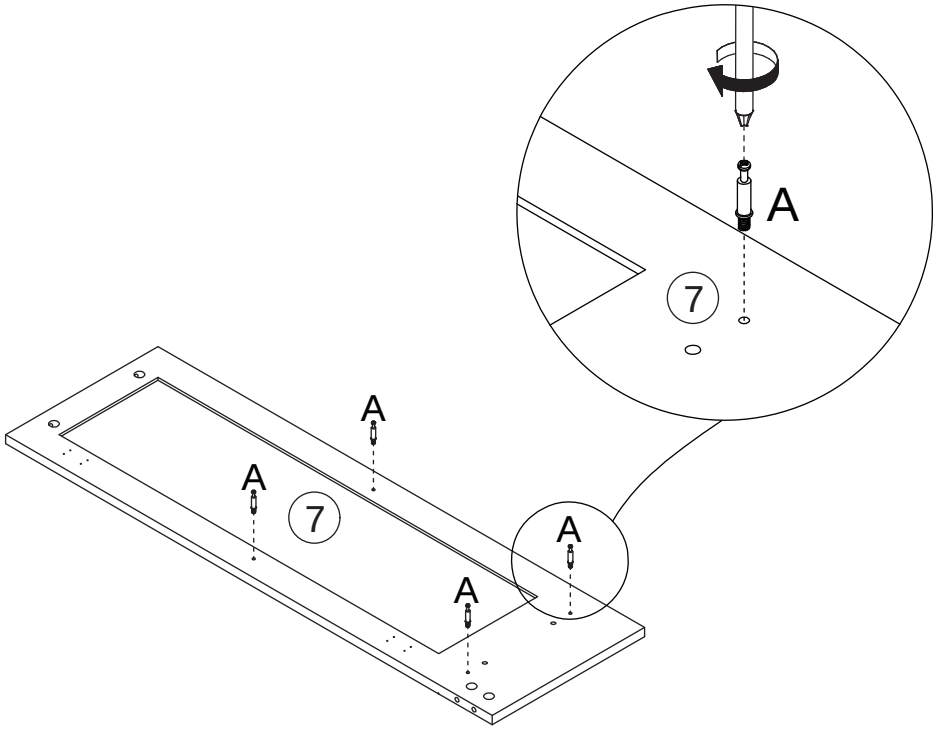


10



B x 4	C x 2	
		
∅15 x 9 mm	∅6 x 30 mm	

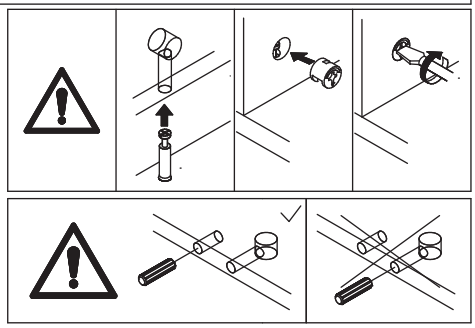


First connect panel 7 to panels 19 and 20 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

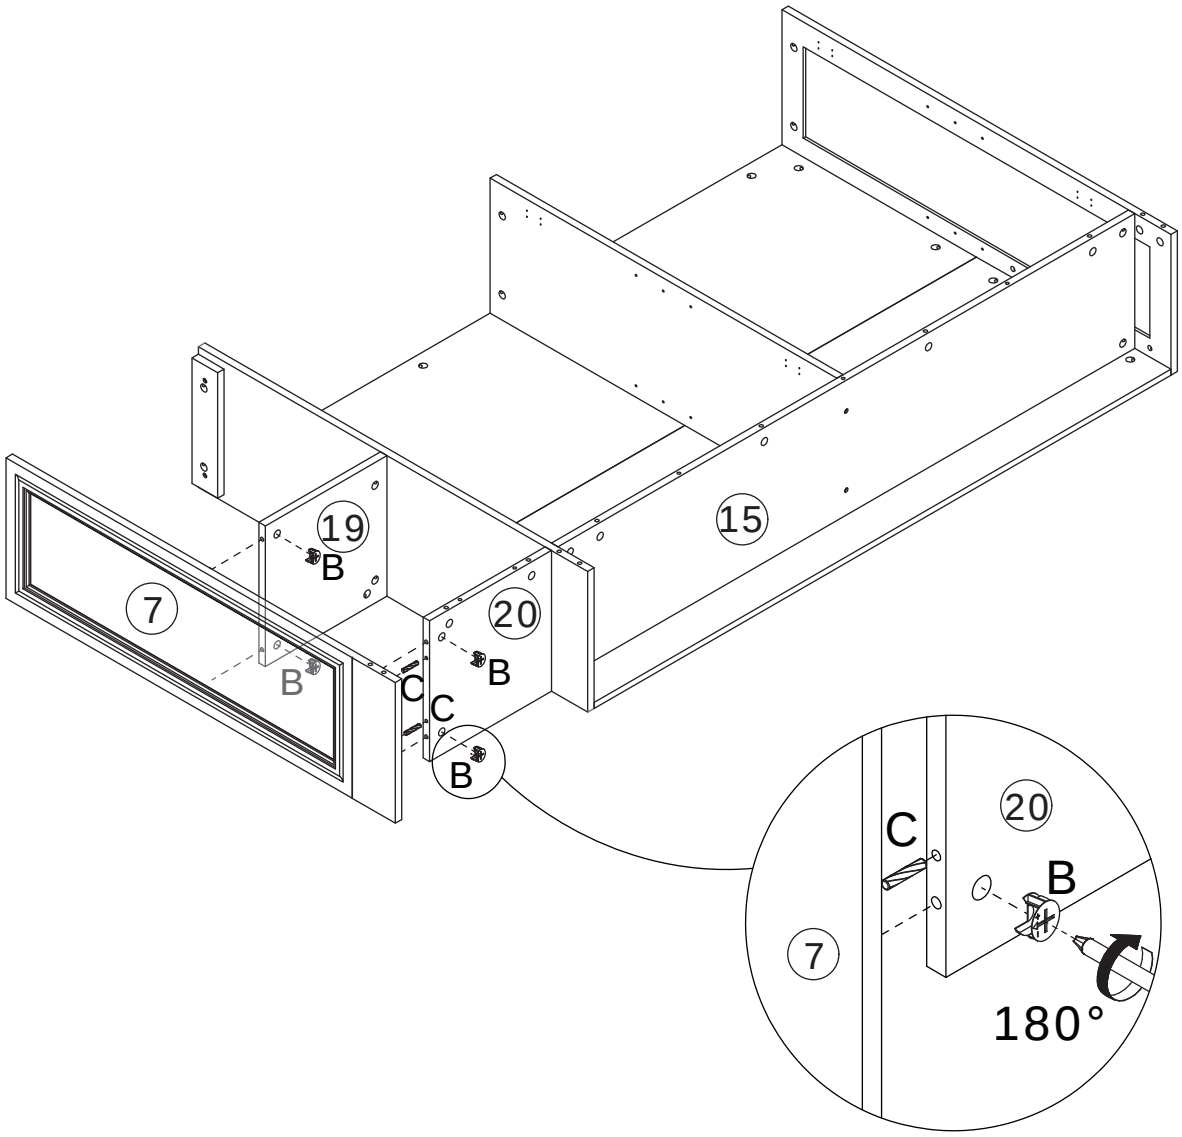


11



B x 12	C x 5	
		
∅15 x 9 mm	∅6 x 30 mm	

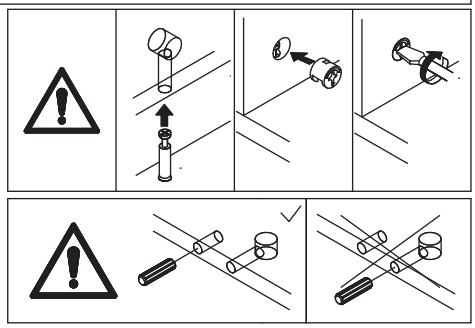


First connect panels 16 and 21 to the assembled component using wooden dowel C, then tighten by turning eccentric cam B clockwise.

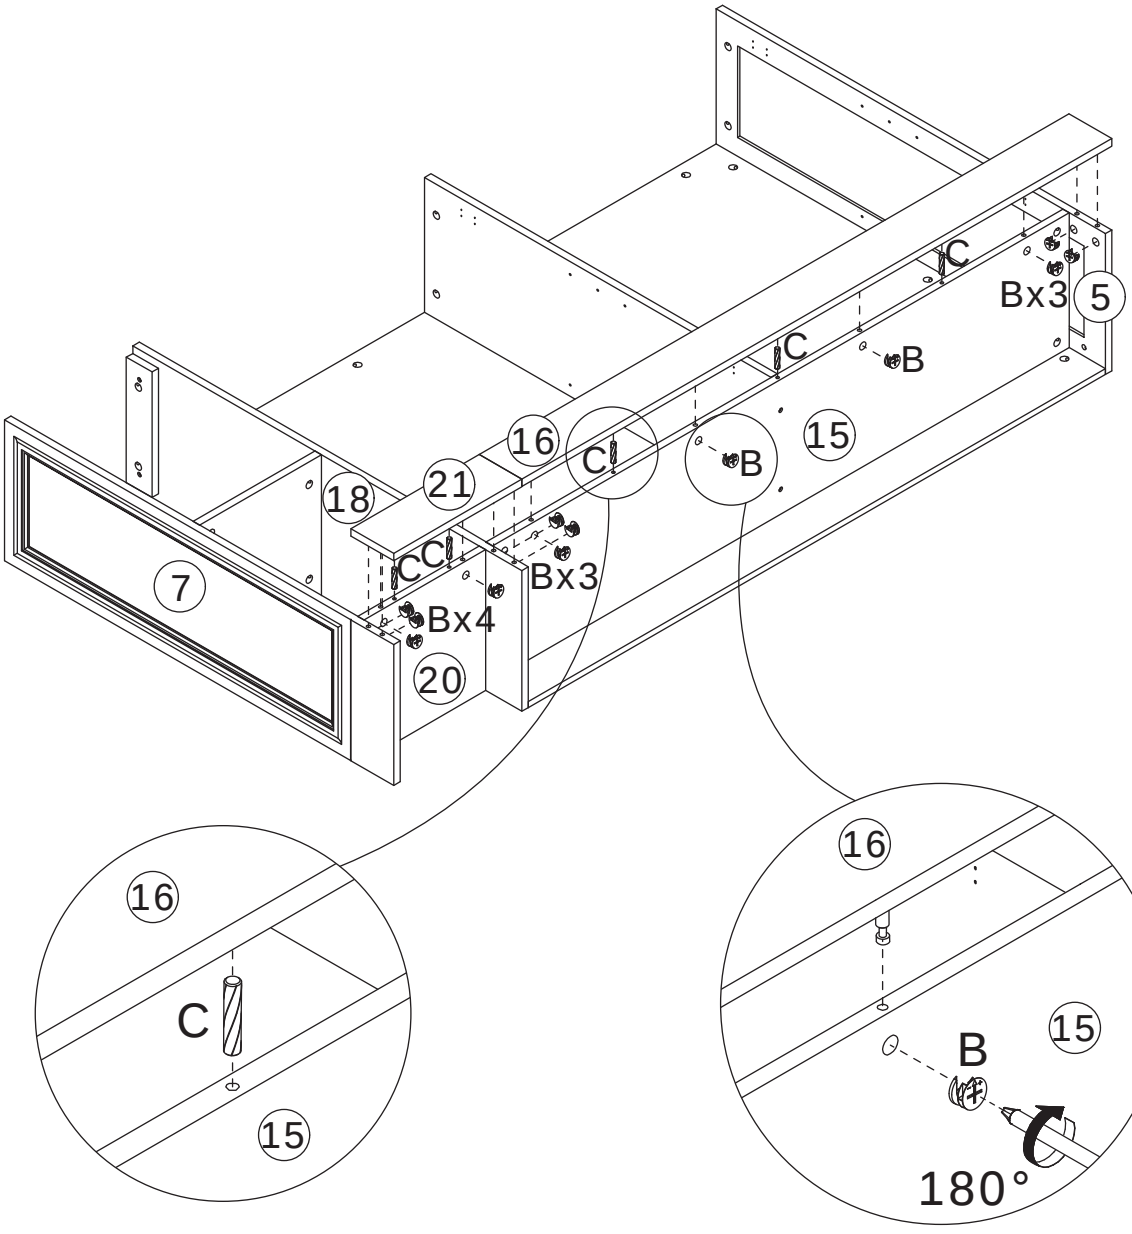


12



F x 2	T x 2	
		
∅6 x 60 mm	∅6 x 10 mm	

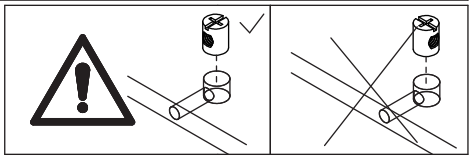


Insert nut T into holes on panel 5, then screw rod F into panel 5.

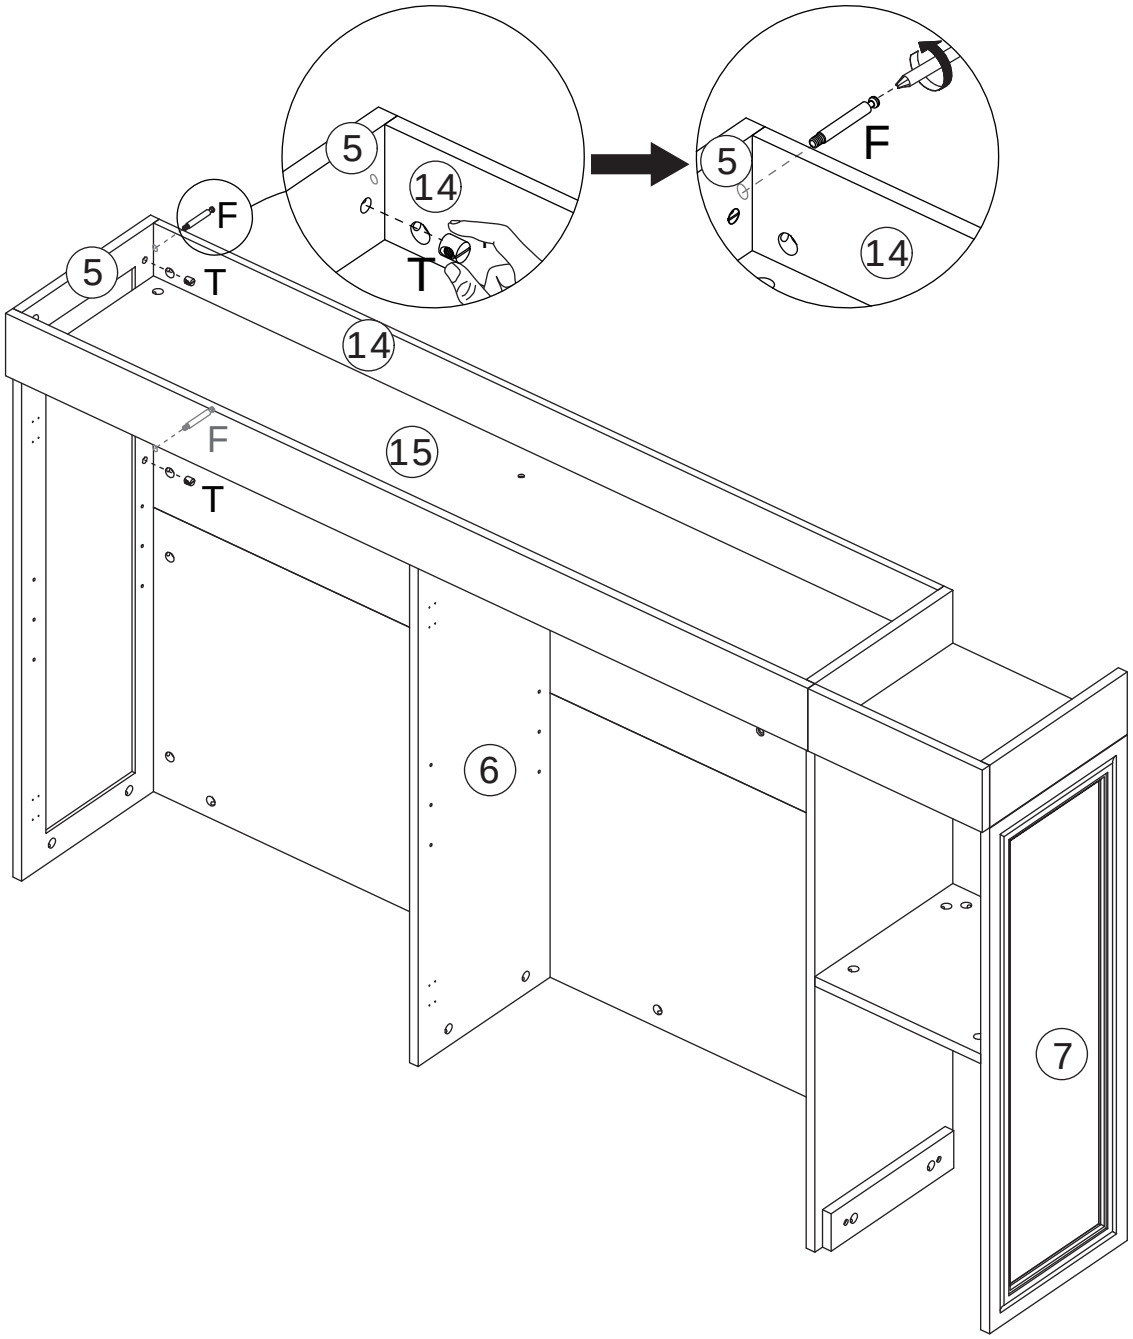


13

A x 4	D x 4	
		
∅6 x 35 mm	∅4 x 35 mm	

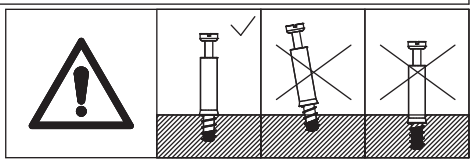


Secure panel 14 to the back of the unit using screw D.
Screw eccentric rod A onto panel 14.

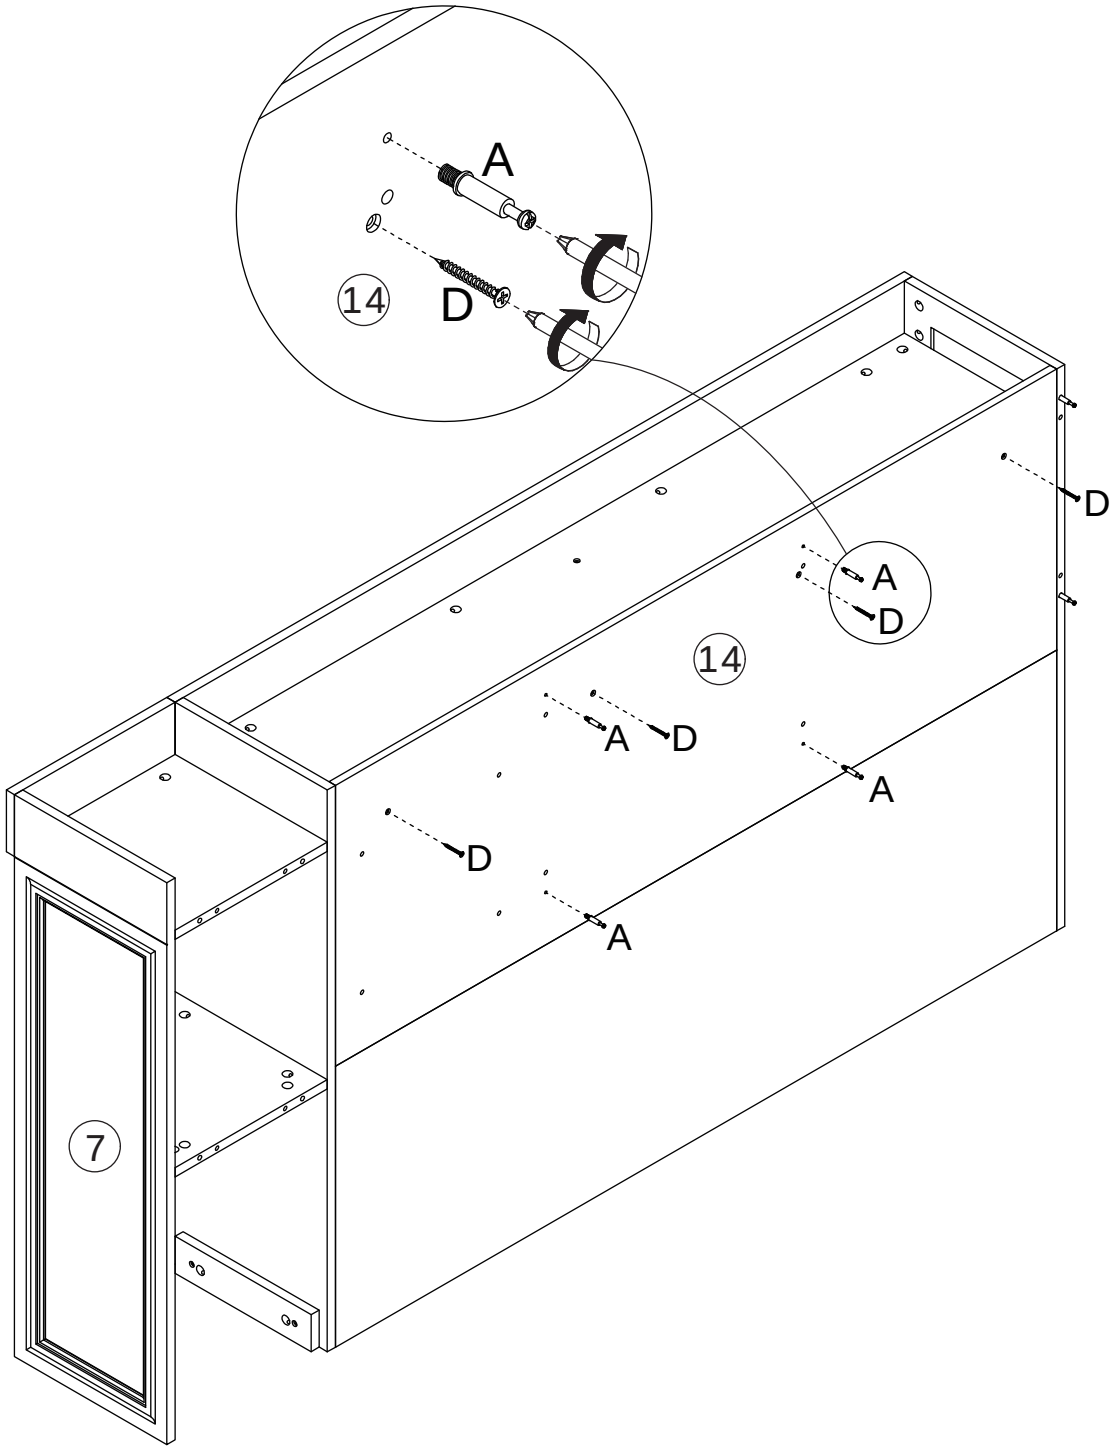

14


A x 16	F x 3	H x 2	L x 4	
∅6 x 35 mm	∅6 x 60 mm		∅3 x 14 mm	

T x 3
∅6 x 10 mm


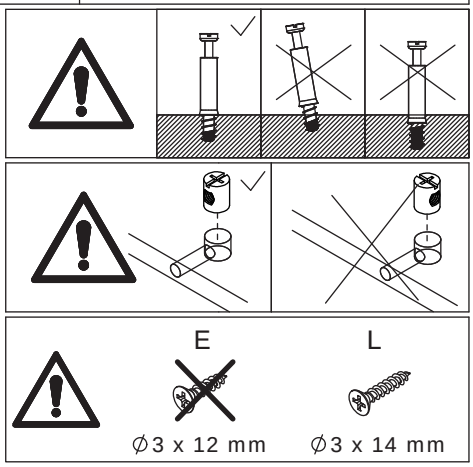



E	L
∅3 x 12 mm	∅3 x 14 mm

Screw eccentric rod A onto panels 2 and 3.
Secure magnetic catch H to panel 2 using screw L.
Insert nut T into holes on panel 2, then screw rod F into panel 2.

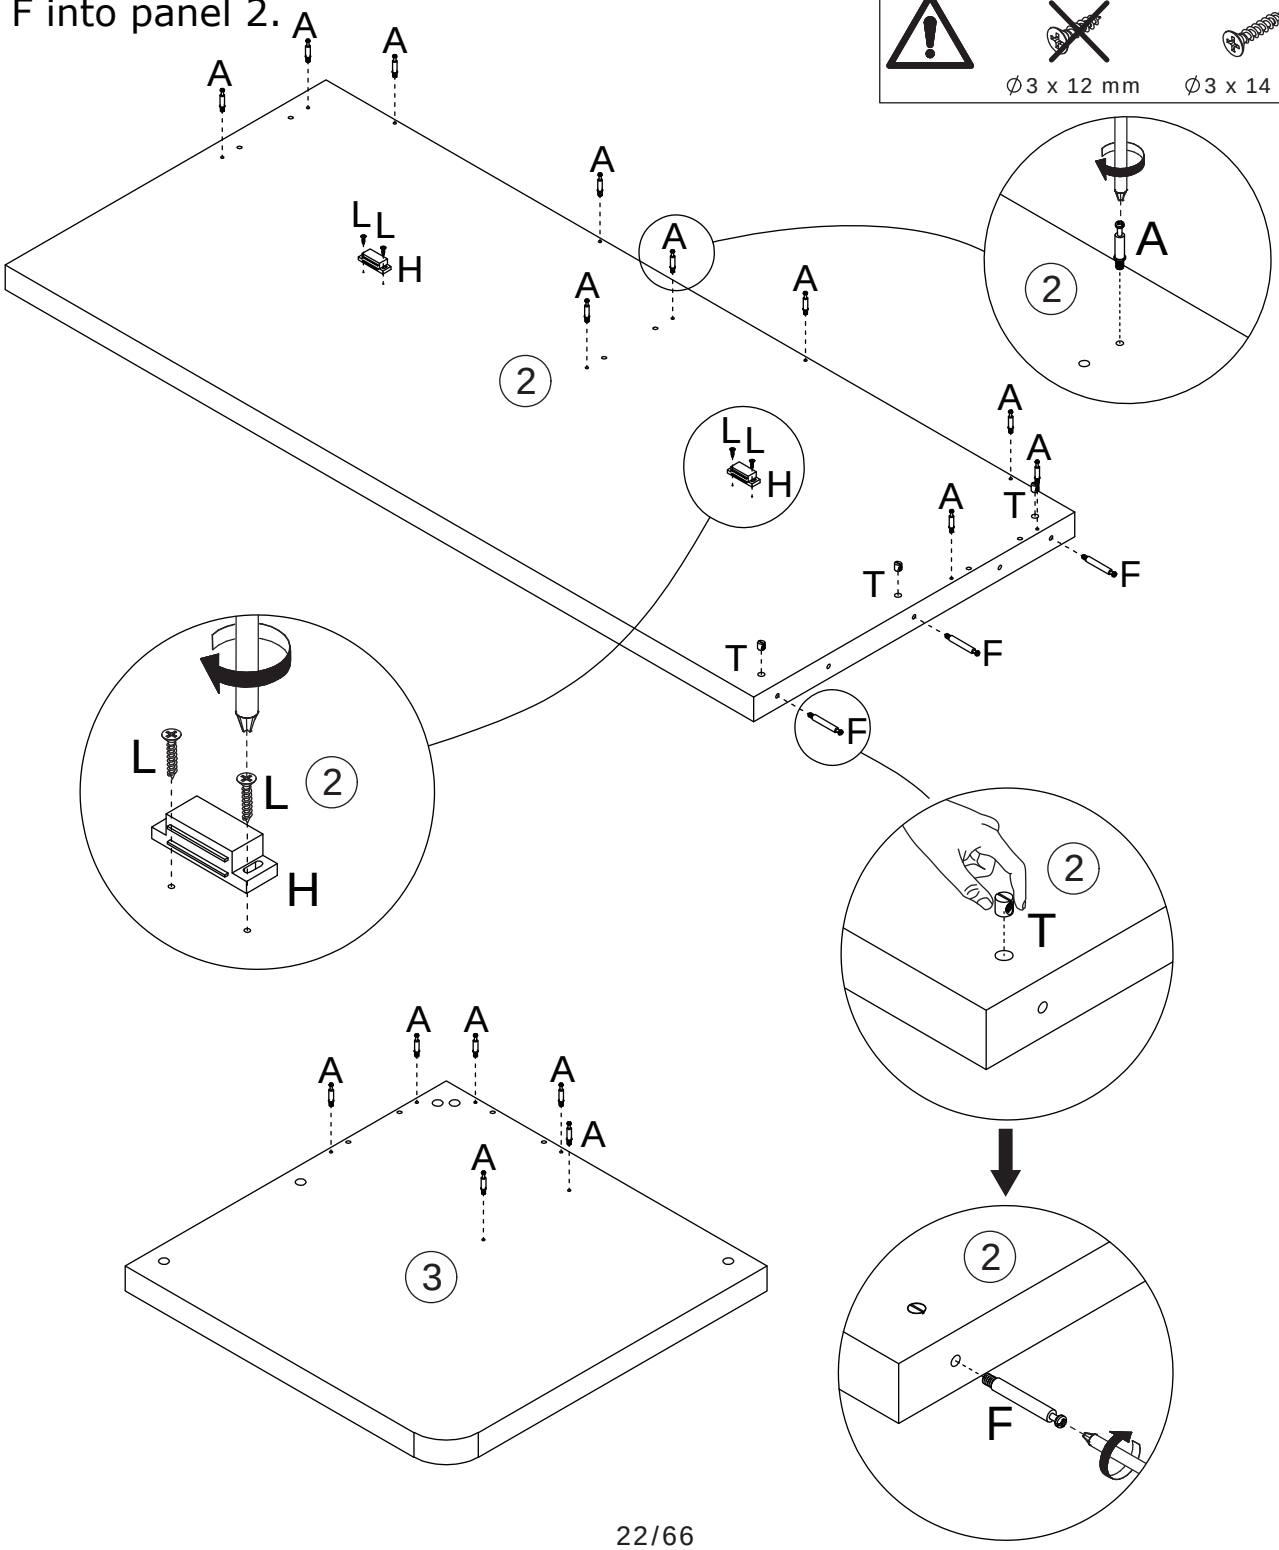


15



B x 5	C x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

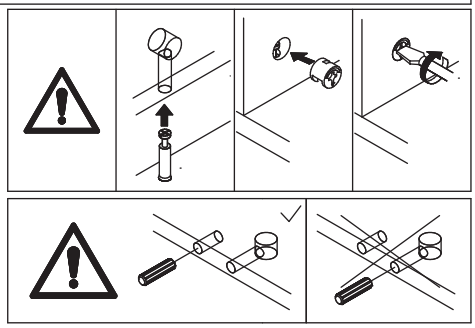


Connect panels 2 and 22 to panel 3 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

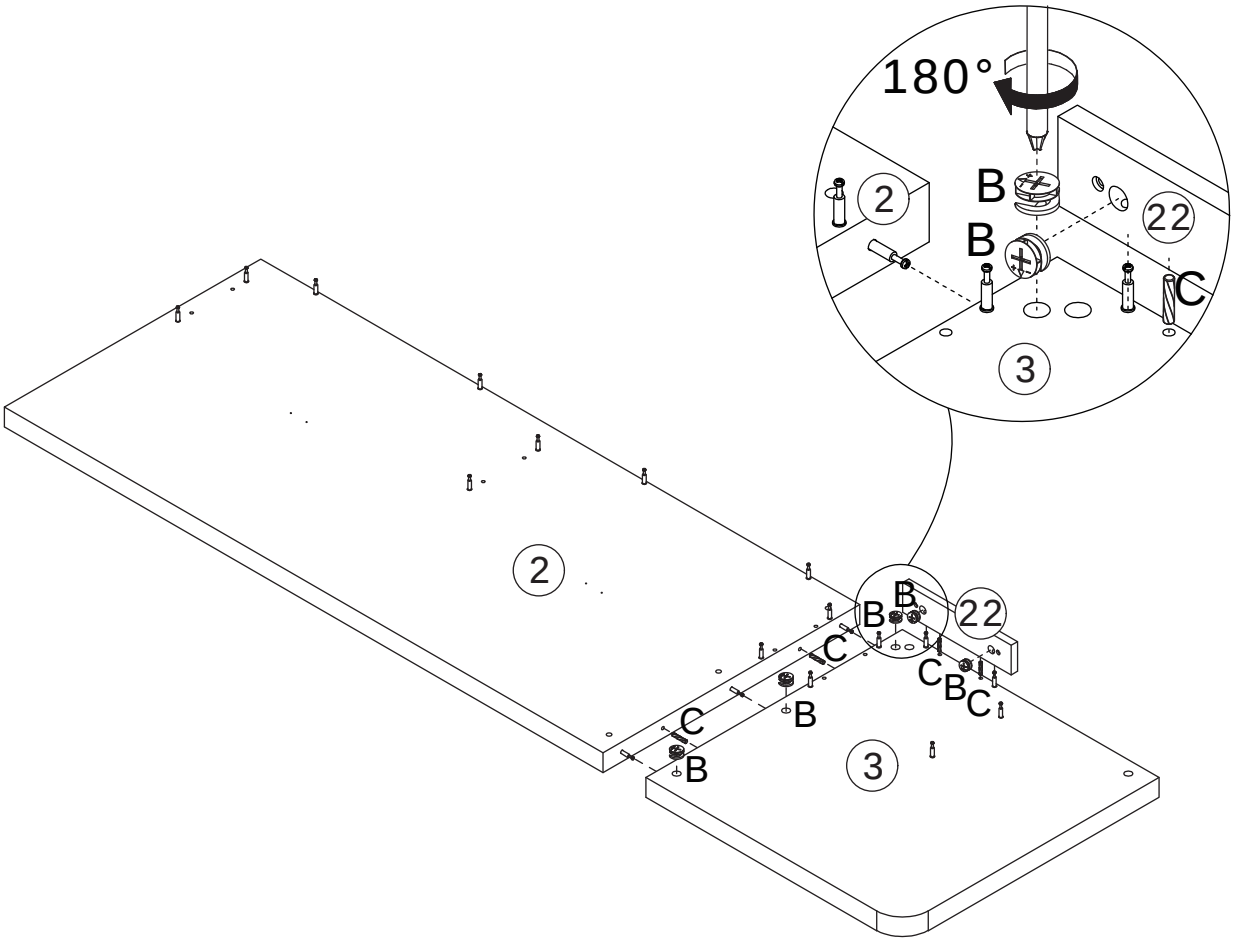


16

B x 14	C x 8	
		
∅15 x 9 mm	∅6 x 30 mm	

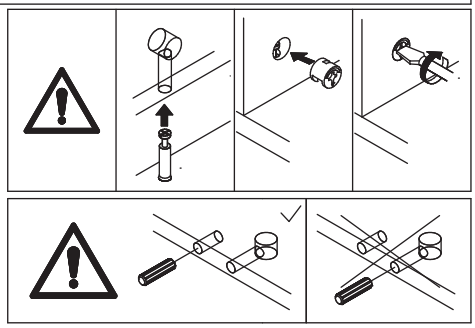


First, turn this component(step 13) upside down so that panel 12 is facing upwards.

Connect panels 2 and 3 to panels 5, 6, 12, 18, 22, and 7 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

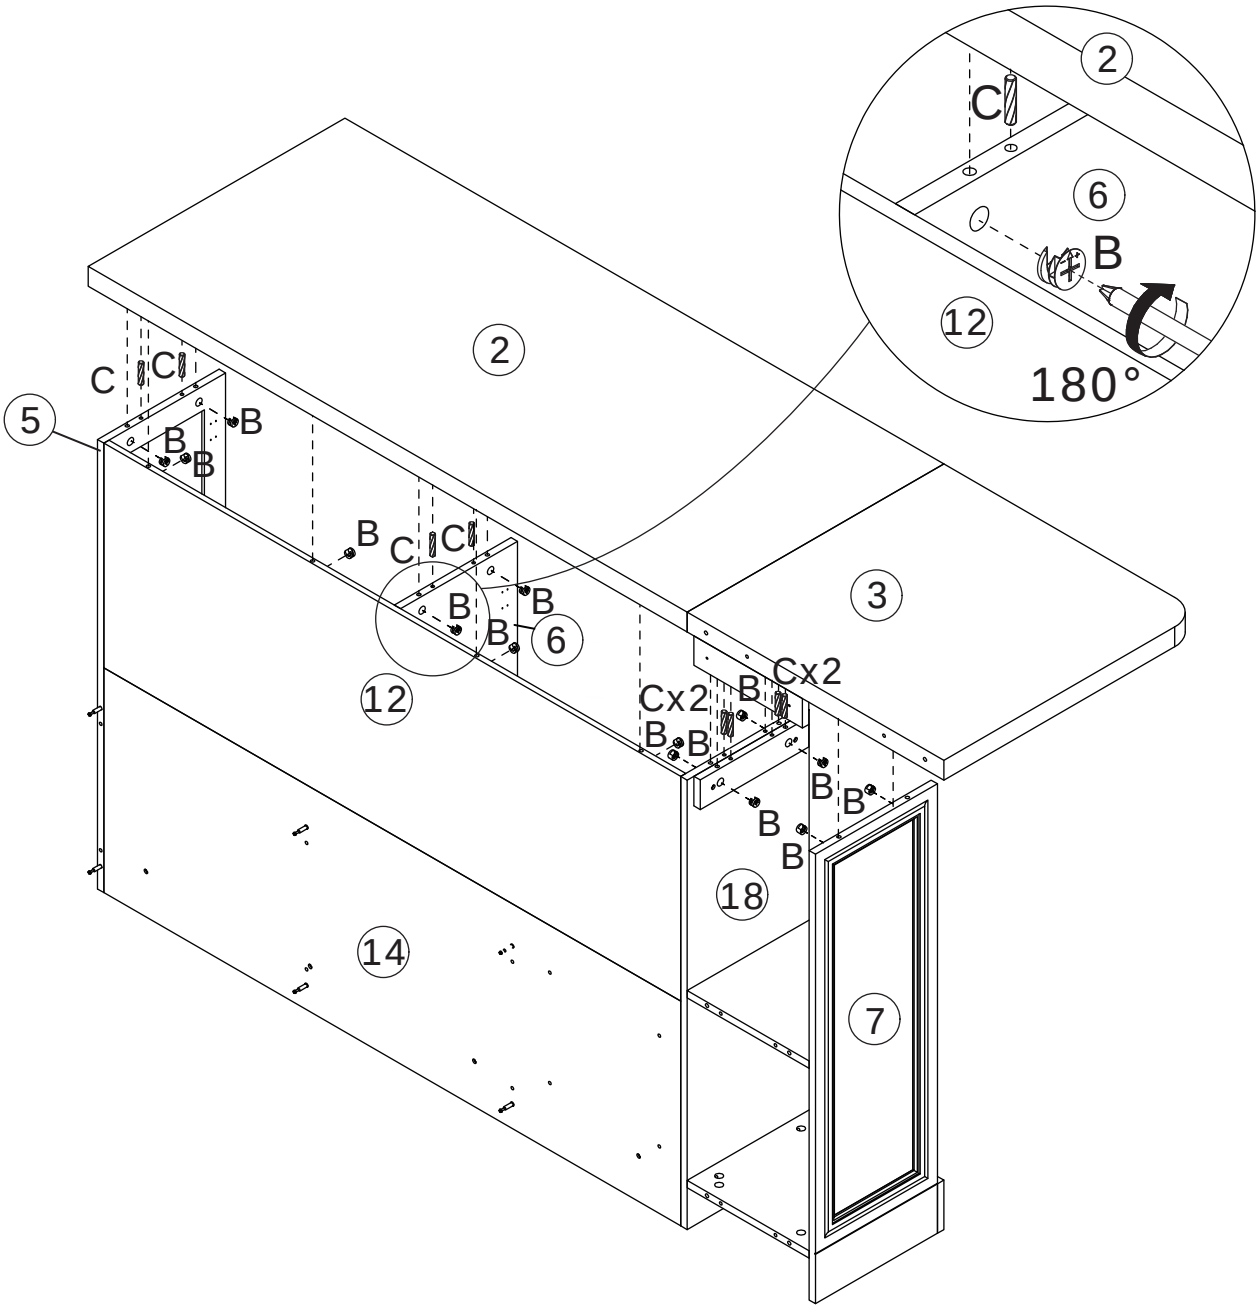



17

A x 16




∅6 x 35 mm



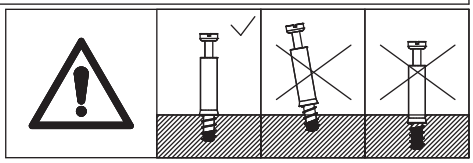


Screw eccentric rod A onto panels 4 and 17.

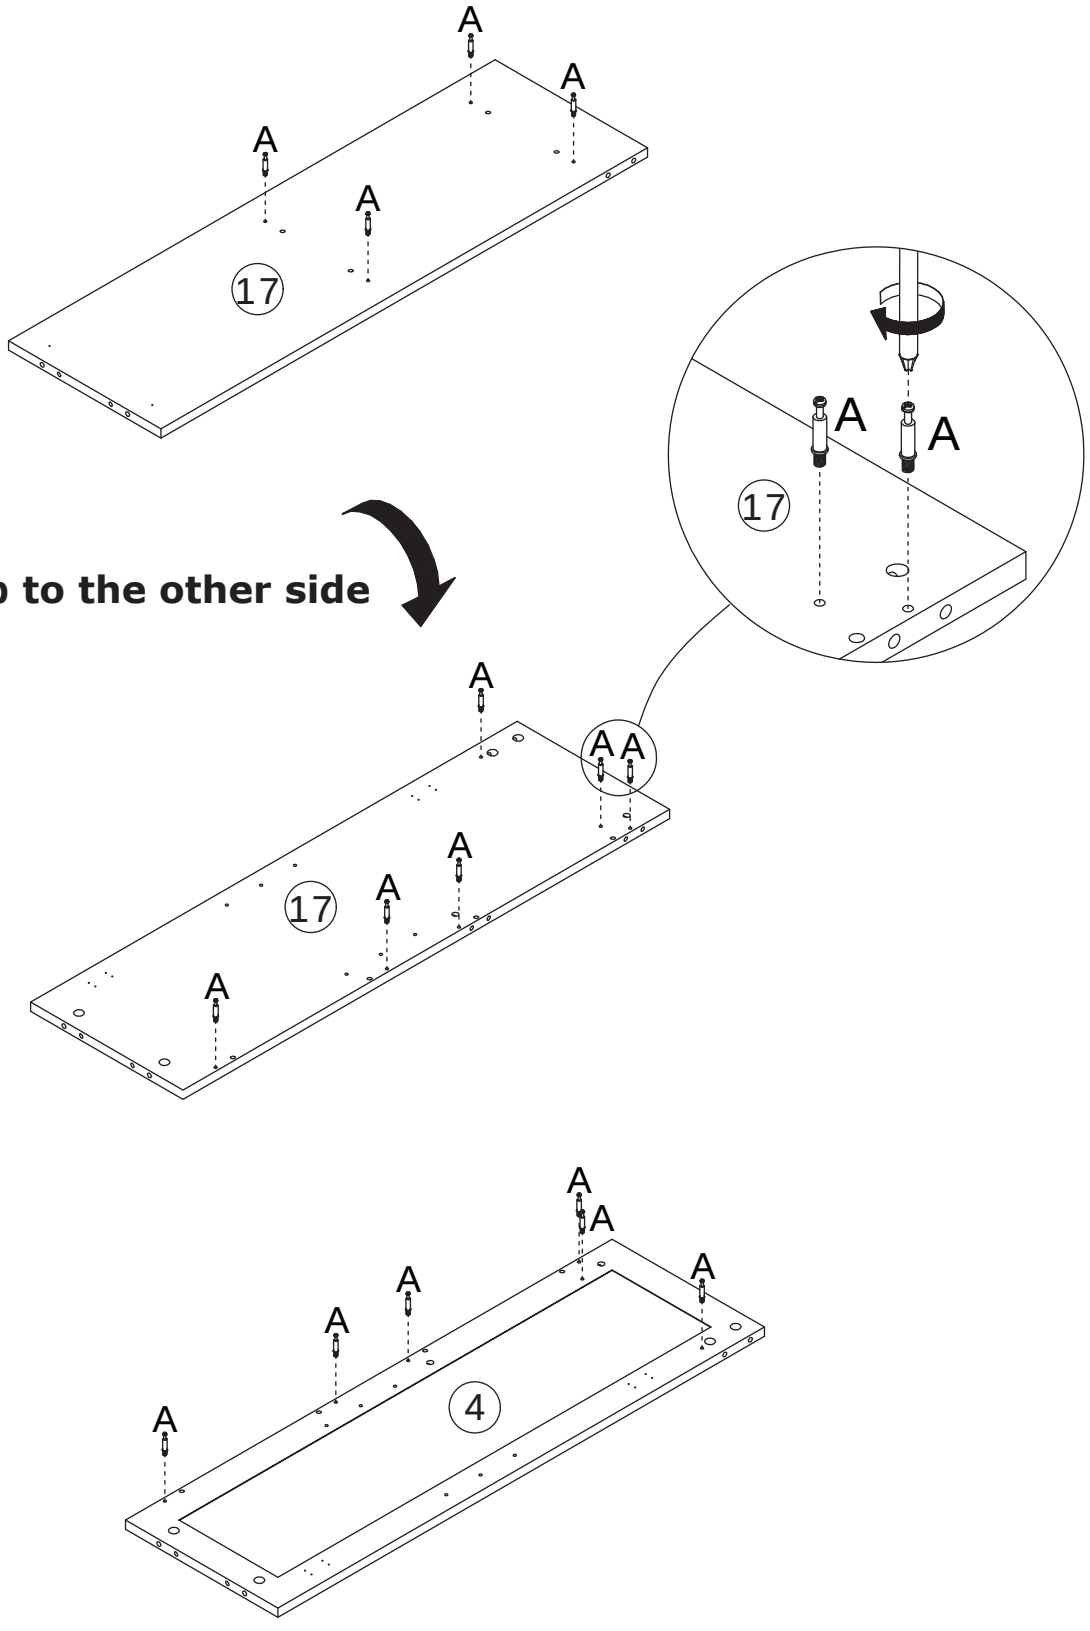


18


C x 4



∅6 x 30 mm

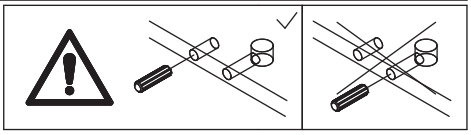


Connect panels 12 and 13 using wooden dowel C.

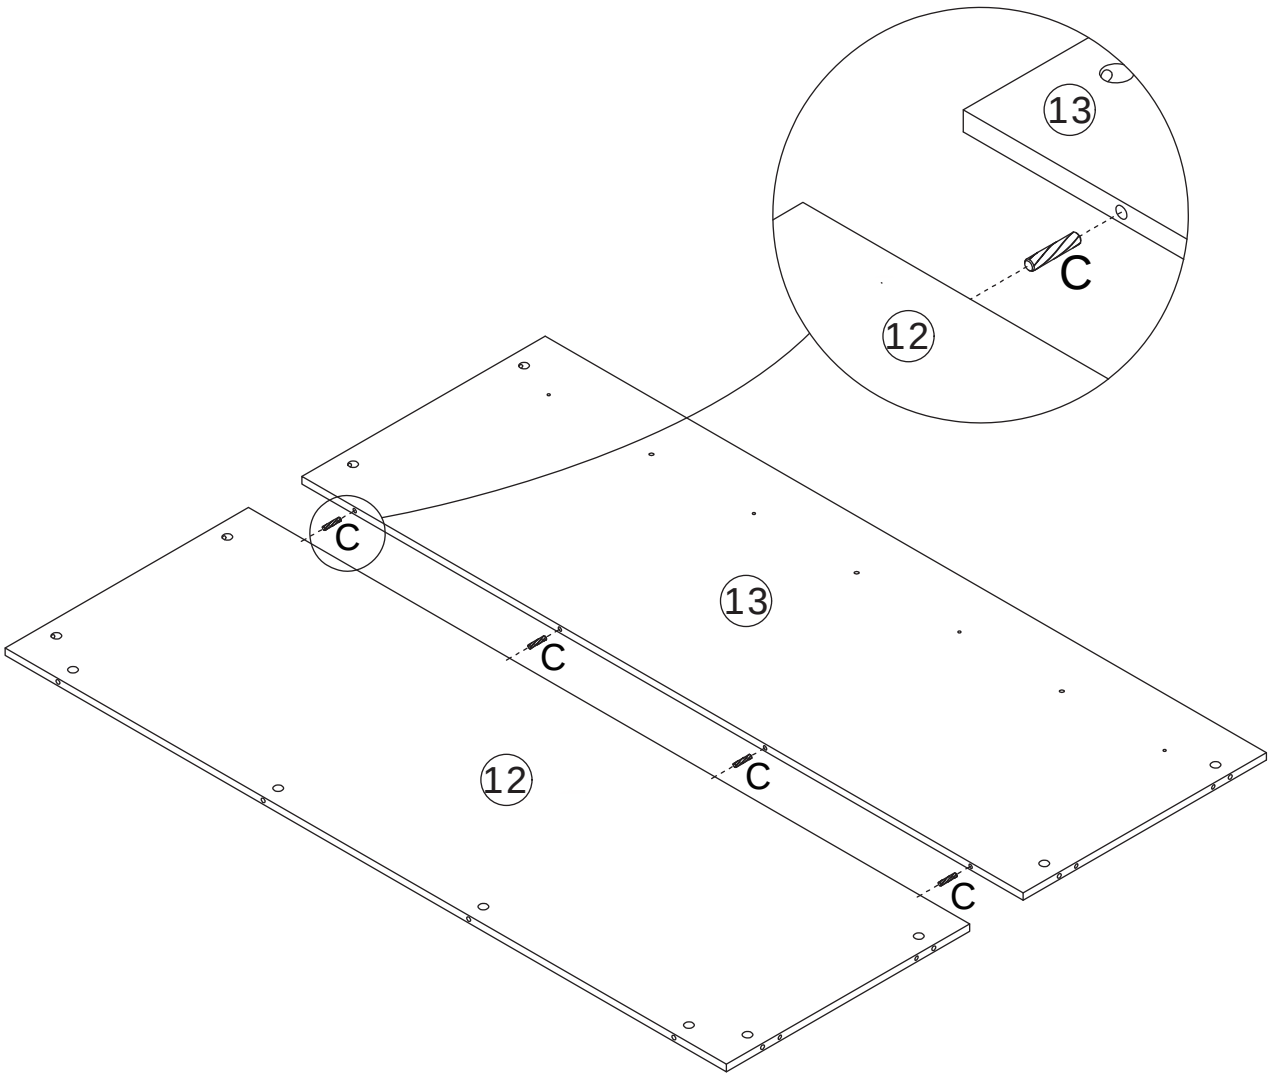


19


C x 3





∅6 x 30 mm

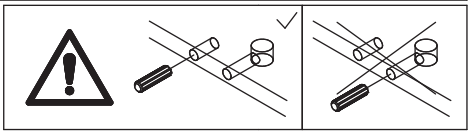


Connect panels 13 and 15 using wooden dowel C.

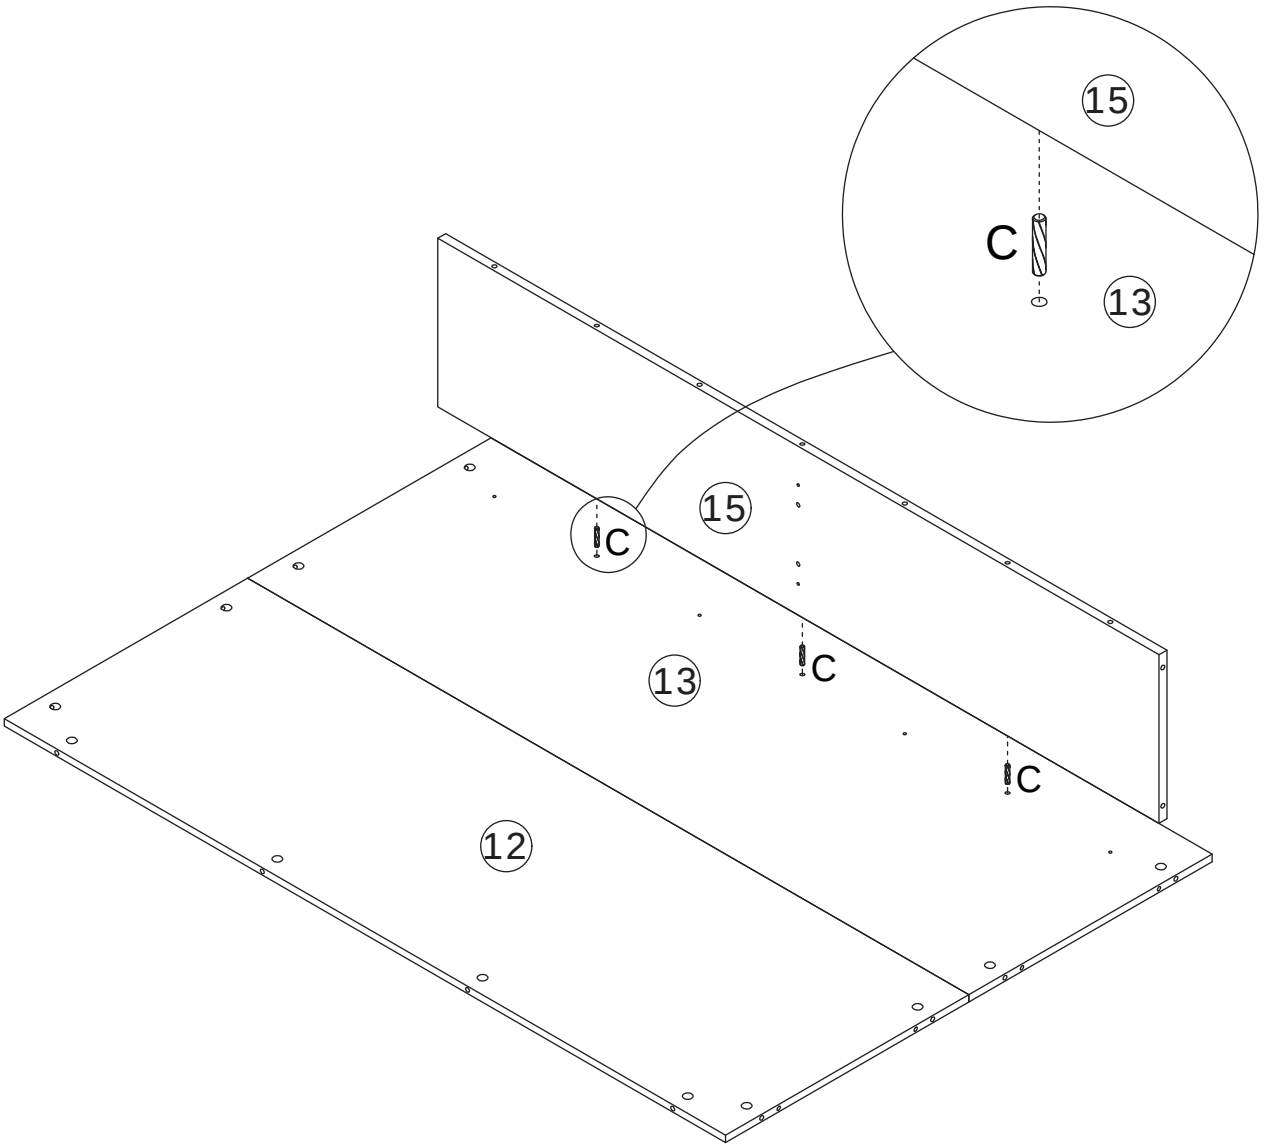


20



B x 6	C x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

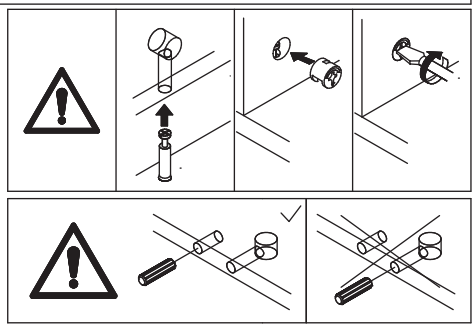


Connect panel 17 to panels 12, 13, and 15 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

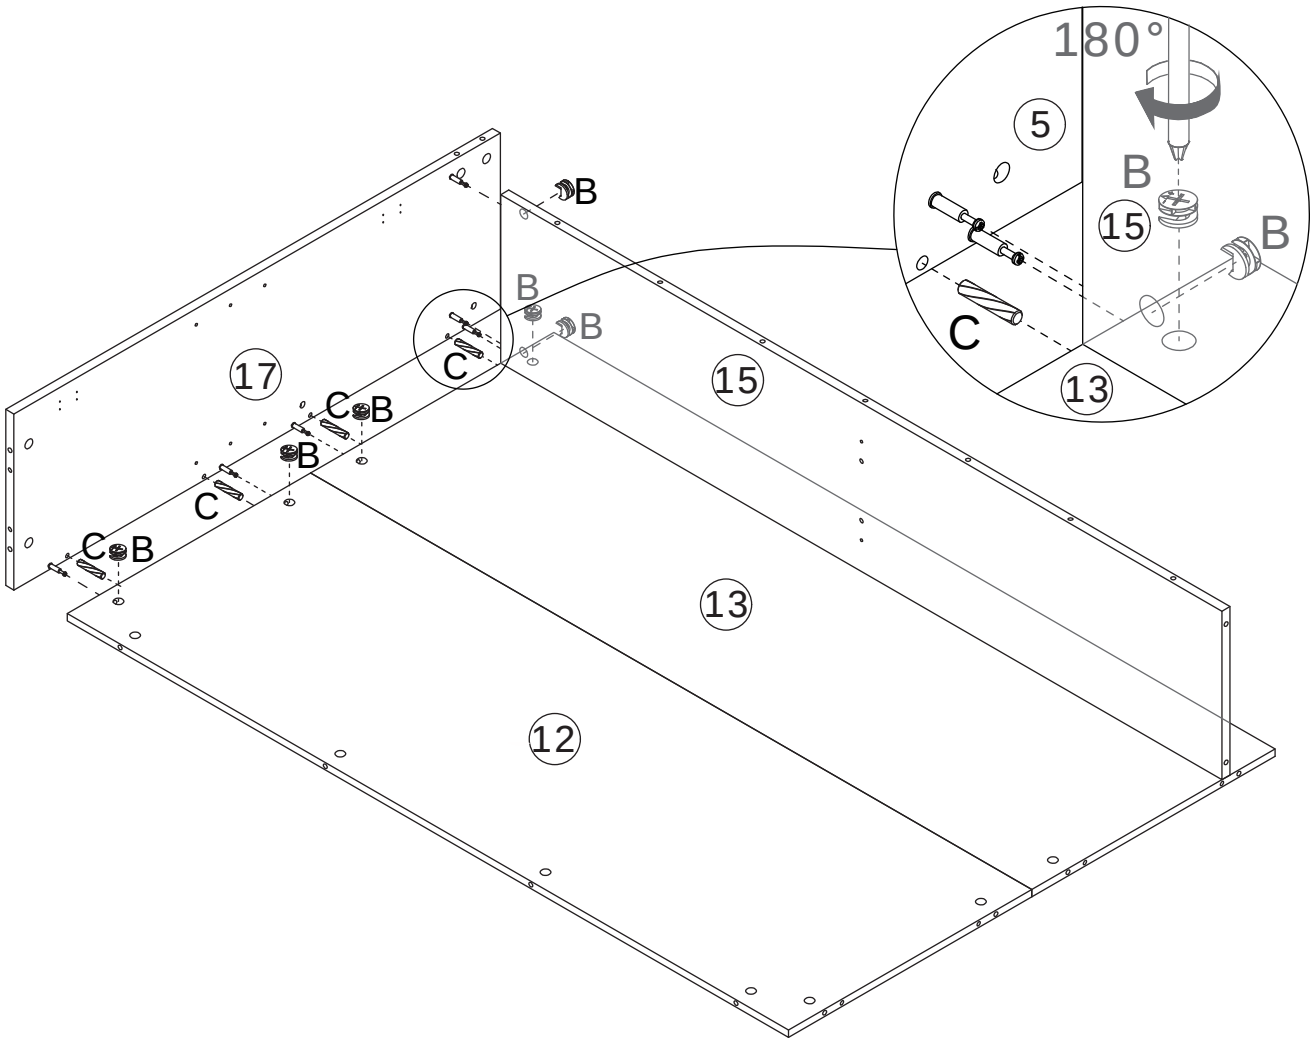


21



B x 6	C x 4	
		
∅15 x 9 mm	∅6 x 30 mm	

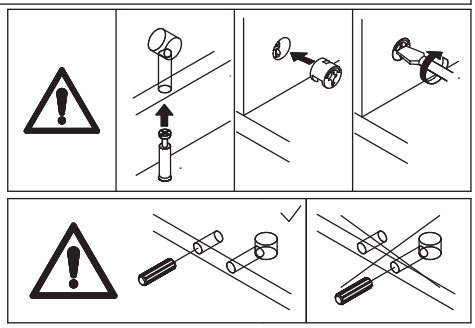


Connect panel 4 to panels 12, 13 and 15 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

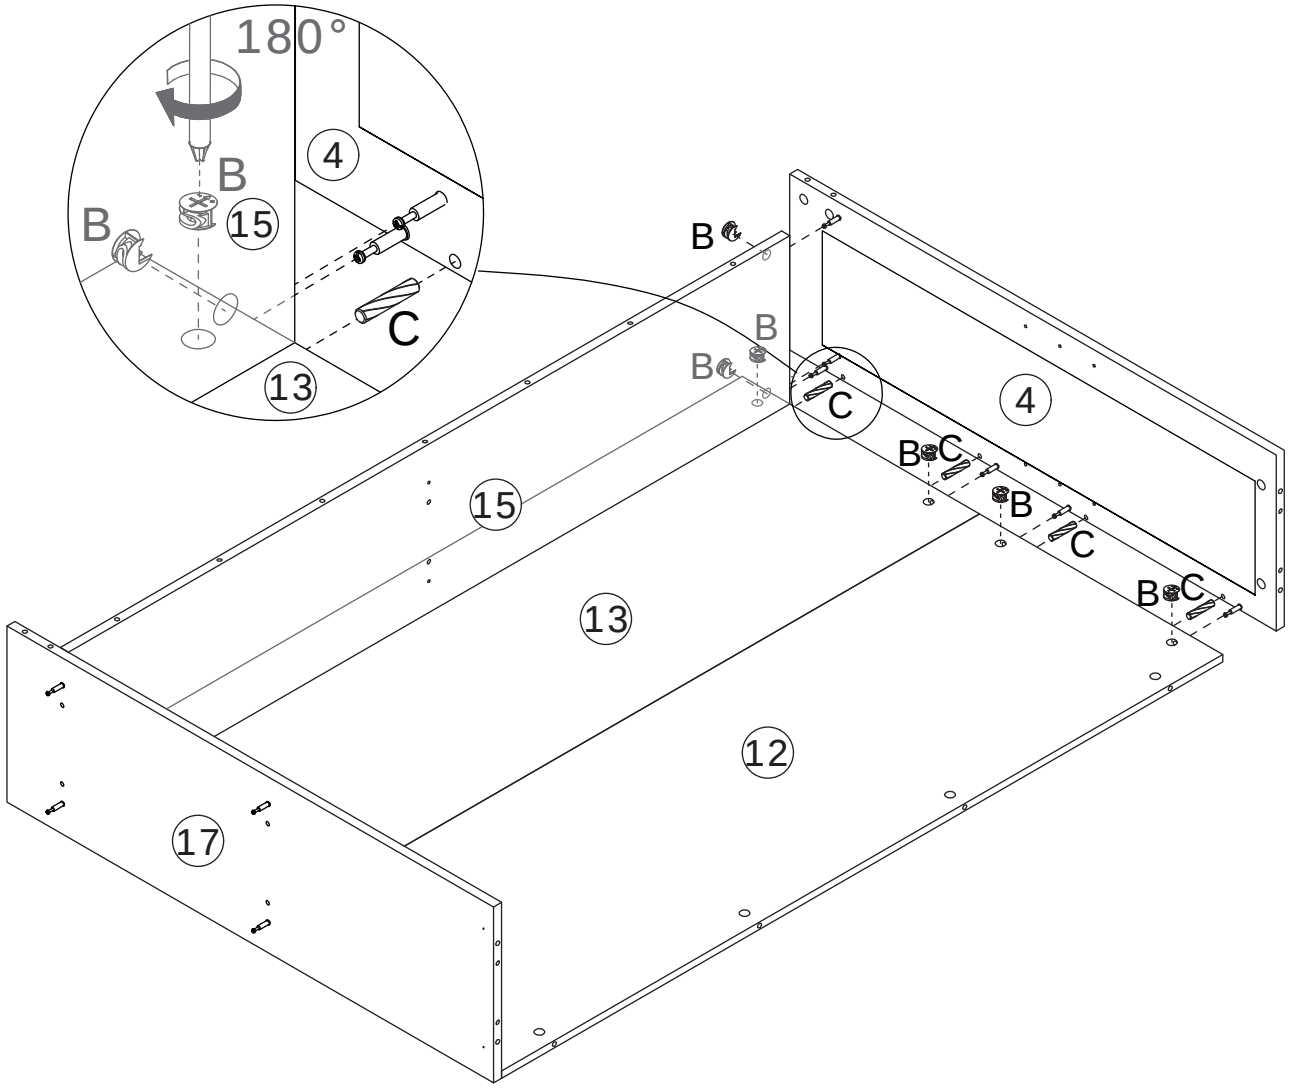


22



C x 2	D x 2	
		
∅6 x 30 mm	∅4 x 35 mm	

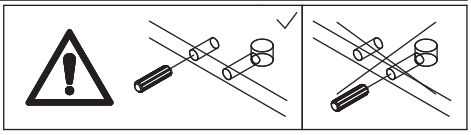


Connect panels 6 and 15 using wooden dowel C, then secure them firmly with screw D.

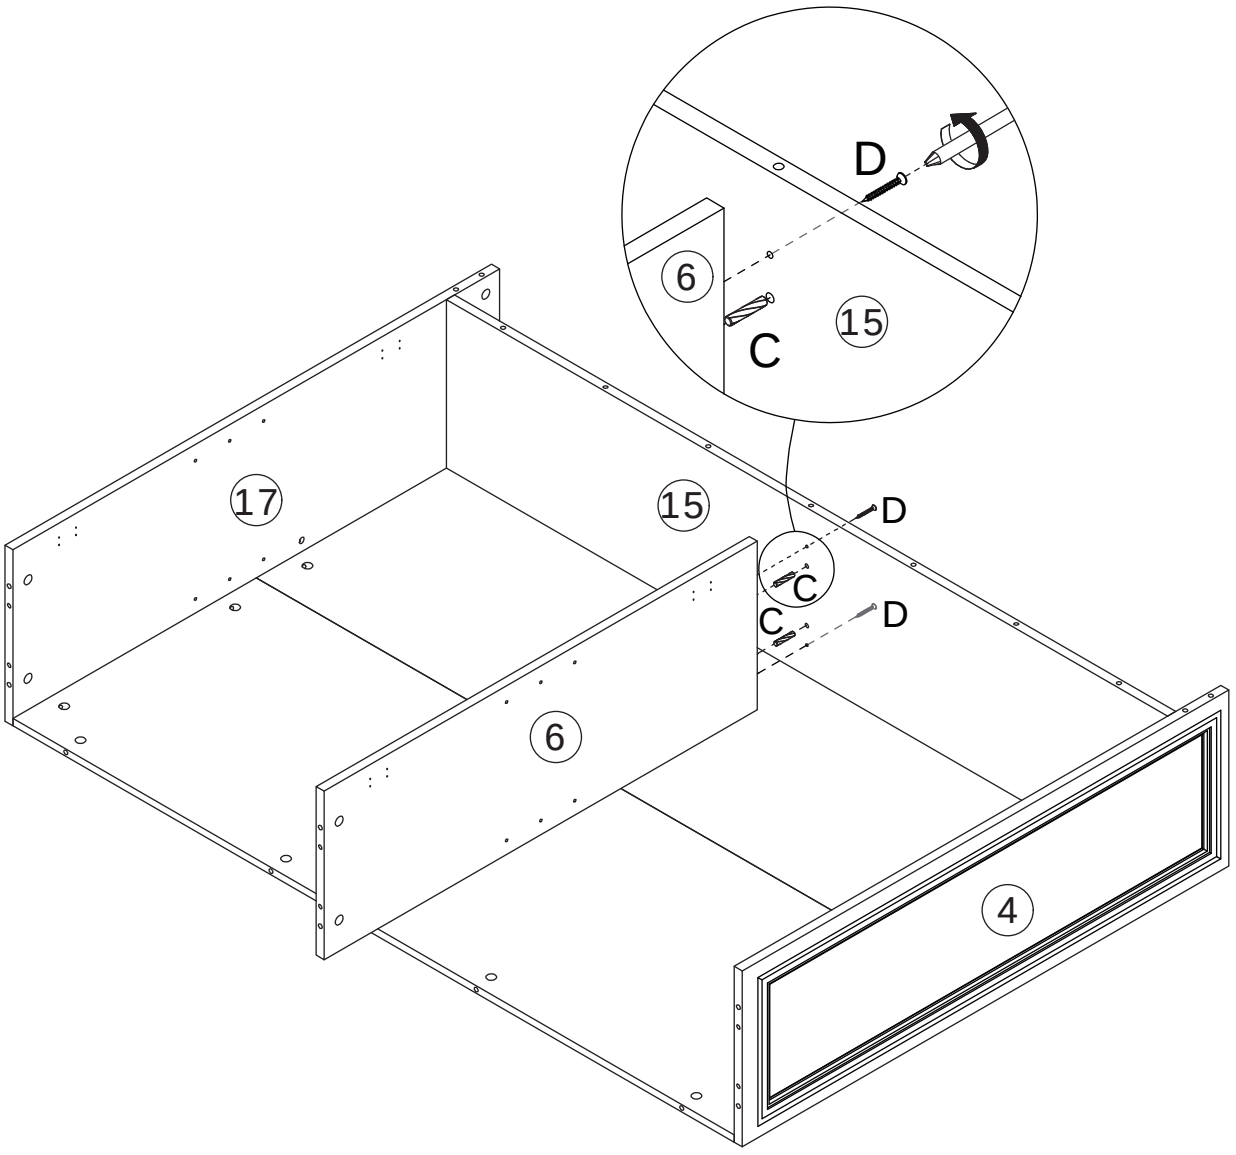


23



B x 8	C x 3	
		
∅15 x 9 mm	∅6 x 30 mm	

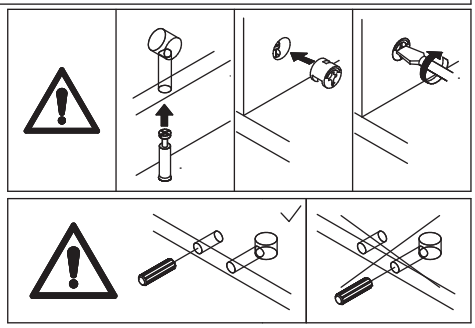


Connect panel 16 to panels 4, 15, and 17 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

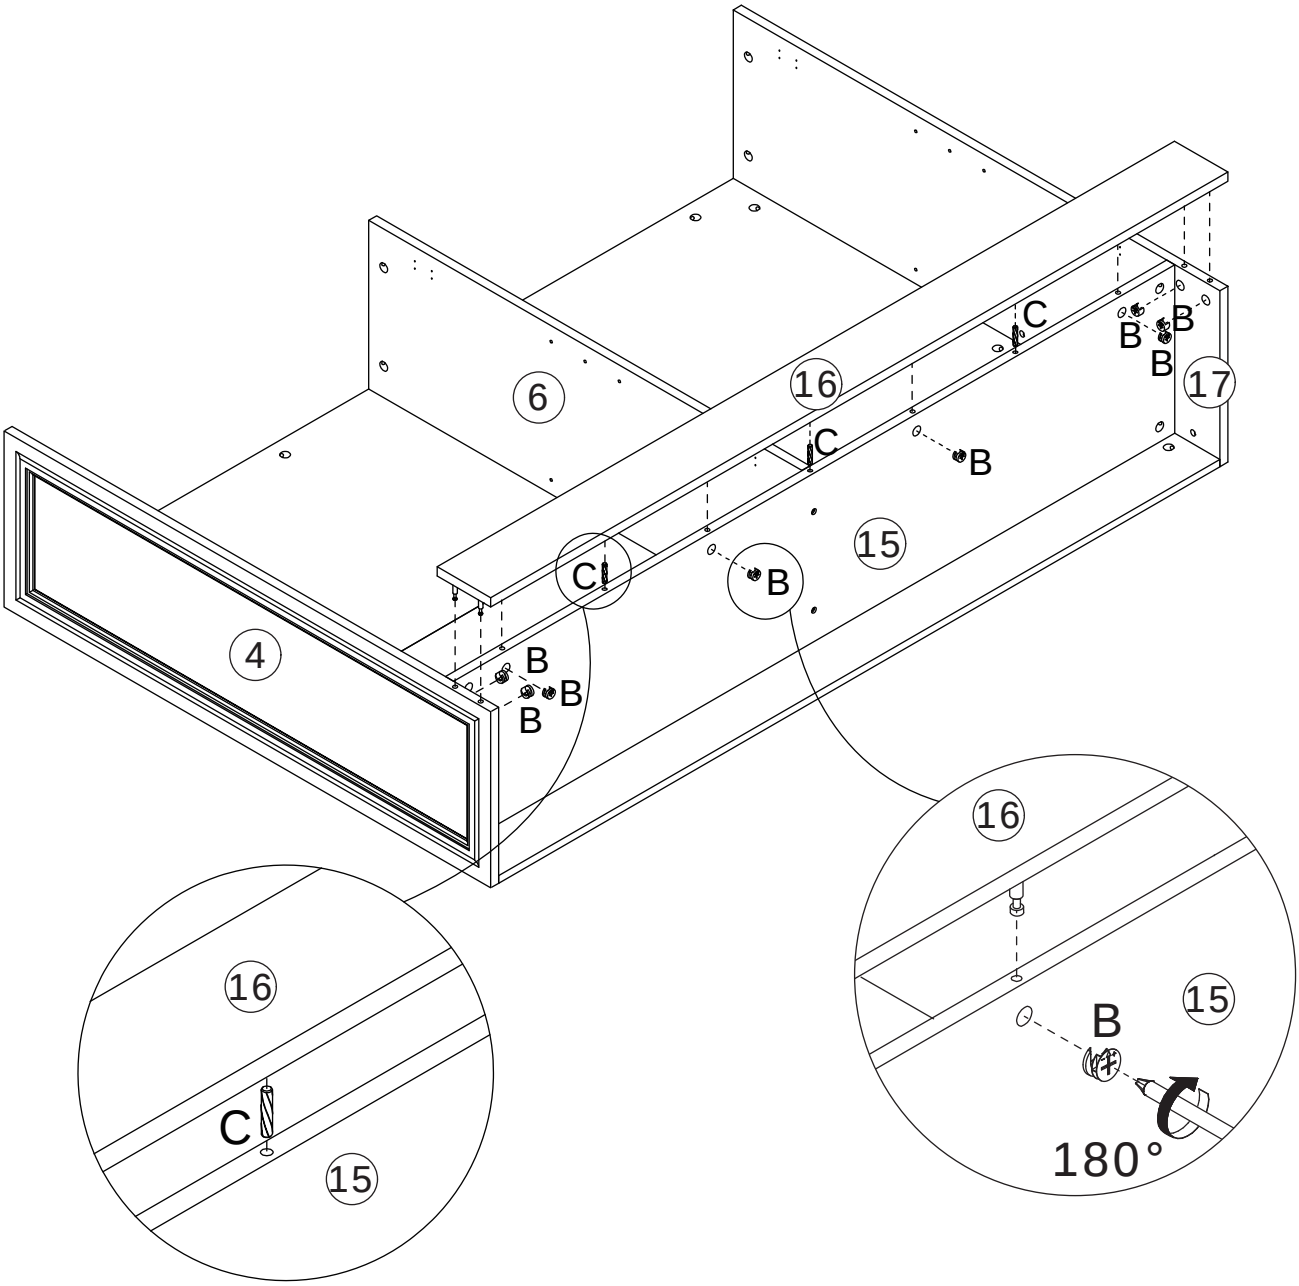


24



F x 4	T x 4	
		
∅6 x 60 mm	∅6 x 10 mm	

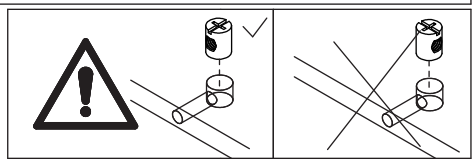


Insert nut T into holes on panels 4 and 17,
then screw rod F into panels 4 and 17.

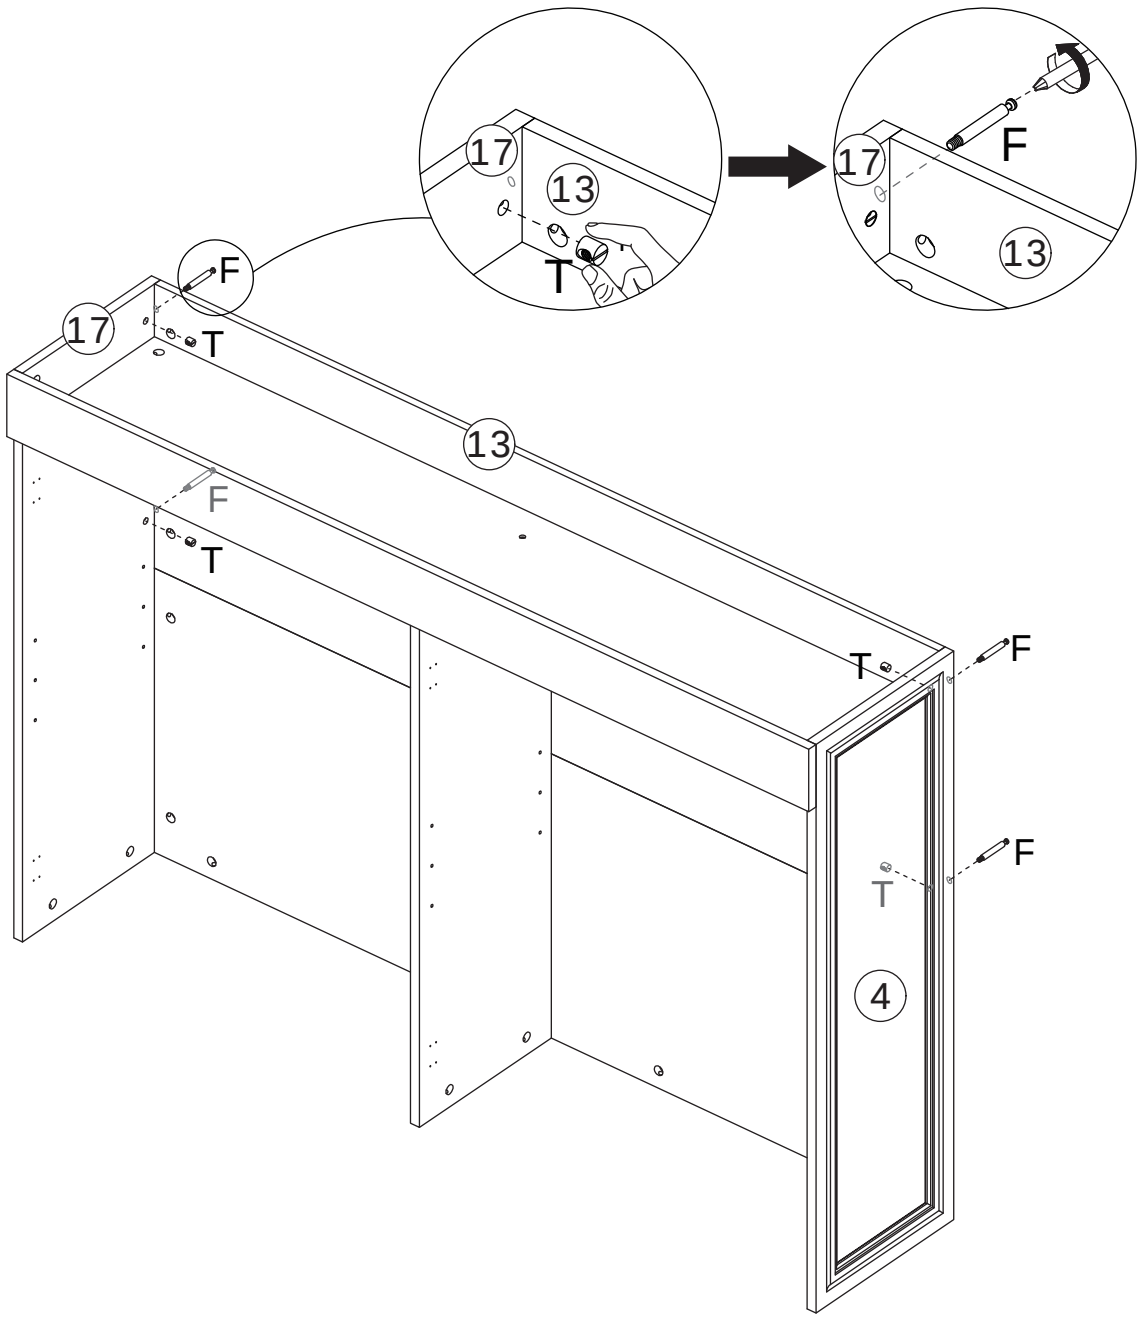


25




A x 4	D x 4	
		
∅6 x 35 mm	∅4 x 35 mm	

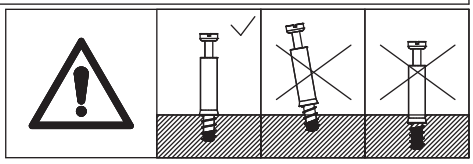



Secure panel 13 to the back of the unit using screw D.
Screw eccentric rod A onto panel 13.

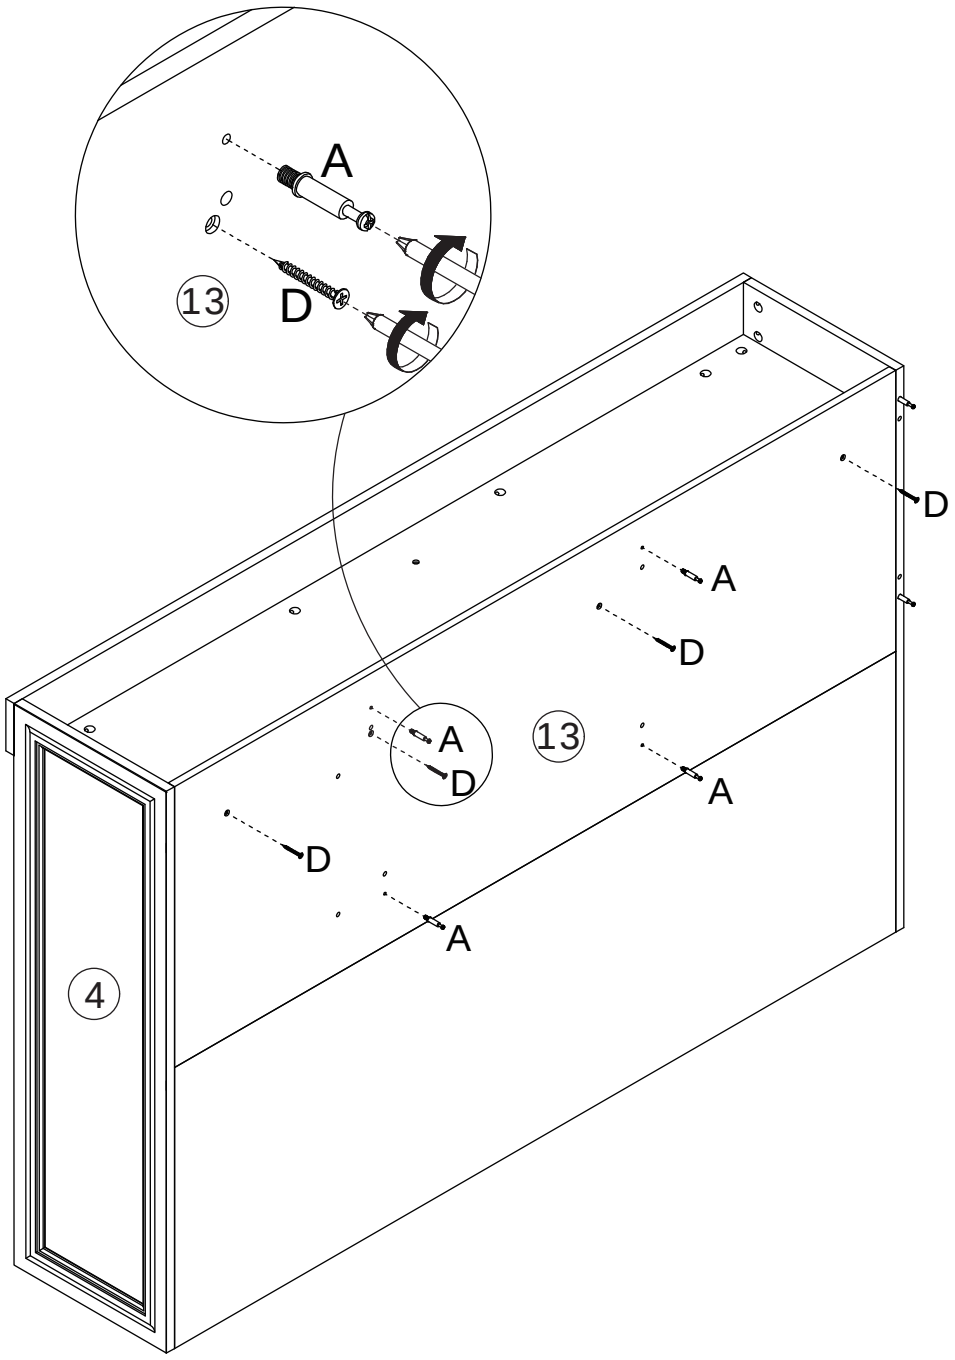


26


A x 2	E x 5	CL x 1	CR x 1	
				
∅6 x 35 mm	∅3 x 12 mm	350 mm	350 mm	

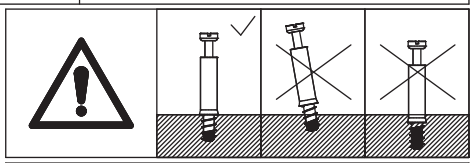


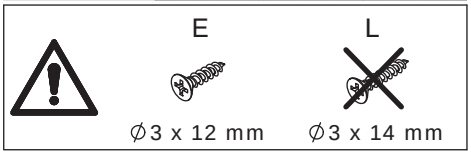


Screw eccentric rod A onto panel 29.
Secure slide rail CL and CR to panels 29 and 26 using screw E.

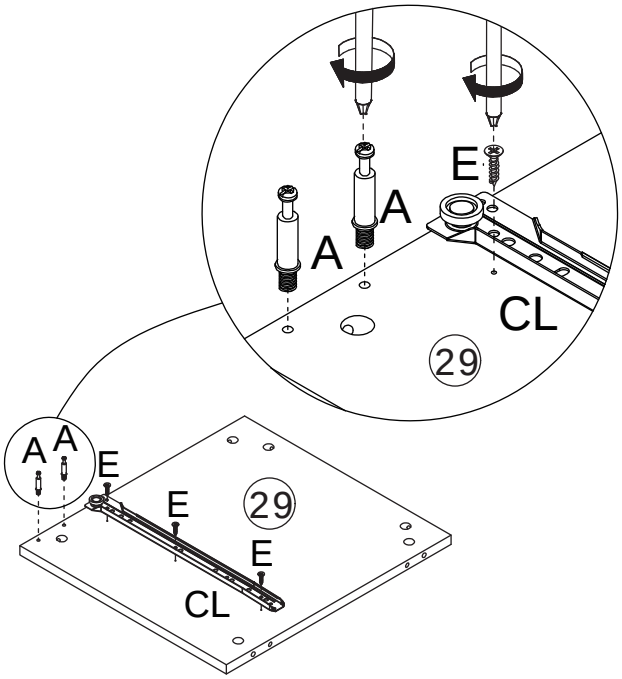

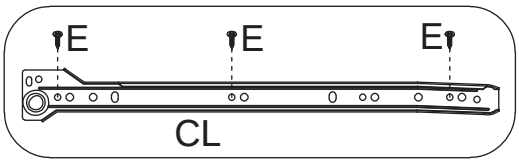


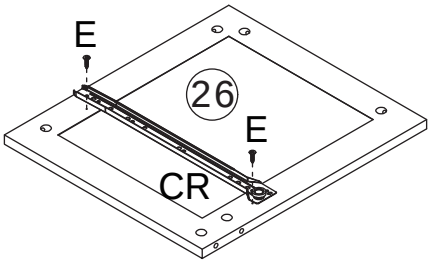

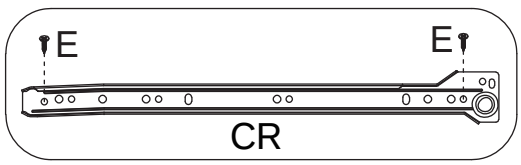



27

A x 6




∅6 x 35 mm





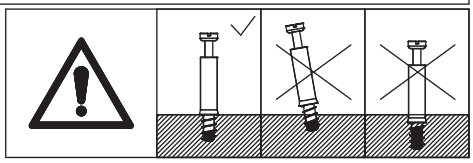


Screw eccentric rod A onto panels 29, 31 and 33.

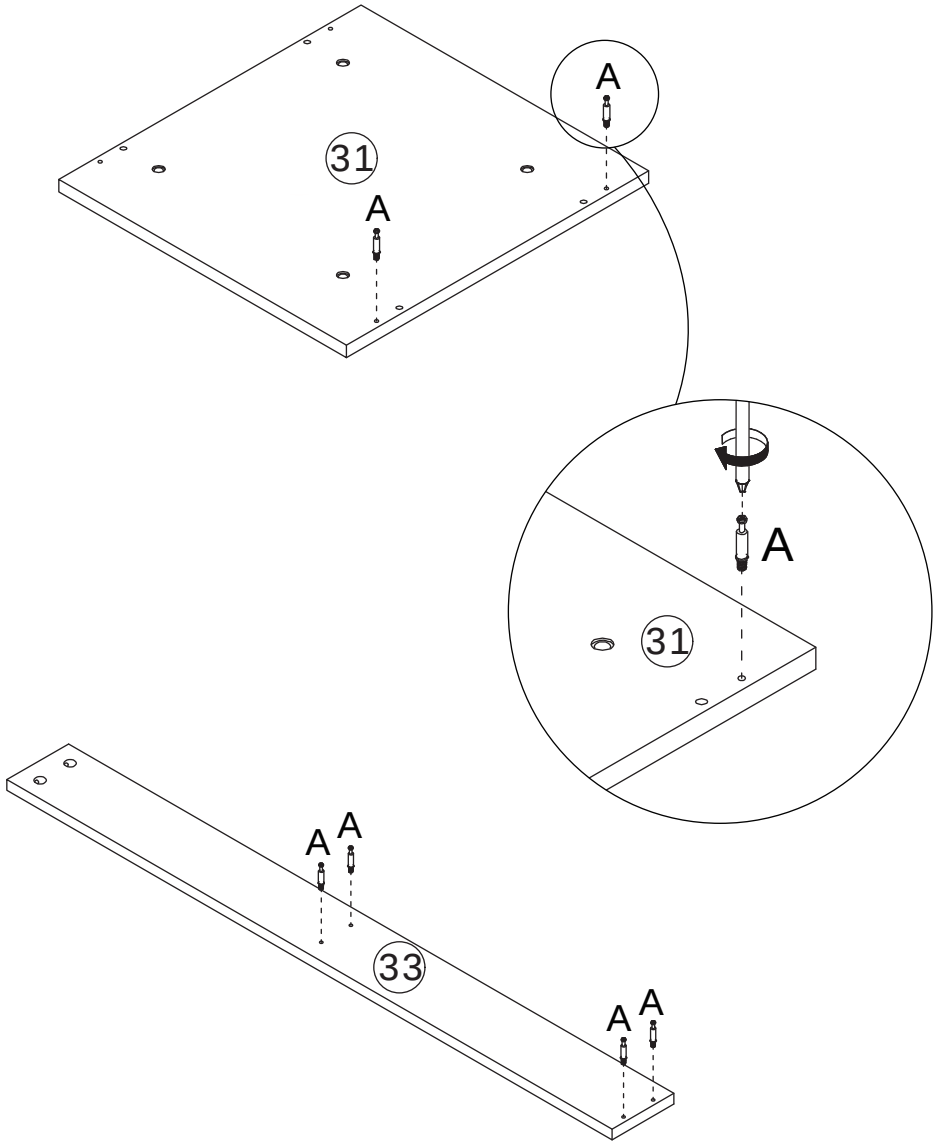


28

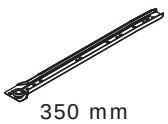

E x 12	CL x 2	CR x 2	
			
∅3 x 12 mm	350 mm	350 mm	


Secure slide rail CR and CL to panel 28 using screw E.

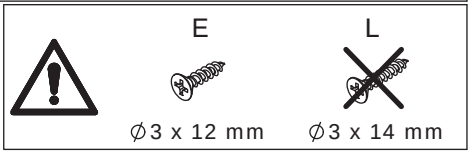

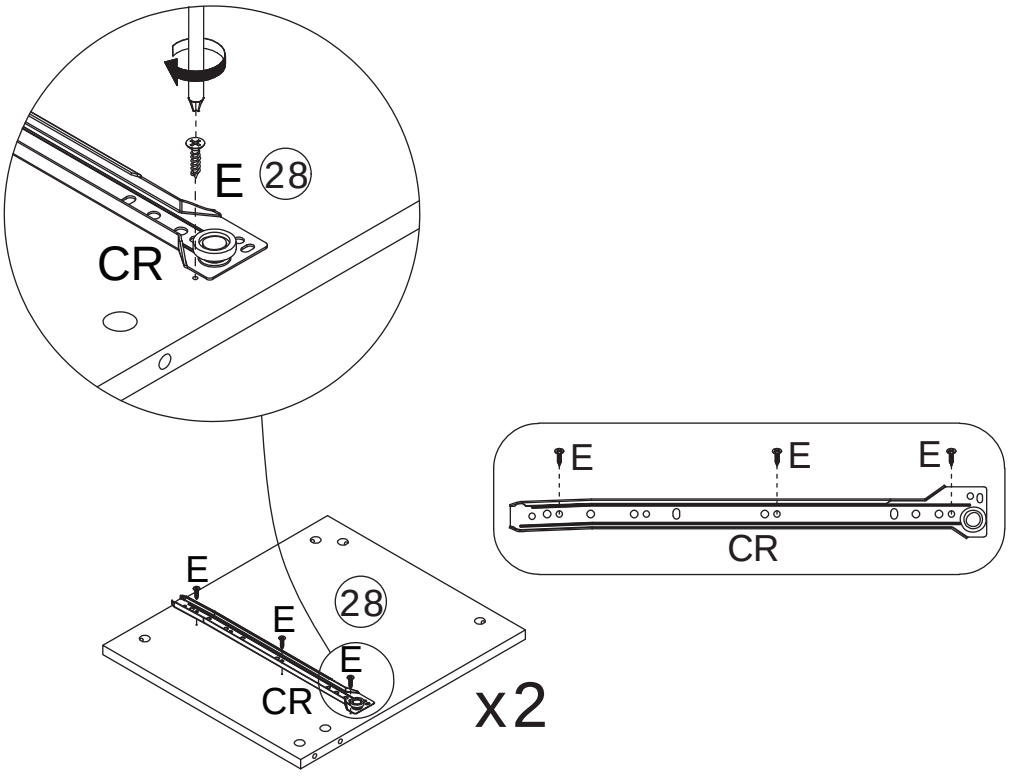


29

B x 2	C x 4	D x 2	
			
∅15 x 9 mm	∅6 x 30 mm	∅4 x 35 mm	

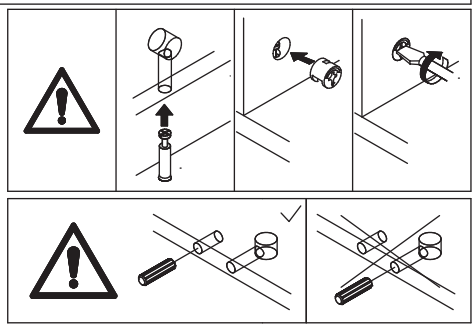

Connect panel 31 to panel 29 using wooden dowel C, then tighten by turning eccentric cam B clockwise.
Connect panel 31 to panel 30 using wooden dowel C, then secure them with screw D.

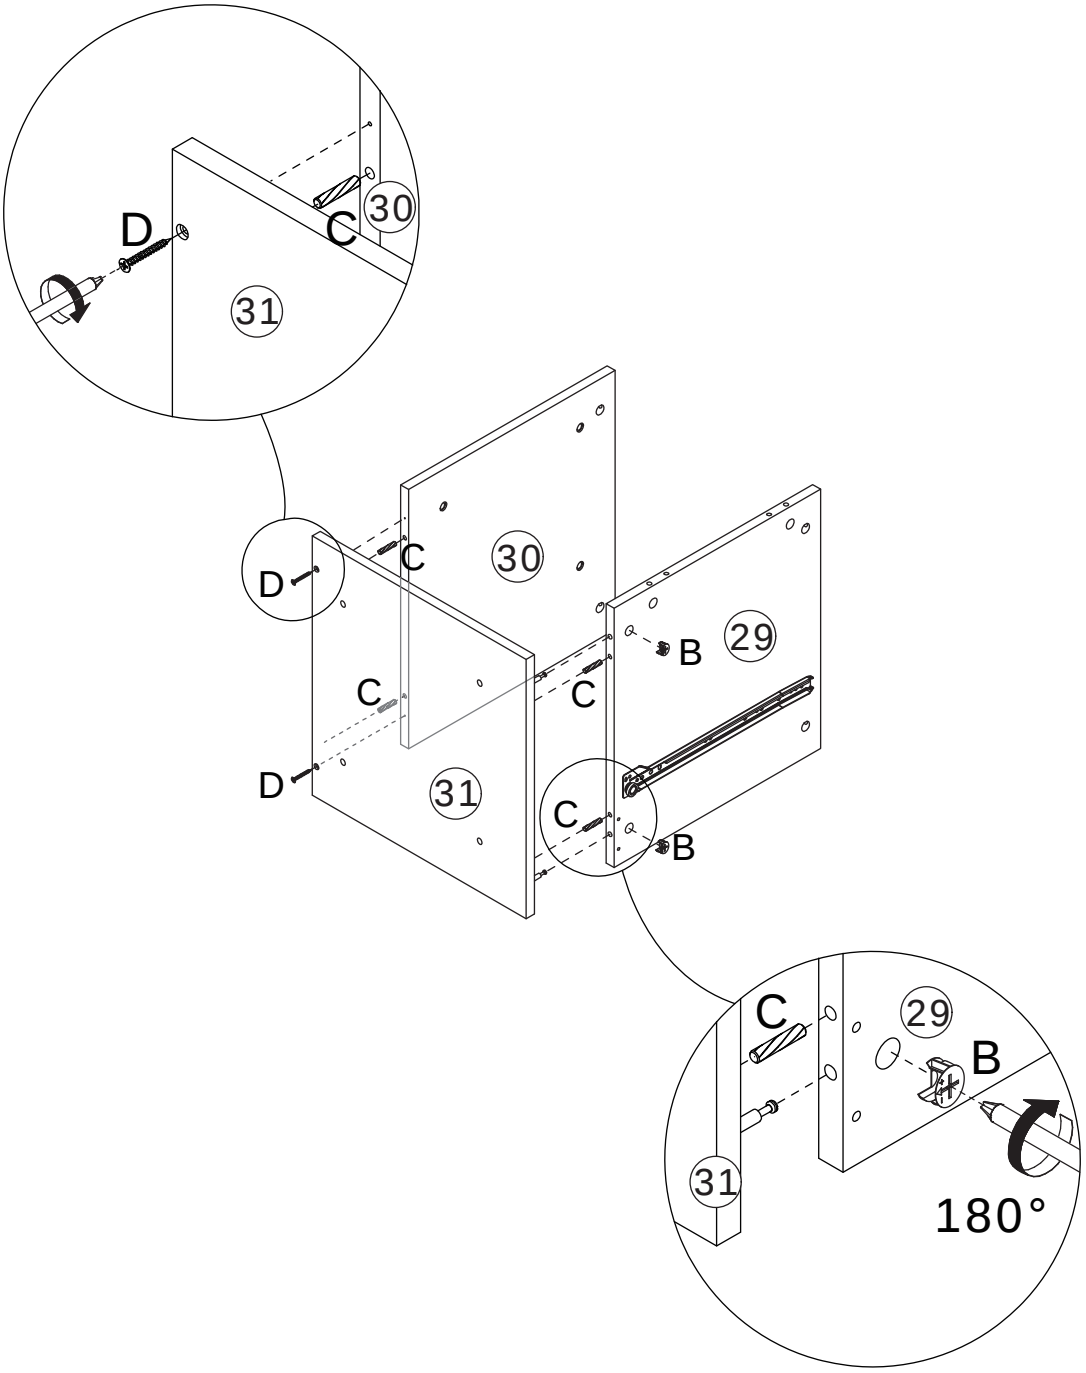



30

B x 4




∅15 x 9 mm



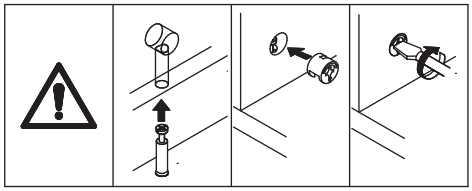

Connect panel 33 to panels 26 and 28, then tighten by turning eccentric cam B clockwise.

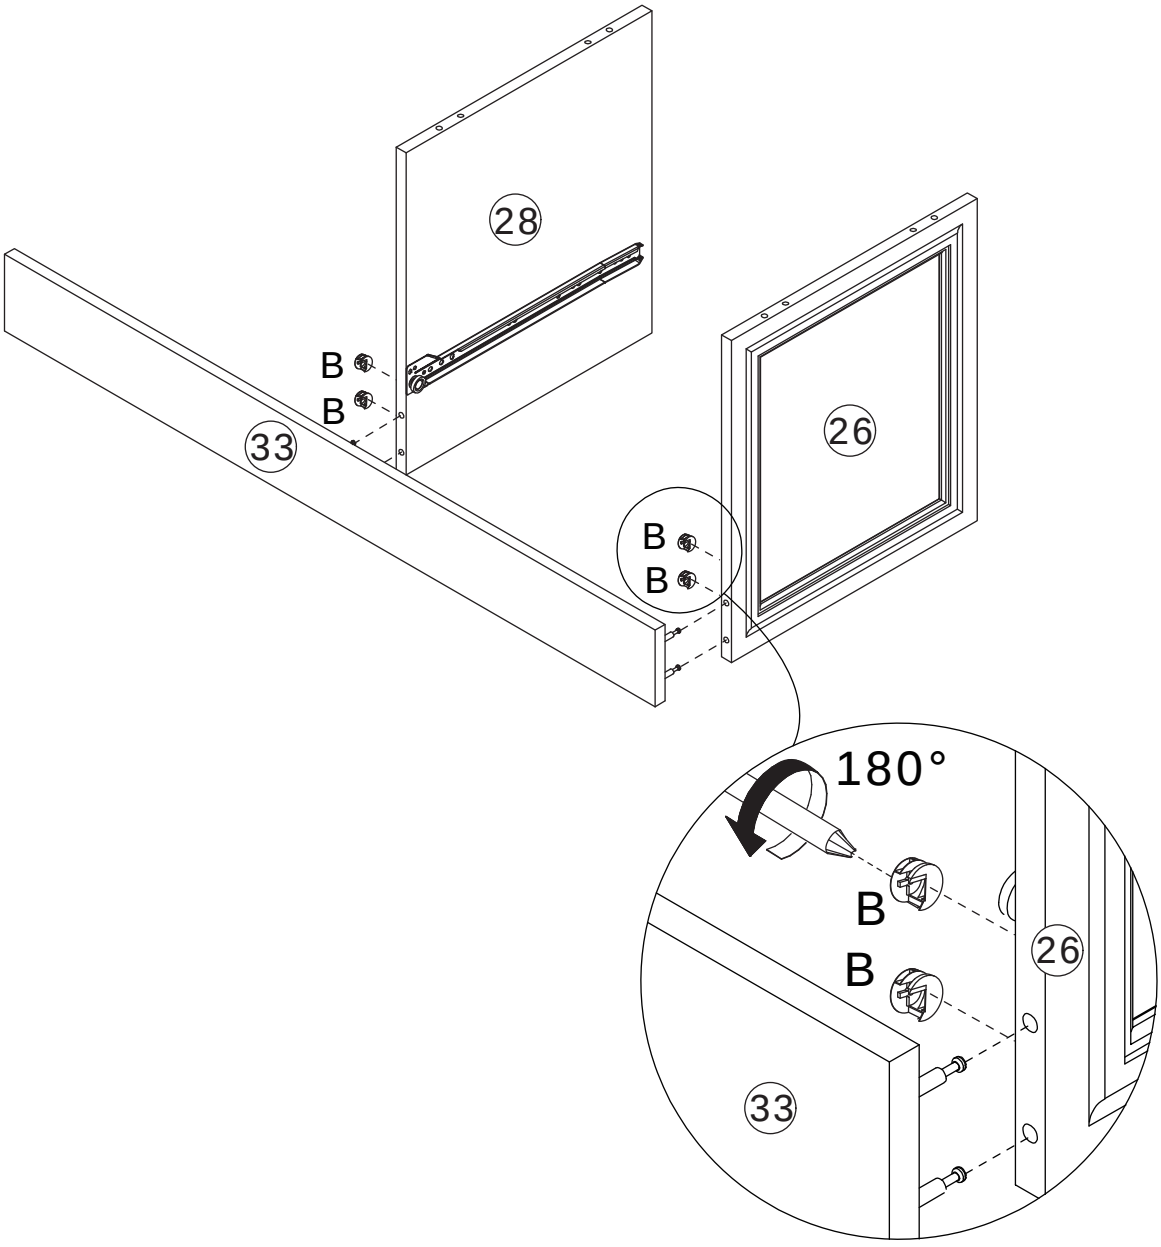



31

B x 2




∅15 x 9 mm





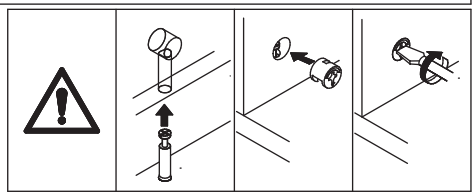


Connect panel 33 to panel 29, then tighten by turning eccentric cam B clockwise.

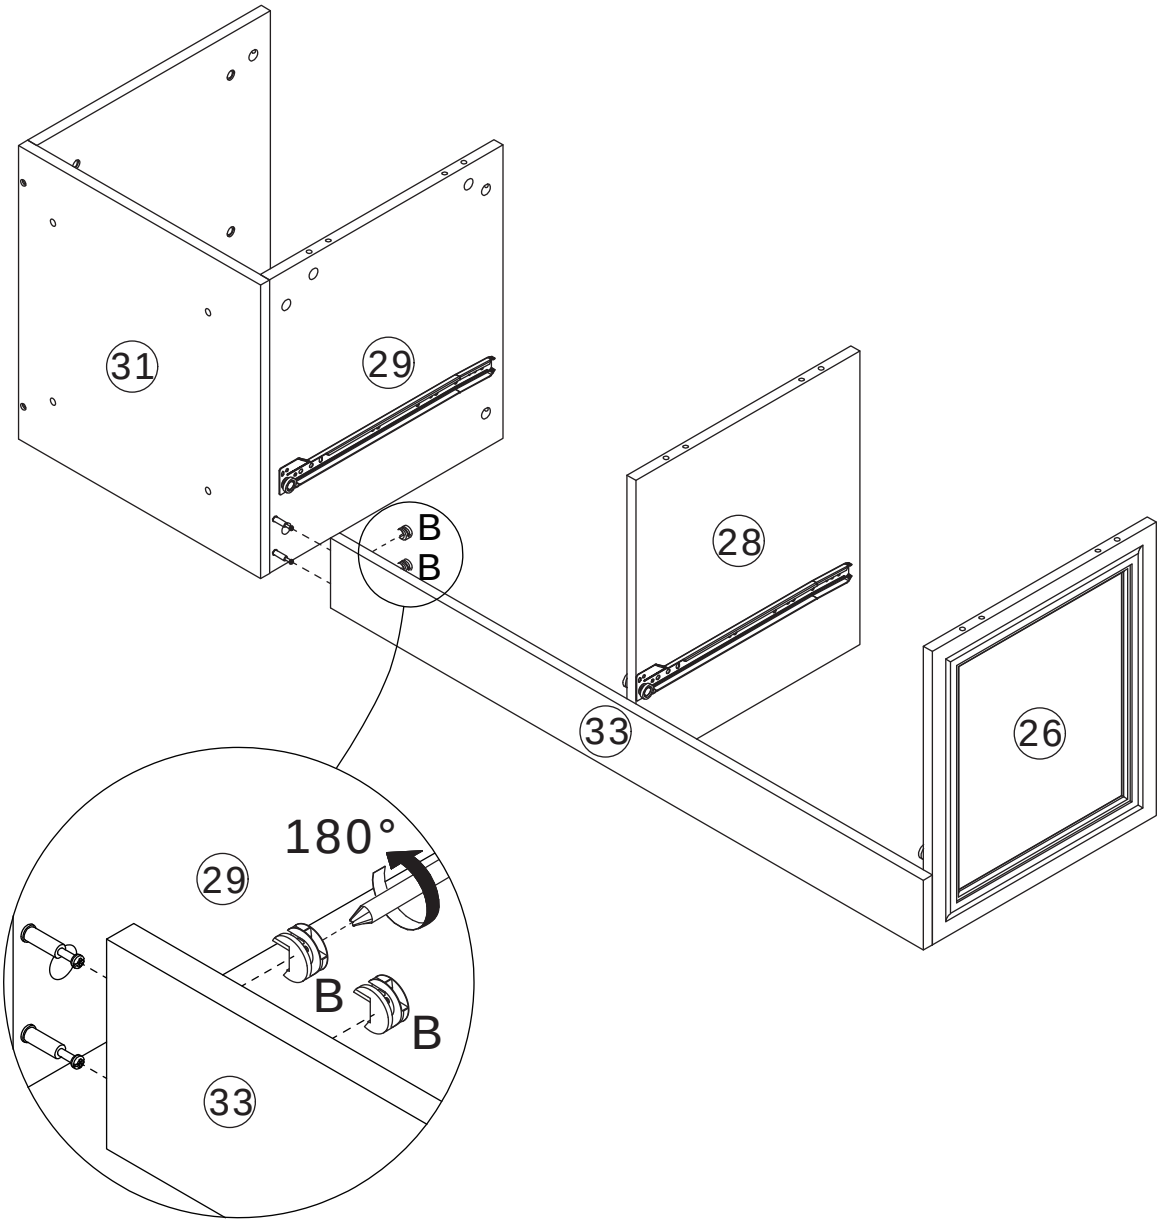


32






B x 8	C x 8	
		
∅15 x 9 mm	∅6 x 30 mm	

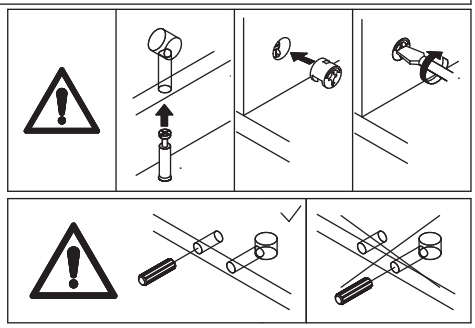

Connect the two assembled components using wooden dowel C, then tighten by turning eccentric cam B clockwise.

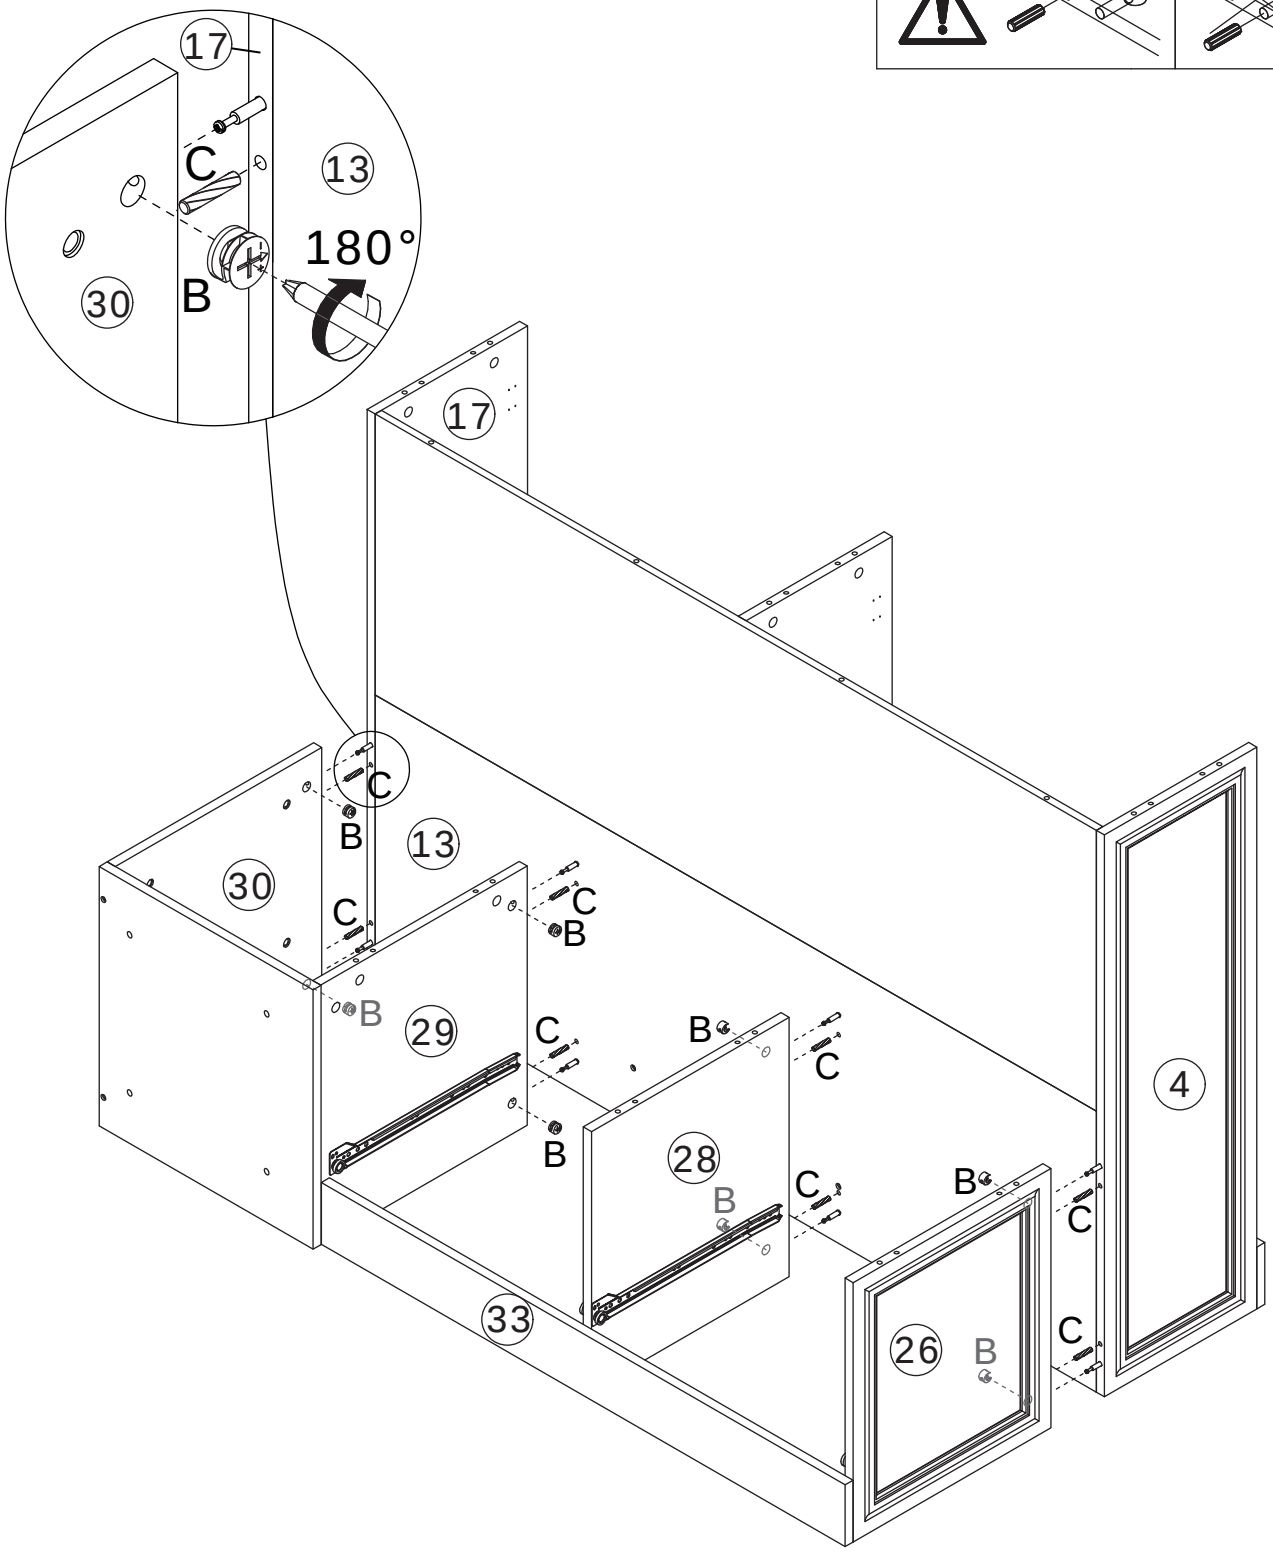



33


A x 10	F x 2	H x 2	L x 4	
				
∅6 x 35 mm	∅6 x 60 mm		∅3 x 14 mm	

T x 2


∅6 x 10 mm

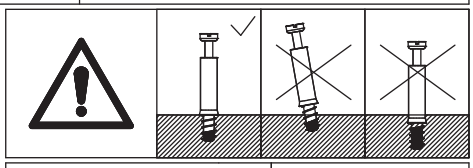


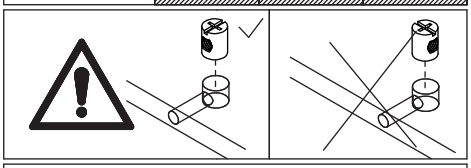


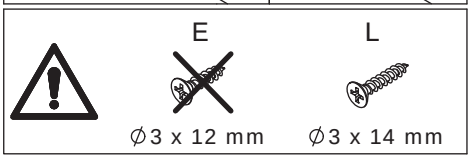


Insert nut T into holes on panel 1, then screw rod F into panel 1.
Secure magnetic catch H to panel 1 using screw L.
Screw eccentric rod A onto panel 1.

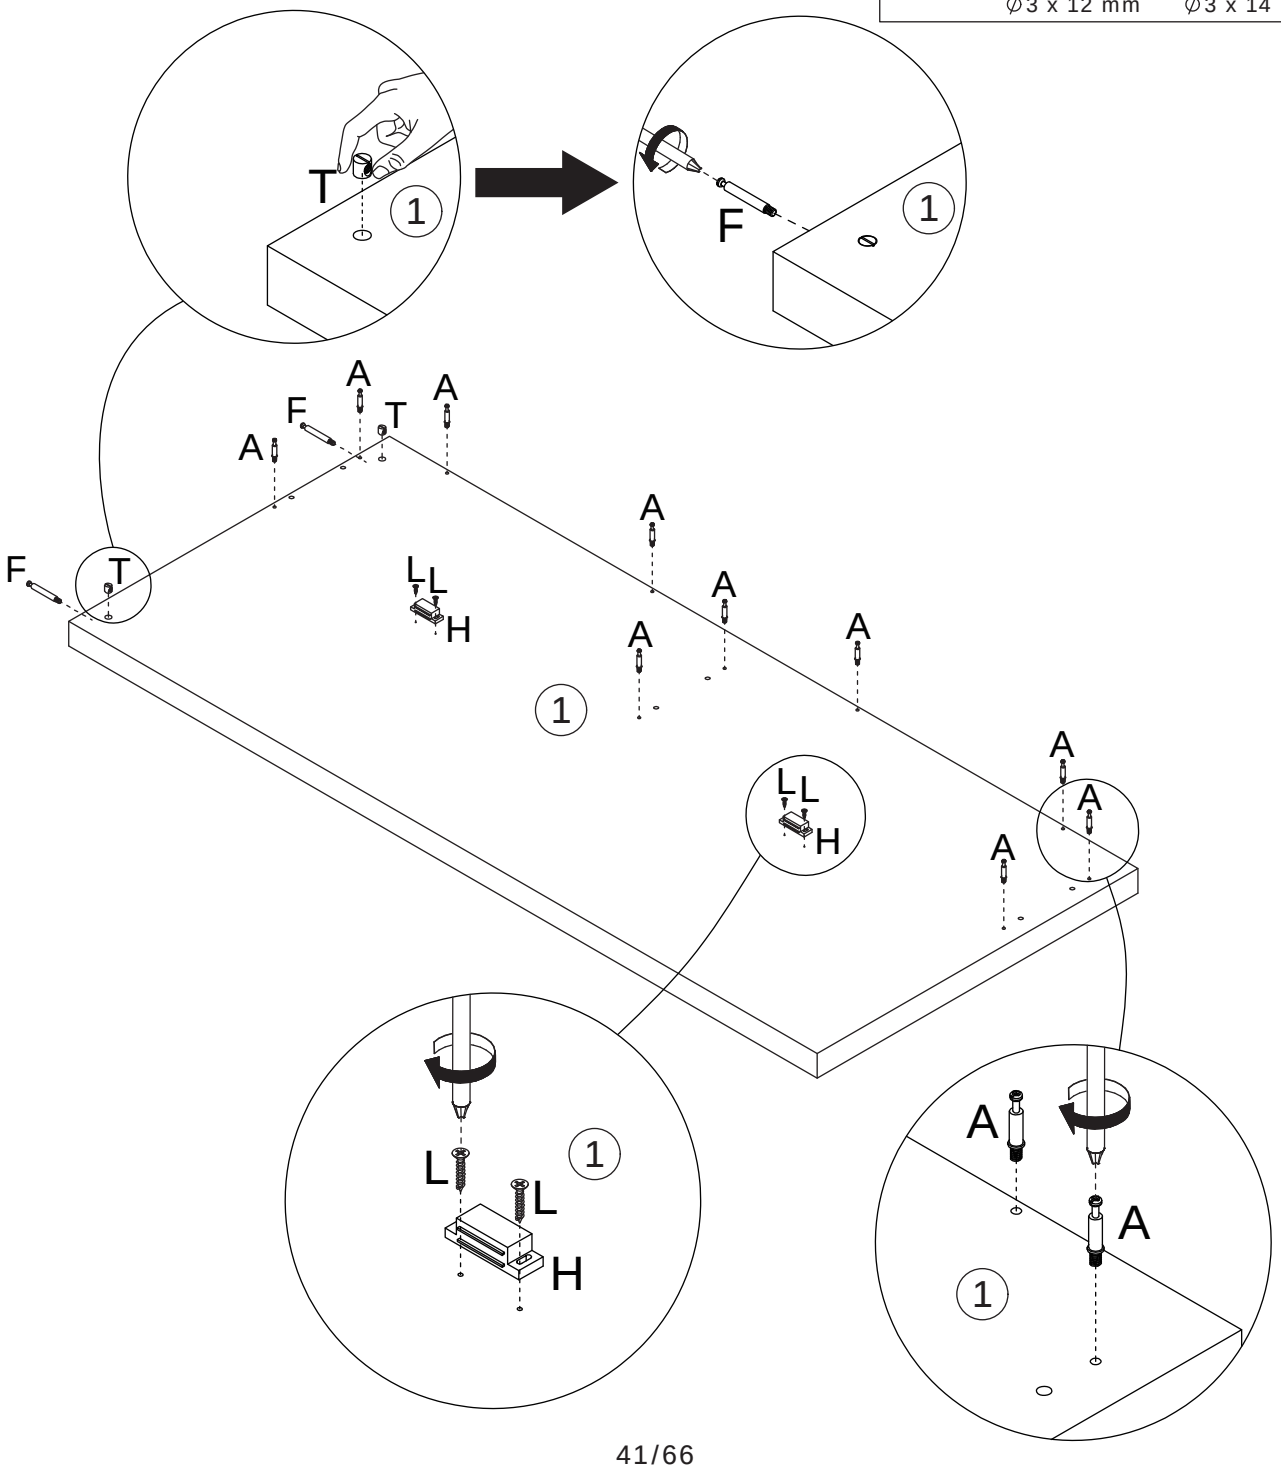


34




B x 10	C x 6	
		
∅15 x 9 mm	∅6 x 30 mm	

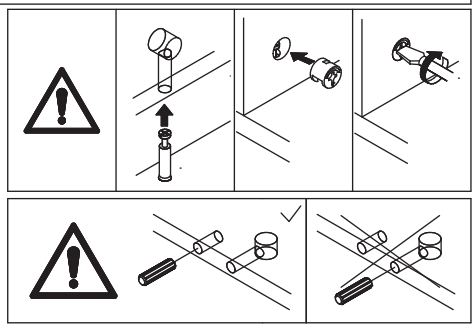


Connect panel 1 to the top of the assembly unit using wooden dowel C, then tighten by turning eccentric cam B clockwise.

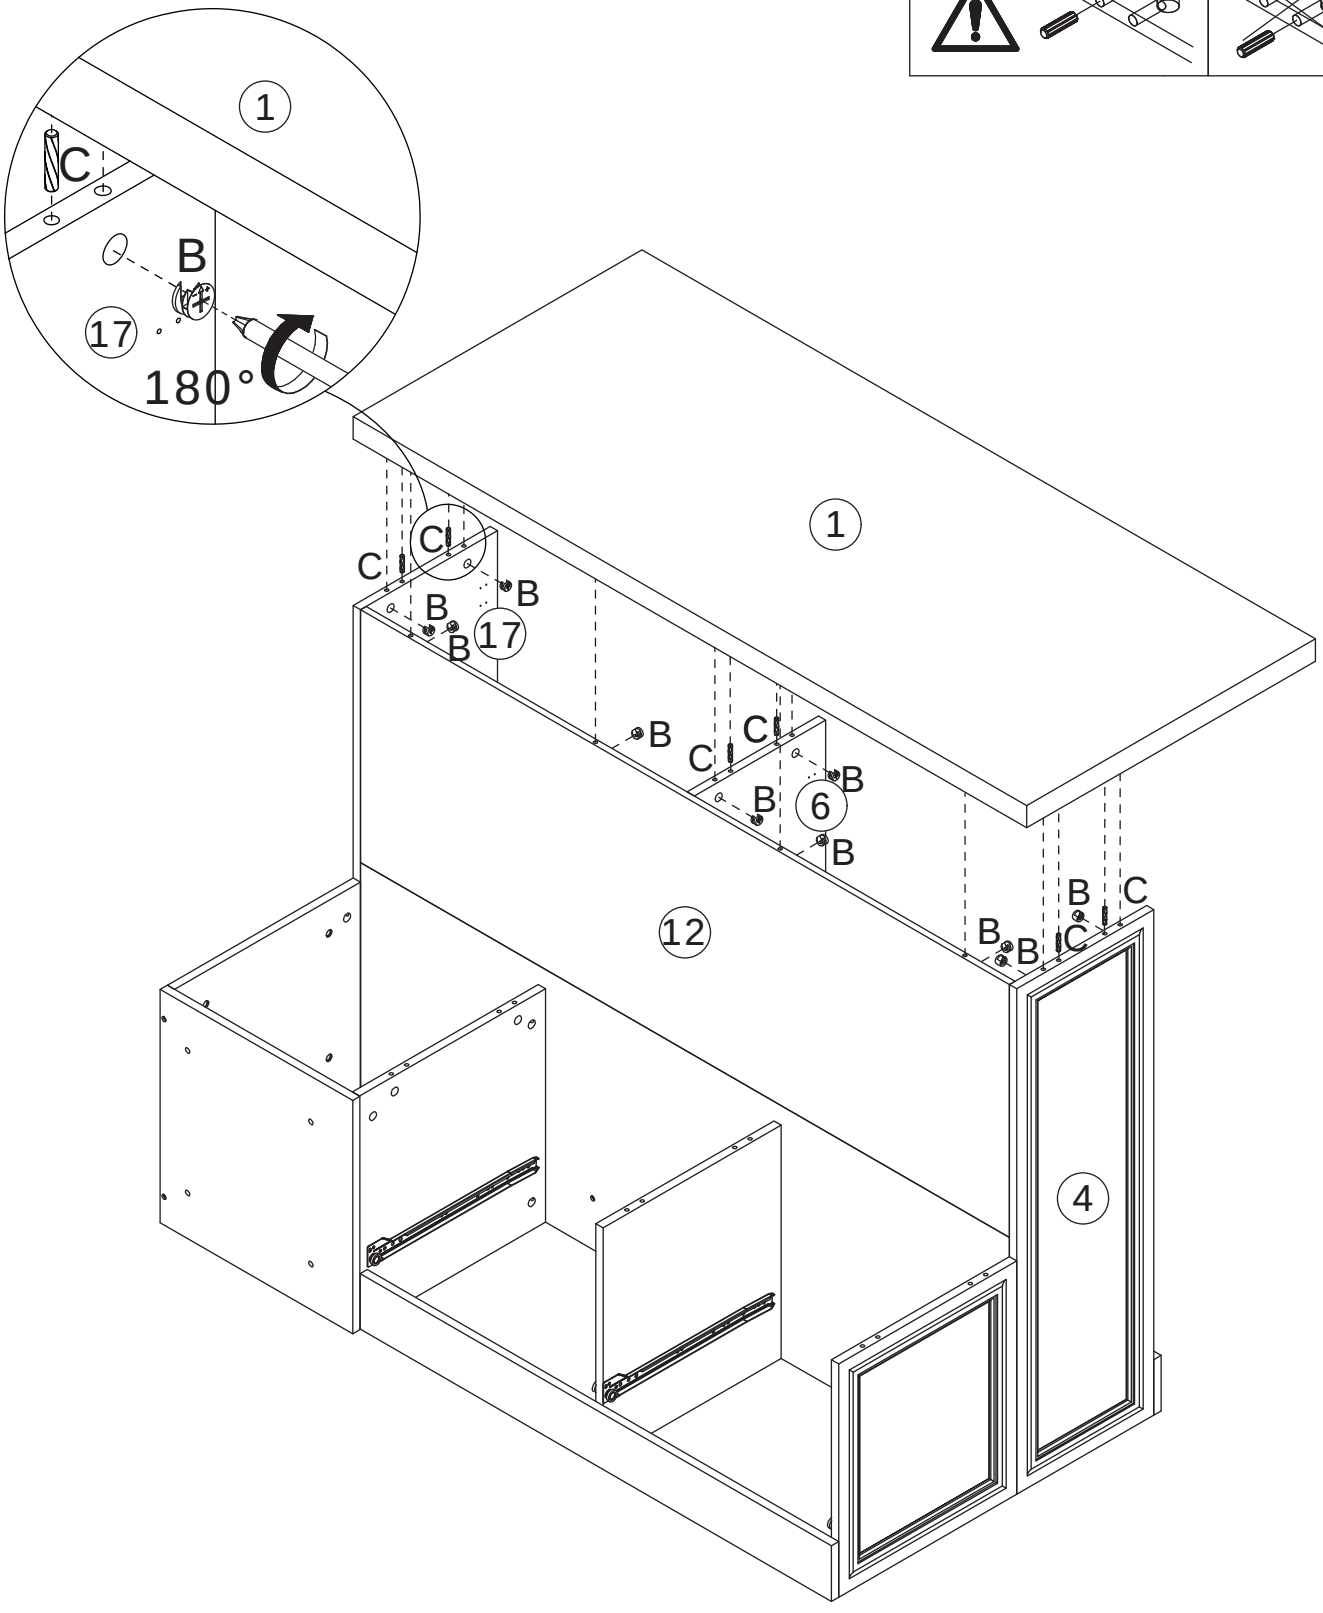


35




B x 6	C x 6	S x 2	U x 4	
				
∅15 x 9 mm	∅6 x 30 mm	∅4 x 25 mm	∅6 x 25 mm	

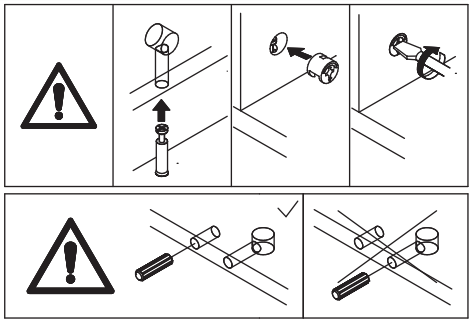



Connect the two units using wooden dowel C, then tighten by turning eccentric cam B clockwise.
Secure panel 22 to the unit using screw S.
Secure panel 14 to the unit using screw U.

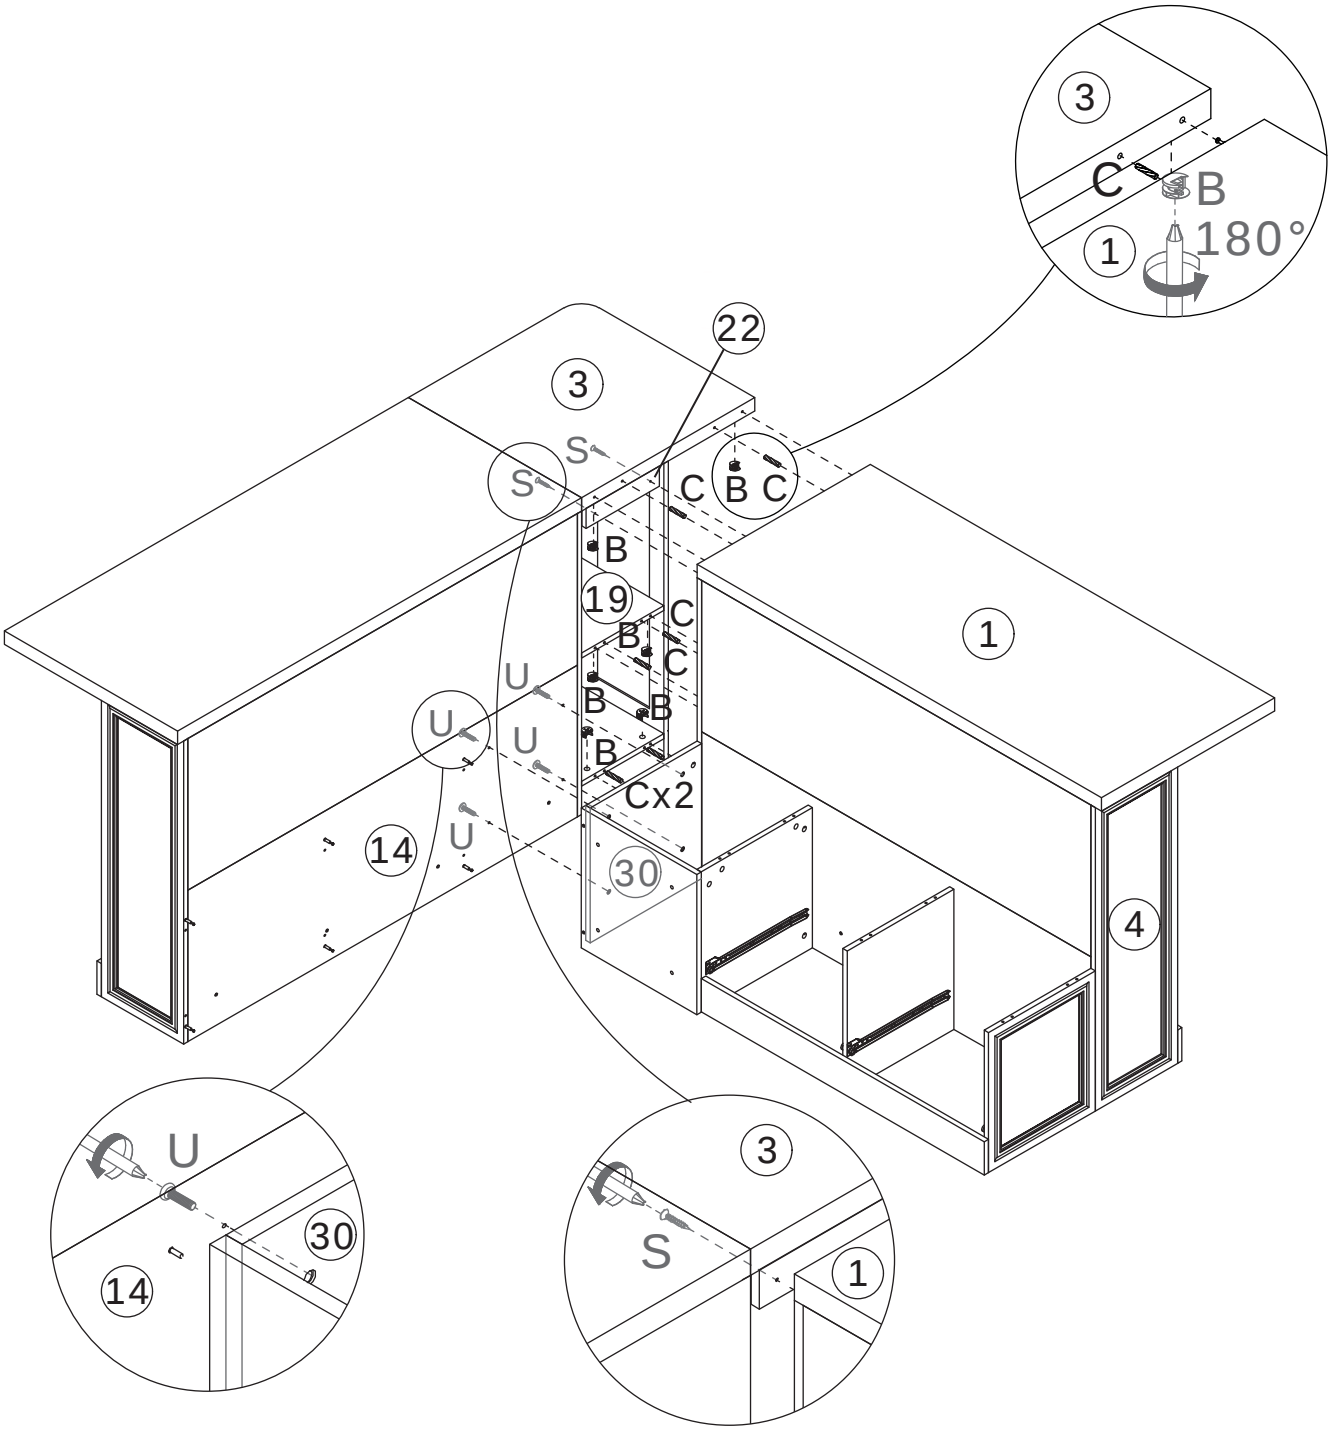


36

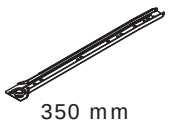
A x 6	E x 5	CL x 1	CR x 1	
				
∅6 x 35 mm	∅3 x 12 mm	350 mm	350 mm	

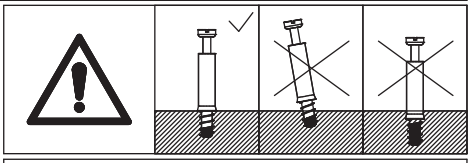


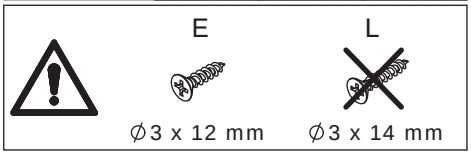

Screw eccentric rod A onto panel 34.
Secure slide rail CL and CR to panels 27 and 32 using screw E.

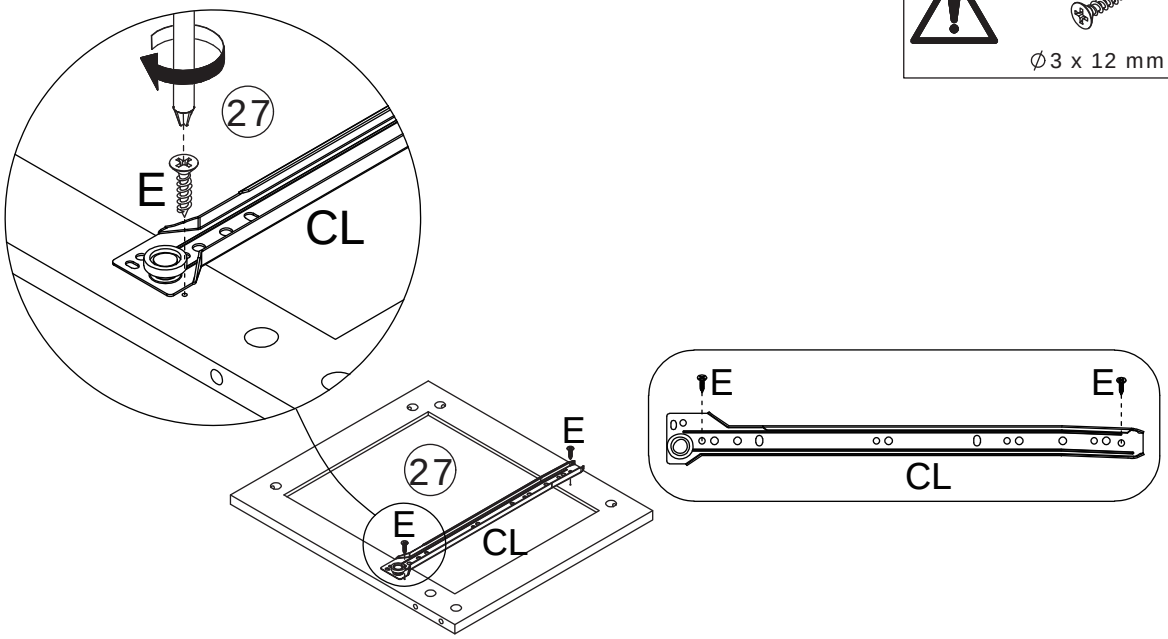

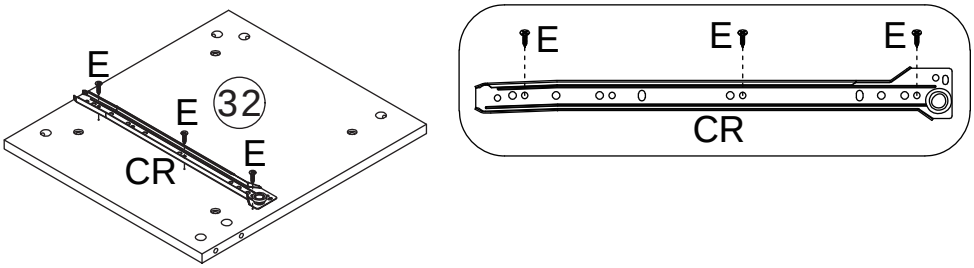

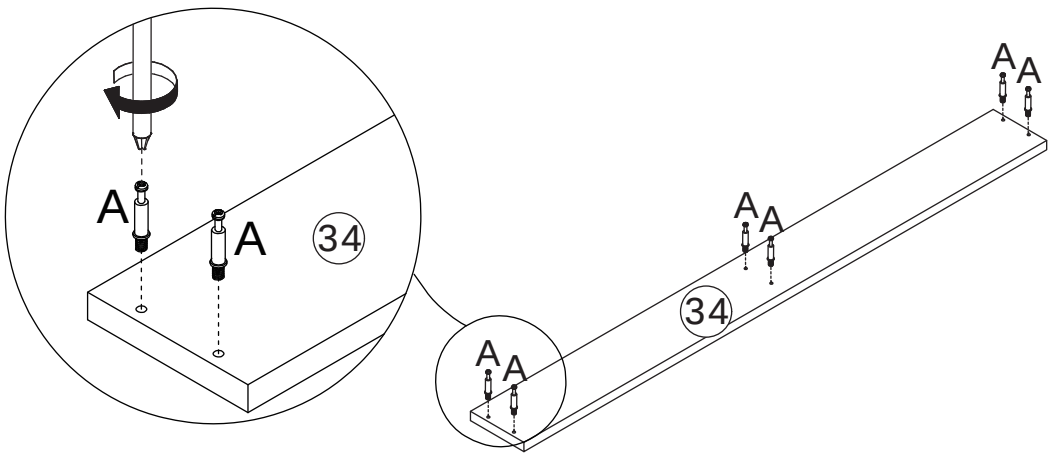



37

B x 6




∅15 x 9 mm





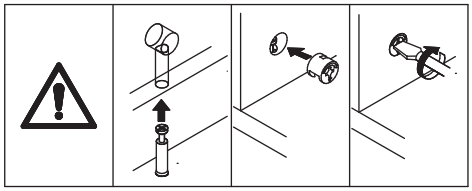


Connect panel 34 to panels 27, 28, and 32, then tighten by turning eccentric cam B clockwise.

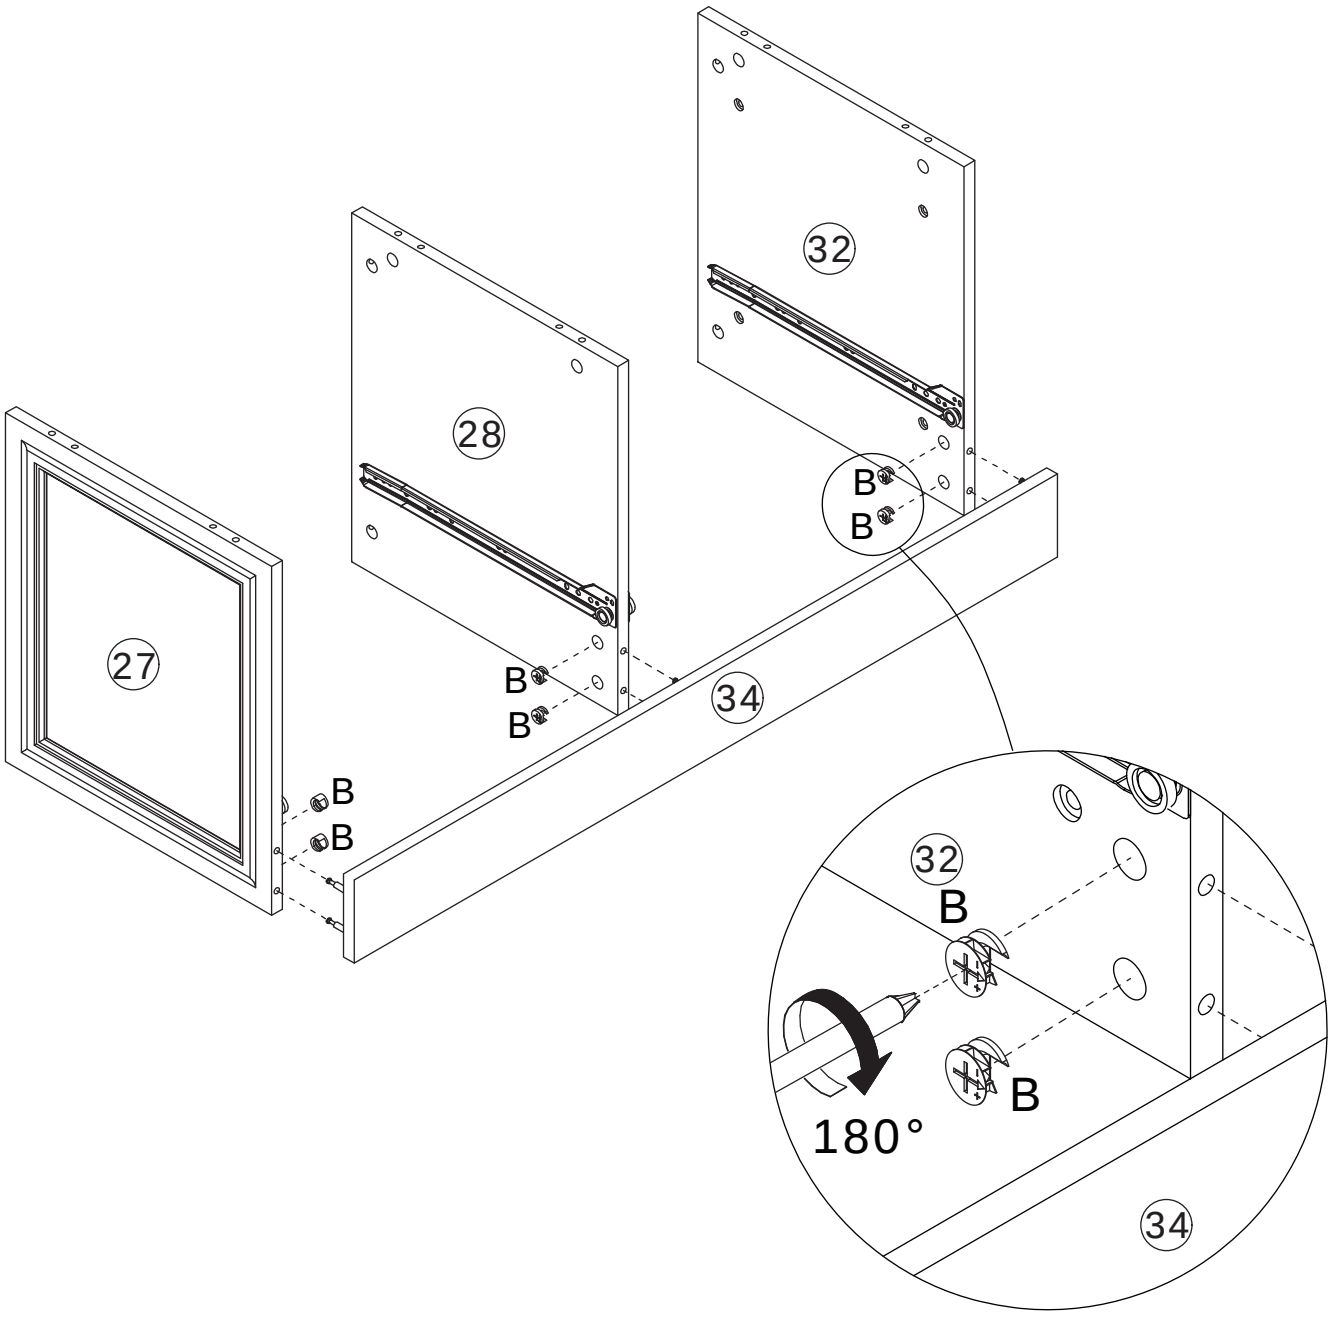


38

B x 6	C x 6	
		
∅15 x 9 mm	∅6 x 30 mm	

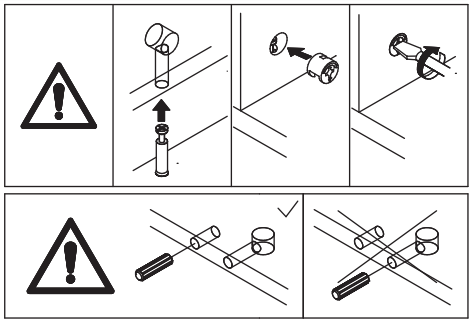


Connect the component to panel 14 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

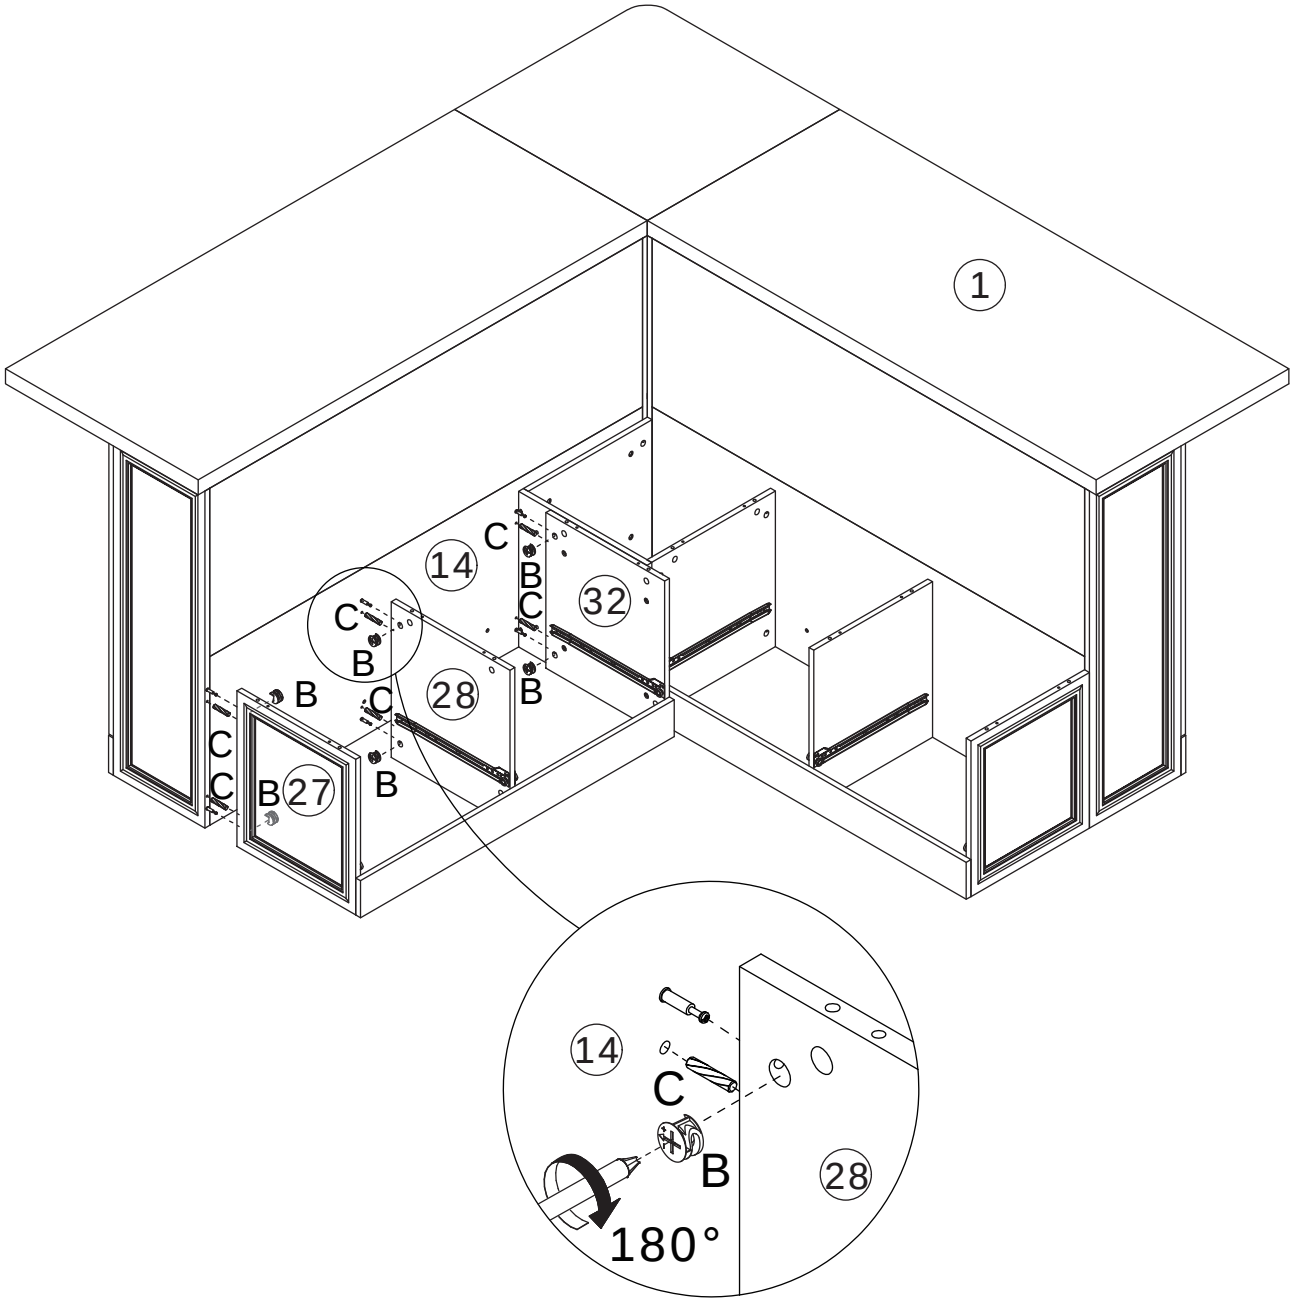


39


U x 4



∅6 x 25 mm




Secure panel 32 to panel 31 using screw U.

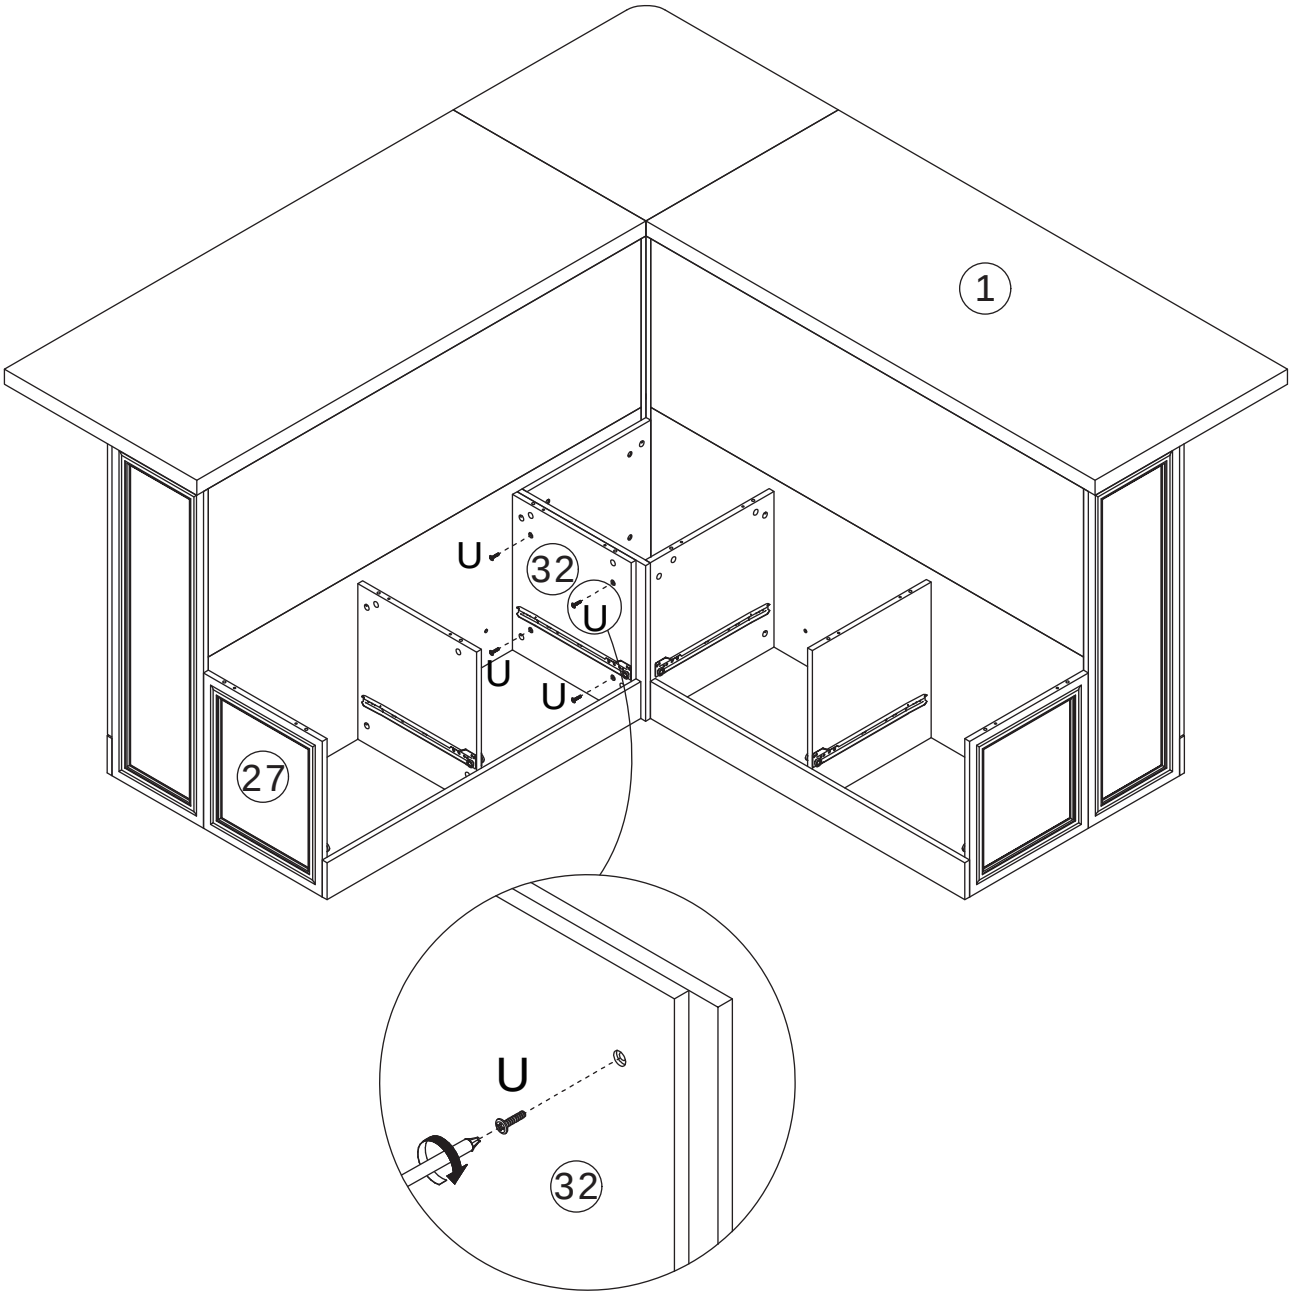



40

A x 12




∅6 x 35 mm





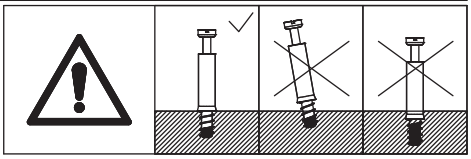


Screw eccentric rod A onto panels 24 and 25.

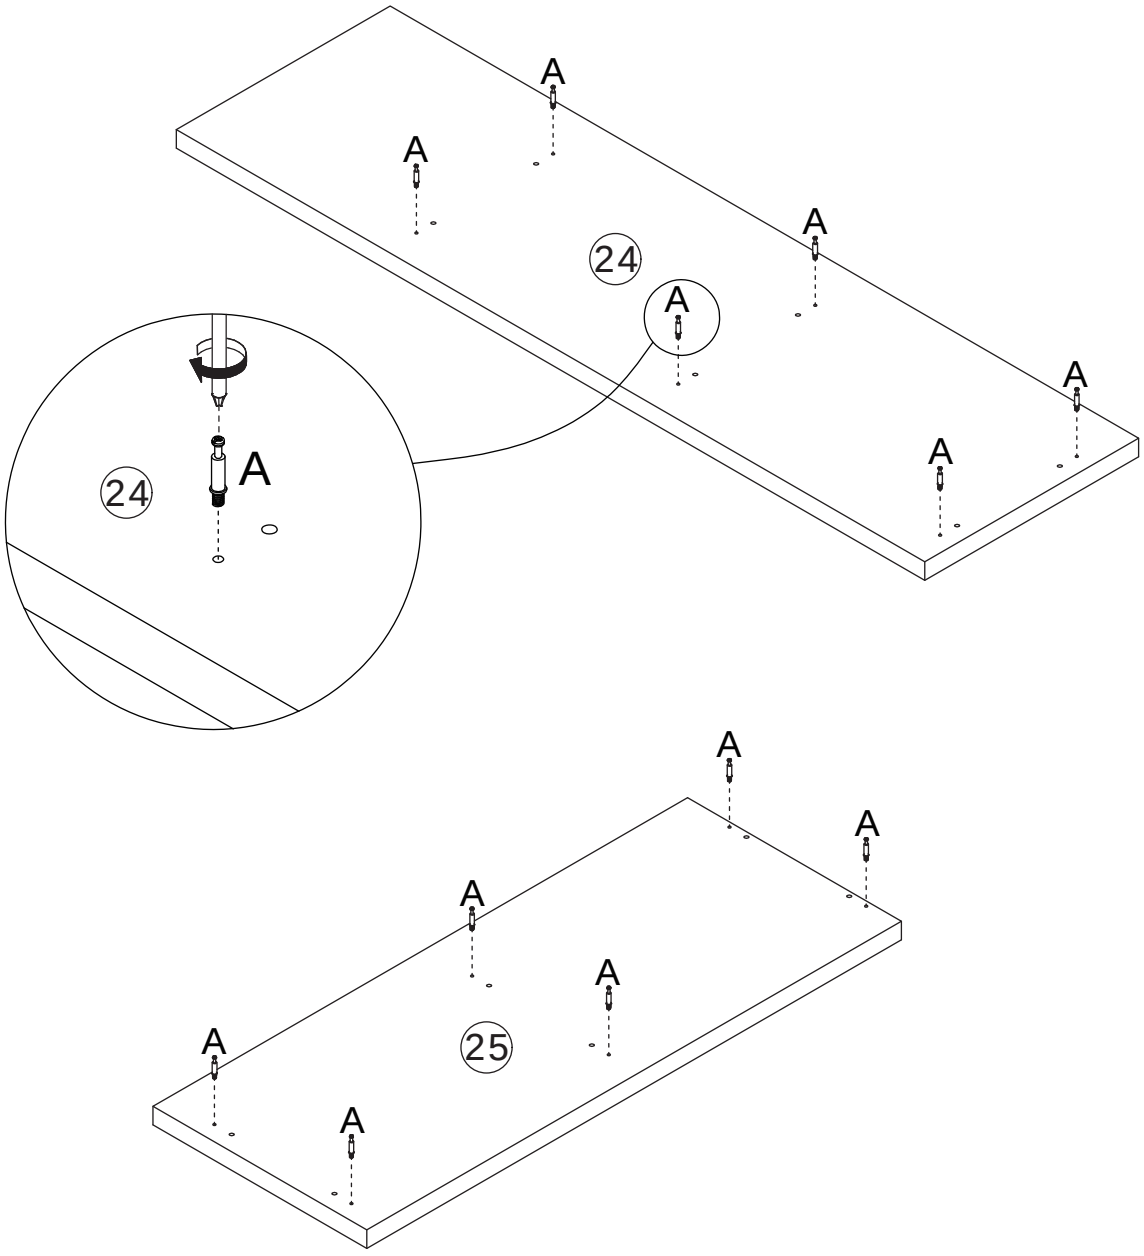


41



B x 6	C x 6	
		
∅15 x 9 mm	∅6 x 30 mm	

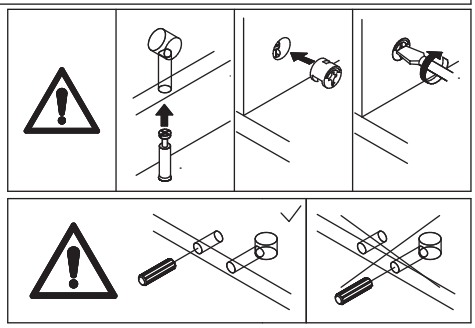


First connect panel 24 to panels 29, 28, and 26 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

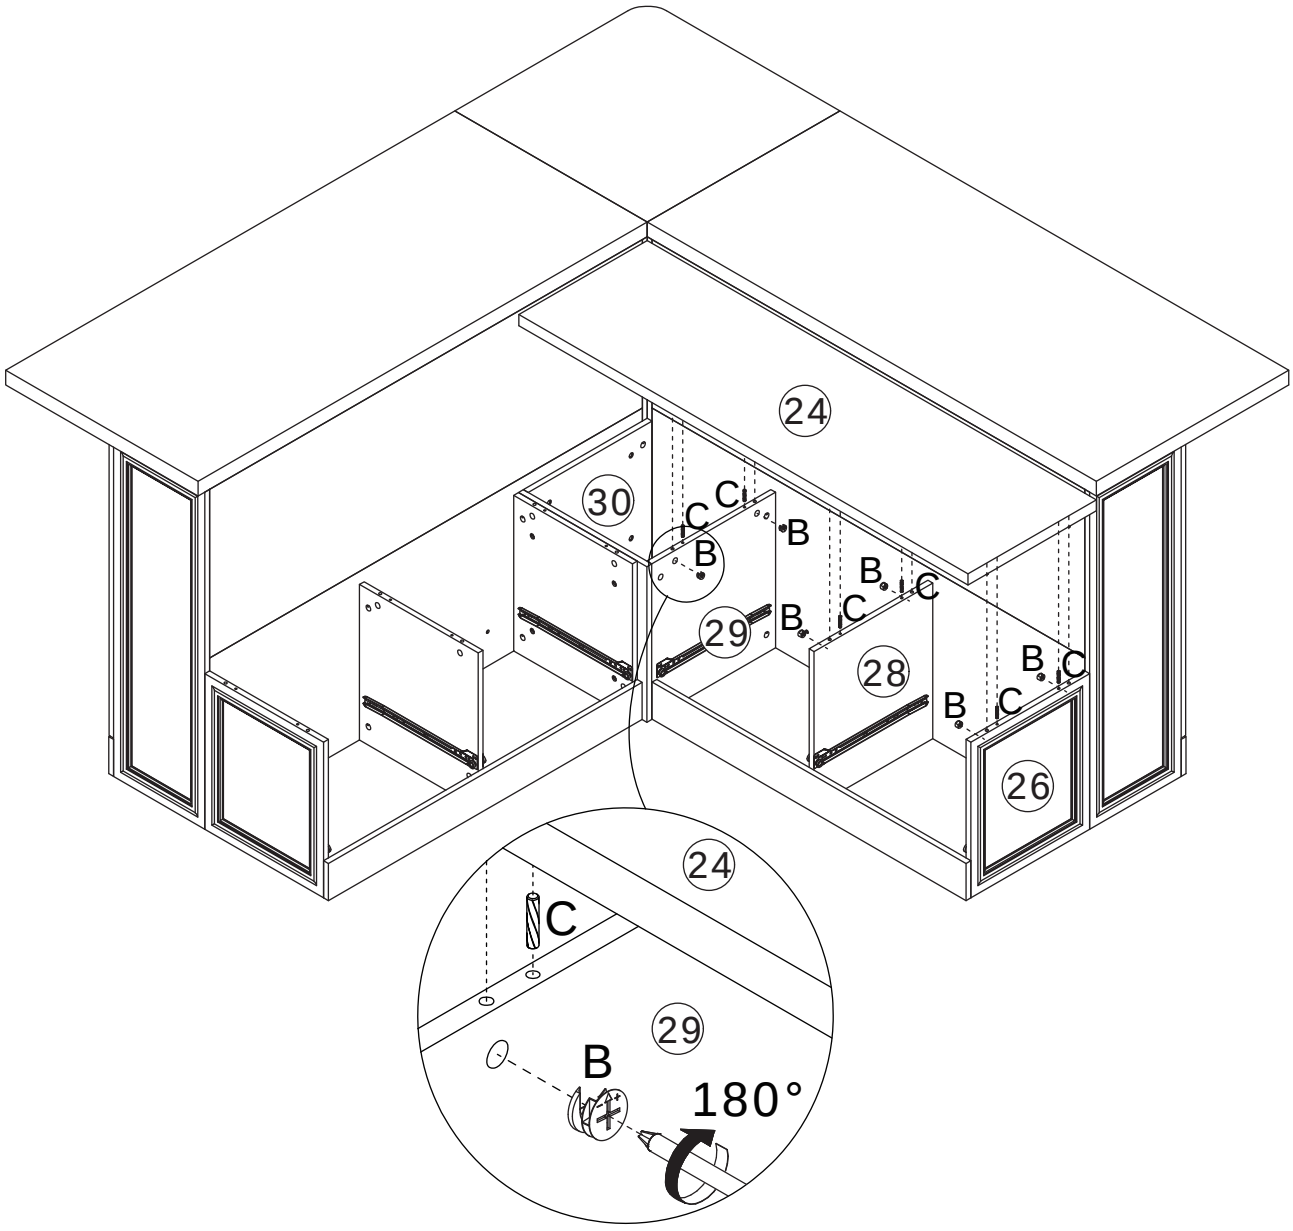


42

B x 6	C x 6	
		
∅15 x 9 mm	∅6 x 30 mm	

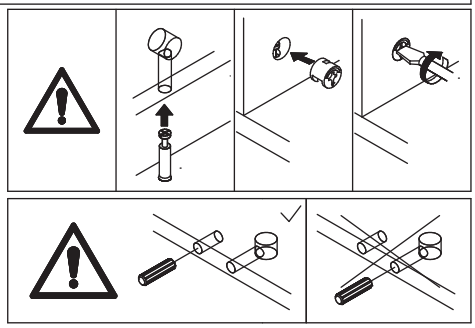


First connect panel 25 to panels 32, 28, and 27 using wooden dowel C, then tighten by turning eccentric cam B clockwise.

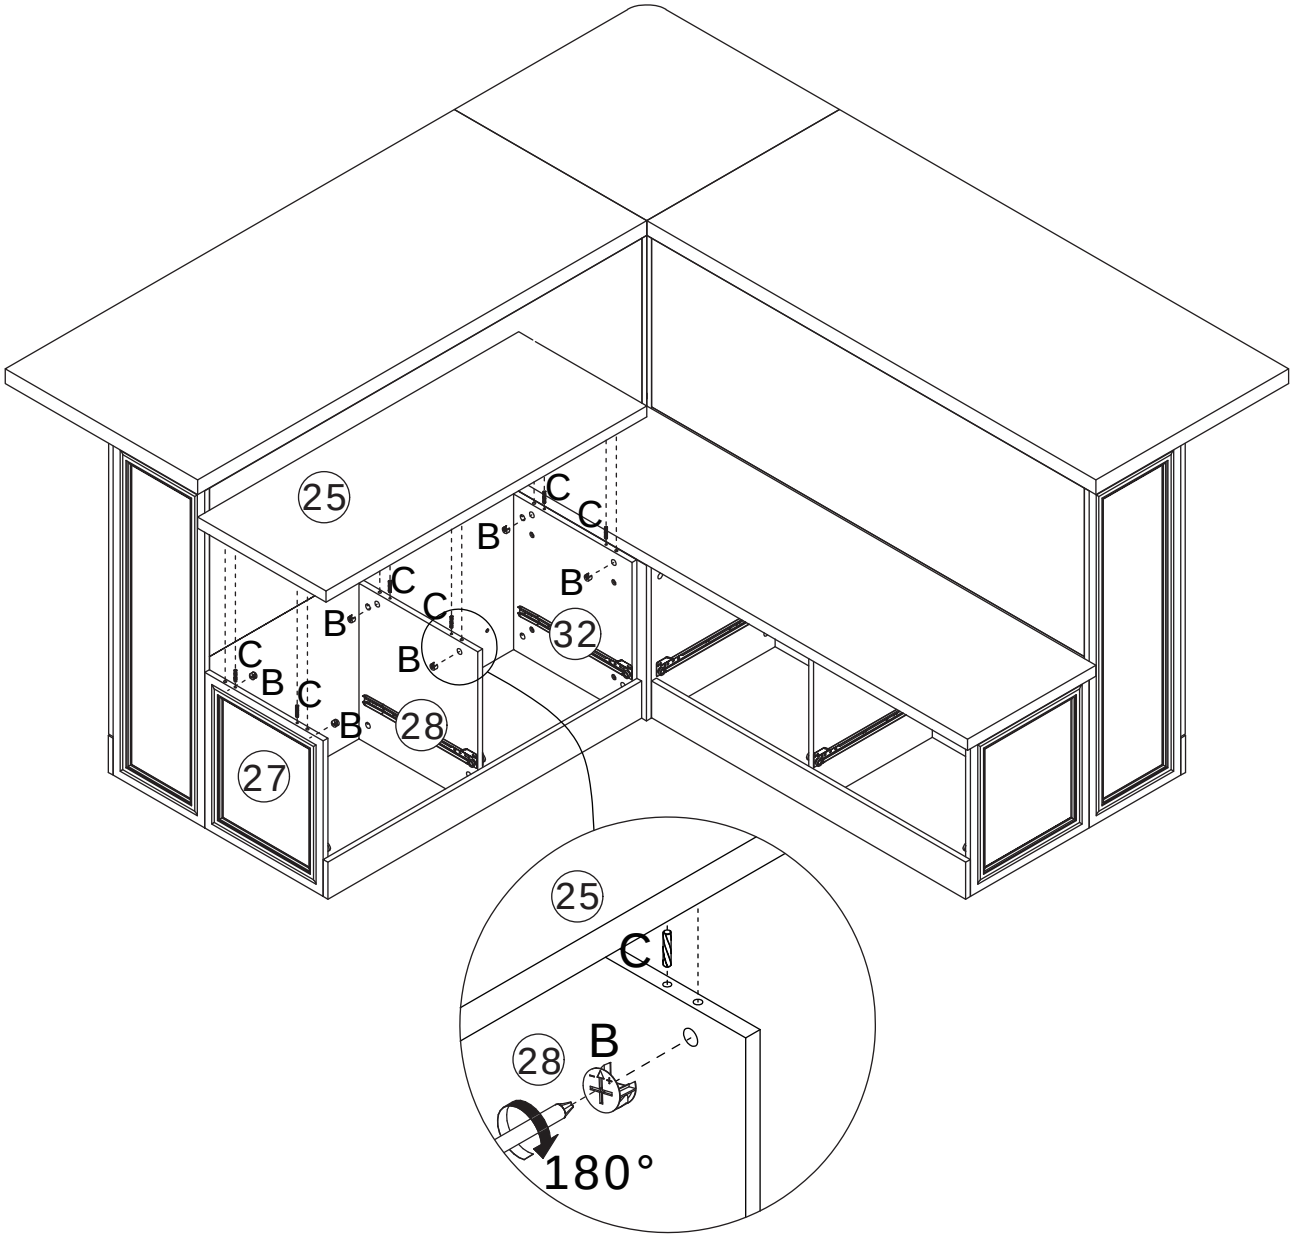


43

G x 16



∅5 x 25 mm


Insert shelf pin G into panels 4, 5, 6, 17 and 18, and place shelf panel 23 on them.

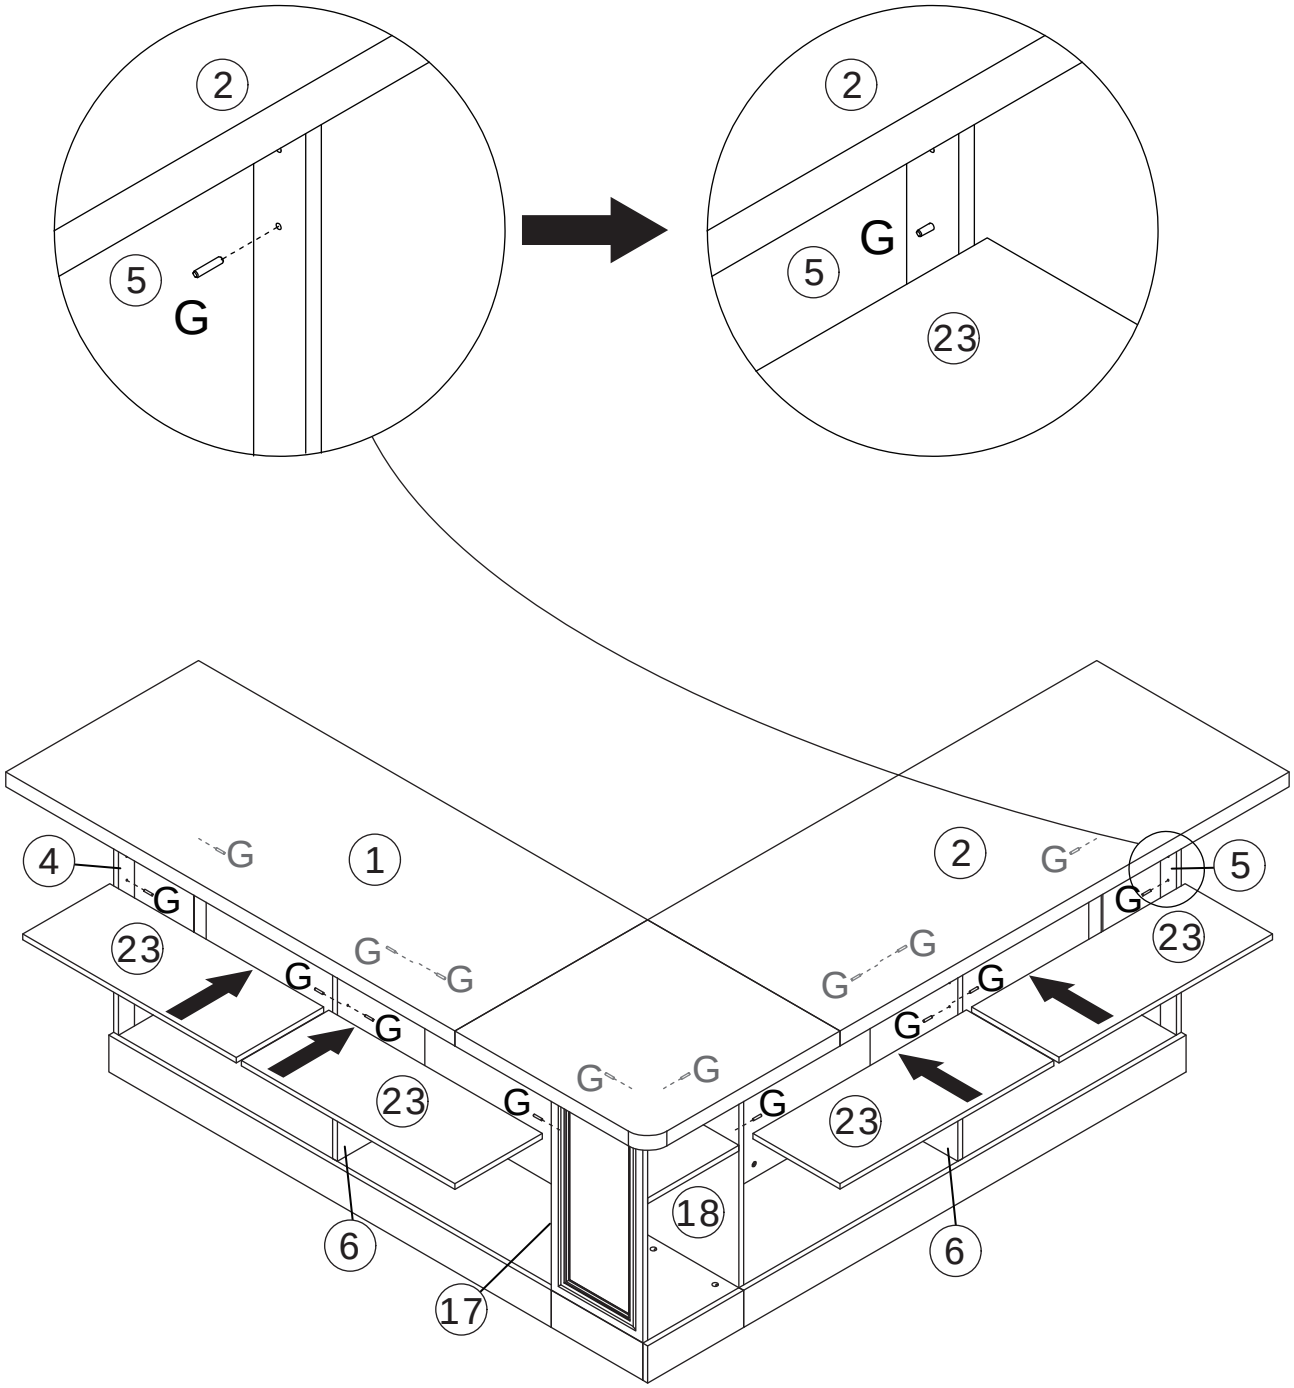
2
5
G
2
G
5
23
4
G
1
G
23
G
G
G


44

Pay attention to the difference between the middle parts of the two types of door hinges.

- The Straight Hinge (M) are used on the outermost door plates
- And the Crank Hinge (N) are used on the door panel in the middle of the cabinet.





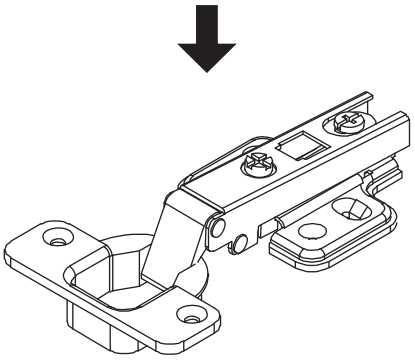



M

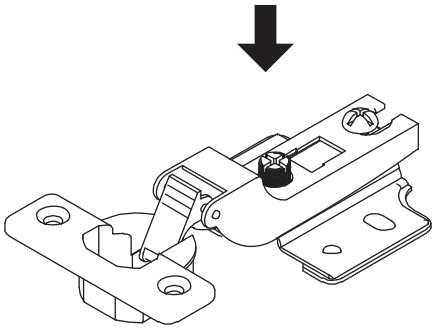



N

45


E x 7	J x 3	K x 2	M x 8	
 ∅3 x 12 mm				


O x 16
 ∅4 x 14 mm


	E	L
	 ∅3 x 12 mm	 ∅3 x 14 mm

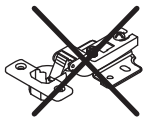	M	N
		




Secure hinge M to panels 8, 9, and 11 using screw O.
Secure iron plate J to panels 8 and 9 using screw E.
Secure hinge K to panel 11 using screw E.

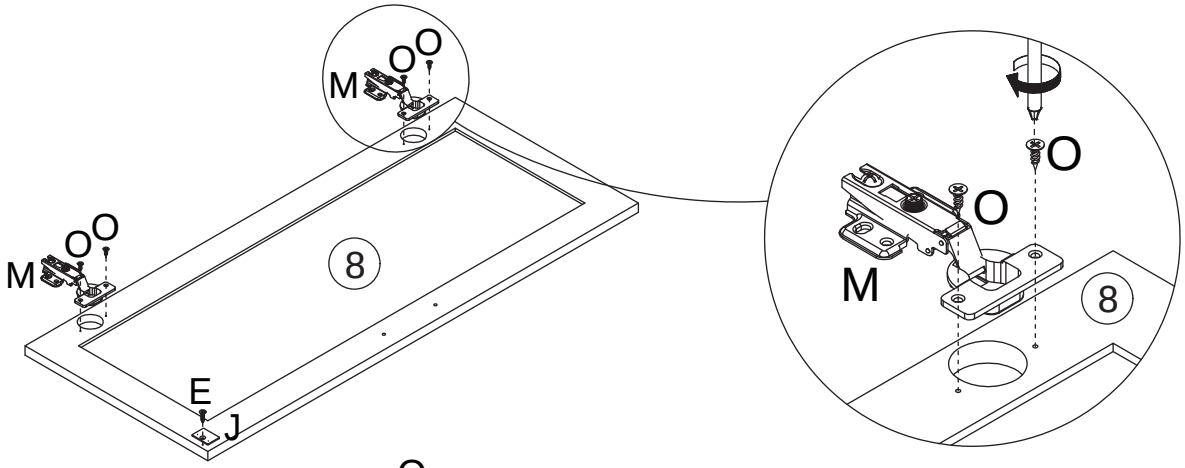

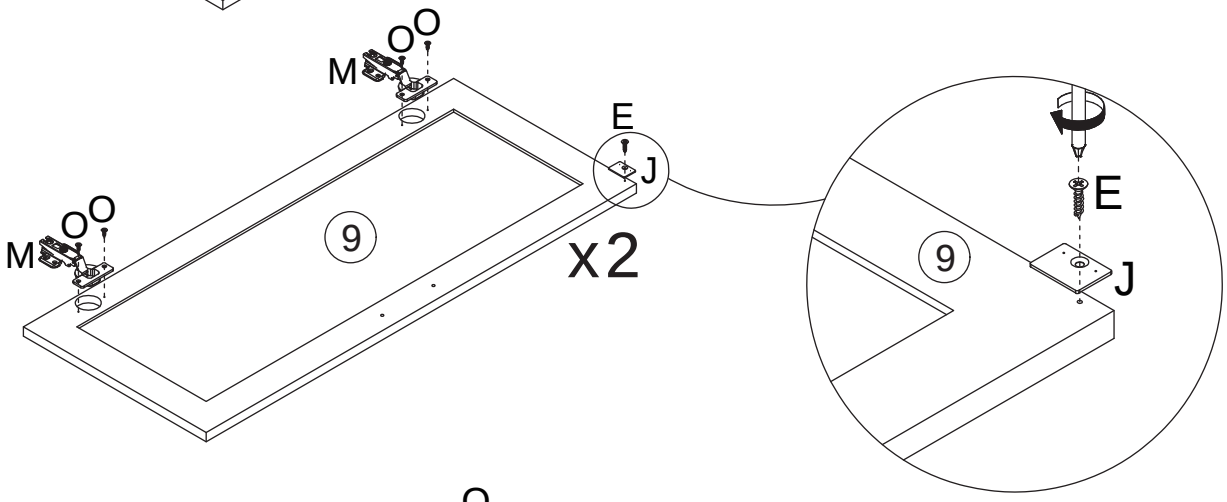


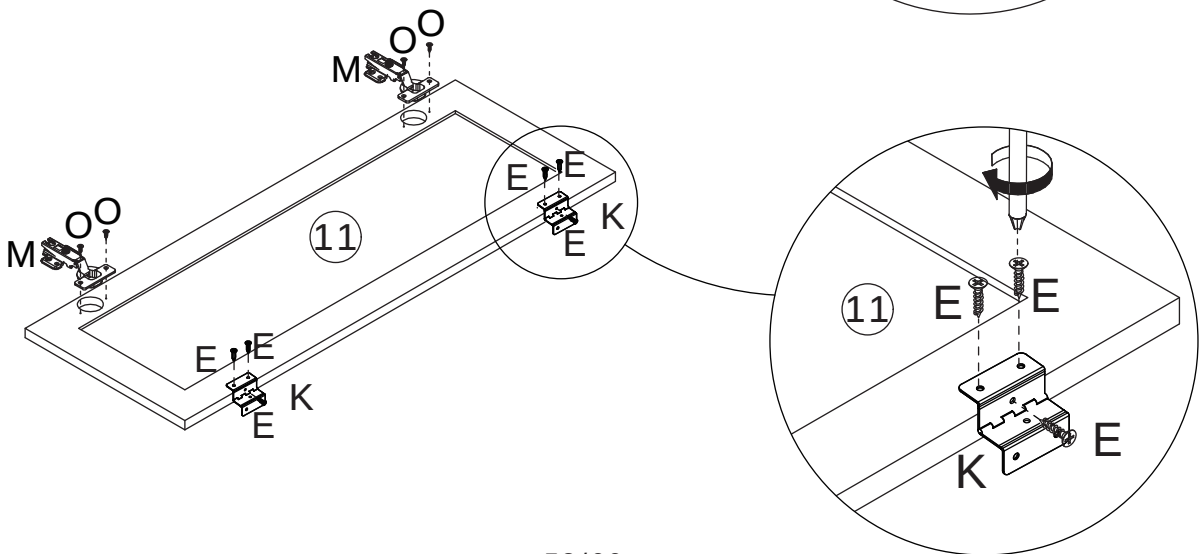






46


O x 32	P x 3	Q x 6	
			
∅4 x 14 mm		∅4 x 16 mm	

Secure door panels 8, 9, and 11 to the assembled unit via the hinges using screw O.
Secure handle P using screw Q.

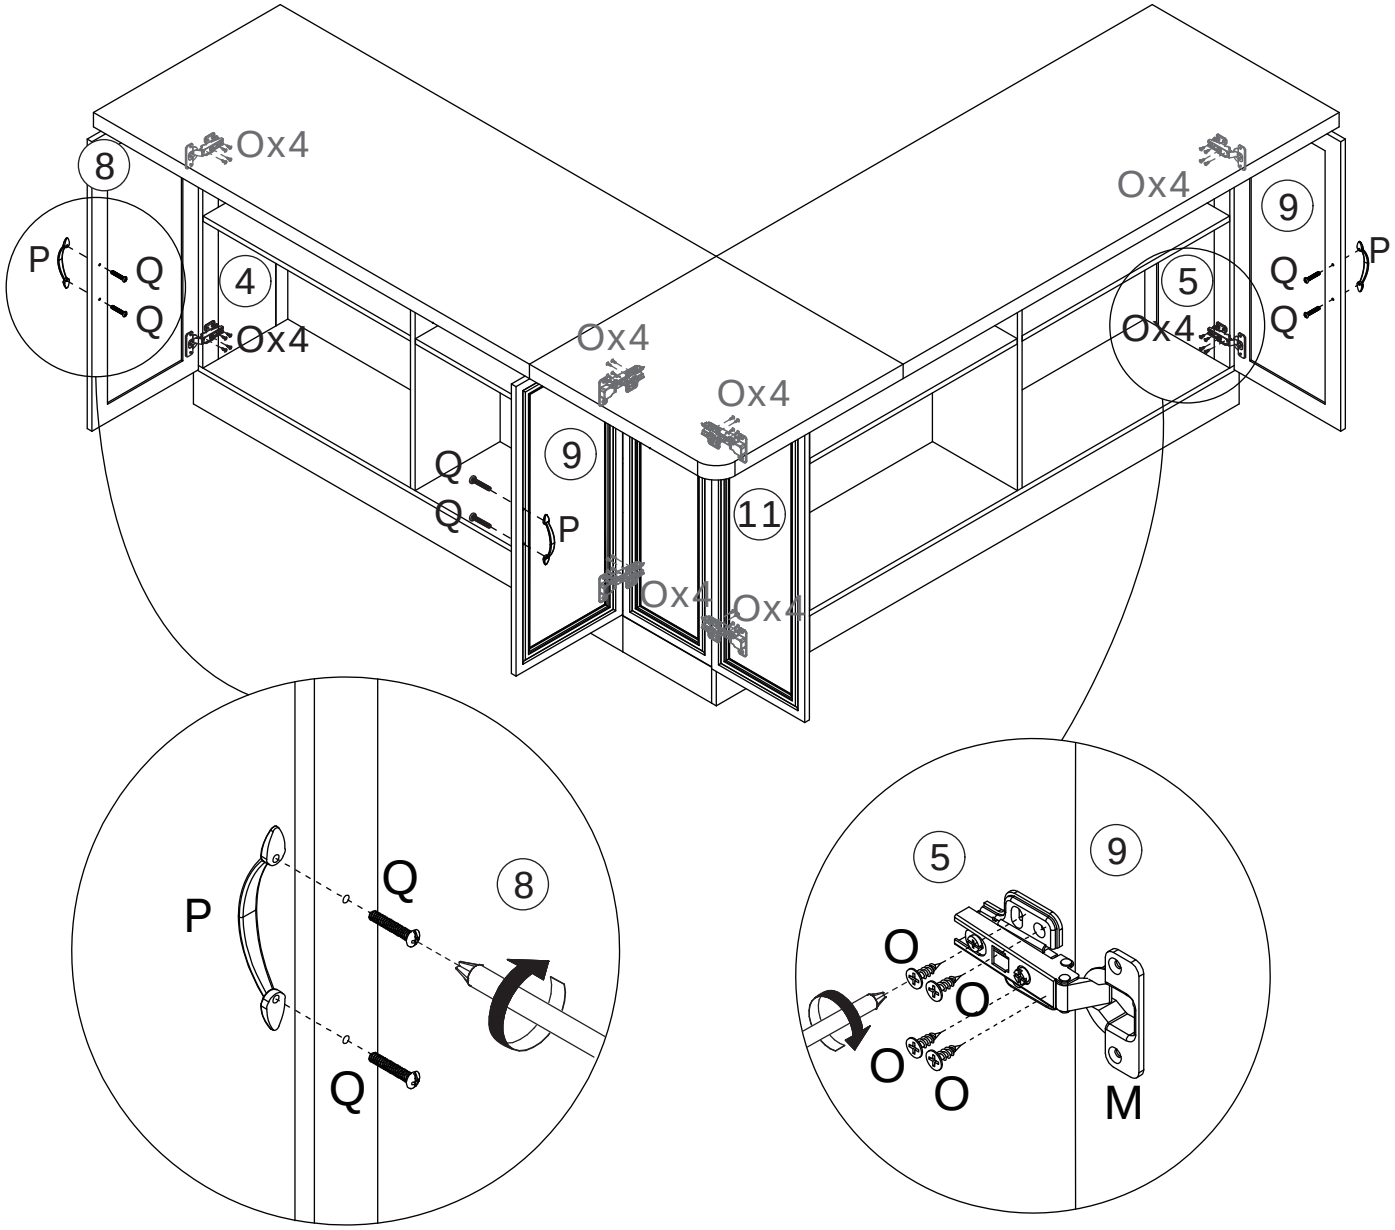



47


E x 5	J x 5	N x 8	O x 16	
				
∅3 x 12 mm			∅4 x 14 mm	

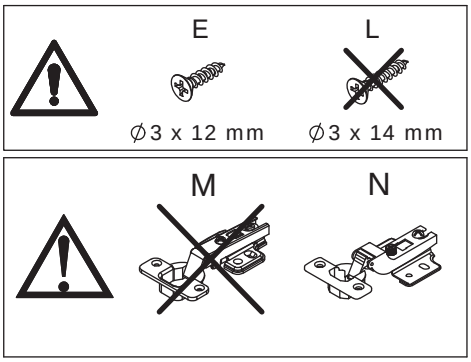



Secure hinge N to panels 44 and 45 using screw O.
Secure iron plate J to panels 10, 44, and 25 using screw E.

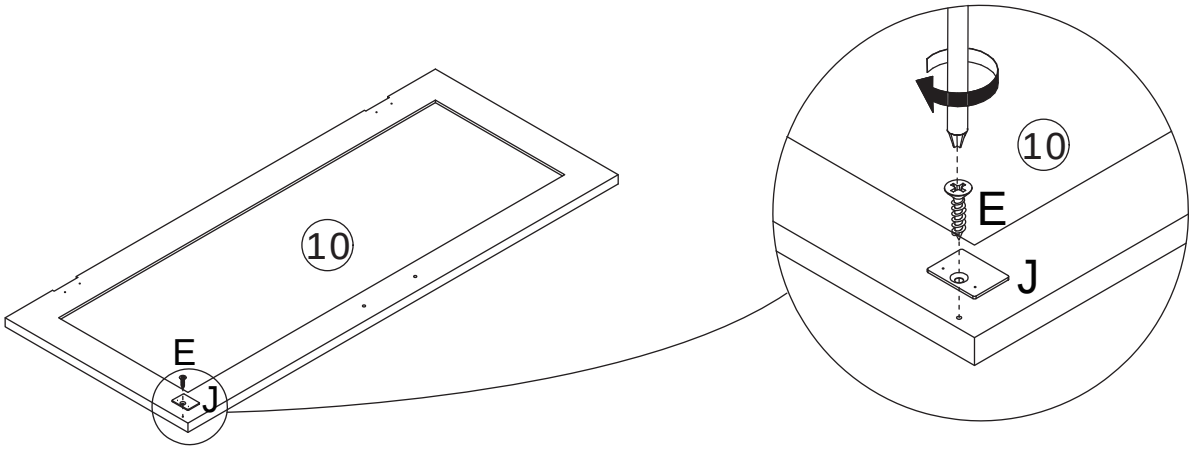

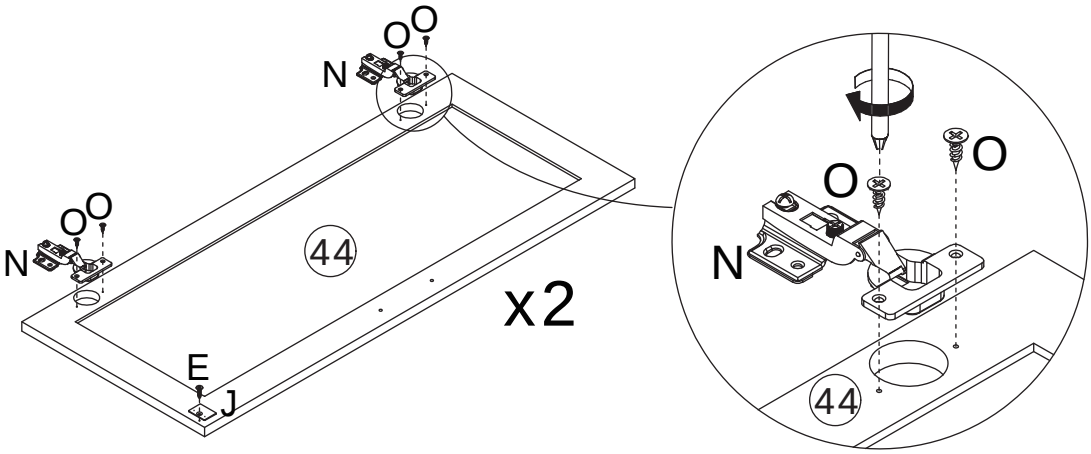


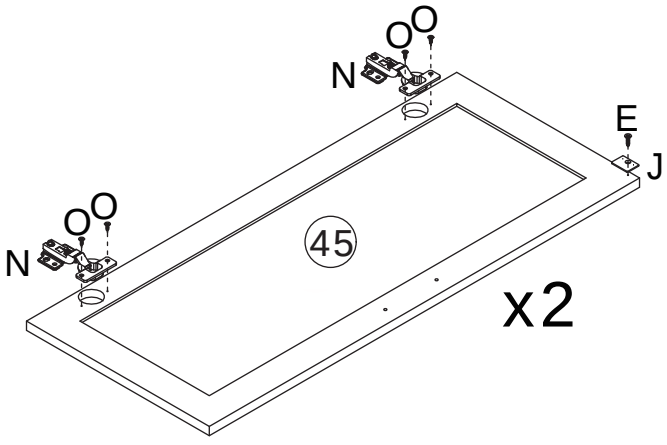




48

O x 32	P x 4	Q x 8	
 ∅4 x 14 mm		 ∅4 x 16 mm	


Secure door panels 44 and 45 to the assembled unit via the hinges using screw O.
Secure handle P using screw Q.

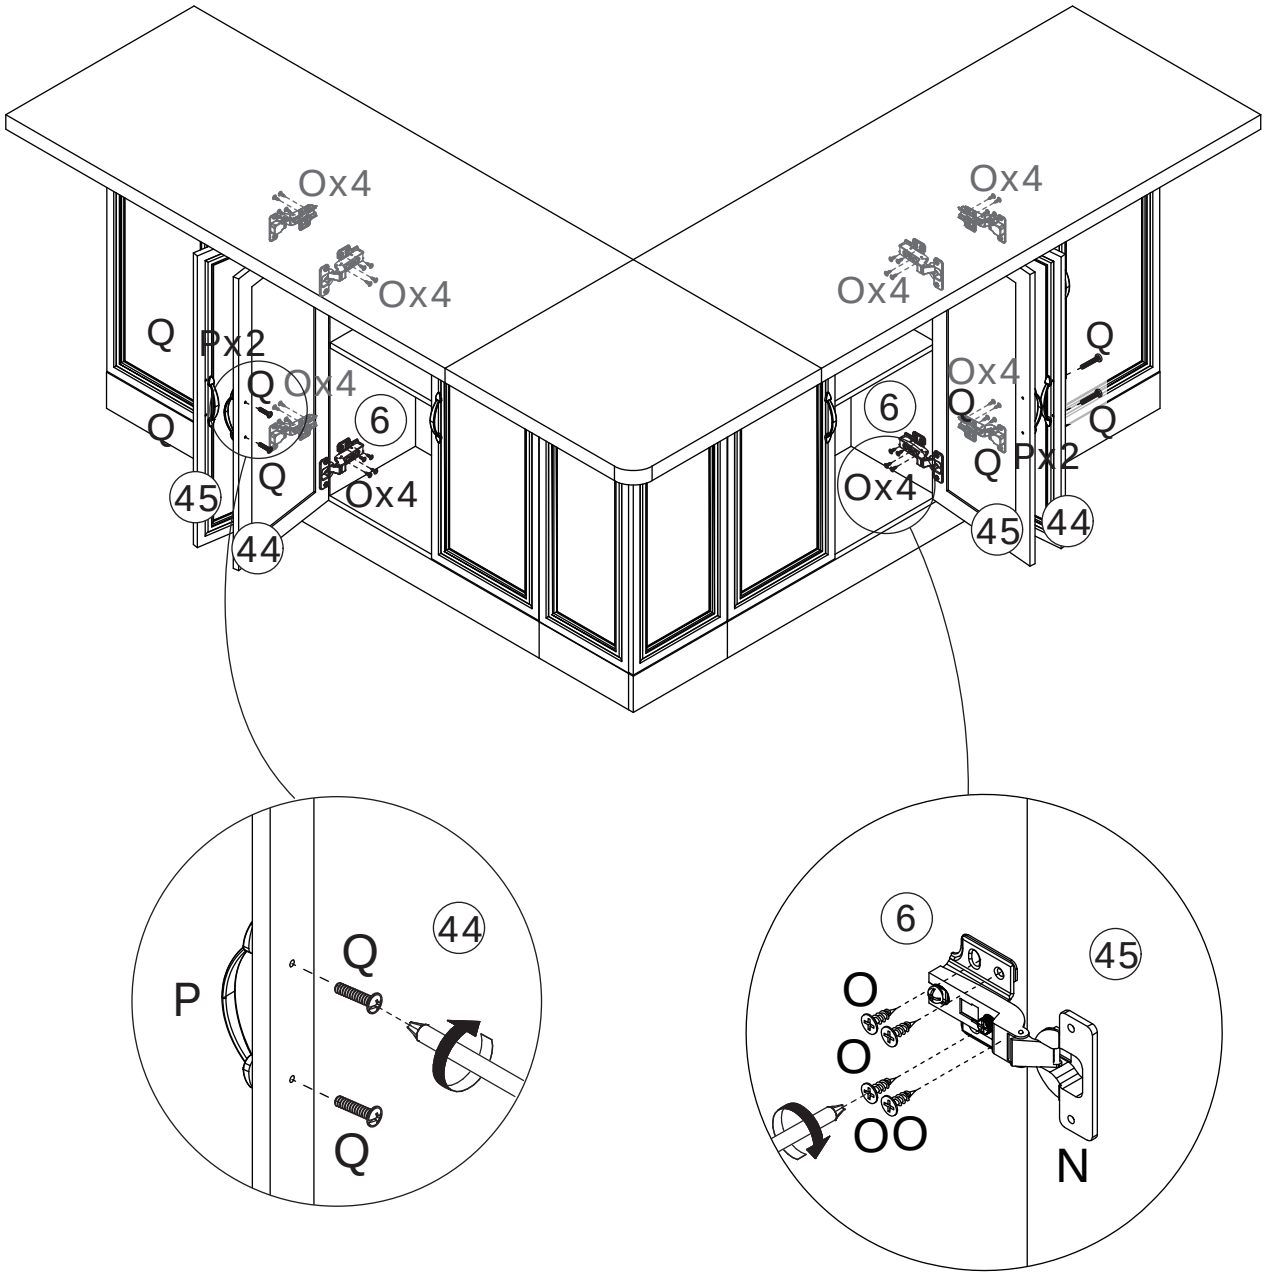

49


E x 6	P x 1	Q x 2	
 ∅3 x 12 mm		 ∅4 x 16 mm	

Secure door panel 10 to panel 11 via the hinges using screw E.
Secure handle P using screw Q.

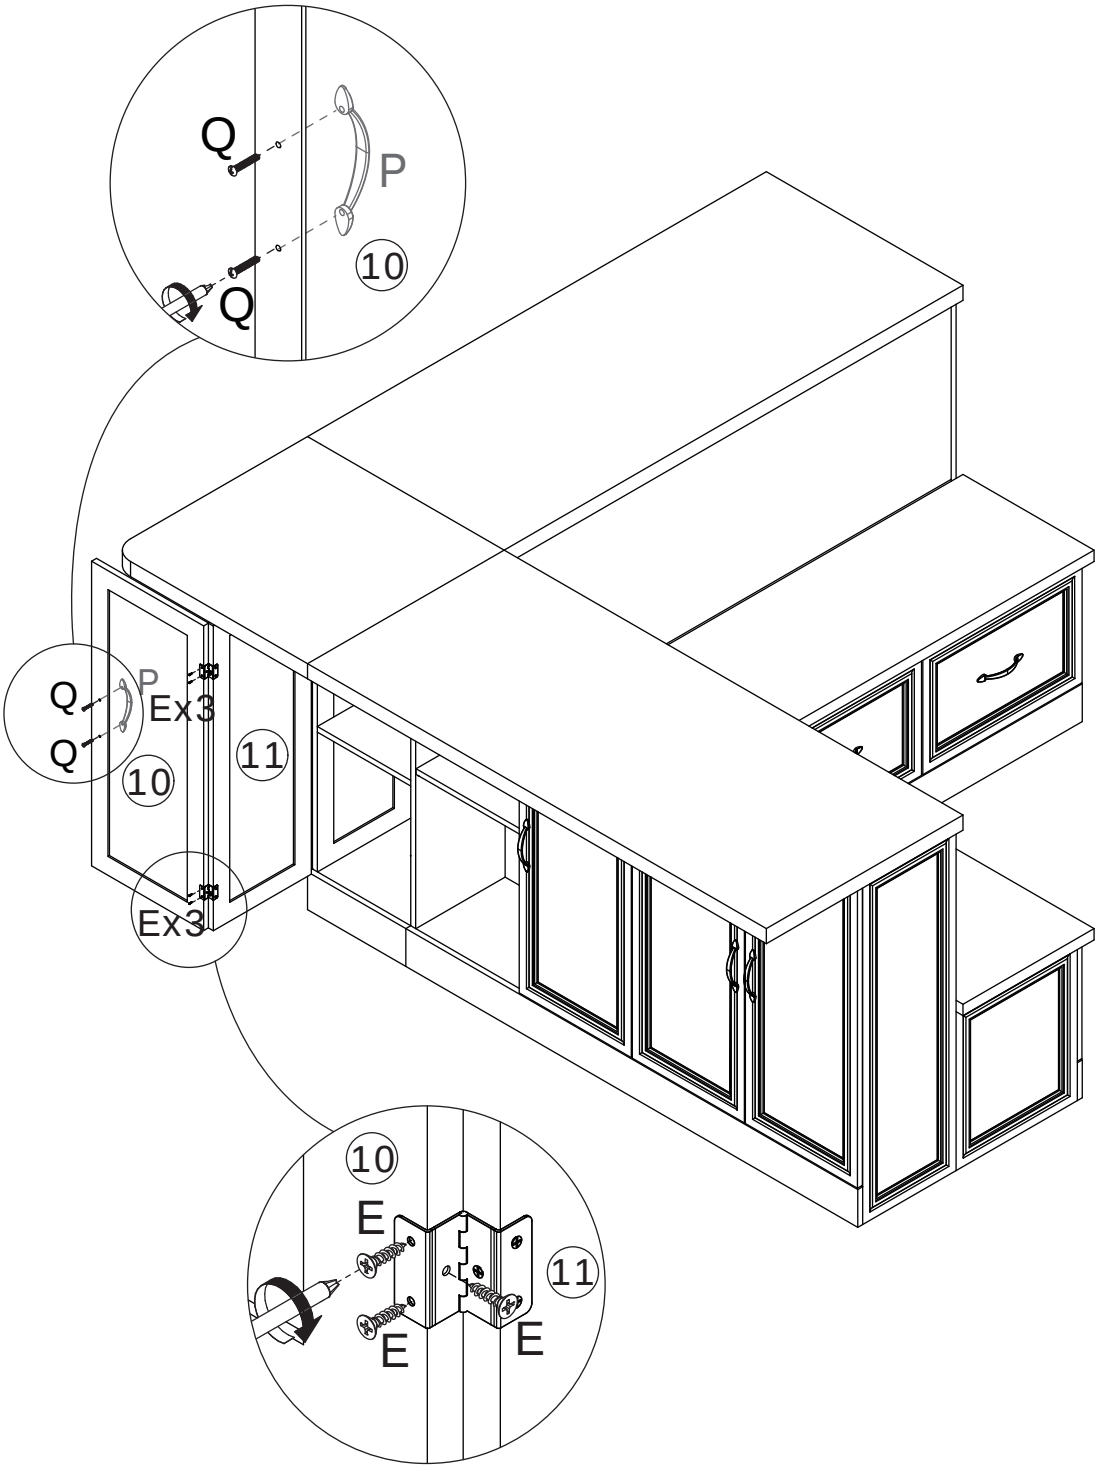


50


D x 8




∅4 x 35 mm






Secure panels 38, 39 and 40 using screw D.
Insert panel 42 along the pre-cut grooves.

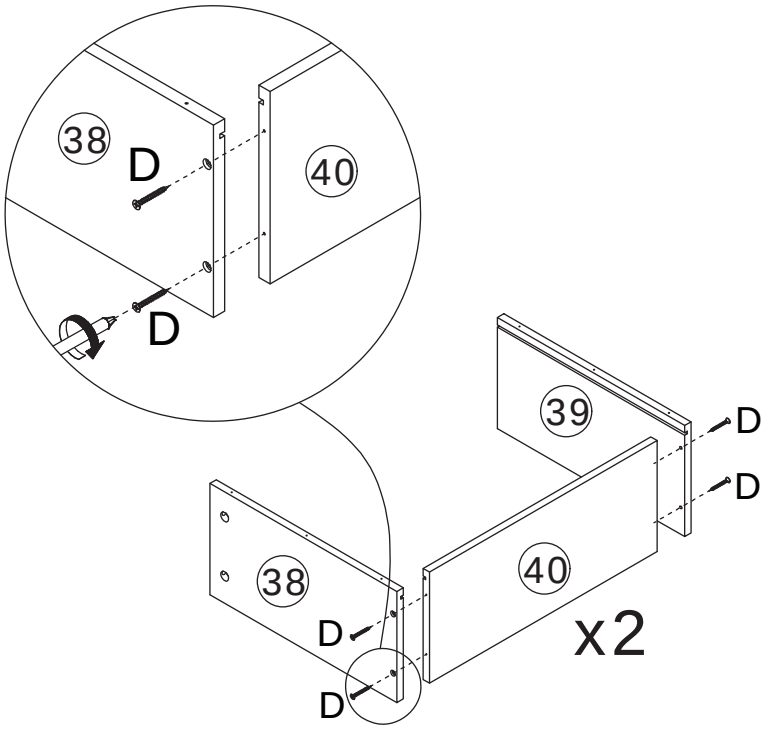


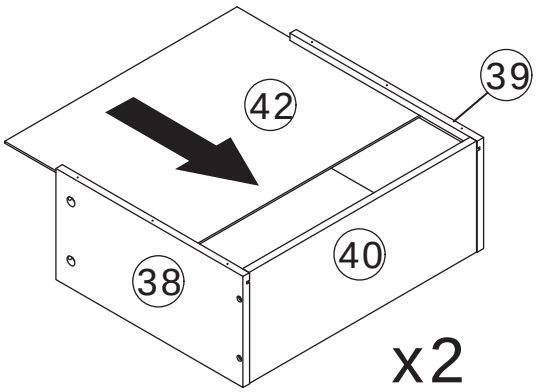

51


A x 8	B x 8	P x 2	R x 4	
				
∅6 x 35 mm	∅15 x 9 mm		∅4 x 8 mm	

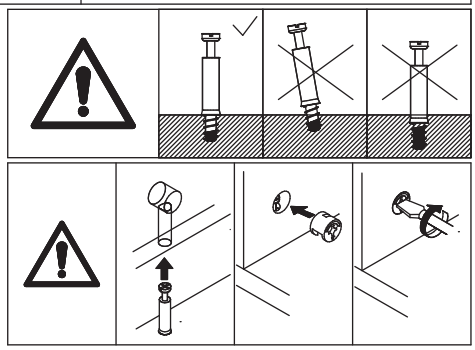

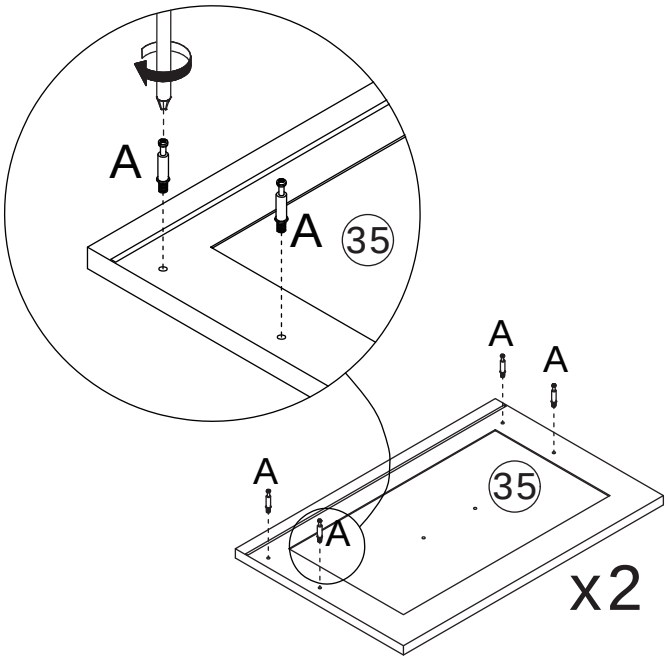


Screw eccentric rod A onto panel 35.

Connect panel 35 to panels 39 and 38, then tighten by turning eccentric cam B clockwise.

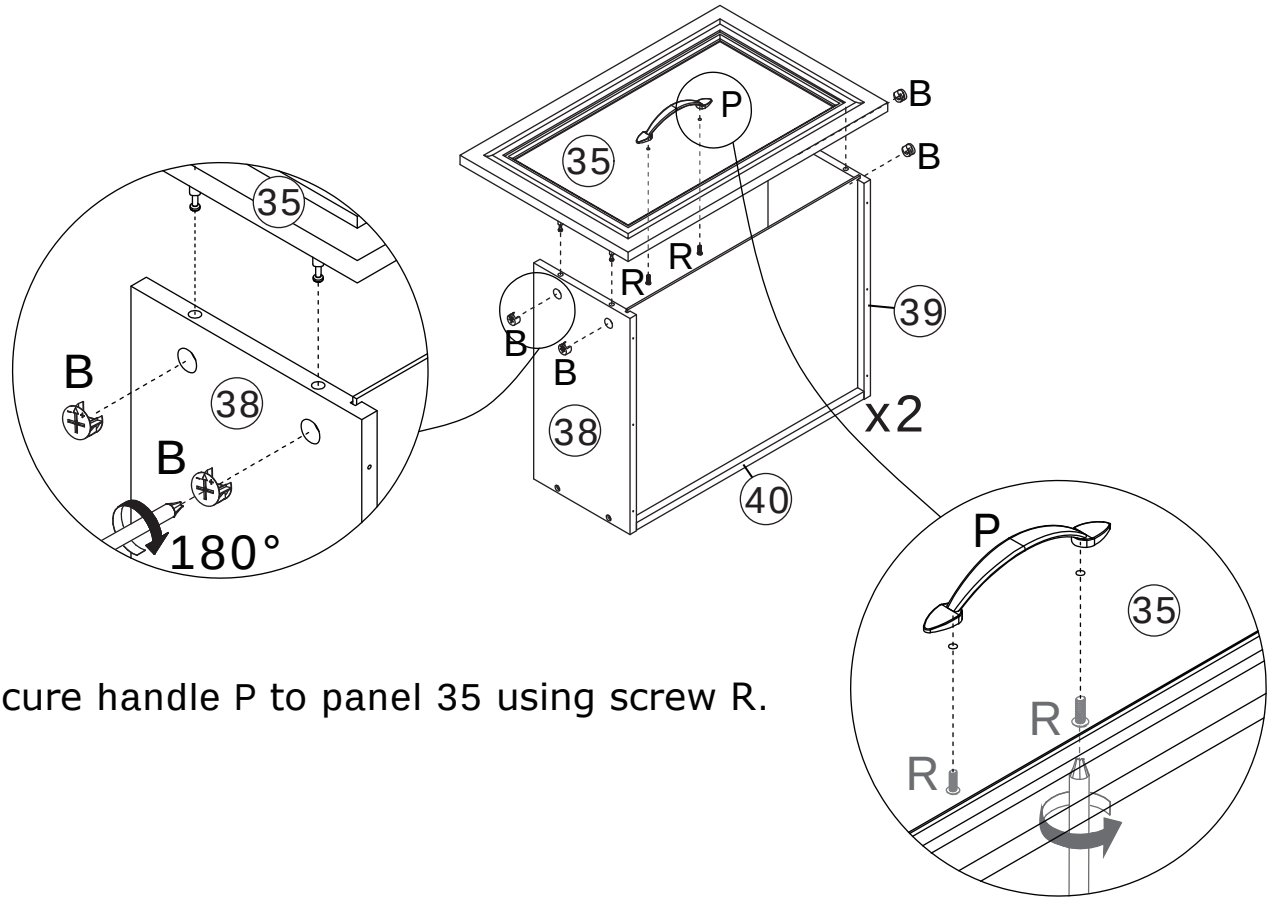



Secure handle P to panel 35 using screw R.

52

E x 12	DL x 2	DR x 2	
			
∅3 x 12 mm	350 mm	350 mm	


Secure slide rail (DL) and (DR) to panels 38 and 39 using screw E.

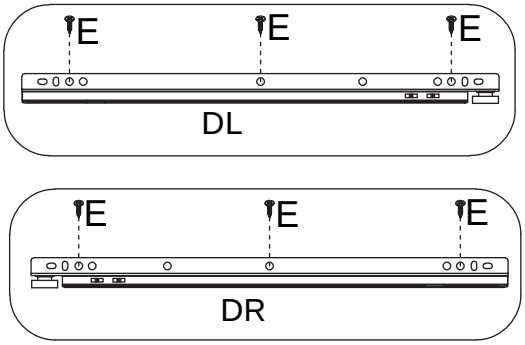

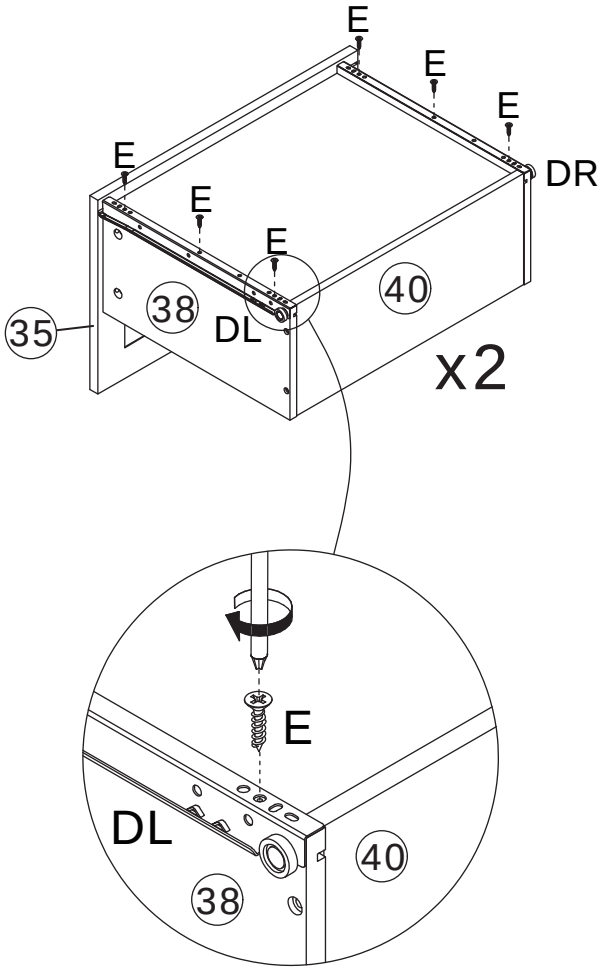


53

Align the slide rails and slide the drawer in.

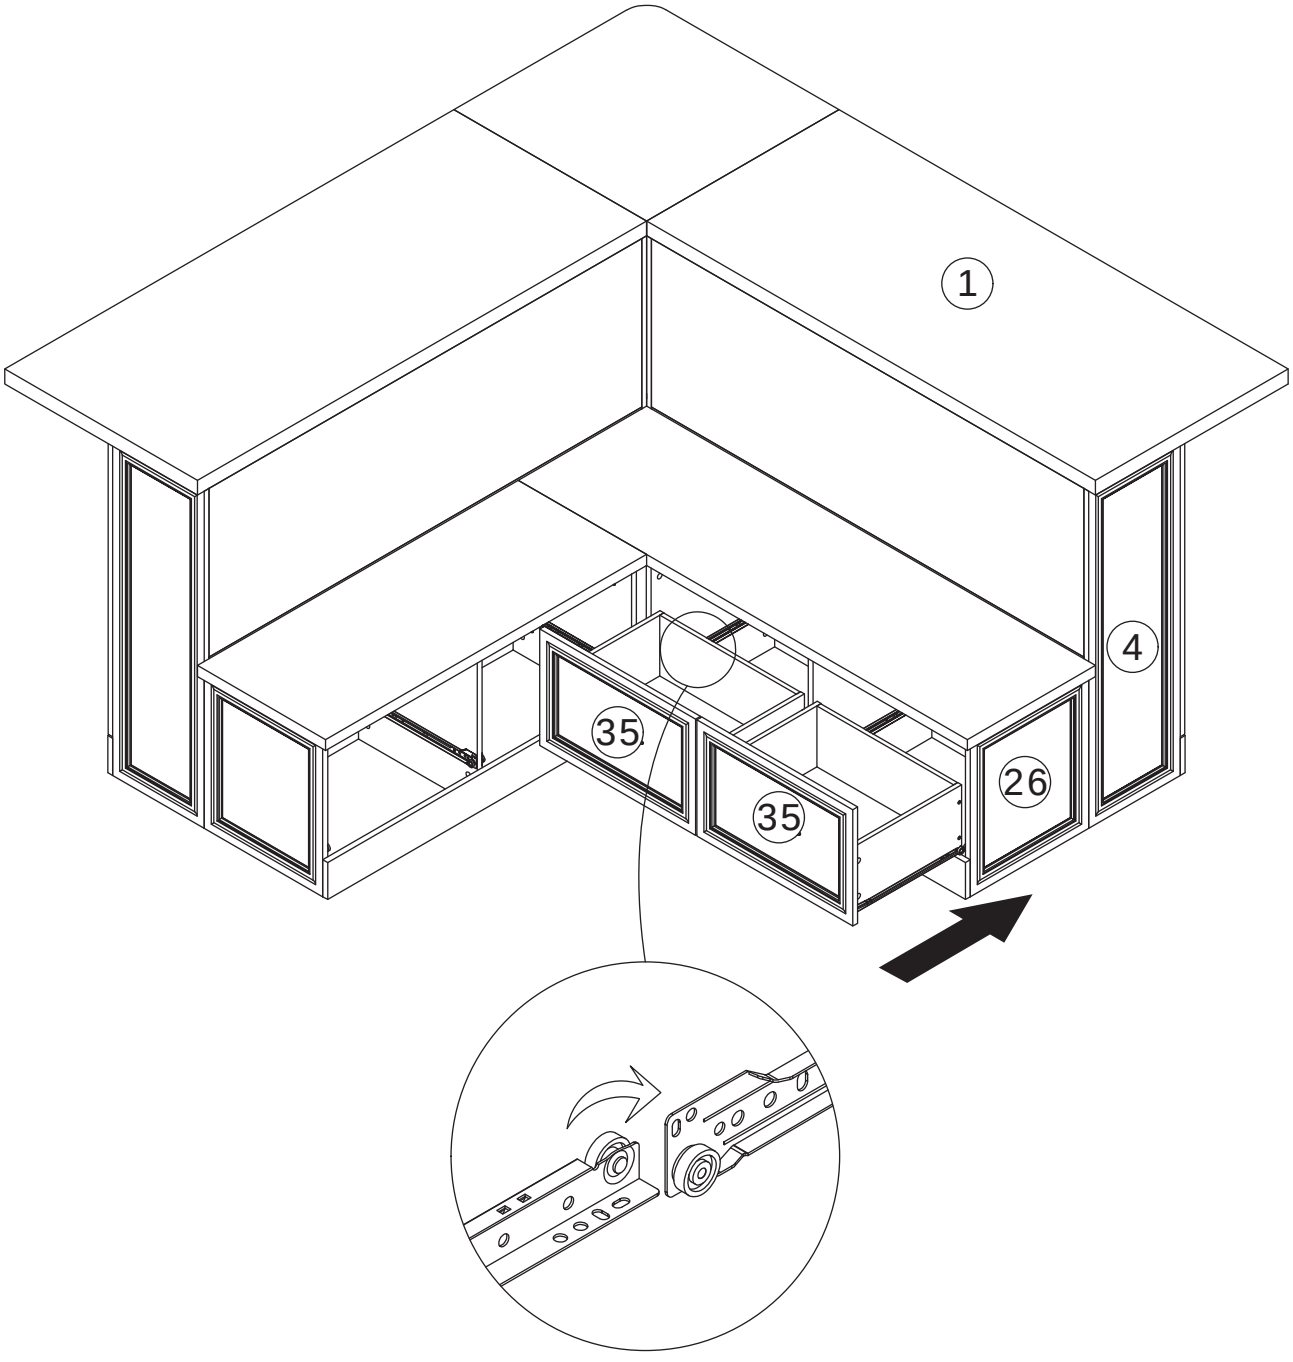


54


D x 8




∅4 x 35 mm





Secure panels 38, 39 and 41 using screw D.
Insert panel 43 along the pre-cut grooves.

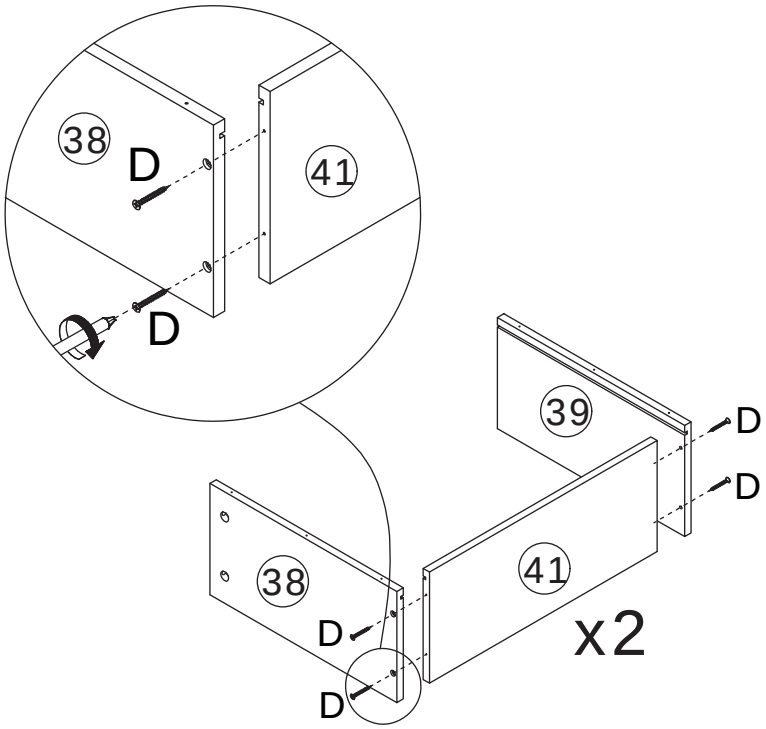


Slide panel 43 into place along the pre-cut groove.

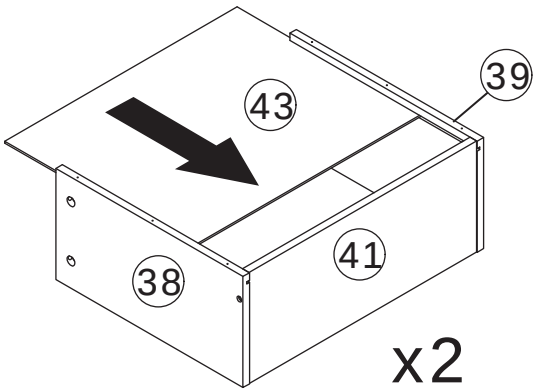


55


A x 8	B x 8	P x 2	R x 4	
				
∅6 x 35 mm	∅15 x 9 mm		∅4 x 8 mm	

Screw eccentric rod A onto panels 36 and 37.
Connect panels 36 and 37 to panels 38 and 39, then tighten by turning eccentric cam B clockwise.
Secure handle P to panels 36 and 37 using screw R.

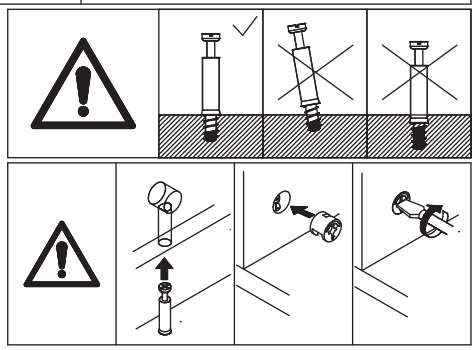


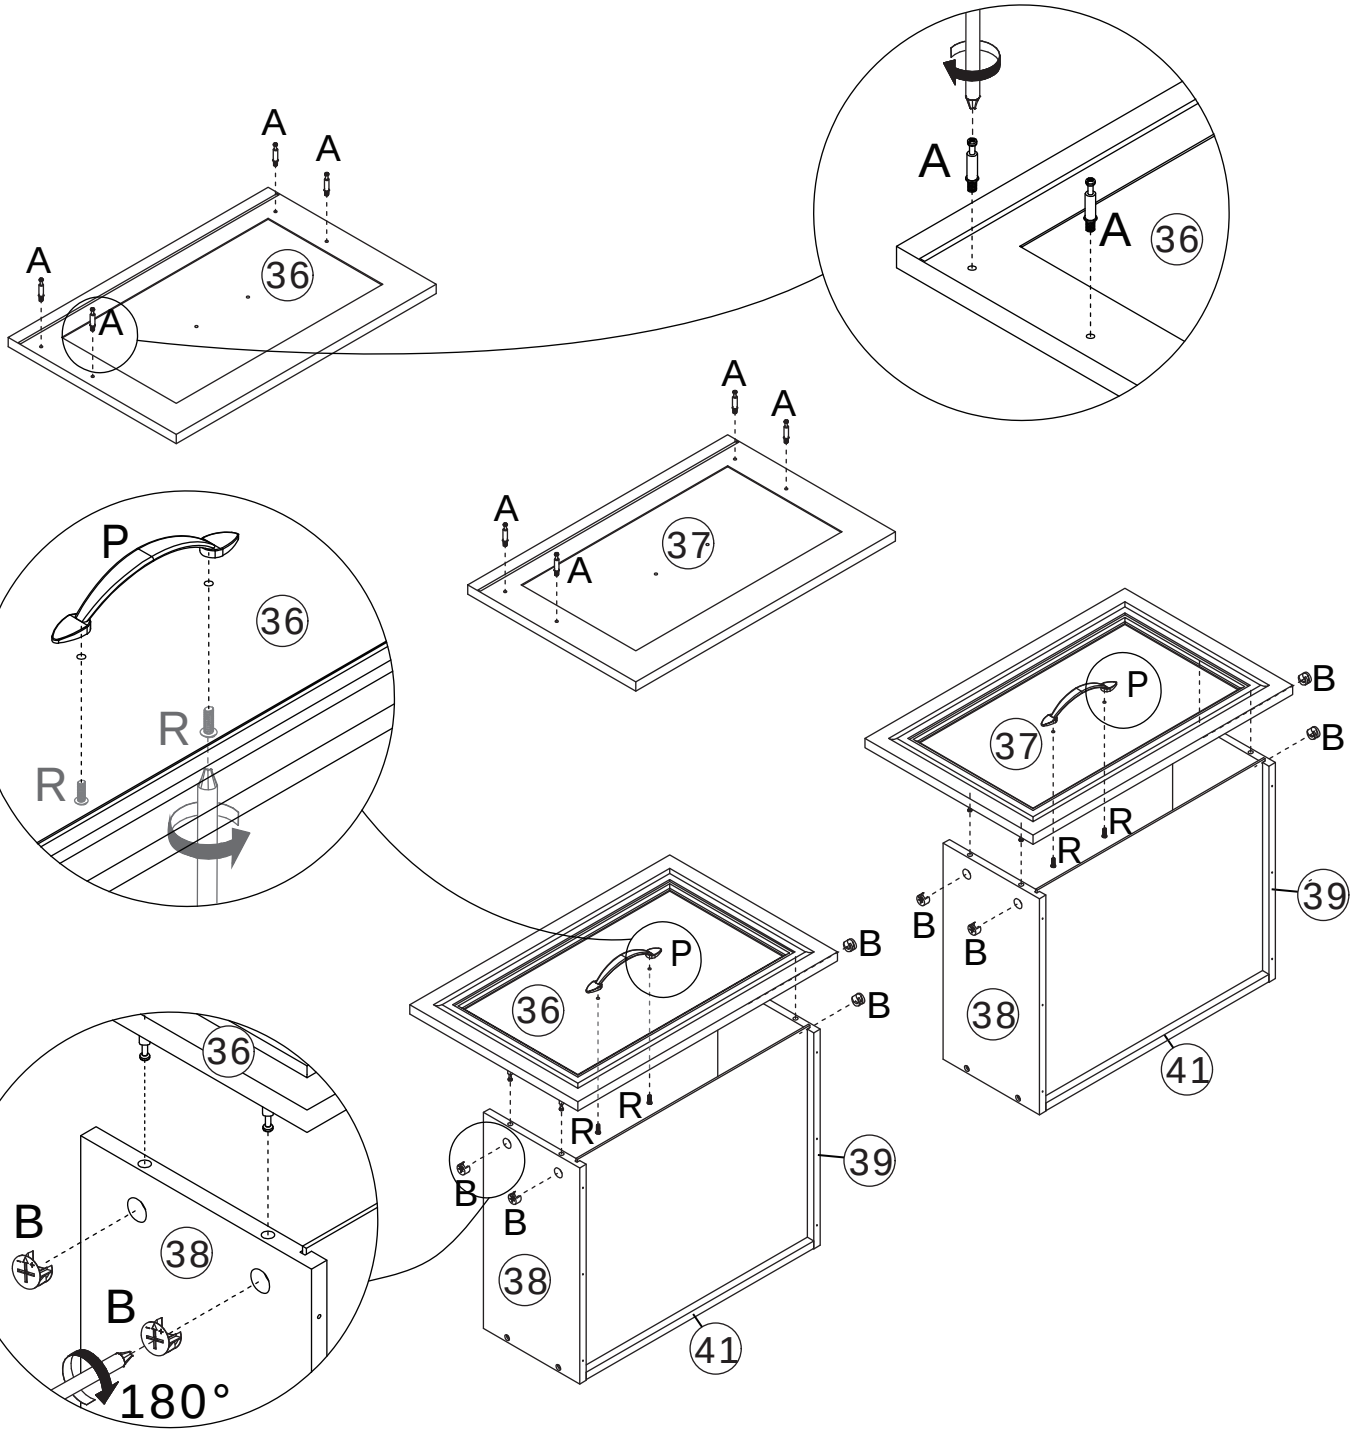


56

E x 12	DL x 2	DR x 2	
			
∅3 x 12 mm	350 mm	350 mm	


Secure slide rail (DL) and (DR) to panels 38 and 39 using screw E.

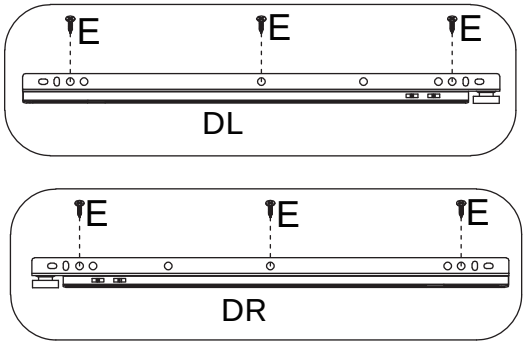

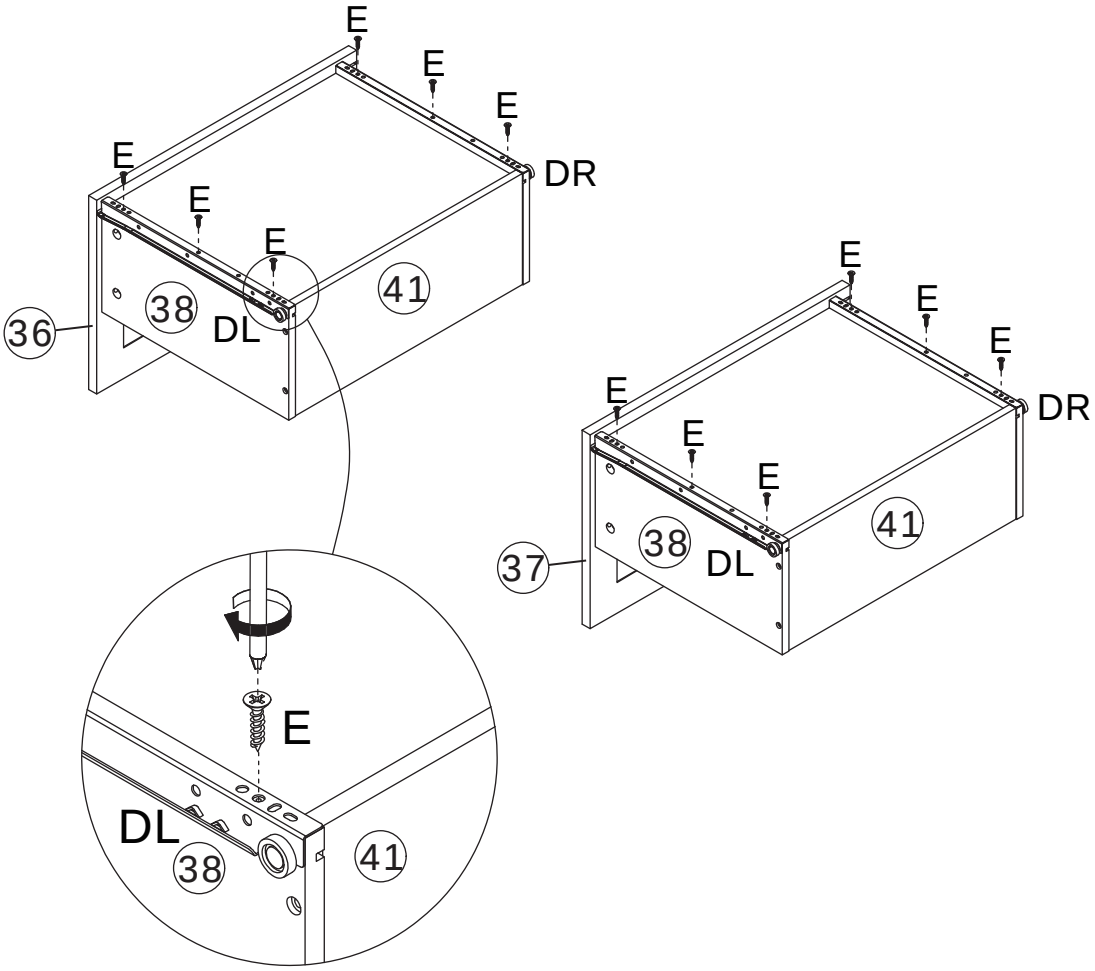


57

Align the slide rails and slide the drawer in.

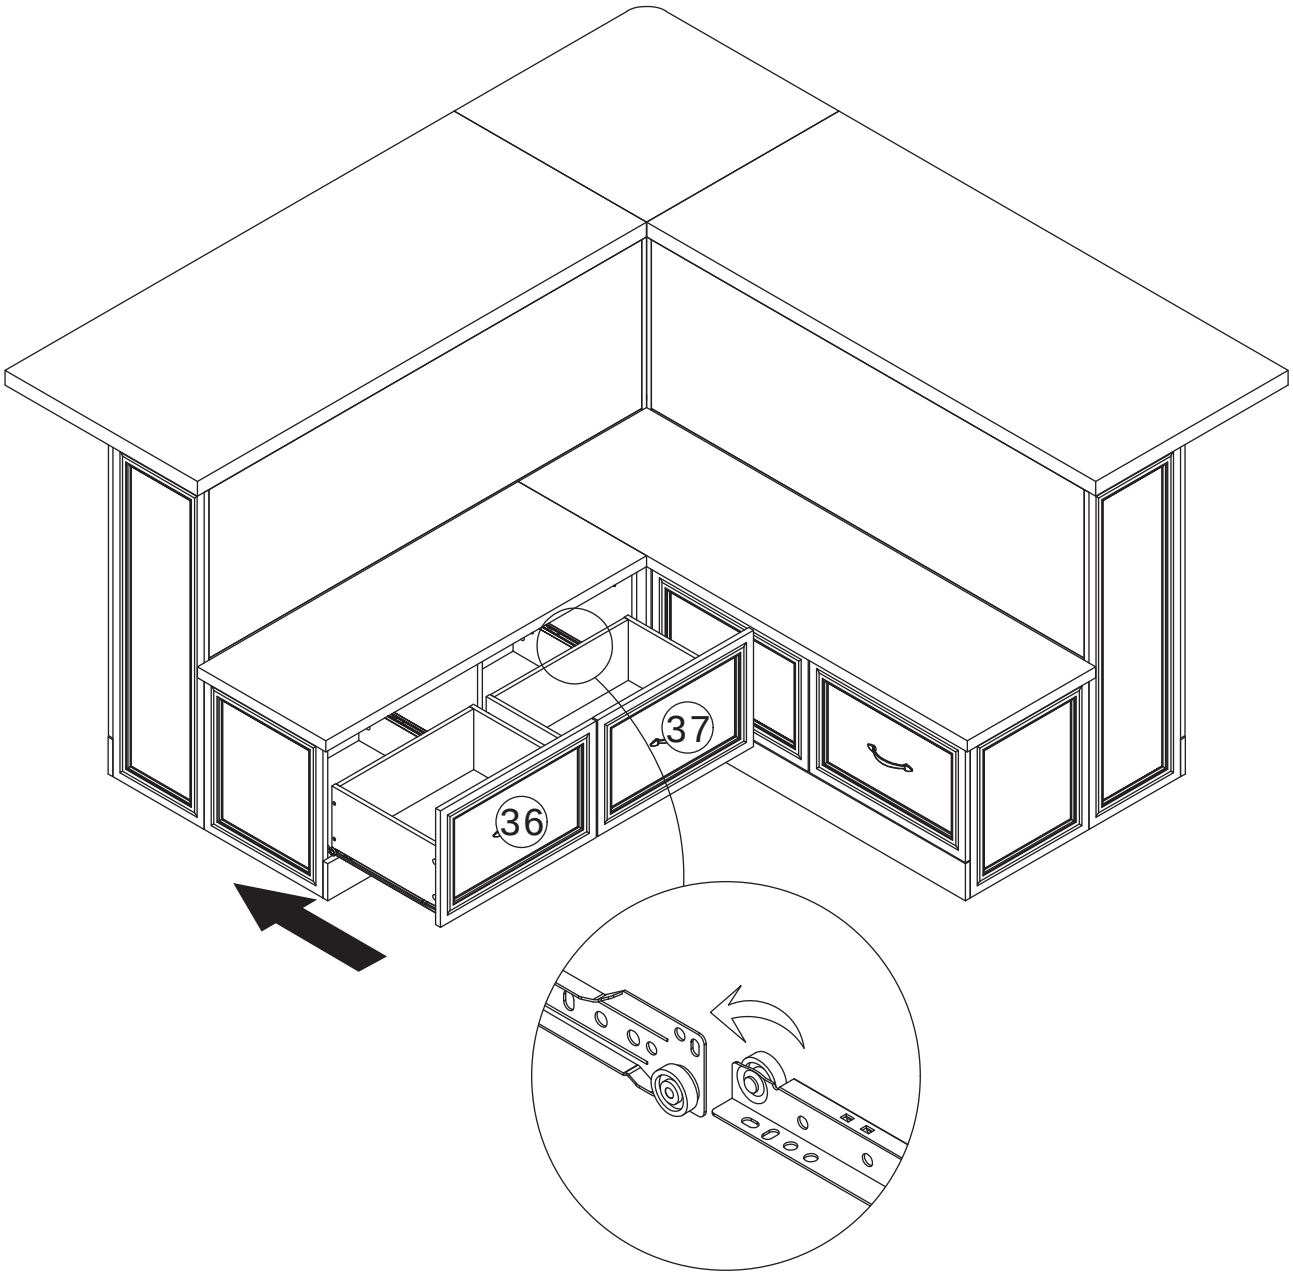



58



If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.
https://youtu.be/n0Lb36SoODM

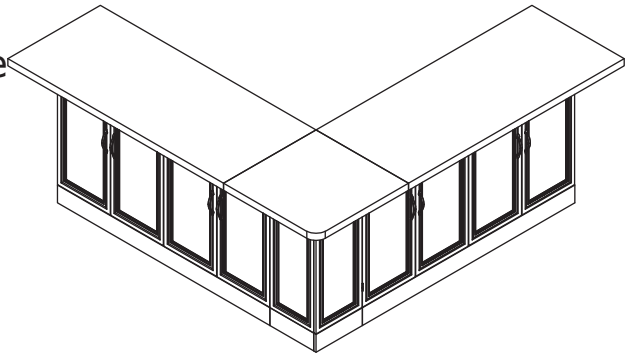

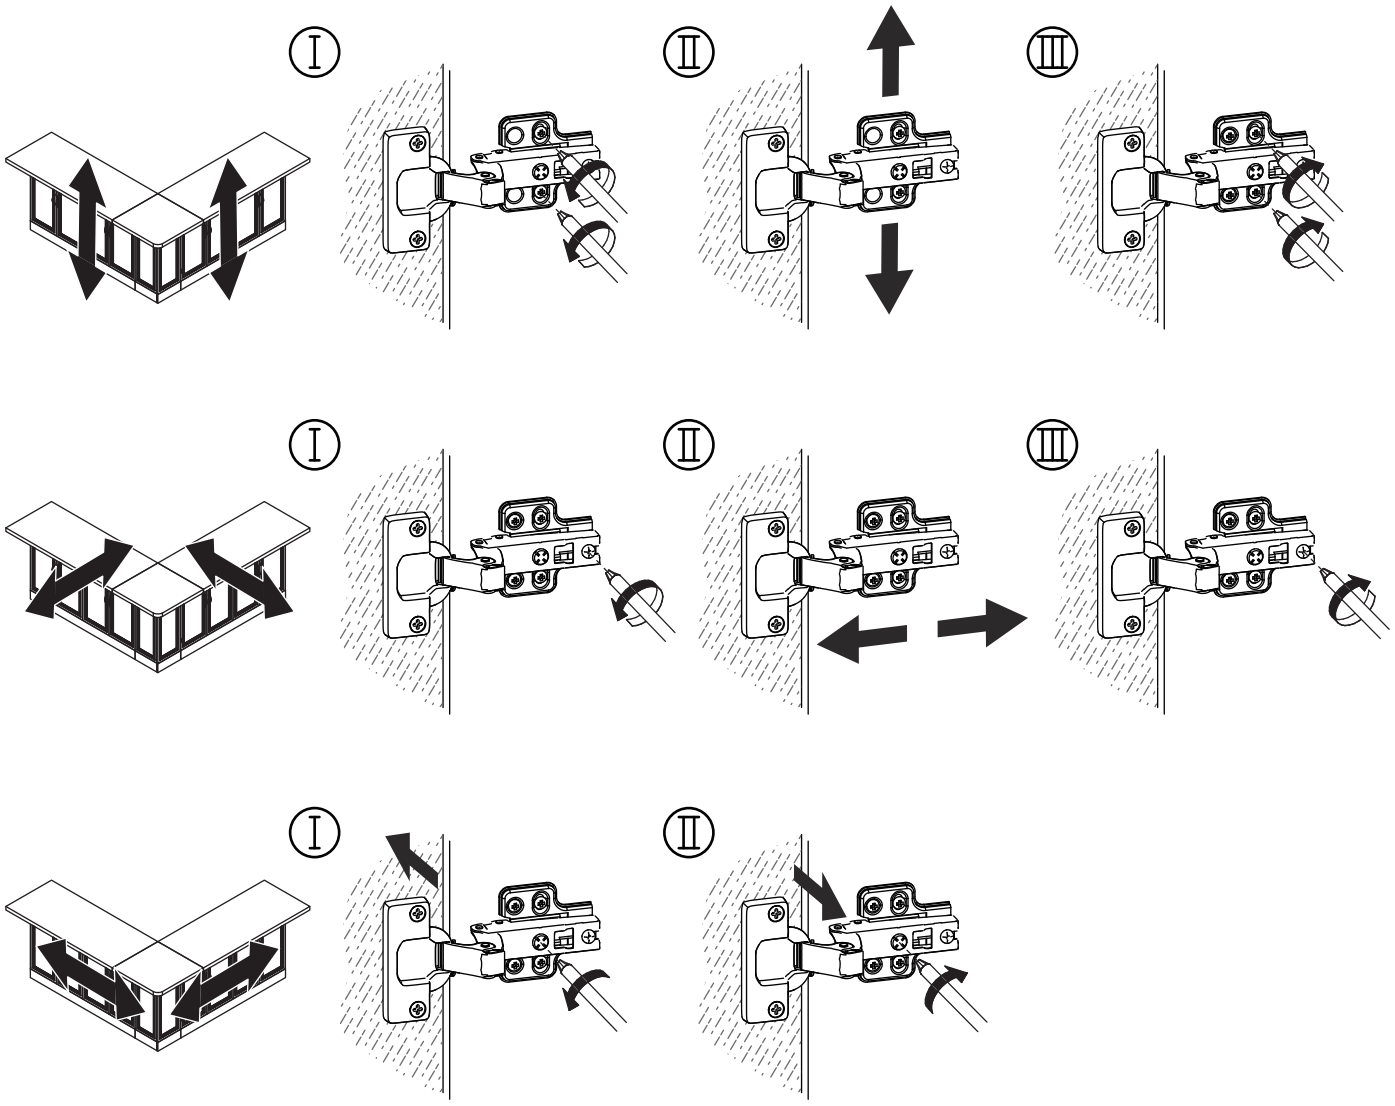

WARRANTY

WARRANTY CLAIMS

•There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

•Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

•The product must be used in accordance with the instructions provided. For health reasons.

•For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

•Failure to follow the furniture instructions will invalidate the warranty. Attention please.

•Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

•Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

•After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

•Sheet parts: 1 month from the date of purchase.

•Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



