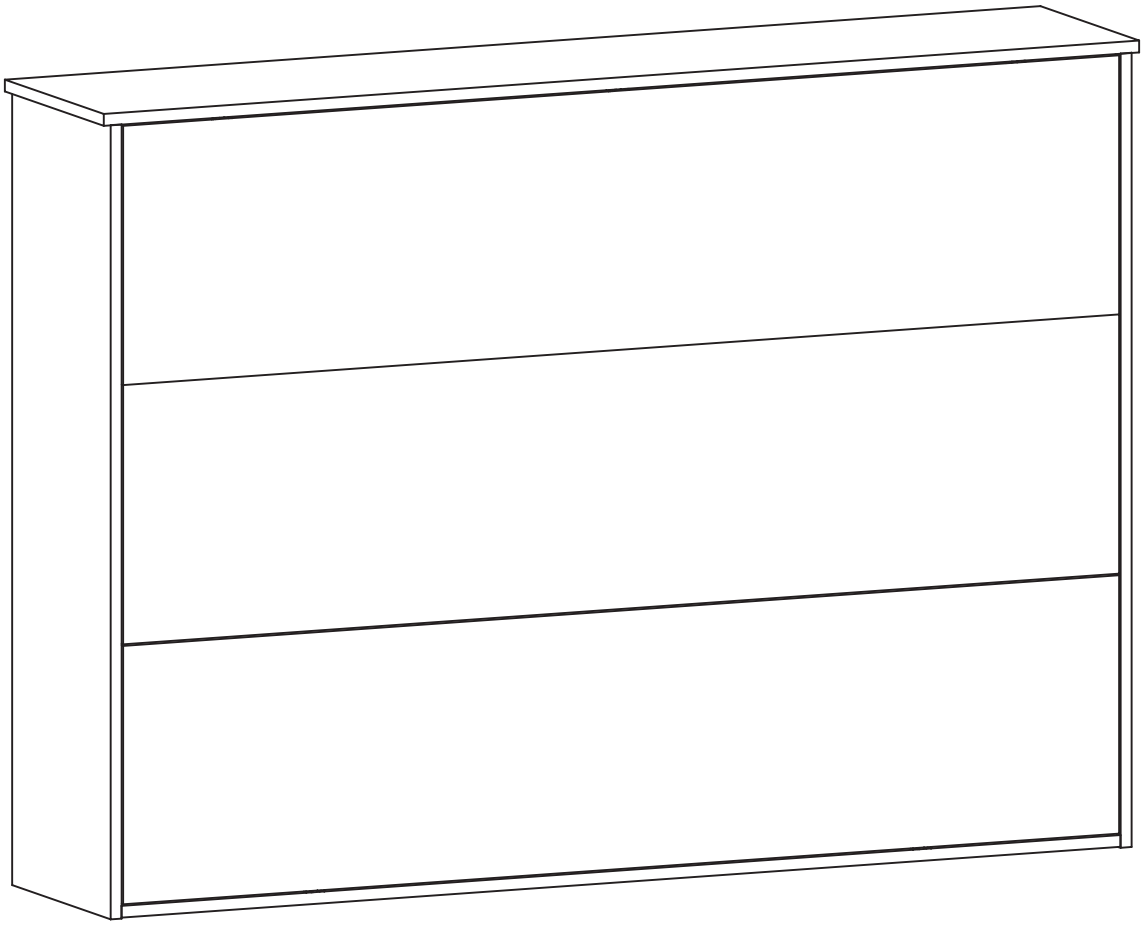
ASSEMBLY INSTRUCTIONS



1.Thank you for choosing our products.

2.Return Policy



DO NOT RETURN TO THE STORE！ Avoid the hassle of returning your product by contacting us directly for a replacement.

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, Contact our customer service department with your order details and any issues you've encountered.

We will do our best to provide a solution.Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

Assembly Recommendations

 Read instructions, cover to cover

 Have 2-4 adults on hand for assembly depending on product size

 Do not assemble directly on flooring or carpet

 Assemble on a clean non-marring surface (example: packing foam)

 Save all packaging until finished

3. Assembly Notice:

☒ If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.

Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Lay out the parts neatly in front of you, then refer to the instructions to confirm that no parts are missing.

If any pieces are found missing,please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.

☒ Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (For example: LED lights may be stored in the bottom or middle compartment of the product.)

☒ IMPORTANT: During setup, DO NOT FULLY TIGHTEN THE SCREWS AT FIRST.

Place each screw into its properhole and use your hand to twist the screw halfway. Twist all thescrews halfway to ensure the holes align correctly and the product is level on the ground. When everything seemsproperly fitted, then tighten the screws. Please strictly followthe order of each step as outlined in the manual to make your installation easier and the product fit better.

☒ When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance

 Do not put hot items directly on furniture surface

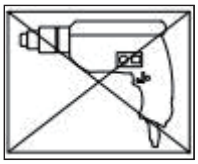
 Do not clean furniture with harsh cleansers or polish

 Children should not climb or jump on the furniture


 Dust and pick-up spills using a clean, non-colored, lint-free cloth
















Caution

- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.





Assembly Instructions

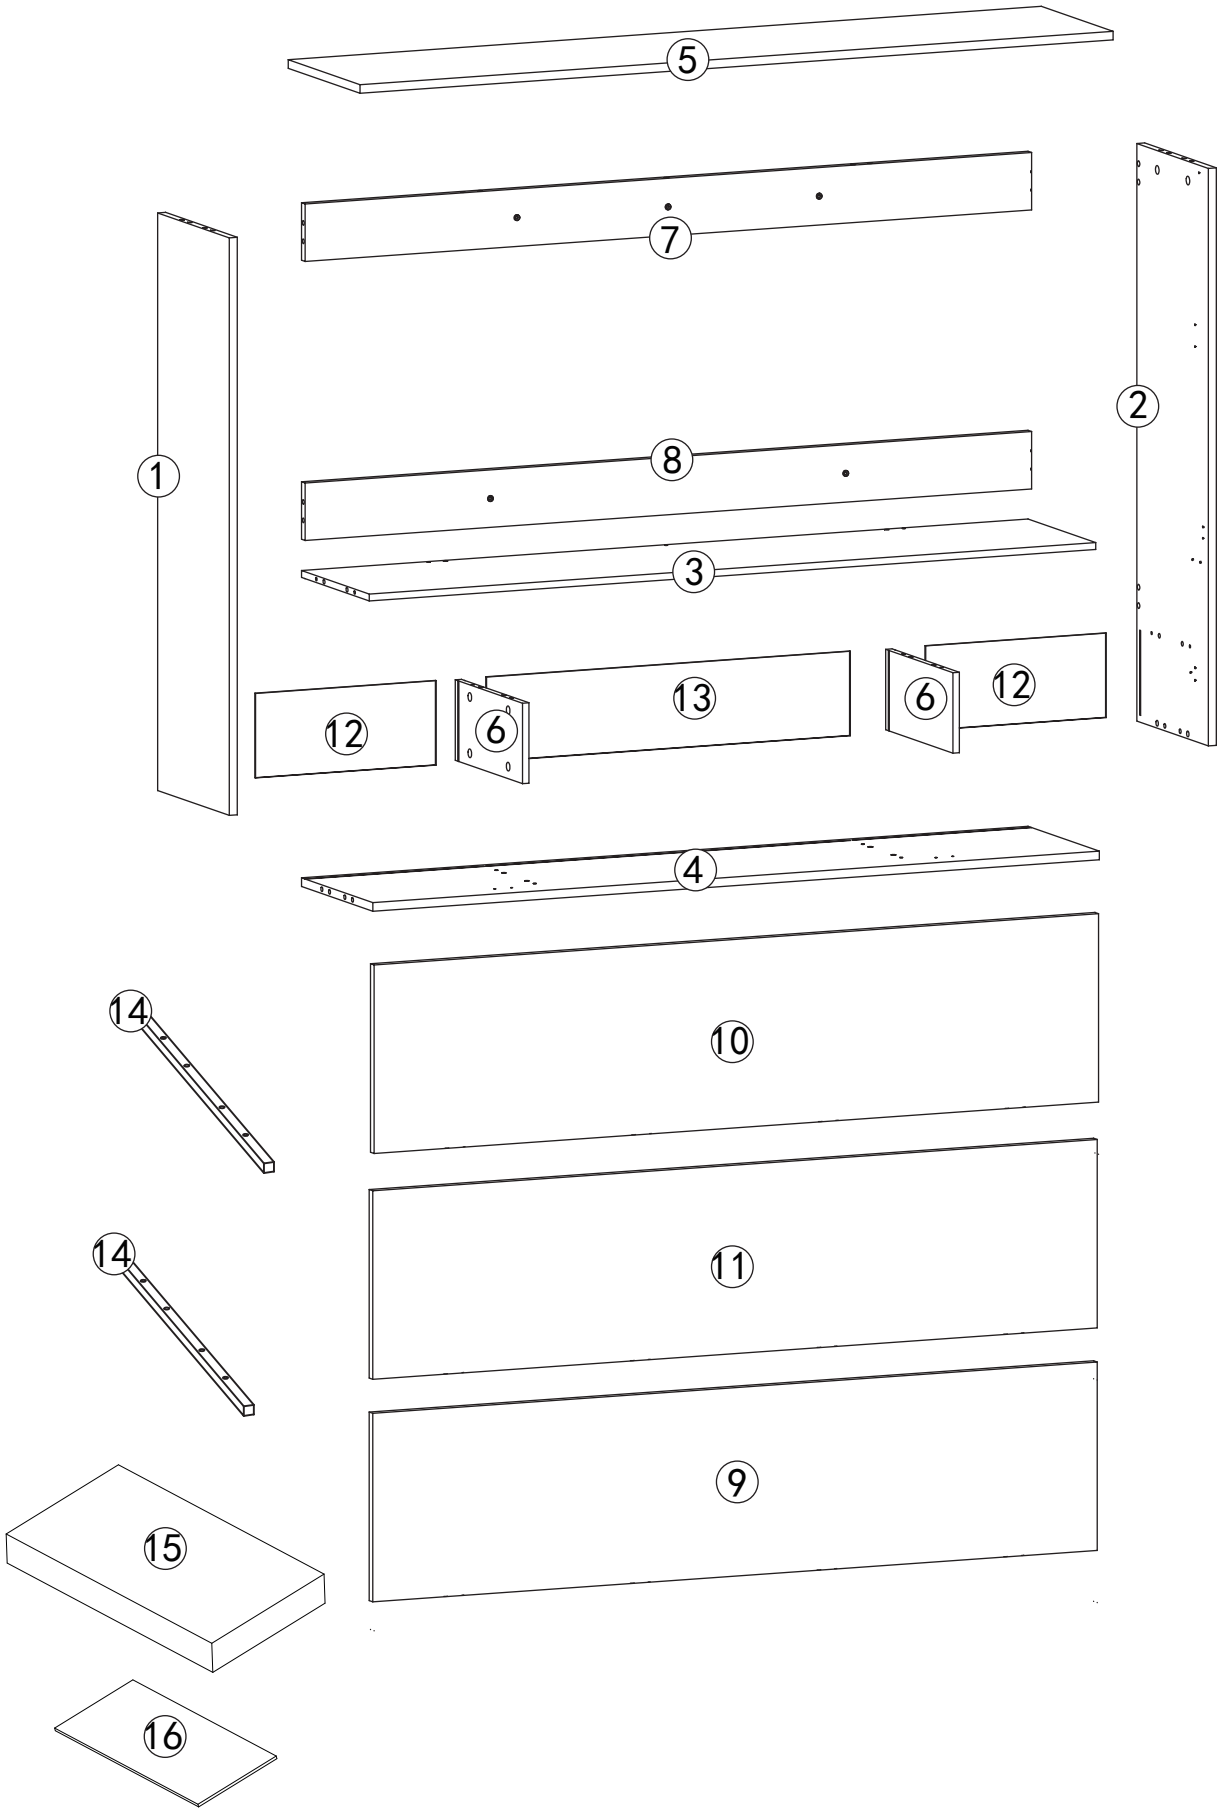

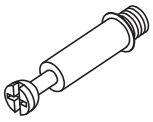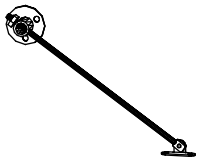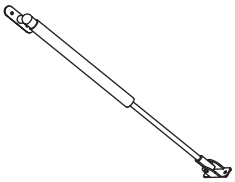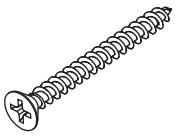Ⓐ  Cam Bolt x 23+2	Ⓑ  Cam Lock x 26+2	Ⓒ  Cam Bolt x 15+2	Ⓓ  Cam Lock x 12+2
Ⓔ  6*30mm Dowel x 12+2	Ⓕ  8*40mm Dowel x 14+2	Ⓖ  3.5*14mm Screw x 90+9	Ⓗ  Door stopper x 2
Ⓙ  Push-to-open latch x 2	Ⓚ  Hinge x 5	Ⓛ  Cabinet pull x 2	Ⓜ  Gas strut x 2
Ⓝ  6*25mm Screw x 8+2	Ⓞ  Iron sheet x 2	Ⓟ  Angle iron x 2	Ⓠ  Back panel clip x14
Ⓡ  Adhesive pad x 34+2	Ⓢ  Adhesive pad x 4+2	Ⓣ  Expansion plug x 5	Ⓤ  4*55mm Screw x 5
Ⓥ  Screwdriver x 1	Ⓧ  LED strip light x 1		

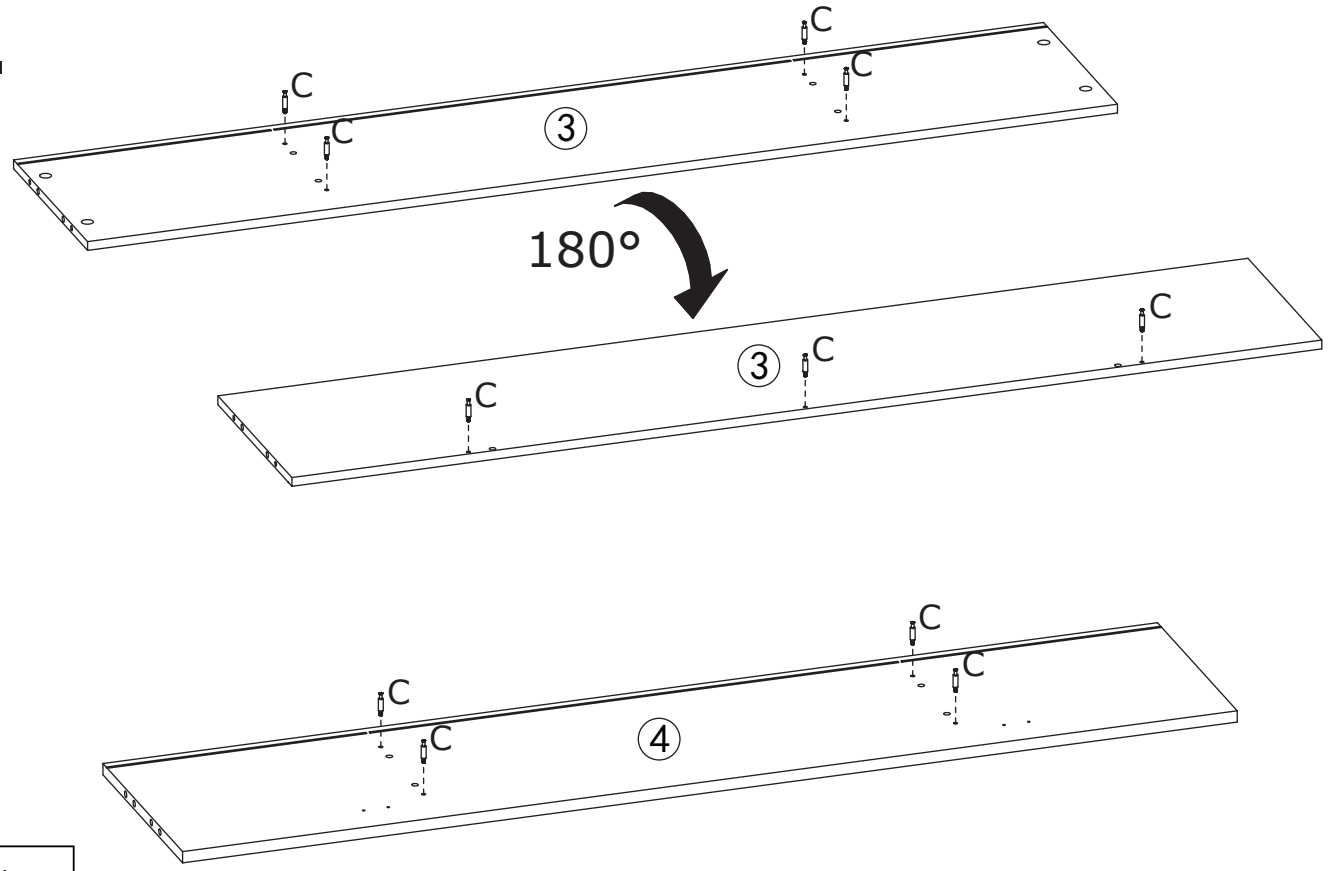
1.





C*11

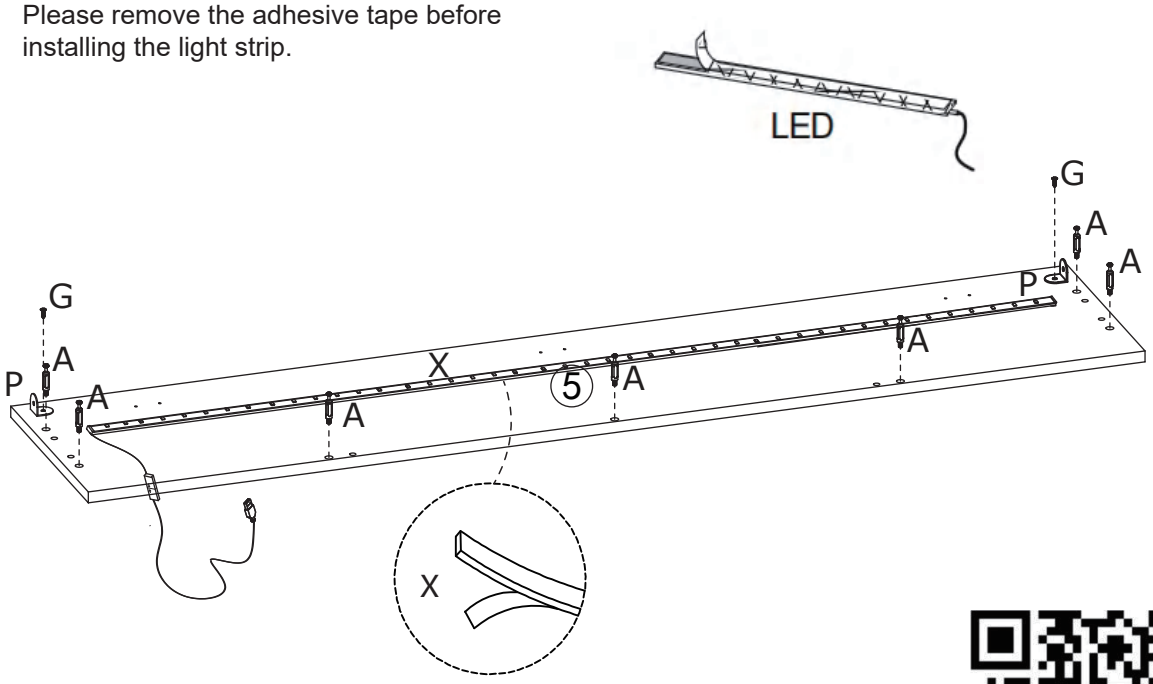
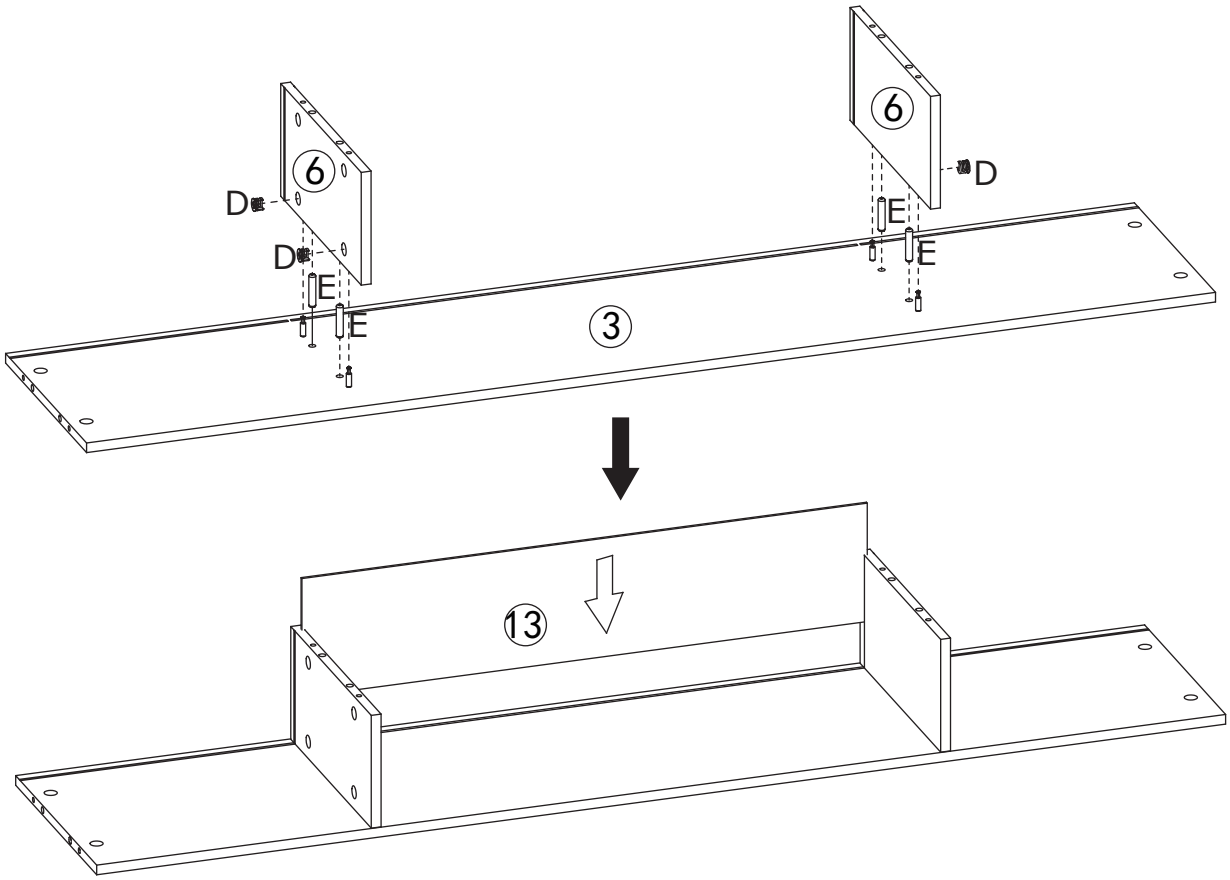
2.


Please remove the adhesive tape before installing the light strip.




A*7	G*2	P*2	X*1
			


3.




D*4	E*4
	 ∅6 x 30 mm

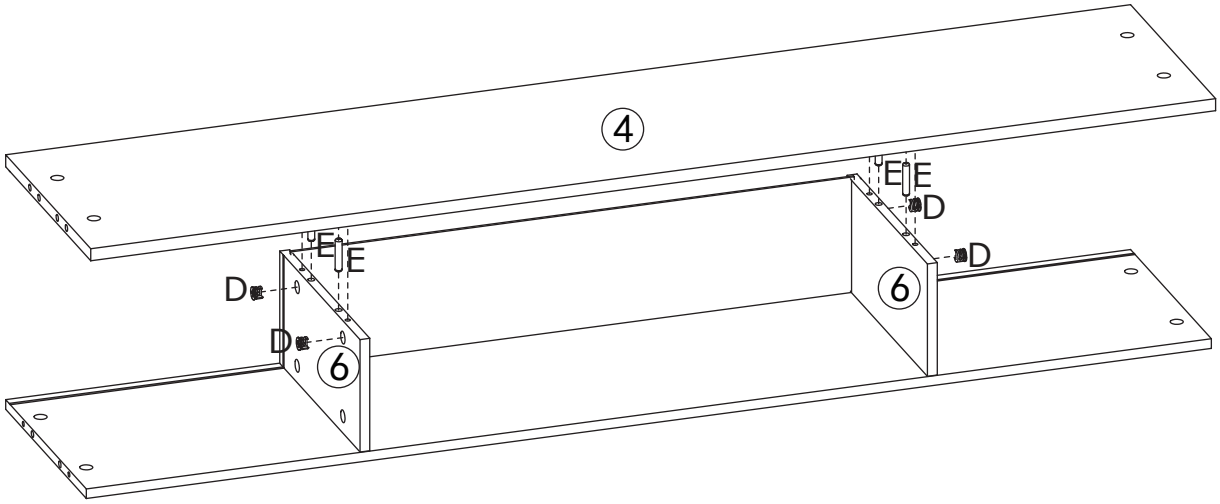
4.




D*4	E*2
	 ∅6 x 30 mm

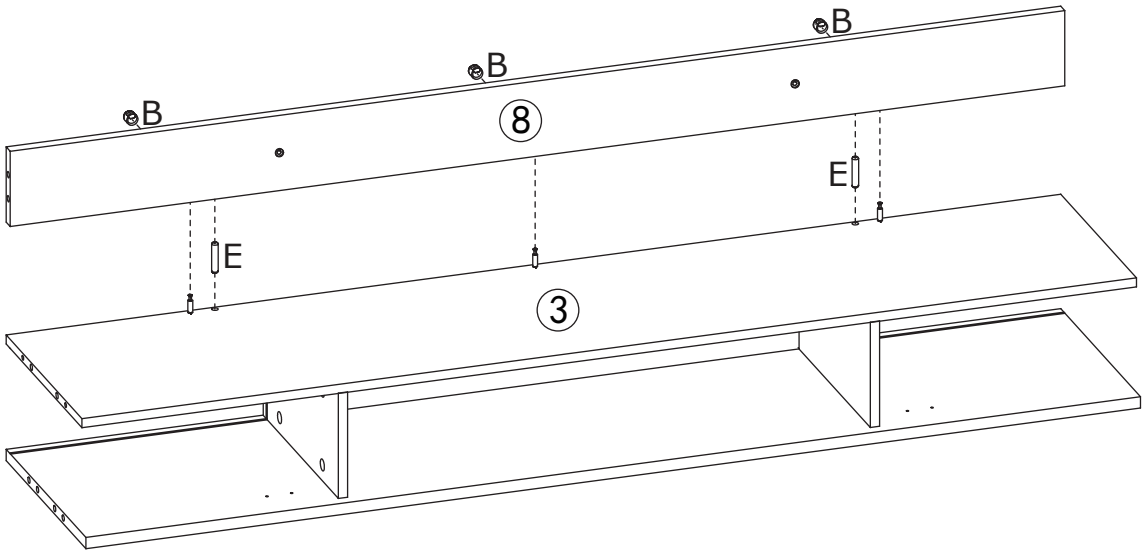5.







B*3	E*2
	 ∅6 x 30 mm

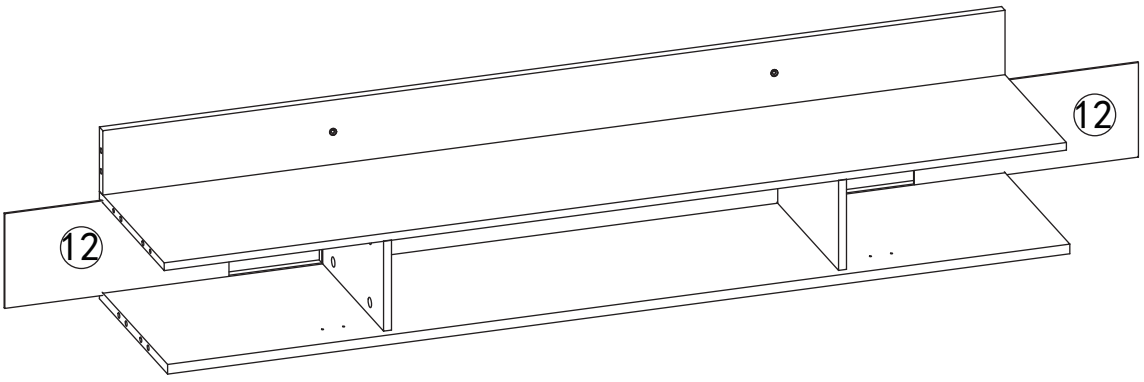6.




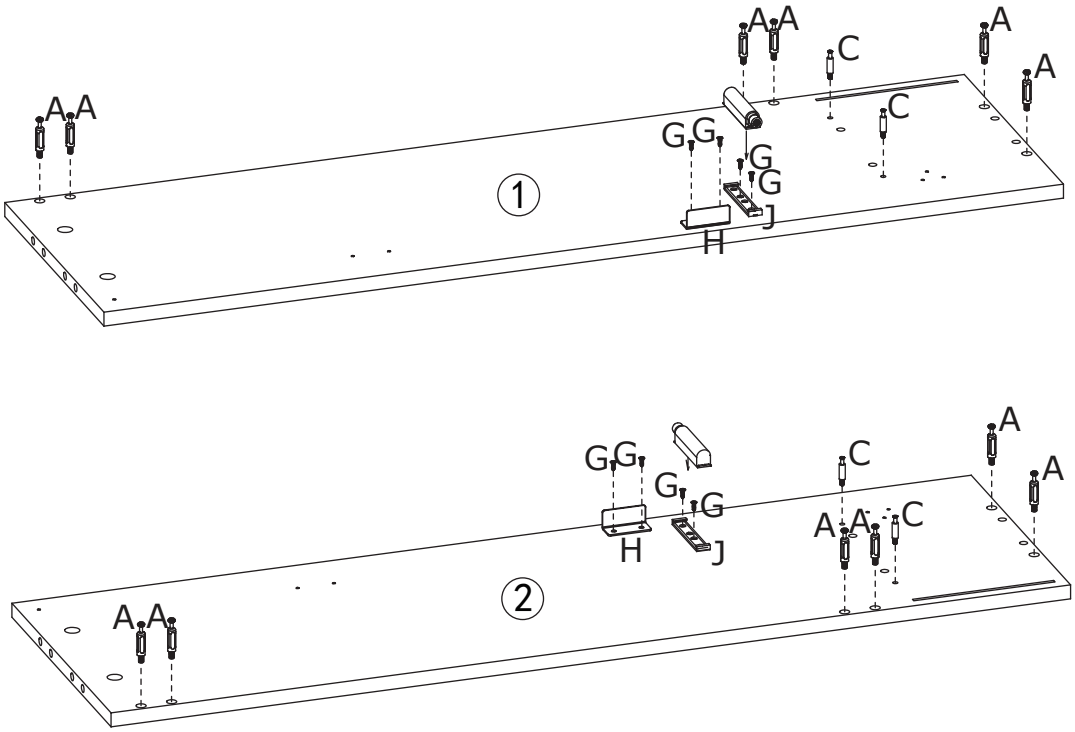

7.




A*12	C*4	G*8	H*2	J*2
				

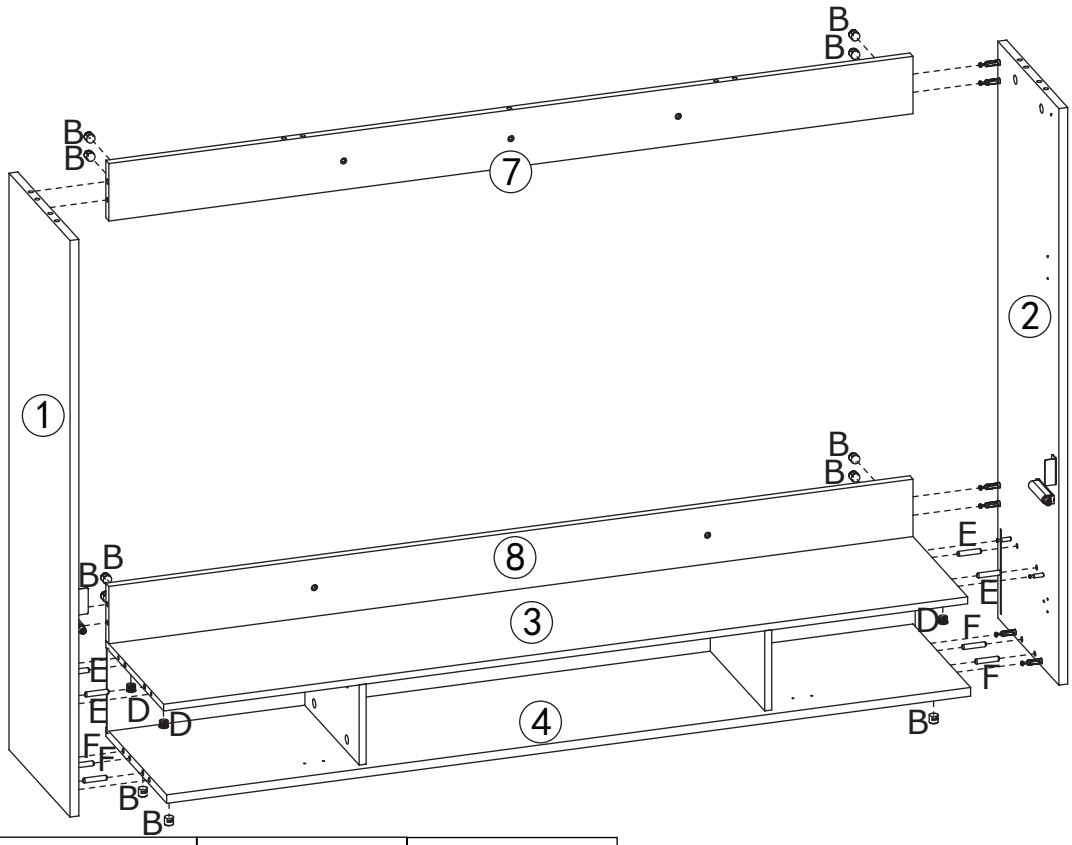
8.




B*12	D*4	E*4	F*4
		 ∅6 x 30 mm	 ∅8 x 40 mm

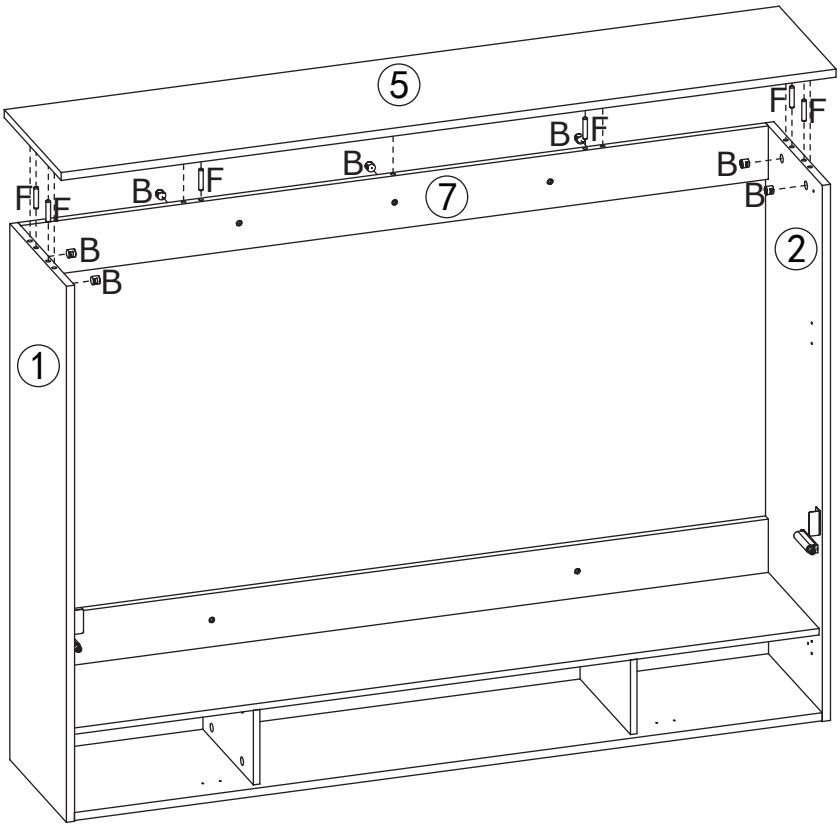9.




B*7	F*6
	 ∅8 x 40 mm


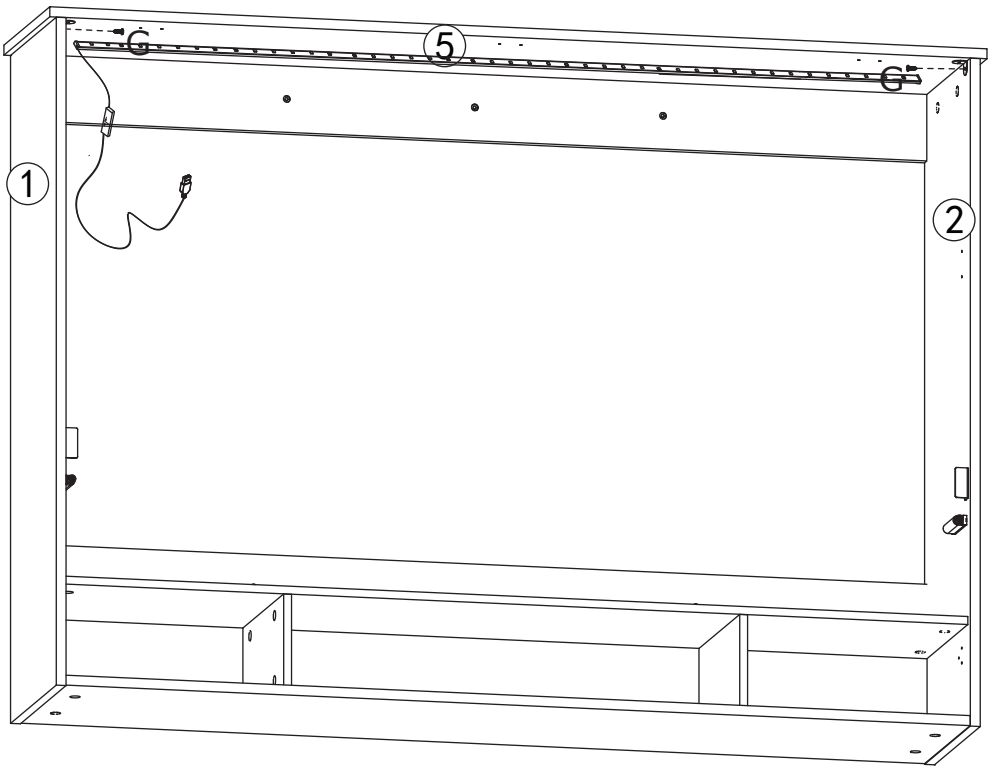
10.




G*2

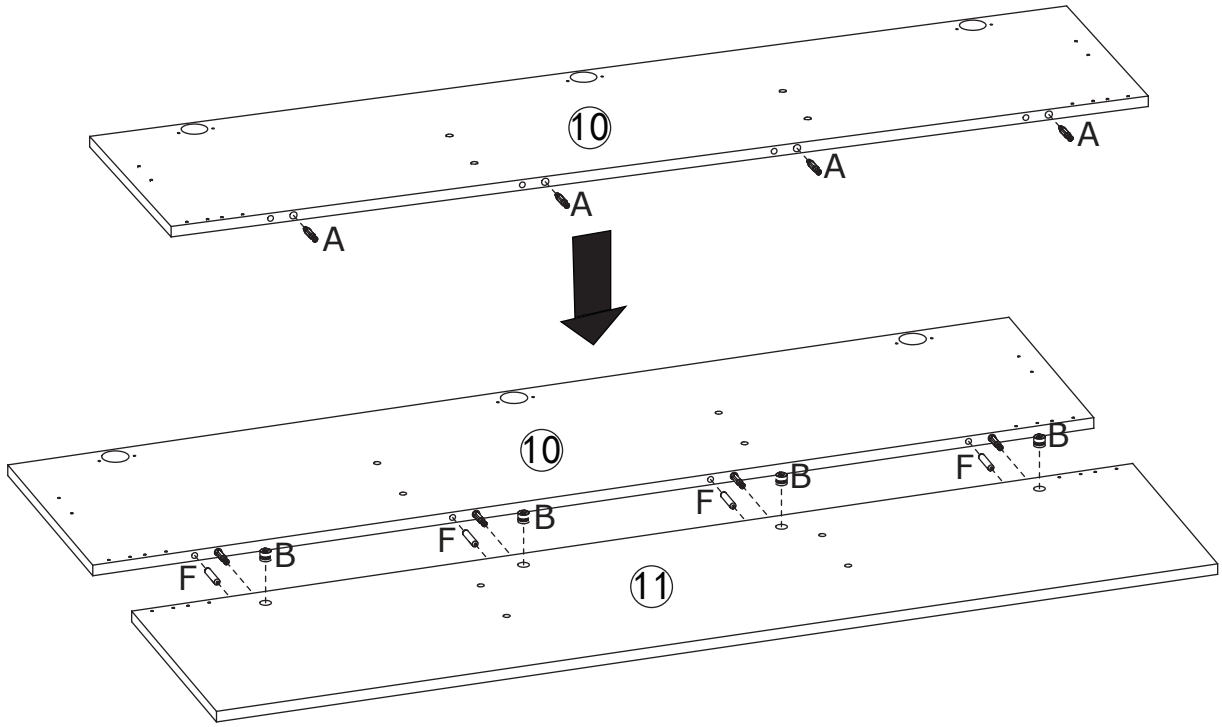



11.




A*4	B*4	F*4
		 ∅8 x 40 mm

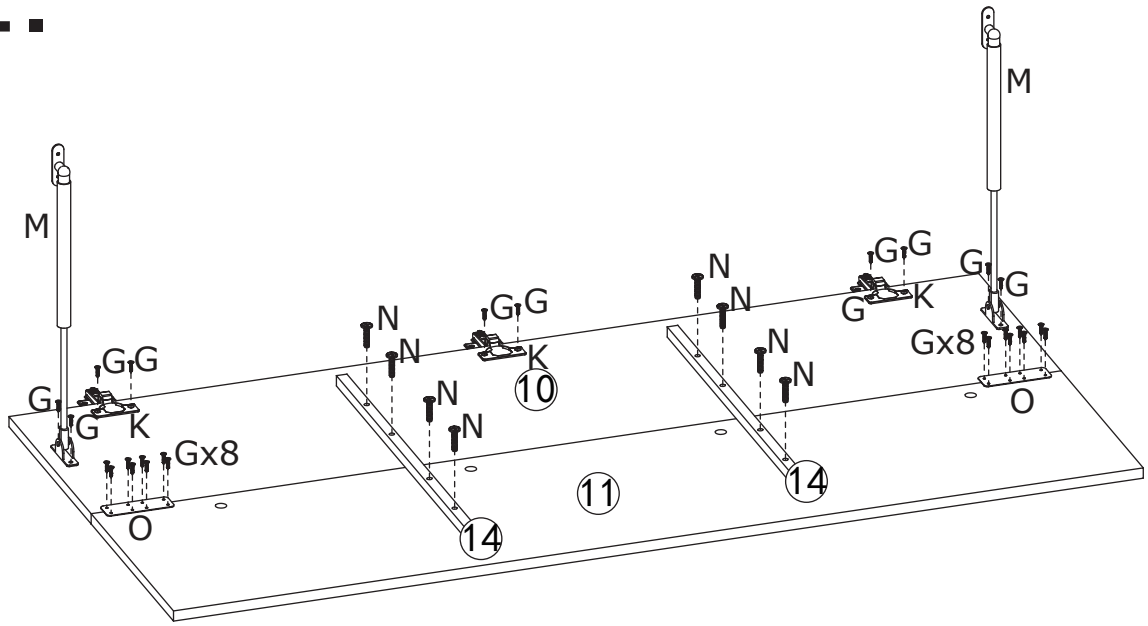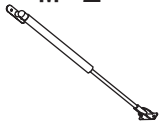12.




G*26	K*3	M*2	N*8	O*2
 ∅3.5 x 14 mm				

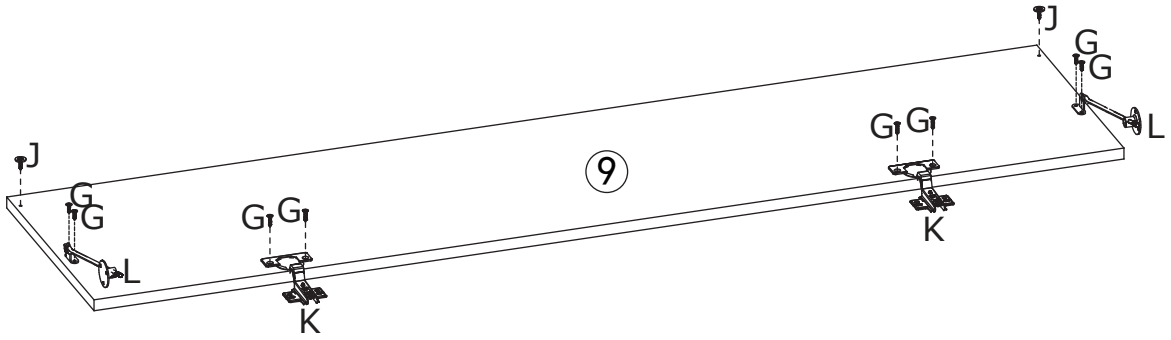13.




G*8	K*2	J*2	L*2
∅3.5 x 14 mm			

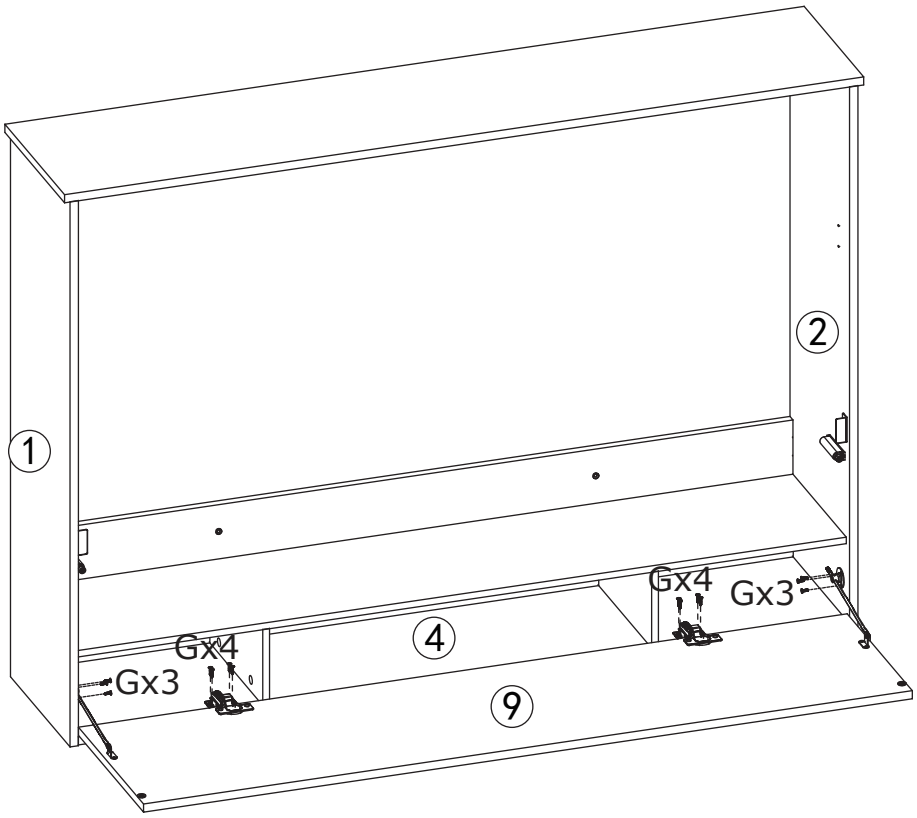14.



G*14
∅3.5 x 14 mm

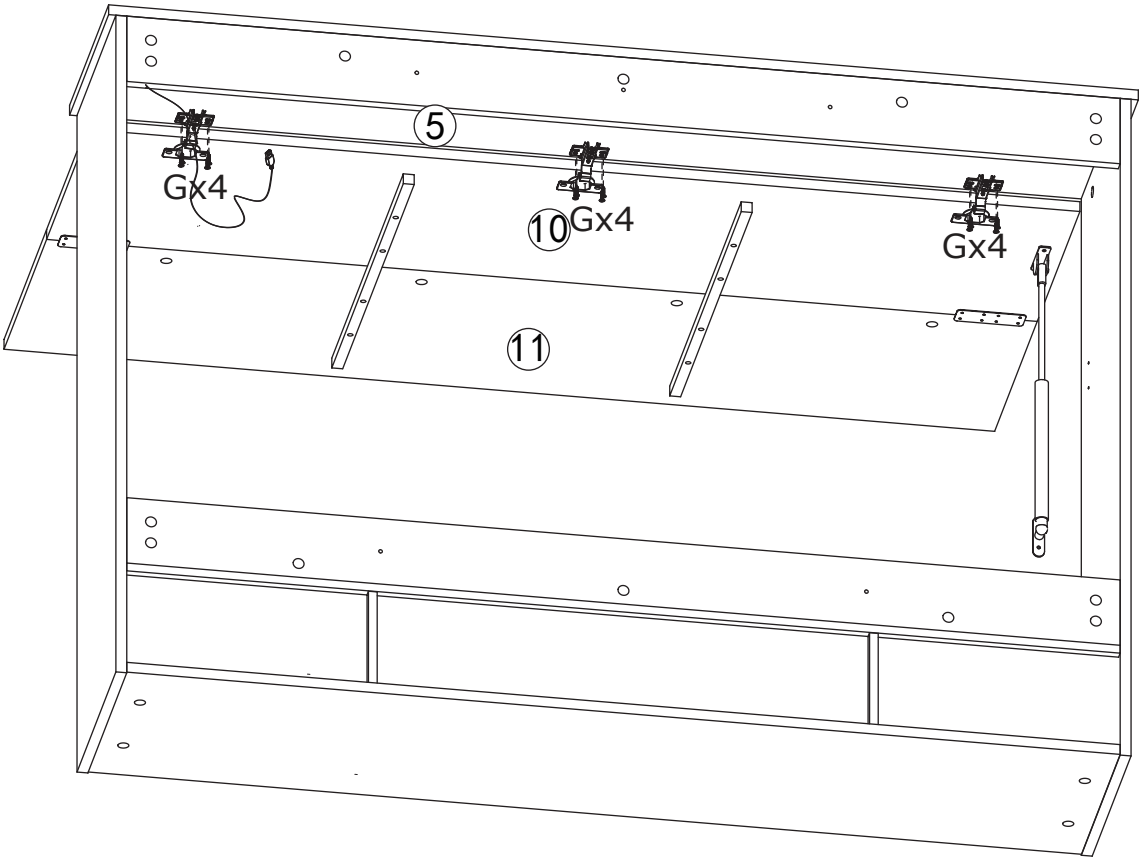15.




G*12



∅3.5 x 14 mm

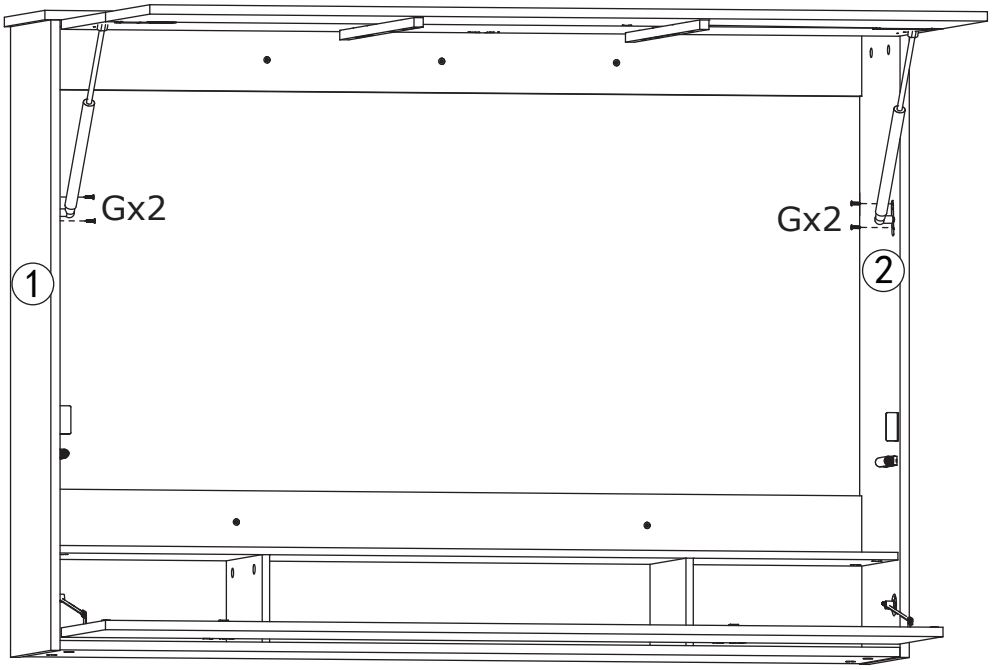16.





G*4



∅3.5 x 14 mm

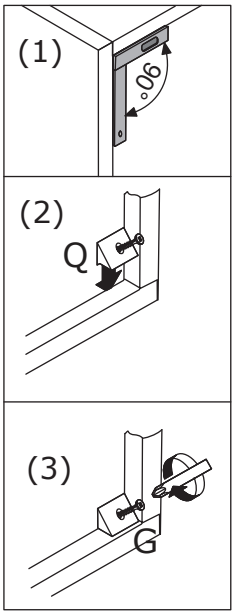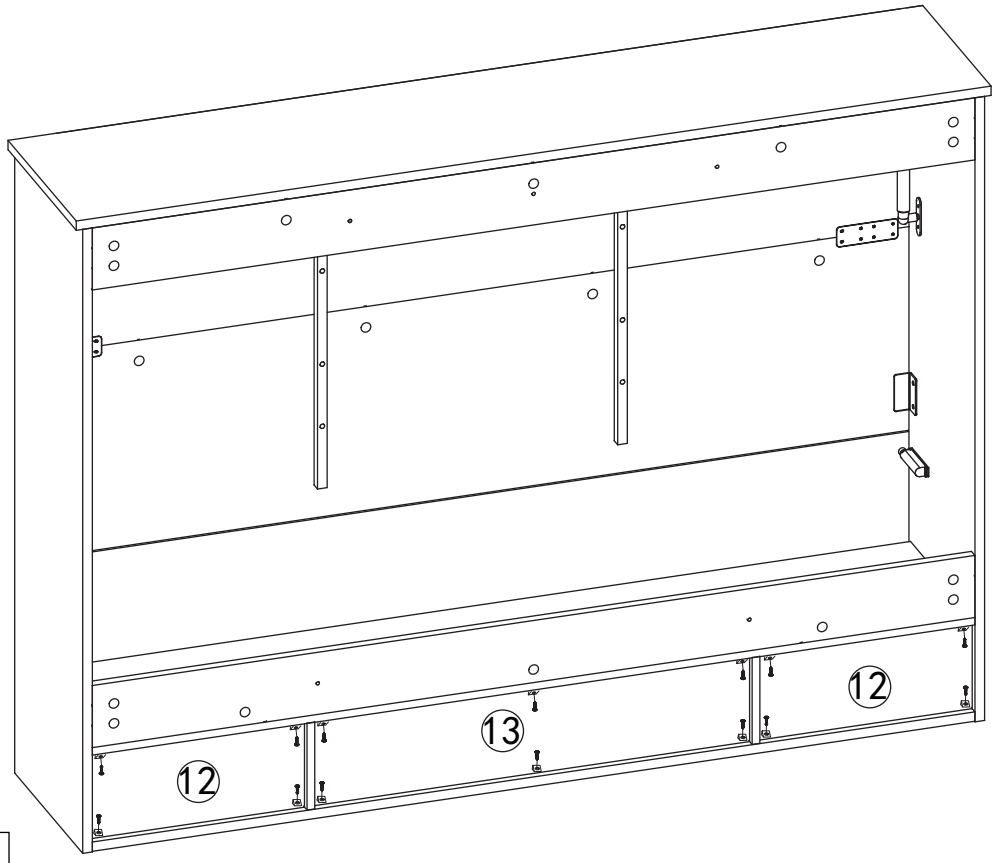
17.







Q*14	G*14
	 ∅3.5 x 14 mm

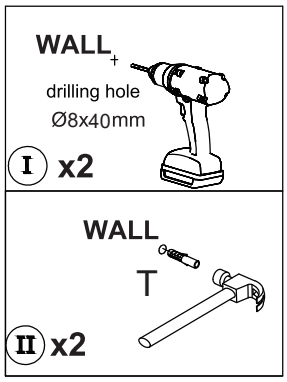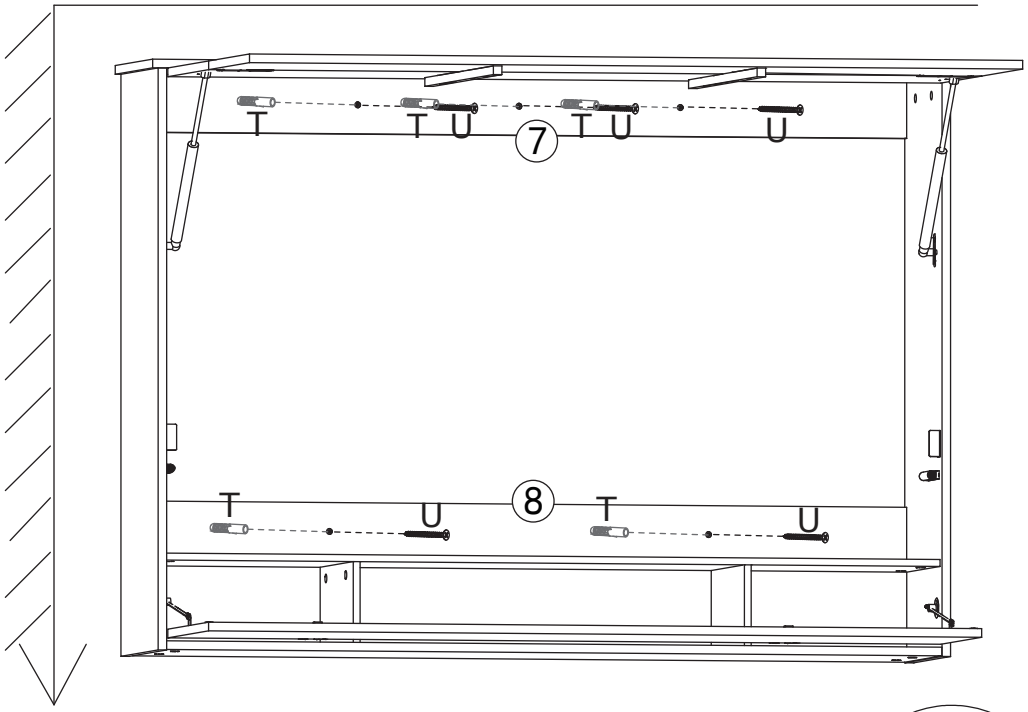18.






T*5	U*5	R*34	S*4
			

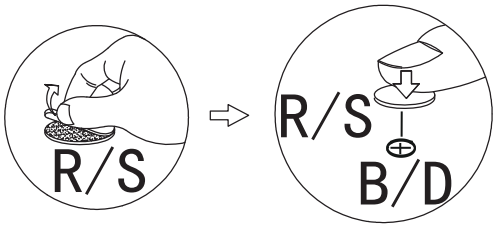

Installation Instructions

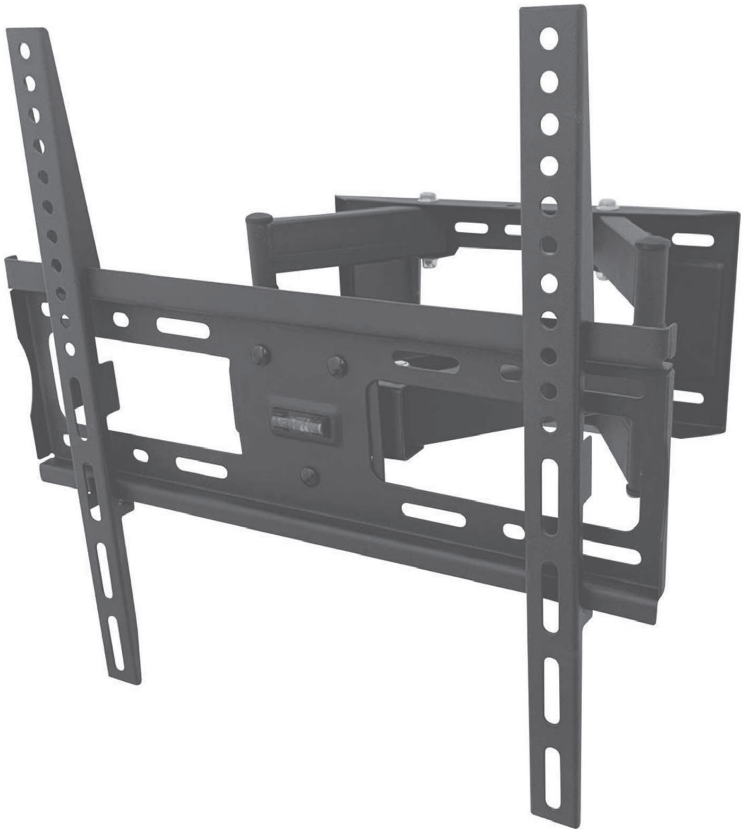ITEM NO.: 43L





A:Lag bolt St8x48
(4)



B:Concrete anchor 8x48
(4)



C:Bolt M4x25
(4)



D:Bolt M6x25
(4)



E:Bolt M8x25
(4)



F:Bolt M5x35
(2)



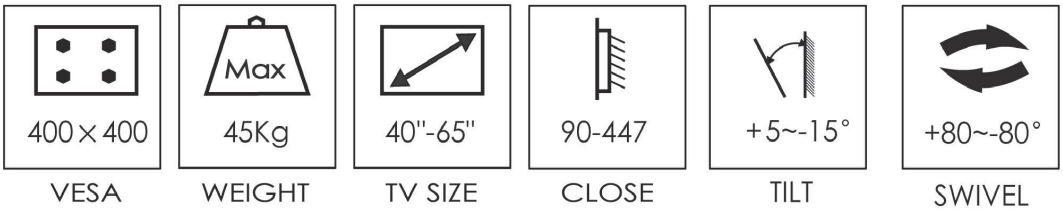
G:Bubble level
(1)



H:Plastic black shaft
(4)



I : Ø8.5x18x1.5 Spacer
(4)





19.

WARNING

1.Tighten screws firmly, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding power.

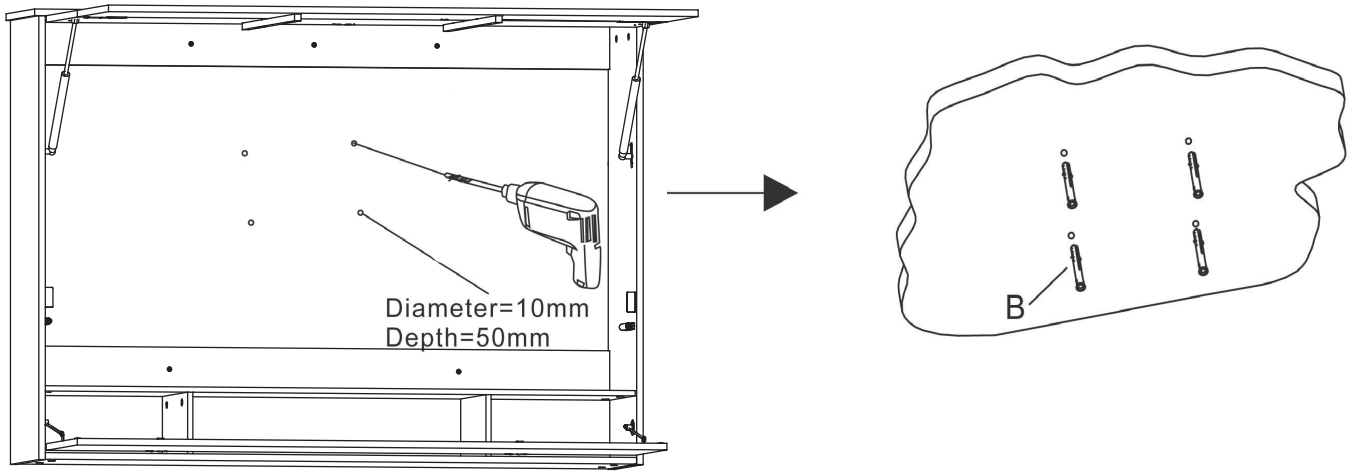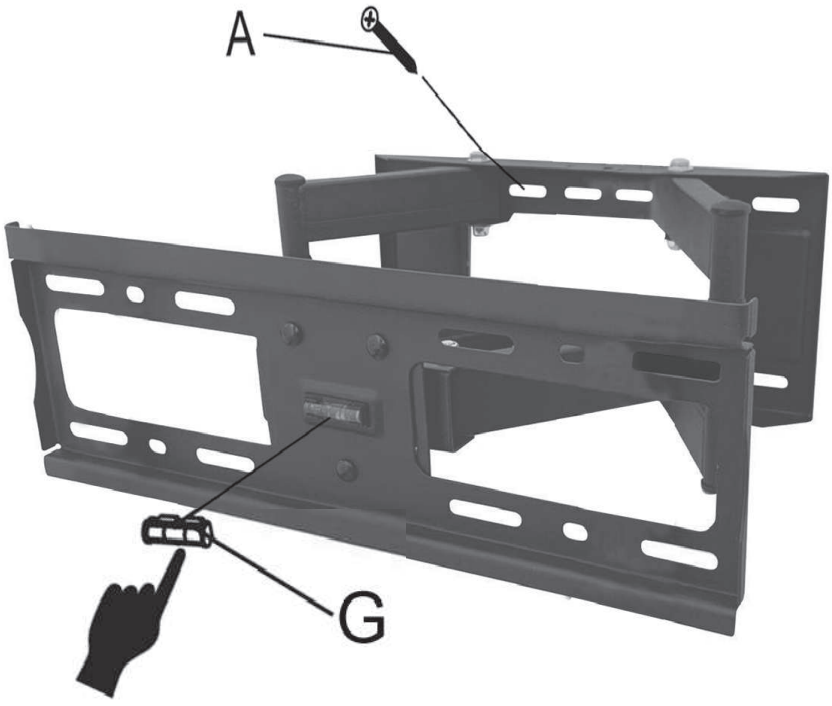
2.Make sure that mounting screws are anchored into the center of the studs.






Put the on the top central edge, make sure the back plate is in horizontal line before mounting the wall board to the studs. Drill into the wall then put the 10x48 Concrete Anchor in the holes, And Fix the wall board to the wall by matching the ST6X48 Lag bolt and the 88.5x18x1.5 Spacer as above/left figure. Keep the bubble level in hori-

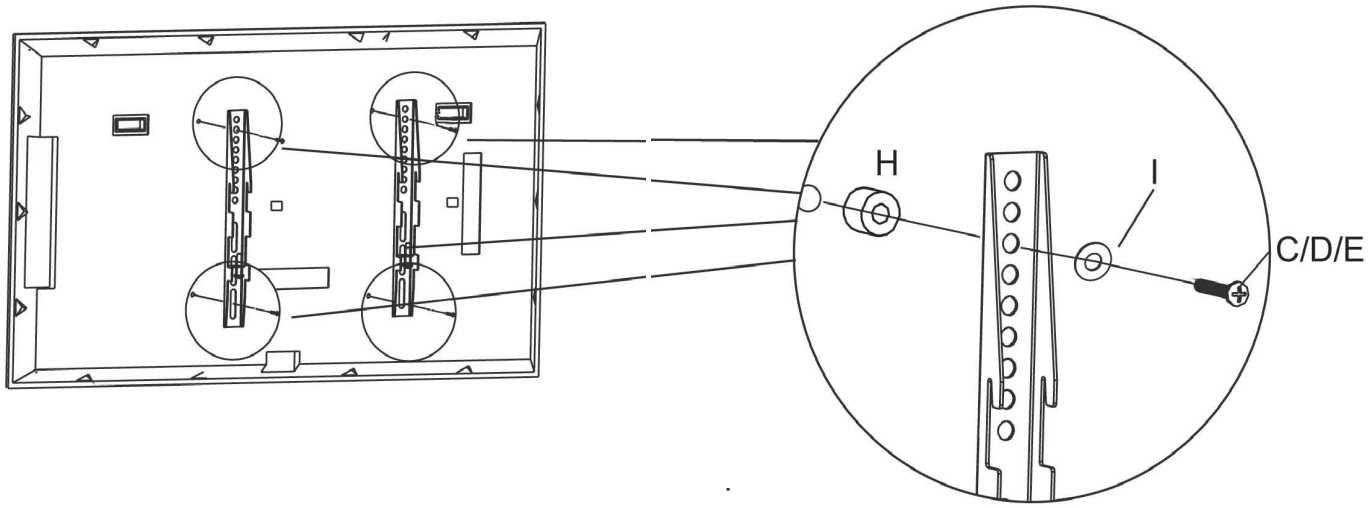20.



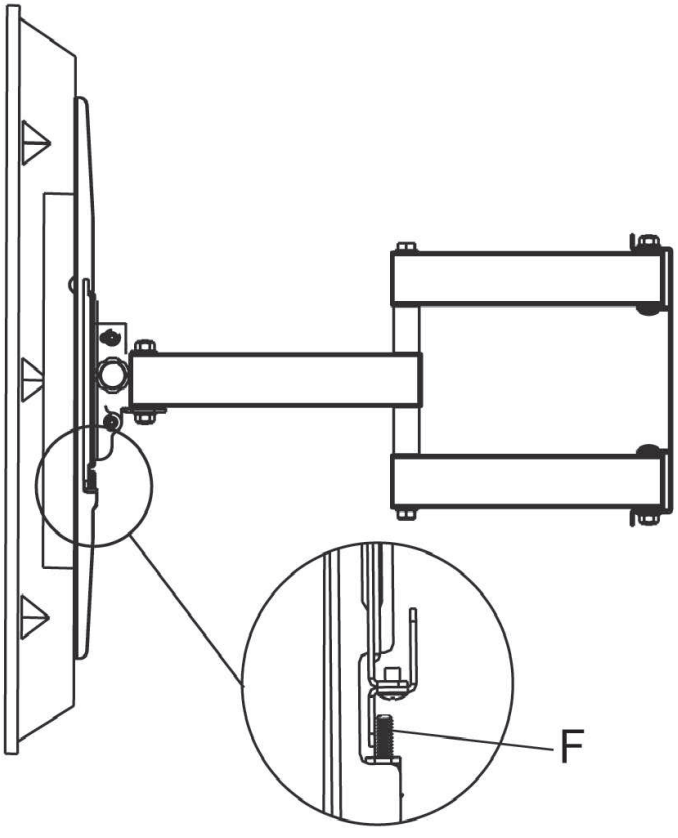Mount the TV set to the TV board, using the bolt packed in accessories package to mount the screen to the TV board. First screw, then fix them to TV set by tightening bolts as shown in the figure above.



Please tight the screw (F)

Put the wall mounted TV board with screen to the wall board. Finally tighten the lock screw. You can adjust the TV at +/-15 degree by loosening, after the degree is ok, Then tighten plastic knob.

21.

Note: Dust and water resistant design. Use a waterproof cover in bad weather - limited water resistance due to wooden material.

