
OWNER'S MANUAL
FIREPLACE

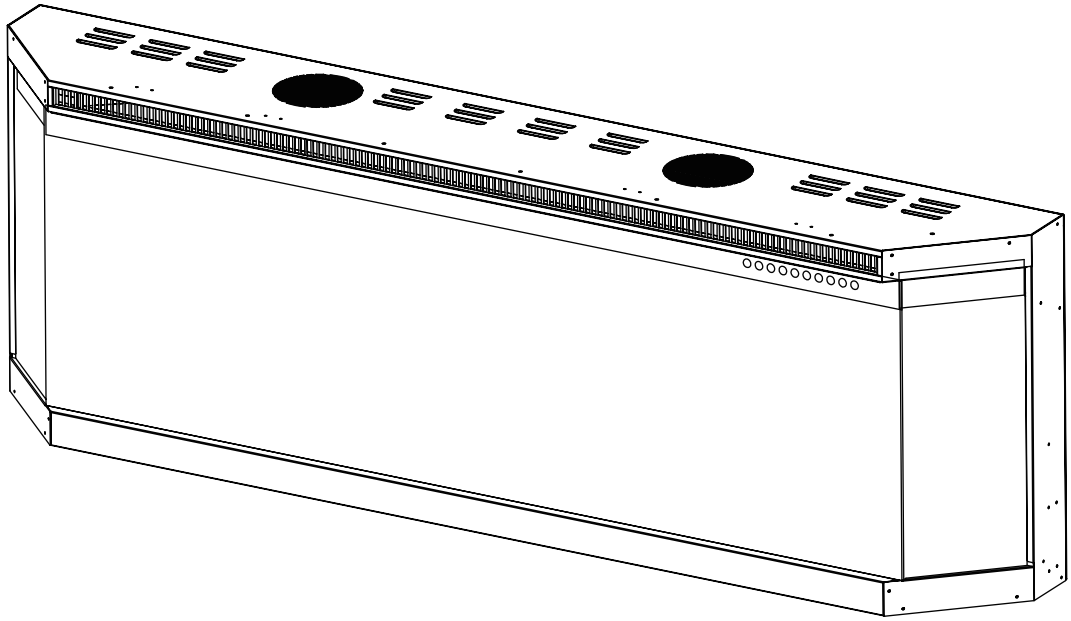

MODEL: DKTS70 / DKTS80
SKU: KF640027US-01DK-001 / KF640027US-02DK-001

⚠WARNING// **⚠Waarschuwing**	**Read and understand** this entire owner's manual, including **all safety information**, before **plugging in** or **using** this product. Failure to do so could result in **fire, electric shock, or serious personal injury.** **Lees en begrijp deze gehele gebruikershandleiding**, inclusief alle veiligheidsinformatie, voordat u de stekker in het stopcontact steekt of dit product gebruikt. Als u dit niet doet, kan dit leiden tot brand, elektrische schokken of ernstig persoonlijk letsel.

IMPORTANT SAFETY INFORMATION!

⚠WARNING

When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this fireplace.
- Always unplug fireplace when not in use.
- Do not operate any fireplace with a damaged cord or plug or after the fireplace malfunctions, has been dropped damaged in any manner, return fireplace to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Indoor use only, do not use outdoors.
- This fireplace is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate fireplace where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tipped over.
- To disconnect fireplace, turn controls to off, then remove plug from outlet.
- Use this fireplace only as describes in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Replacement of the lamps should be done only while the fireplace is disconnected from the supply circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


ALWAYS check your heater cord and plug connections with each use!

i) **MAKE SURE** the plug fits tightly in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.

ii) **Heaters draw more current** than small appliances. occurred with the use of other appliances.

iii) During use, frequently check to see if the plug outlet or faceplate is

iv) If the outlet or faceplate is **HOT**, **discontinue use immediately** inspect and/or replace the faulty outlets.

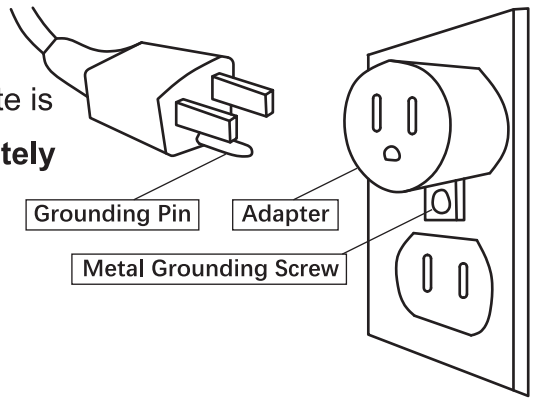

The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter**MUST** be **properly grounded** to the outlet box (see figure at right).

NOTE: Adapter NOT INCLUDED.

Under no circumstances should this fireplace be modified.

HOW TO CONNECT WI-FI

Steps

1) Scan the code to download the APP

2) In standby mode, press the ON/OFF button for seconds to turn on the distribution network

Then display will flicker

3) Open the APP on the mobile phone

4) Click the "+" button at the top right corner on the homepage

5) Add device

6) Click "Add" after searching for the device

HOW TO CONNECT BLUETOOTH AUDIO






1) Press the Bluetooth button on the touch screen to turn on the function.


2) On your phone,turn on Bluetooth and search for devices.


3)Locate "DK04-MUSIC" in your device's Bluetooth list and select it.

4) When you don't want to use Bluetooth, you can disconnect it via your phone.

Parts and Hardware

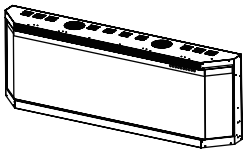No.	Parts		Qty.
A		Fireplace	1
B		M4 x 8mm Screw	18
C		Logs	1PK
D		Remote Control	1
E		Metal Bracket A	8
F		Metal Bracket B	1
G		Decorative Crystals	1PK
H		Anchor	16
I		M4 x 35mm Screw	16
J		M4 x 12mm Screw	8
K		M4 x 12mm Screw for feet	8
L		Feets	2

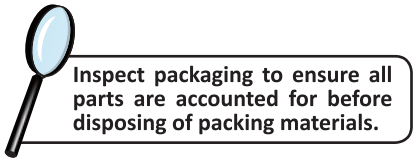

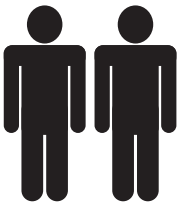

2-PERSON ASSEMBLY/ INSTALLATION

WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

Preparation

This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grouped for free-standing or wall-hanging use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.


Before installation, plug the unit into a properly grounded outlet to ensure the unit works properly.

Tools needed for installation (not included):


Phillips screwdriver, stud finder, level, tape measure, pencil, electric drill, 1/4" wood drill bit, hammer

How do remove Front glass?

1. **Remove the screws from the top glass panel.**

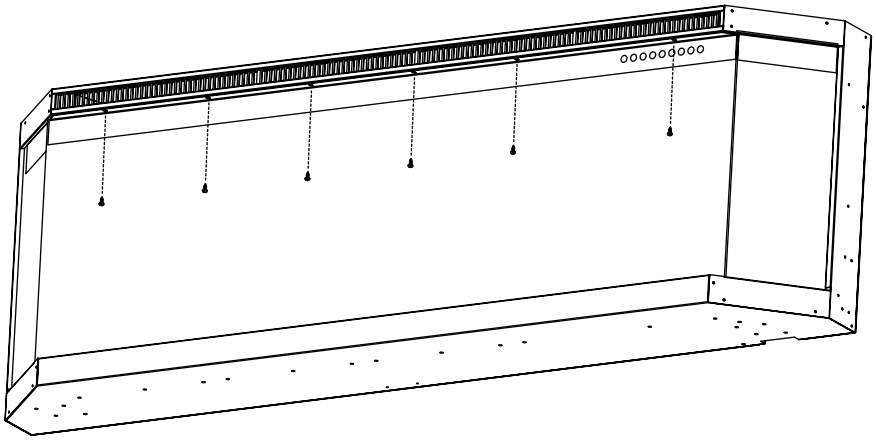

2. **Try to lift the glass to the front with 2 people**

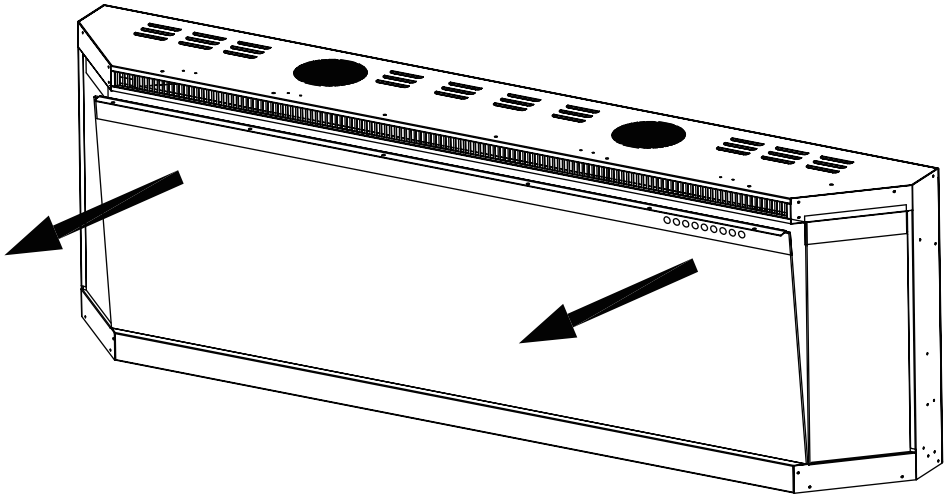

3. **Do the reverse to reset everything**

Log-set / Crystals Installation

(**OPMERKING: voer de installatie uit volgens de sintels die u hebt gekocht of geselecteerd.)**

A. Glass front must be removed and the appliance must be mounted in its final location before the drift logs embers are installed.

B. **C**arefully place the plastic ember bed strip to the slot, then place crystal/pebbles embers onto the surface of the ember bed as illustrated. Apply an even layer from side to side. **Figure 1, Figure 2.**



Figure 1. (Crystals)



Figure 2. (logs)

Operation

Read and understand this entire owner's manual, including **all safety information**, before **plugging in** or **using** this product. Failure to do so could result in **electric shock, fire, serious injury, or death.**

Power

Plug the power cord into a AC 120 Volt outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2**). Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation


Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2,** and heed all warnings.

This electric fire can be operated via the BUTTON or via the battery-powered REMOTE CONTROL.

Wall mounted Overview

1. Choose a location that is not susceptible to moisture and complies with the minimum clearances.
2. Place the device with the front side down on a soft, flat surface. Remove the wall mounting bracket from the back of the unit by removing the screws (see figure 1).
3. Ensure that the mounting bracket is level and the hooks are facing upward. Use the mounting bracket and a pencil to mark the location where the dowels will be inserted into the wall (see figure 2).
4. Install the dowels into the wall. Then install the bracket to the wall using the supplied screws M4 x 35 mm.
   Hang the fireplace on the mounting bracket (see figure 3).

Fig. 1

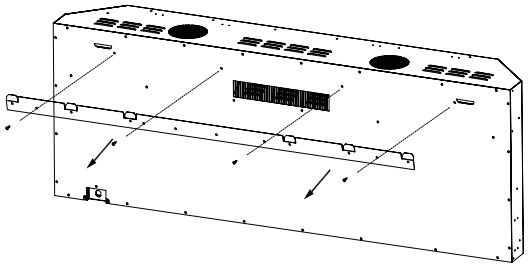

Wall mounting stripe

Fig. 2


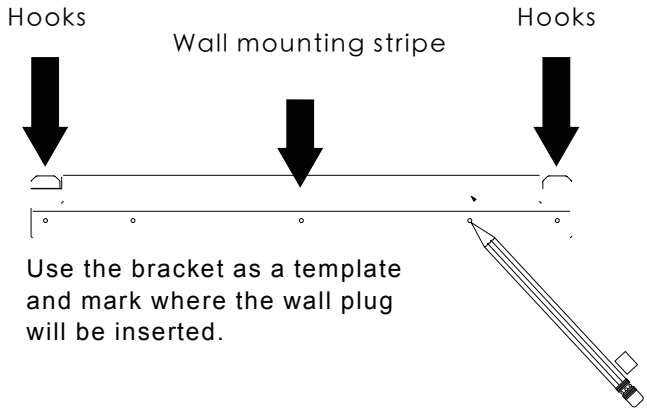


Fig. 3

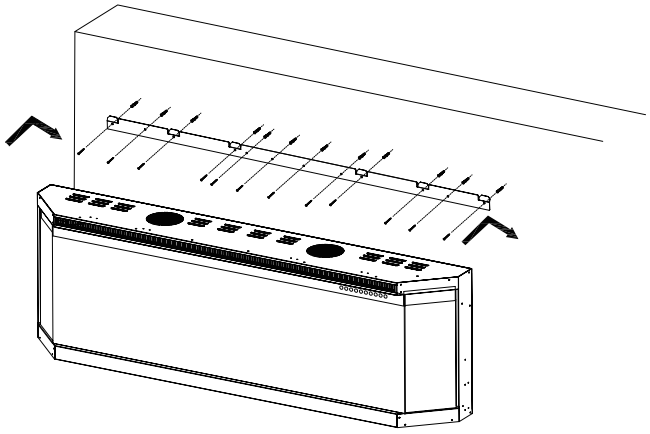

ATTENTION! Keep the removed screws.

5. Align the metal bracket with the location where it will be installed at the bottom of the fireplace. Mark the spot where the bracket touches the wall, and install the dowel. Secure the metal bracket to the bottom of the fireplace using the M4 x 8 mm screw. Use a wall mounting screw to secure the bracket to the wall (see figure 4).
6. Remove the screws located on the upper side of the front glass panel (see figure 5). Keep the screws for reinstalling the glass panel.

Fig. 4


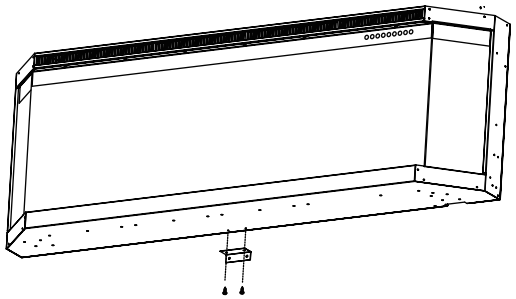


Fig.5

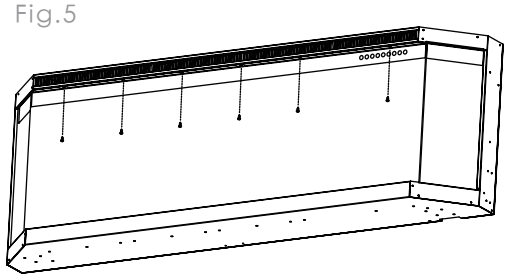

Remove screws

Fig. 6


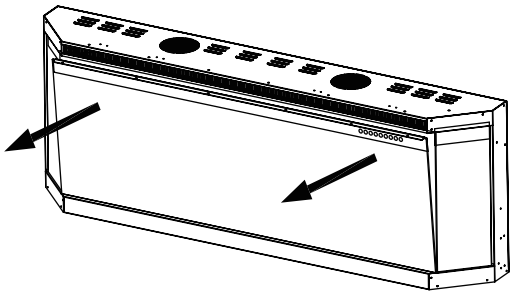


Fig. 7

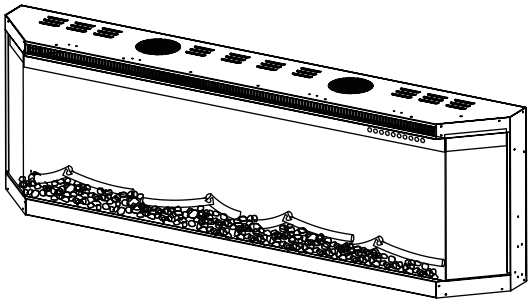


7. Carefully remove the glass panel and place it on a soft, clean surface (see figure 6).
8. Place the crystal stones and the logs in the fireplace (see figure 7).
9. Reinstall the front glass panel using the screws that were removed during step 6. Ensure that the glass panel is fully secured and stable before proceeding.

Button Operation

 power	**ON:** Enables control panel and remote control function. Turns on the flame effect. **OFF:** Disables control panel and remote control function. Turns off the flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions are enabled. 2. Press again, power and all functions turn off. Unit goes to standby.
 heating	**HEATER button:** Turns heater on and off. ***NOTE:*** To prevent overheating, the heater fan will blow out cool air for 20 seconds after the heater turn off. 00, LL, HH will show on the display.	1. Press button, LL (low heat) about 750W. 2. Press button, HH (high heat) about 1500W. 3. Press button, 00, heat function is off.
 temperature	**TEMPERATURE button:** Changes the temperature setting. Setting ranges from 62°F to 84 °F 62,63,64....83,84 will show on the display.	Press button until desired setting is reached.
 flame color	**FLAME button:** Changes the color of the flame effect. 15 color settings: F1, F2, F3..., 16 are shown on the display. "16" appears on the display during automatic flame color changing.	1. Press once to change the color flame effect. 2. Press again until desired setting is reached.
 glue bed color	**Glue bed button:** Changes the color of the glue bed effect. 15 color settings: C1, C2, C3..., 16 are shown on the display. "16" appears on the display during automatic glue bed color changing.	1. Press once to change the color glue bed effect. 2. Press again until desired setting is reached.
 dimmer	DIMMER button: Adjust the brightness of the flame effect. **5 brightness settings:** L5,L4,L3....L1.	1. Press once to change flame color brightness. 2. Press again until desired setting is reached; L1 is dimmest, L5 is brightest.
 sound	SOUND button: Turns the crackling sound on or off. Two different sounds. Three volume levels are available: n1, n2, n3 and s1,s2,s3 appear on the display. "n1" and "s1" are the minimum volume, "n3" and "s3" are the maximum.	Press the button until the desired setting is reached. The LED display shows the setting. The setting "n0" and "s0" turns off sound.
 bluetooth	Remote control volume "+" and "-" to adjust the bluetooth speaker's volume. Volume range 0-10.	Press once to turn on the bluetooth.
 timer	**TIMER button:** Controls the timer settings Settings range from 1 hour to 8 hours. 0H,1H,2H....8H will show on the display.	Press button until desired setting is reached. LED display will show the setting. When time reaches the selected setting, the unit will automatically turn off.

Remote control operation

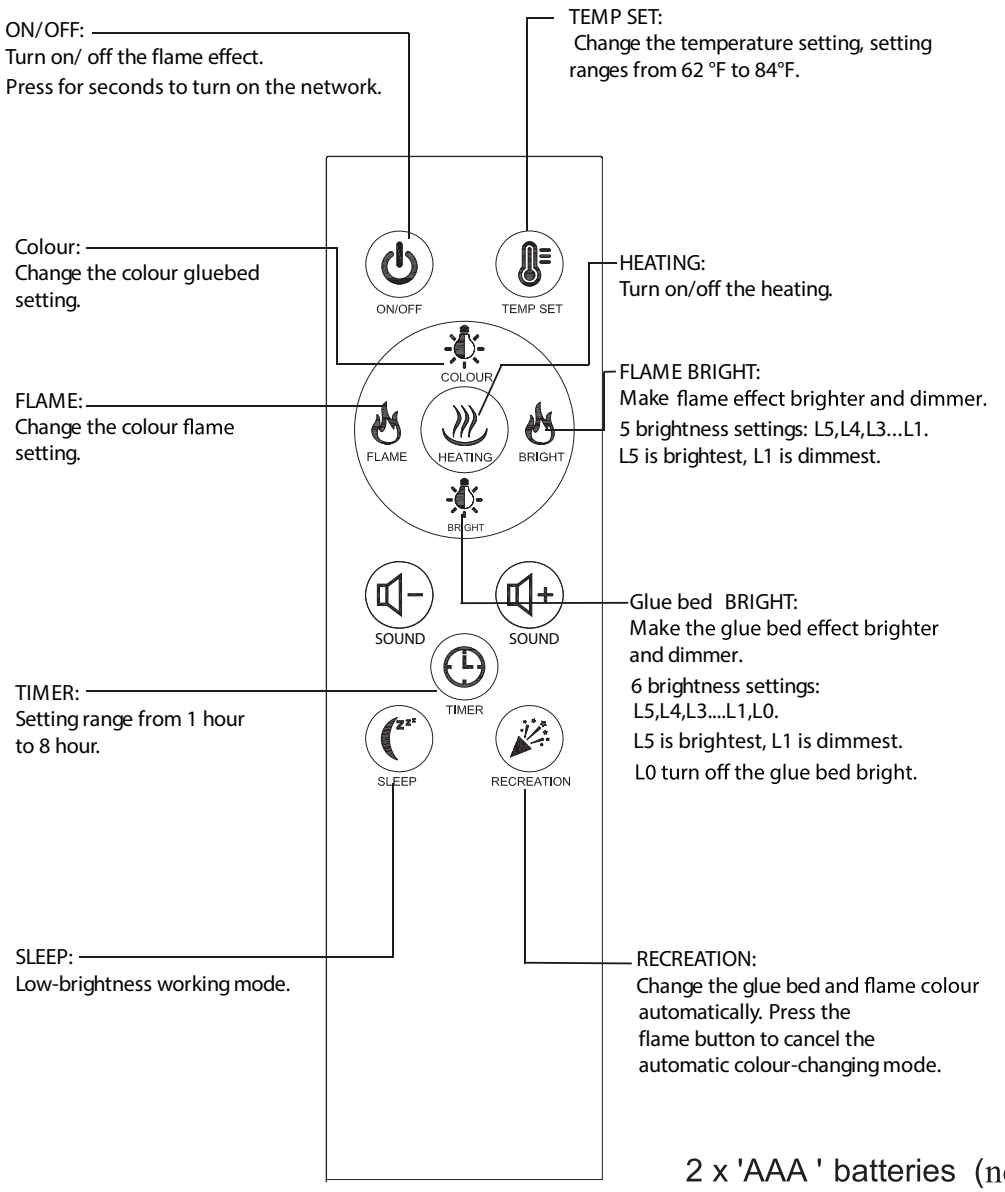

2 x 'AAA ' batteries (not included)

Care and Maintenance

cleaning

ALWAYS turn the fireplace OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do So could result in electric shock, fire, or personal injury.

NEVER immerse in water or spray with water. Doing So could result in electric shock, fire, or personal injury·

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- DO NOT Use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Maintenance

Risk of electric shock! DO NOT OPEN any panels! No user-serviceable parts inside!

ALWAYS turn the fireplace **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.

Electrical and Moving Parts:

- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- Store fireplace in a clean dry place when not in use.

WARNING! NO SERVICING of the internal or electrical parts should be performed by the consumer. Do not service the unit yourself.



WEEE:

Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.