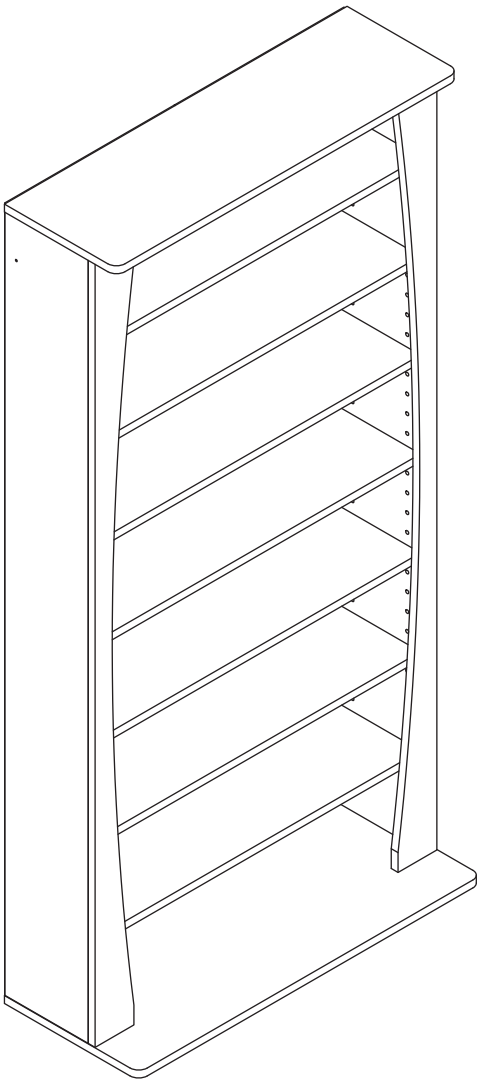


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

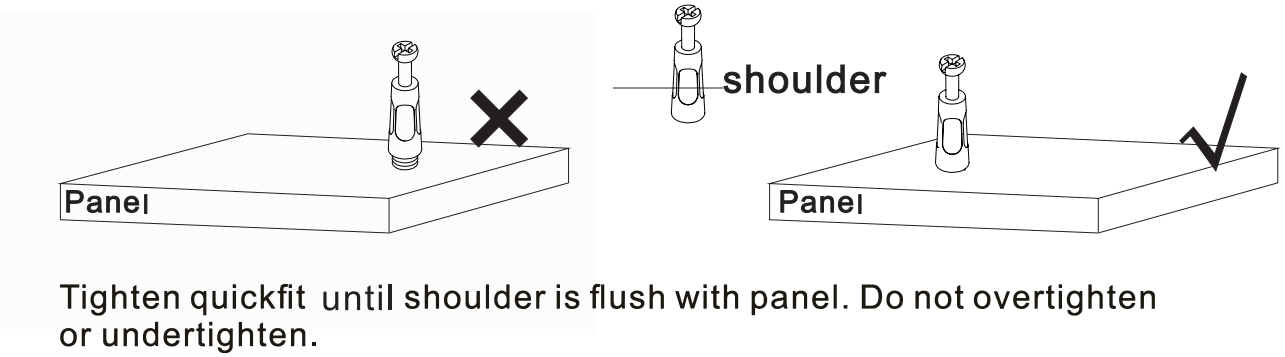


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

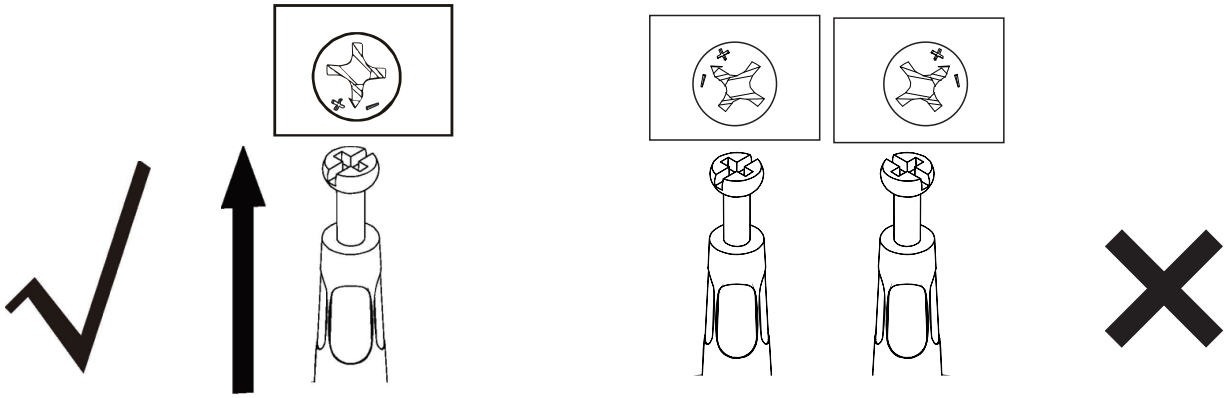


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

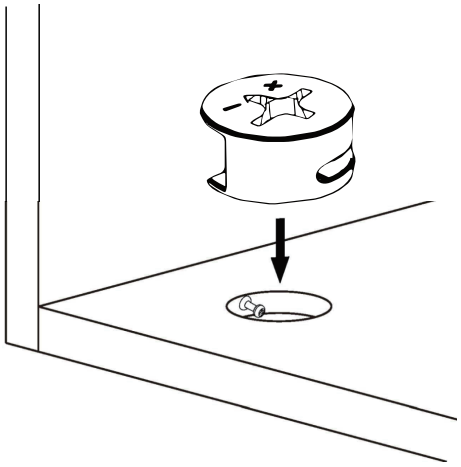


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

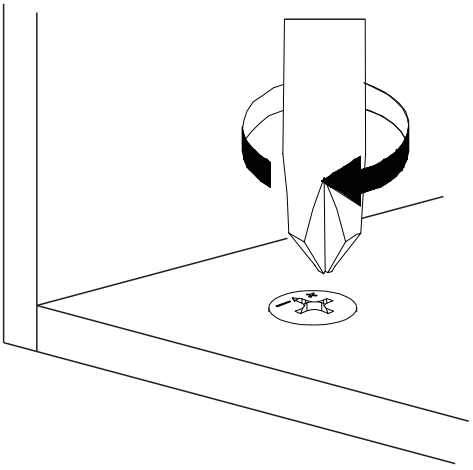


Turn cam lock clockwise to tighten.


A x1

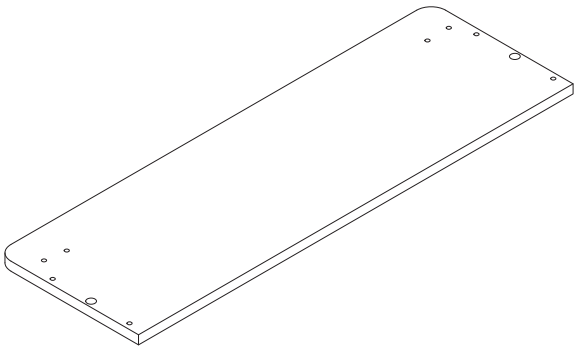

B x1

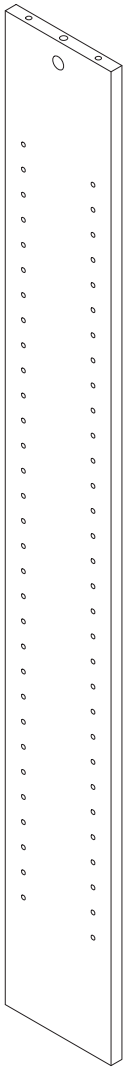


C x1

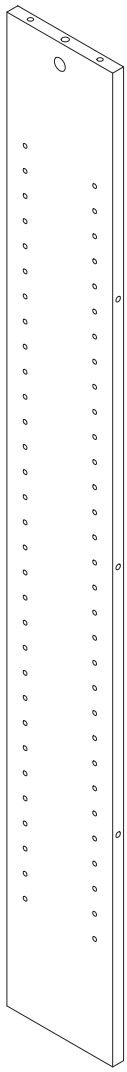


D x2




E x1

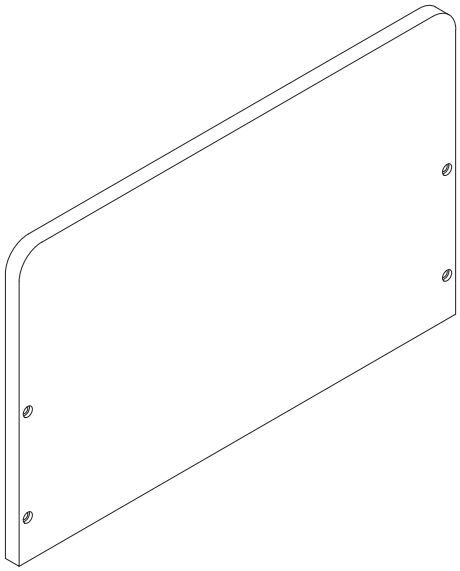





F x7

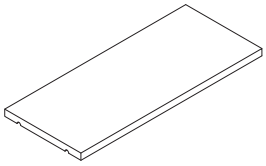


G x1

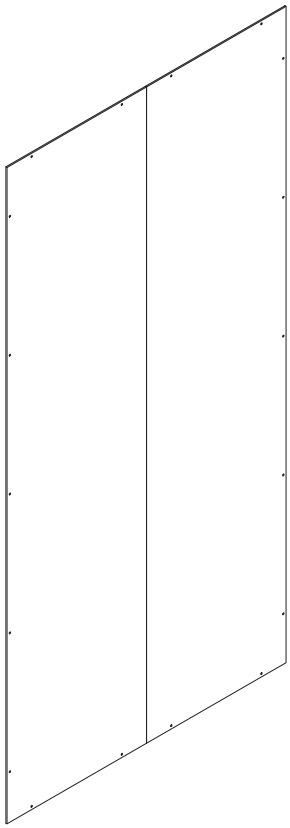


Hardware List

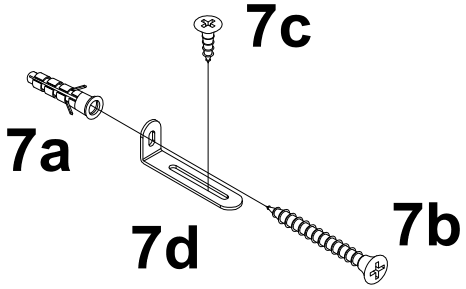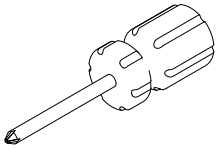
①		Ø6*34mm	2 pcs
②		Ø15*9.5mm	2 pcs
③		Ø6*30mm	18+1 pcs
④		Ø4*40mm	4 pcs
⑤			18+1 pcs
⑥			28+2 pcs
⑦			2 sets
			1 pc

Explosion Diagram

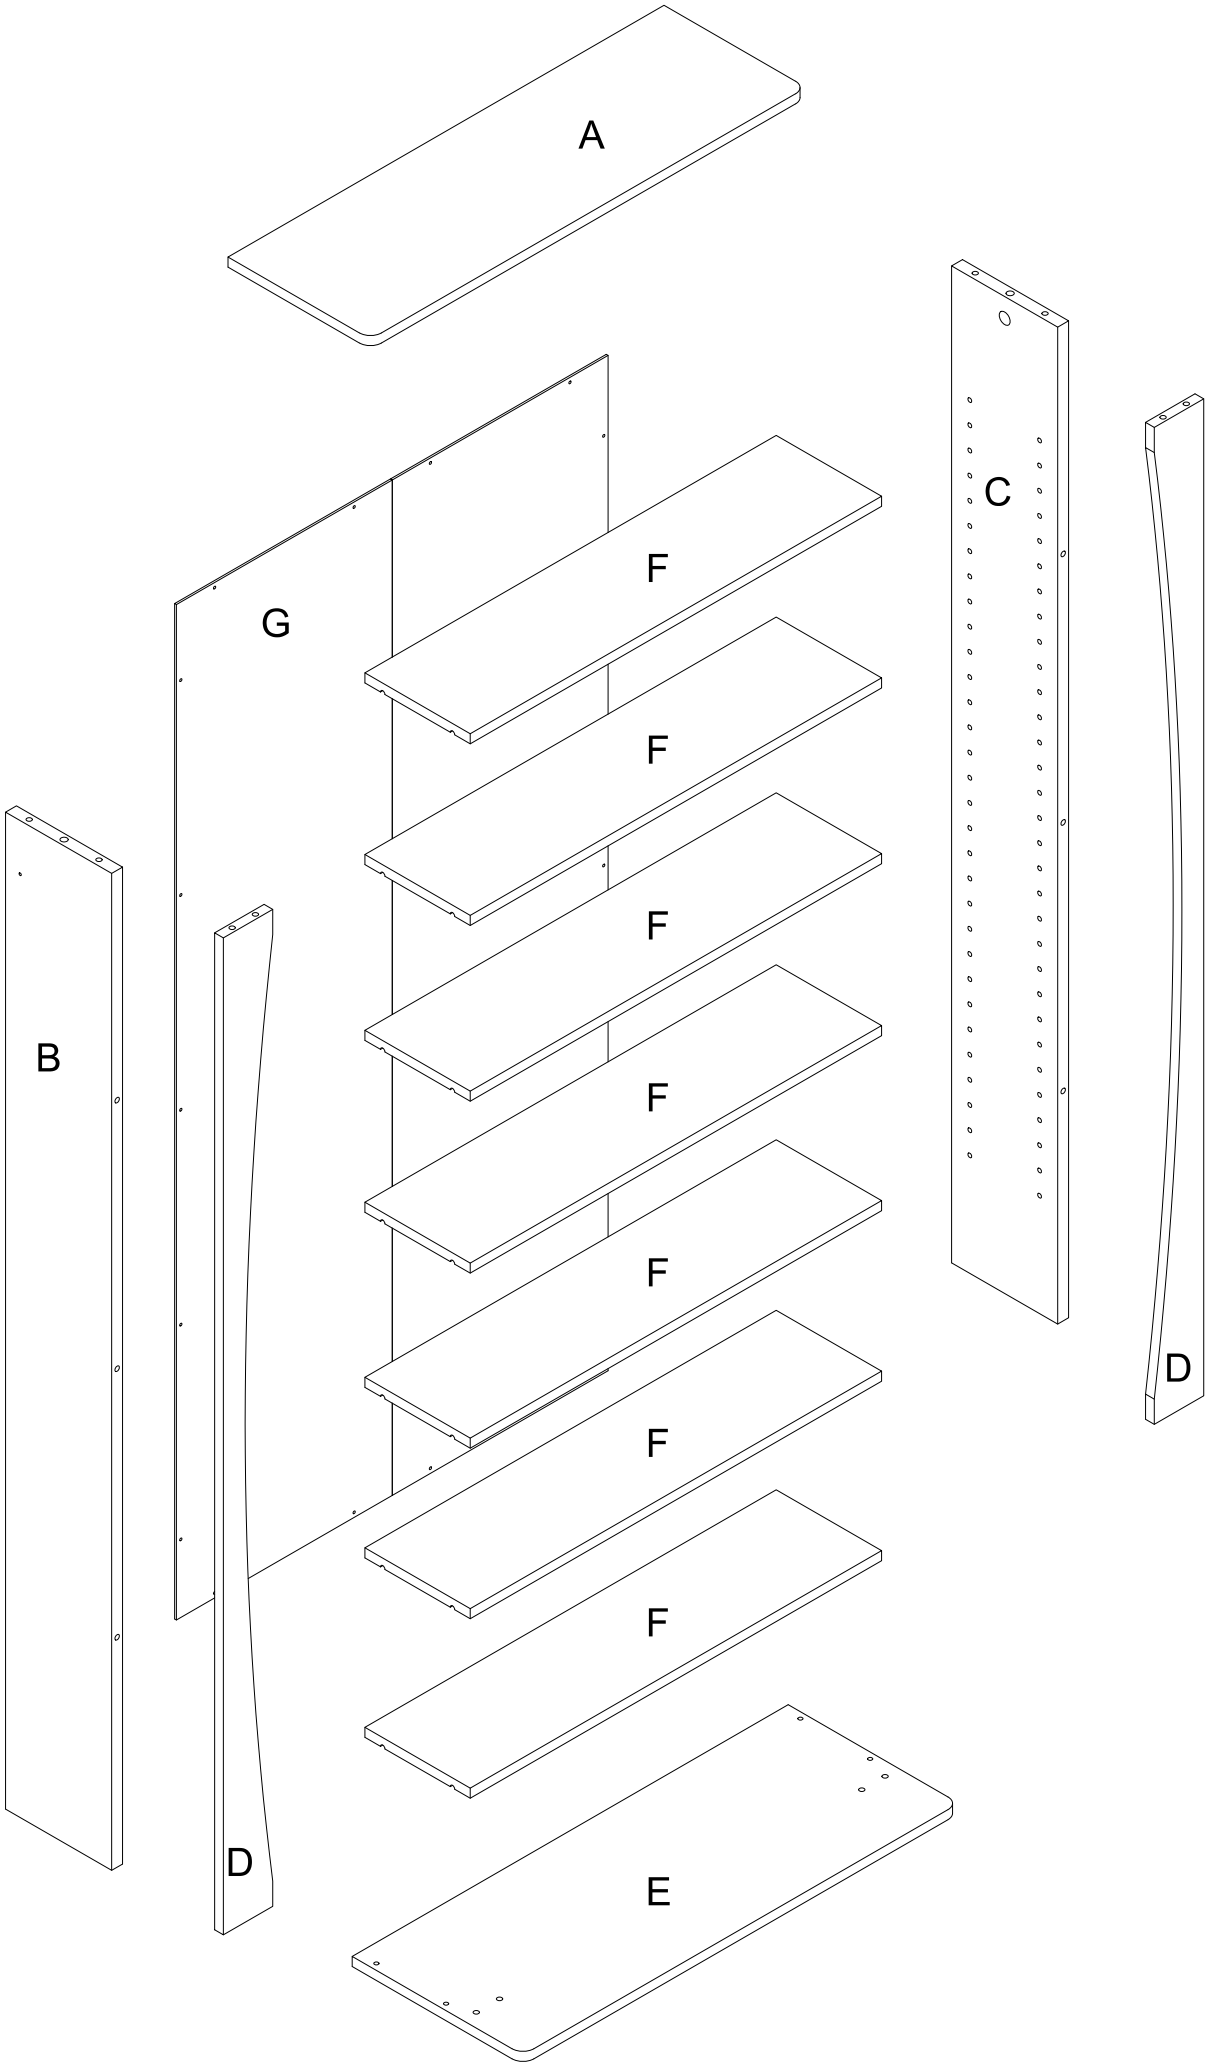




STEP 1

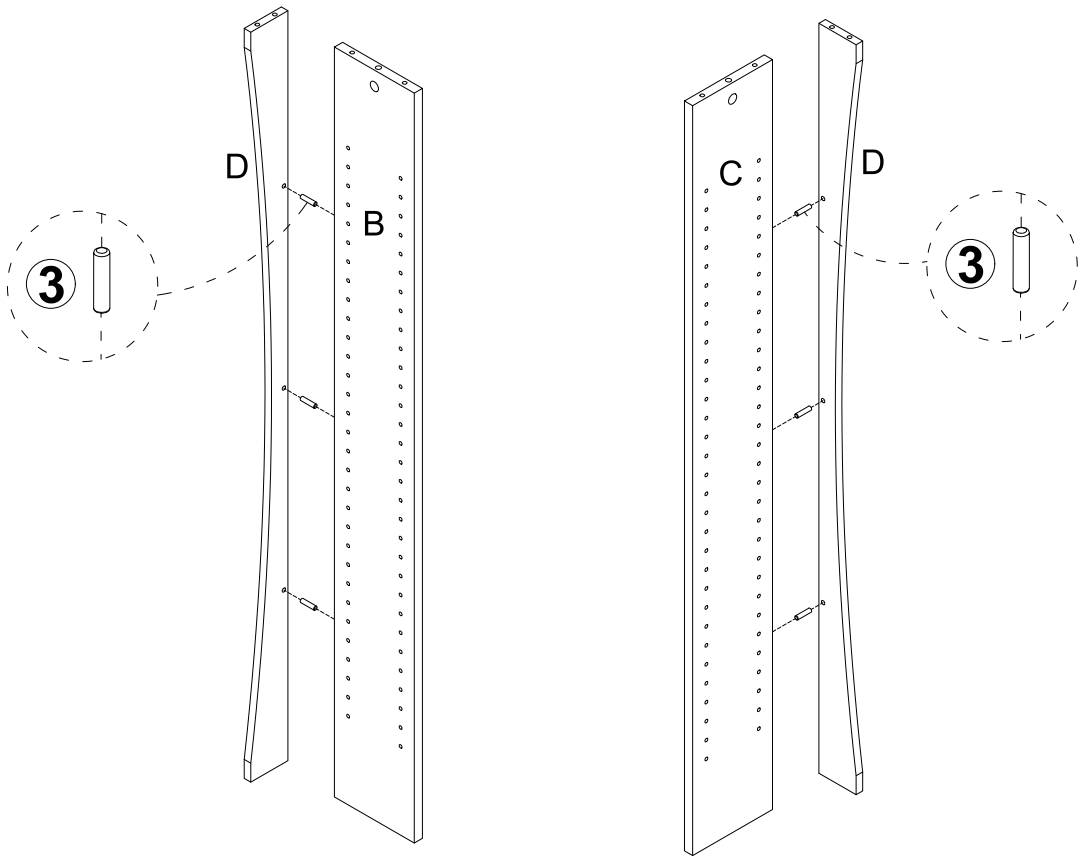


	③x6pcs

STEP 2

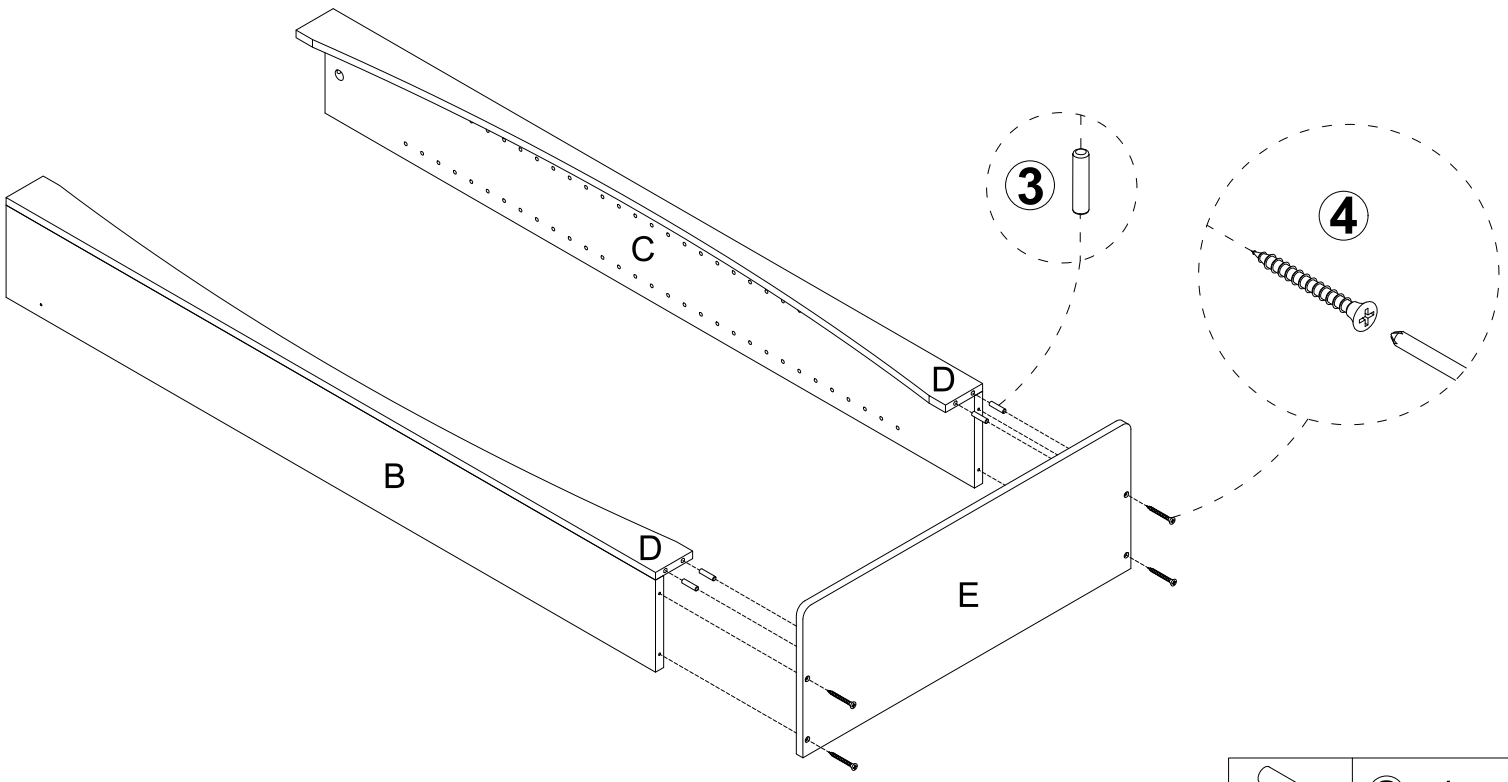


	③x 4pcs
	④x 4pcs

STEP 3

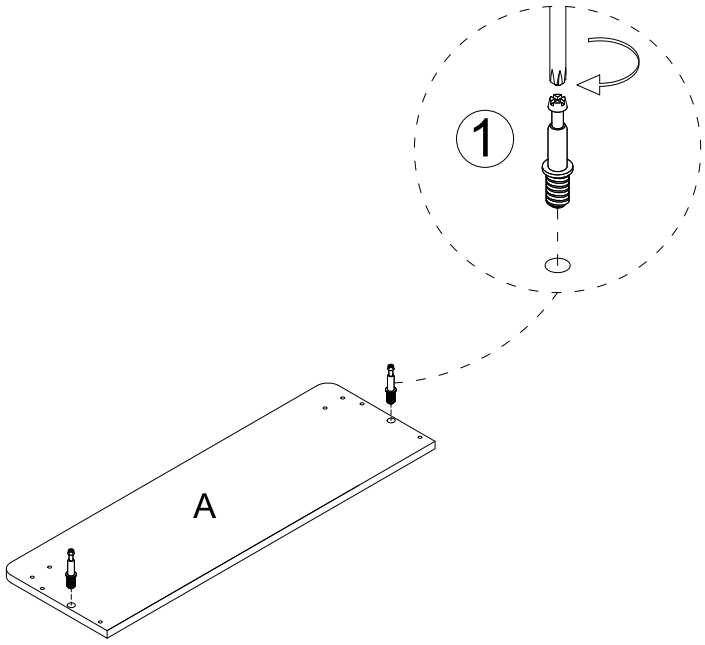


	①x 2pcs


STEP 4

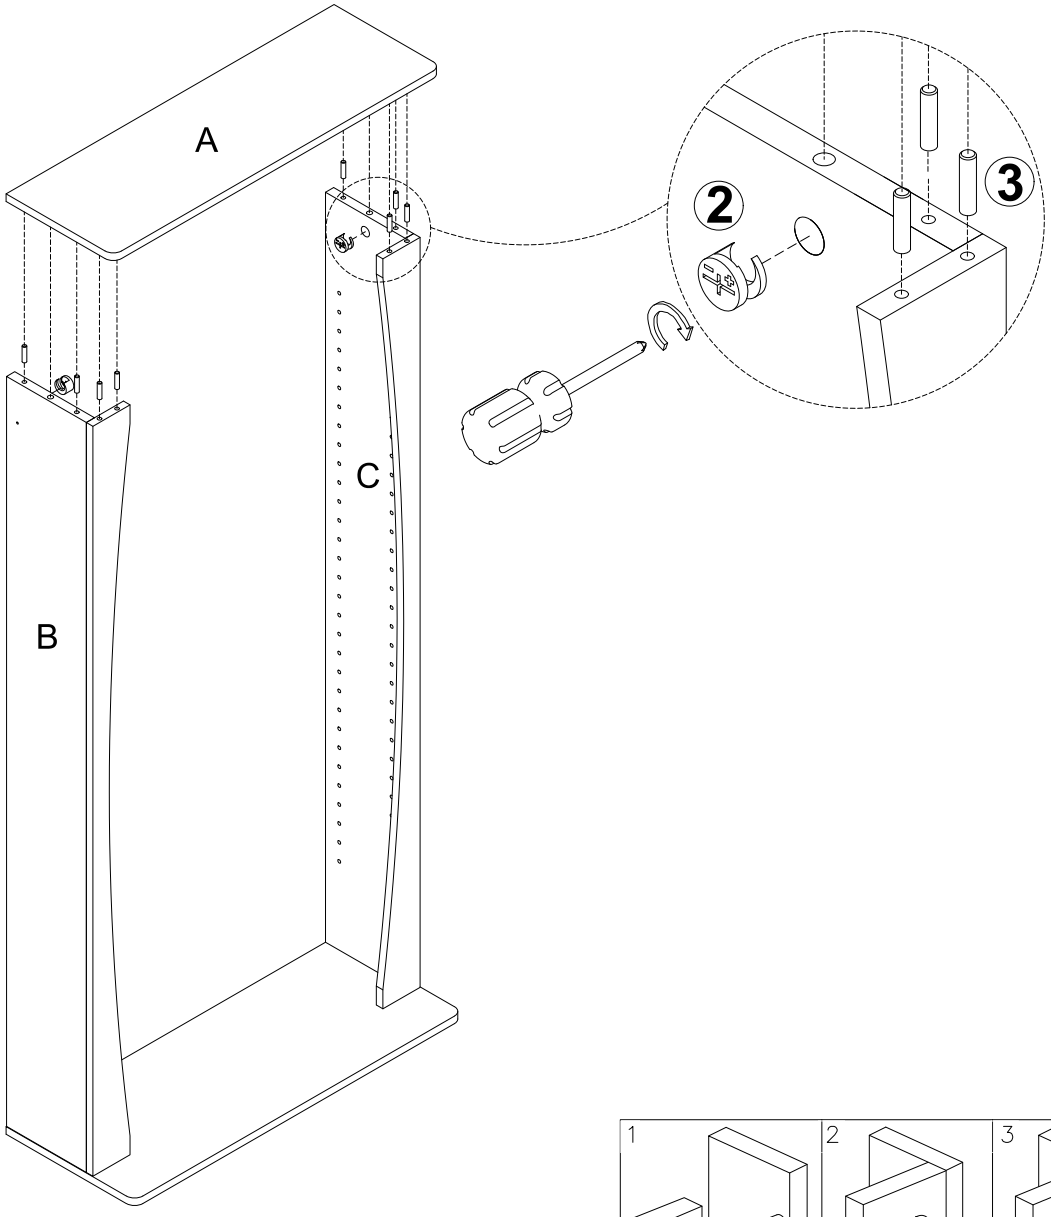

	③x 8pcs
	②x 2pcs

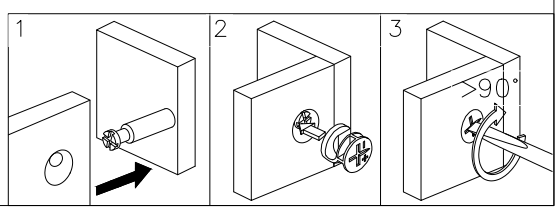


STEP 5

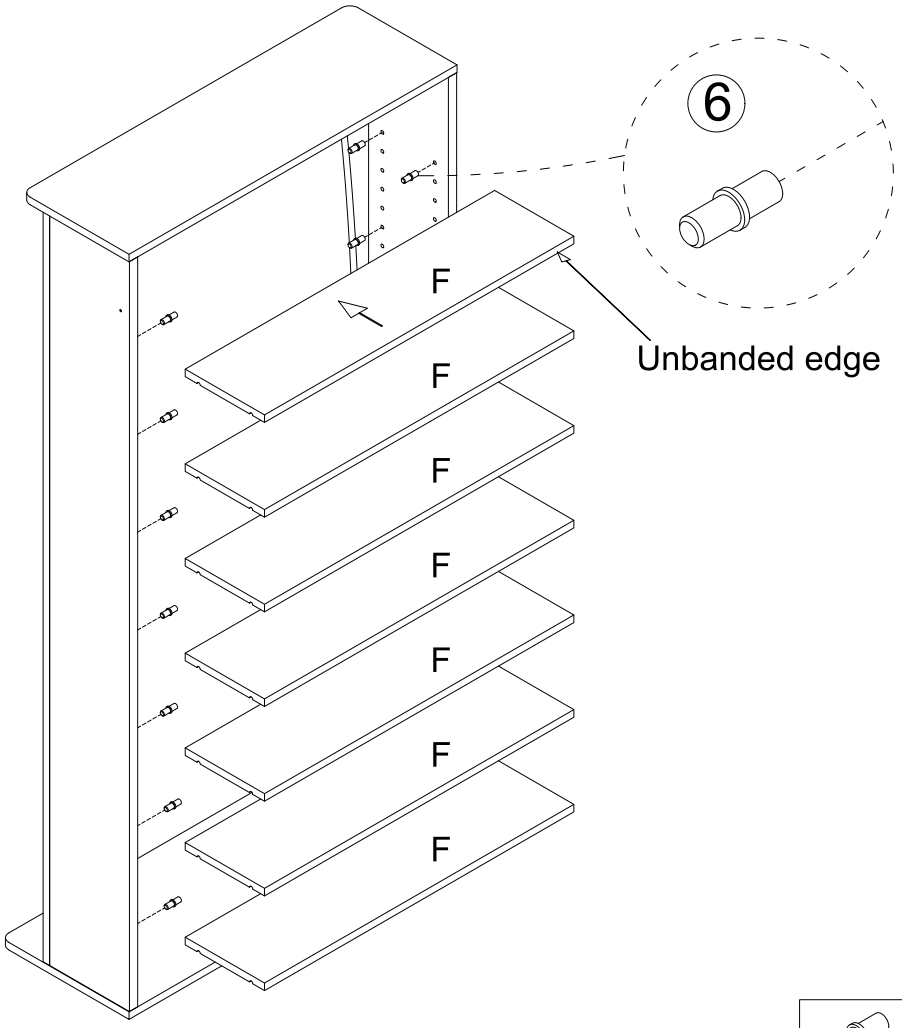



⑥x 28pcs

STEP 6

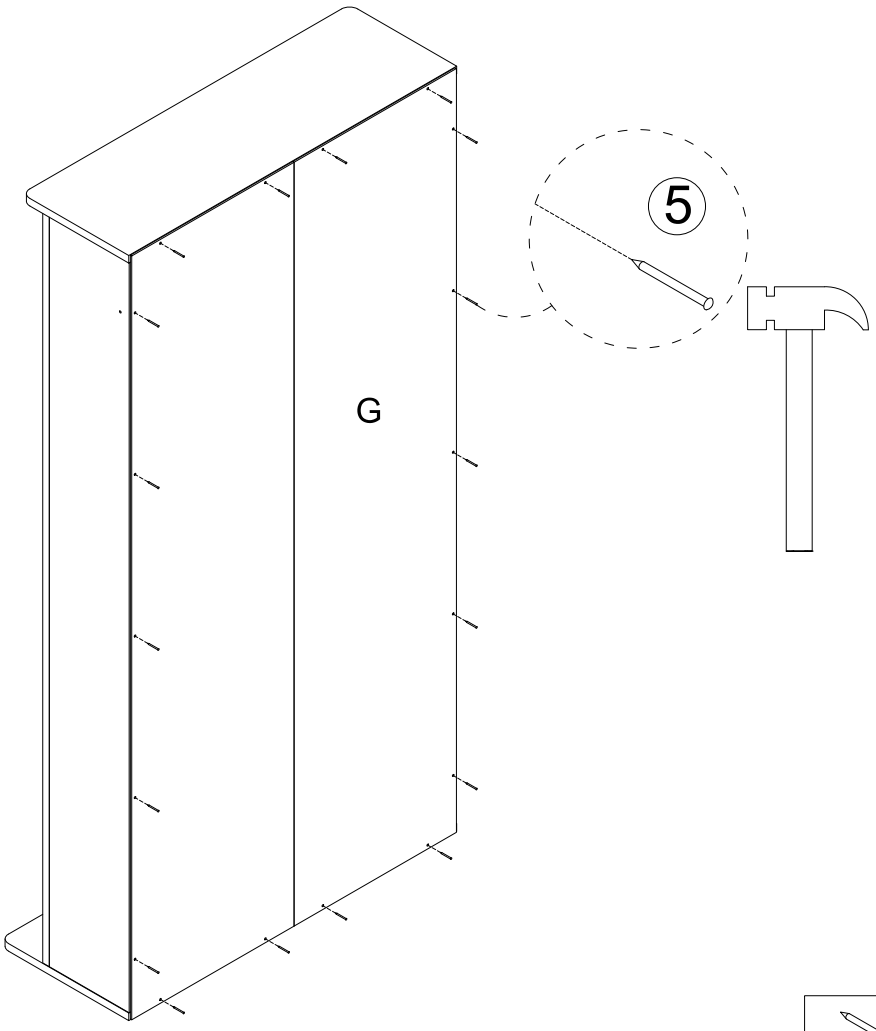





⑤x 18pcs

STEP 7


Note: Put the anti-tip device 7d on the side panel, near the back side, and fix it with a screw 7c.

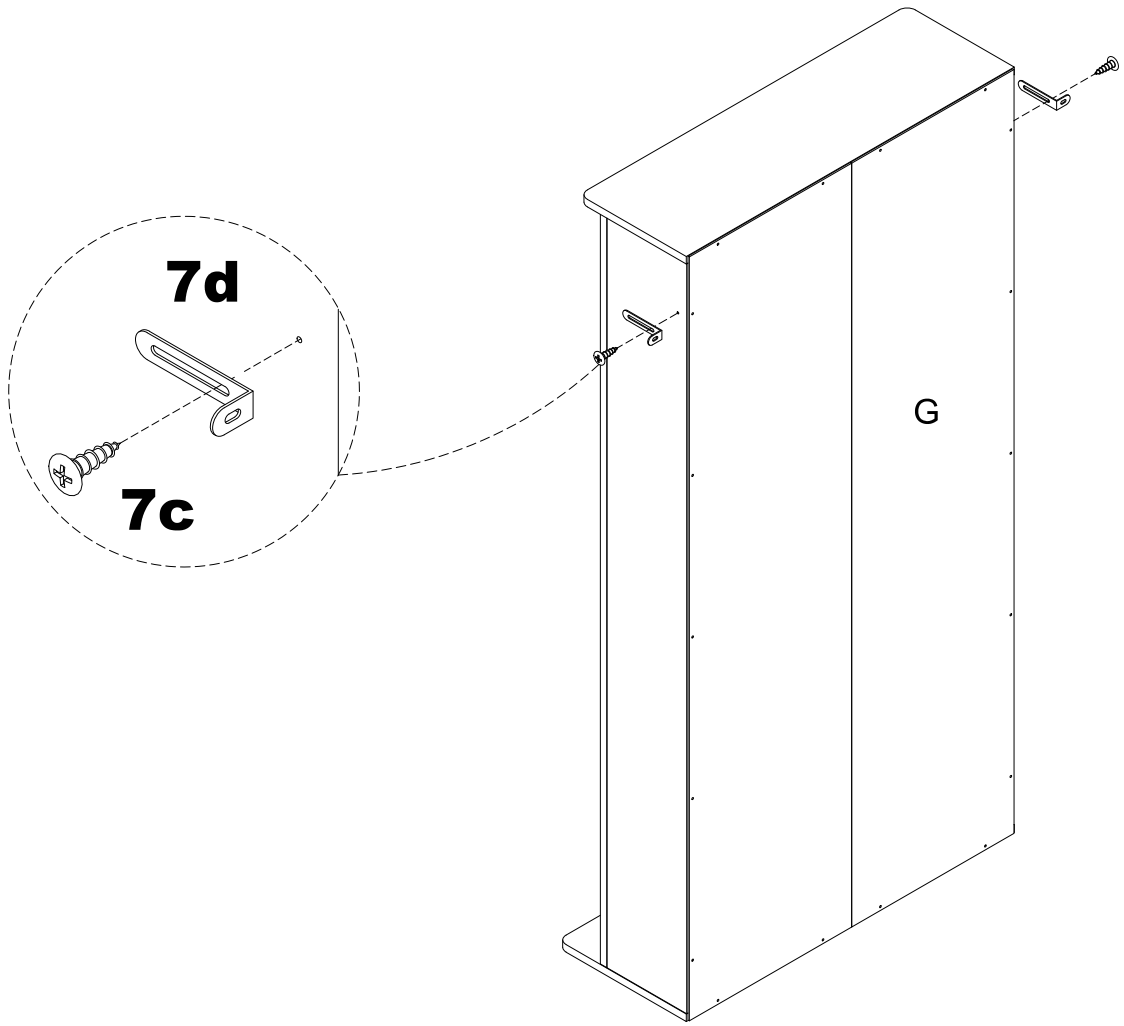

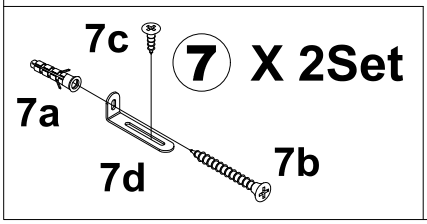


STEP 8

WARNING
Serious or fatal injuries can occur from furniture tipping over.To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

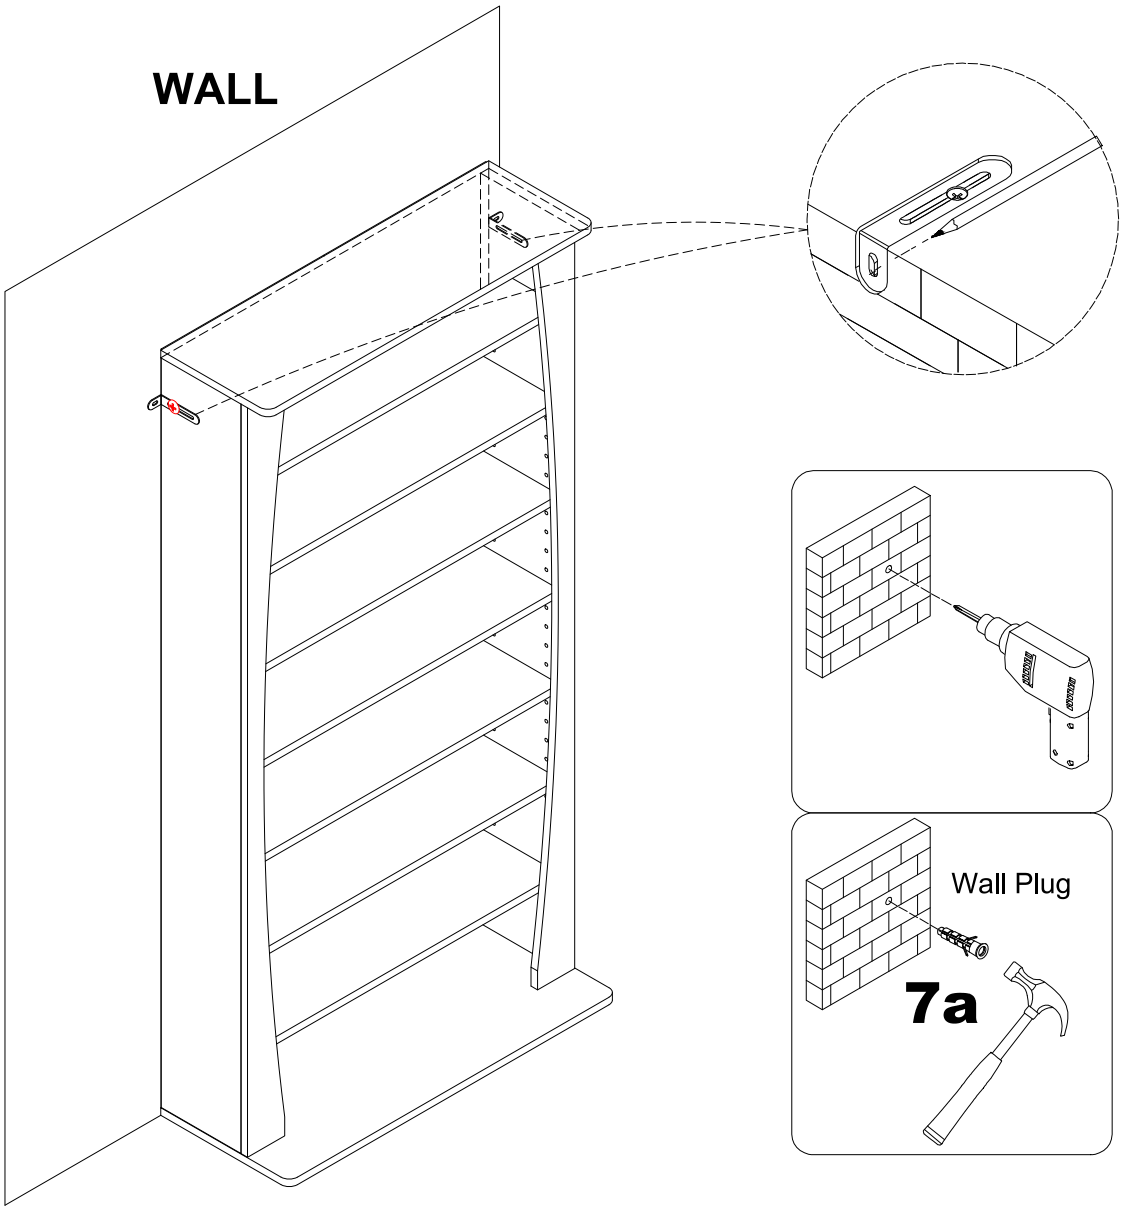

Note: Follow step
Drill a hole in the wall, then hammer the 7a into the wall with a hammer.

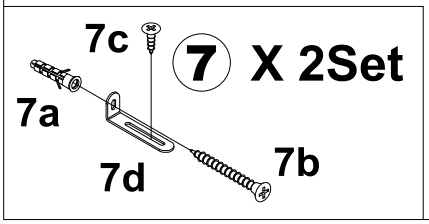

STEP 9

Note:Follow step
Link 7d and 7a with a 7b using a screwdriver, and assembly it tightly.

