

INSTALLATION
Product Manual

Version: 750026US-01-26A-AA

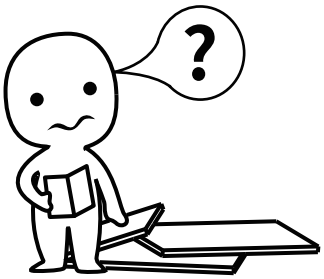


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

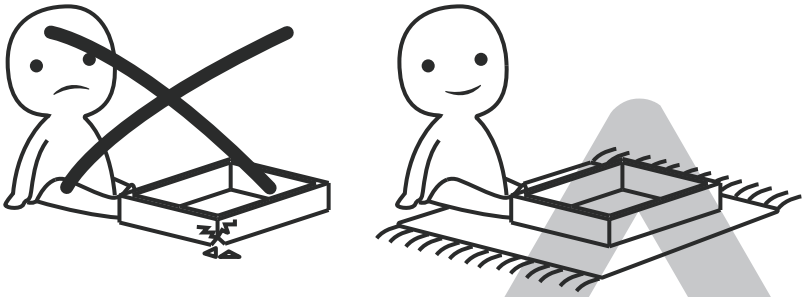


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

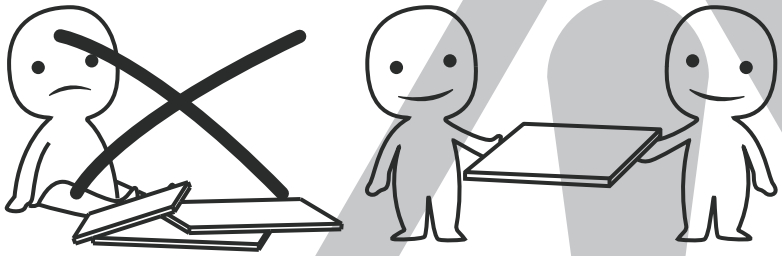

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

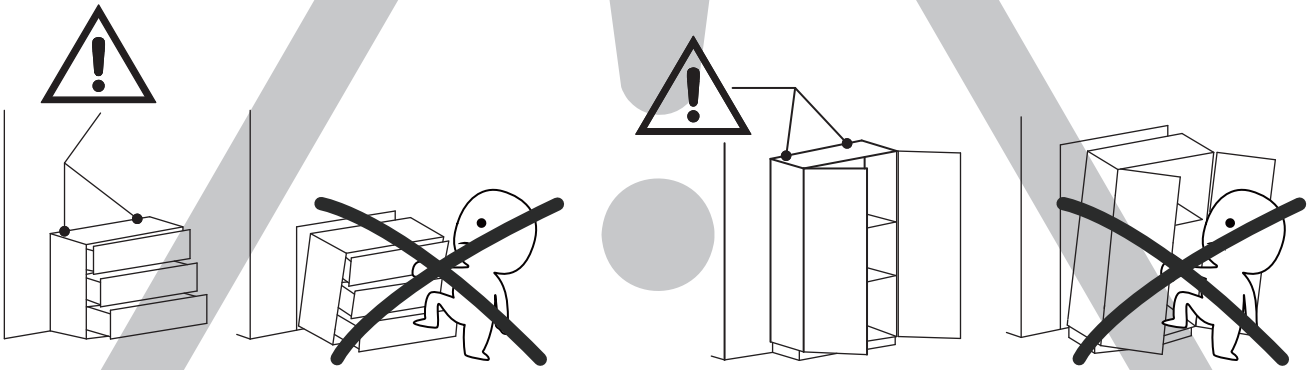

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




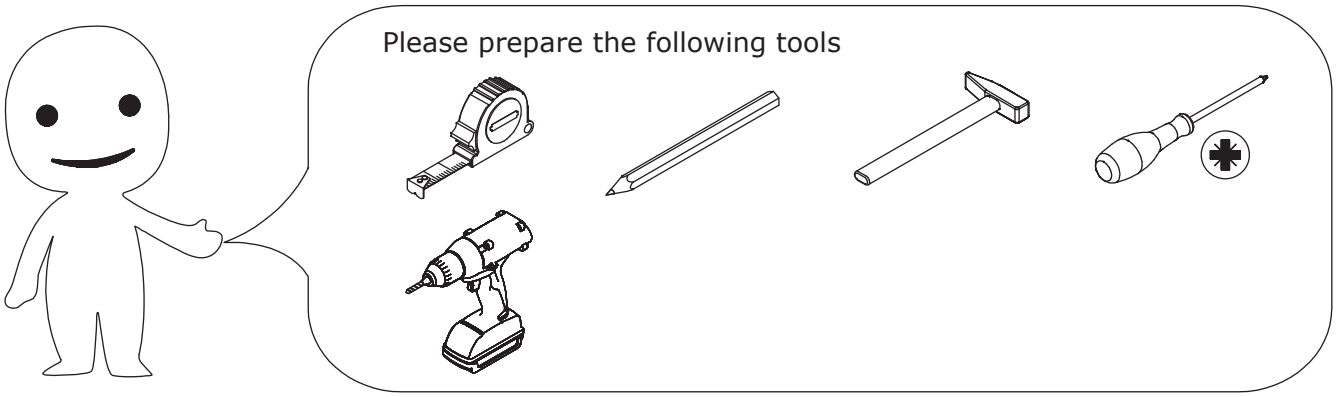




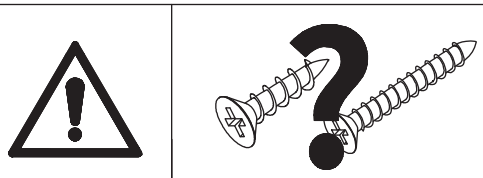






When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

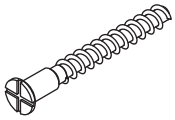
A x 54	B x 54	C x 50	D x 54	E x 8
 CRB1595A	 CRA0635B	 CRF0630A		 CRC0540A

F x 34	G x 30	H x 2	J x 2	K x 1
 CRD0314A	 CRD3514A	 CRE0316A	 CRG0625A	 M6

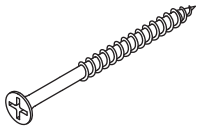
L x 2	M x 2	N x 2	P x 2	Q x 1
		 CRD0580A	 CRE0420A	

R x 2	S x 18	T x 1	U x 1	V x 2
				

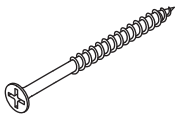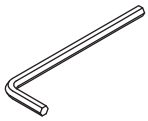W x 4	X x 2	Y x 2	Z x 2	AA x 20
	 CRD0468A		 M4	

AB x 1
 M3

AC x 1
 AC-1  AC-2  AC-3  AC-4  AC-5  AC-6  AC-7

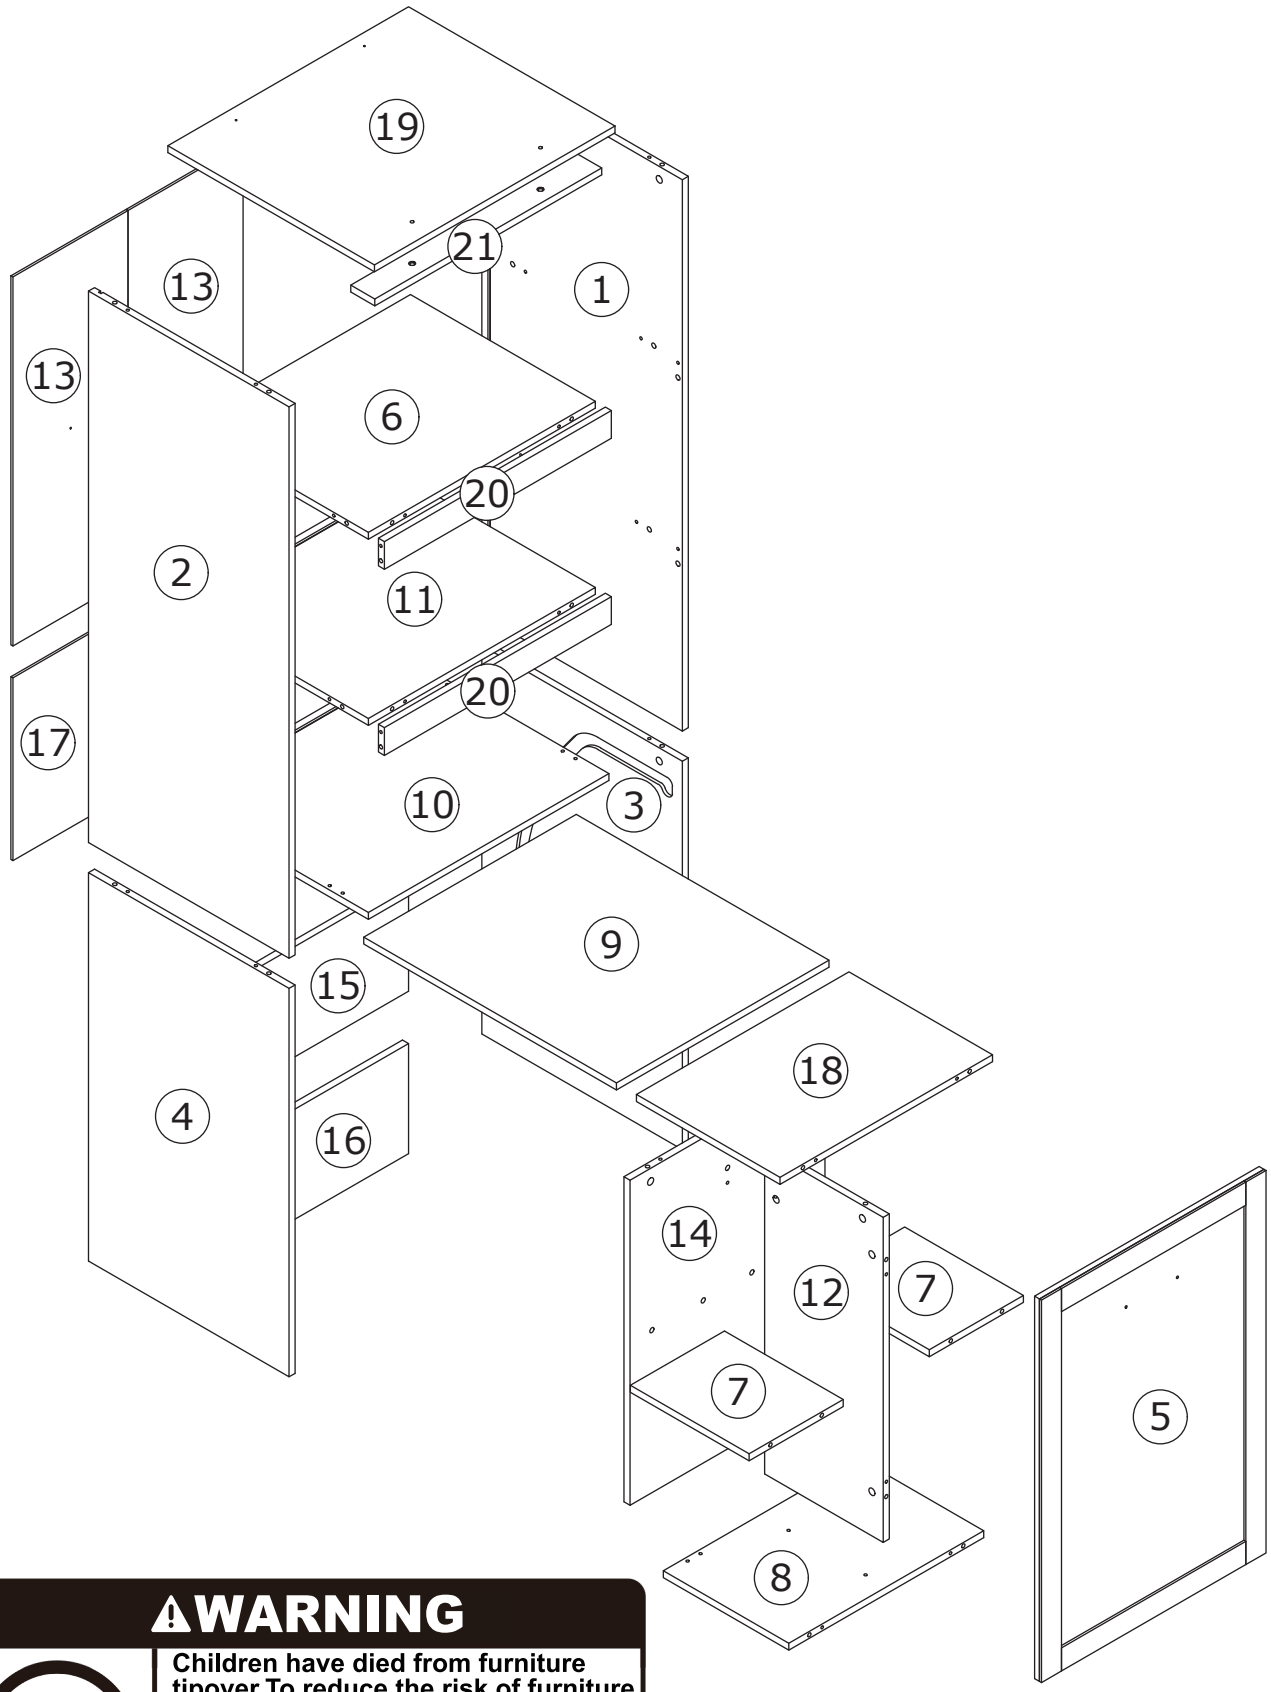

⚠WARNING







Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

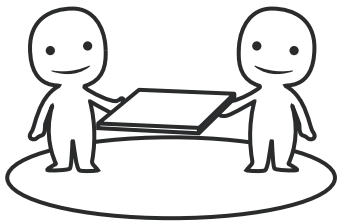


ASSEMBLED BY 2 ADULTS

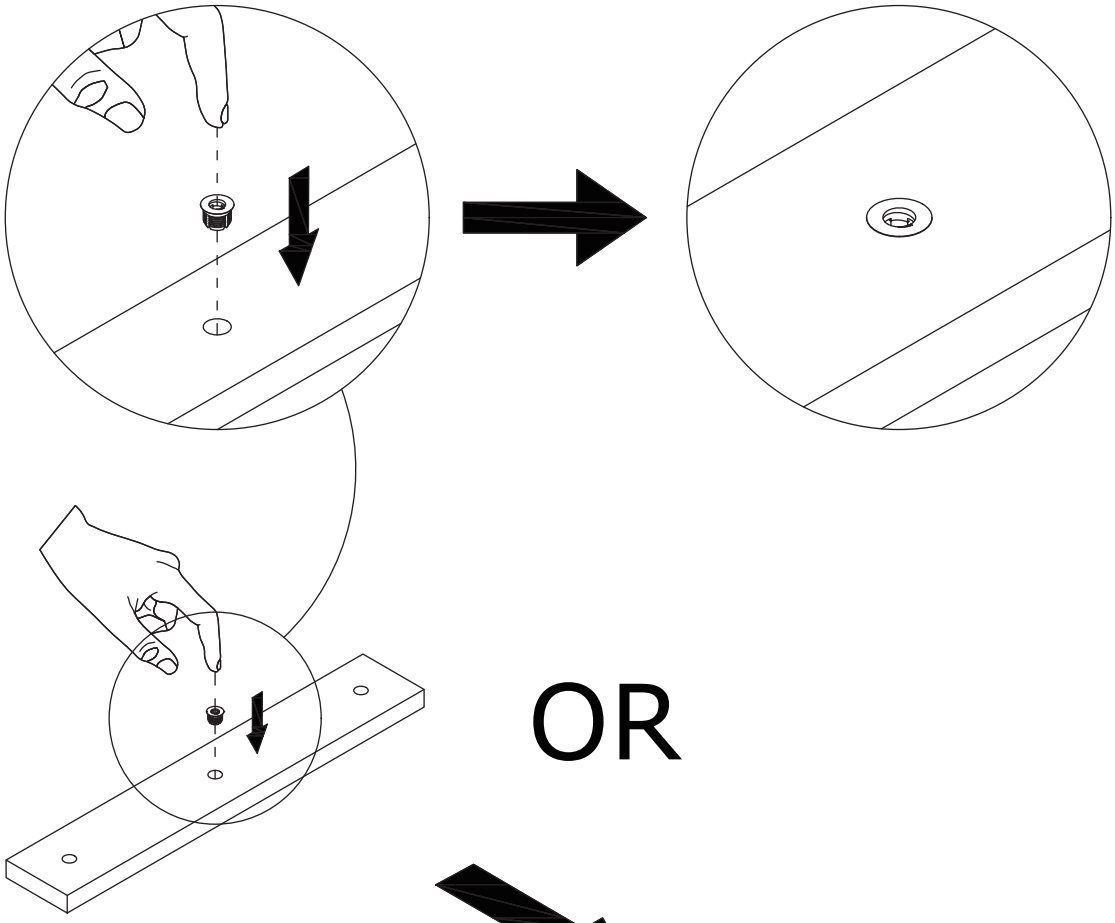
OR

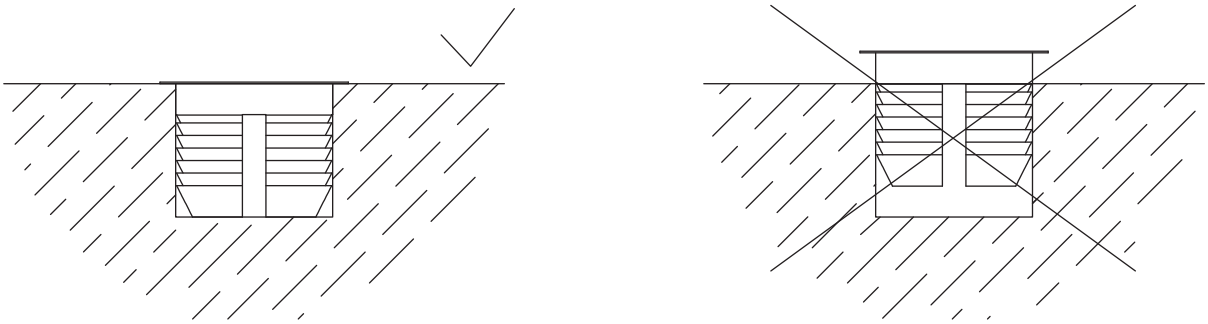


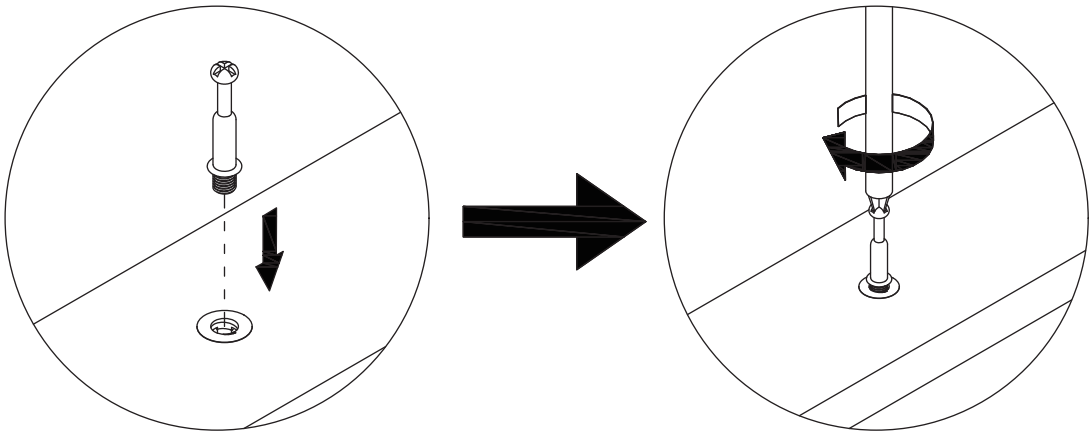



1


J x 2	Z x 1	
		
CRG0625A	M4	

Secure Panel 19 to Panel 21 with screws (J).

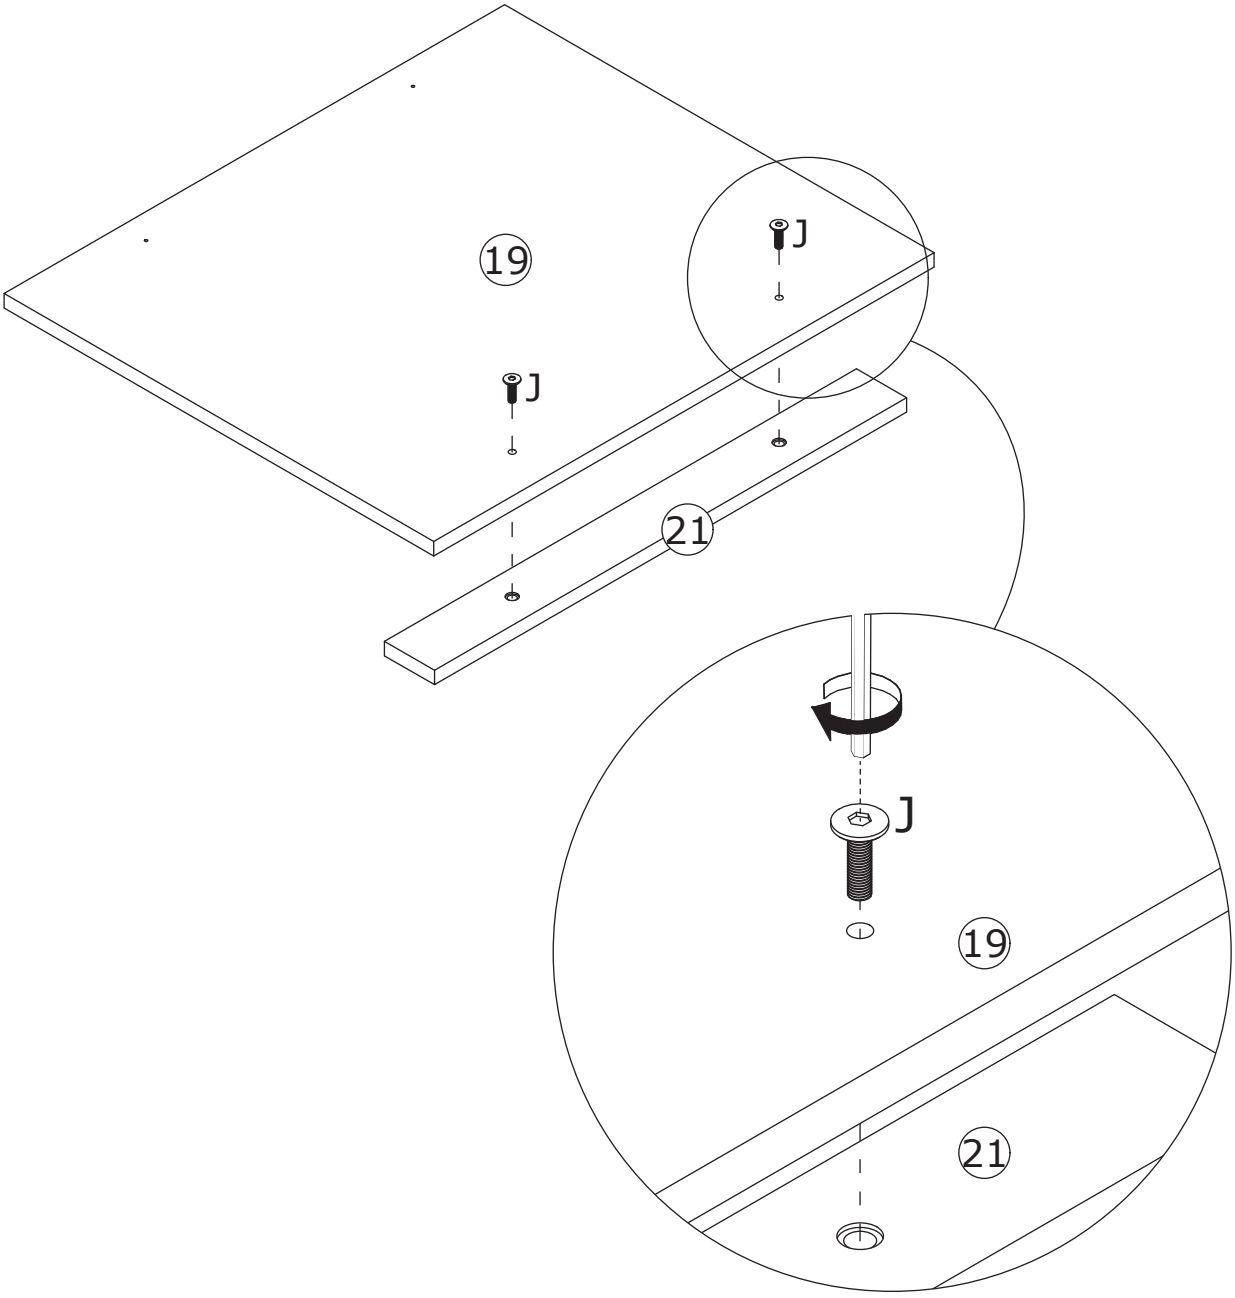


2



B x 8	D x 8	
 CRA0635B		

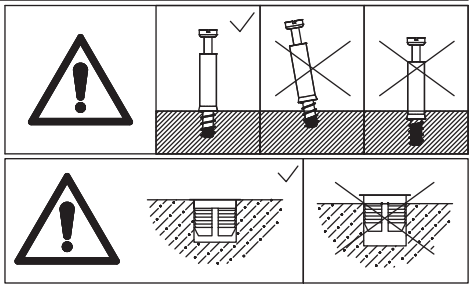


Insert threaded insert (D) into the pre-drilled holes of Panels 19 and 20, and fasten cam screw (B) into the threaded inserts.

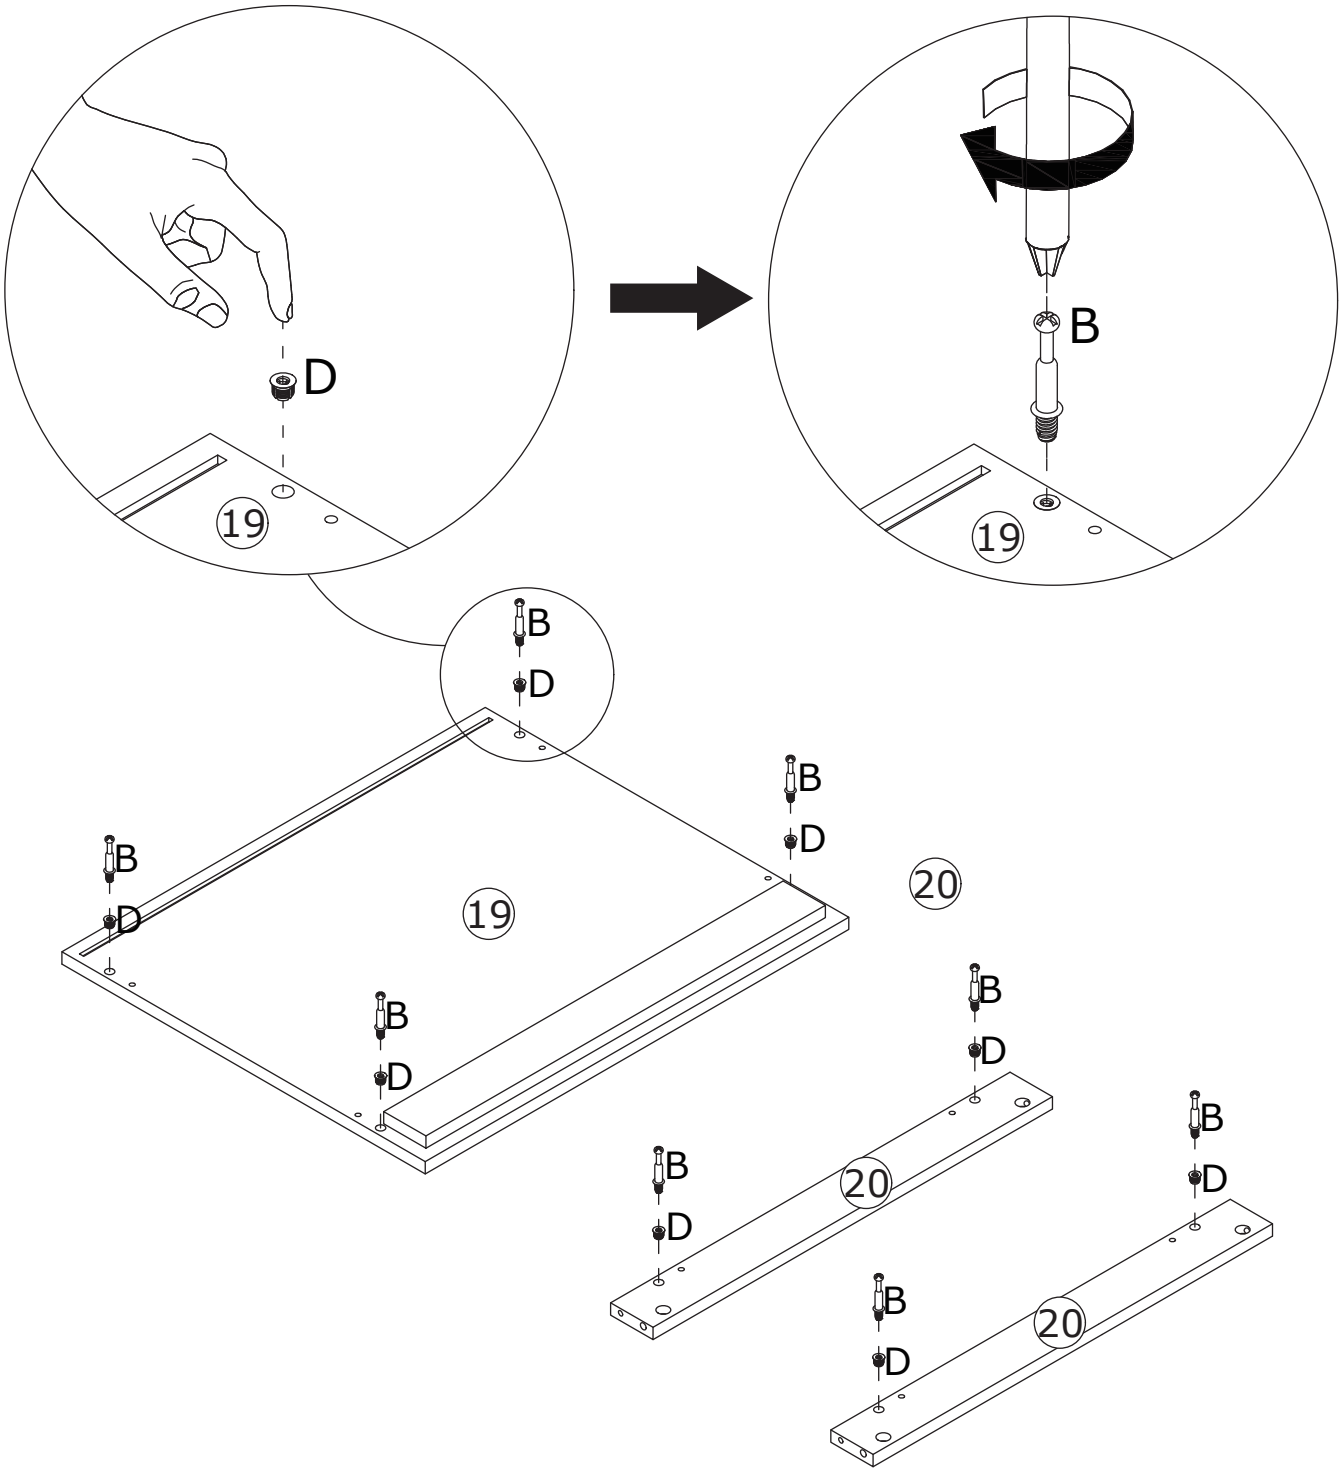



3

B x 12	D x 12	
 CRA0635B		


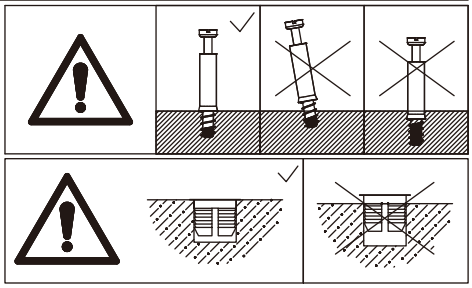



Insert threaded insert (D) into the pre-drilled holes of Panels 1 and 2, and fasten cam screw (B) into the threaded inserts.

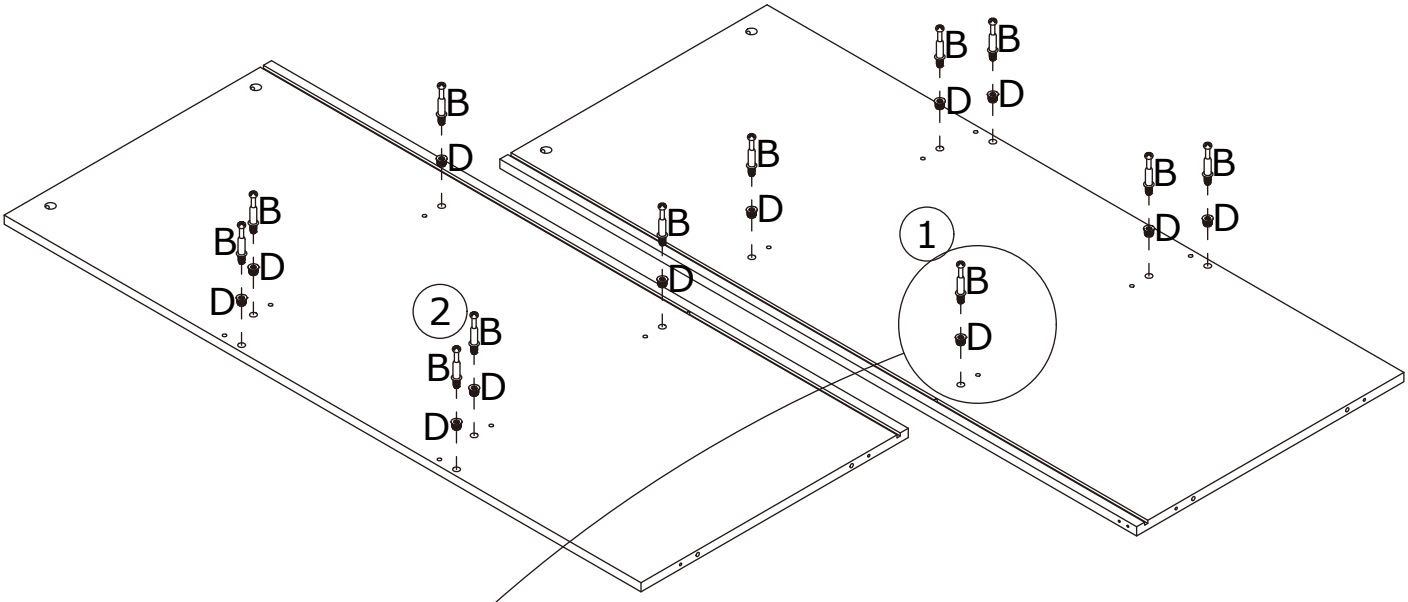

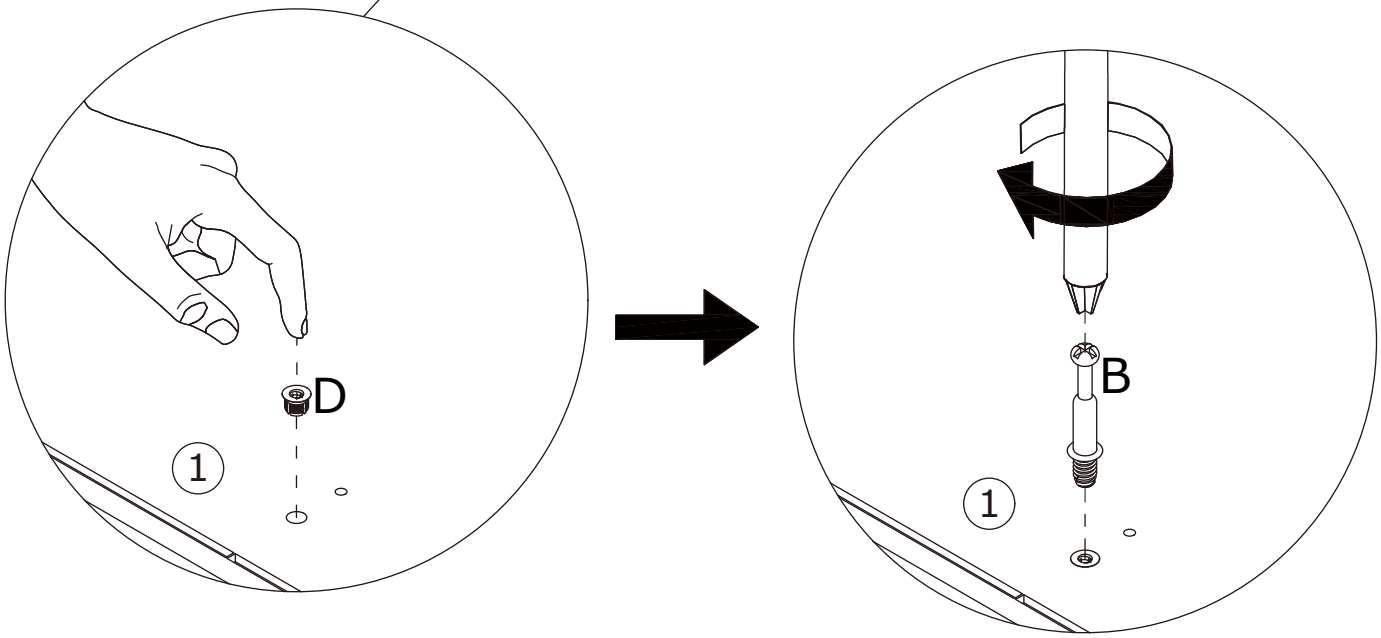


4



A x 4	C x 4	
 CRB1595A	 CRF0630A	

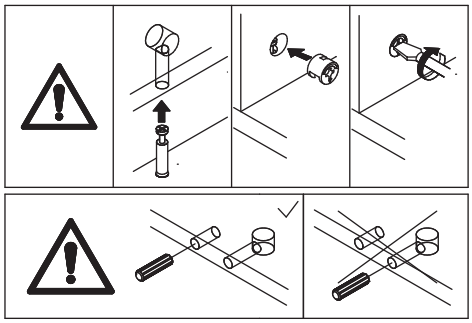


Connect Panel 20 to Panels 6 and 11 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

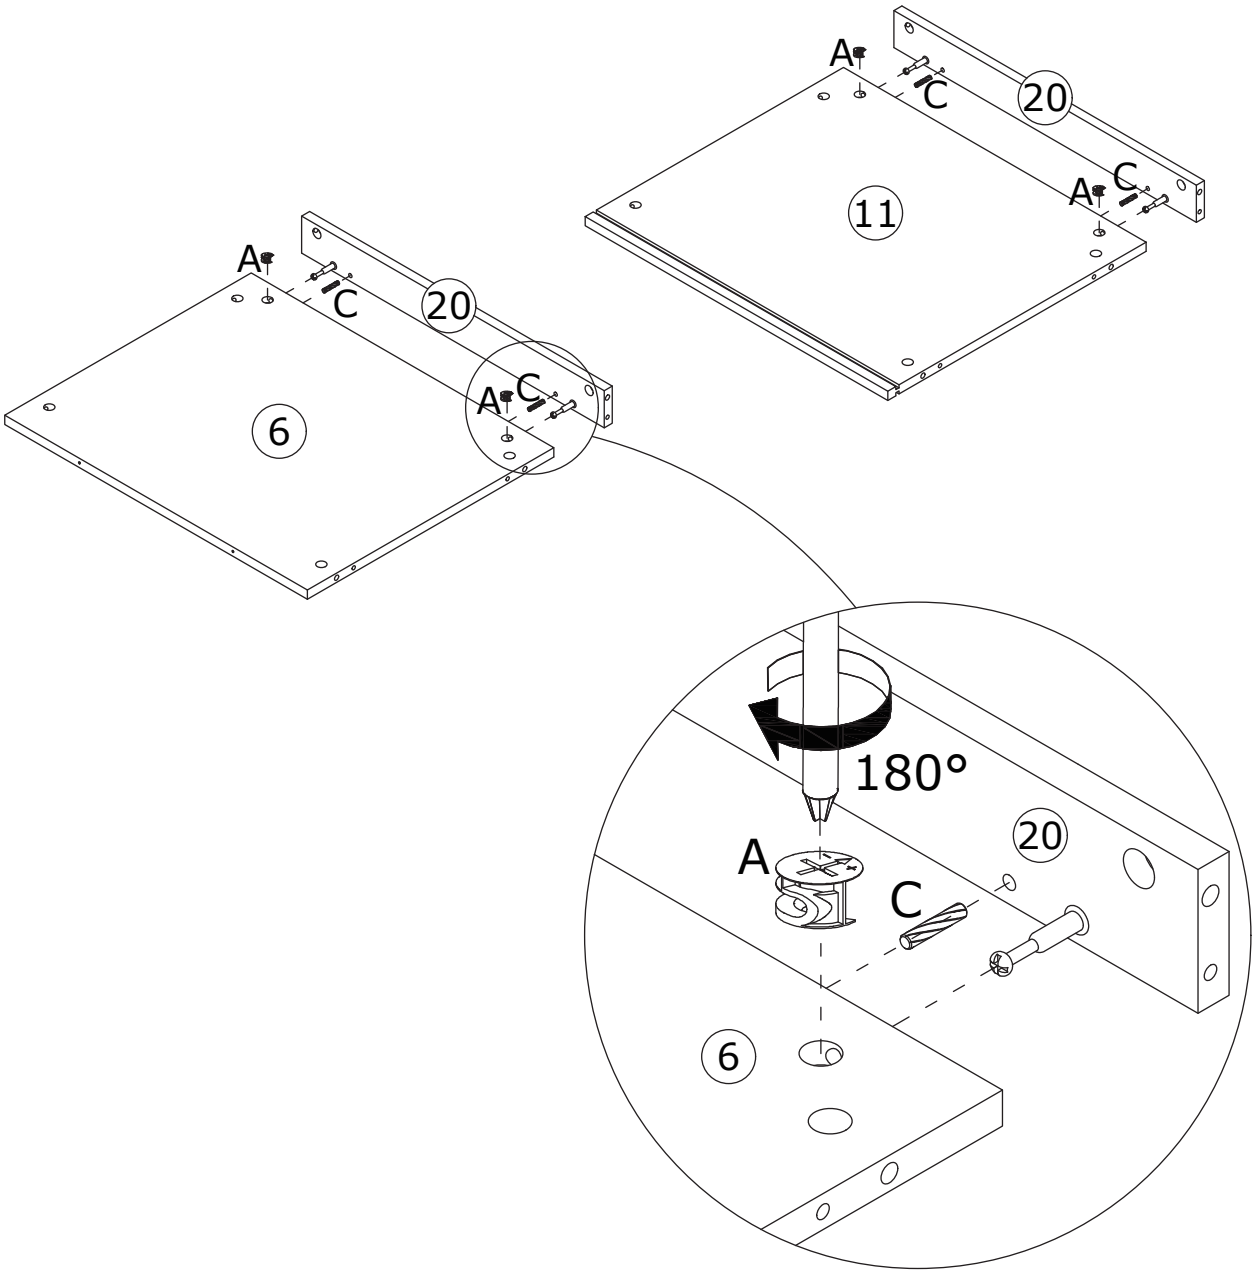


5



A x 6	C x 6	
 CRB1595A	 CRF0630A	

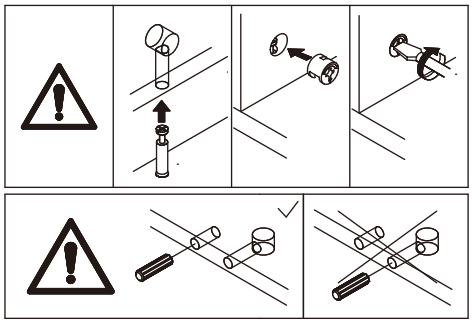


Connect Panels 6, 11 and 20 to Panel 2 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

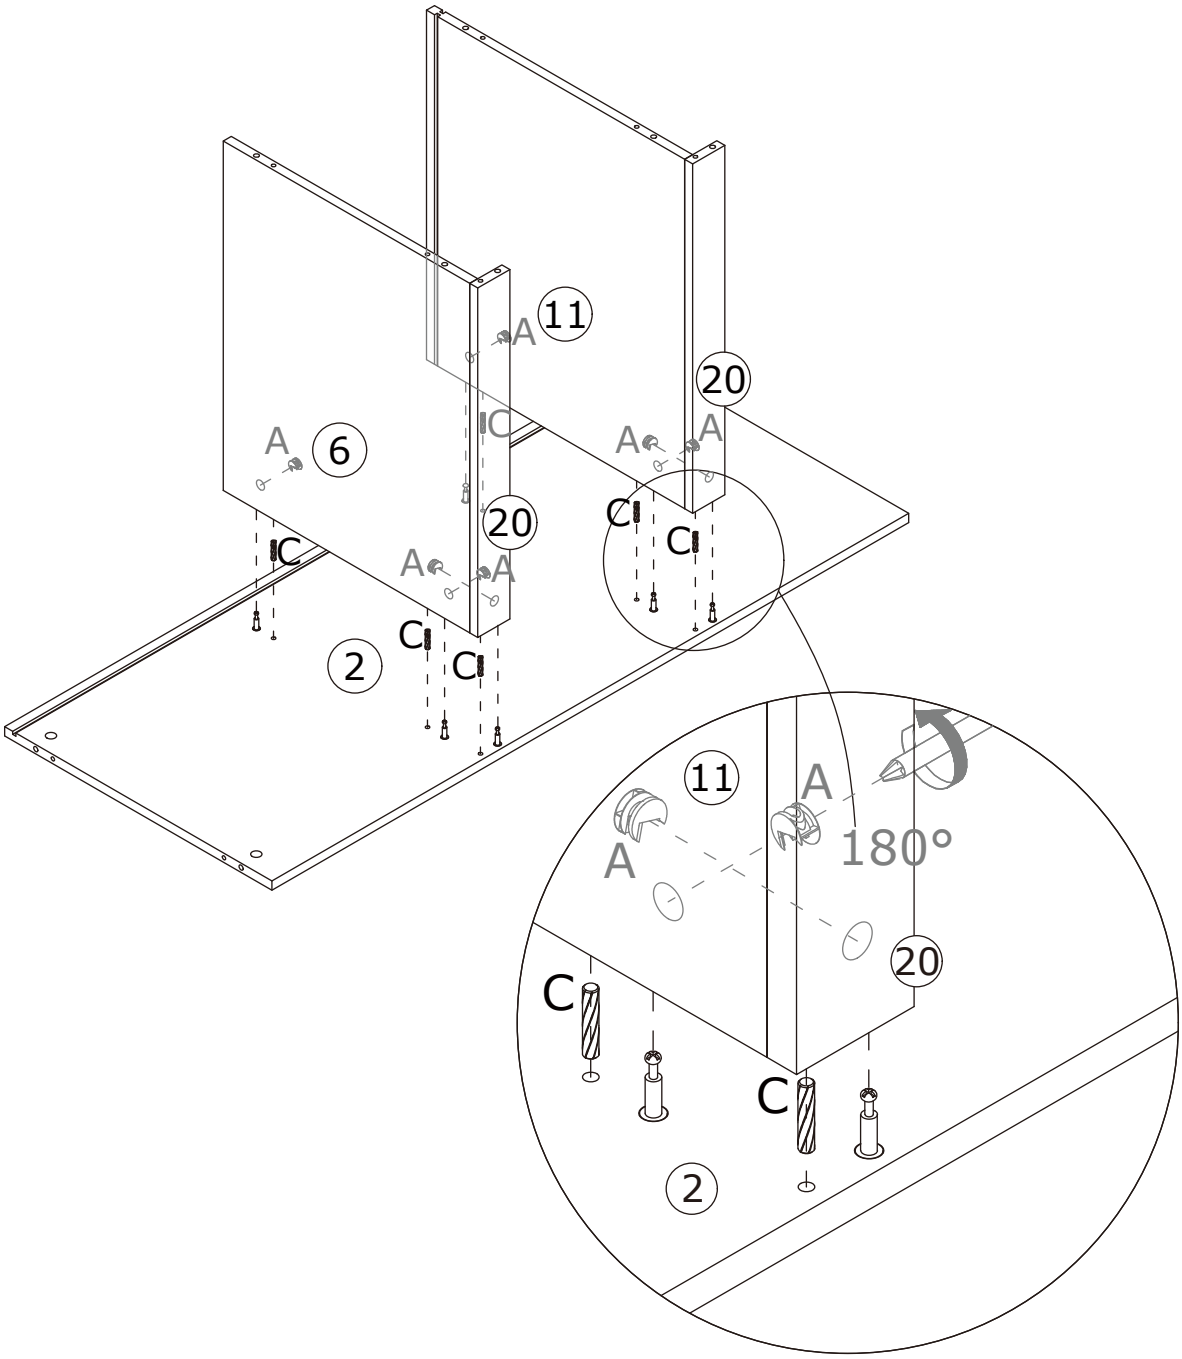


6


A x 6	C x 6	
 CRB1595A	 CRF0630A	

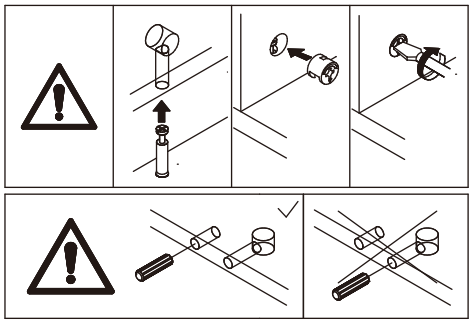


Connect Panel 1 to Panels 6, 11 and 20 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

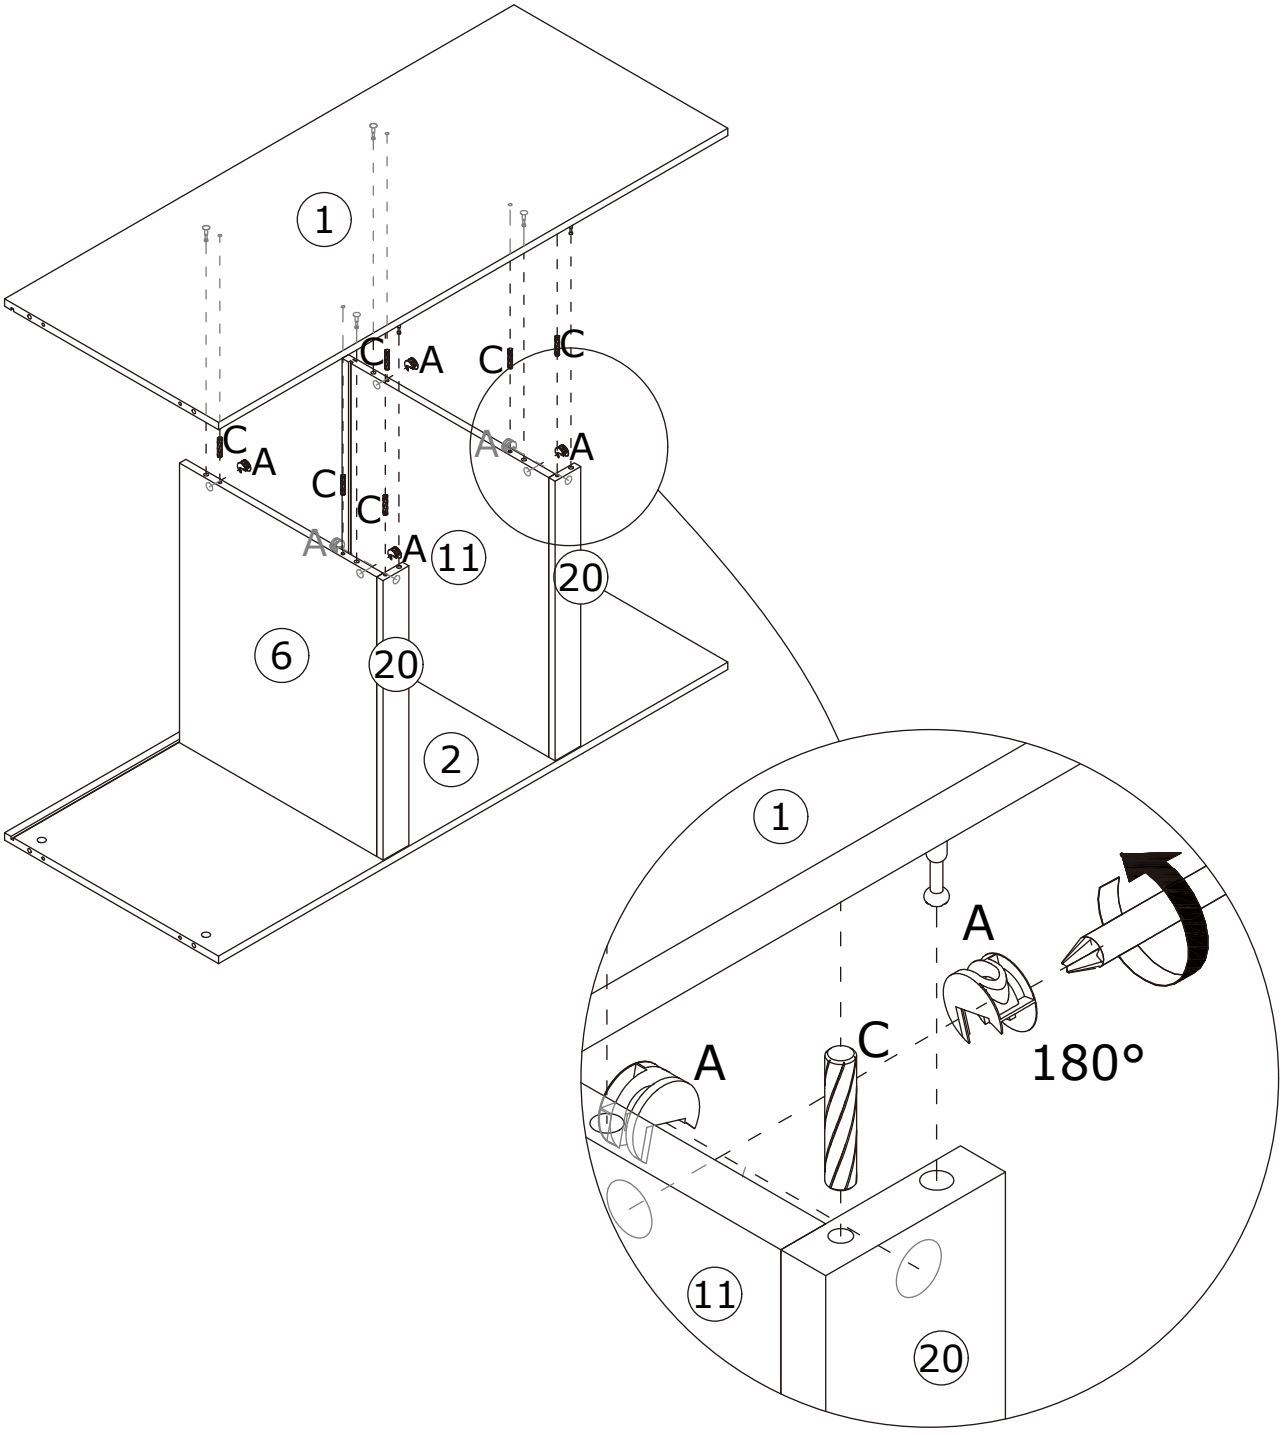


7




1.

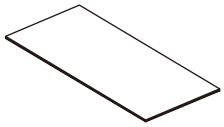


2.

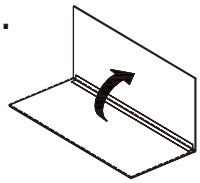

3.

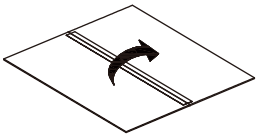

Insert Panels 13 and 17 along the reserved slots.

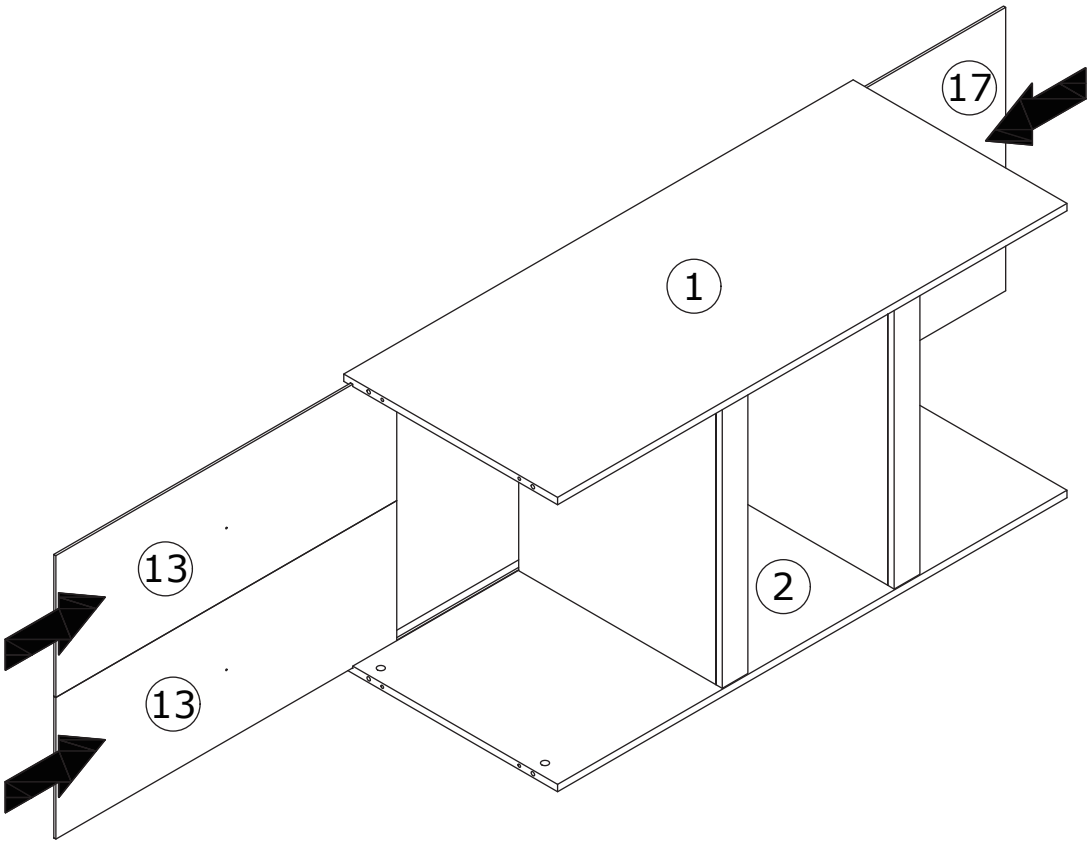



8

B x 6	D x 6	F x 2	U x 1	
CRA0635B		CRD0314A		



Secure part (U) to Panel 10 with screws (F).


Insert threaded insert (D) into the pre-drilled holes of Panel 10, and fasten cam screw (B) into the threaded inserts.

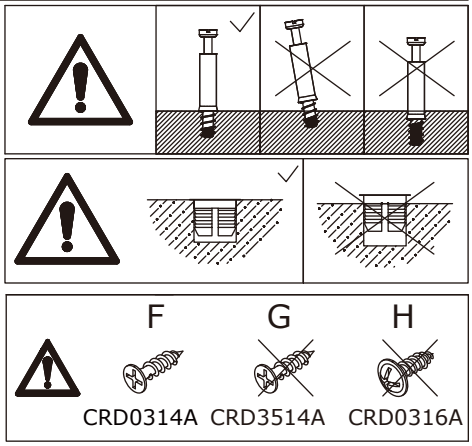

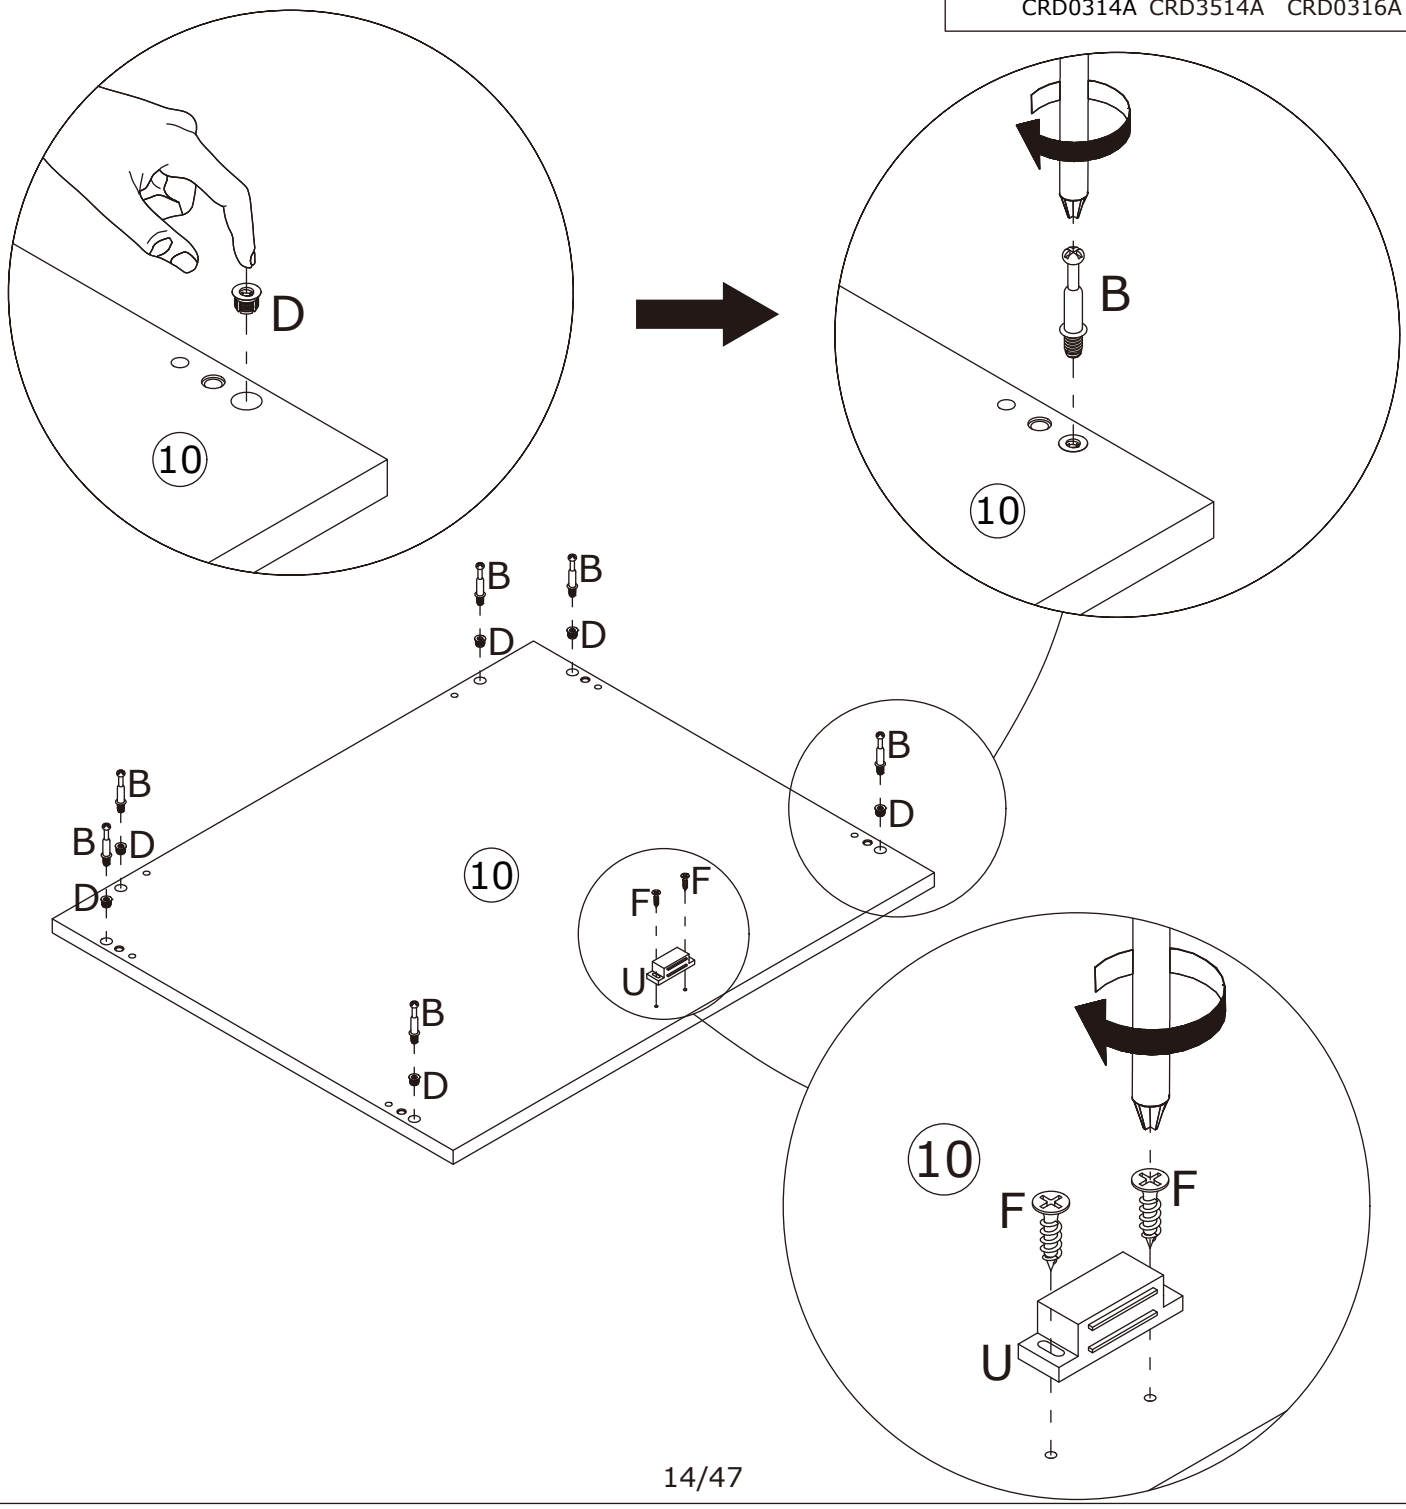


9




A x 4	C x 4	
		
CRB1595A	CRF0630A	

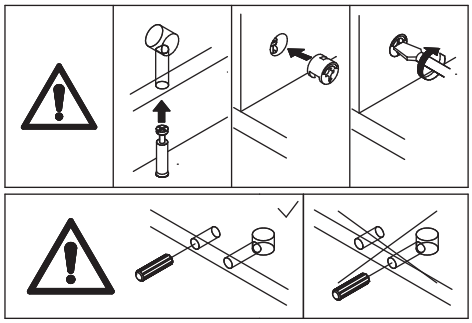


Connect Panel 19 to Panels 1 and 2 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

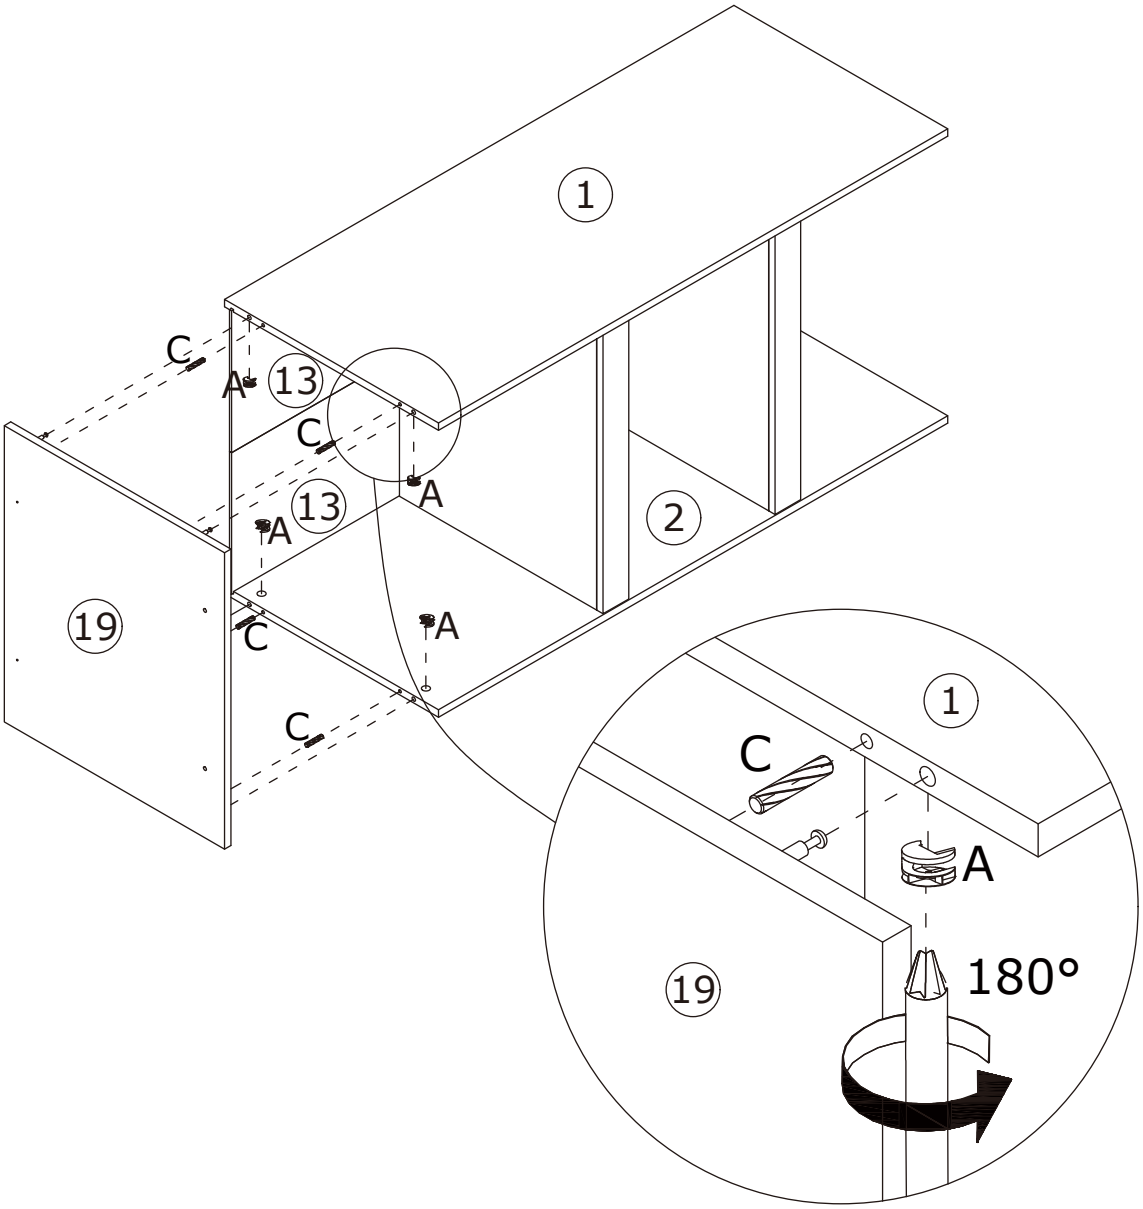



10

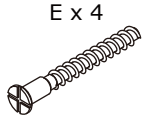E x 4	C x 4	H x 4	
			
CRC0540A	CRF0630A	CRE0316A	


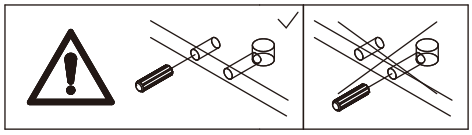



Connect Panel 10 to Panels 1 and 2 with dowel pins (C), then secure with screws (E).
Secure back panels to Panel 6 with screws (H).

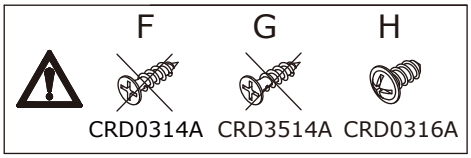


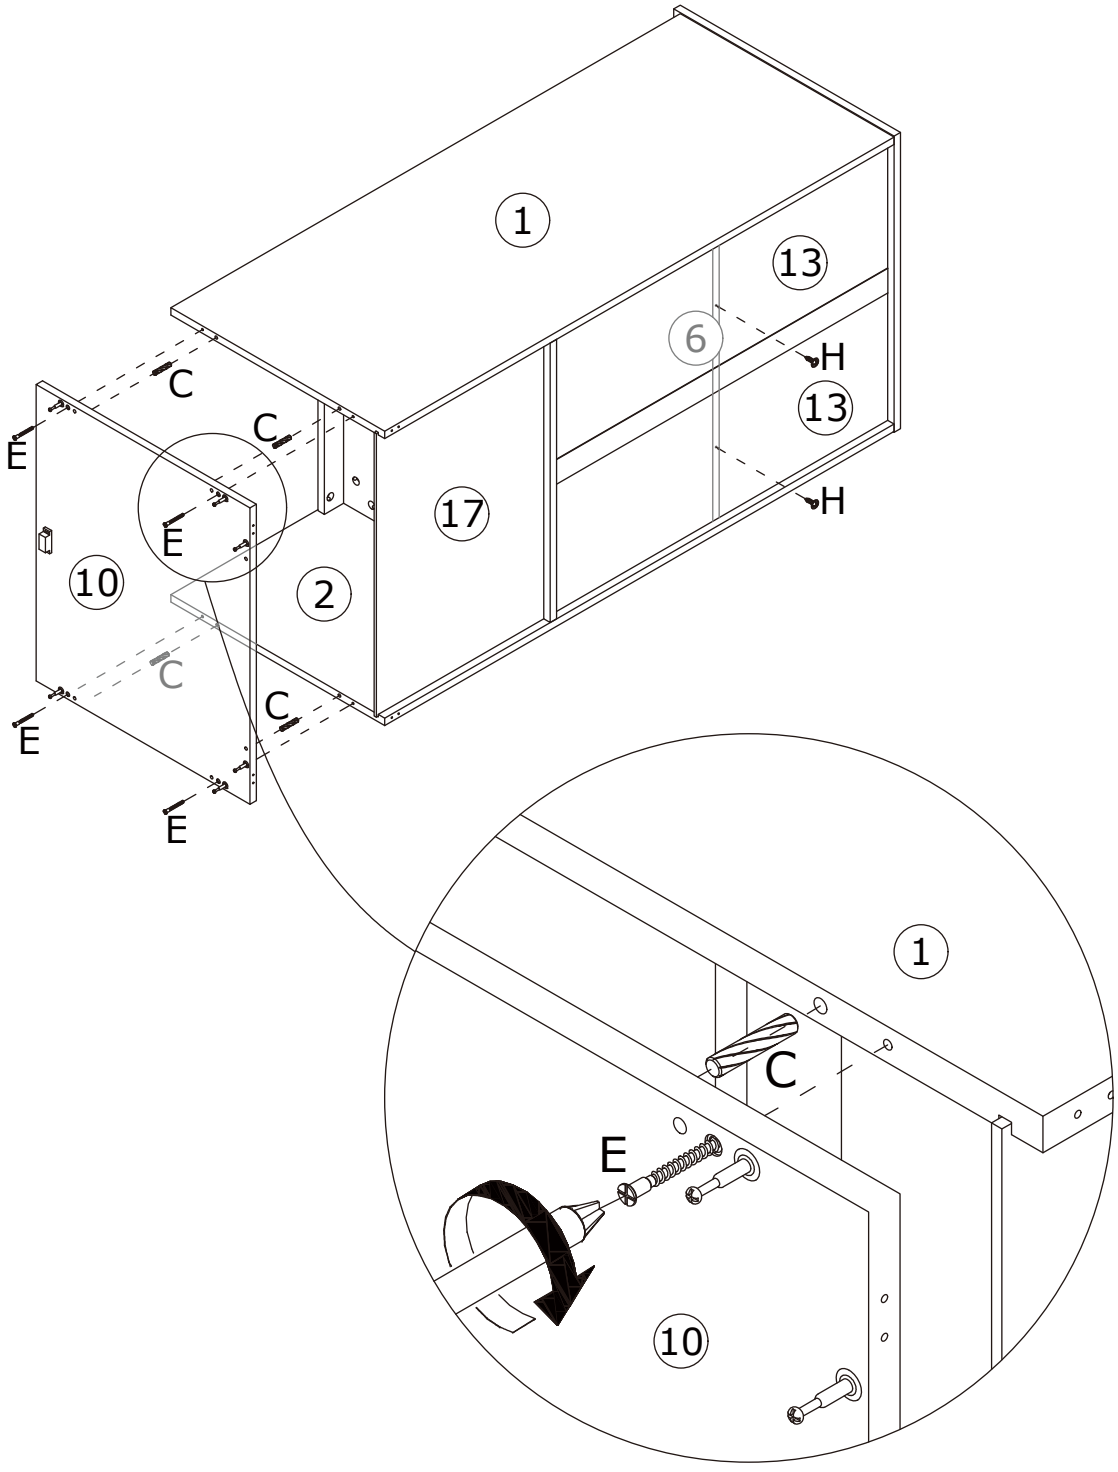


11


B x 8	D x 8	AA x 6	
 CRA0635B			

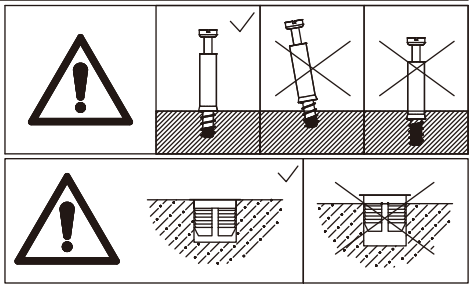


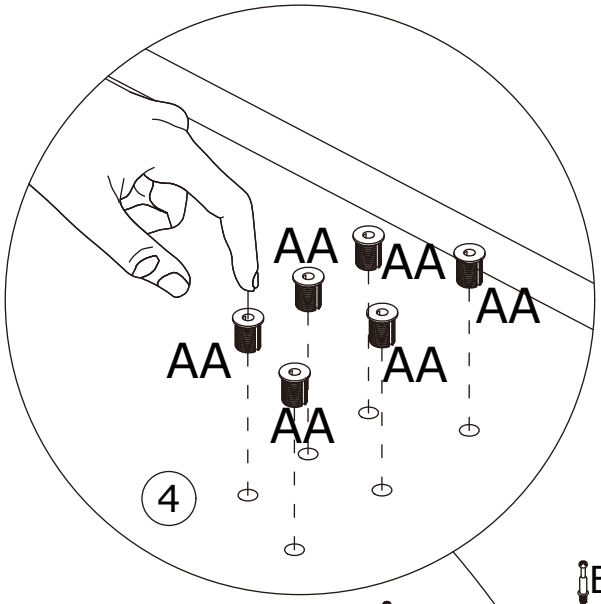



Insert threaded insert (D) into the pre-drilled holes of Panels 3 and 4, and fasten cam screw (B) into the threaded inserts.
Insert threaded insert (AA) into Panel 4.

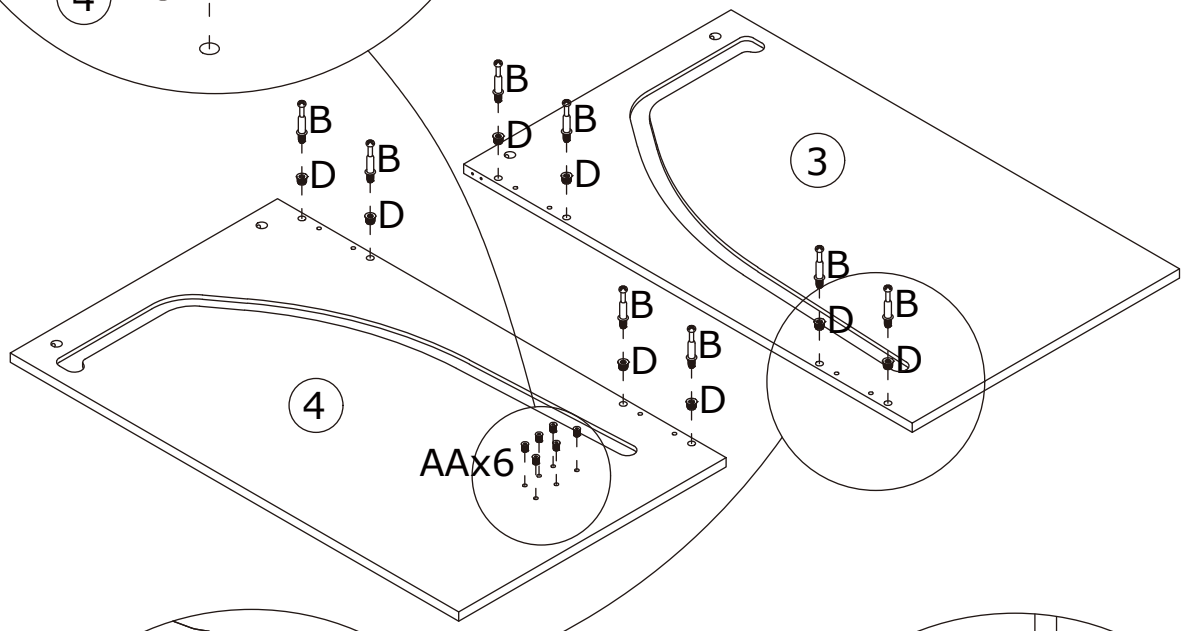

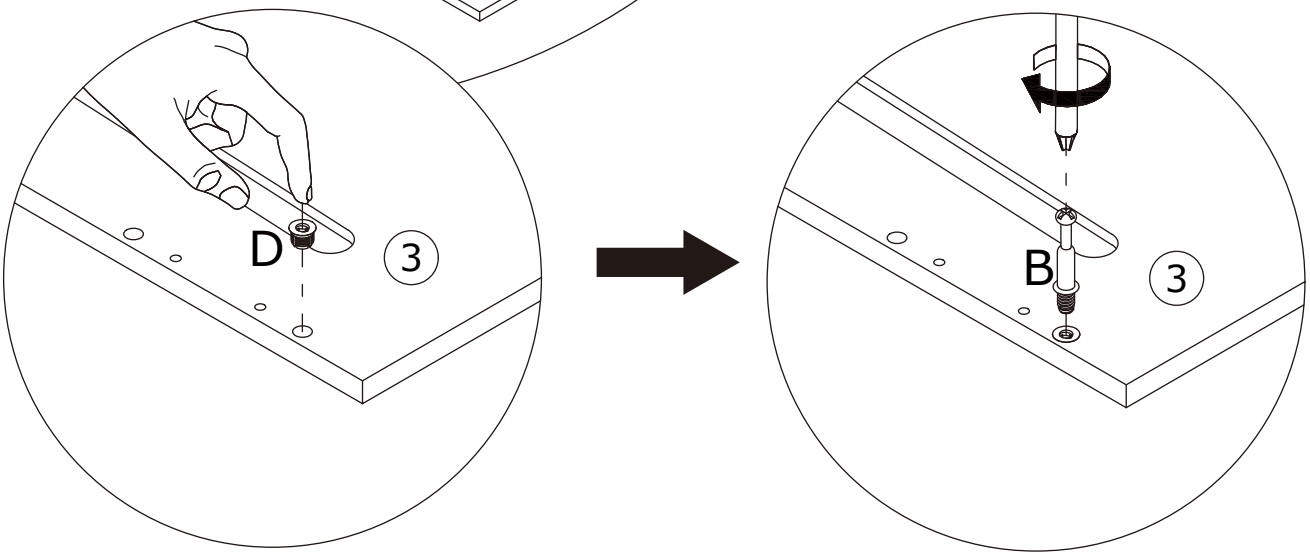


12



A x 4	C x 4	
 CRB1595A	 CRF0630A	

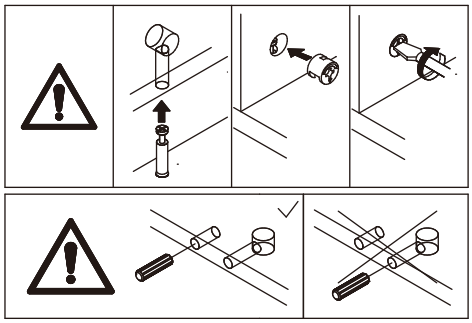


Connect Panels 15 and 16 to Panel 4 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

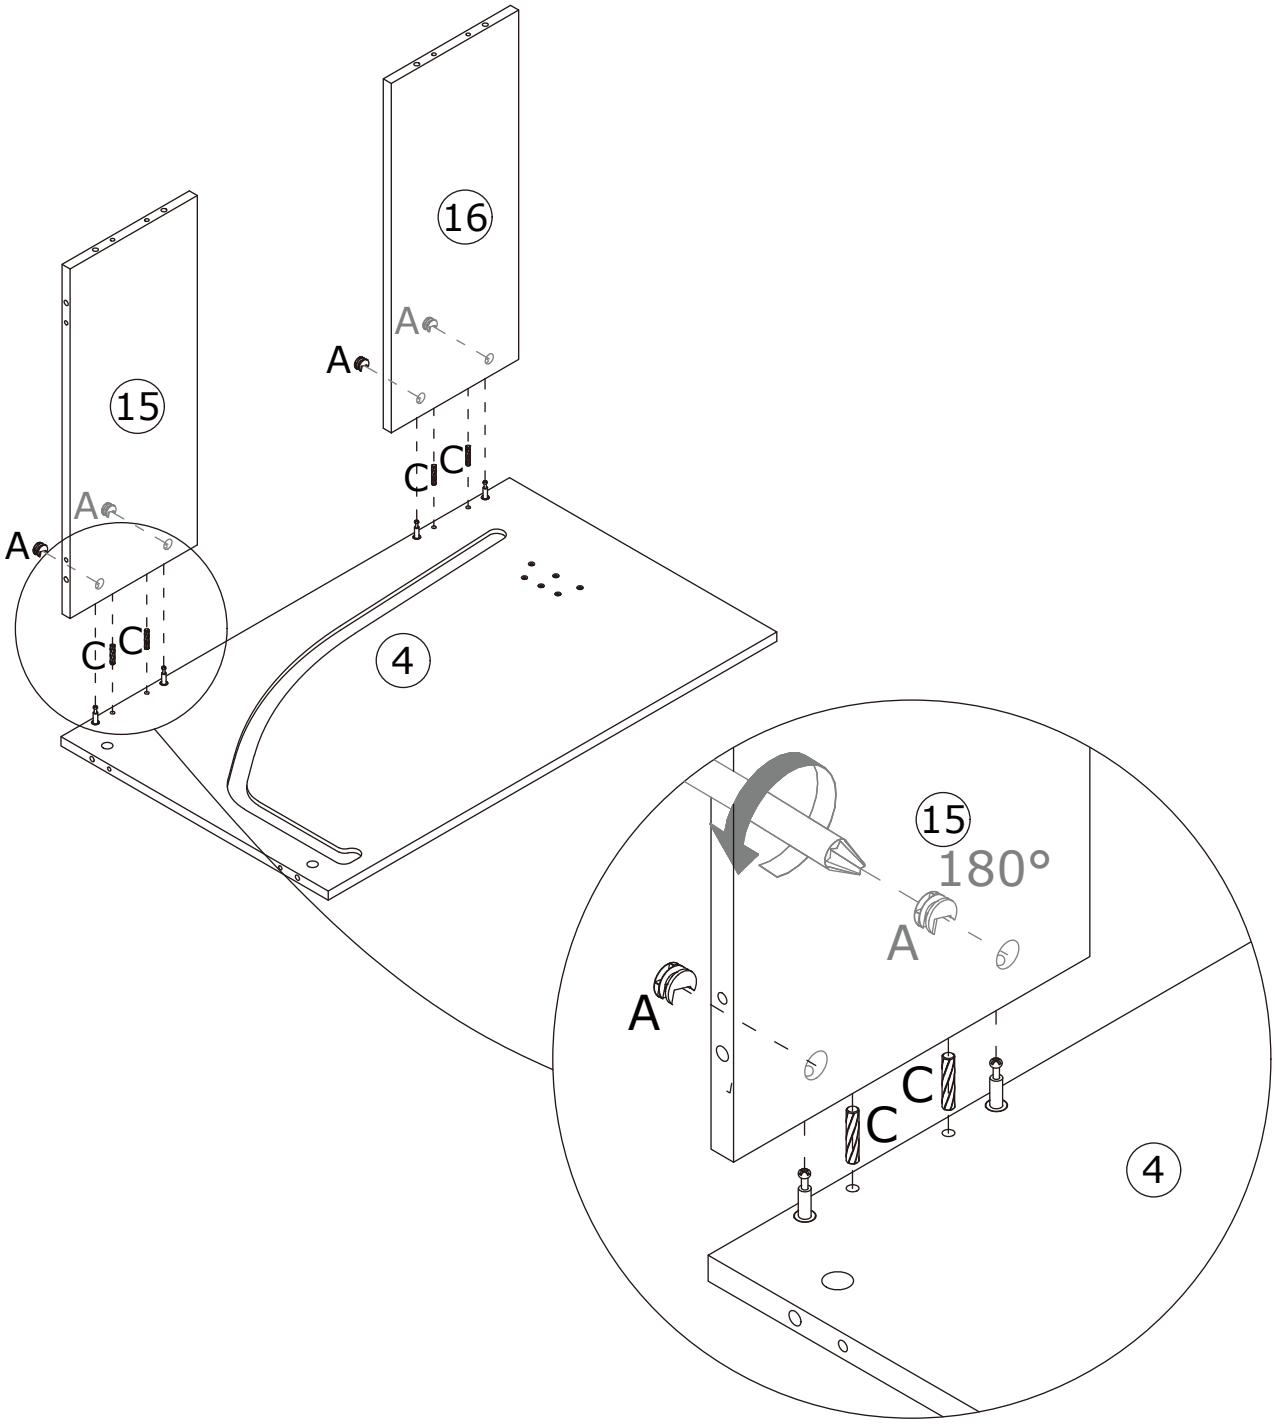


13



A x 4	C x 4	
 CRB1595A	 CRF0630A	

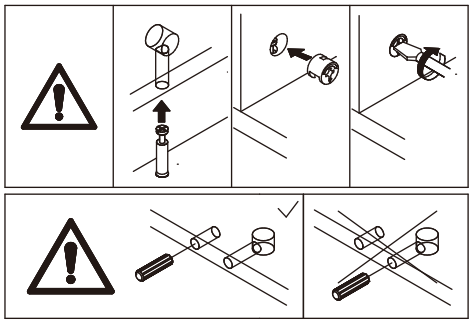


Connect Panel 3 to Panels 15 and 16 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

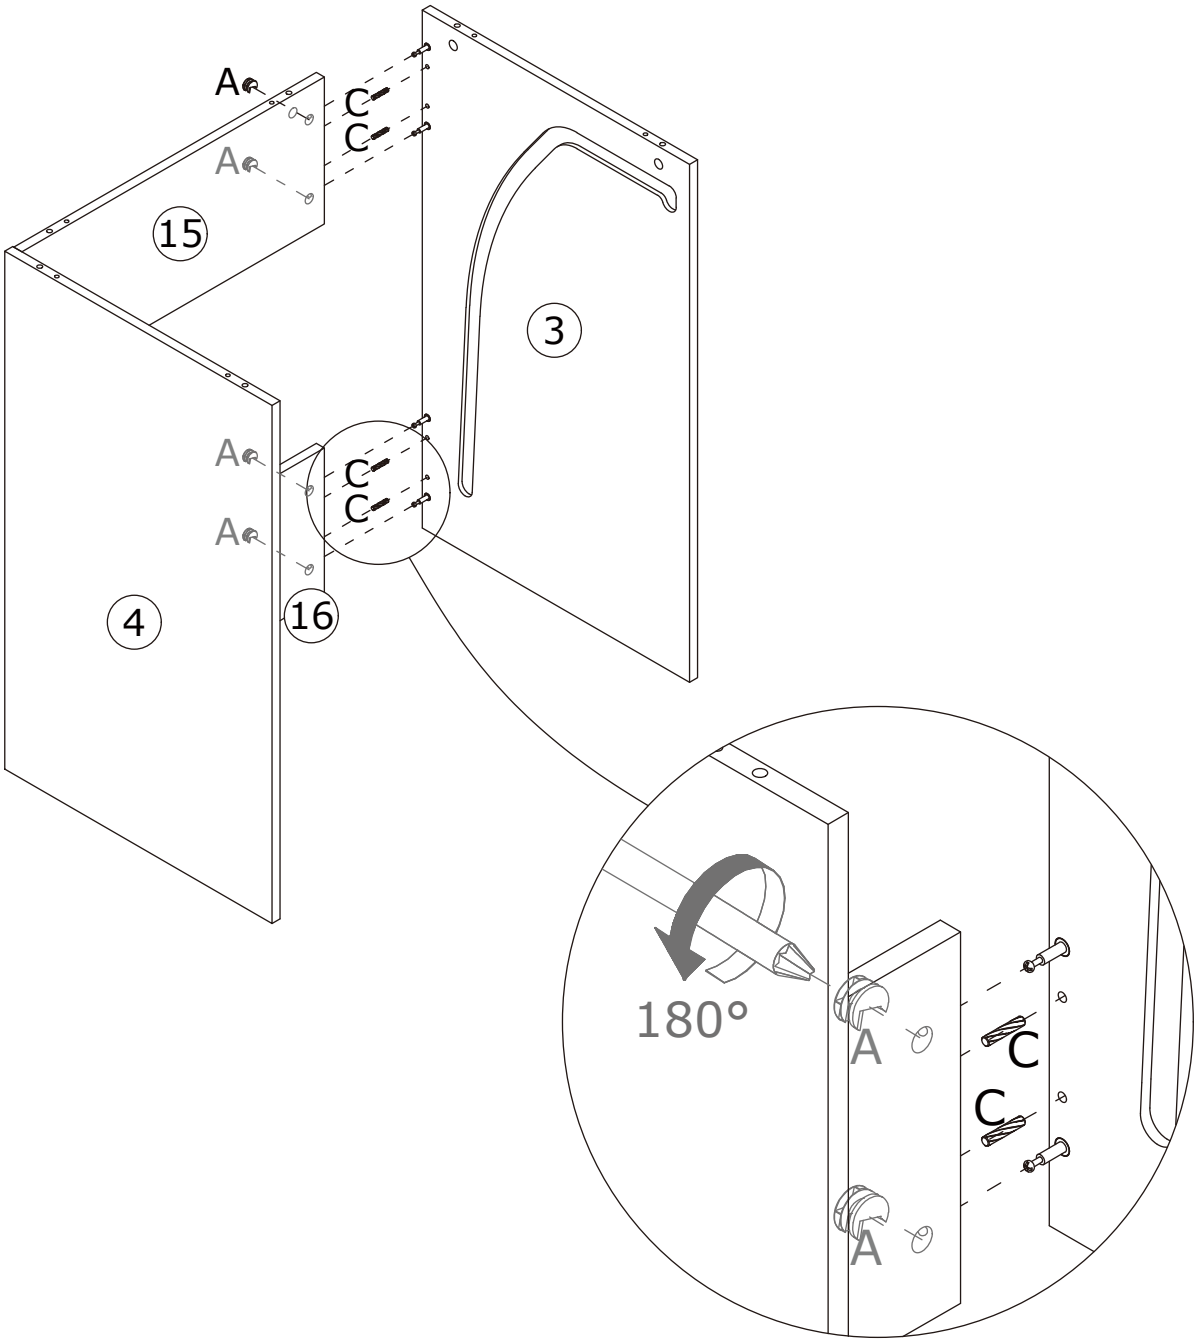


14

A x 6	C x 6	
 CRB1595A	 CRF0630A	

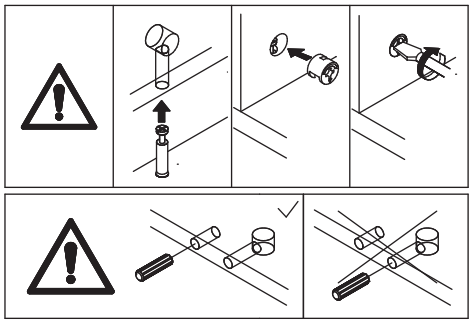

Connect Panel 10 to Panels 3, 4 and 15 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

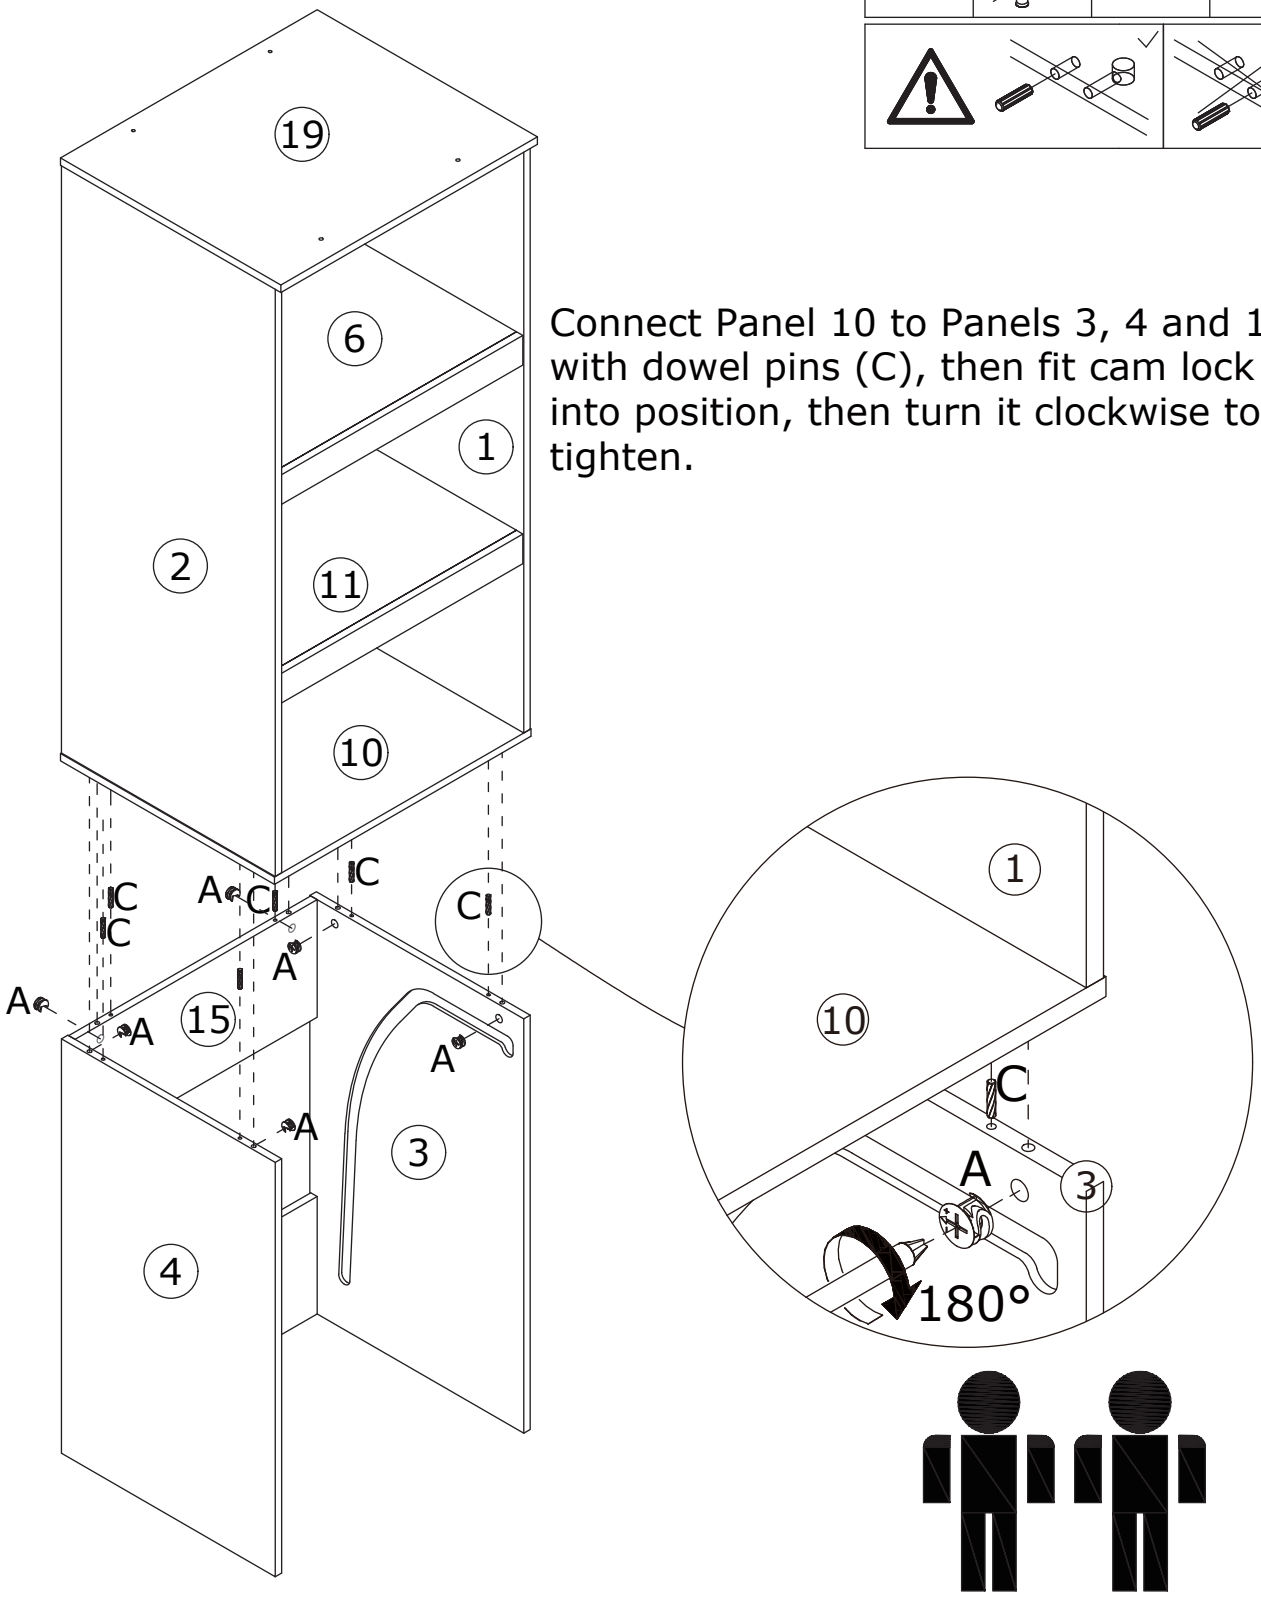


2 ADULTS

15

F x 30	M x 2	S x 18	
CRD0314A			


	F	G	H
	CRD0314A	CRD3514A	CRD0316A

Insert clip (S) into back slots and secure with it screw (F).
Secure part (M) to the back of the cabinet with screw (F).

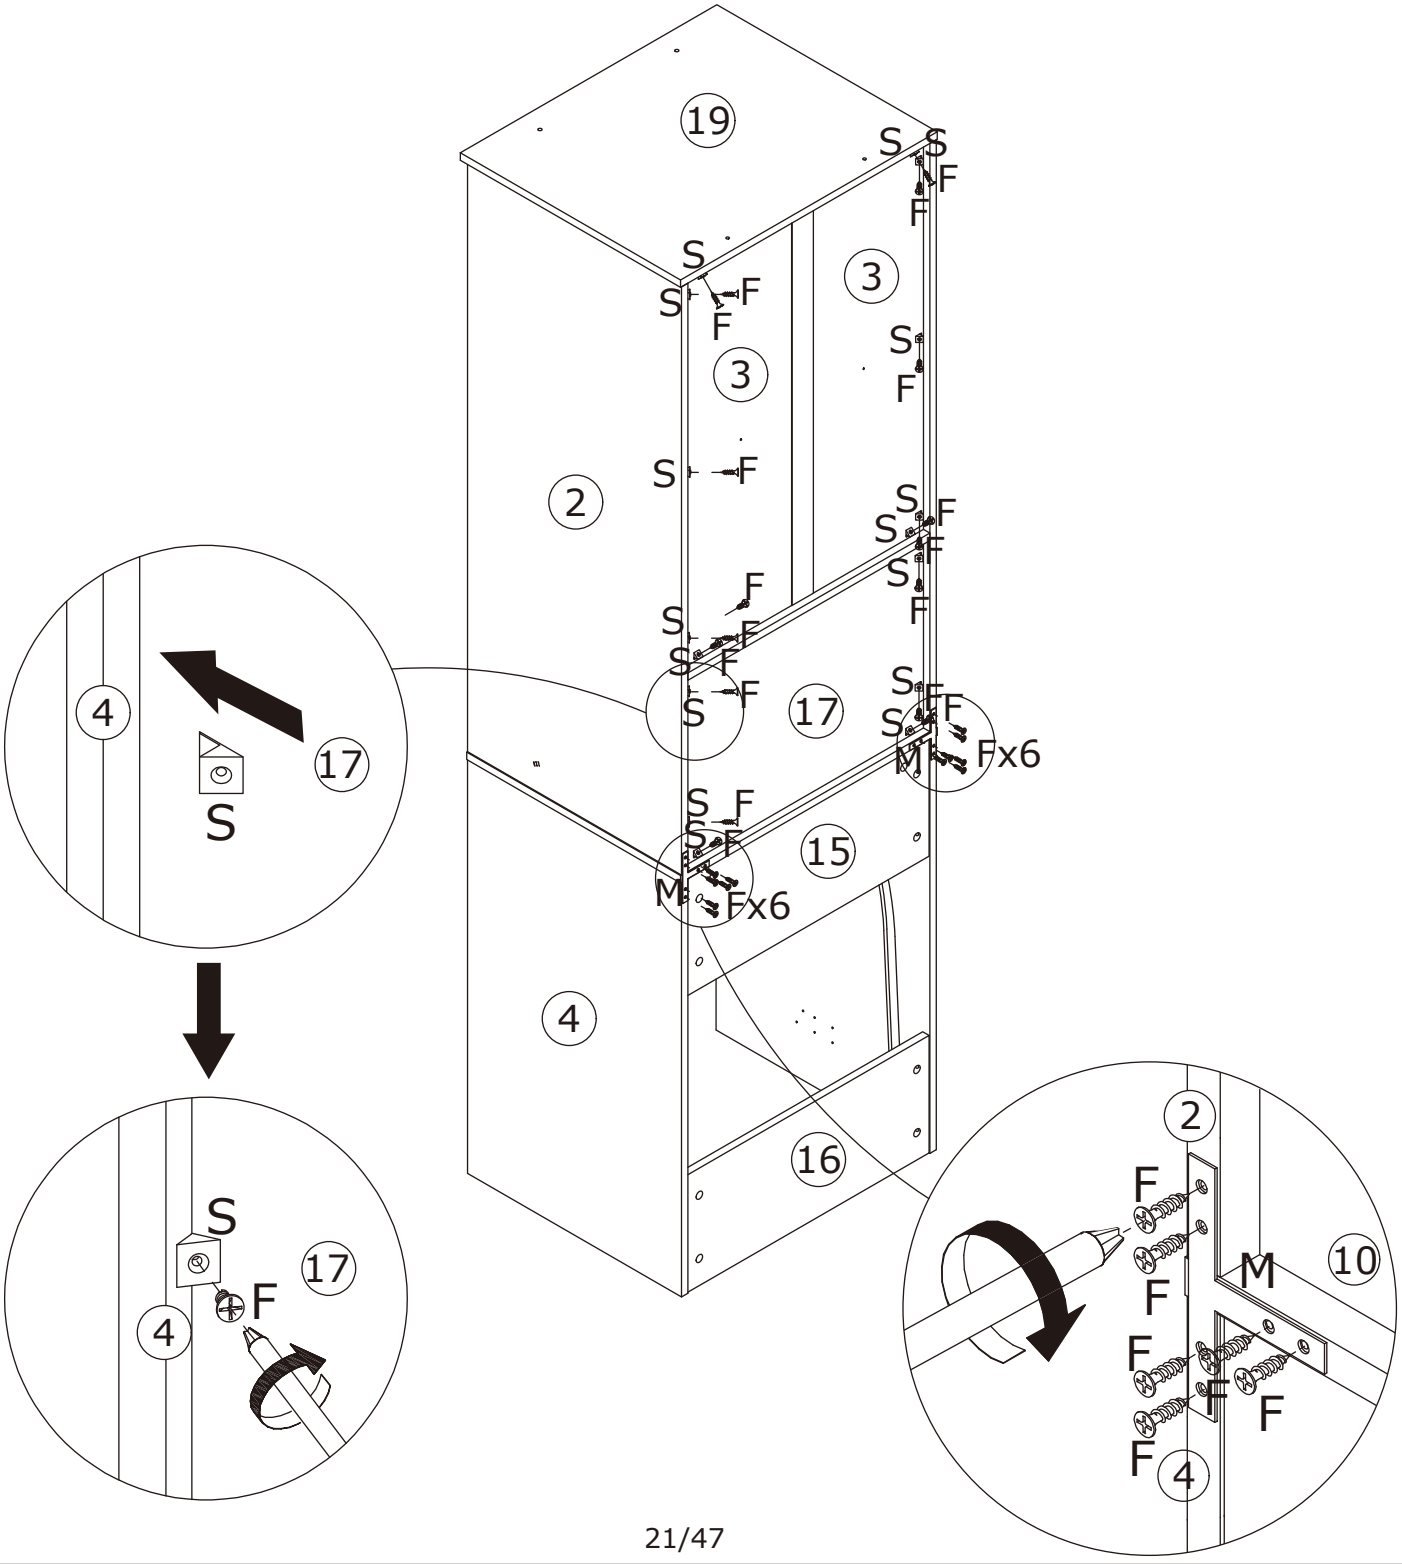


If there is a keel inside the wall, please select Option A
If there is no keel inside the wall, please select Option B.


Option A

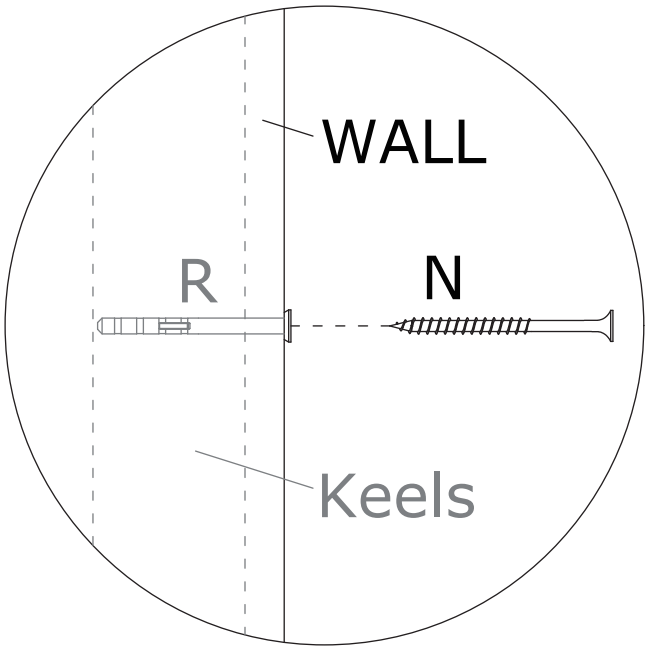


Option B

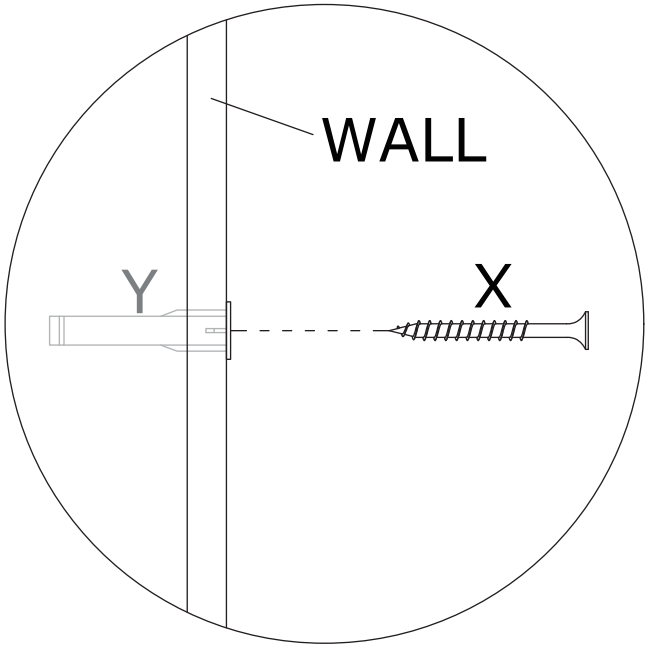


16

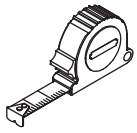




Option A

Locate the anti-tip position on the wall stud.

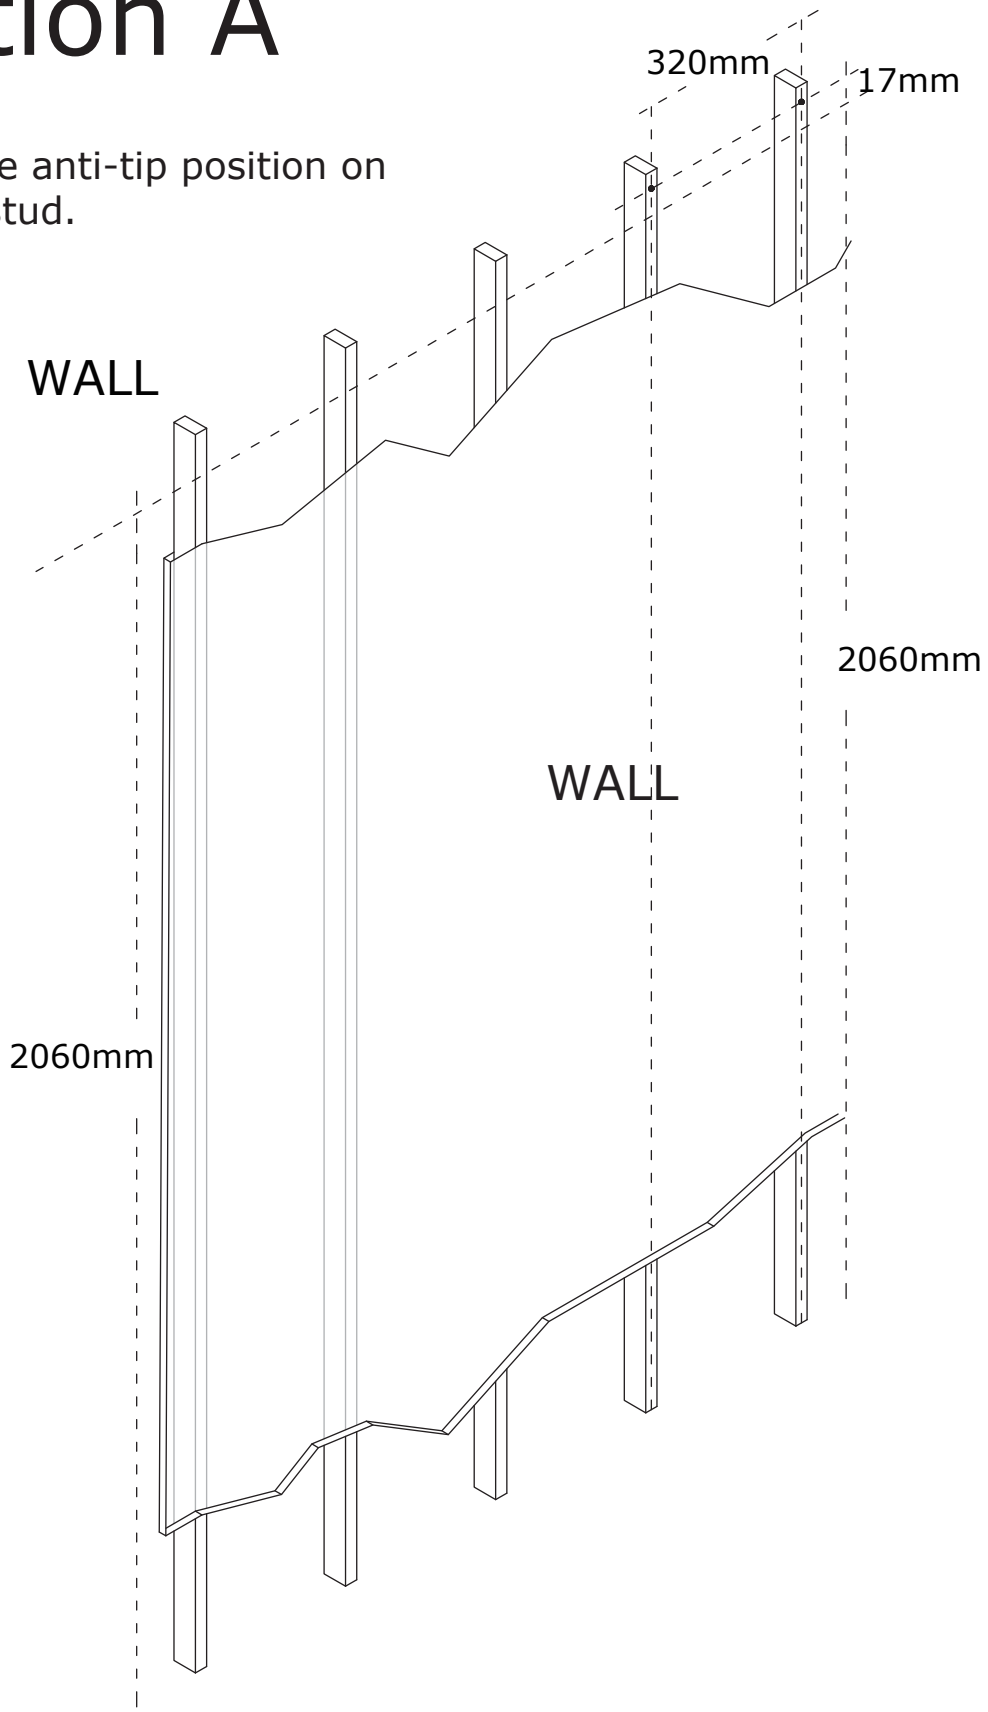


17

R x 2




Option A

Install part (R) into the wall stud according to the anti-tip position marked in step 16.

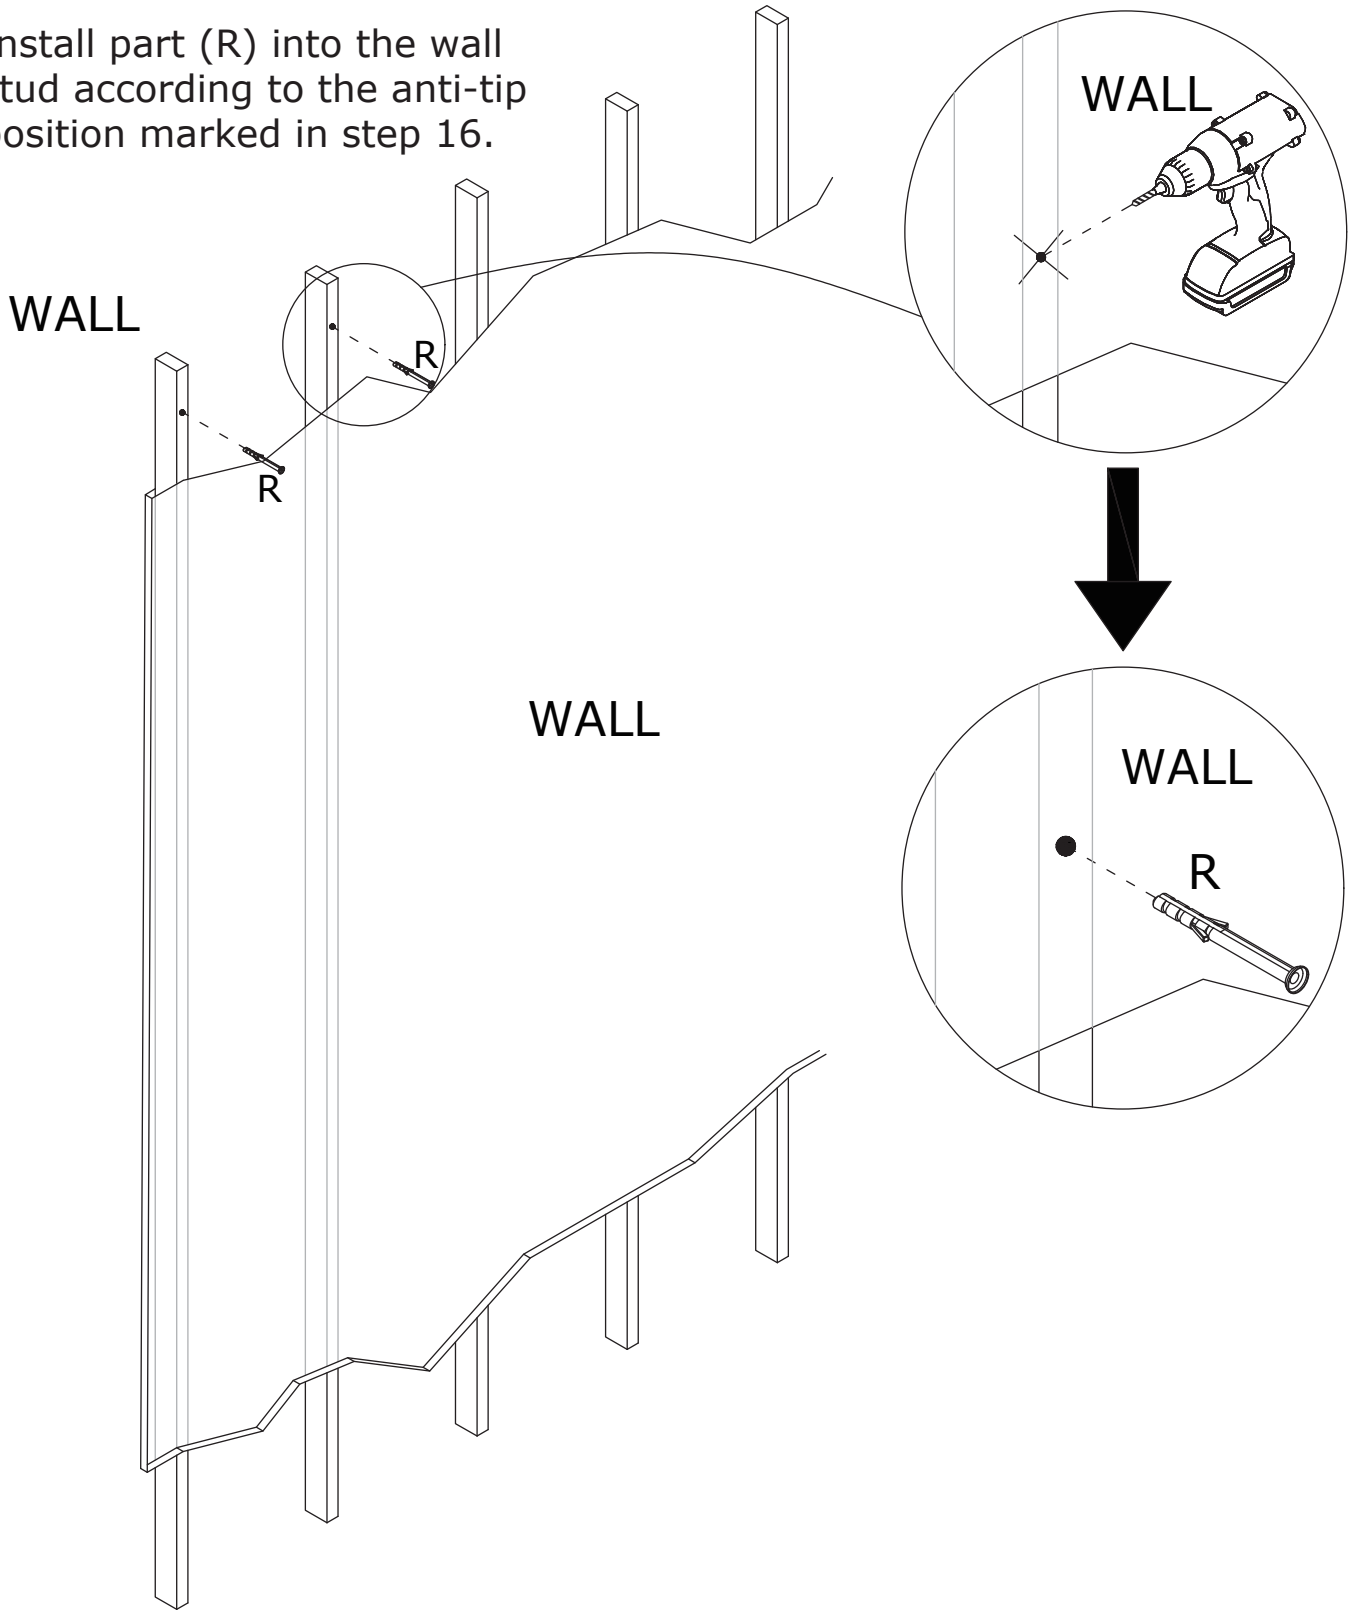


18

G x 2	L x 2	
 CRD3514A		

Option A


	F	G	H
	 CRD0314A	 CRD3514A	 CRD0316A

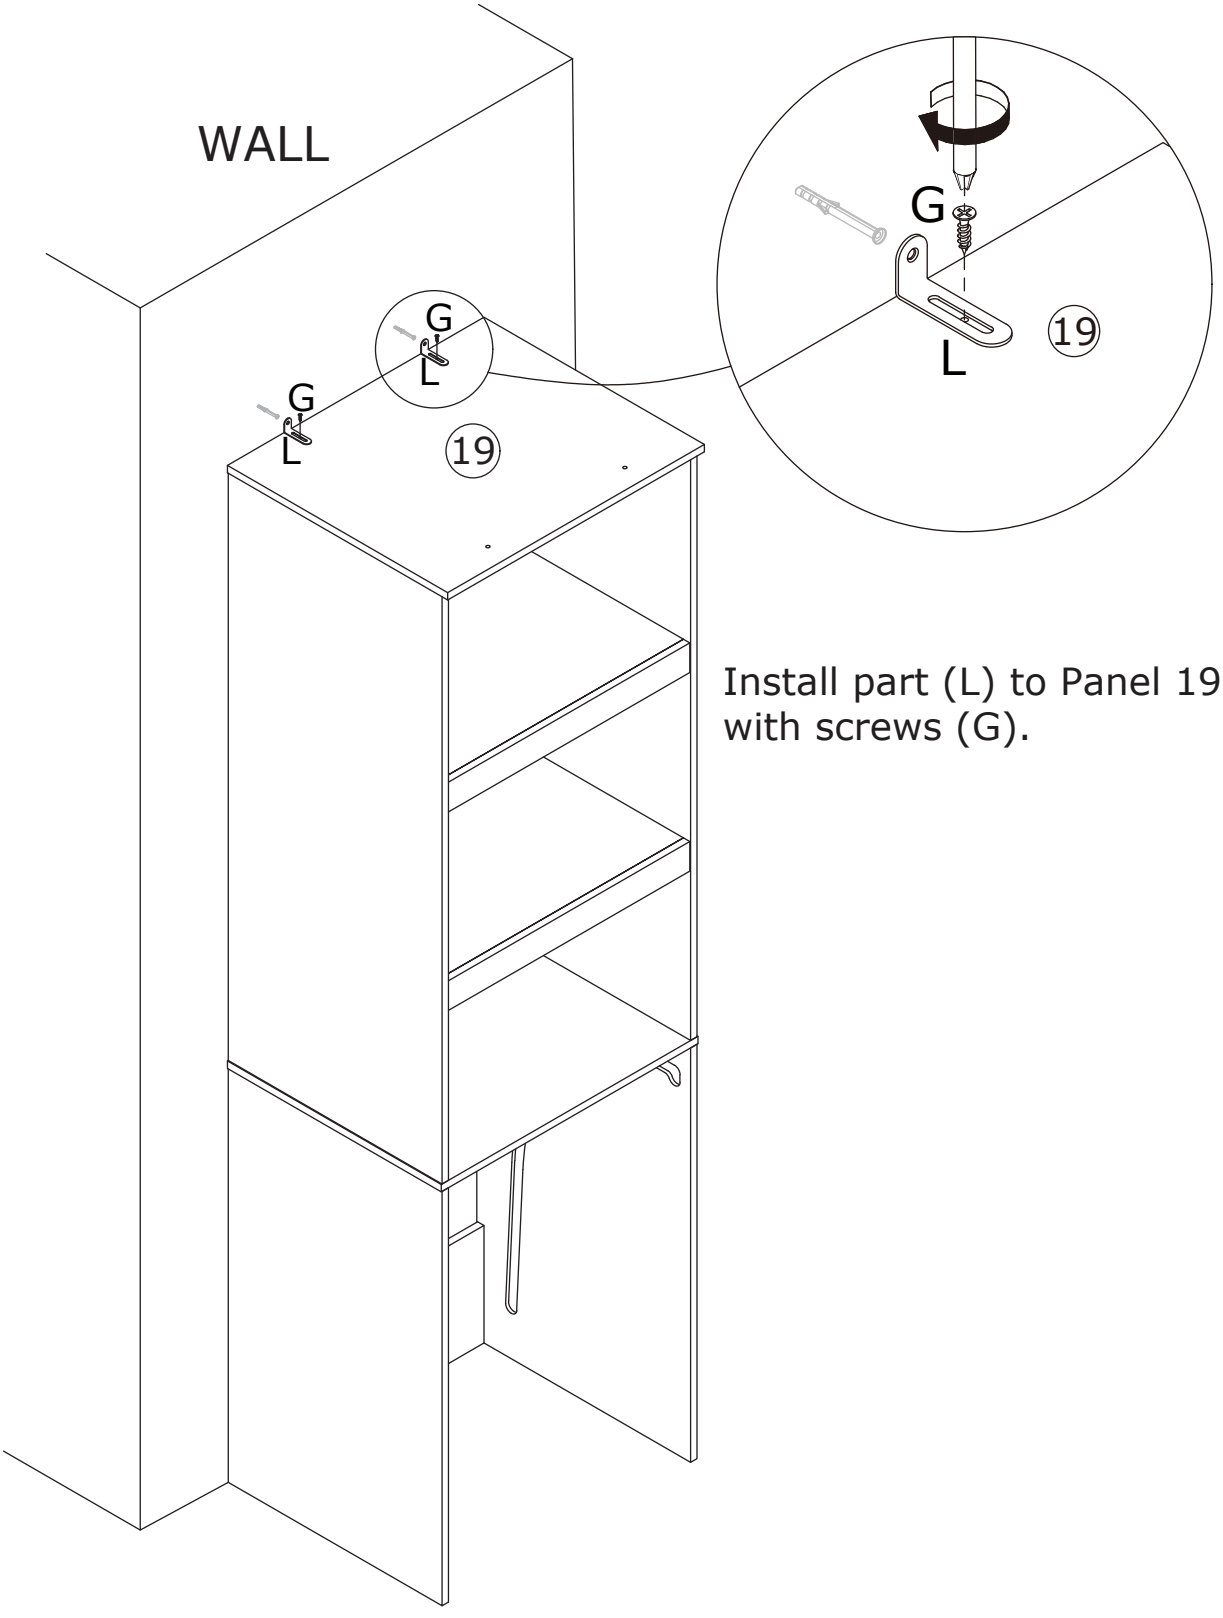


Install part (L) to Panel 19 with screws (G).

19

N x 2



CRD0580A





N



CRD0580A


X




CRD0468A


Option A

Option A: Install the anti-tip device.

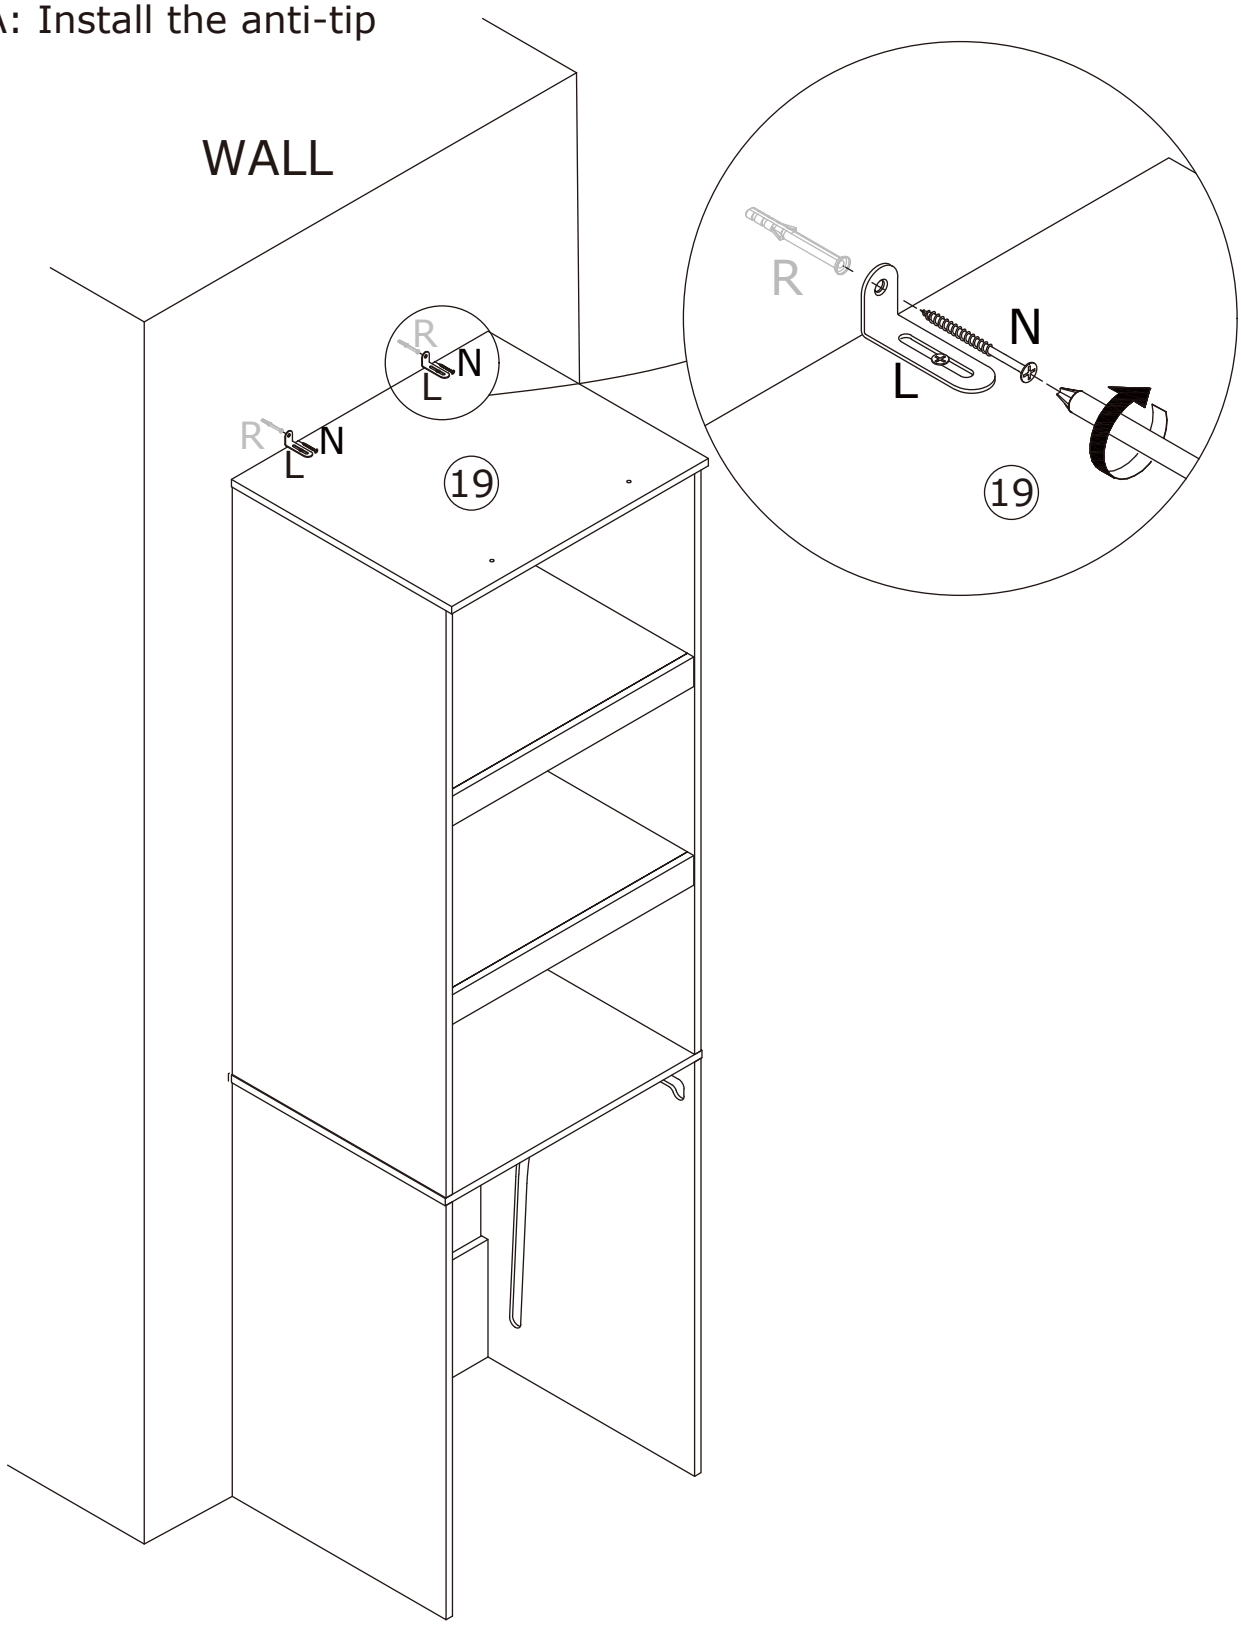


20

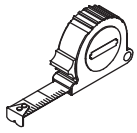




Option B

Locate the anti-tip position on the wall.

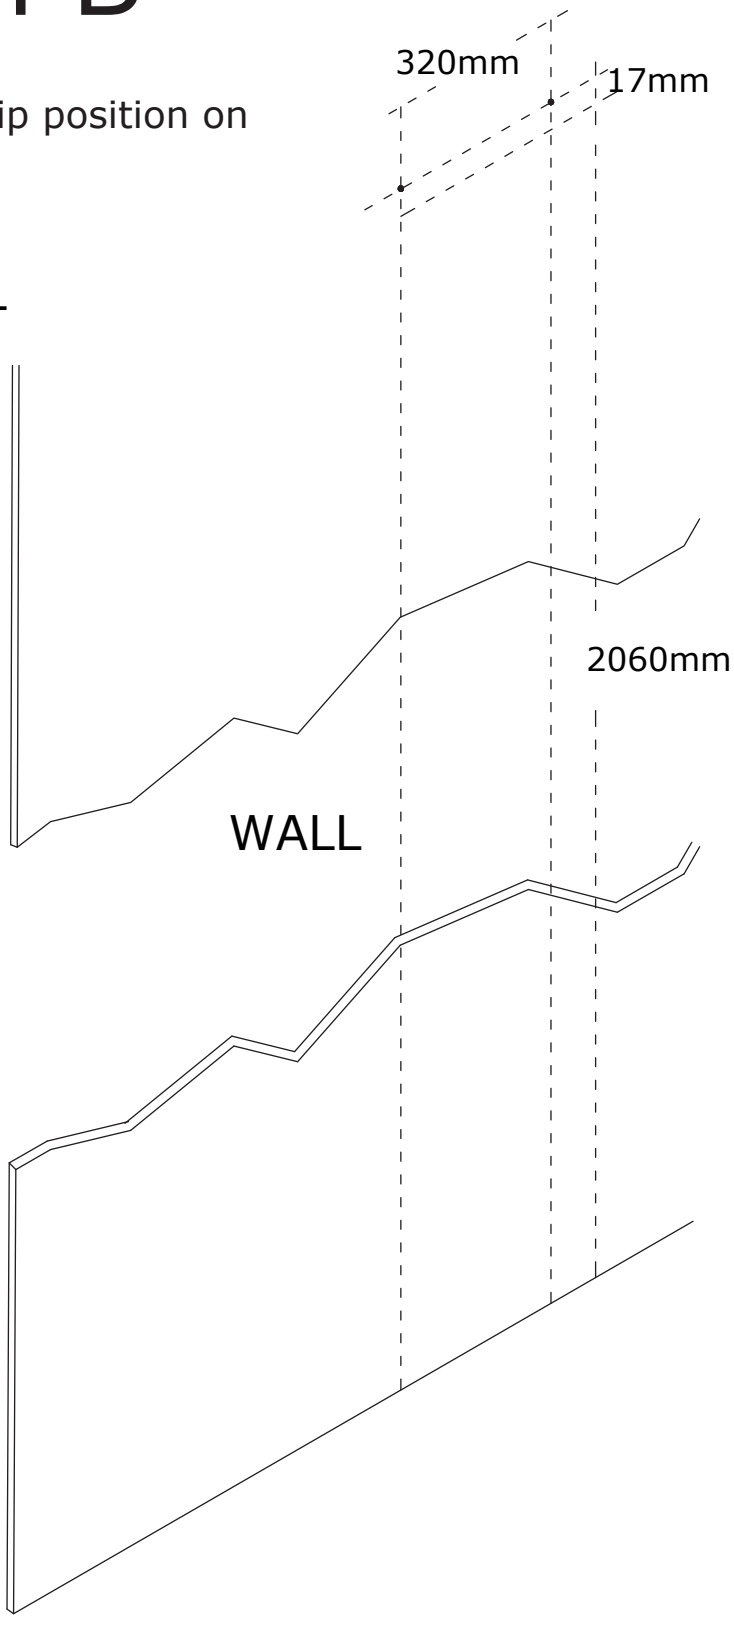


21

Y x 2






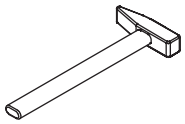


Option B

Install part (Y) into the wall according to the anti-tip position marked in step 20.

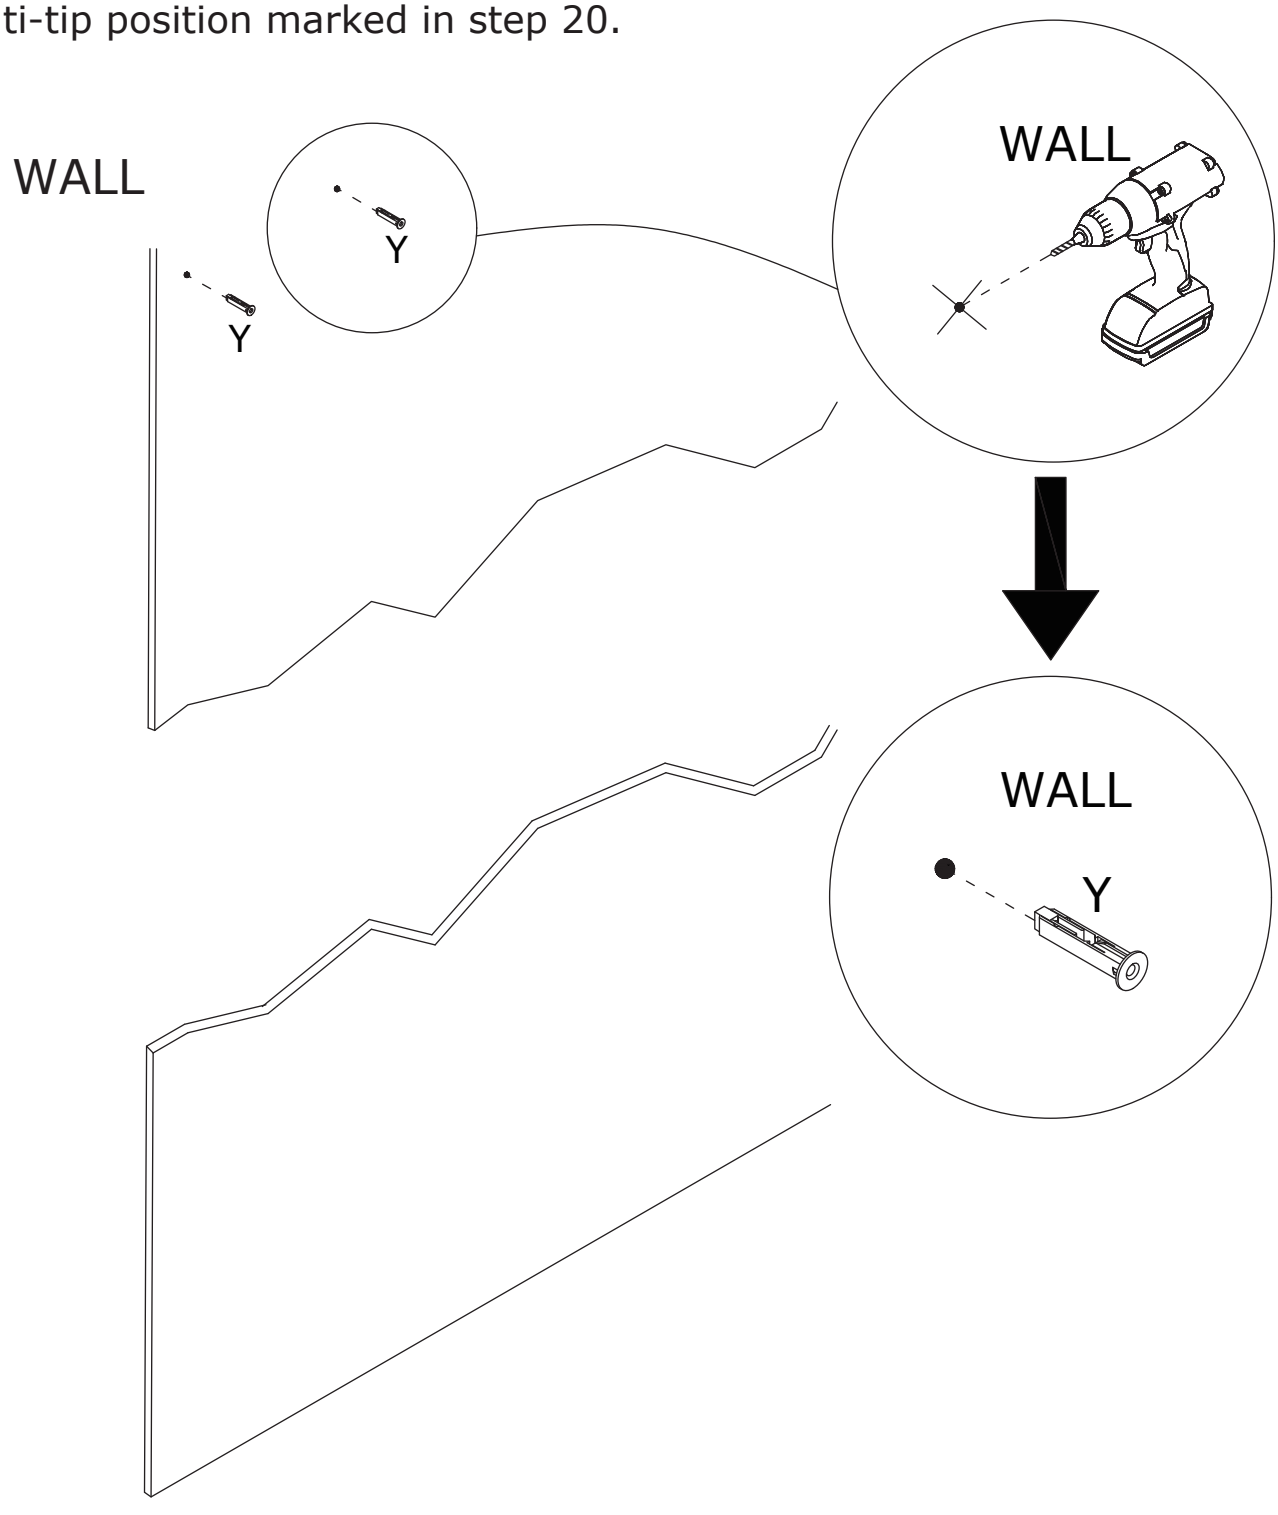


22

G x 2	L x 2	
 CRD3514A		

Option B

	F	G	H
	 CRD0314A	 CRD3514A	 CRD0316A

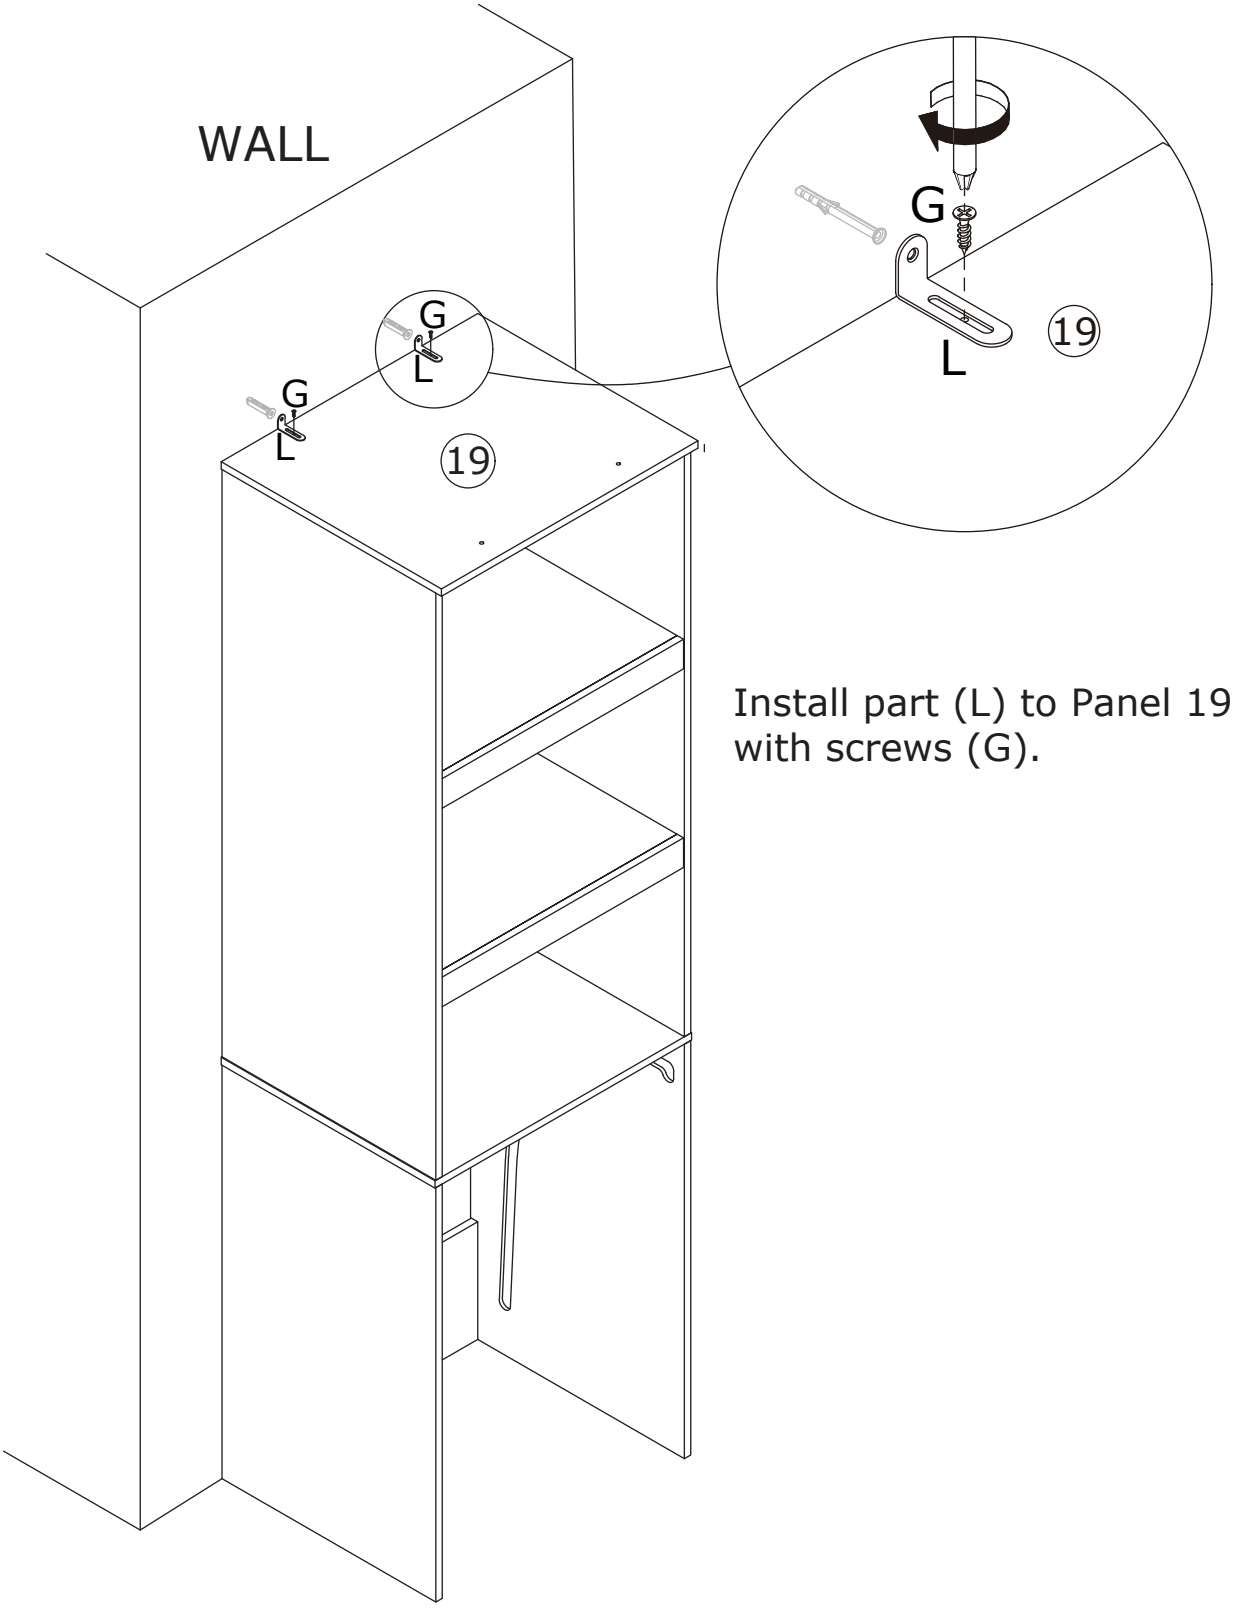


Install part (L) to Panel 19 with screws (G).

23

X x 2




CRD0468A



Option B



N




CRD0580A

X






CRD0468A

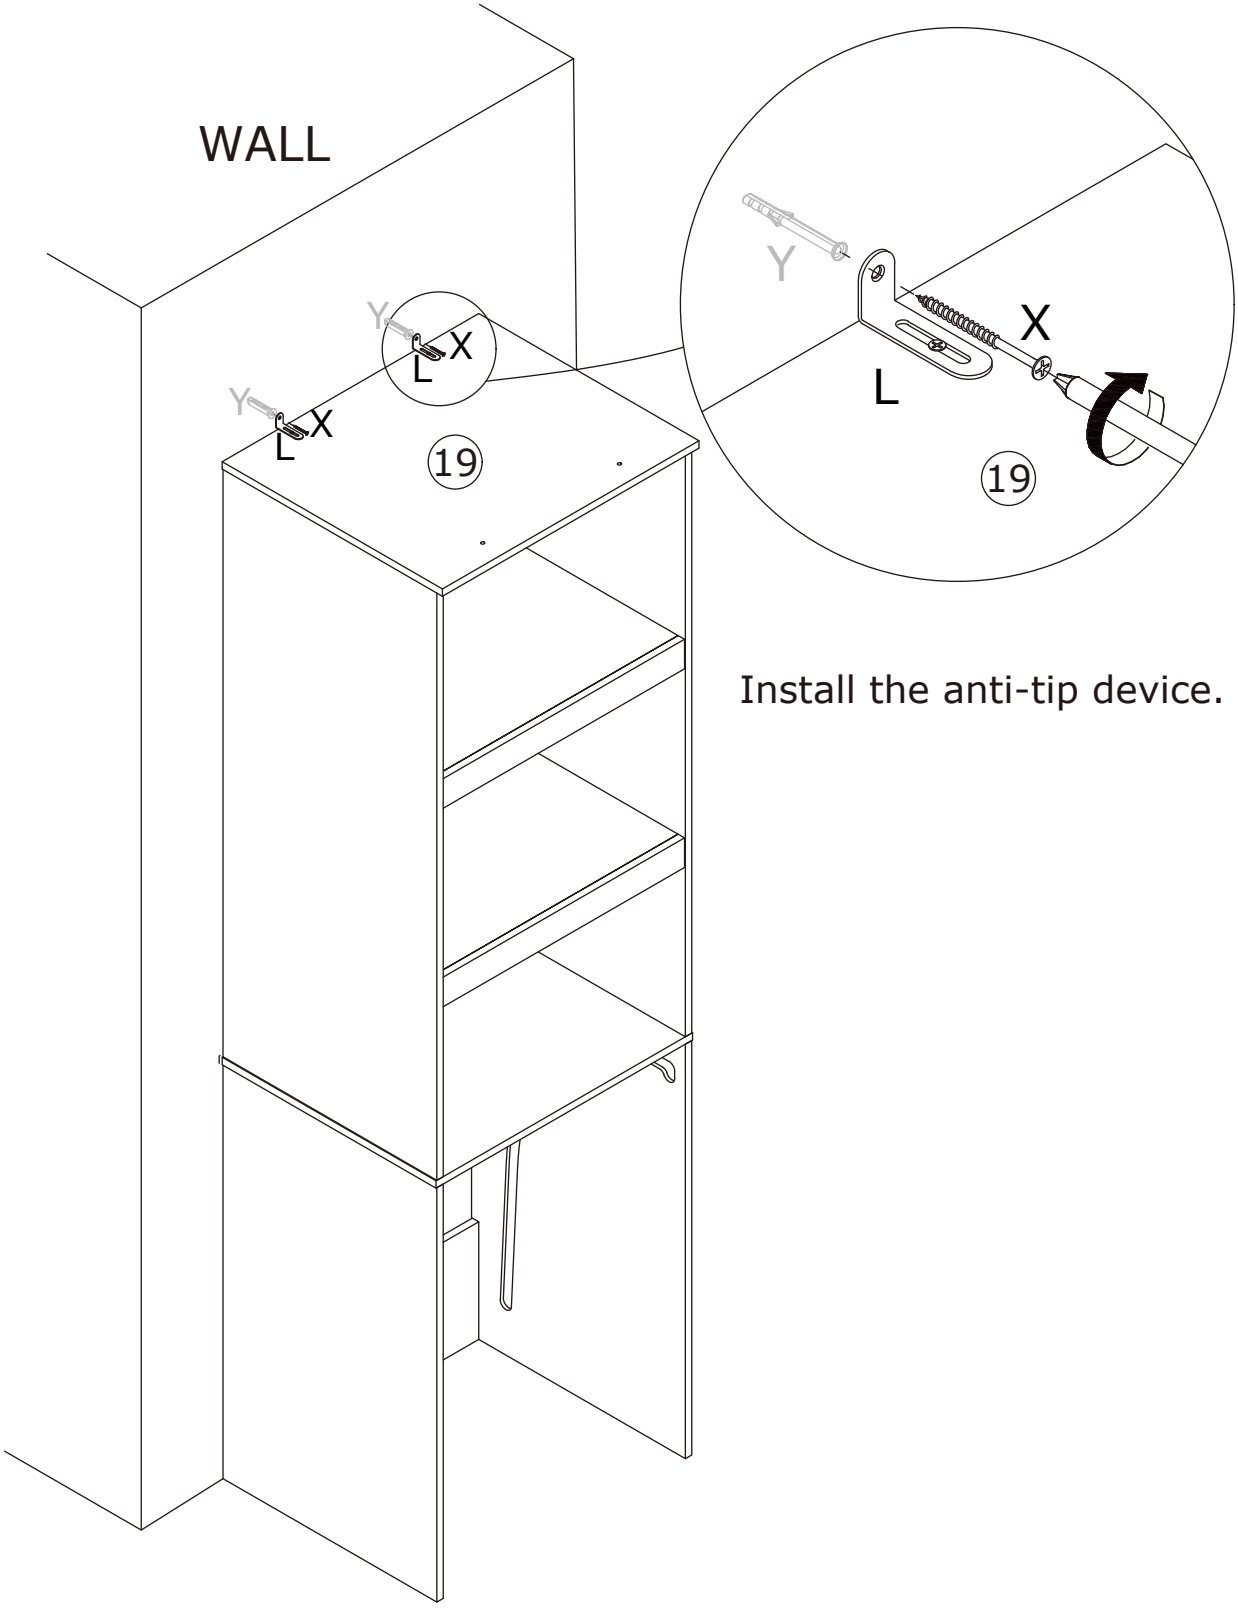


Install the anti-tip device.

24



B x 10	D x 10	AA x 4	
 CRA0635B			

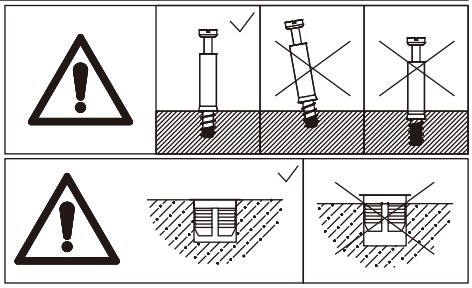


Insert threaded insert (D) into the pre-drilled holes of Panels 14 and 18, and fasten cam screw (B) into the threaded inserts.
Insert threaded insert (AA) into Panel 18.

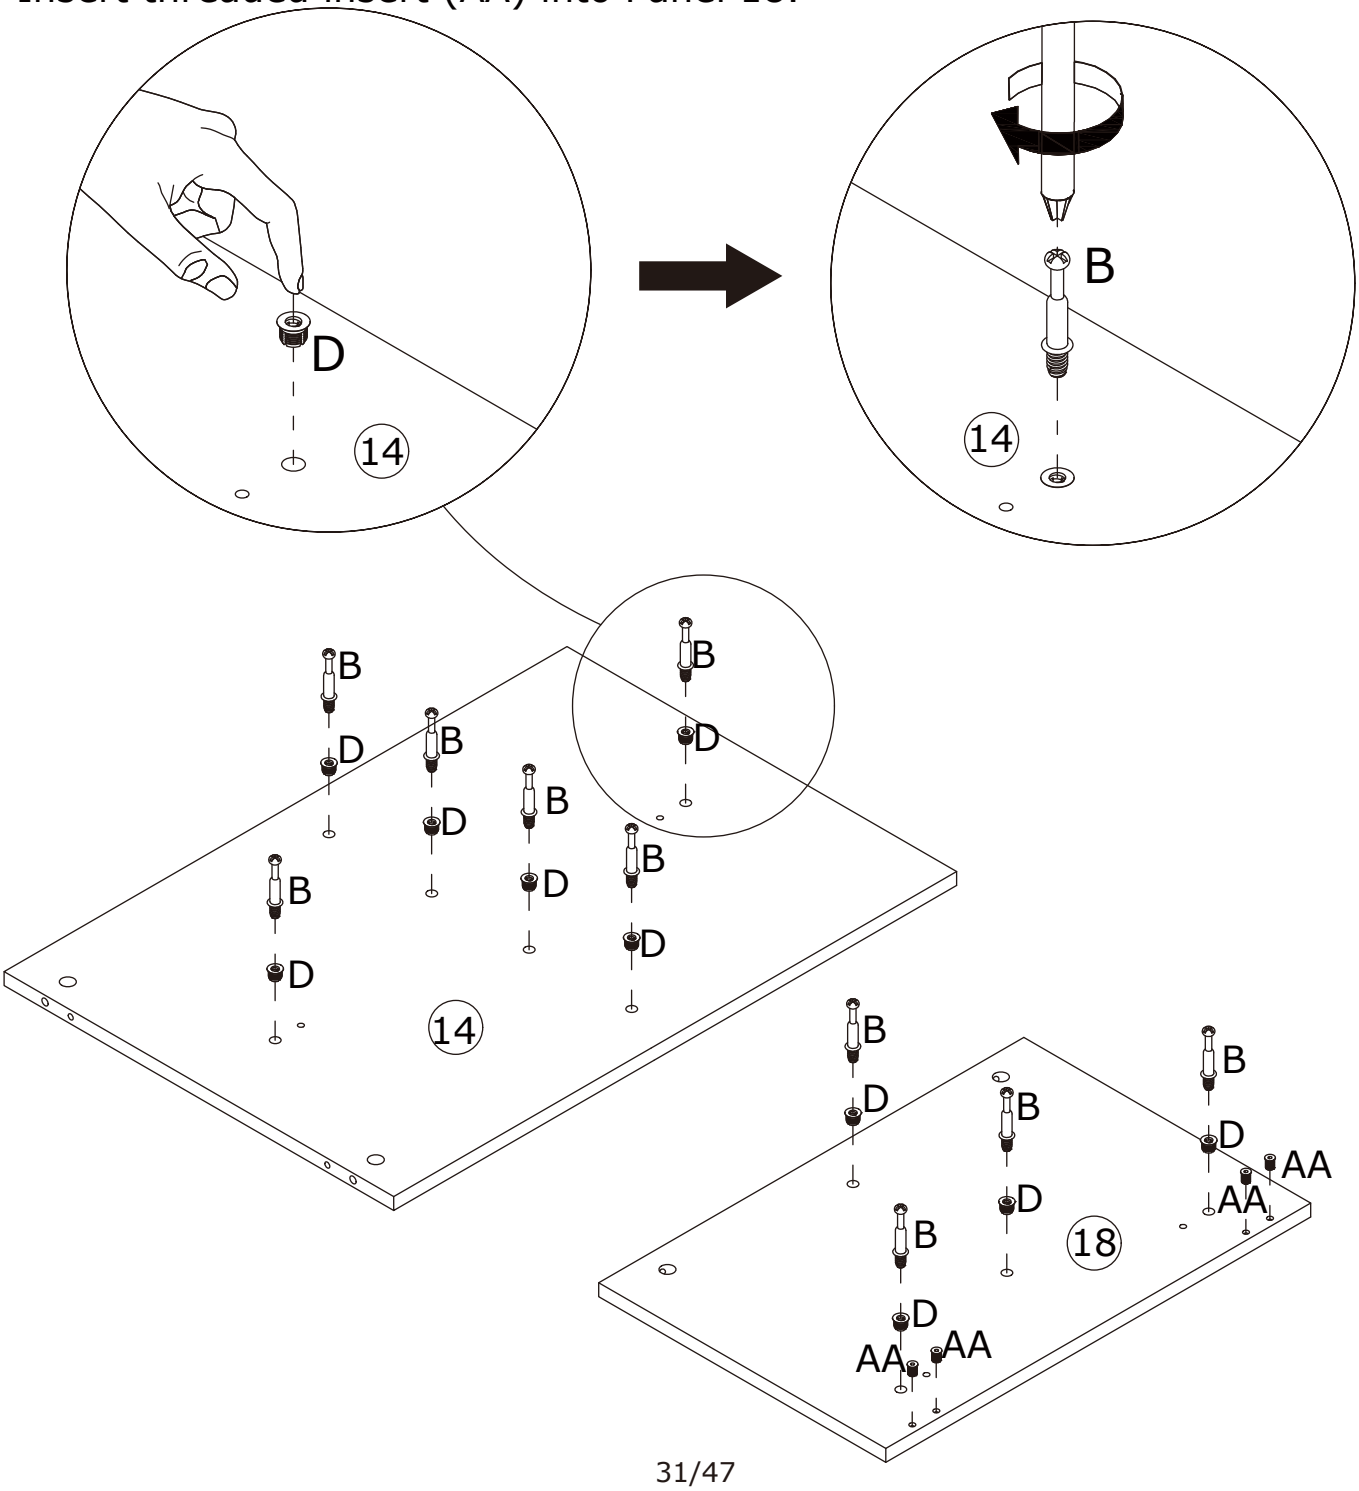


25


A x 6	C x 2	
 CRB1595A	 CRF0630A	

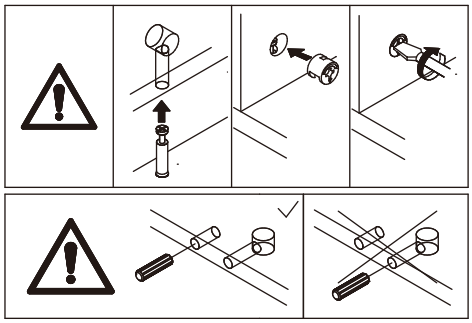


Connect Panels 7 and 12 to Panel 14 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

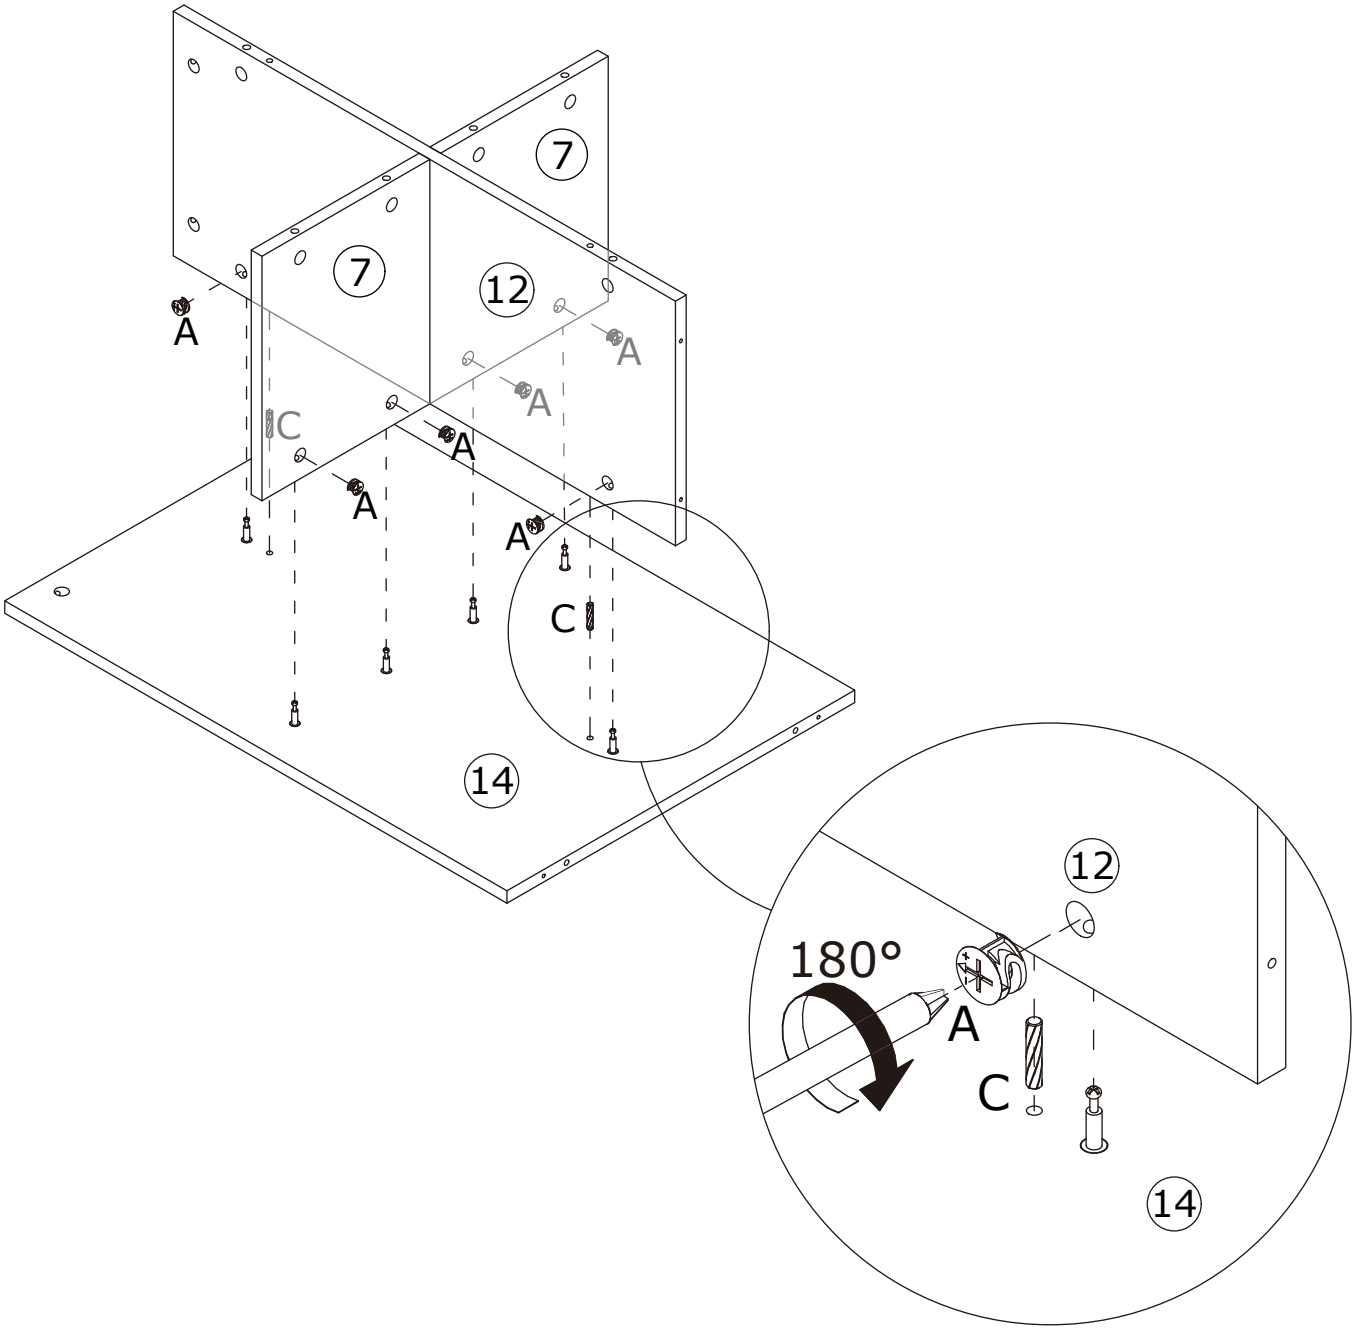


26



G x 8	W x 4	
 CRD3514A		

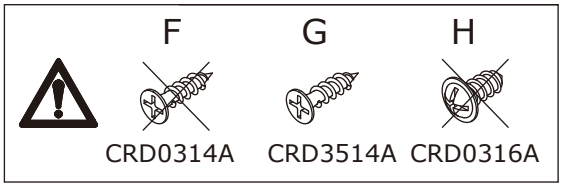


Secure part (W) to Panel 8 with screws (G).

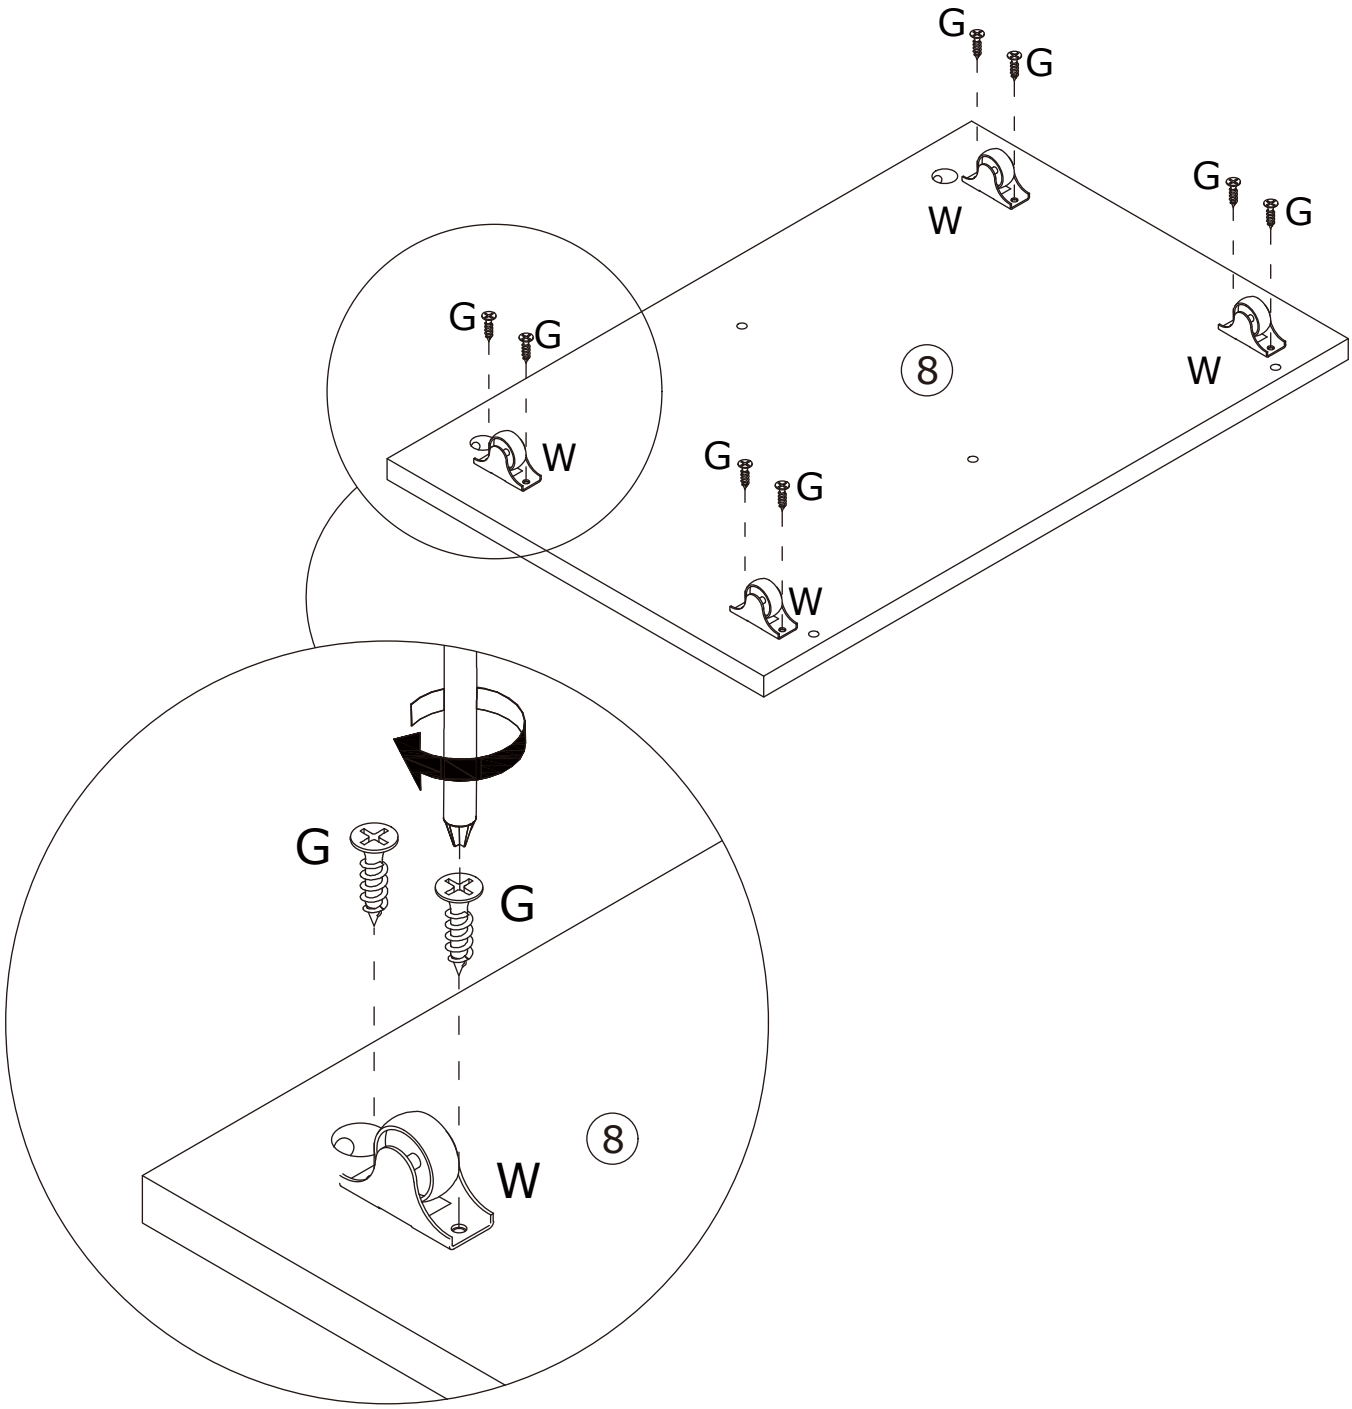


27




A x 4	C x 2	
 CRB1595A	 CRF0630A	

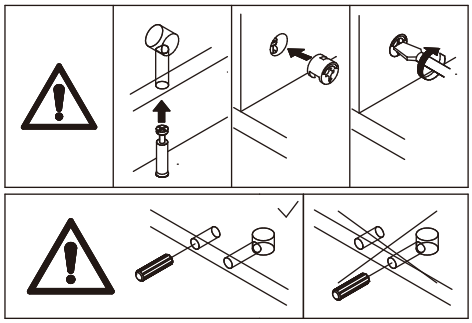


Connect Panel 18 to Panels 12 and 14 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

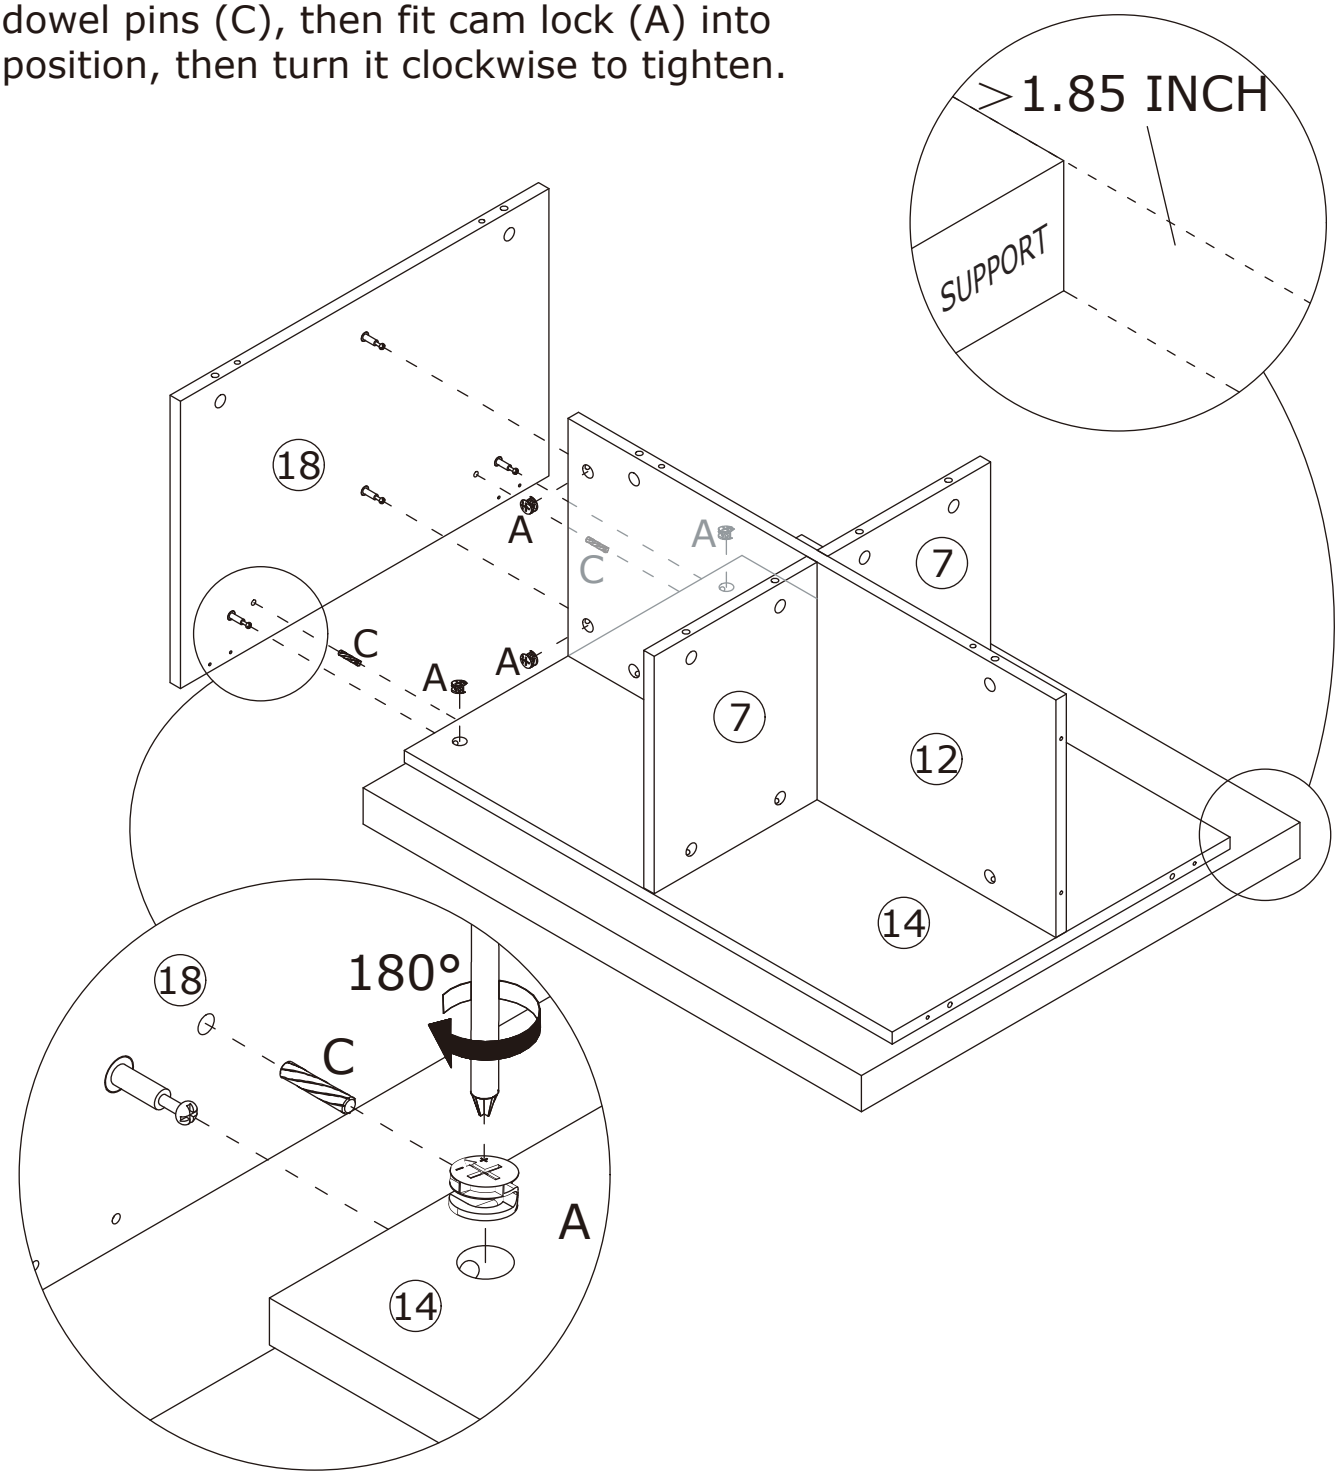


28

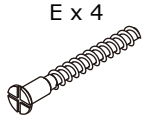

E x 4	C x 2	
 CRC0540A	 CRF0630A	

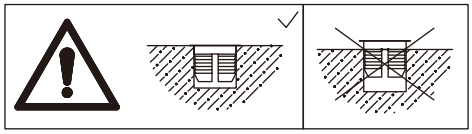



Connect Panel 8 to Panel 14 with dowel pins (C), then secure Panel 8 to Panels 12 and 14 with screws (E).

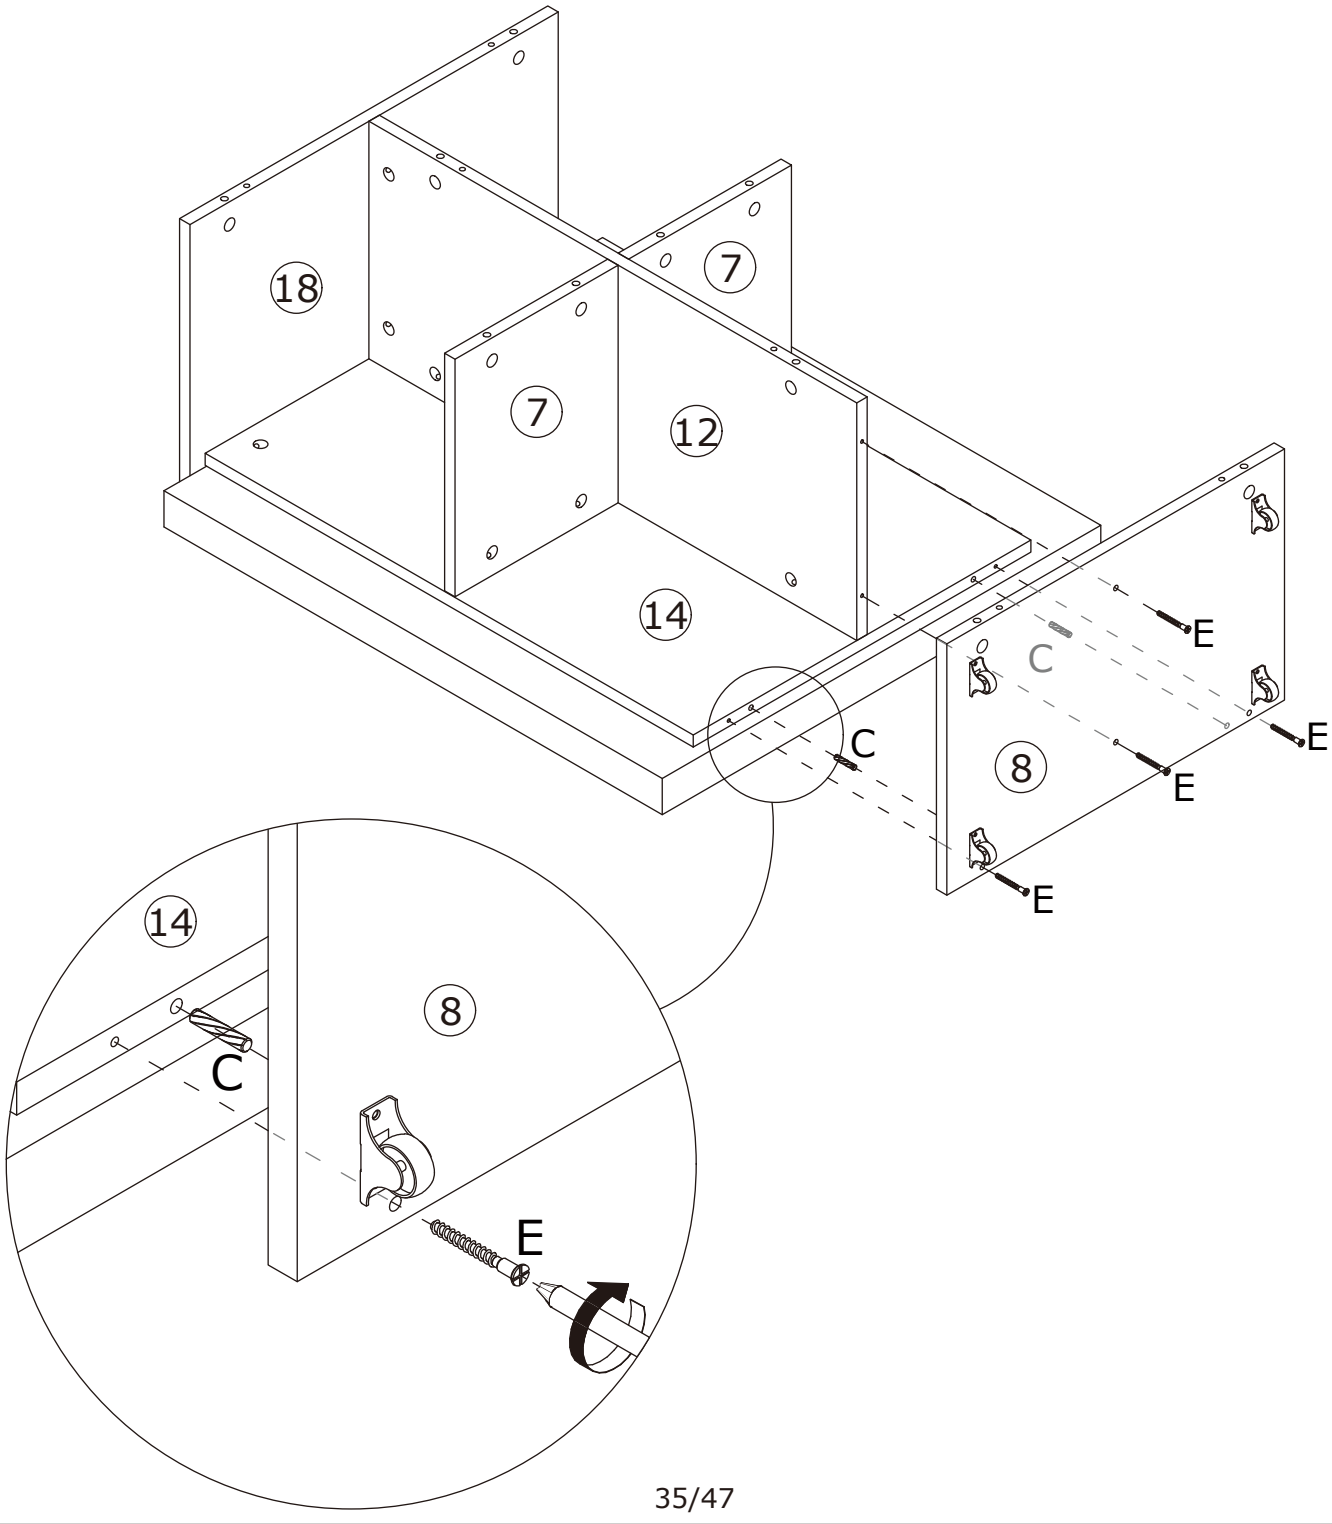


29

B x 10	D x 10	F x 2	T x 2	
 CRA0635B		 CRD0314A		

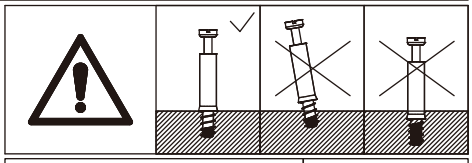


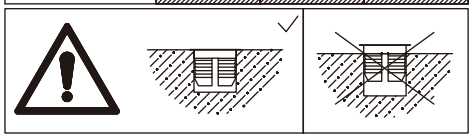



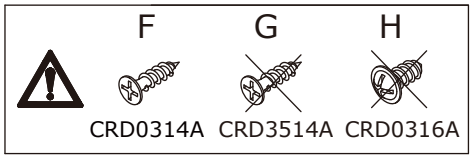


Secure part (T) to Panel 5 with screws (F).


Insert threaded insert (D) into the pre-drilled holes of Panel 5, and fasten cam screw (B) into the threaded inserts.

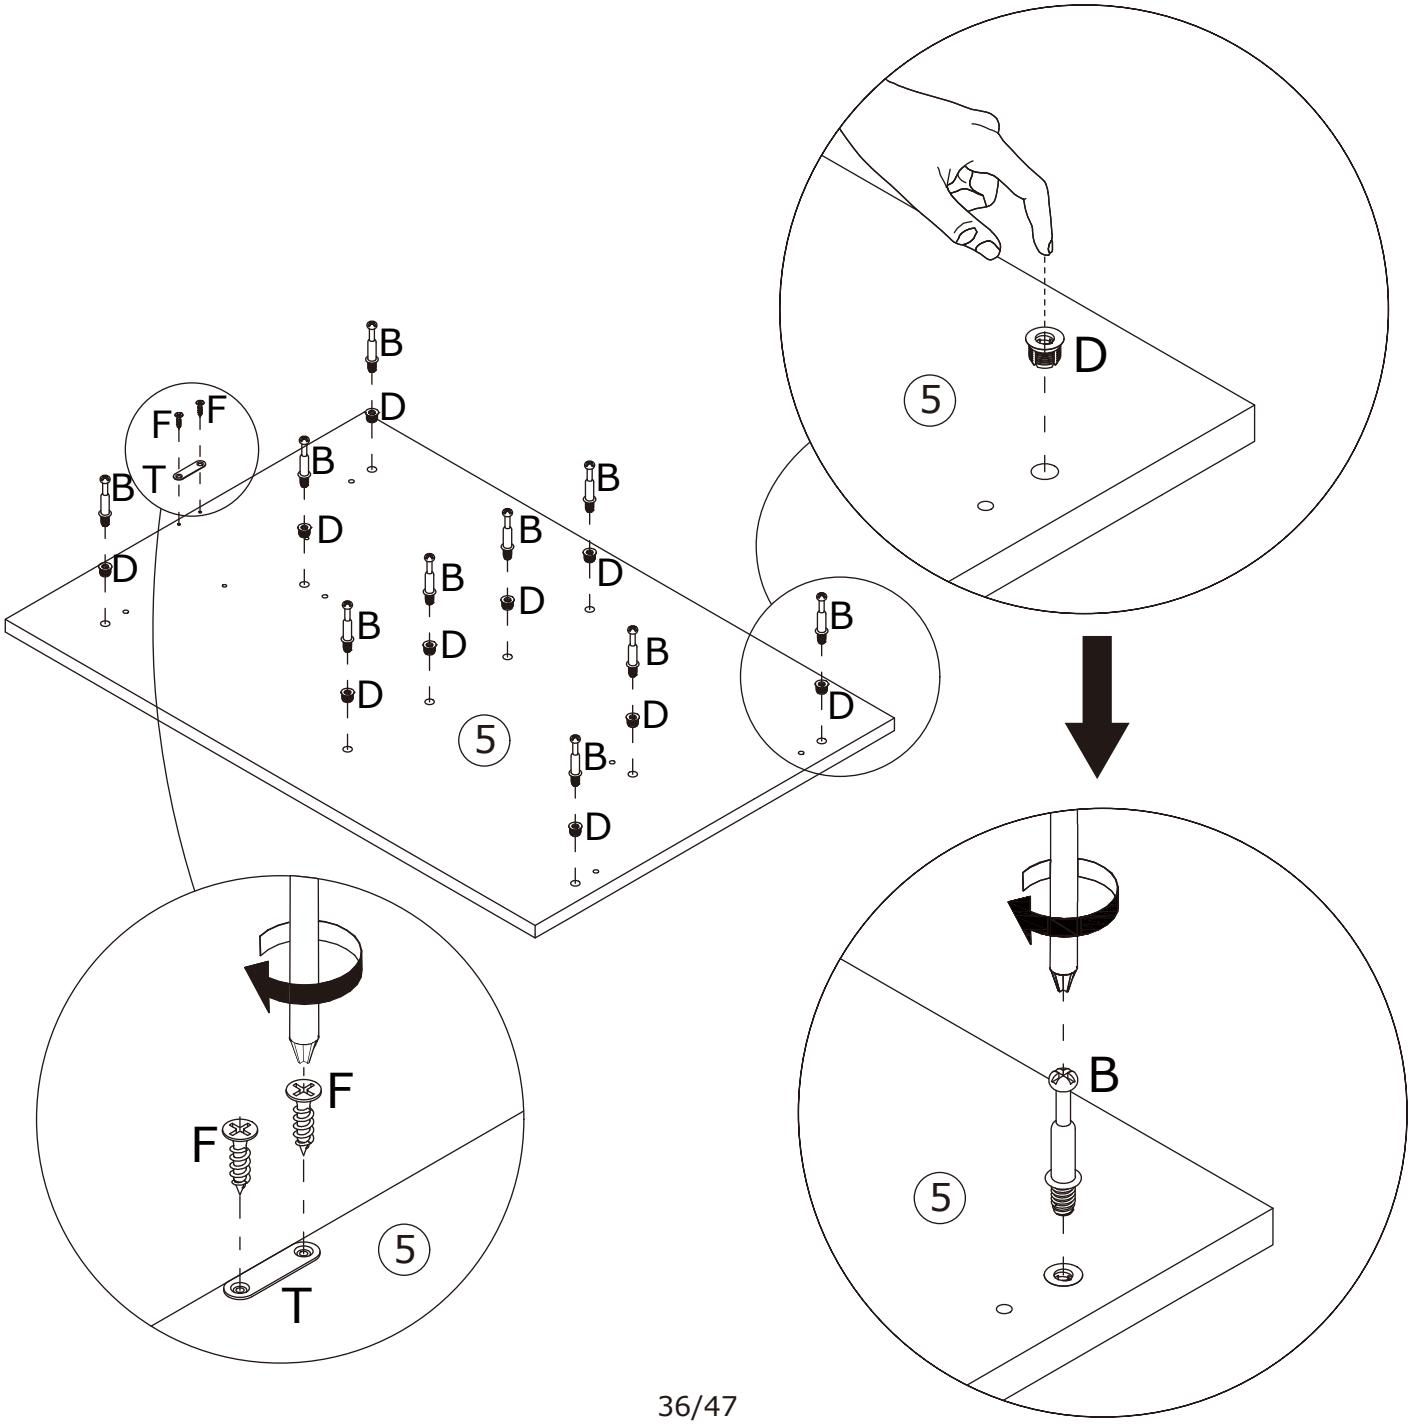



30


P x 2	Q x 1	
 CRE0420A		

Secure handle (Q) to Panel 5 with screws (P).

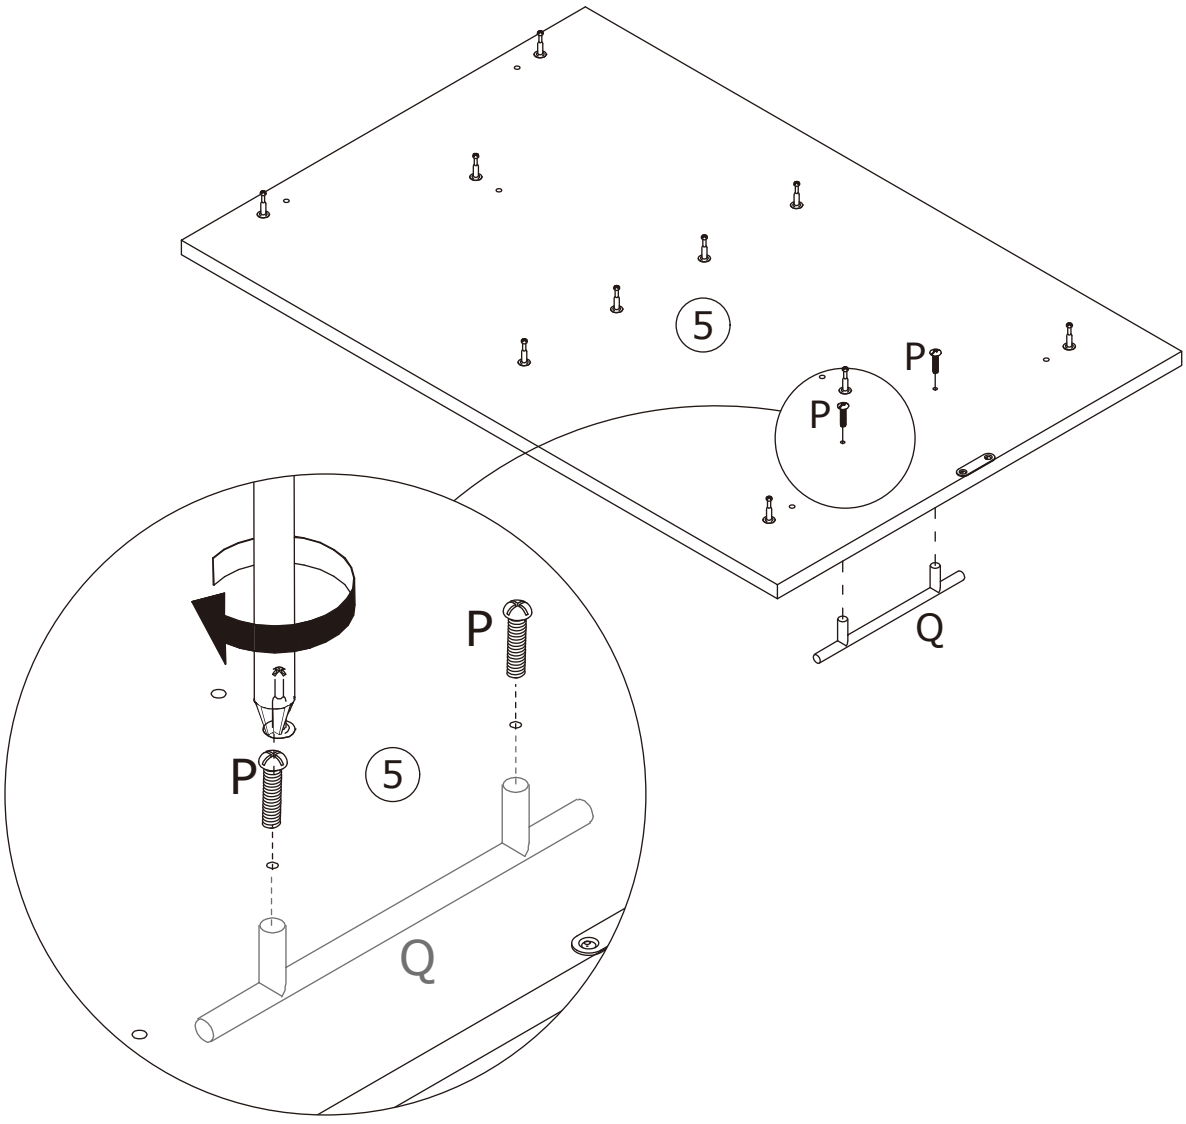


31


A x 10	C x 6	
 CRB1595A	 CRF0630A	

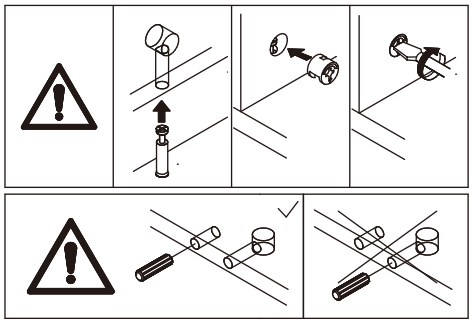

Connect Panel 5 to Panels 8, 12 and 18 with dowel pins (C), then fit cam lock (A) into position, then turn it clockwise to tighten.

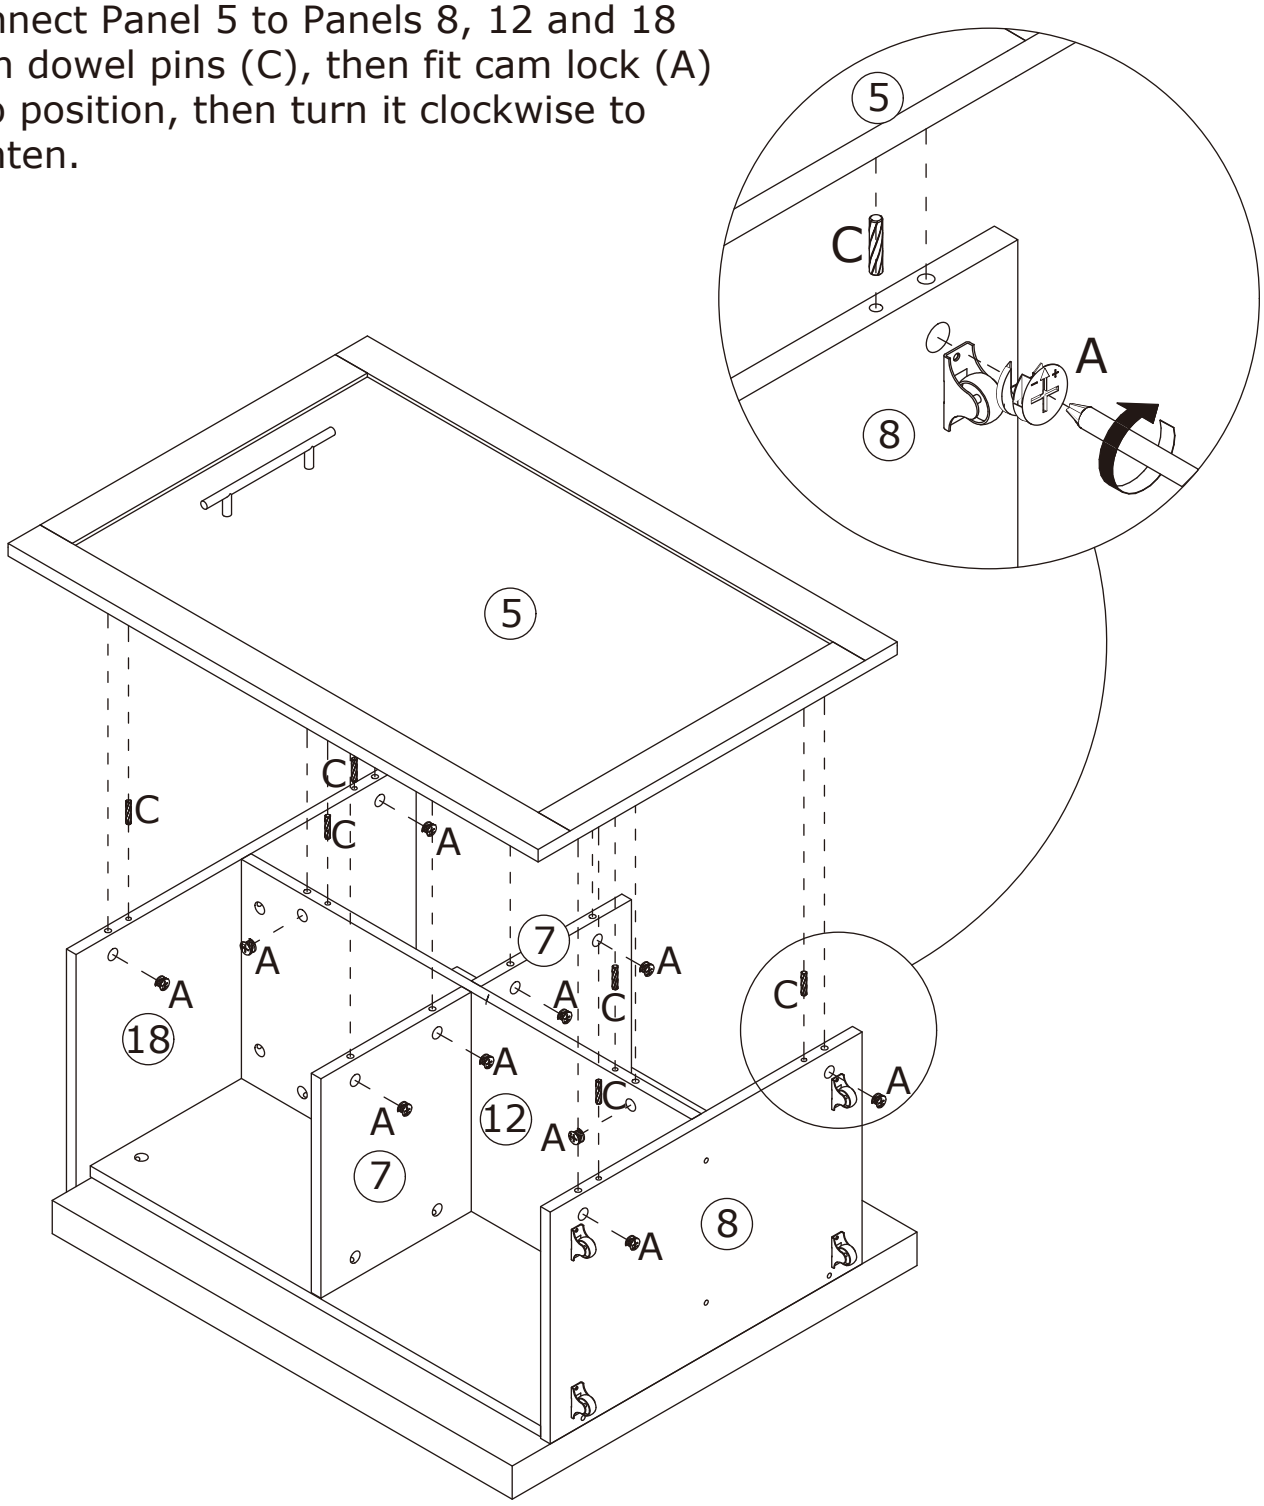


32


G x 6	AC x 1	
		
CRD3514A	AC-5	

	F	G	H
			
	CRD0314A	CRD3514A	CRD0316A


Secure part (AC-5) to Panel 4 with screws (G).

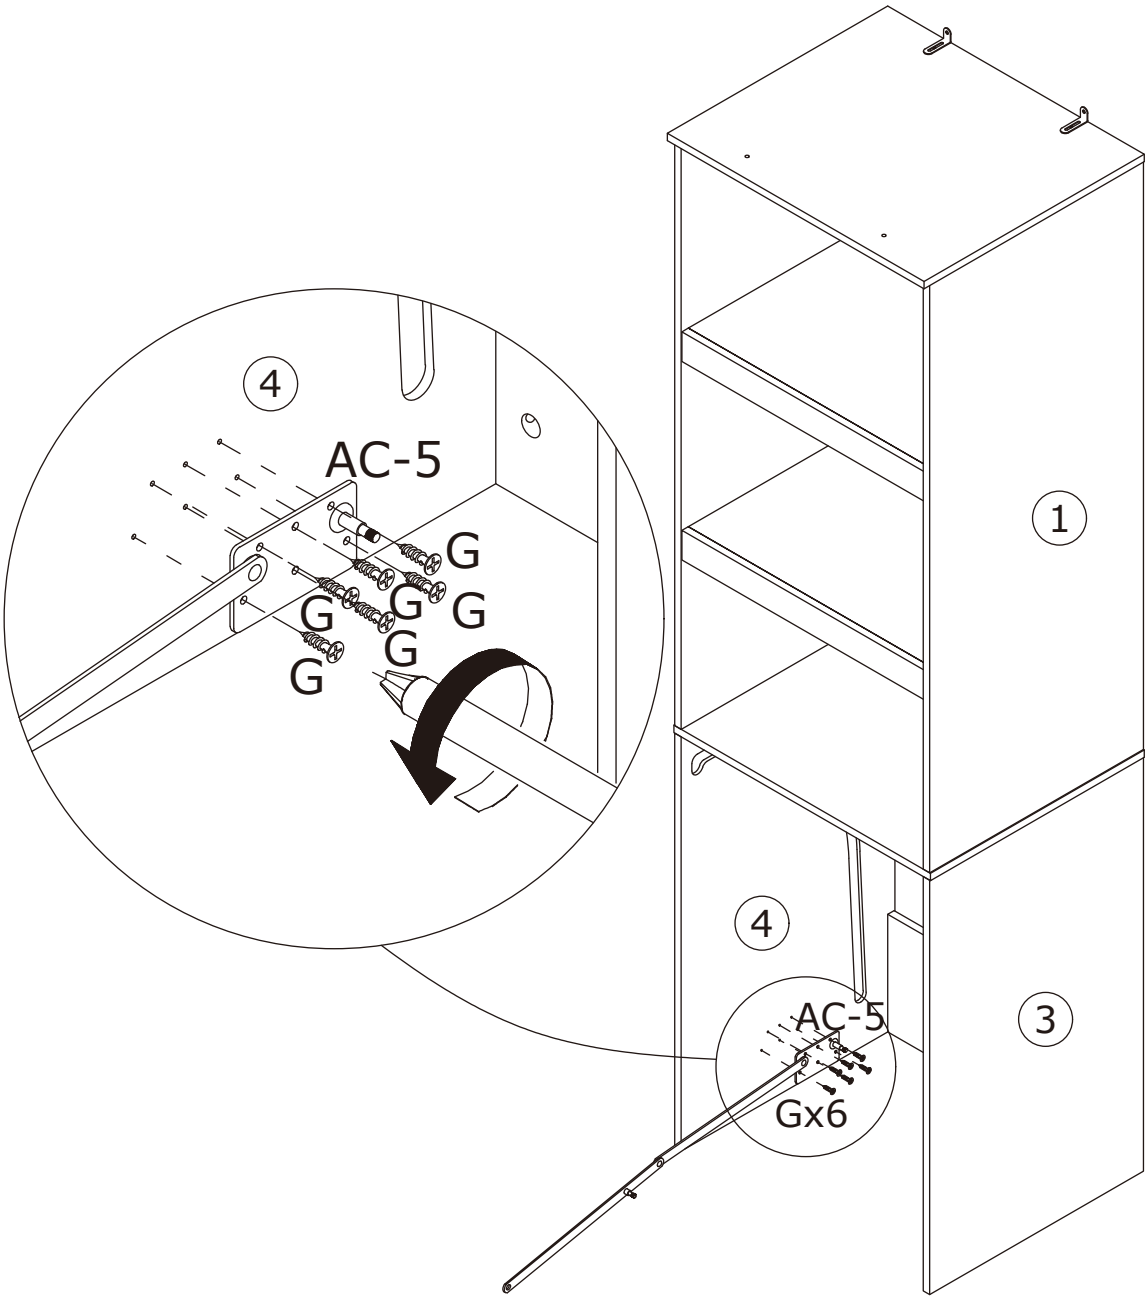

33

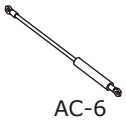K x 1	AC x 1	
		
M6	AC-6 AC-7	


Secure part (AC-6) to part (AC-5) with nut (AC-7).

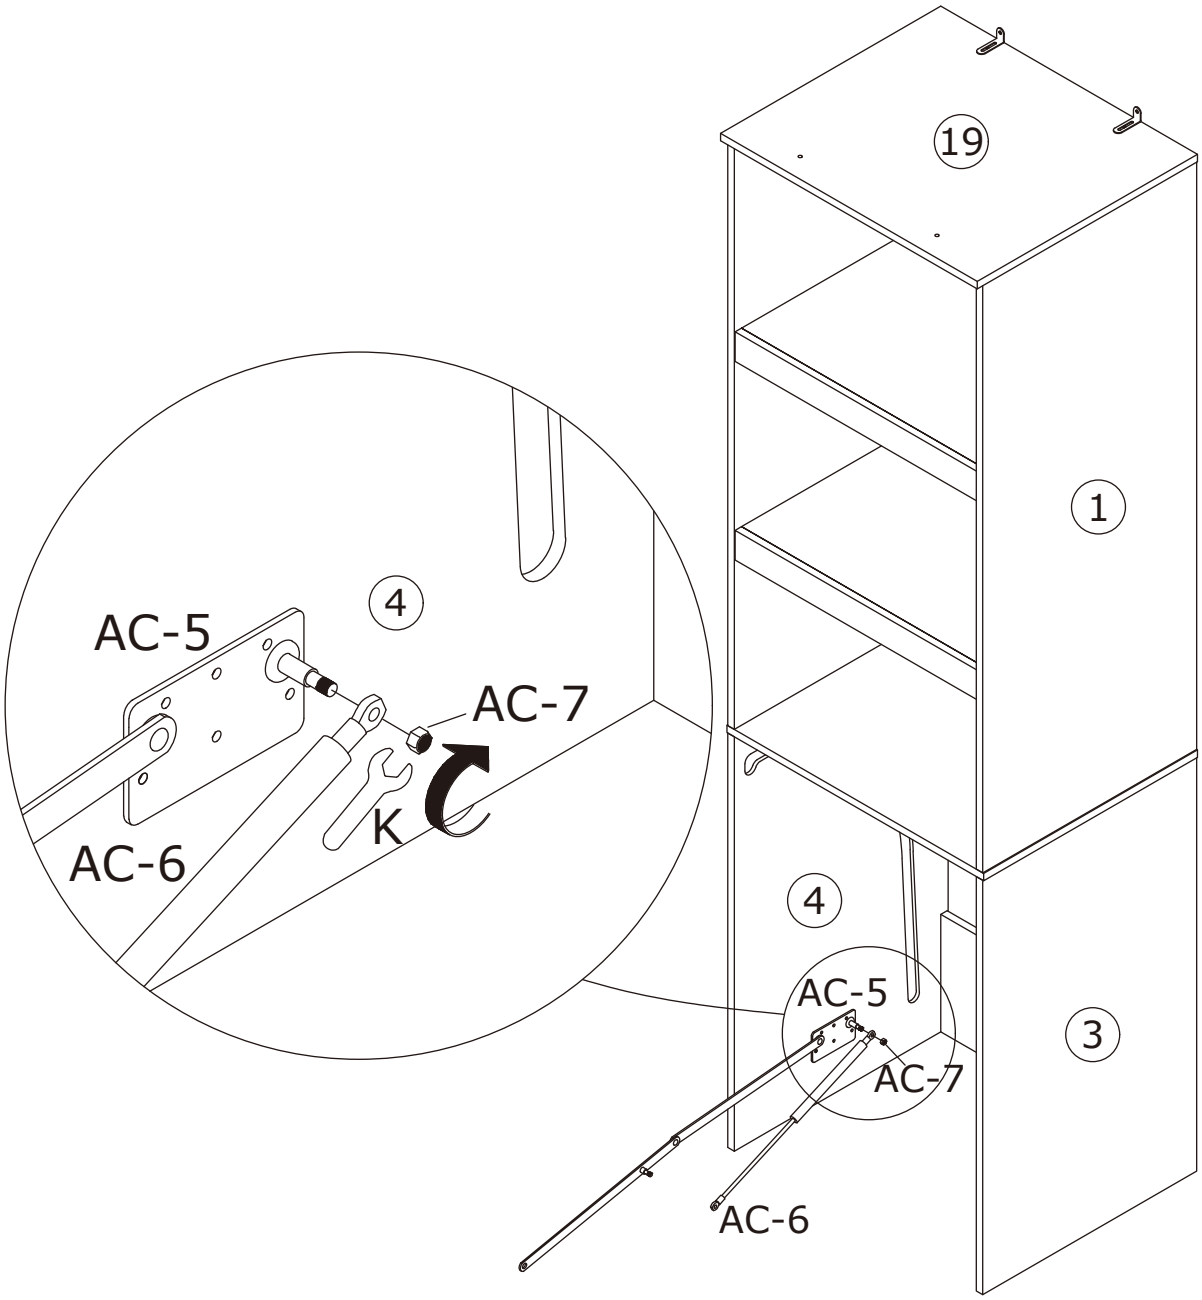


34


AA x 10





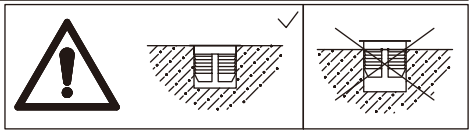


Insert threaded insert (AA) to Panel 9.

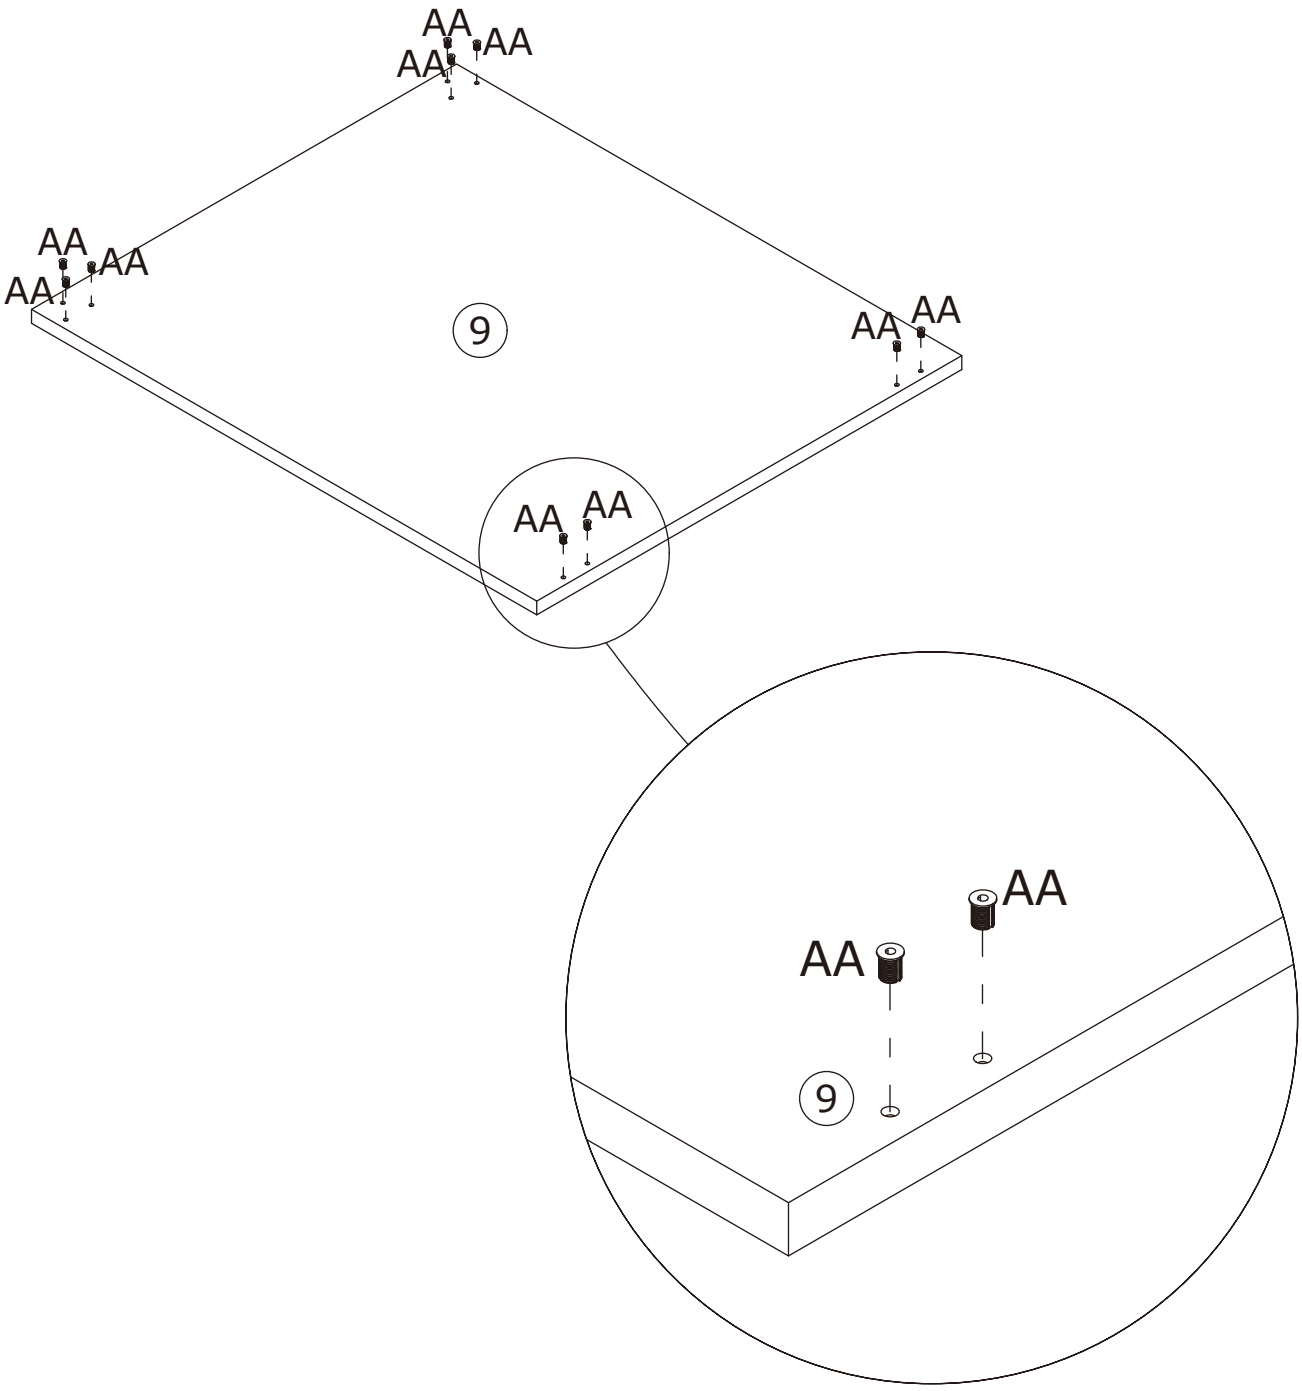



35

G x 6	AB x 1	AC x 1	
CRD3514A	M3	AC-1 AC-2 AC-3	

Secure part (AC-1) to parts (AC-2) and (AC-3), then secure parts (AC-2) and (AC-3) to Panel 9 with screws (G).

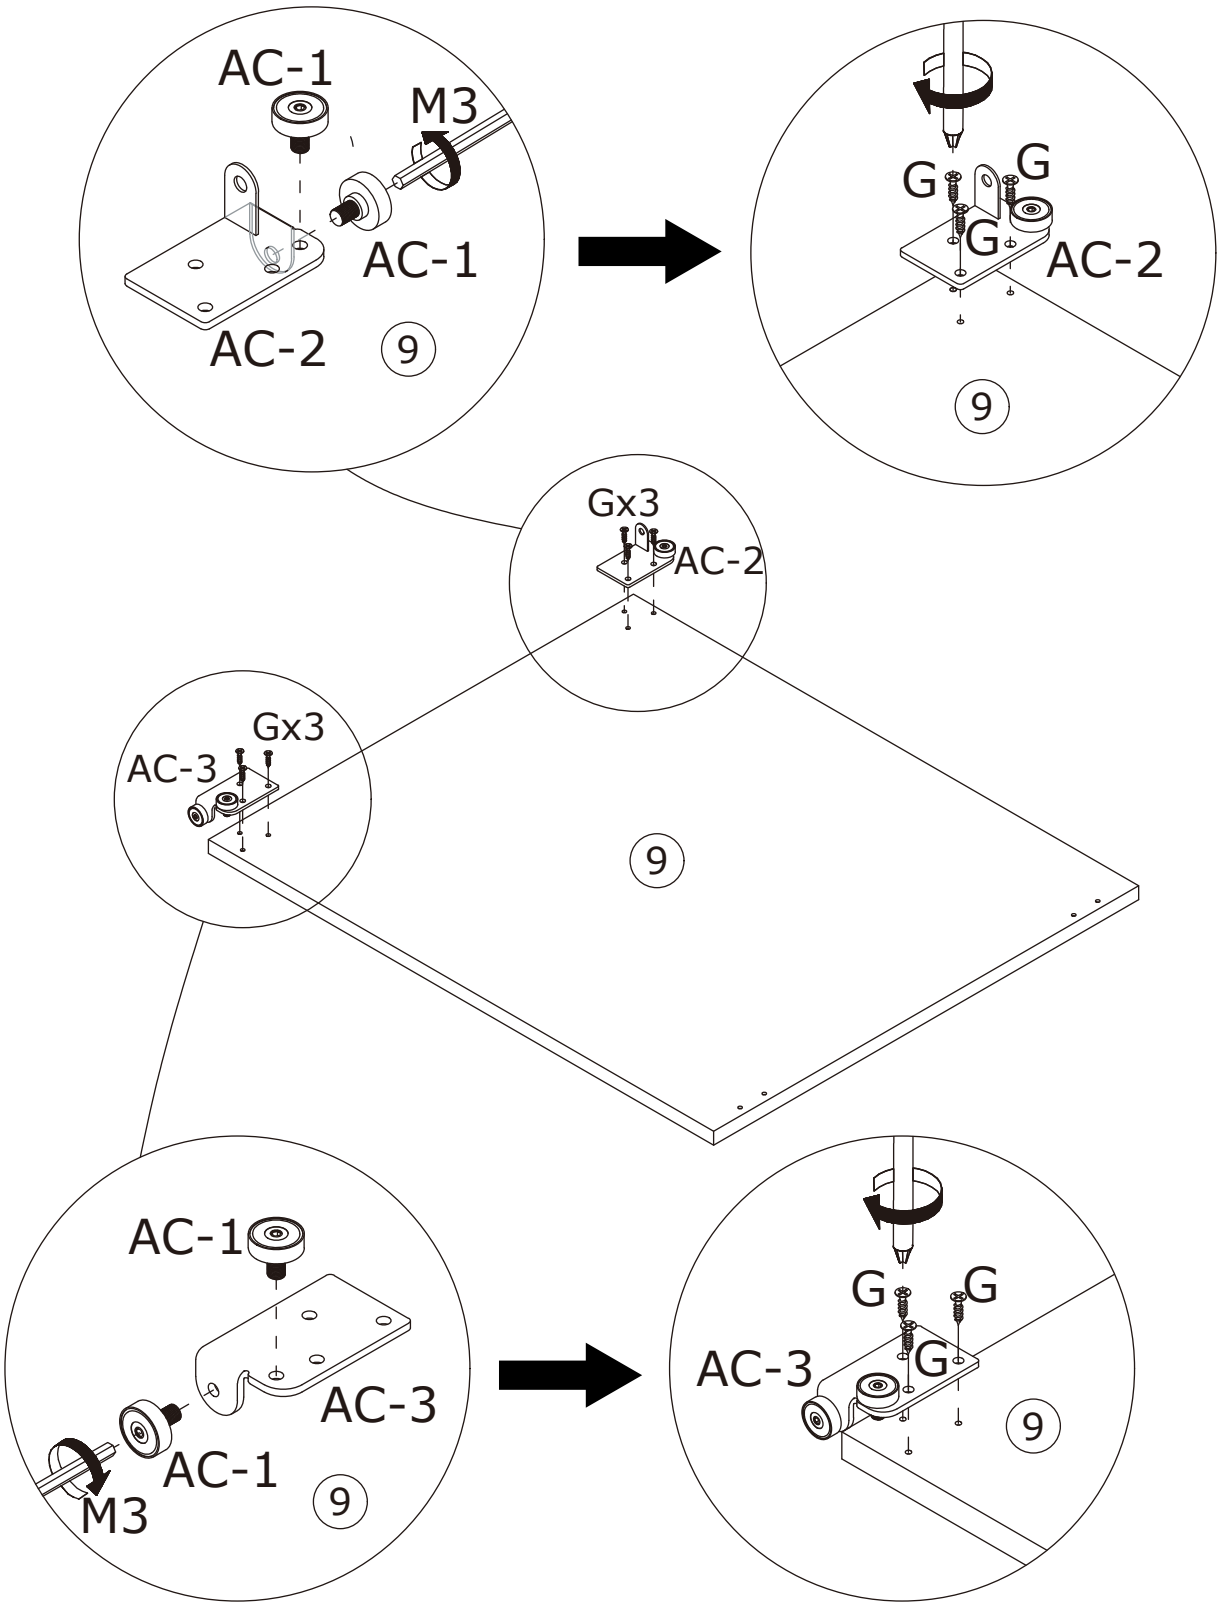


36

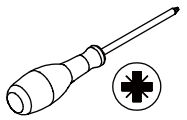G x 8	V x 2	
 CRD3514A		

	F	G	H
	 CRD0314A	 CRD3514A	 CRD0316A


As shown in the diagram, place supports under the component during installation, then secure hinge (V) to Panels 9 and 18 with screws (G).

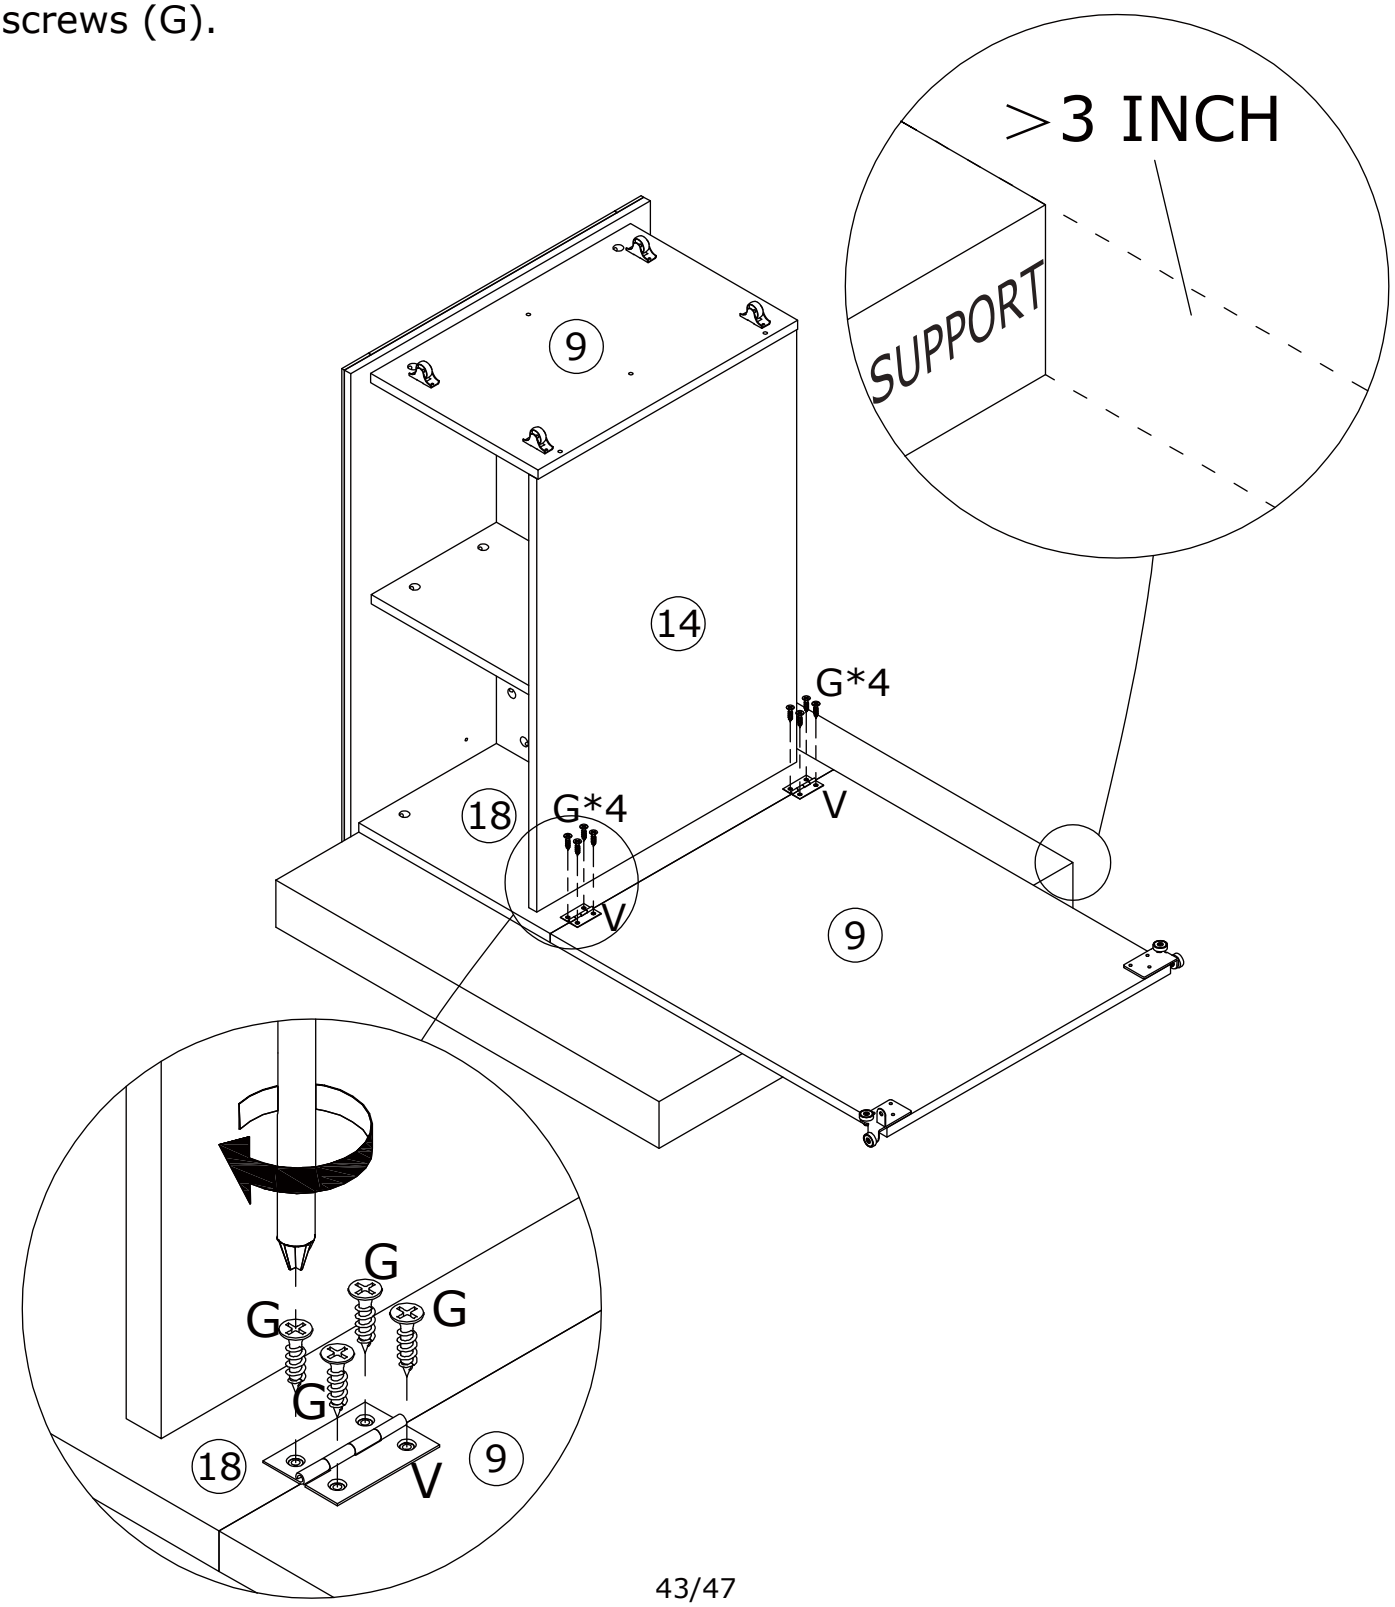



37

AC x 1	Z x 2	
		
AC-4	M4	

Hold Panel 9 by hand, then secure part (AC-4) to parts (AC-5) and (AC-2).

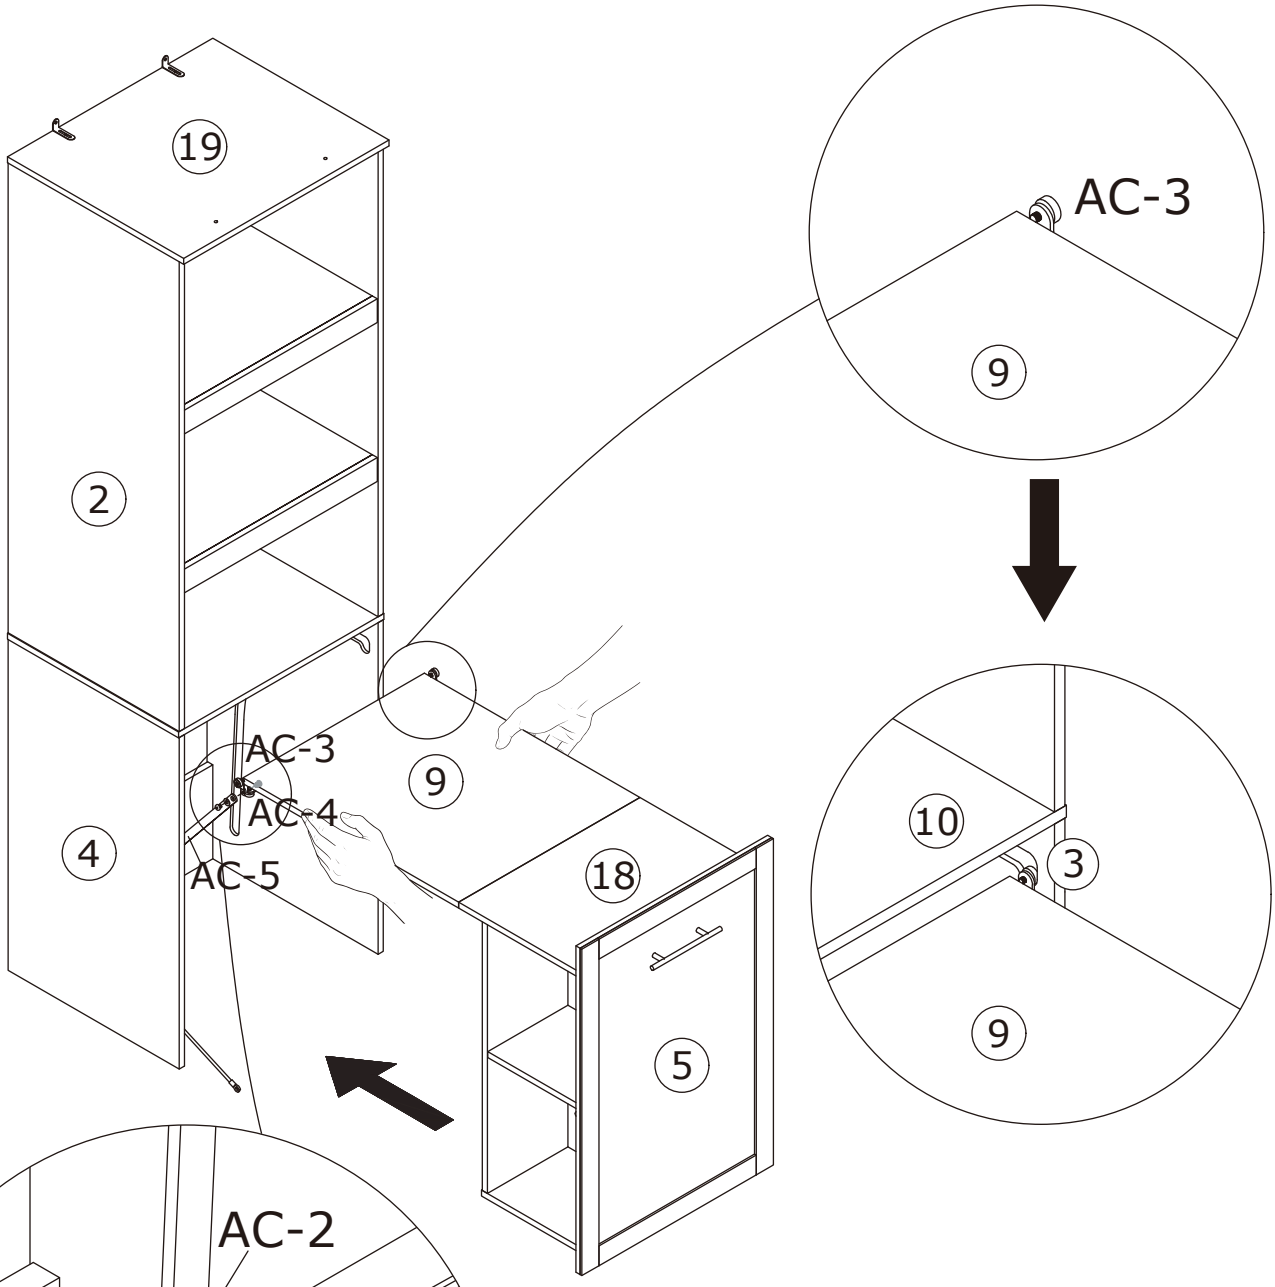

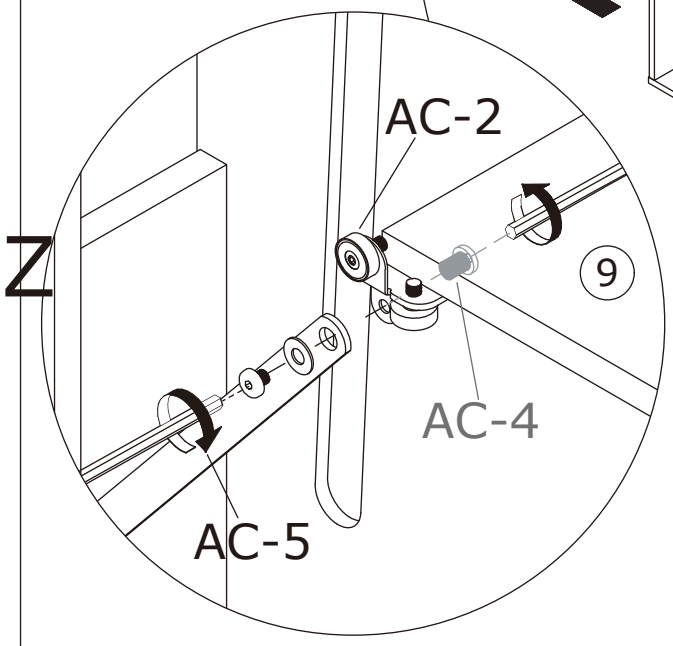


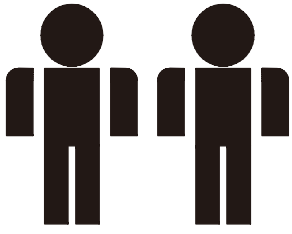


38


K x 1	AC x 1	
M6	AC-7	

Push the cabinet unit in the direction of the arrow to the connection position of parts (AC-5) and (AC-6), then secure part (AC-6) to part (AC-5) with and nut (AC-7).

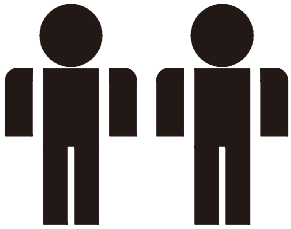


2 ADULTS

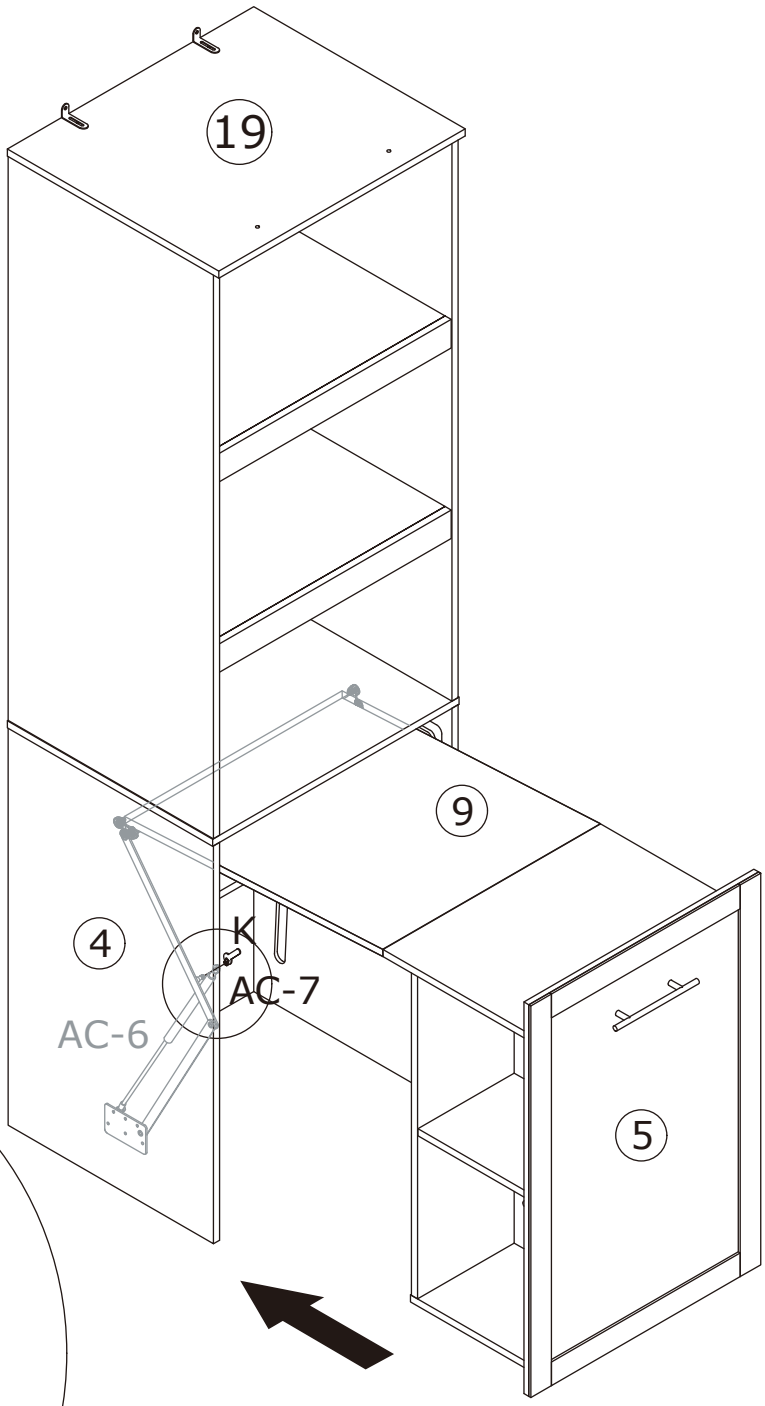

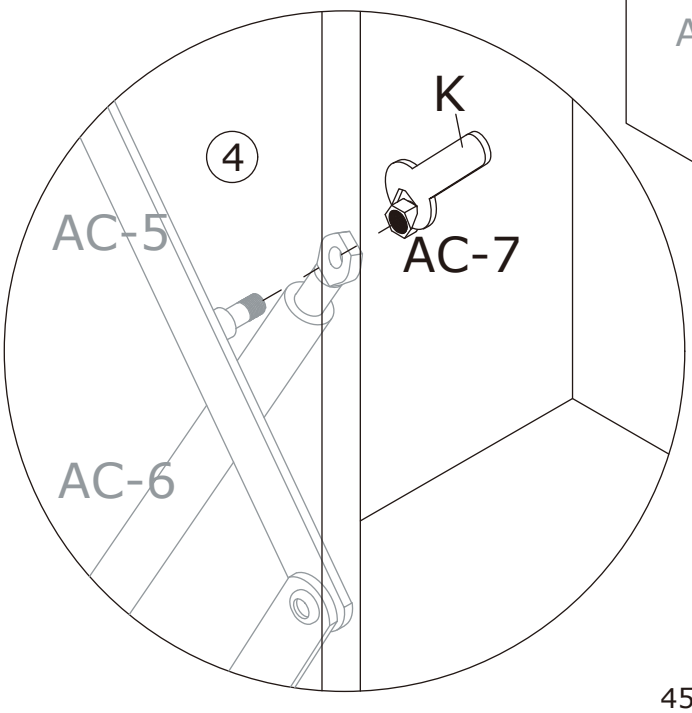


39

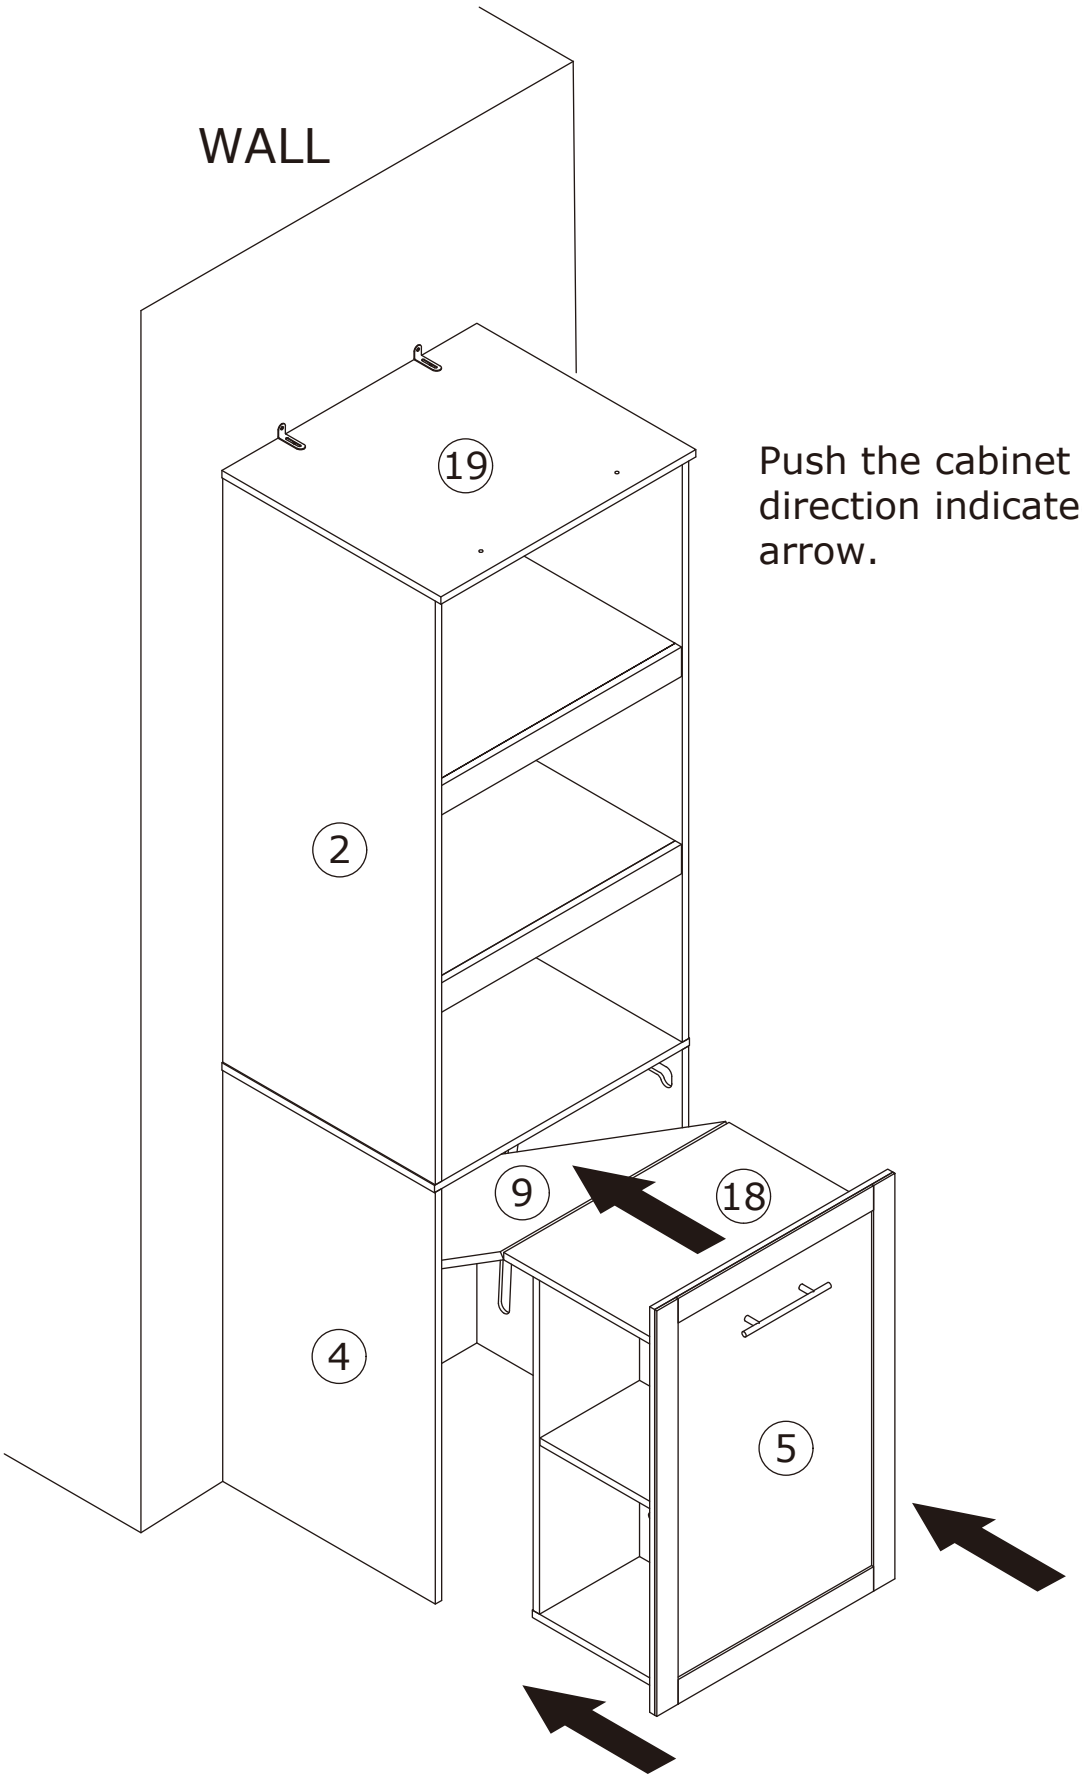

Push the cabinet unit in the direction indicated by the arrow.

40

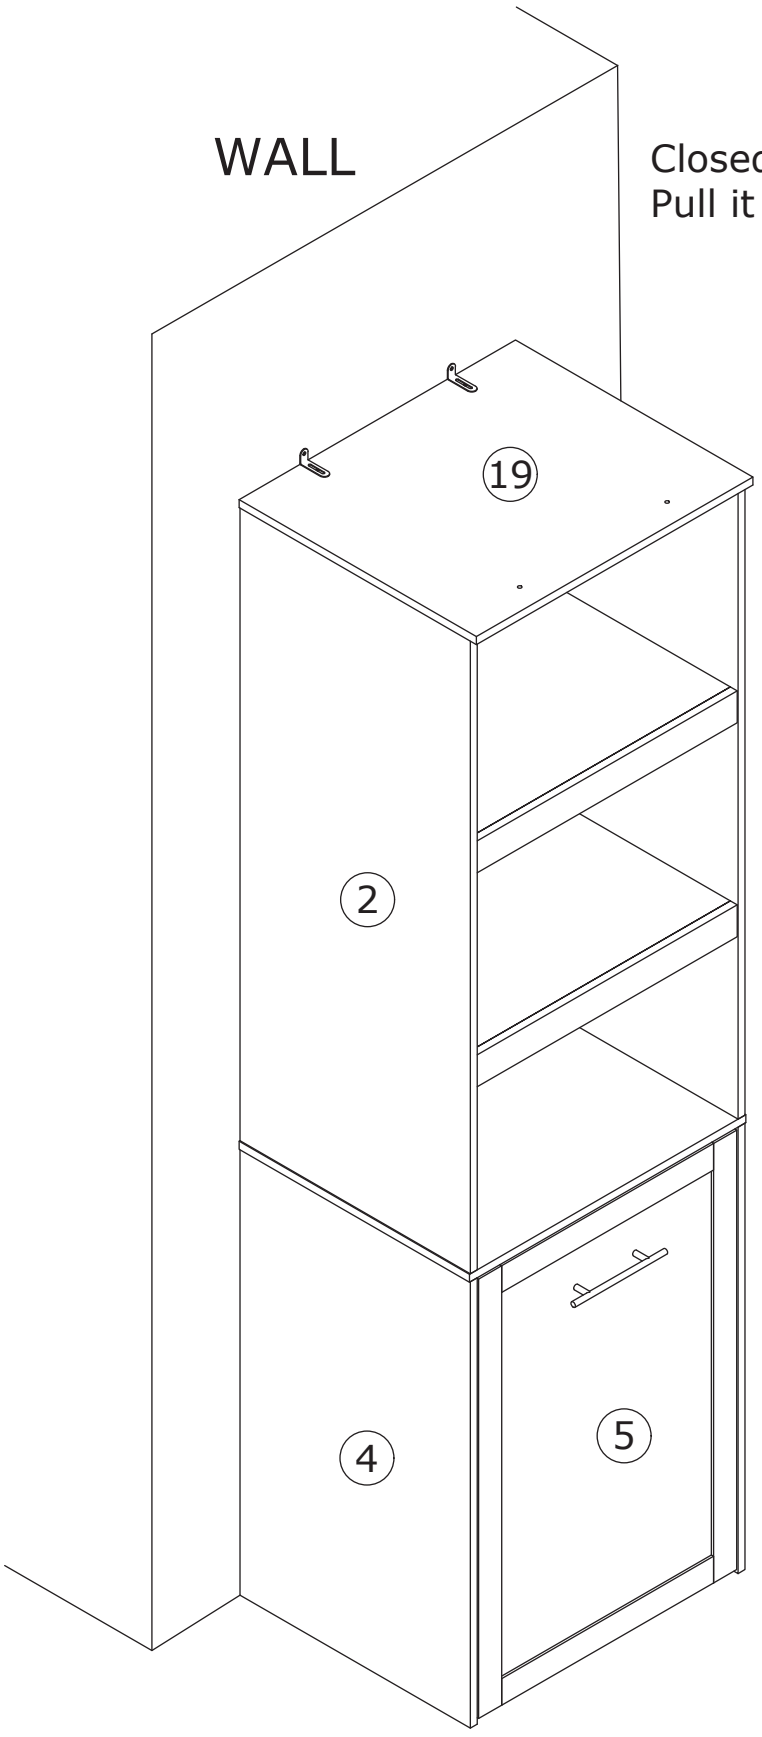

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068