
ASSEMBLY INSTRUCTION

R

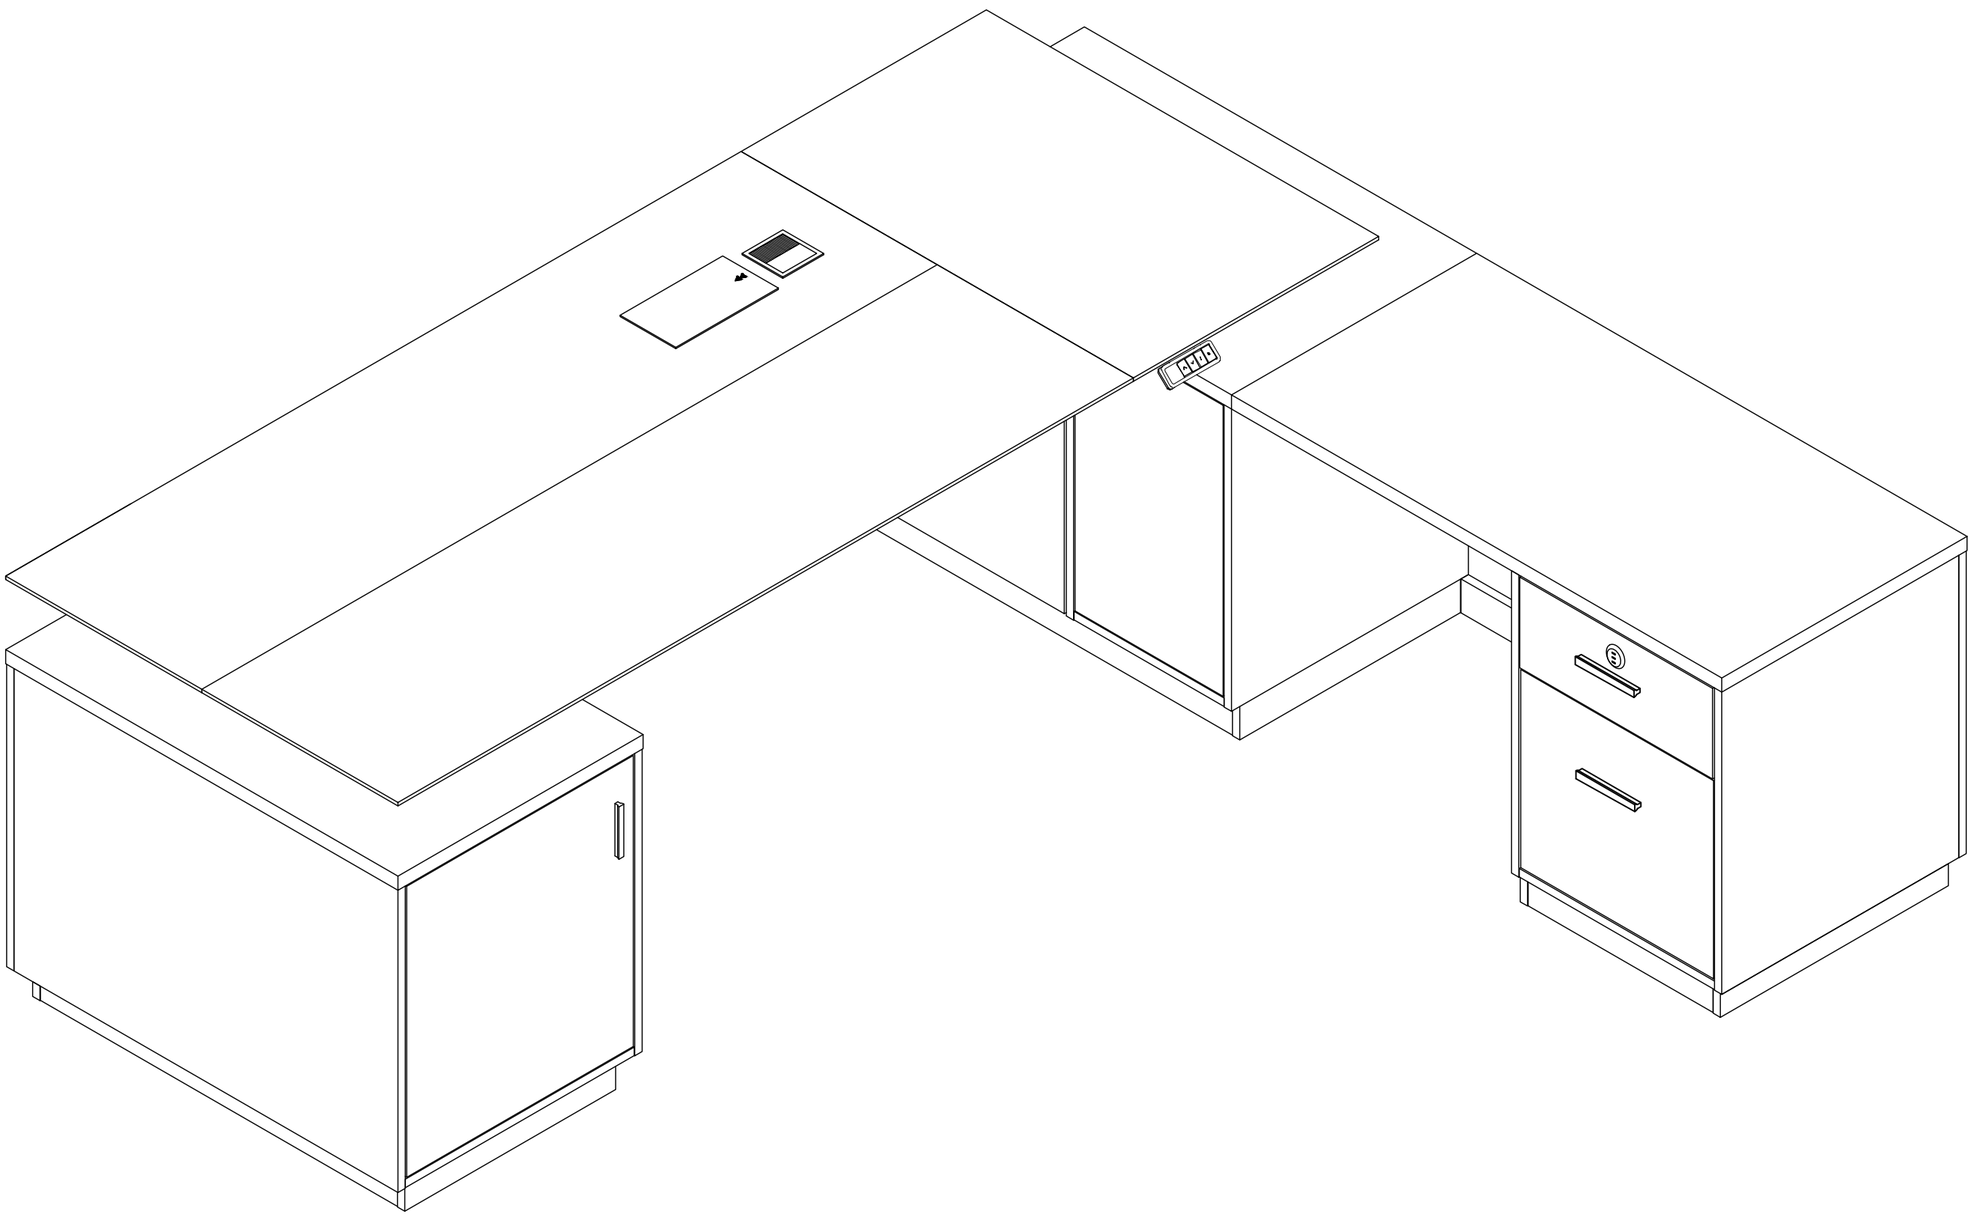


Suggestion

·It is recommended to install it near a power source, as later steps will require the power to be turned on.

·This product requires installation by at least two people.

ASSEMBLY INSTRUCTION

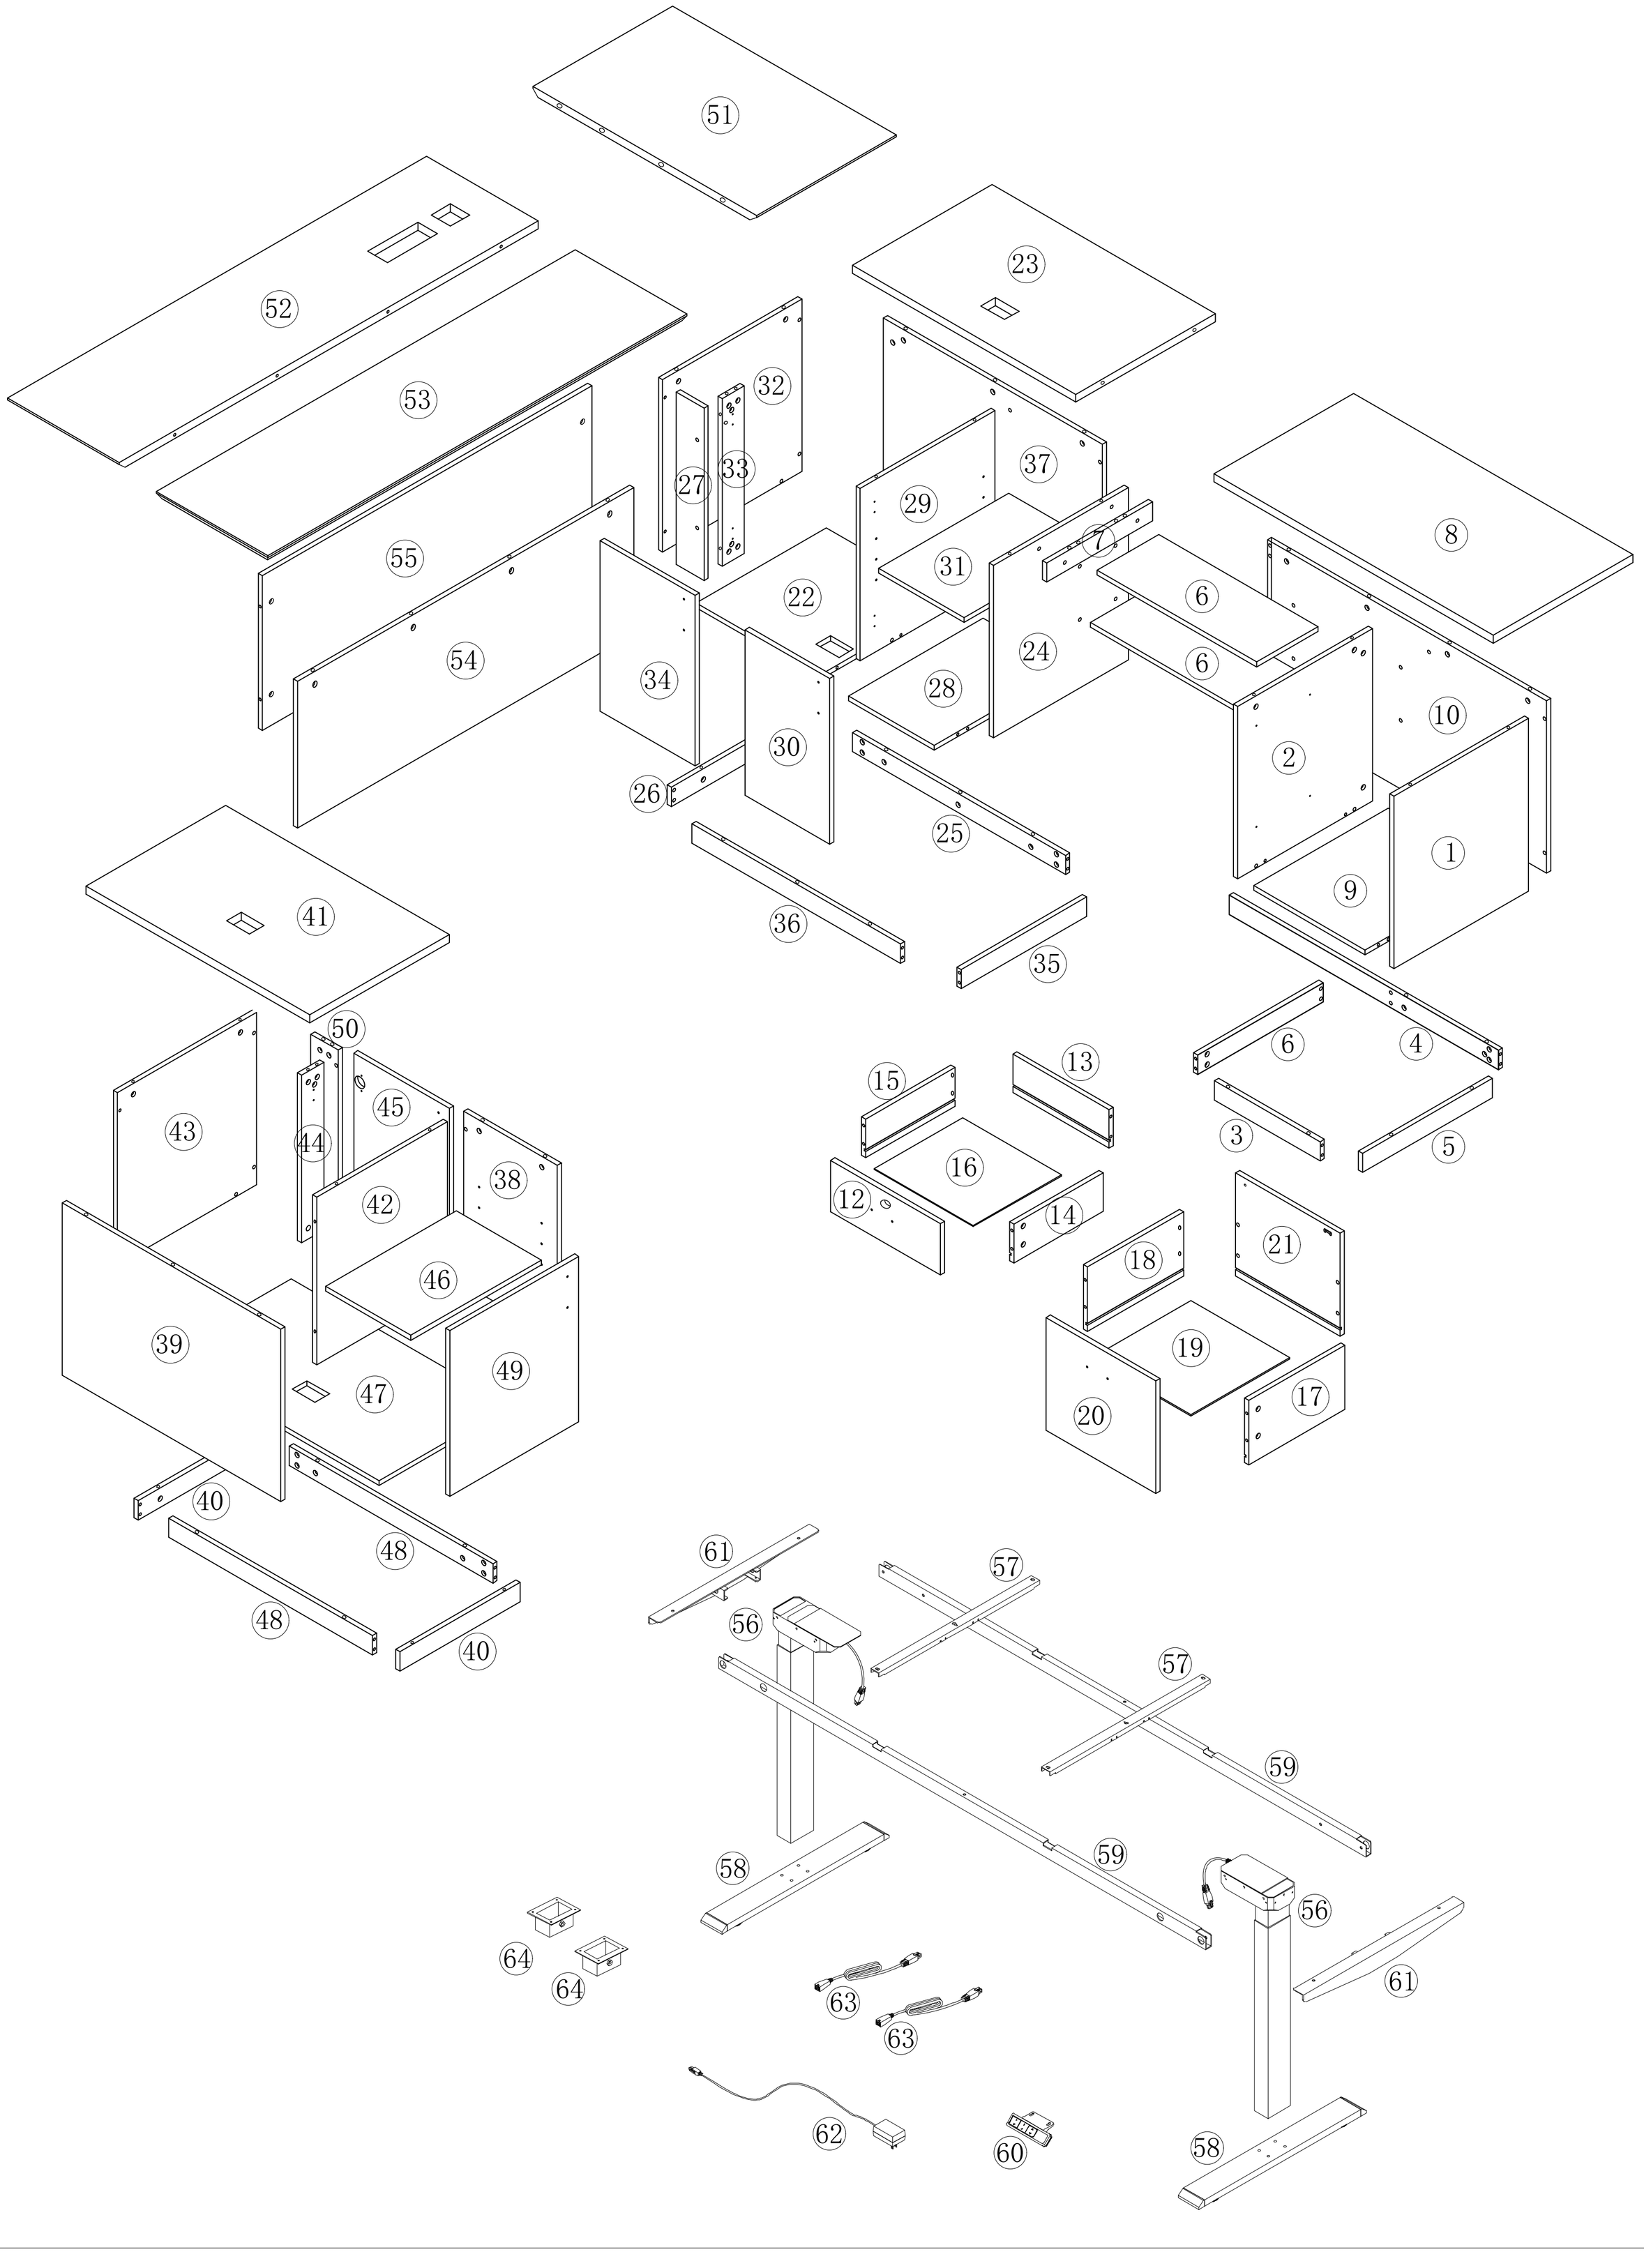

ASSEMBLY INSTRUCTION

Safety Information

Please read all instructions carefully before assembly.
Ensure all parts are properly installed and tightened before use.
Assemble the product on a flat and stable surface.
Keep small hardware parts away from children during assembly.
Do not use the product if any parts are damaged or missing.

Usage Warnings

Do not place excessive weight on the desktop or shelves.
Do not stand or sit on the product.
Use the product only for its intended purpose.
Avoid dragging heavy objects across the surface to prevent damage.

Child Safety Warning

This product is not a toy.
Keep children away from packaging materials and small components.
Children should not climb or play on the product.

Care Instructions

Clean with a soft, dry cloth.
Do not use abrasive cleaners or harsh chemicals.
Keep the product away from prolonged exposure to moisture.

Electrical Safety Warning

Use only the supplied power adapter.
Keep electrical components away from water.
Do not operate the product with wet hands.
Disconnect power before cleaning or maintenance.
Stop using the product if the power cord is damaged.

ASSEMBLY INSTRUCTION

Sicherheitshinweise

Bitte lesen Sie alle Anweisungen vor der Montage sorgfältig durch.
Stellen Sie sicher, dass alle Teile vor der Verwendung ordnungsgemäß installiert und fest angezogen sind.
Montieren Sie das Produkt auf einer ebenen und stabilen Oberfläche.
Halten Sie Kleinteile und Befestigungsmaterial während der Montage von Kindern fern.
Verwenden Sie das Produkt nicht, wenn Teile beschädigt sind oder fehlen.

Warmhinweise zur Verwendung

Platzieren Sie keine übermäßig schweren Gegenstände auf der Tischplatte oder den Ablageflächen.
Stellen Sie sich nicht auf das Produkt und setzen Sie sich nicht darauf.
Verwenden Sie das Produkt nur für den vorgesehenen Zweck.
Ziehen Sie keine schweren Gegenstände über die Oberfläche, um Beschädigungen zu vermeiden.

Sicherheitshinweis für Kinder

Dieses Produkt ist kein Spielzeug.
Halten Sie Kinder von Verpackungsmaterialien und Kleinteilen fern.
Kinder dürfen nicht auf das Produkt klettern oder damit spielen.

Pflegehinweise

Reinigen Sie das Produkt mit einem weichen, trockenen Tuch.
Verwenden Sie keine scheuernden Reinigungsmittel oder aggressiven Chemikalien.
Halten Sie das Produkt von längerer Feuchtigkeitseinwirkung fern.

Elektrische Sicherheitshinweise

Verwenden Sie ausschließlich das mitgelieferte Netzteil.
Halten Sie elektrische Komponenten von Wasser fern.
Bedienen Sie das Produkt nicht mit nassen Händen.
Trennen Sie die Stromversorgung vor der Reinigung oder Wartung.
Verwenden Sie das Produkt nicht weiter, wenn das Netzkabel beschädigt ist.

ASSEMBLY INSTRUCTION

Informations de sécurité

Veuillez lire attentivement toutes les instructions avant l’assemblage.
Assurez-vous que toutes les pièces sont correctement installées et bien serrées avant utilisation.
Assemblez le produit sur une surface plane et stable.
Gardez les petites pièces et les éléments de fixation hors de portée des enfants pendant l’assemblage.
N’utilisez pas le produit si des pièces sont endommagées ou manquantes.

Avertissements d’utilisation

Ne placez pas de poids excessif sur le plateau du bureau ou les étagères.
Ne montez pas et ne vous asseyez pas sur le produit.
Utilisez le produit uniquement pour l’usage auquel il est destiné.
Évitez de faire glisser des objets lourds sur la surface afin d’éviter tout dommage.

Avertissement de sécurité pour les enfants

Ce produit n’est pas un jouet.
Gardez les enfants éloignés des matériaux d’emballage et des petites pièces.
Les enfants ne doivent pas grimper sur le produit ni jouer avec celui-ci.
















Instructions d’entretien

Nettoyez le produit avec un chiffon doux et sec.
N’utilisez pas de produits de nettoyage abrasifs ni de produits chimiques agressifs.
Évitez une exposition prolongée du produit à l’humidité.





















Avertissement de sécurité électrique

Utilisez uniquement l’adaptateur secteur fourni.
Gardez les composants électriques à l’écart de l’eau.
N’utilisez pas le produit avec les mains mouillées.
Débranchez l’alimentation avant tout nettoyage ou entretien.
Cessez d’utiliser le produit si le cordon d’alimentation est endommagé.

ASSEMBLY INSTRUCTION

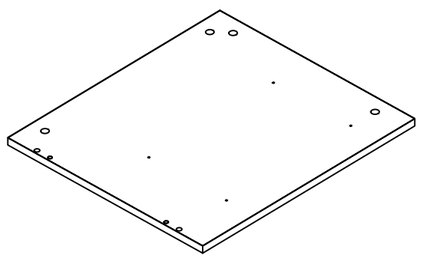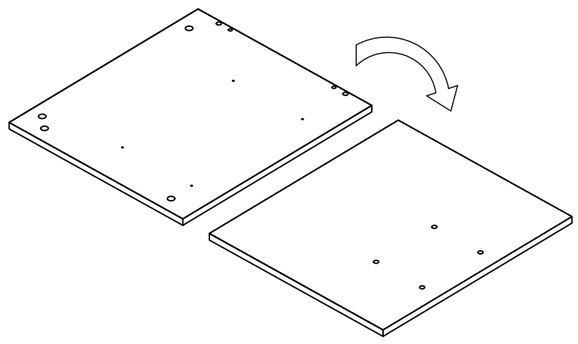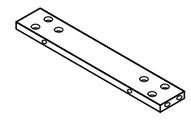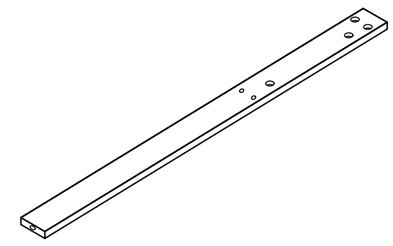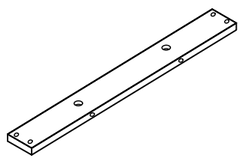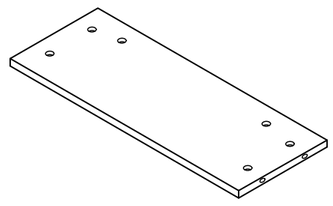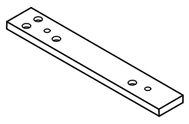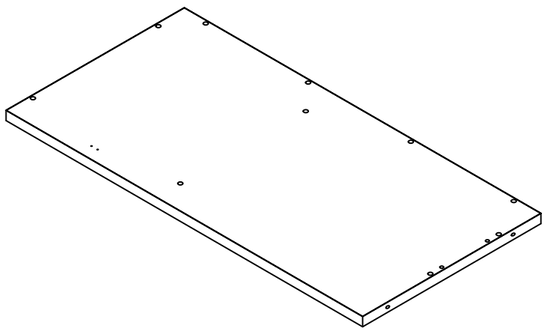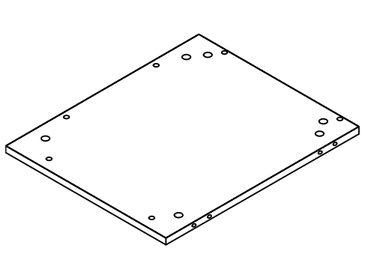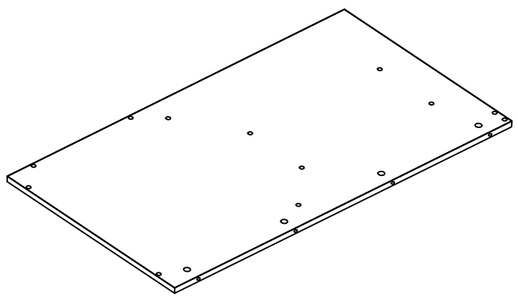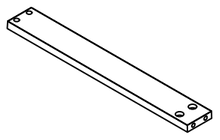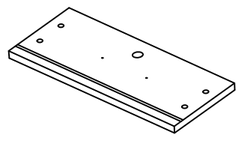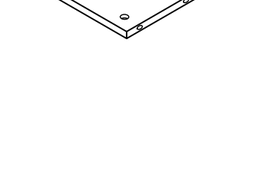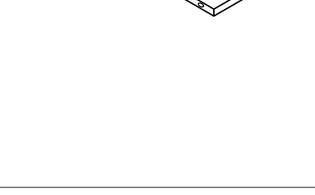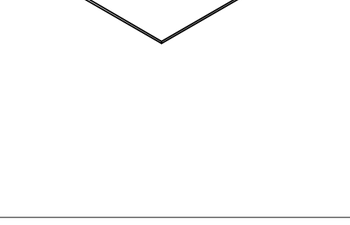
① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 1PC 	⑥ 2PCS 	⑦ 1PC 	⑧ 1PC 
⑨ 1PC 	⑩ 1PC 	⑪ 1PC 	⑫ 1PC 
⑬ 1PC 	⑭ 1PC 	⑮ 1PC 	⑯ 1PC
⑰ 1PC	⑱ 1PC	⑲ 1PC	⑳ 1PC

ASSEMBLY INSTRUCTION

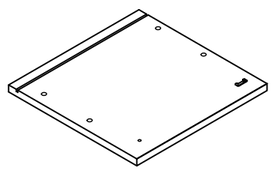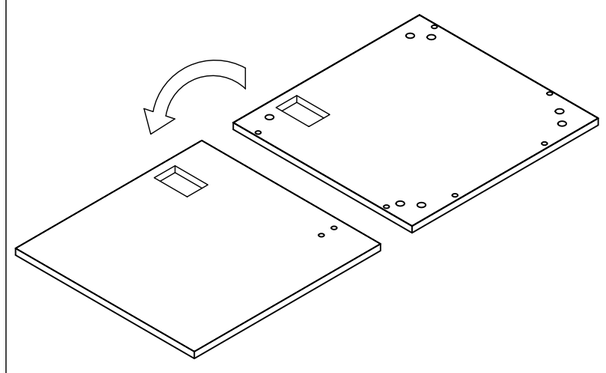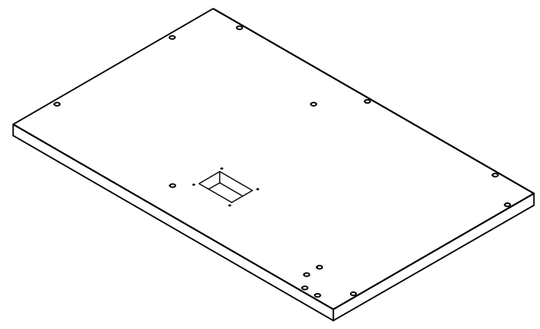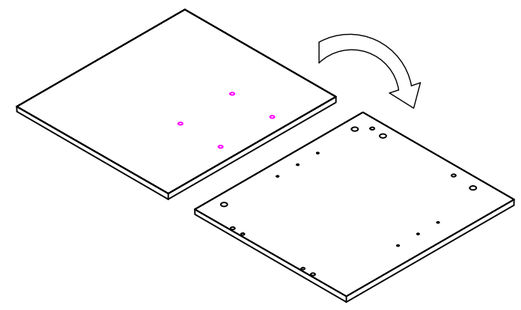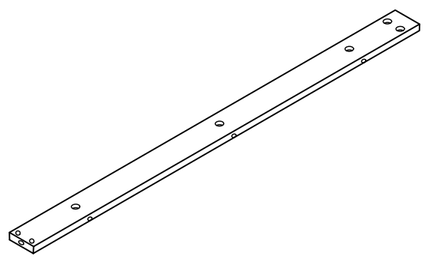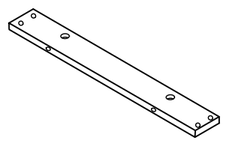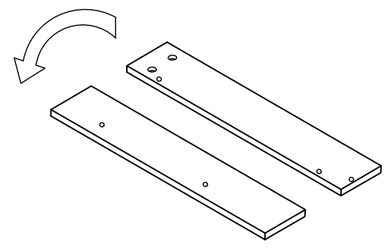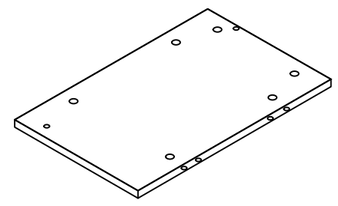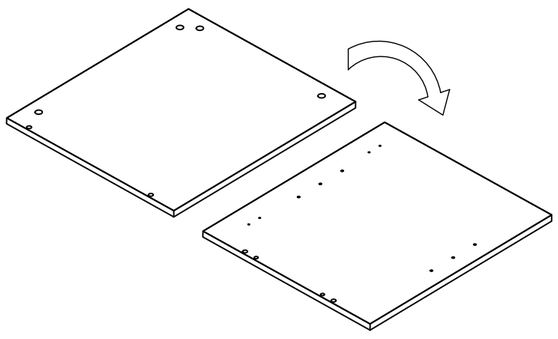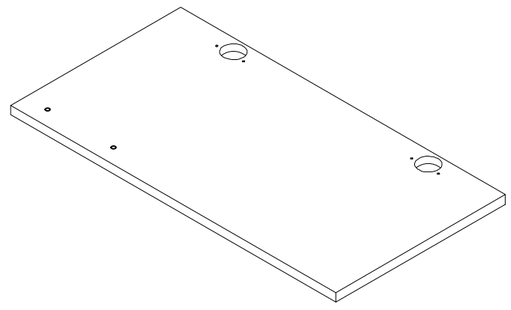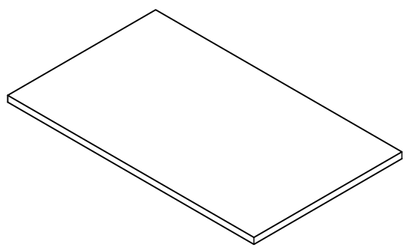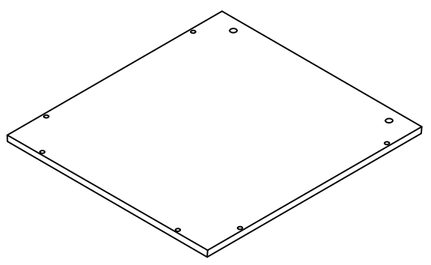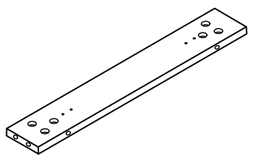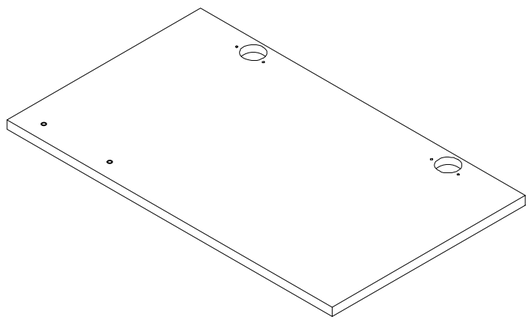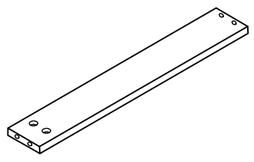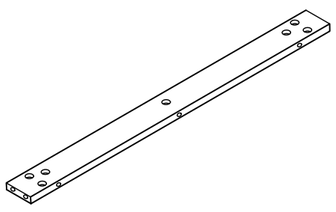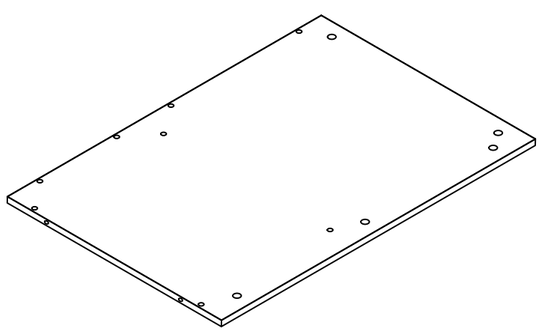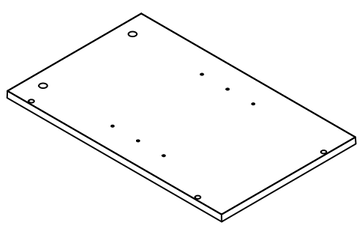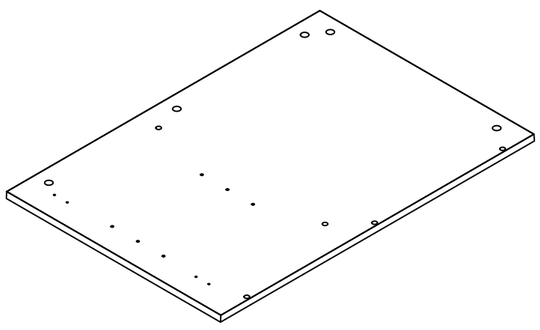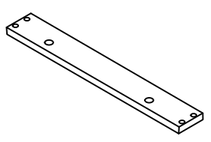
21 1PC 	22 1PC 	23 1PC 	24 1PC 
25 1PC 	26 1PC 	27 1PC 	28 1PC 
29 1PC 	30 1PC 	31 1PC 	32 1PC 
33 1PC 	34 1PC 	35 1PC 	36 1PC 
37 1PC 	38 1PC 	39 1PC 	40 2PCS 

ASSEMBLY INSTRUCTION


41 1PC

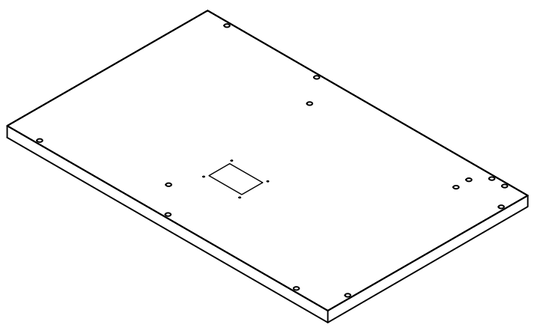


42 1PC

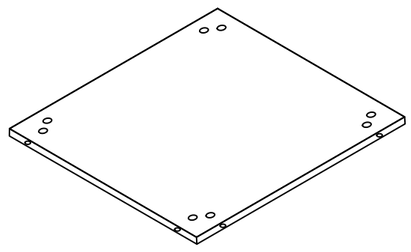


43 1PC

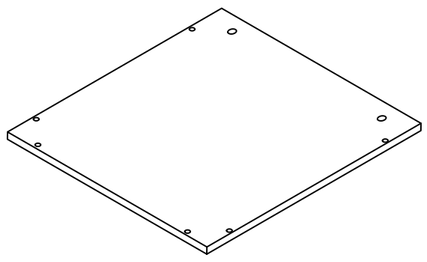


44 1PC

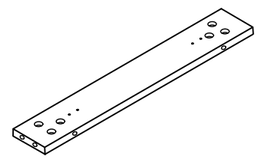


45 1PC

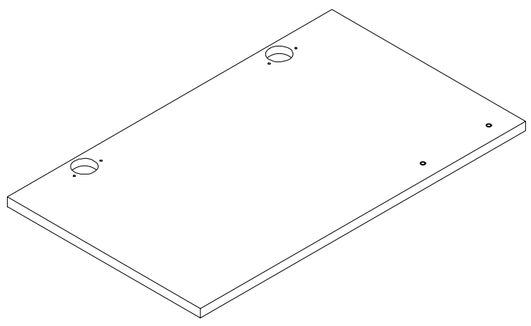


46 1PC

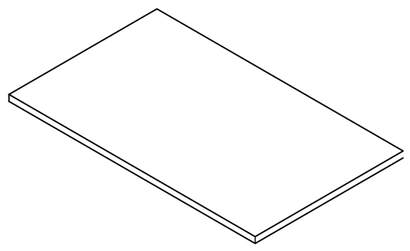


47 1PC

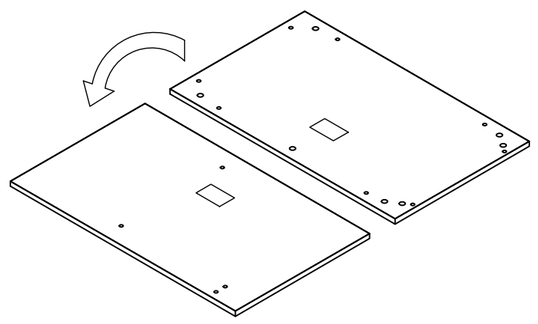


48 2PCS

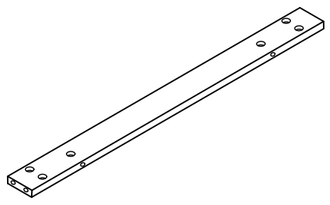


49 1PC

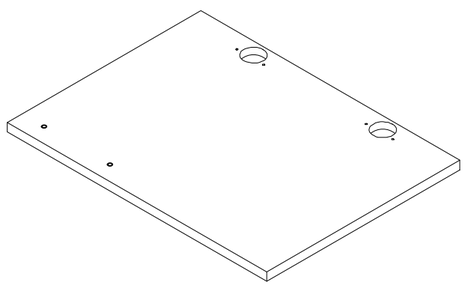


50 1PC

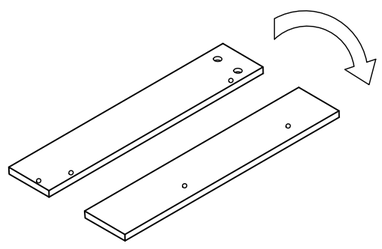


51 1PC

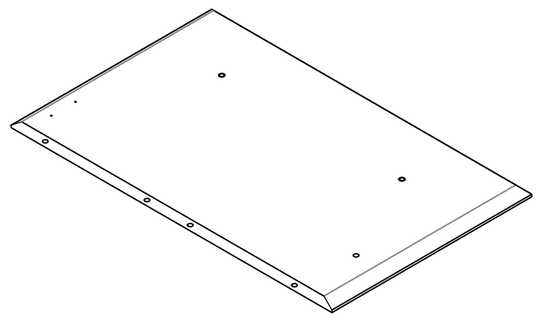


52 1PC

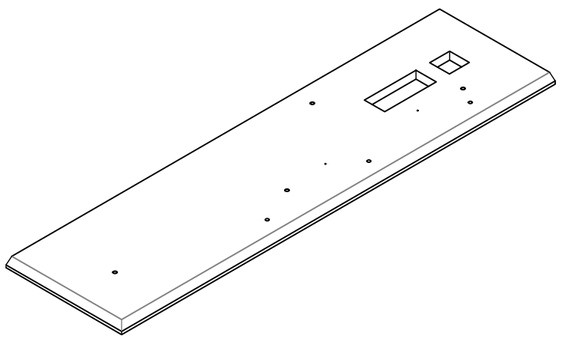


53 1PC

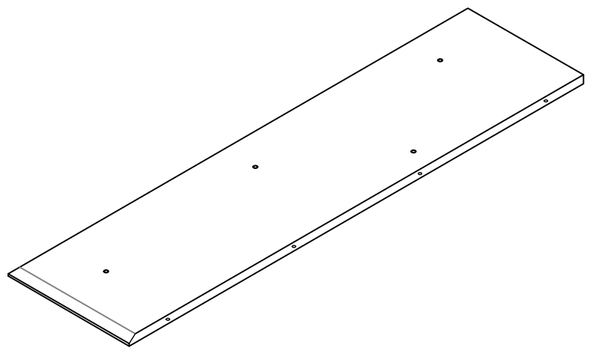

54 1PC

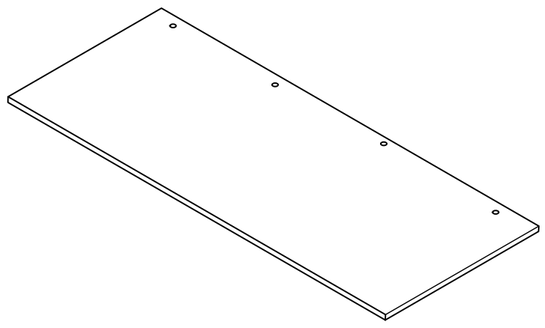


55 1PC

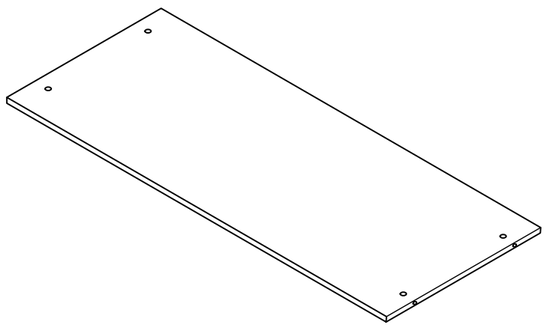


ASSEMBLY INSTRUCTION


56 2PCS

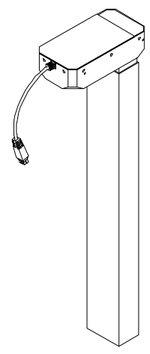


57 2PCS

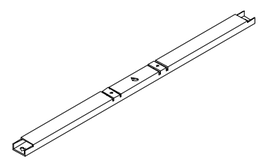


58 2PCS

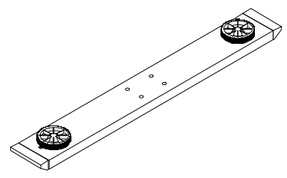


59 2PCS

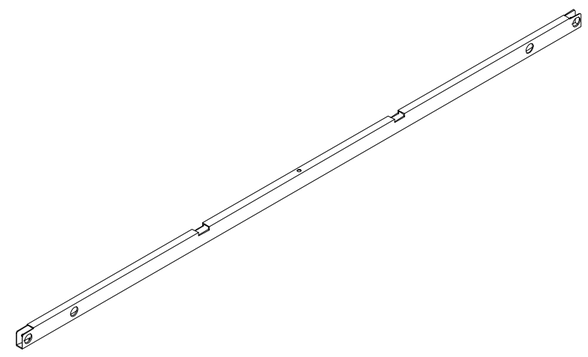


60 1PC

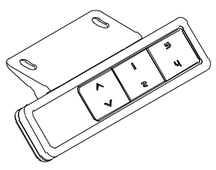


61 2PCS

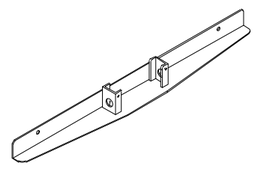


62 1PC

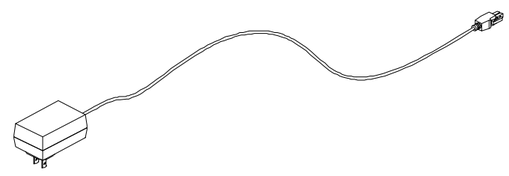

63 2PCS

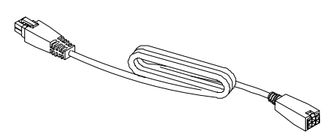


64 2PCS

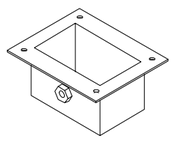


ASSEMBLY INSTRUCTION

"A" Hardware installation example


I

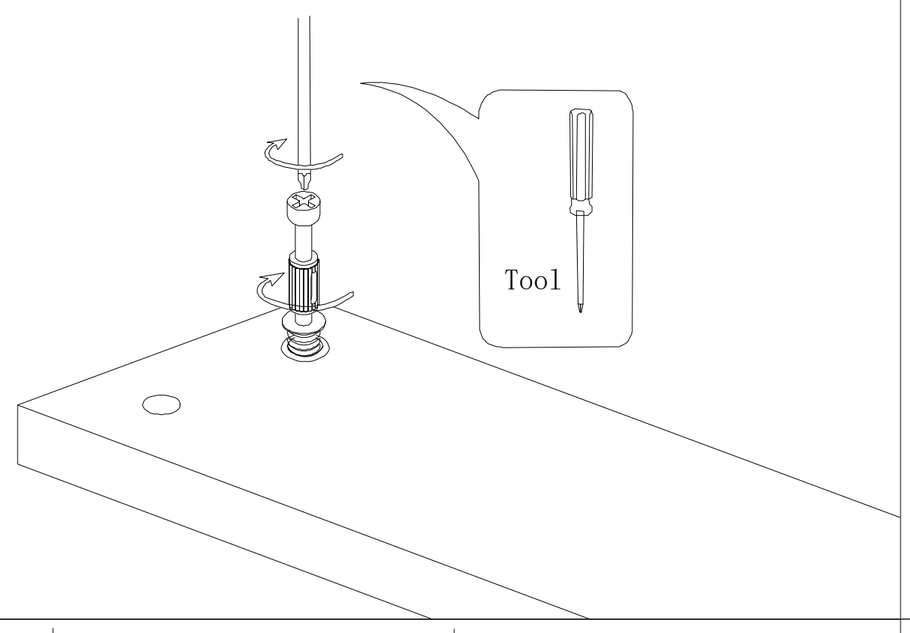


II

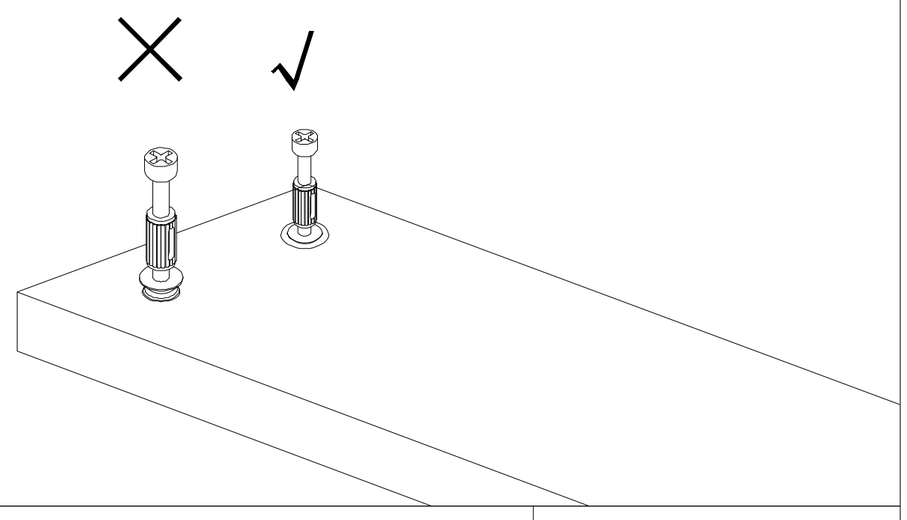
























III

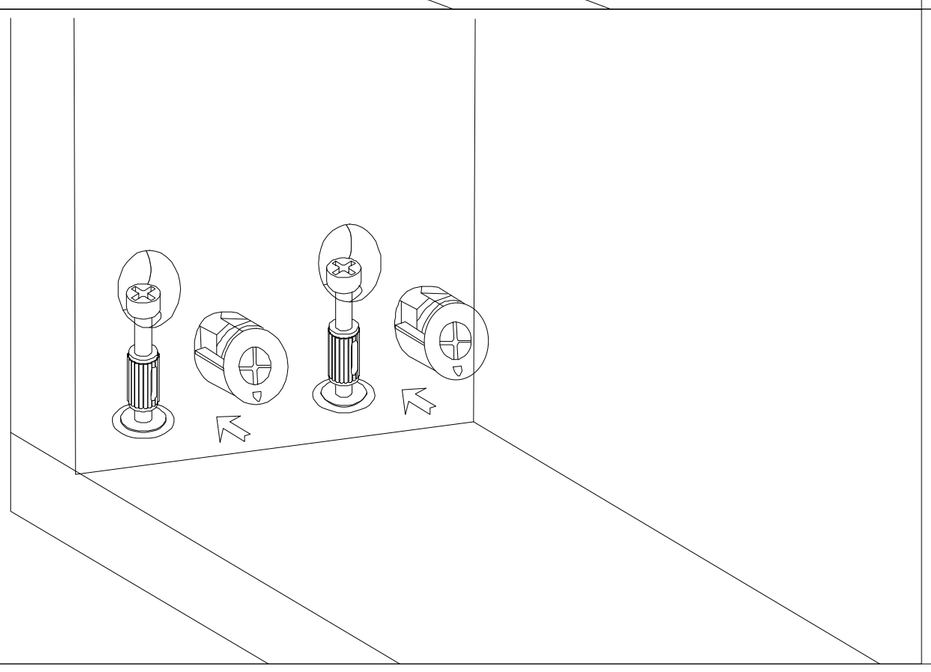

IV

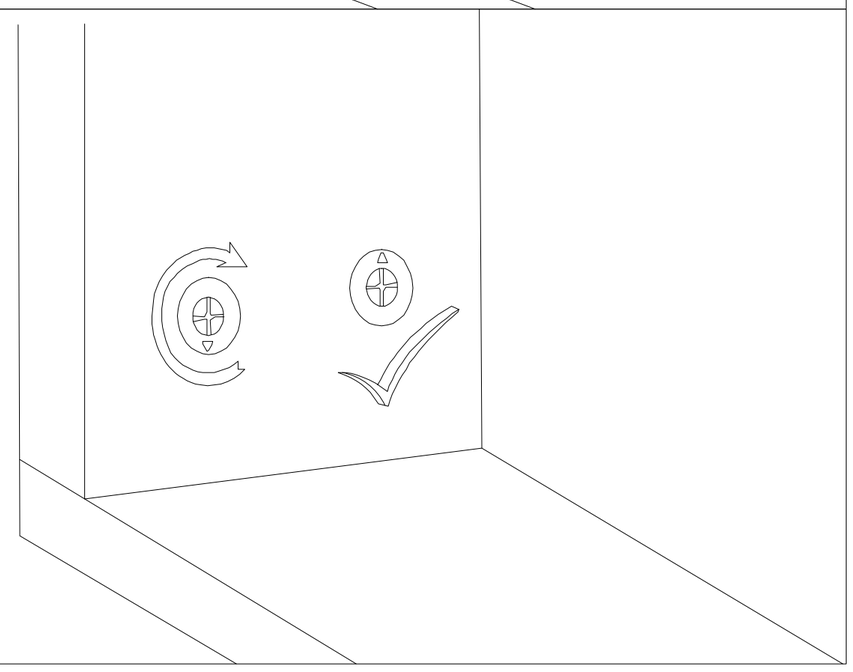

ASSEMBLY INSTRUCTION

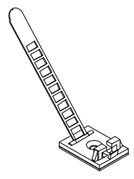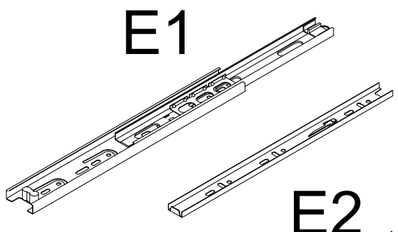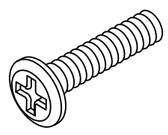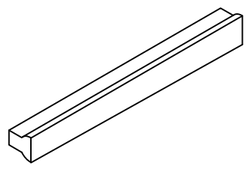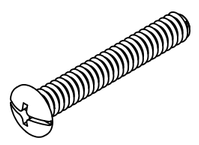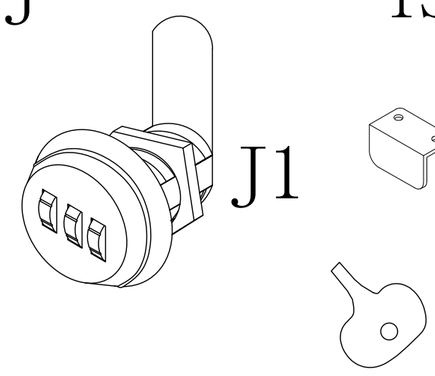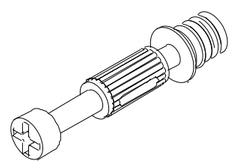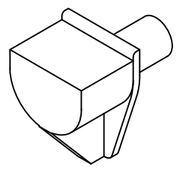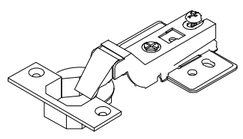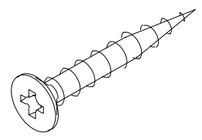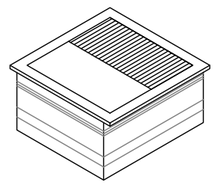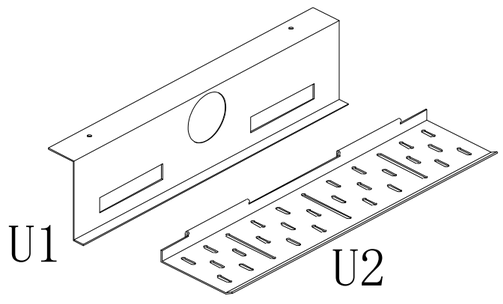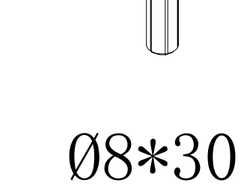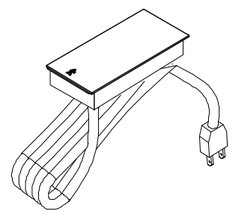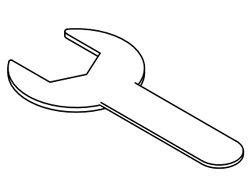A 12PCS  M6*30	B 12PCS  M6*8	C 4PCS 	D 1PC  M4
E 4PCS  12″	F 8PCS  M6*16	G 6PCS 	H 12PCS 
I 2PCS  M8*16	J 1SET 	K 174PCS 	L 174PCS 
M 25PCS  Ø8*30	N 8PC 	O 8PCS 	P 78PCS  M3.5*14
R 2PCS  M6*20	S 2PCS  M6*55	T 10PCS 	U 1PCS 
V 2PCS  354mm	W 55PCS 	X 15PCS 	Y 1PCS 
 M4  			


ASSEMBLY INSTRUCTION

K 147 PCS




M6*40

Kx4

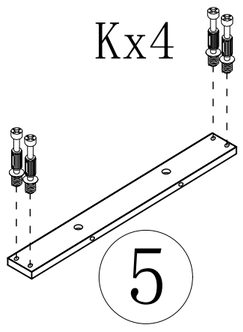


5

Kx2

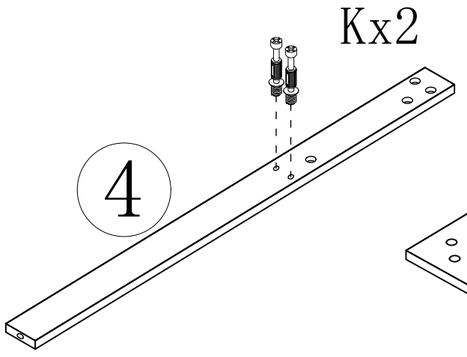

4


Kx6

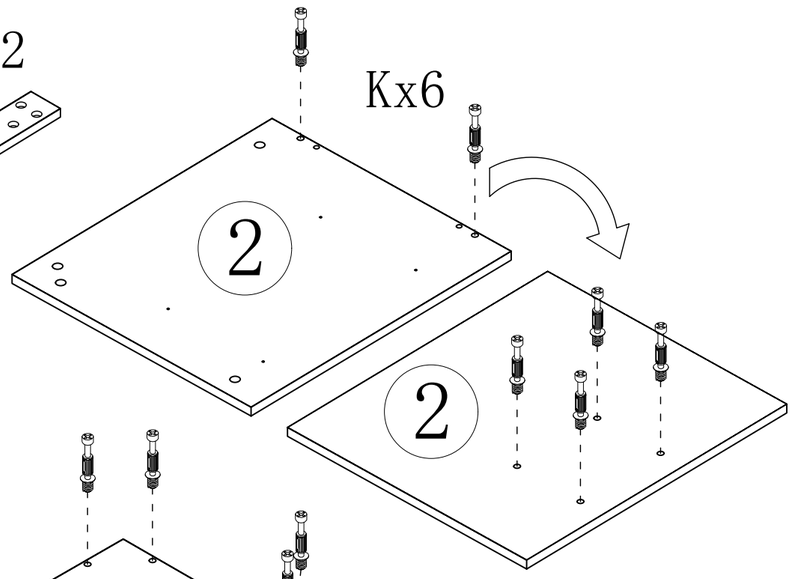

2


2

Kx2

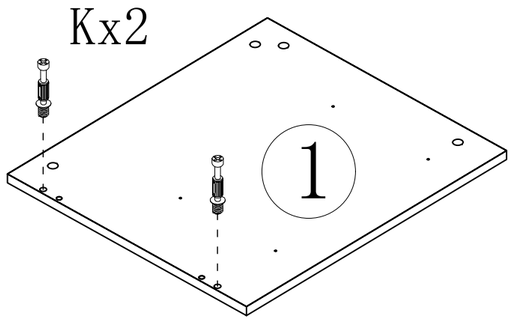


1

Kx6

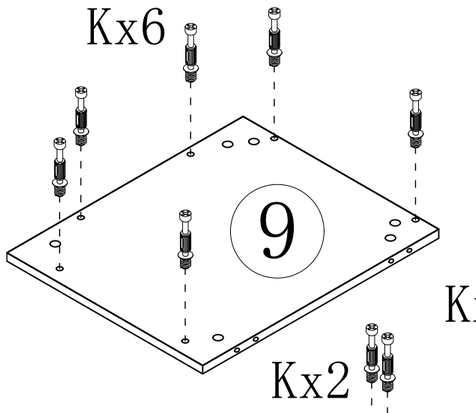


9

Kx10

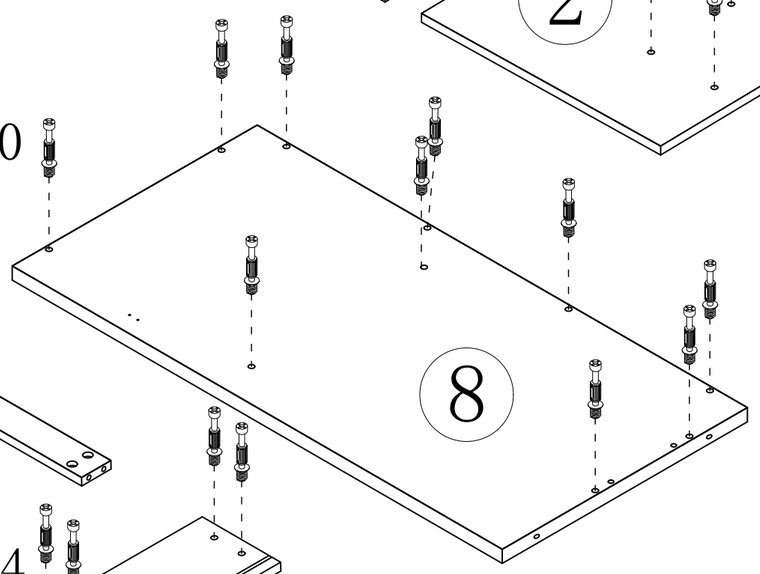


8

Kx2

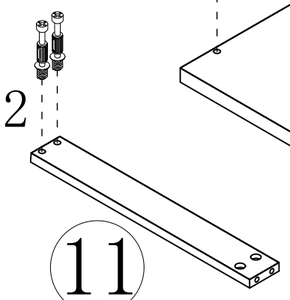


11

Kx2

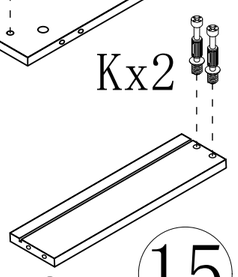


15

Kx4

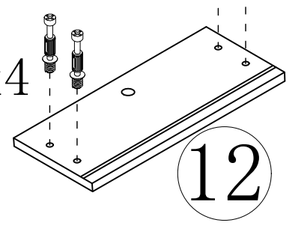


12

Kx12

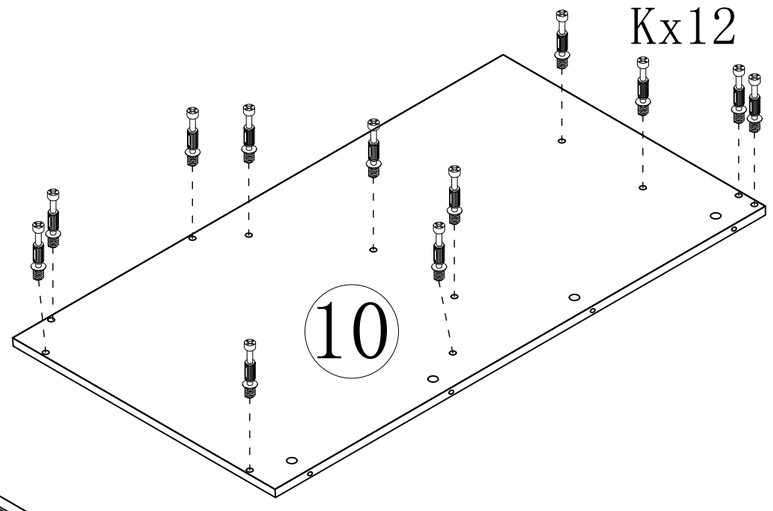


10

Kx2

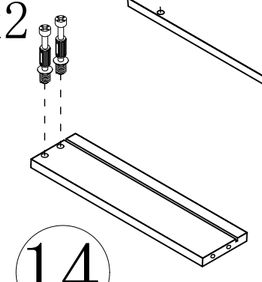


14

Kx13

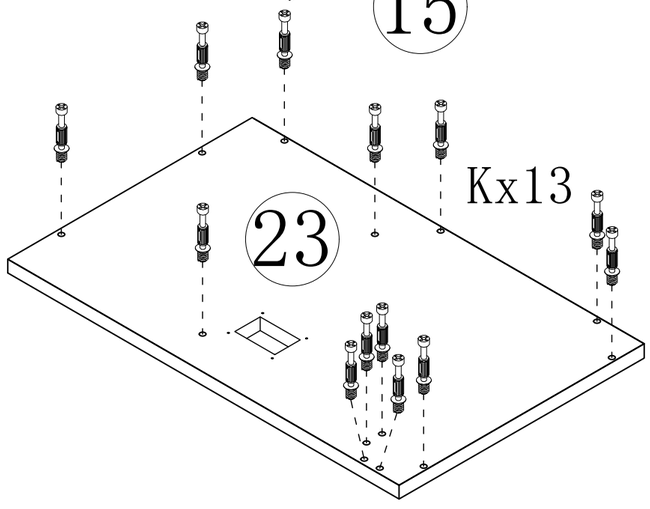


23

Kx8

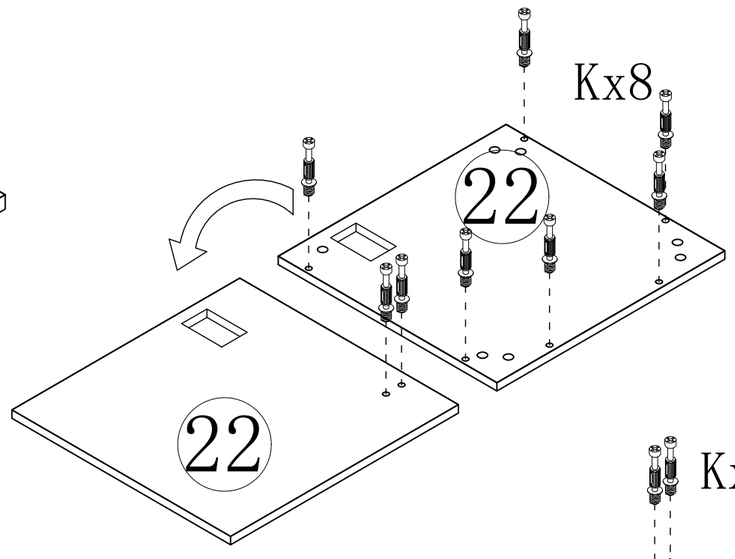


22

Kx4

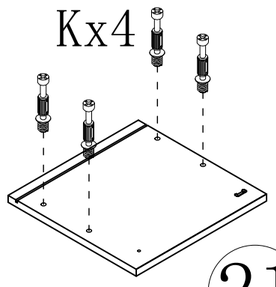


21

Kx4

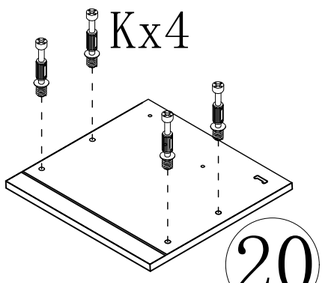

20


Kx6

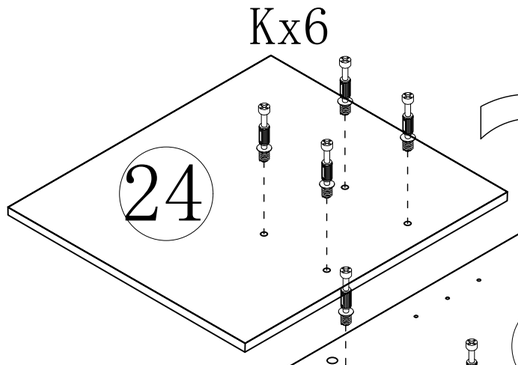

24


24

Kx3

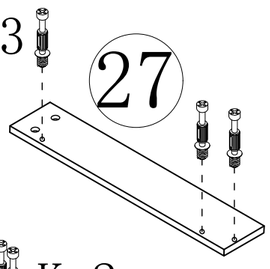

27


Kx4

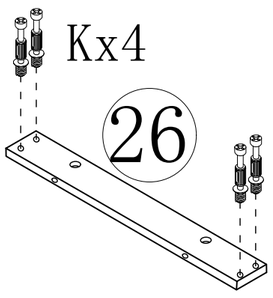


26

25

Kx2

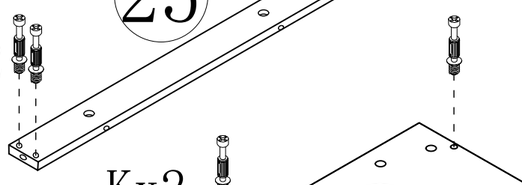


Kx2

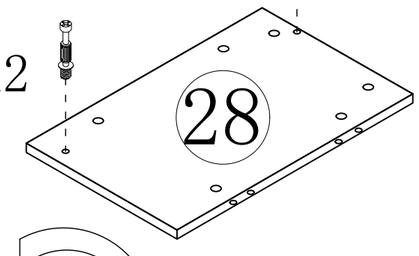


28

Kx2

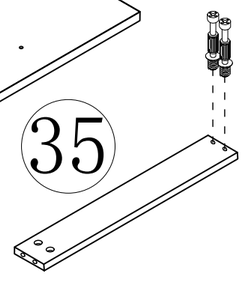

35


Kx4

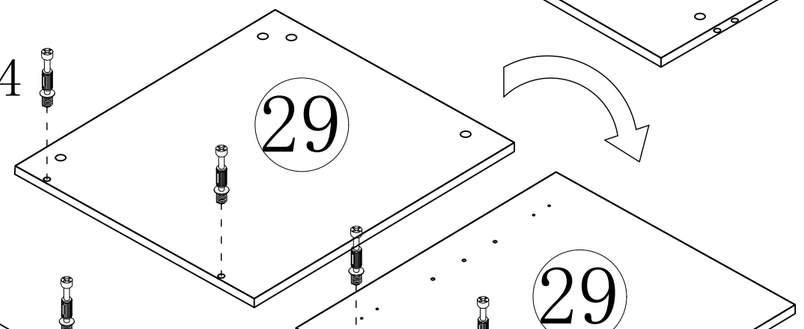

29


29

Kx8

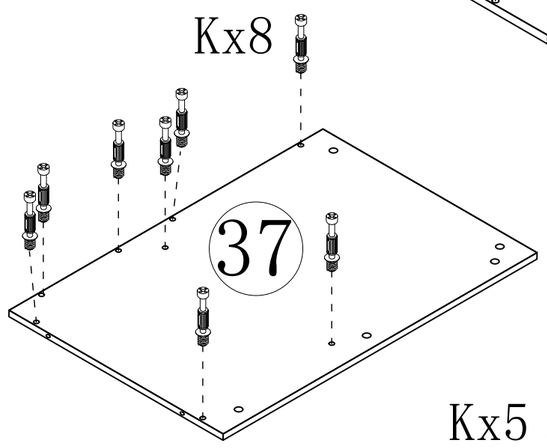


37

Kx6

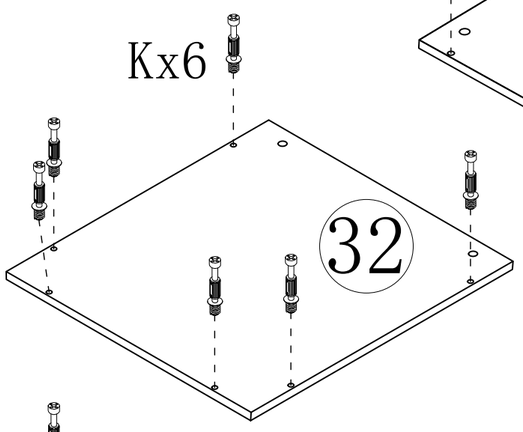


32

Kx3

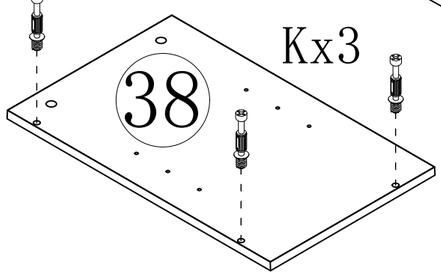


38

Kx5

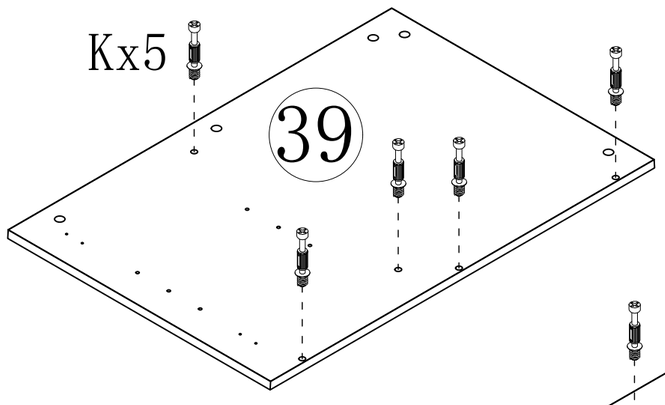


39

Kx13

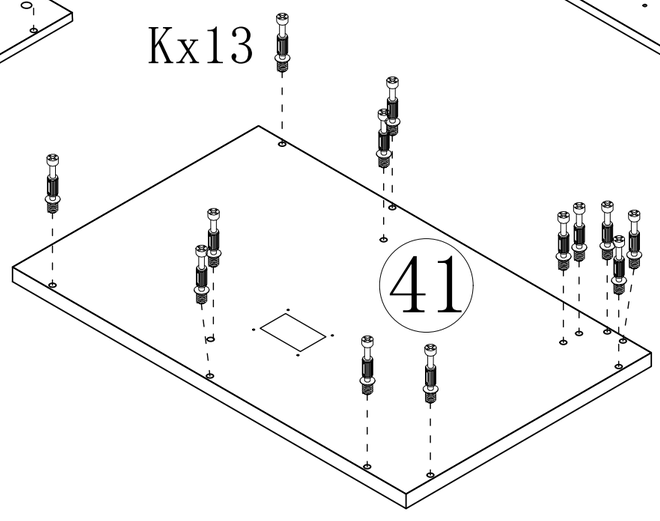

41

Kx4

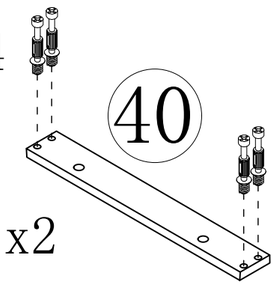


40


x2


ASSEMBLY INSTRUCTION


K 27 PCS





M6*40

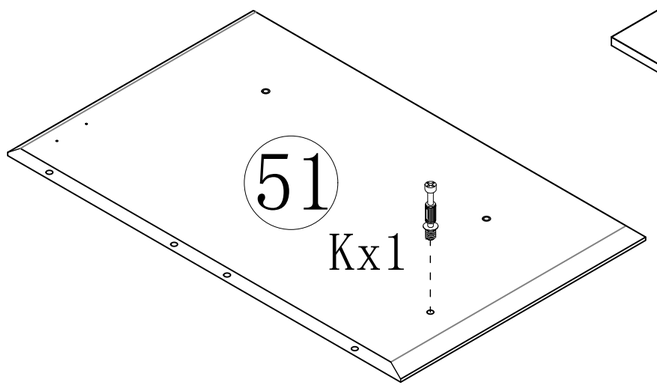

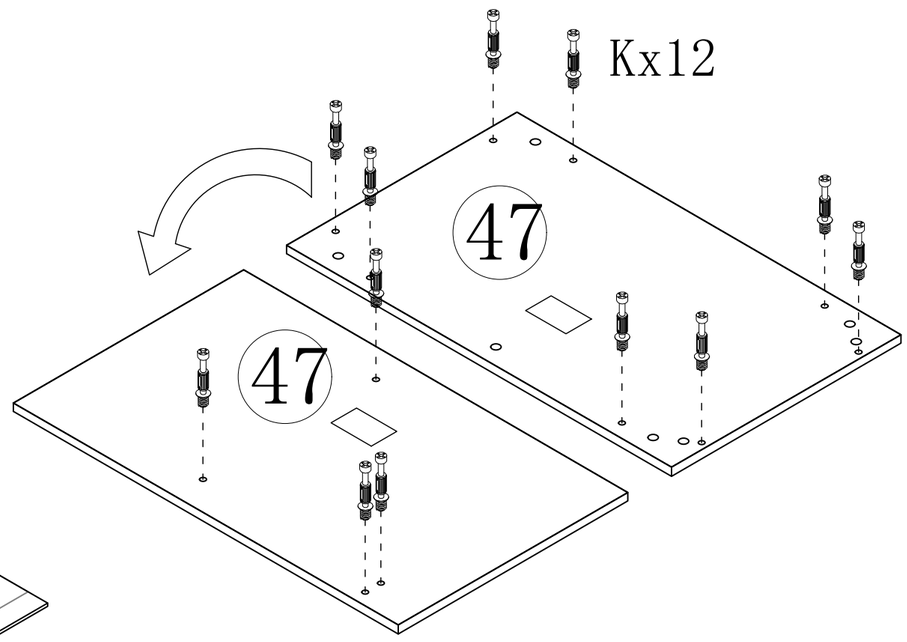


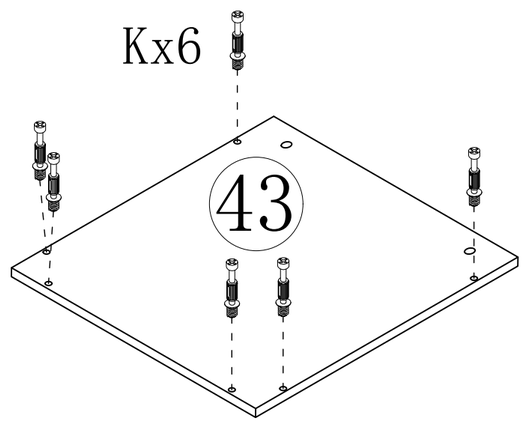

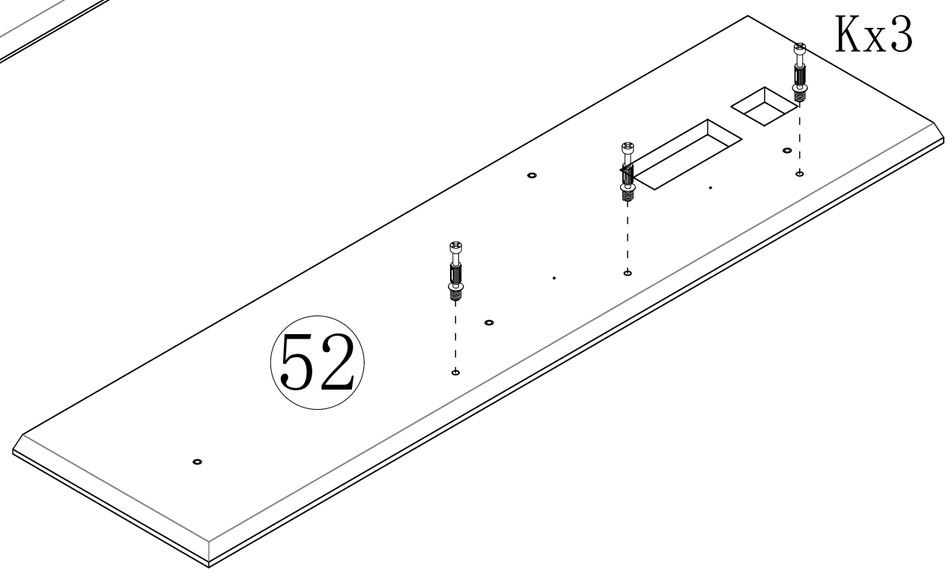

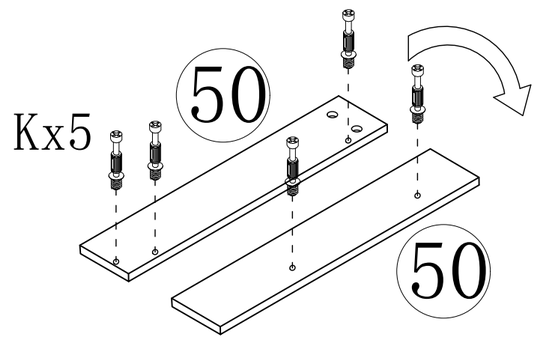


E 4PCS

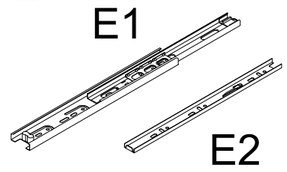

12″

step 1


Ex4

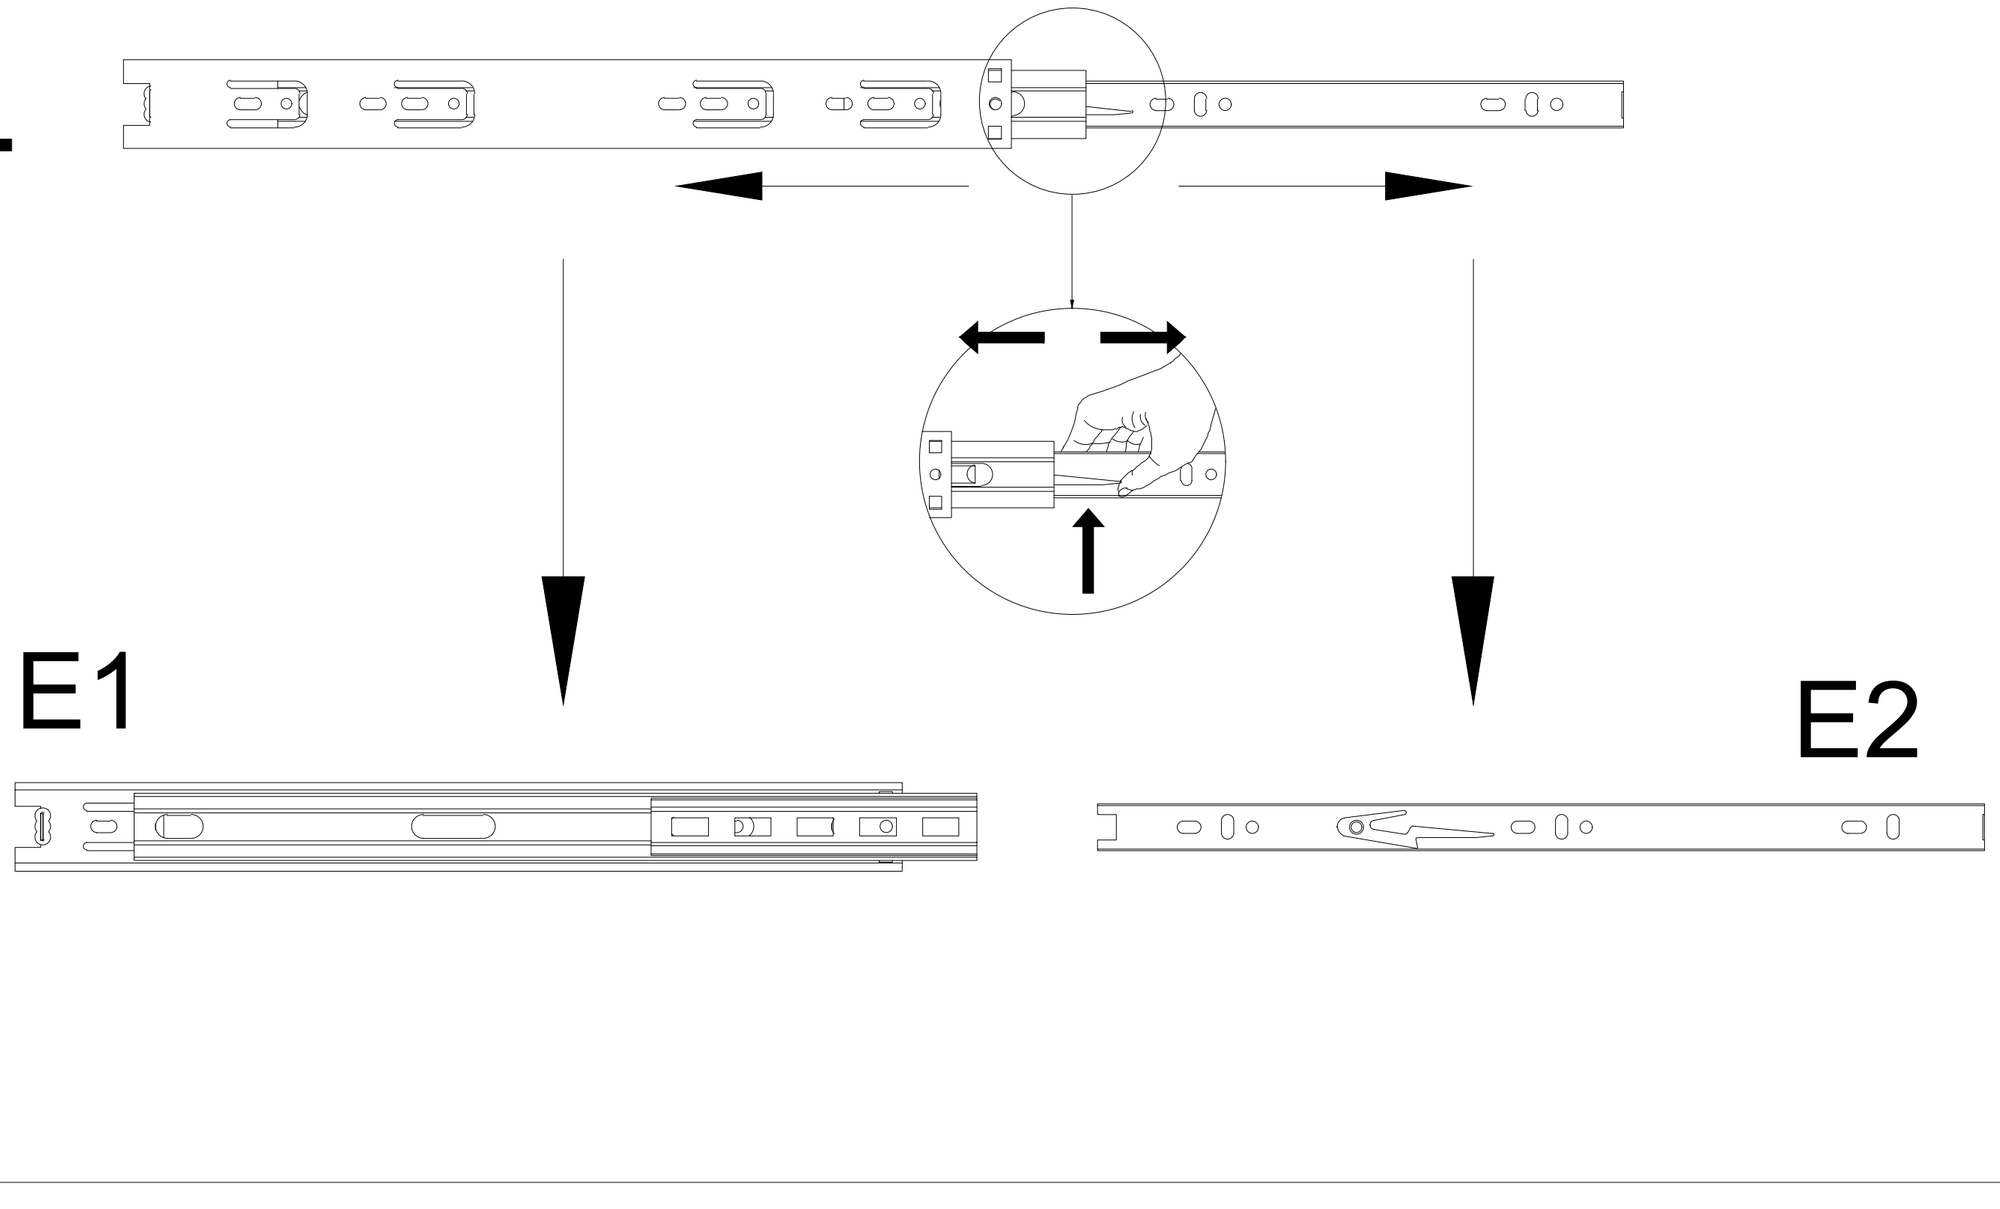

ASSEMBLY INSTRUCTION


step 2

E1 4PCS

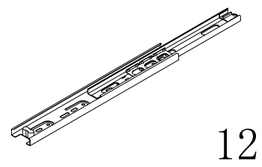


12″

P 8 PCS




Ø3.5*14

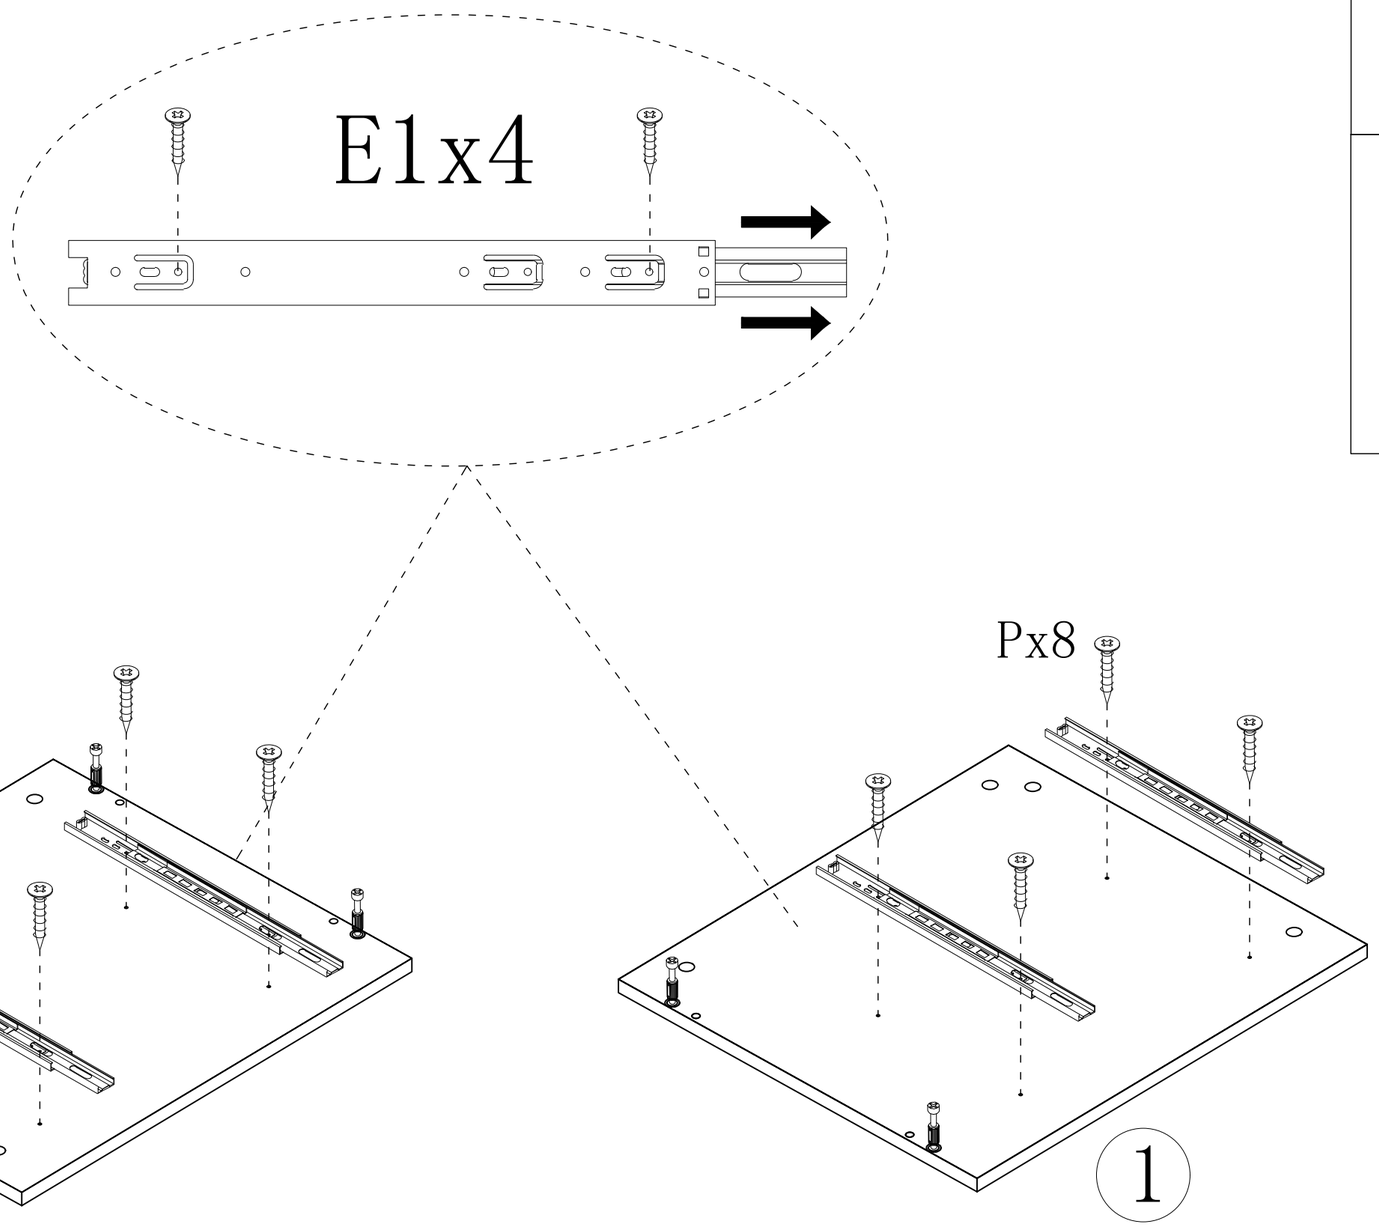

step 3


38 4 PCS

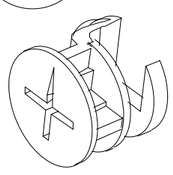

M 4 PCS





Ø8*30

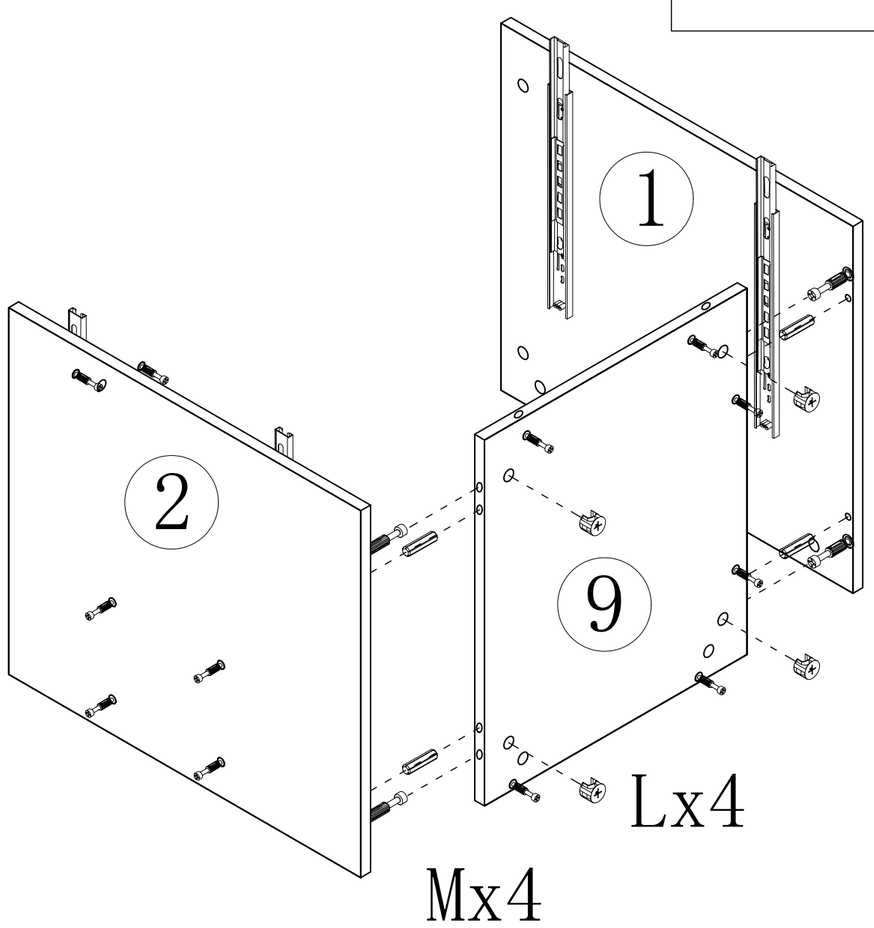

step 4

L 4 PCS

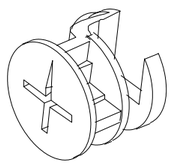


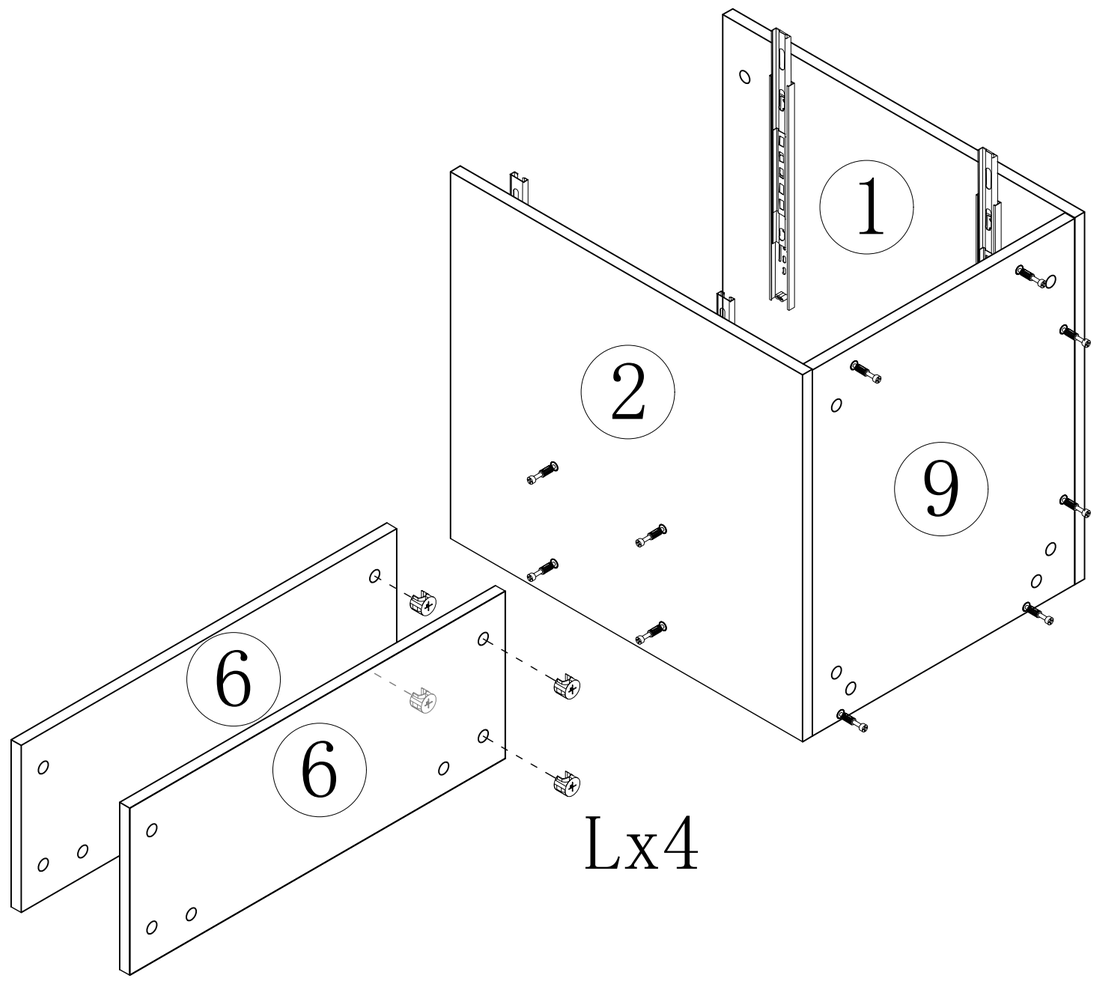


ASSEMBLY INSTRUCTION

step 5


L 12 PCS

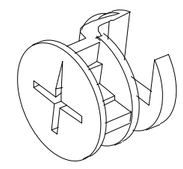


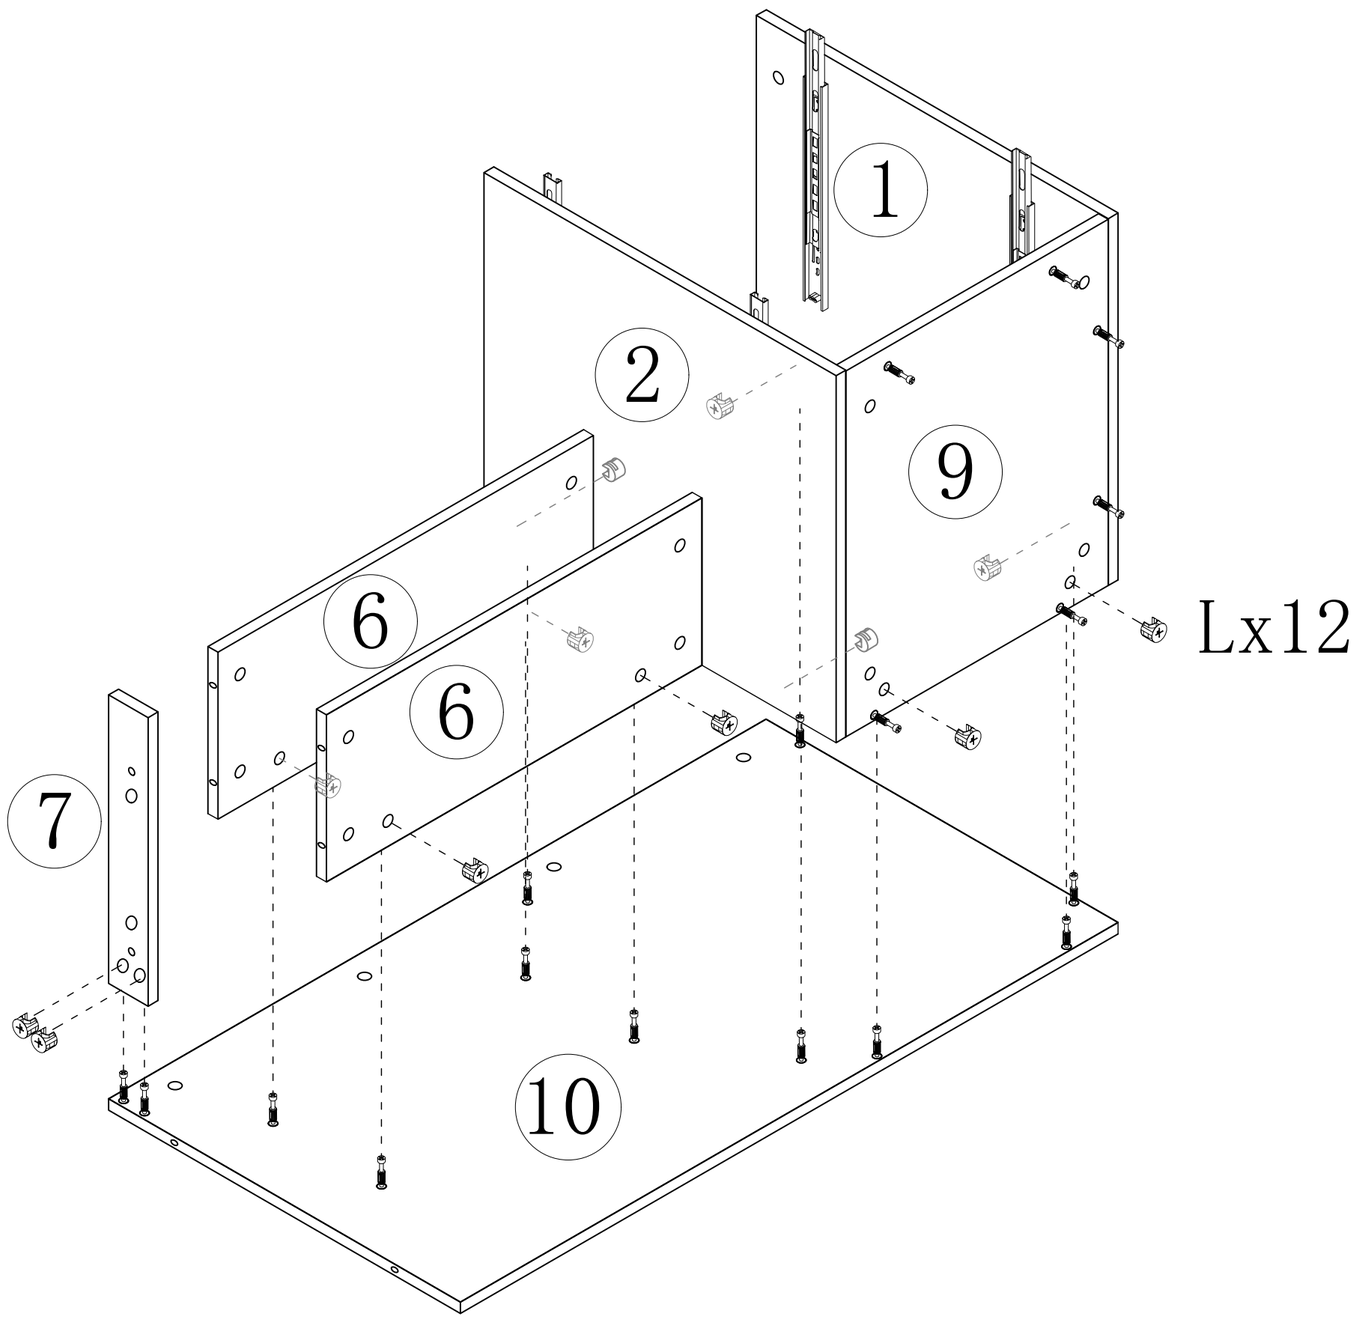

step 6

L 8 PCS

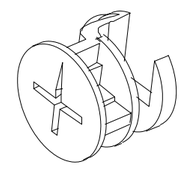


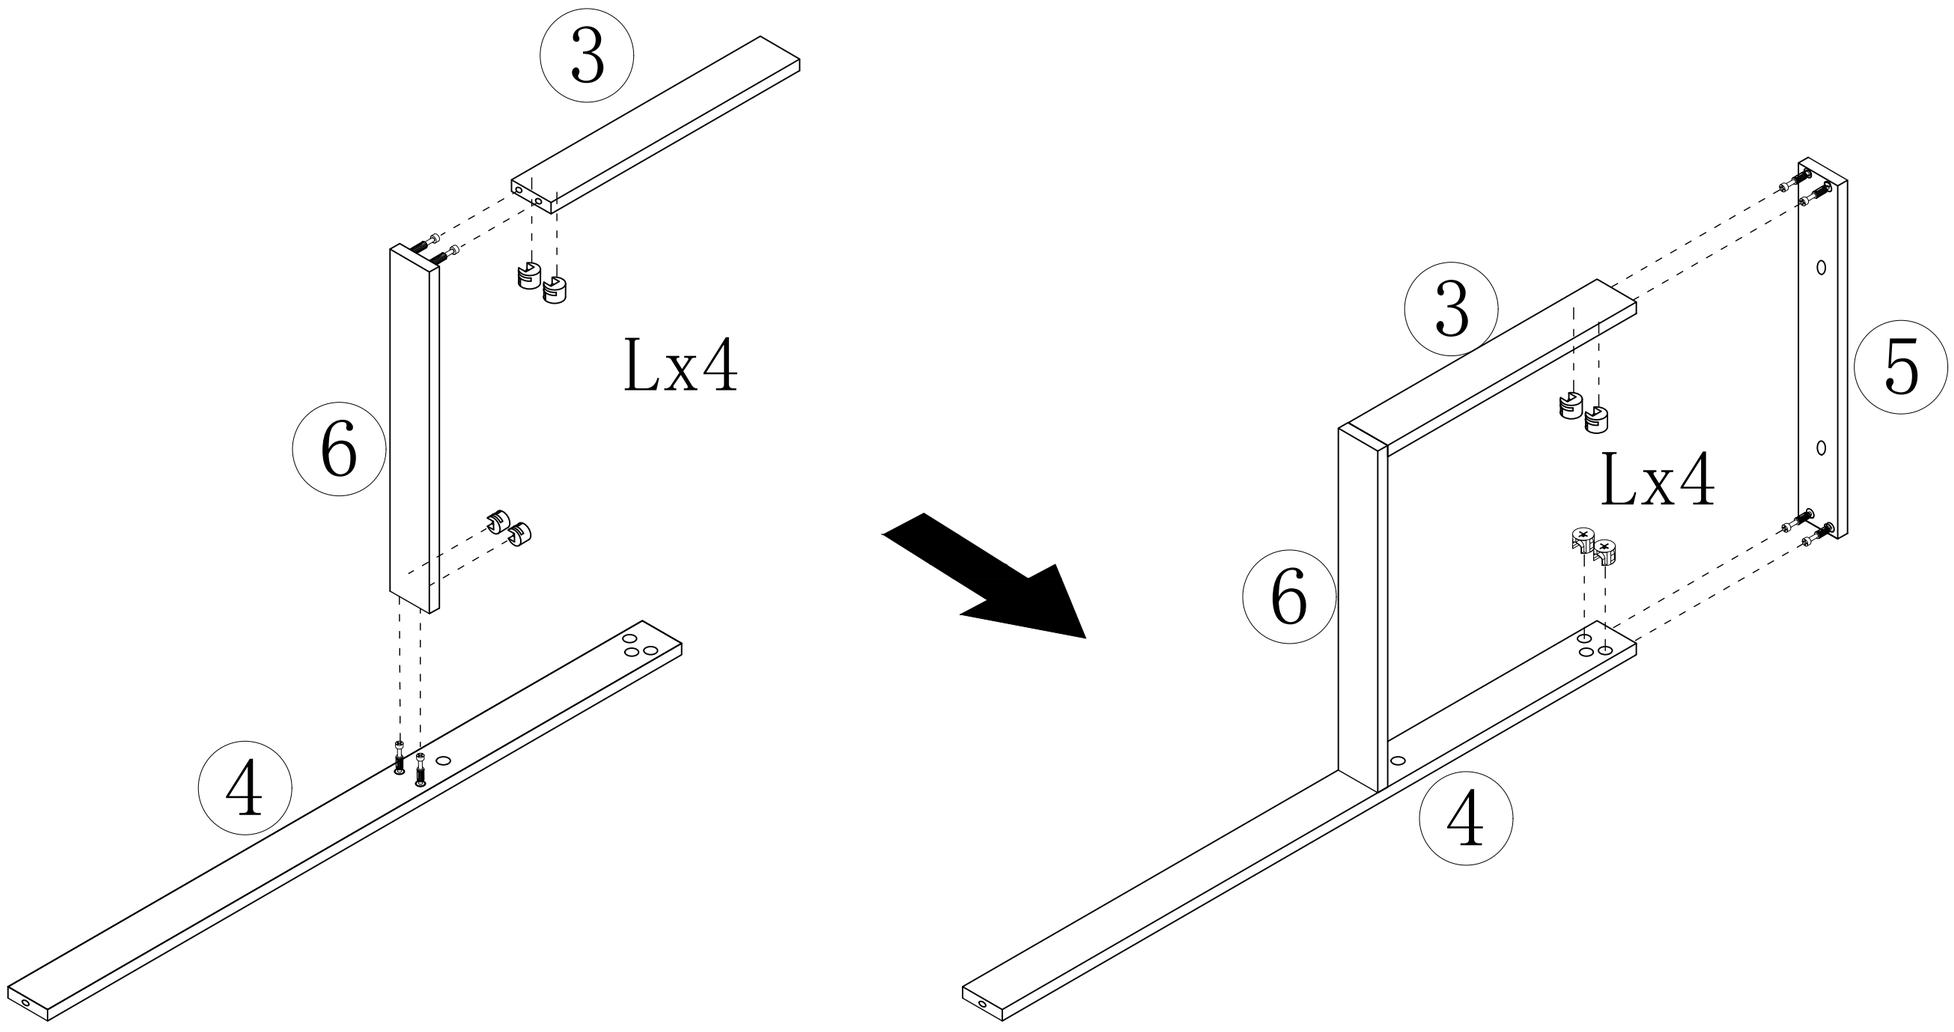


ASSEMBLY INSTRUCTION

step 7

L 6 PCS

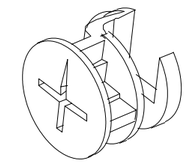

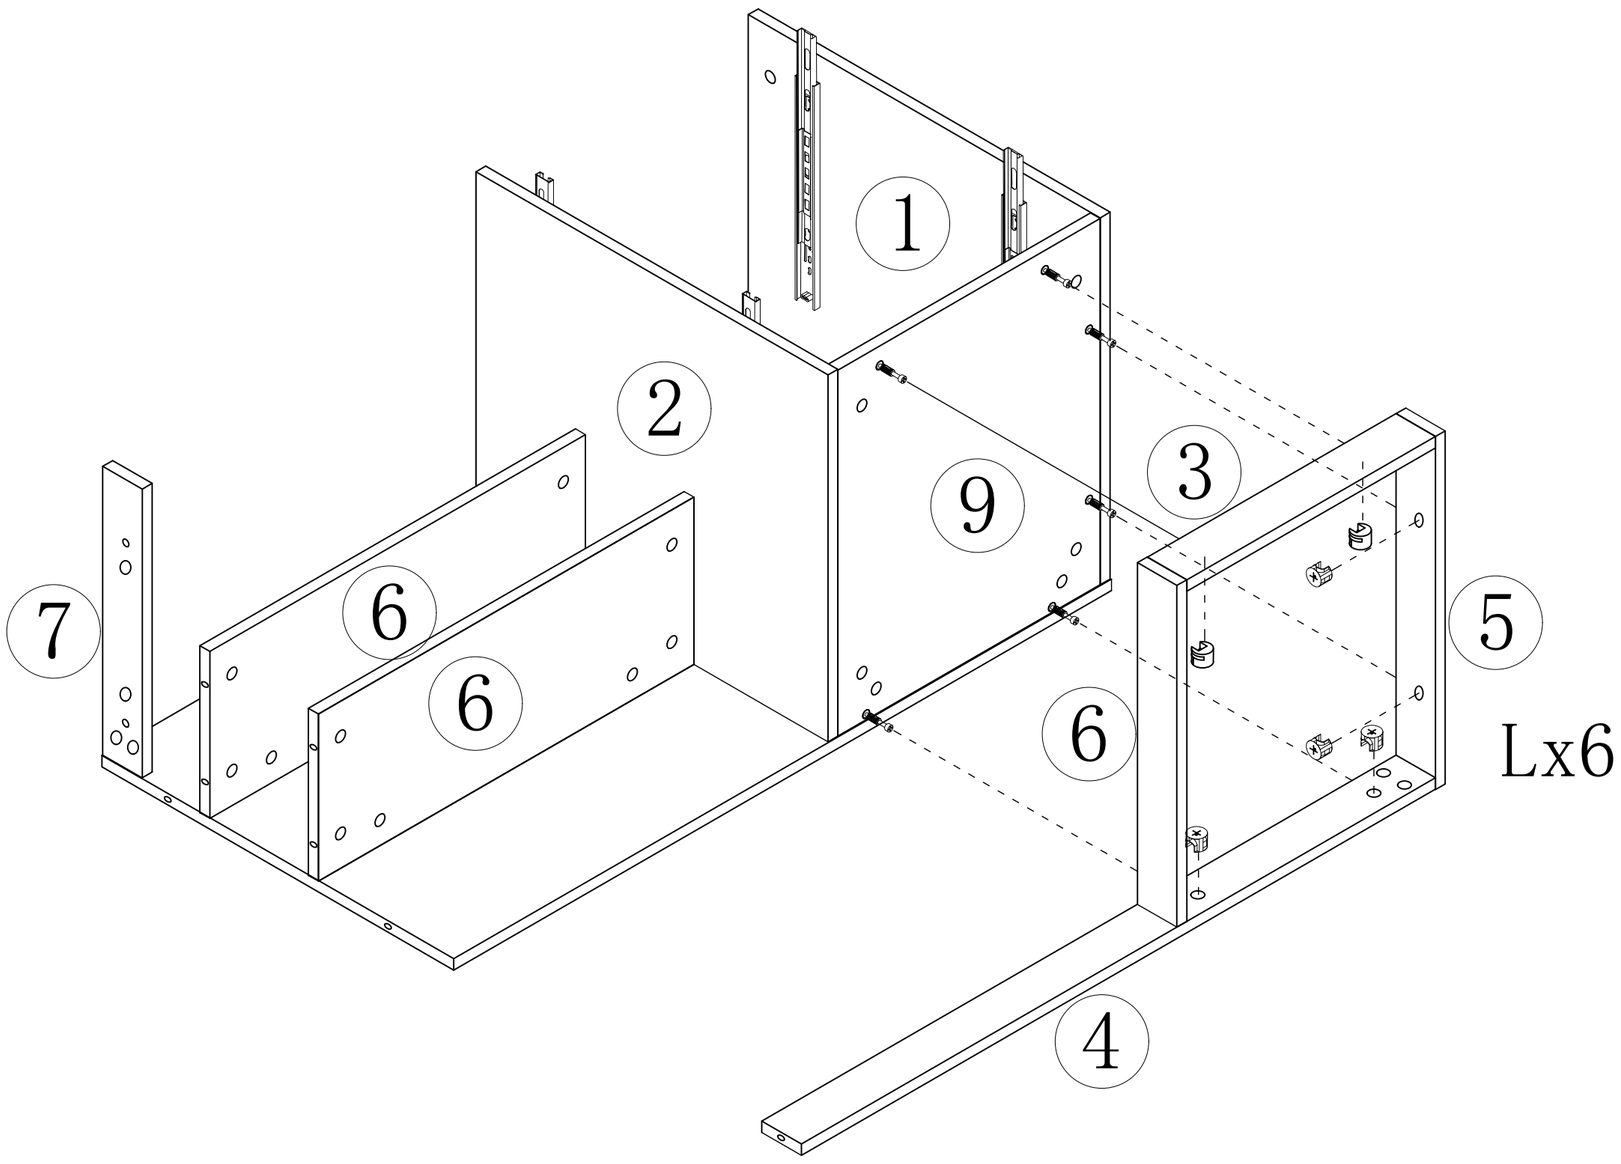


step 8

M 2PCS




Ø8*30

L 10 PCS

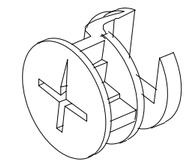


P 2 PCS




Ø3.5*14

J2 1 PC

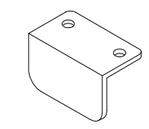


V2

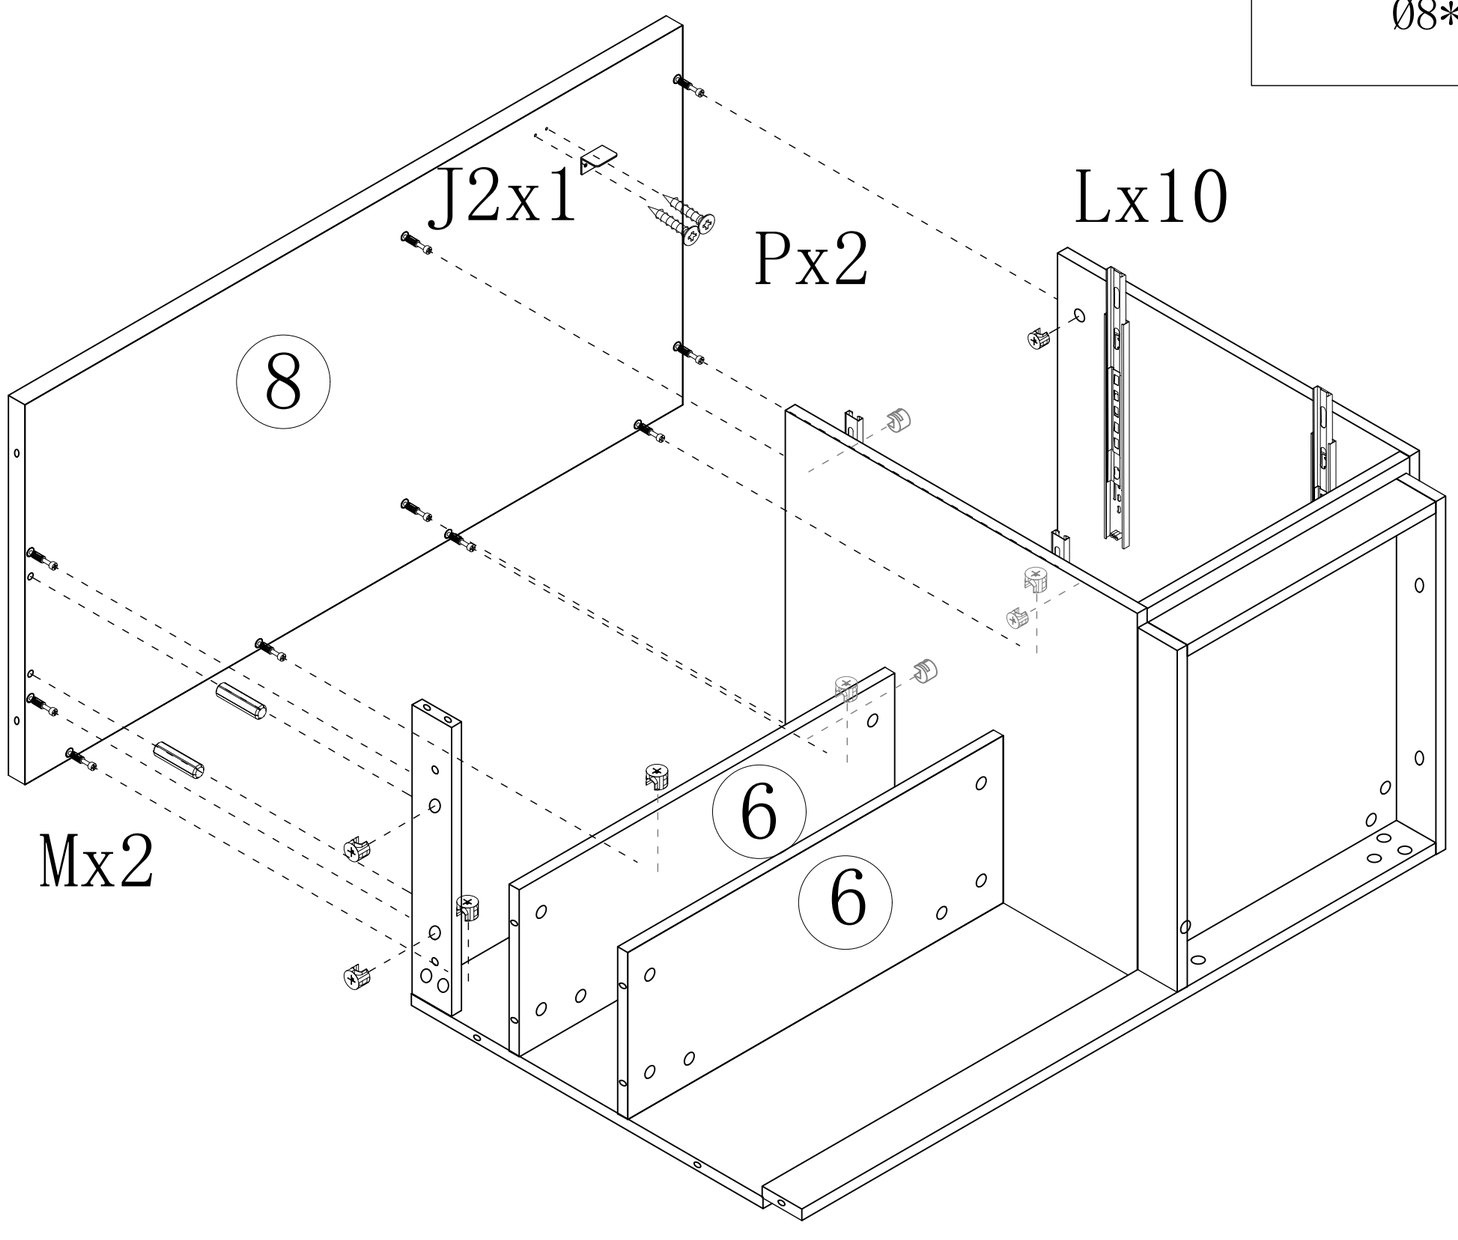


ASSEMBLY INSTRUCTION

step 9

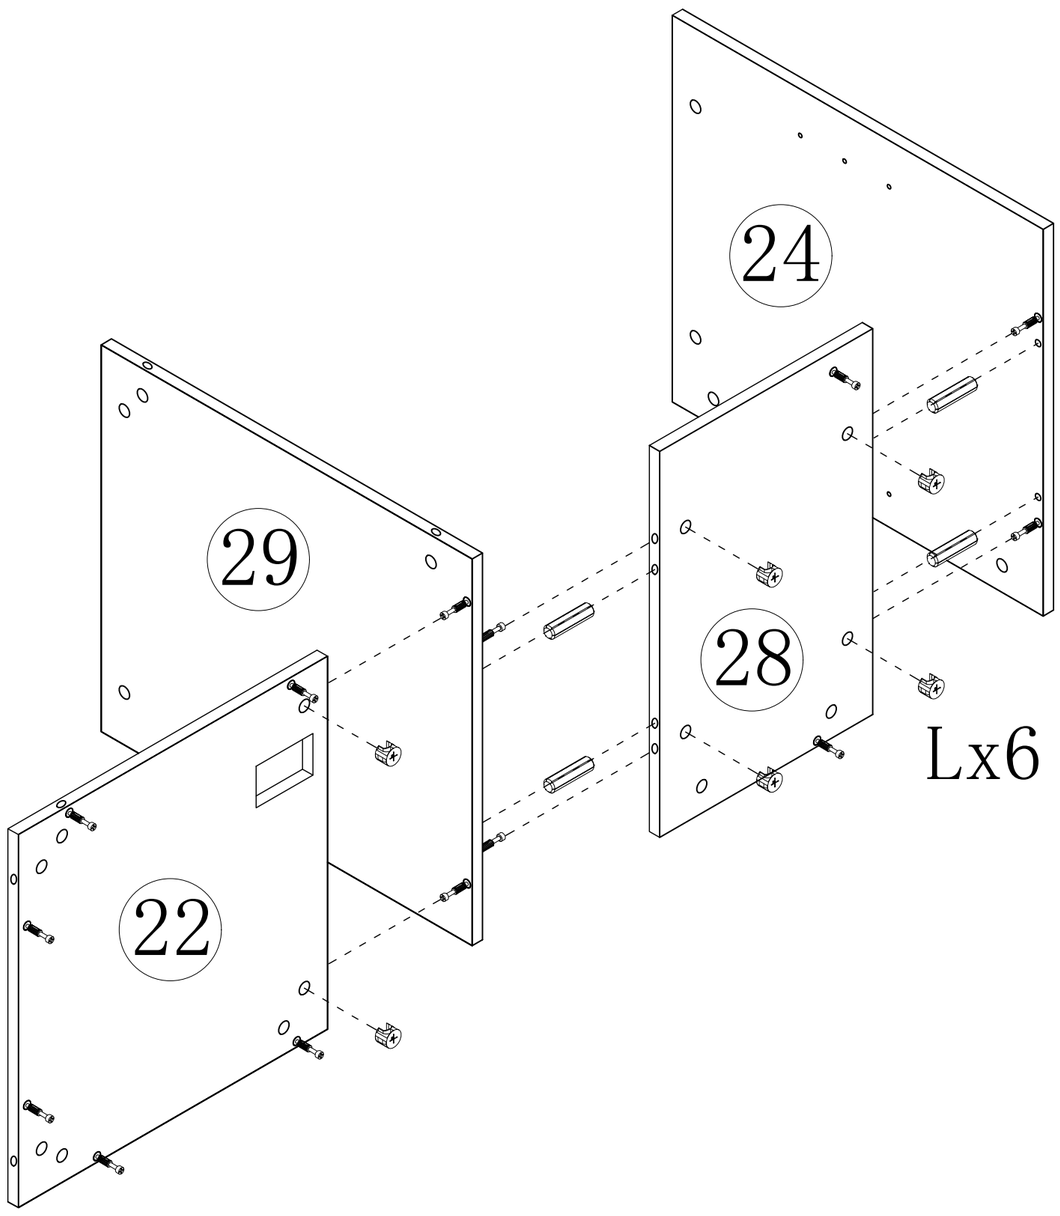

L 6 PCS

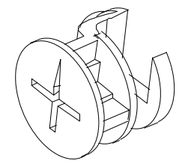



M 4 PCS




Ø8*30

step 10

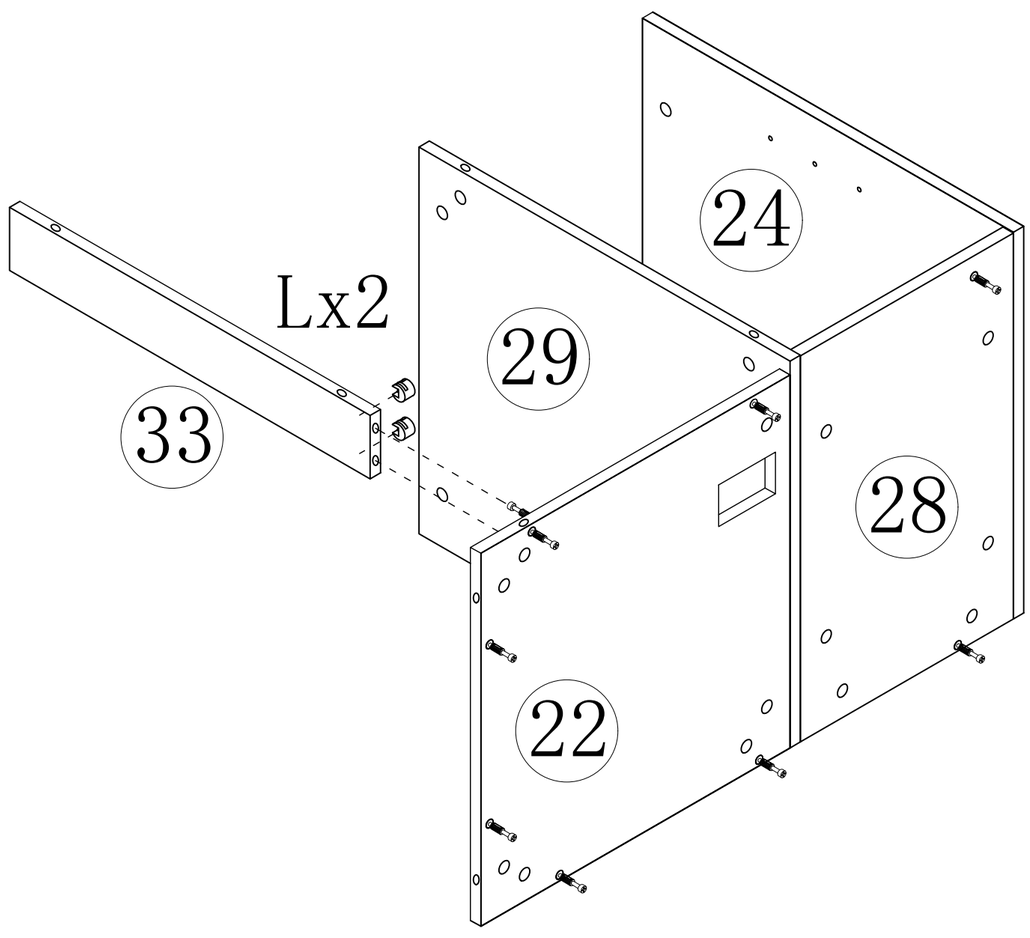

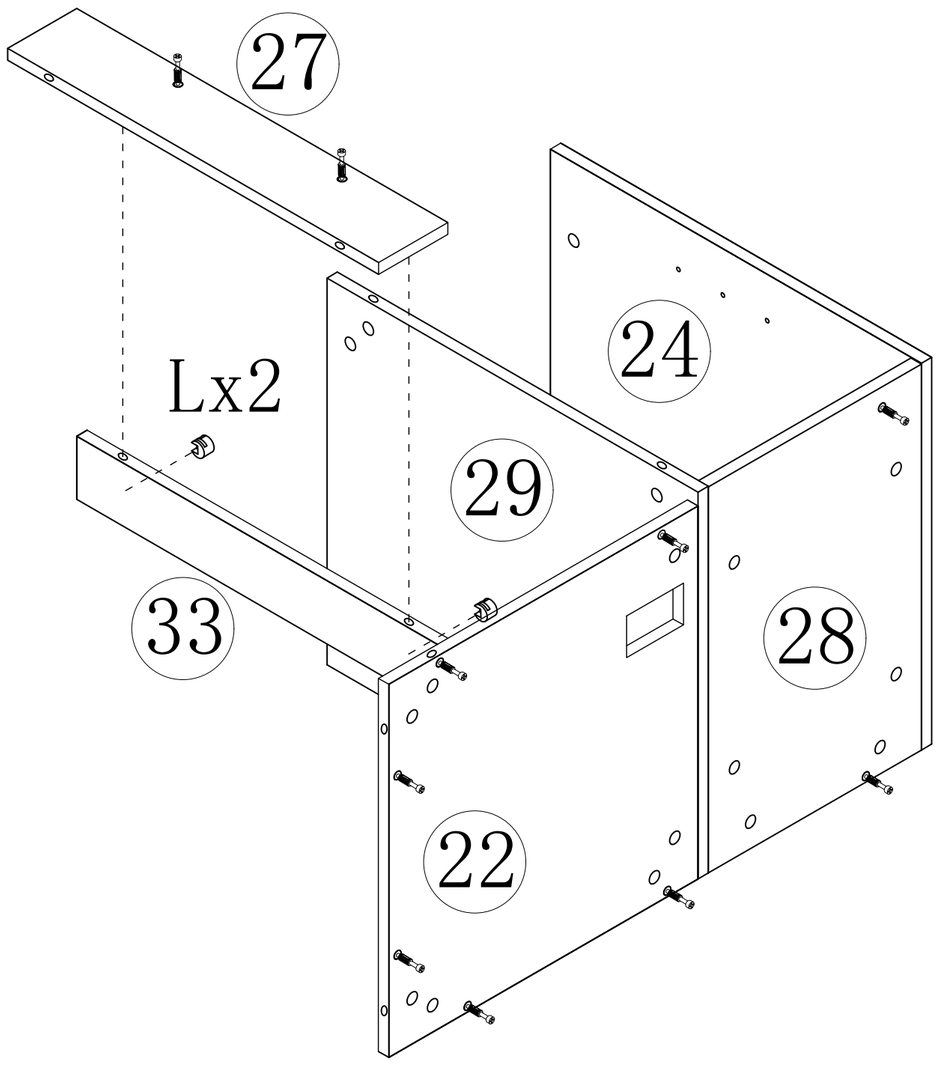


L 4 PCS

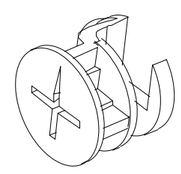


ASSEMBLY INSTRUCTION


step 11

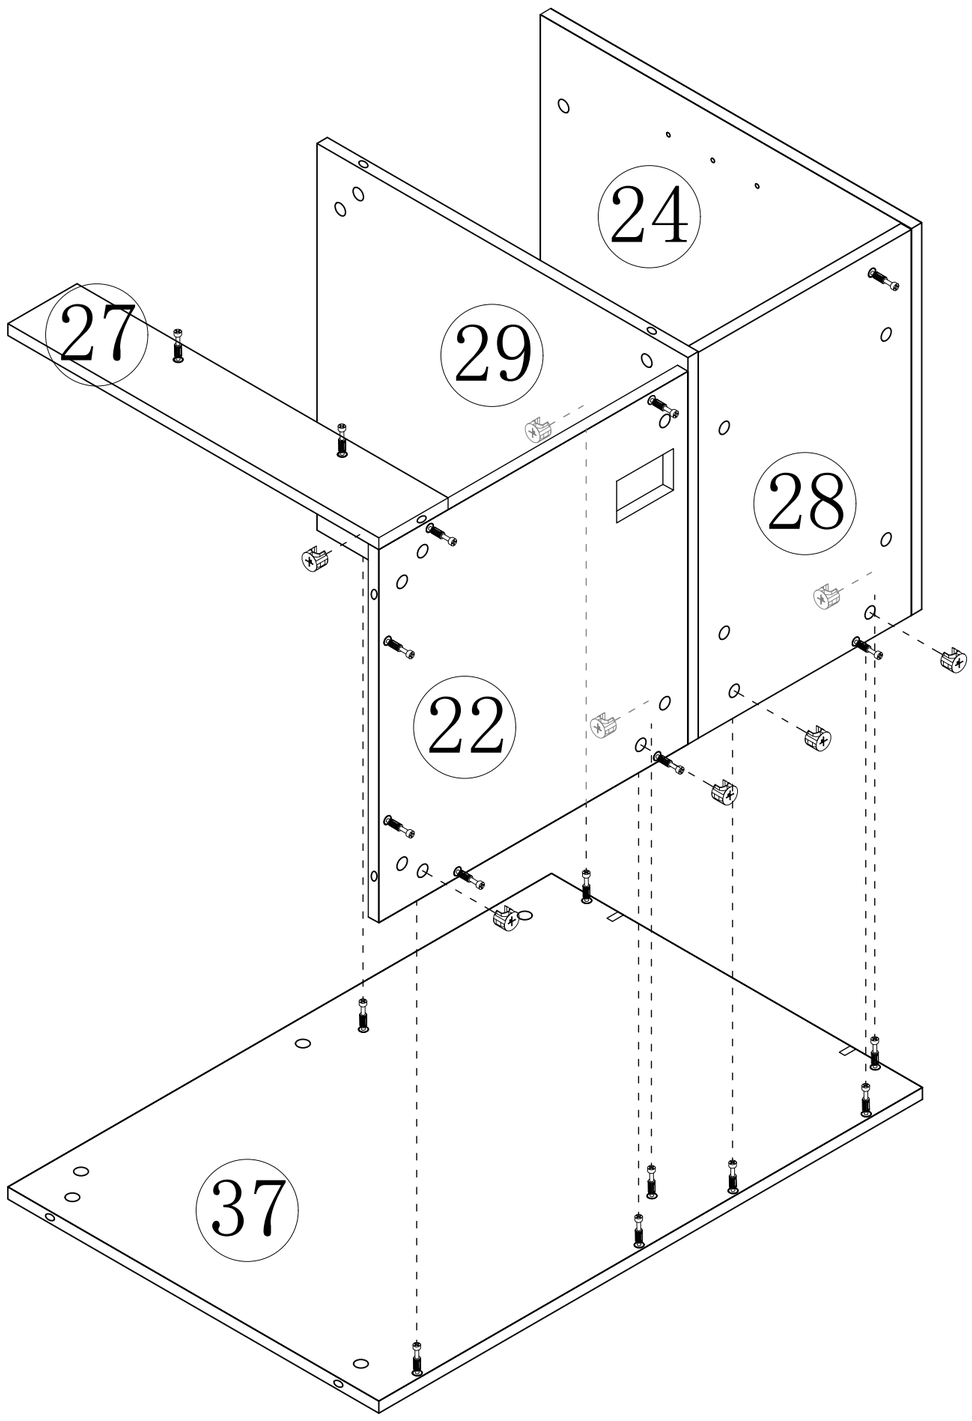


L 8 PCS

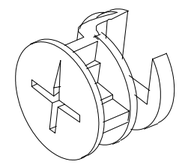

step 12

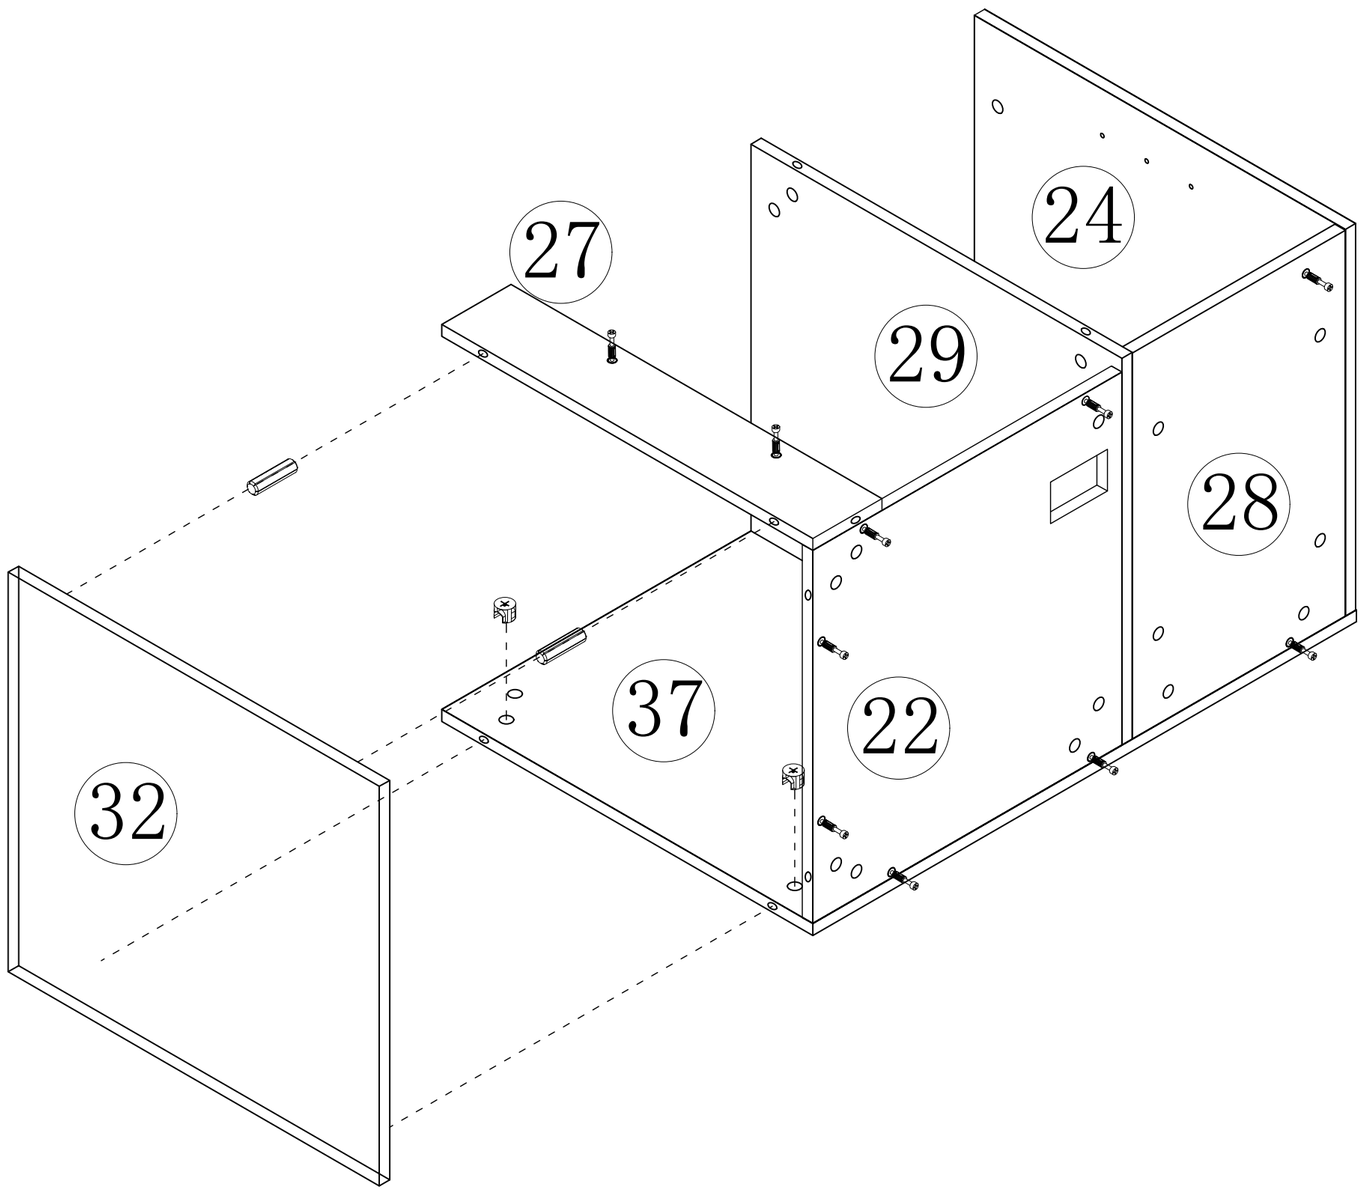

L 2 PCS

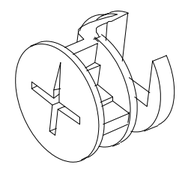

M 2 PCS





Ø8*30

ASSEMBLY INSTRUCTION

step 13


L 8 PCS

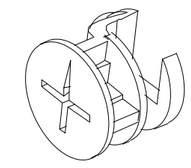


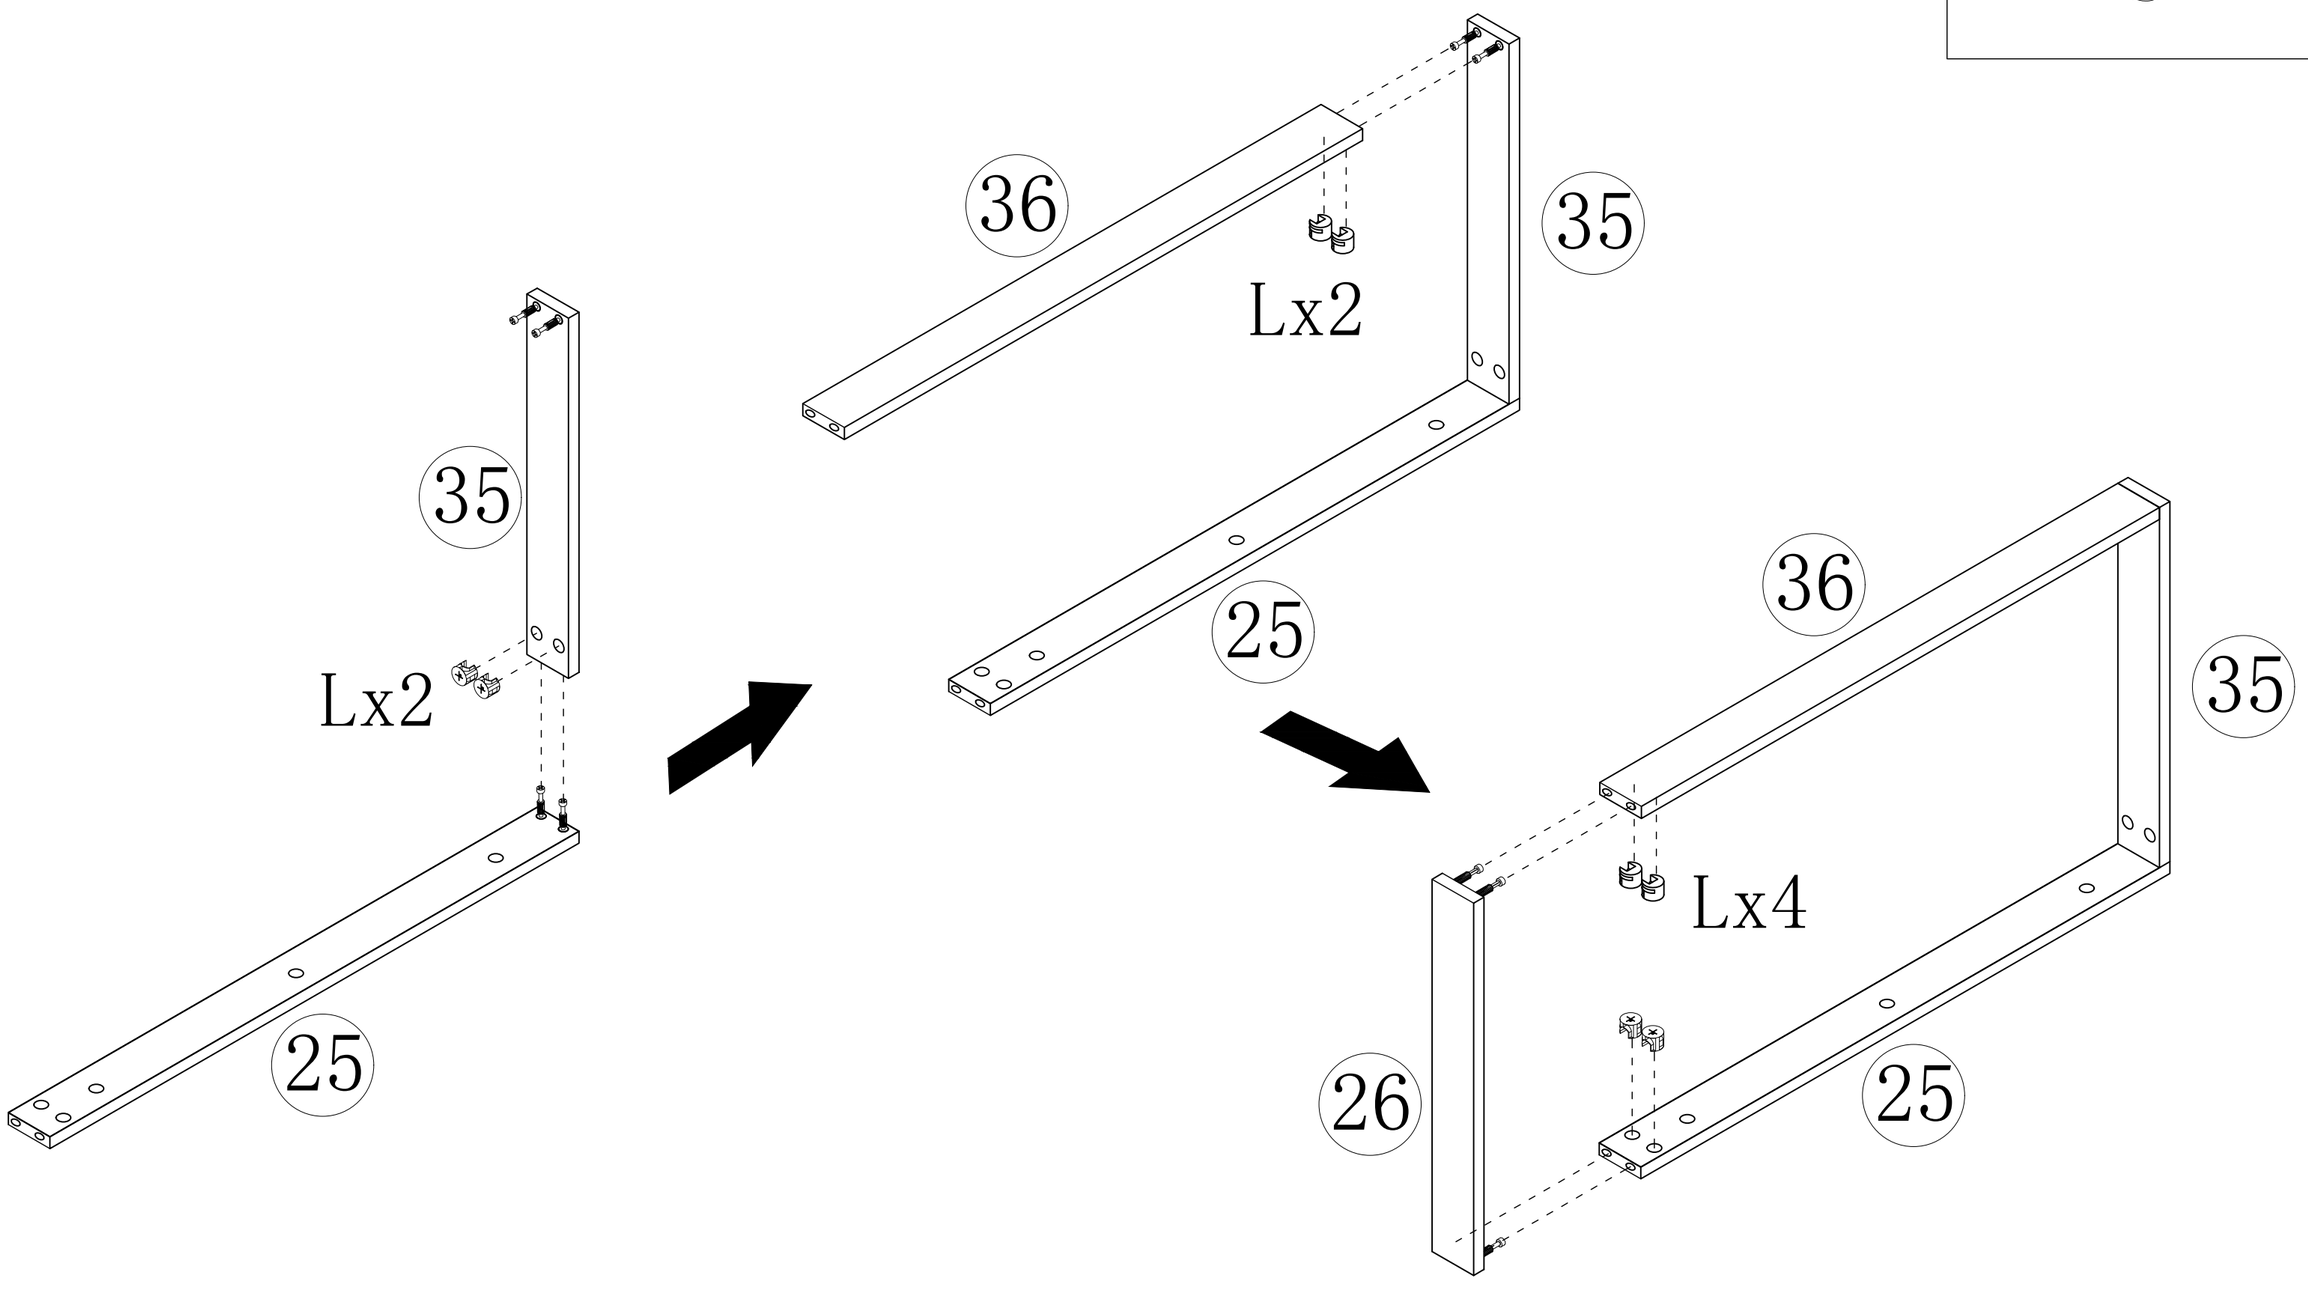

step 14

L 8 PCS

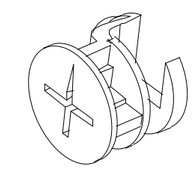


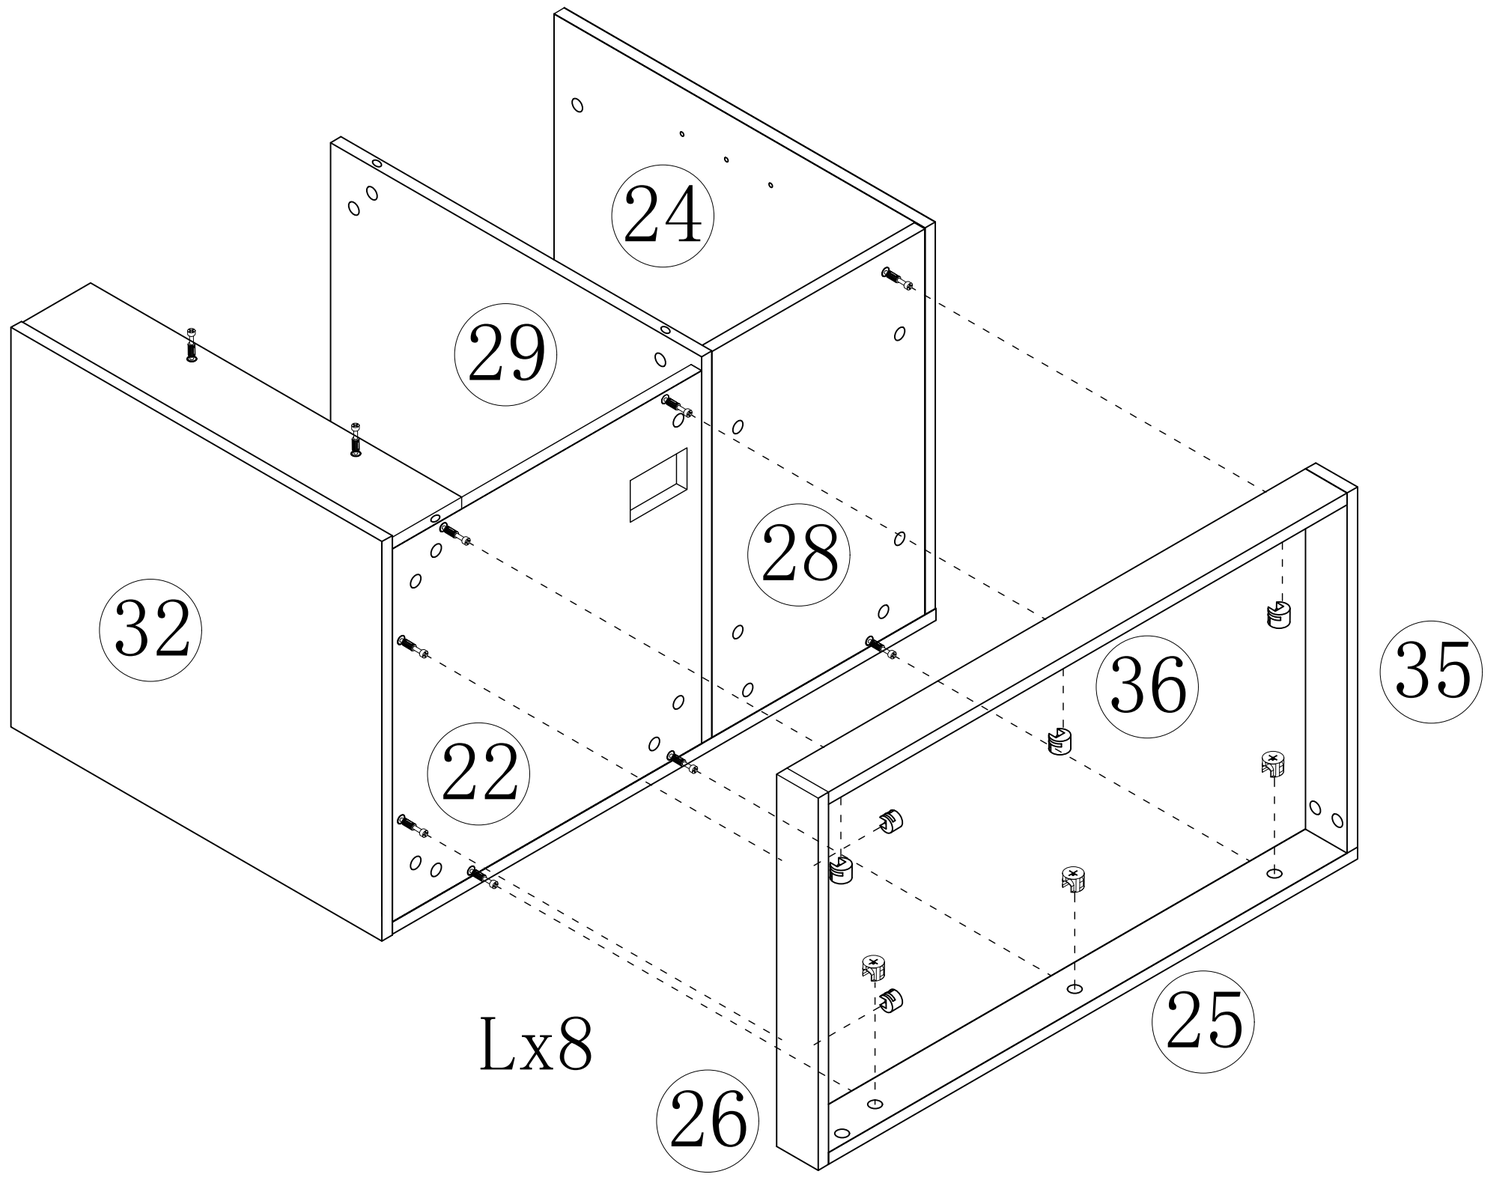

ASSEMBLY INSTRUCTION


step 15


P 4 PCS



Ø3.5*14


64 1 PC




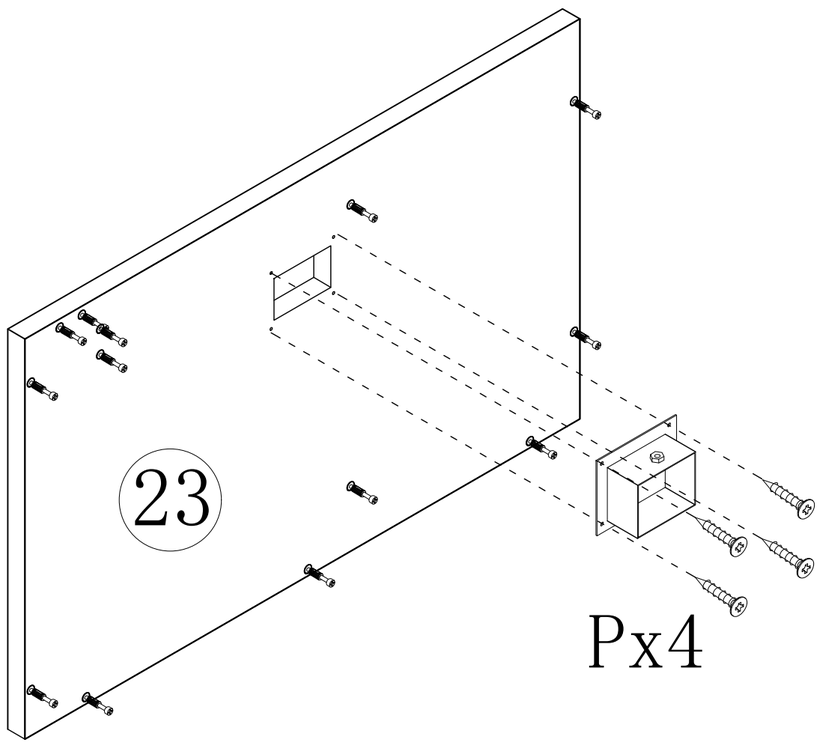

step 16


L 13 PCS

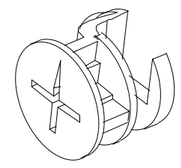

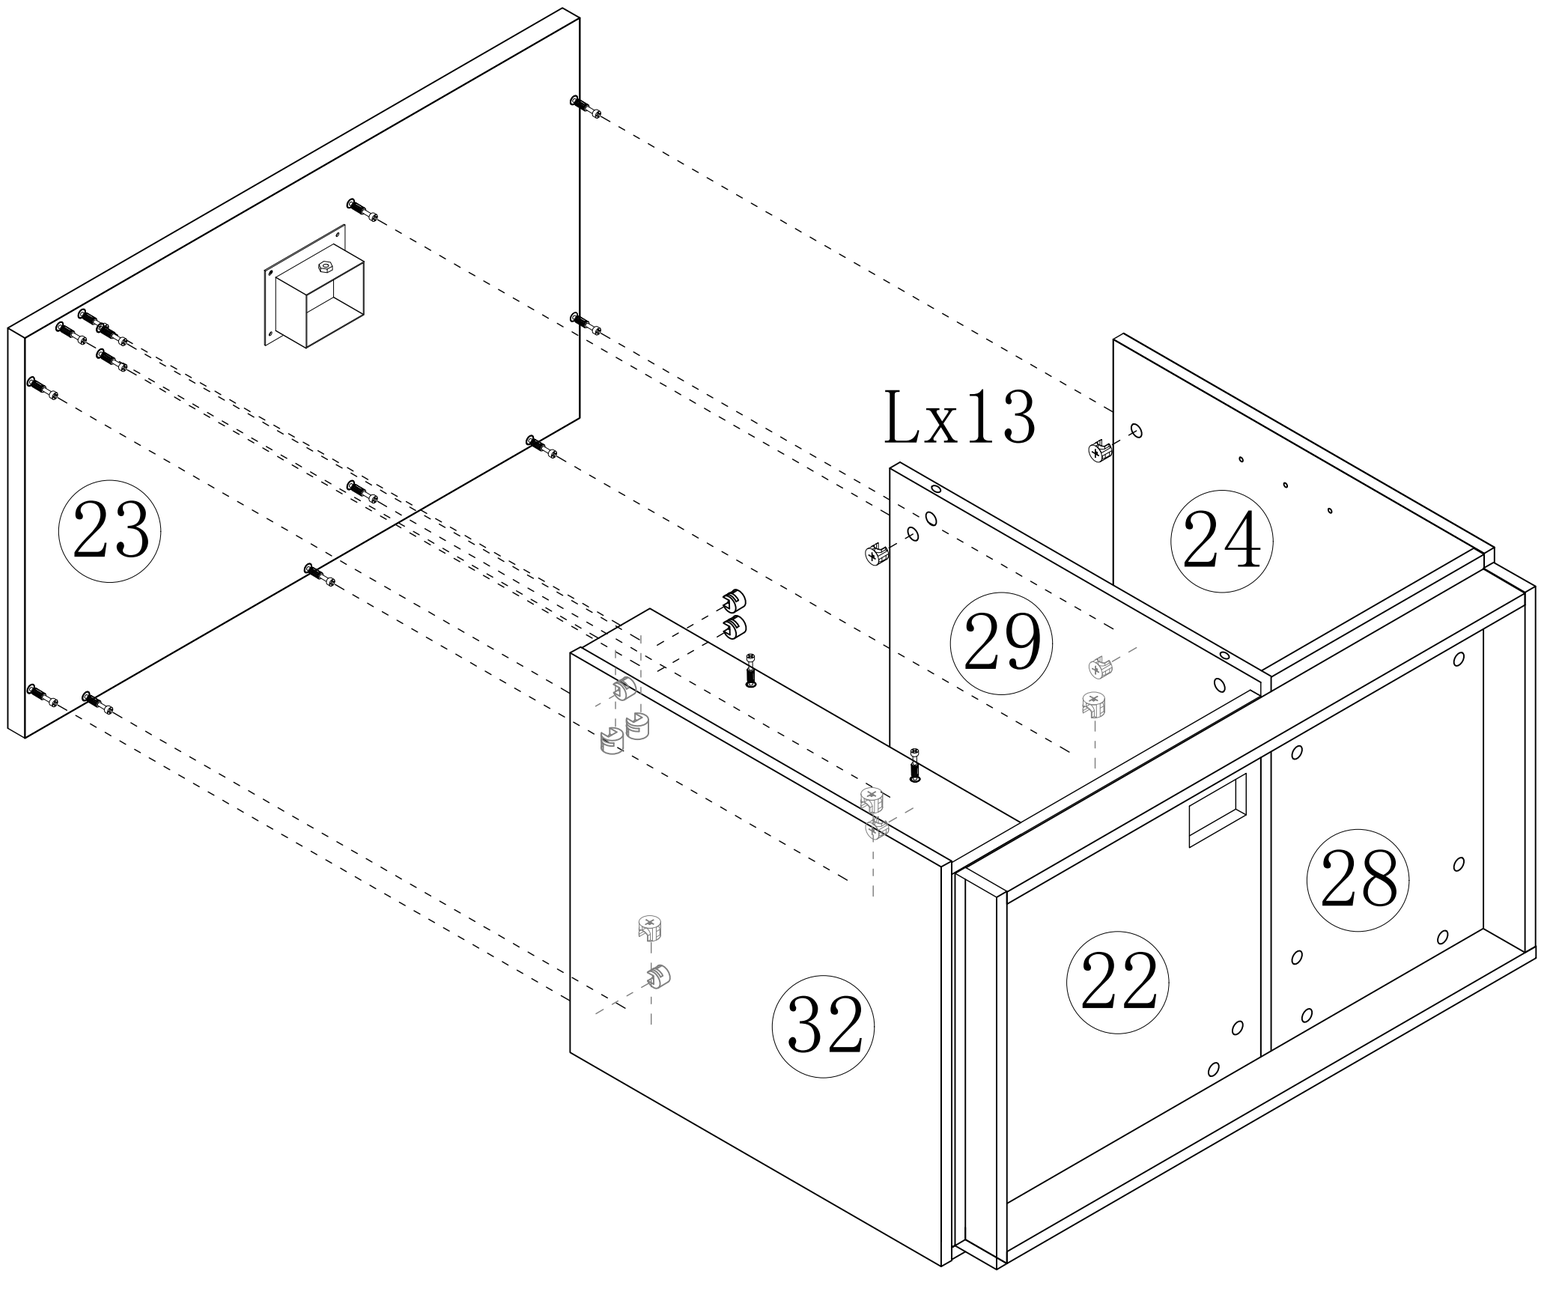


ASSEMBLY INSTRUCTION


step 17

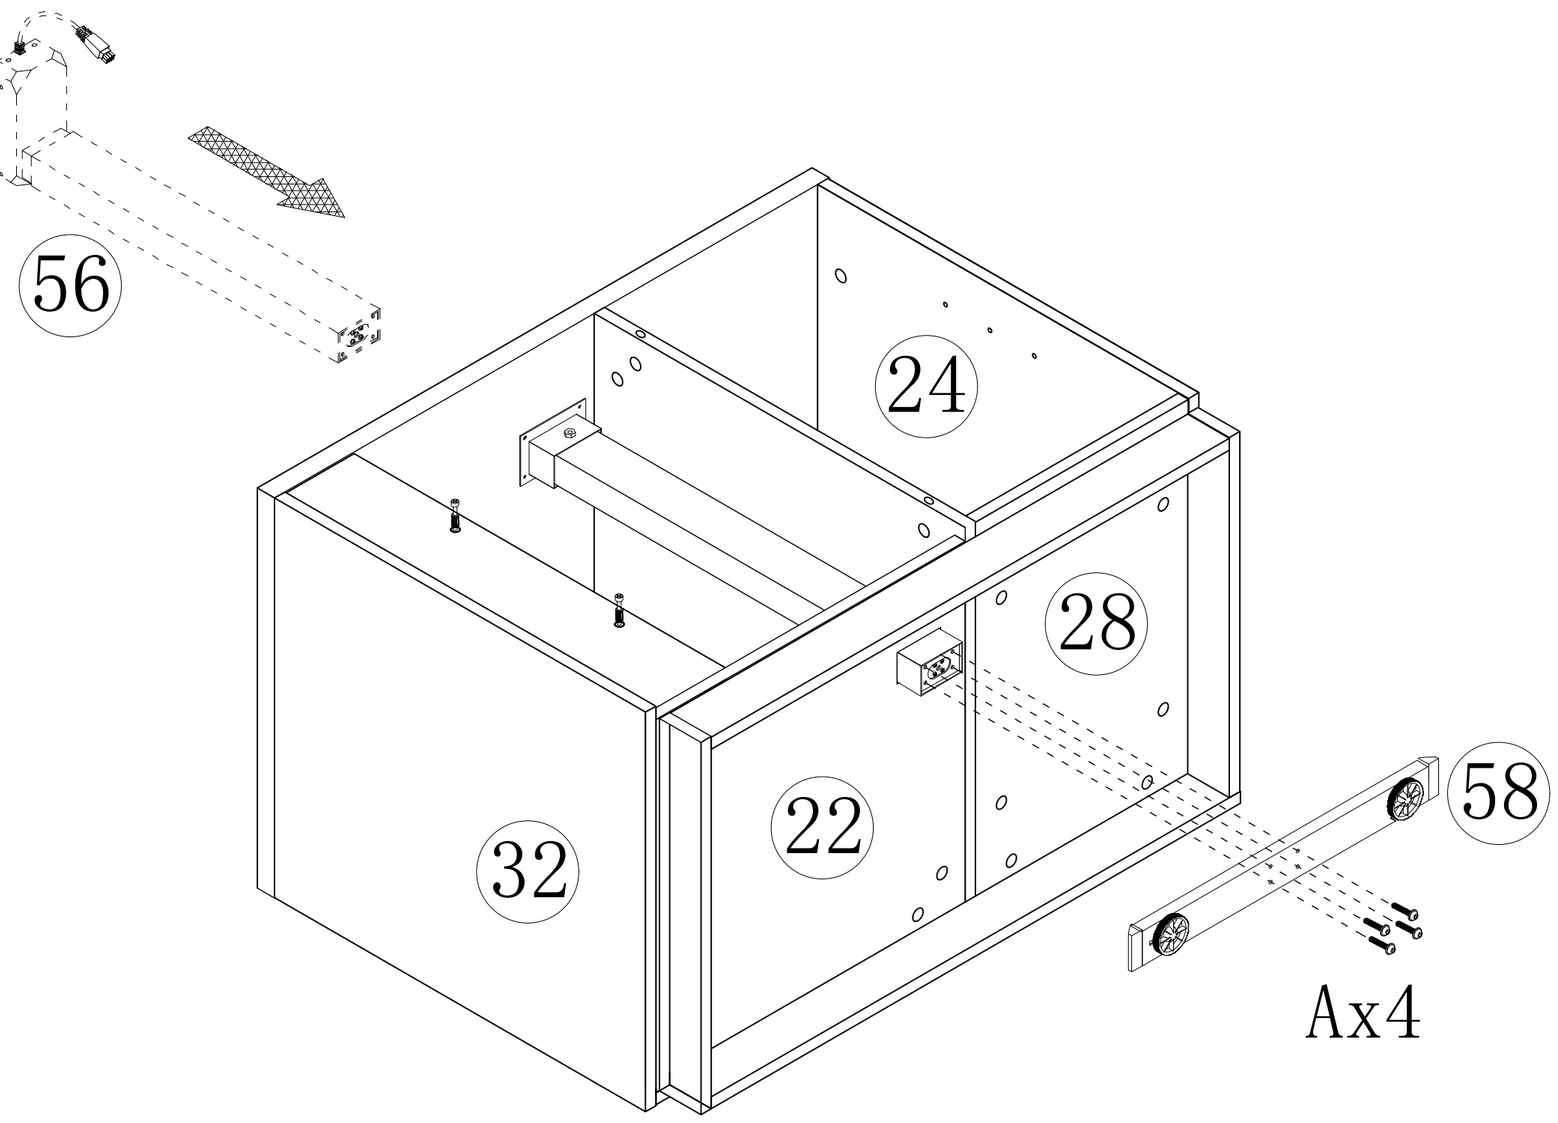

56 1 PCS




A 4 PCS




M6*30

step 18

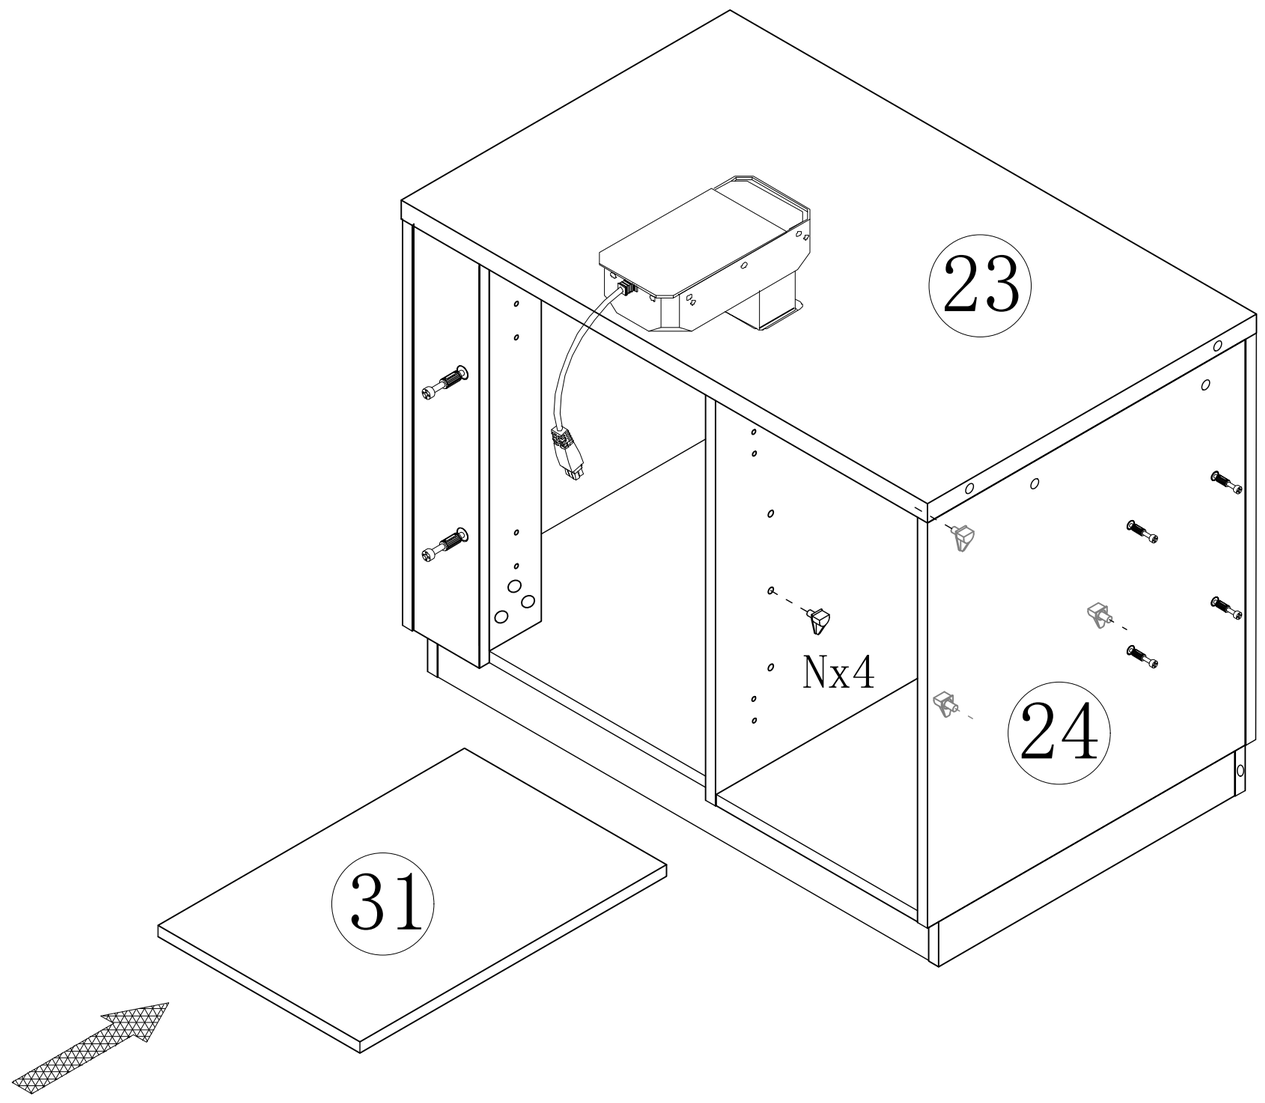


N 4PCS

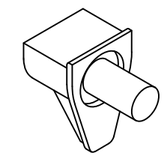


ASSEMBLY INSTRUCTION

step 19

0	4 PCS




P	8 PCS





Ø3.5*14


G	2 PCS

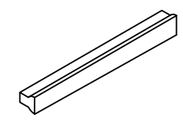


H	4 PCS



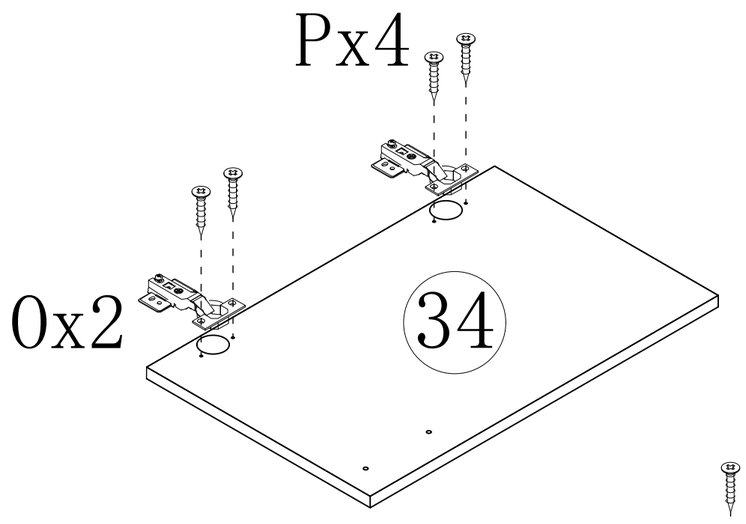


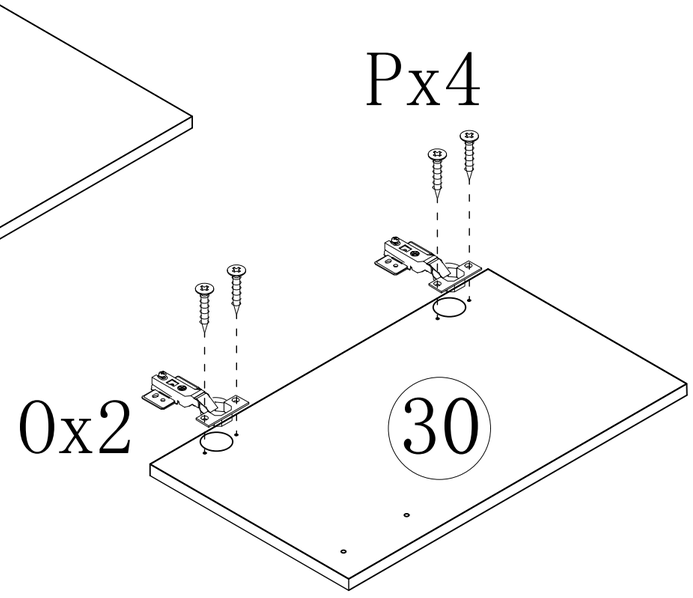

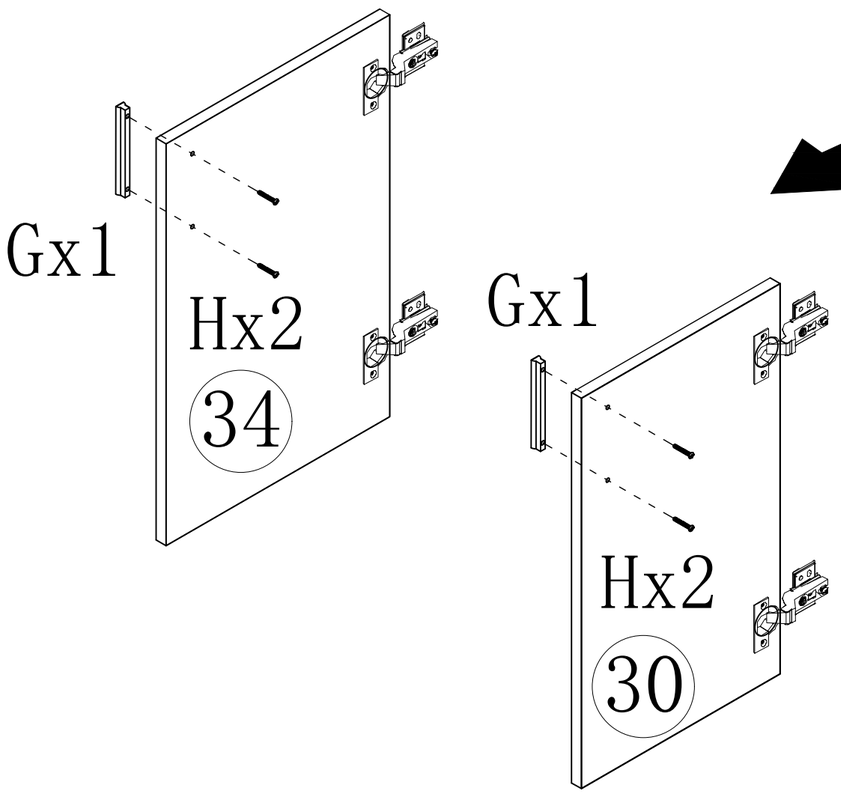


step 20

P	16 PCS




Ø3.5*14

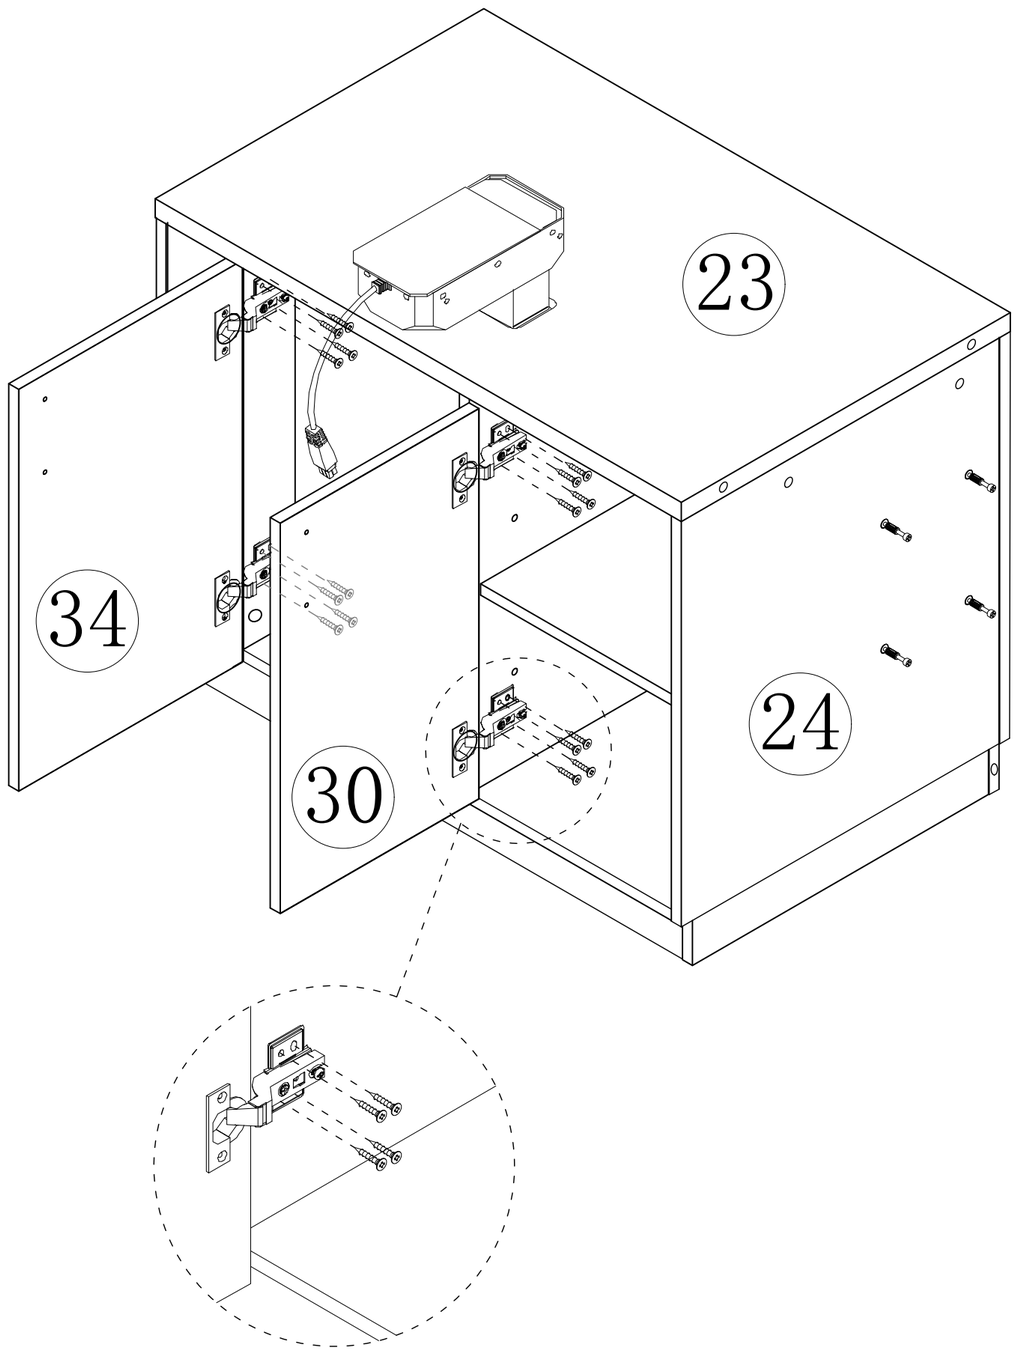

ASSEMBLY INSTRUCTION

step 21

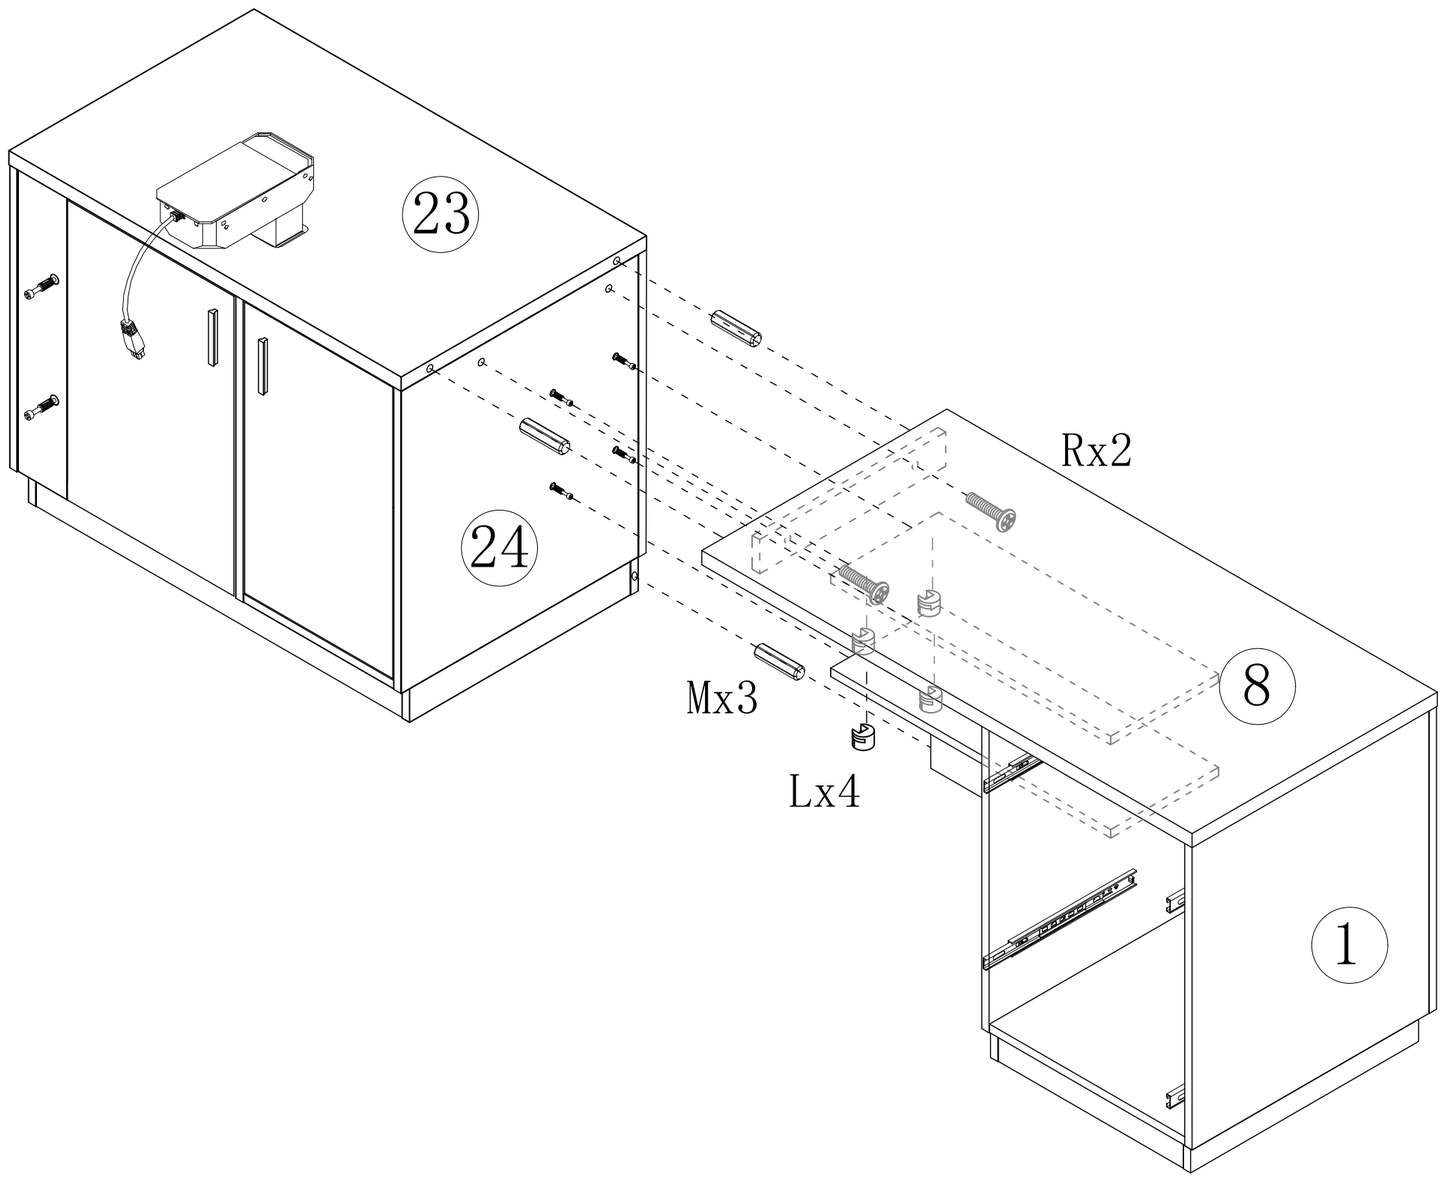

L 4 PCS



M 3 PCS




Ø8*30

R 2 PCS




M6*20


step 22

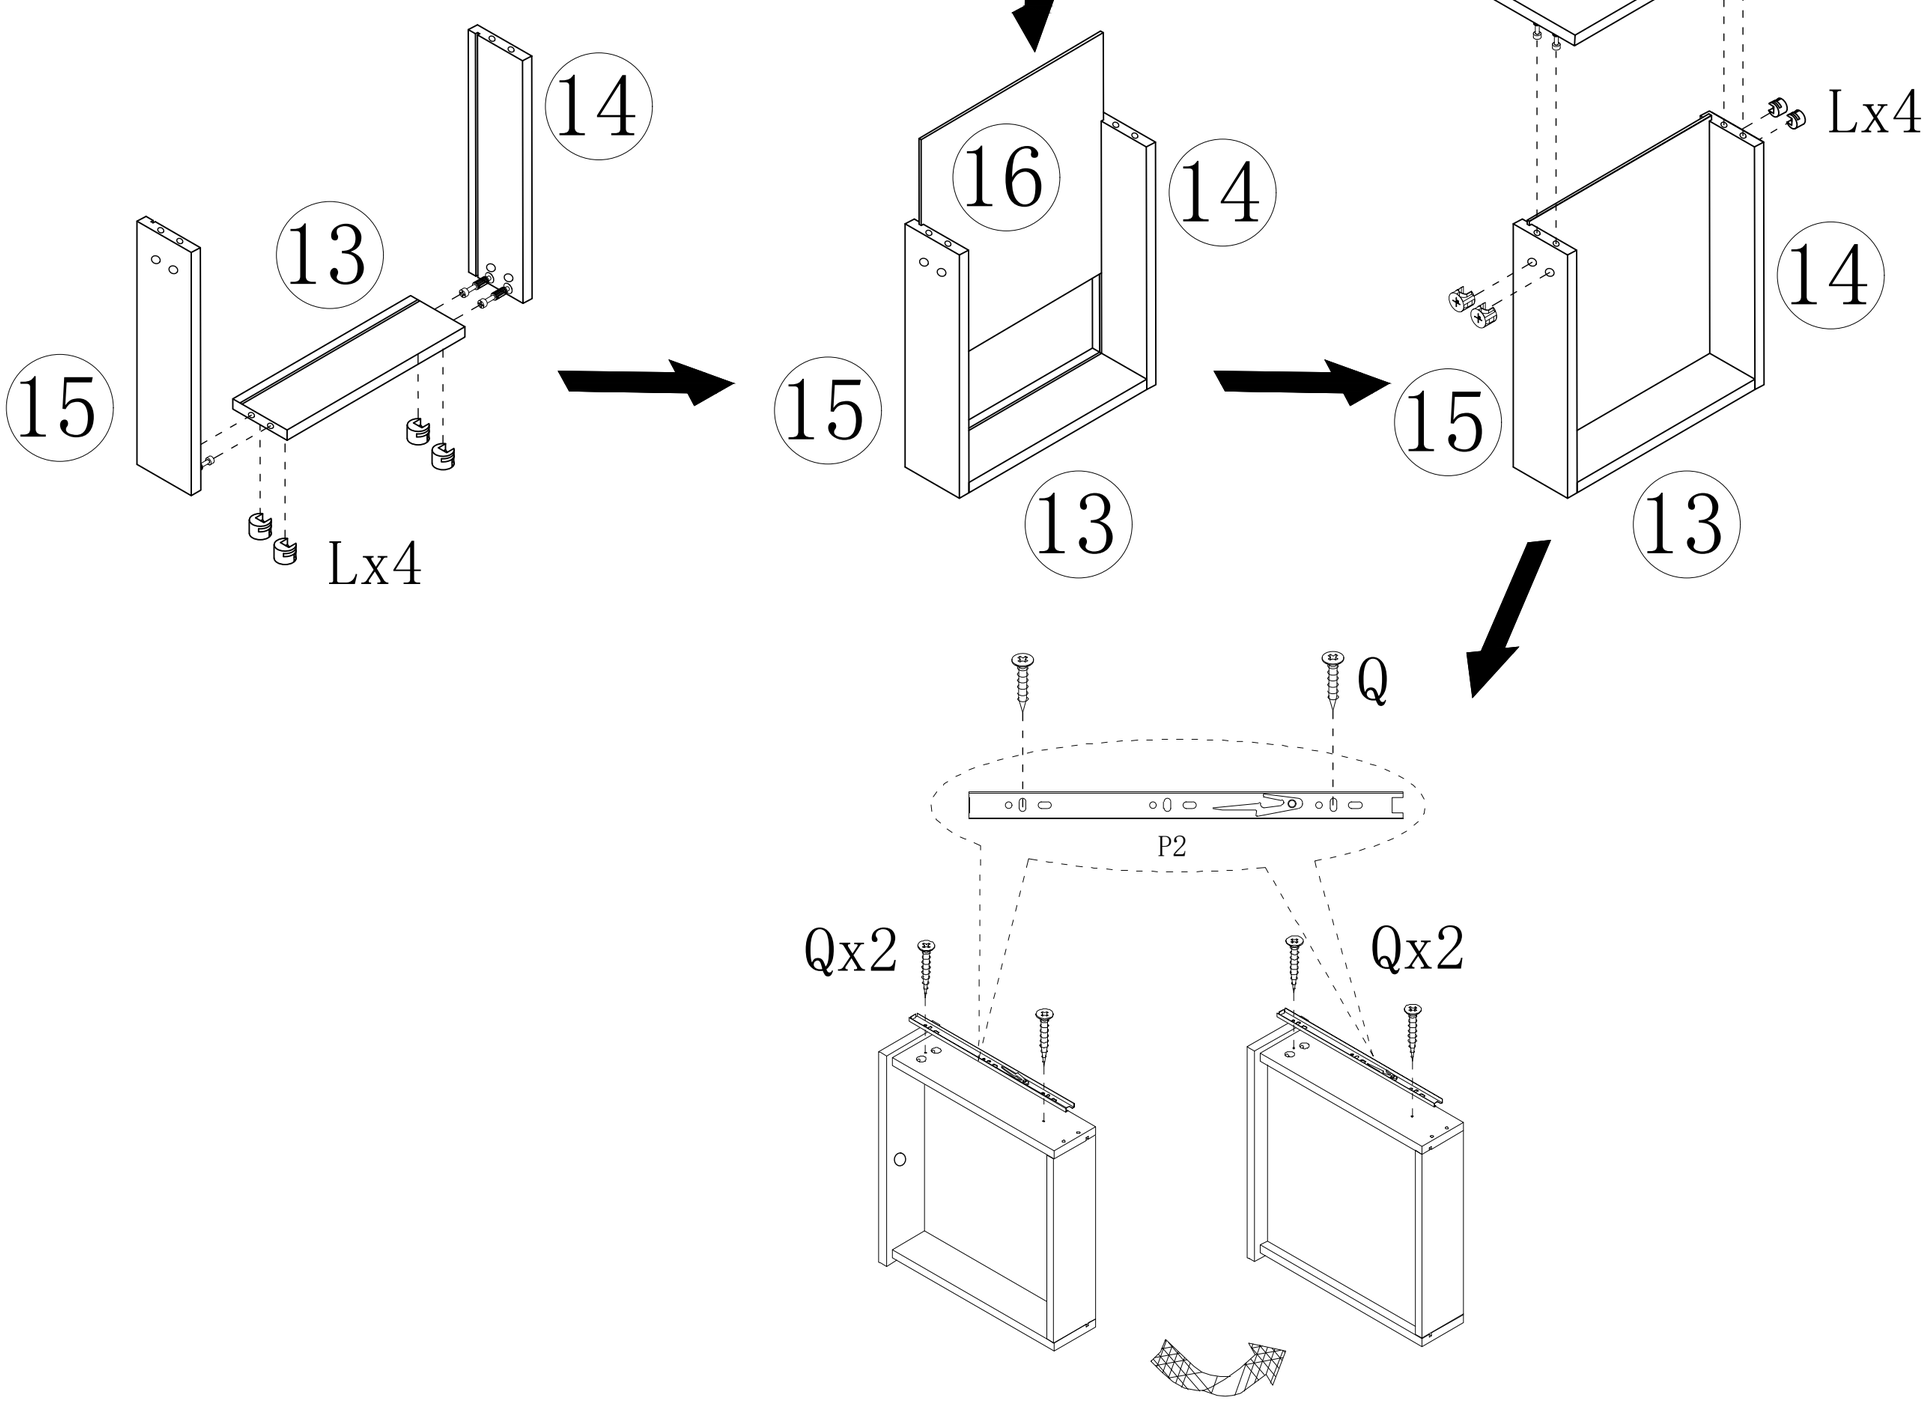

L 8 PCS

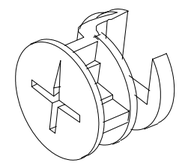


P 4 PCS




Ø3.5*14

E2 2 PCS

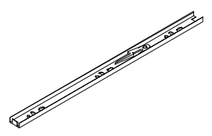


ASSEMBLY INSTRUCTION


step 23

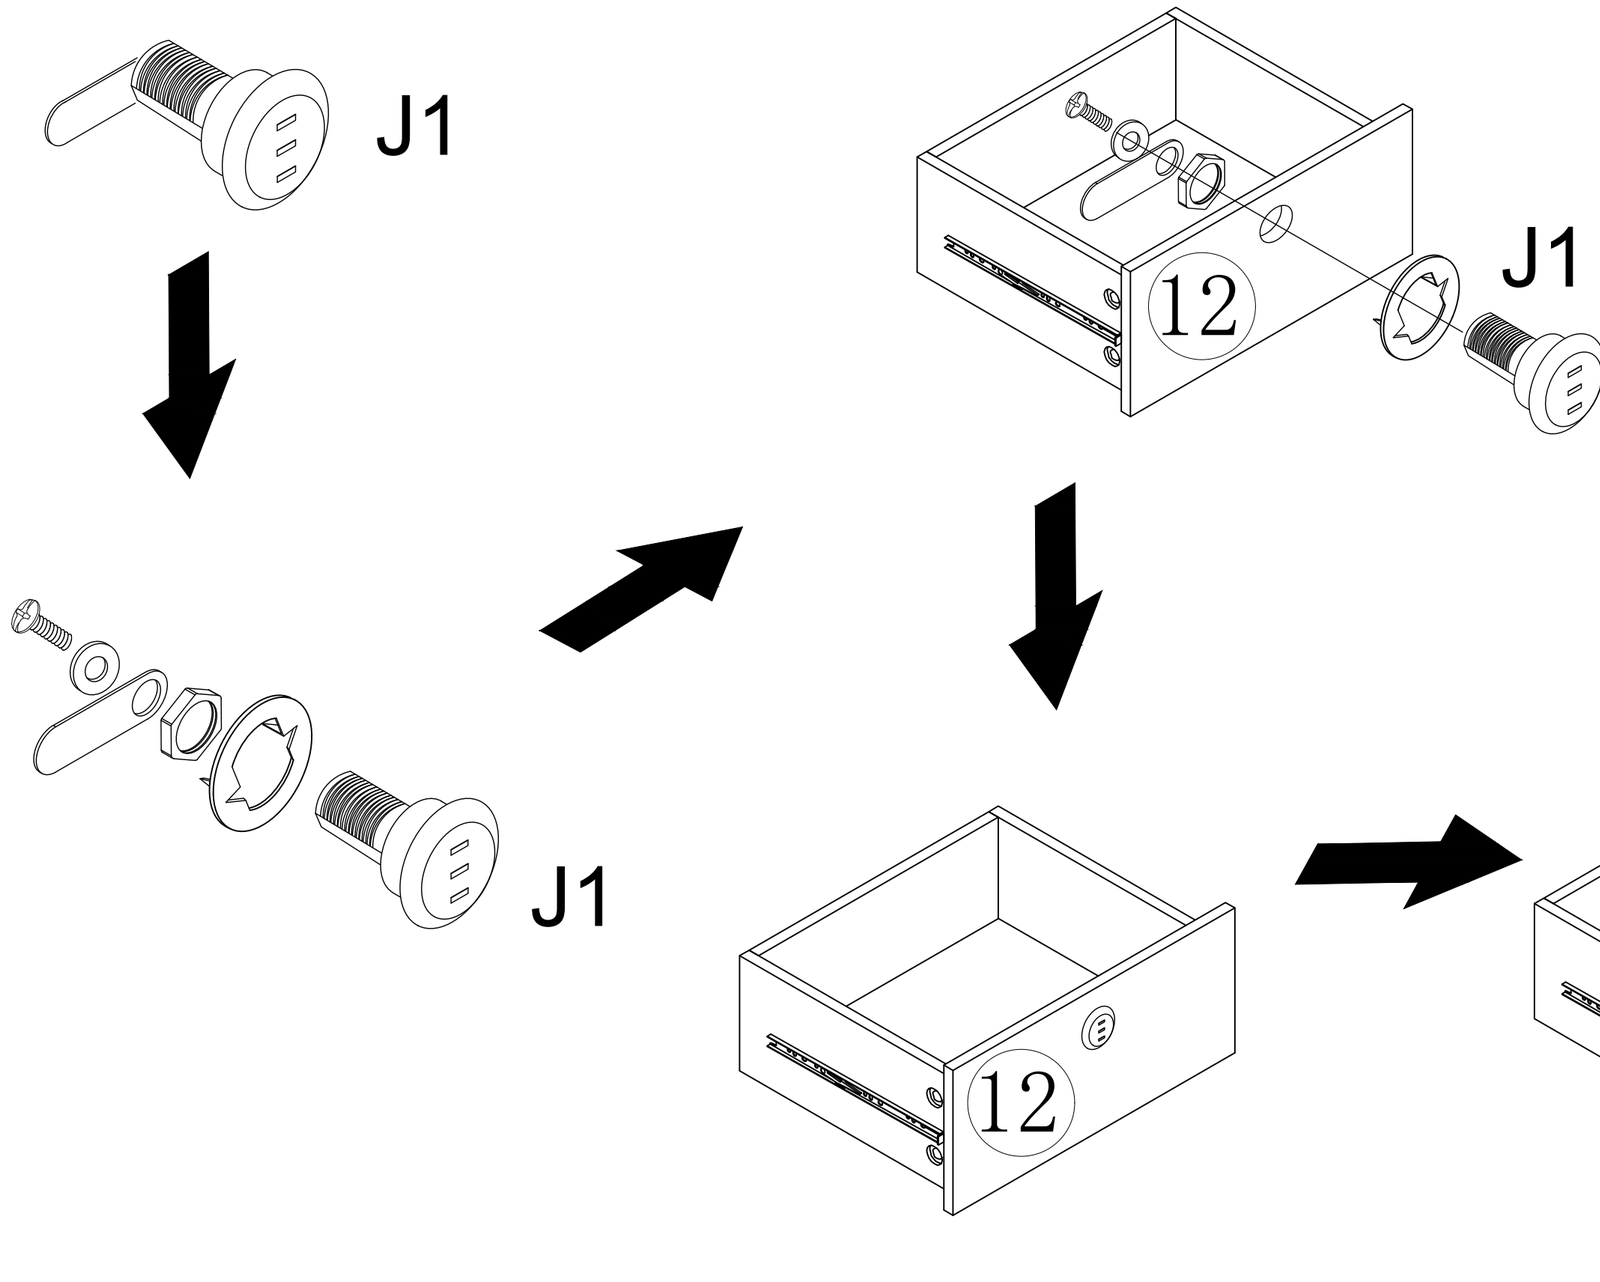


J1 1SET

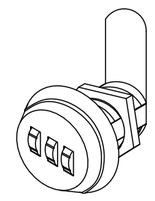


G 1 PCS

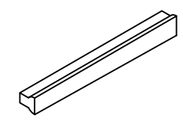



H 2 PCS




step 24

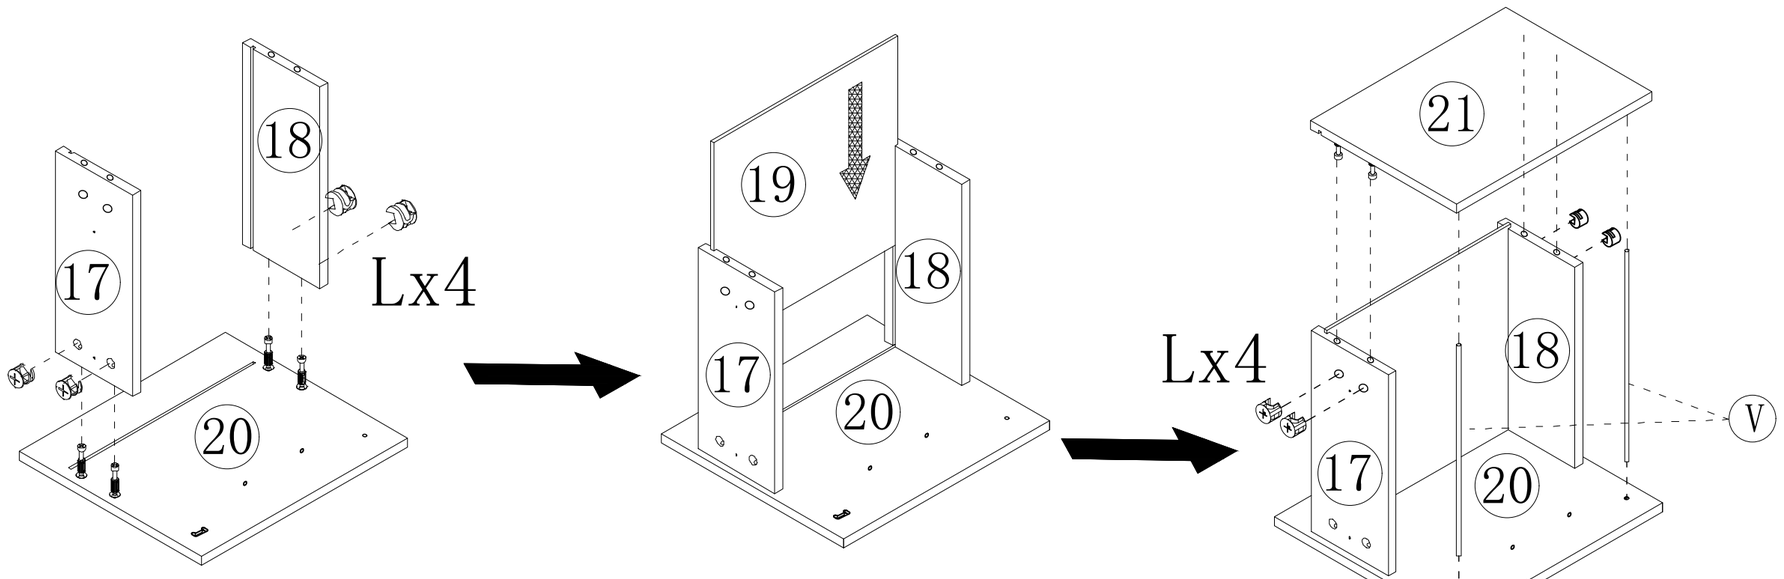

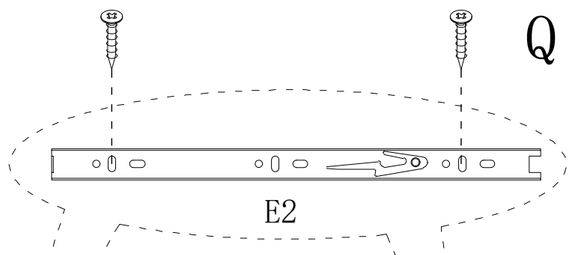

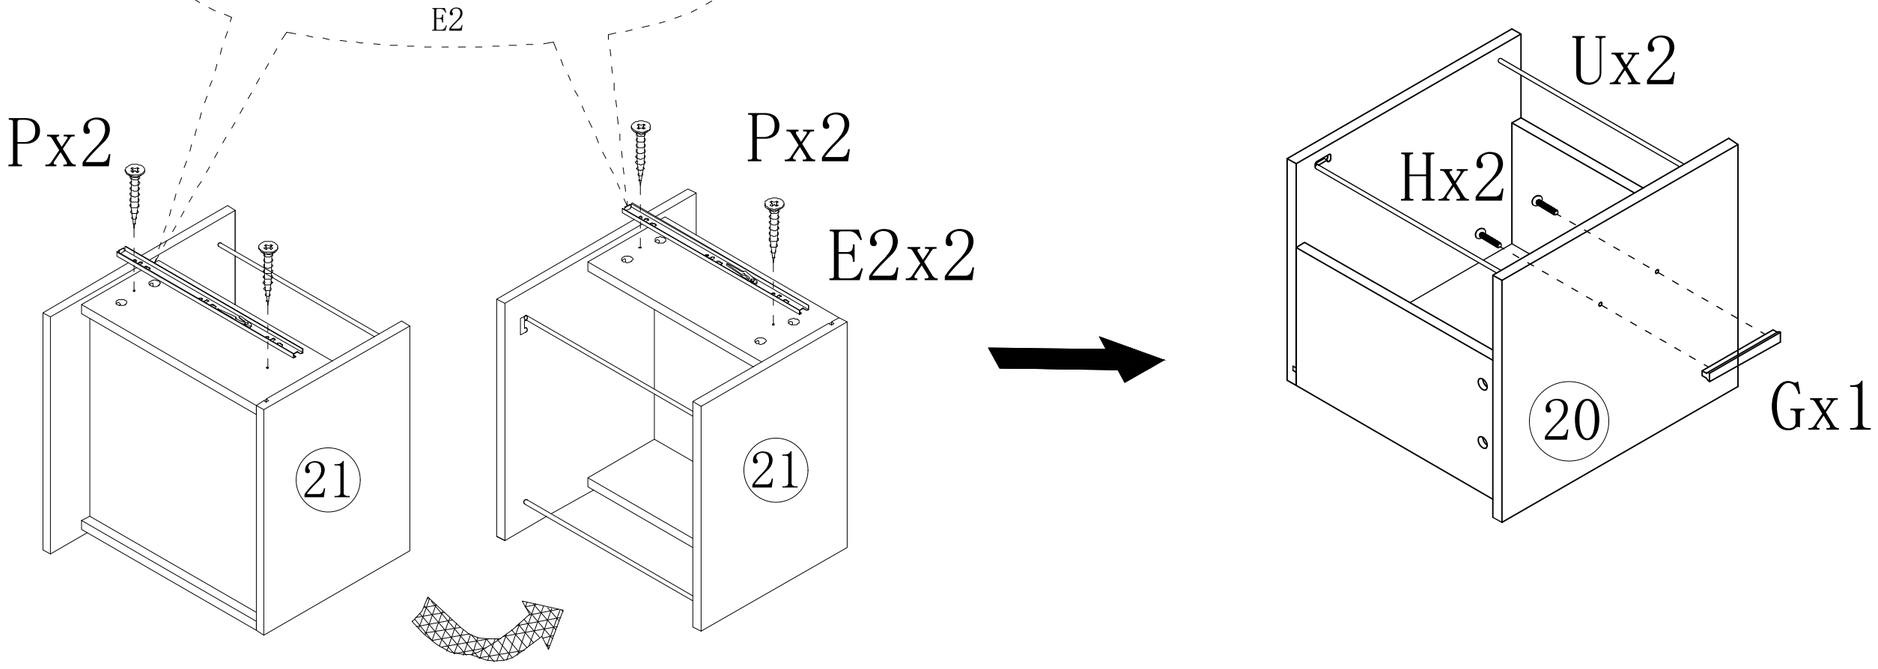

L 8 PCS

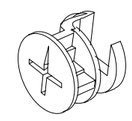


P 4 PCS



Ø3.5*14

E2 2 PCS




V 2PCS



L=354

G 1 PCS




H 2 PCS




ASSEMBLY INSTRUCTION


step 25

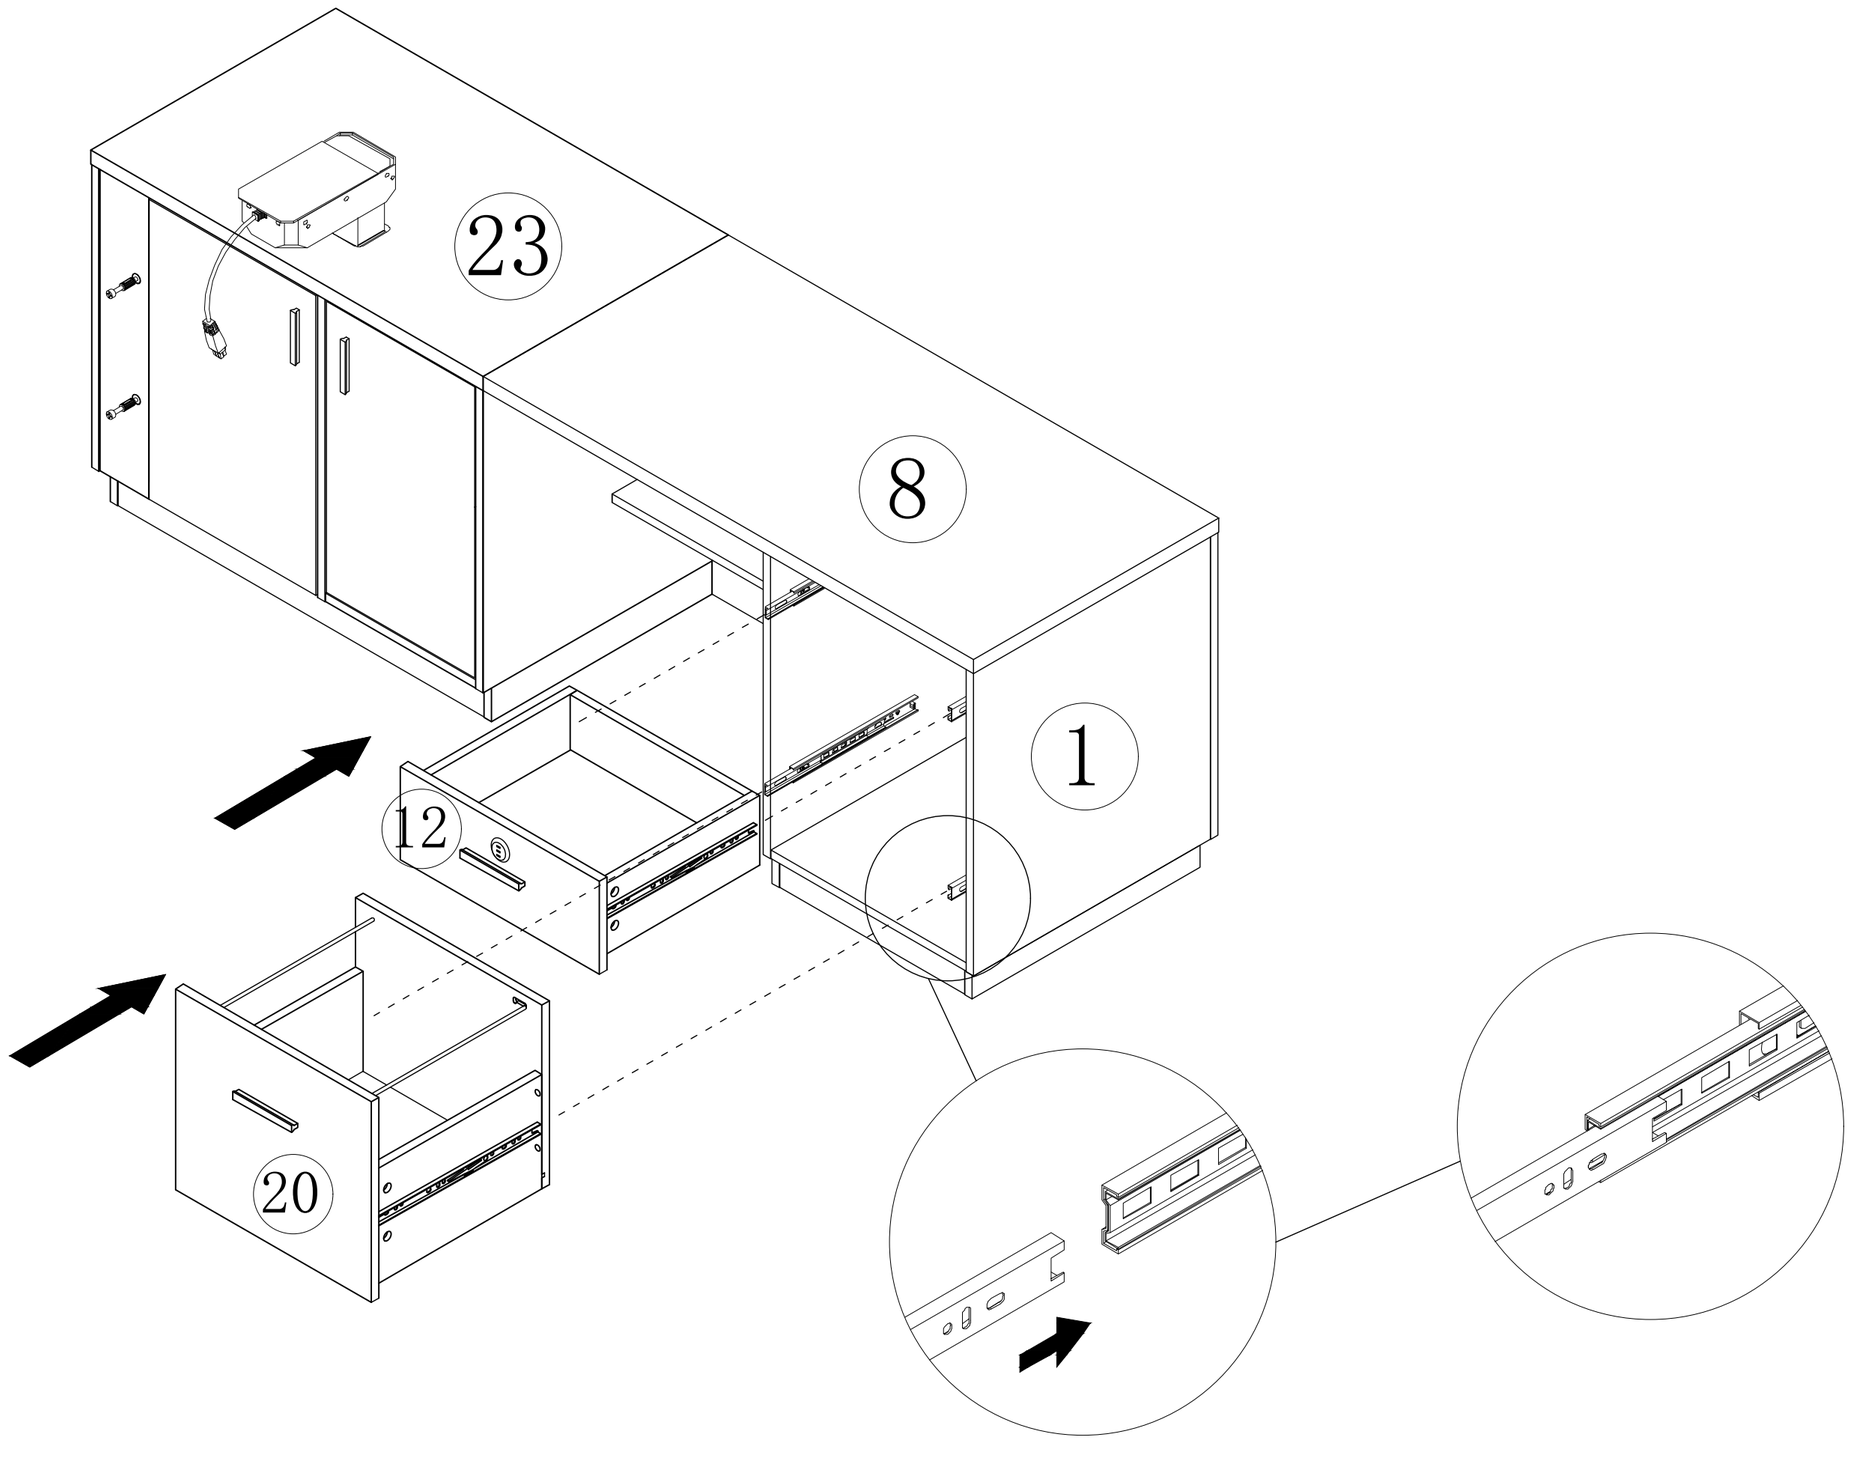

step 26


L 4 PCS

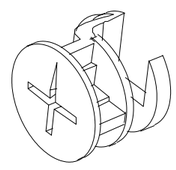


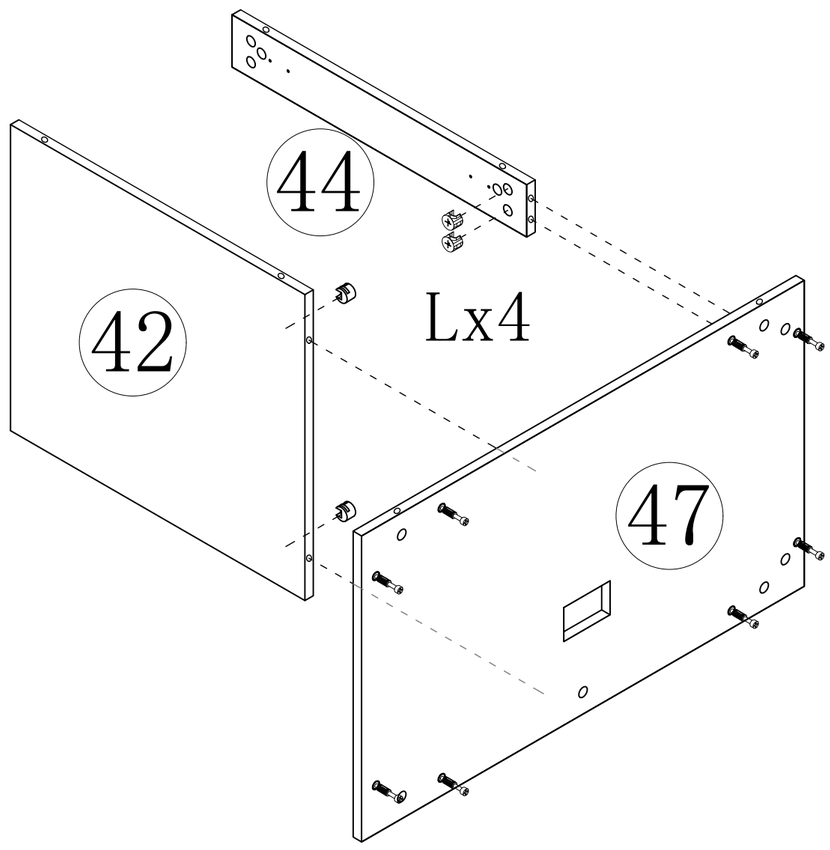

step 27

L 6 PCS

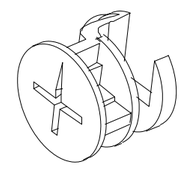


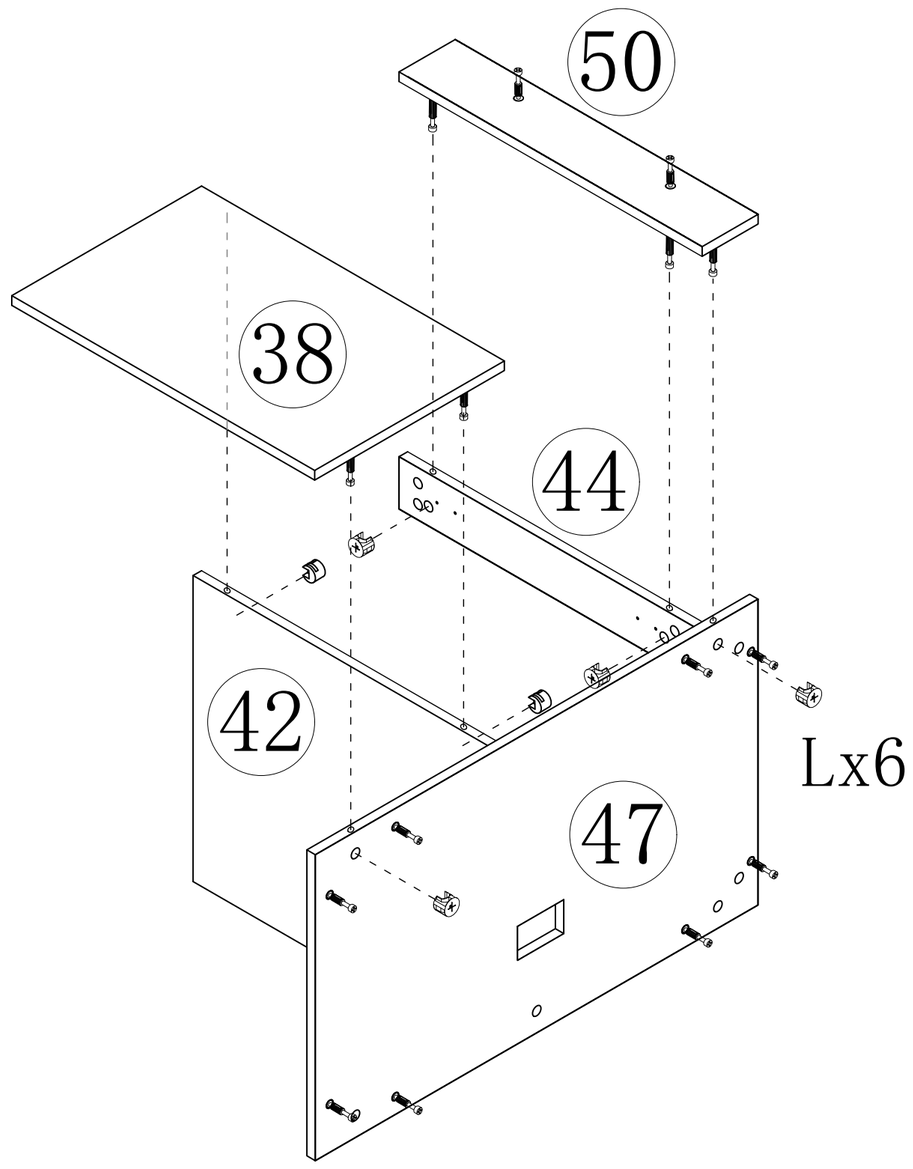


ASSEMBLY INSTRUCTION

step 28


L 5 PCS



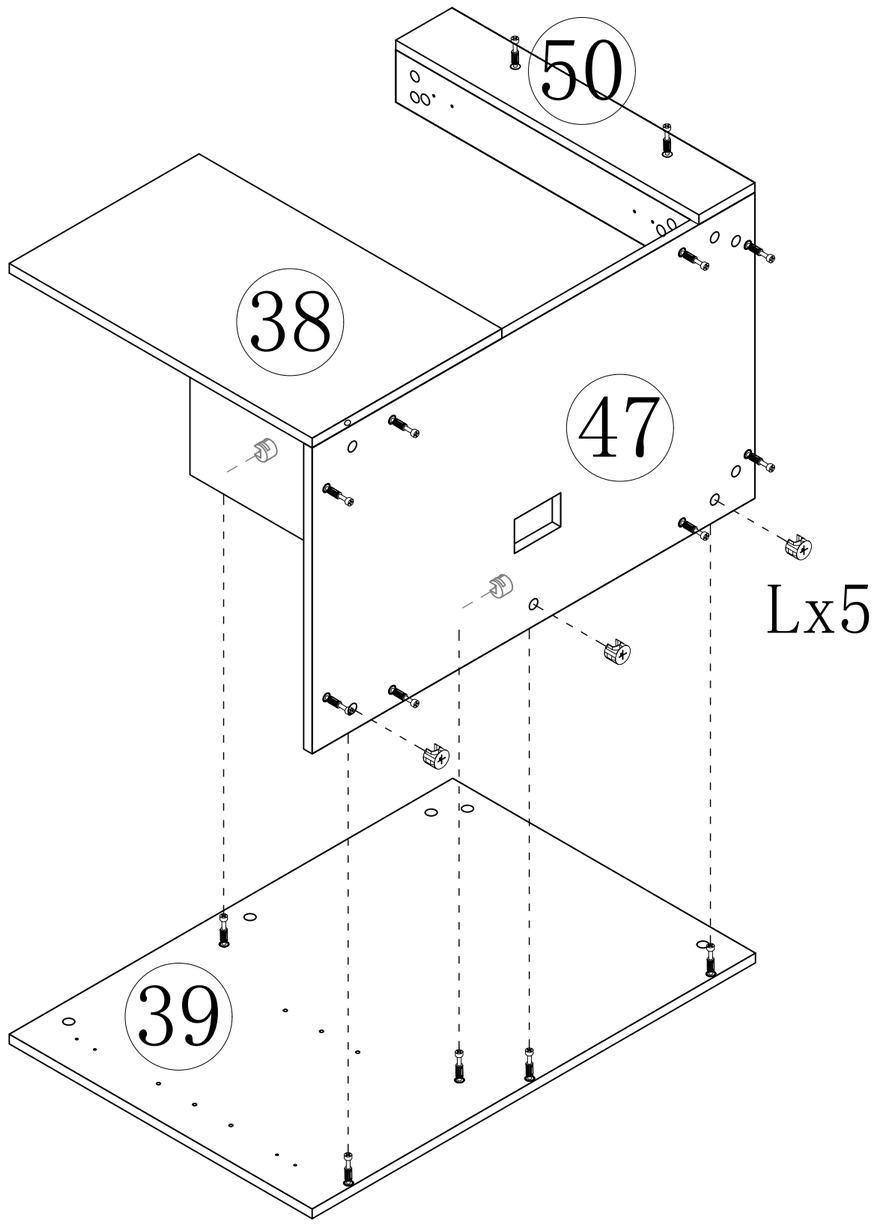

step 29


L 4 PCS



M 2 PCS




Ø8*30

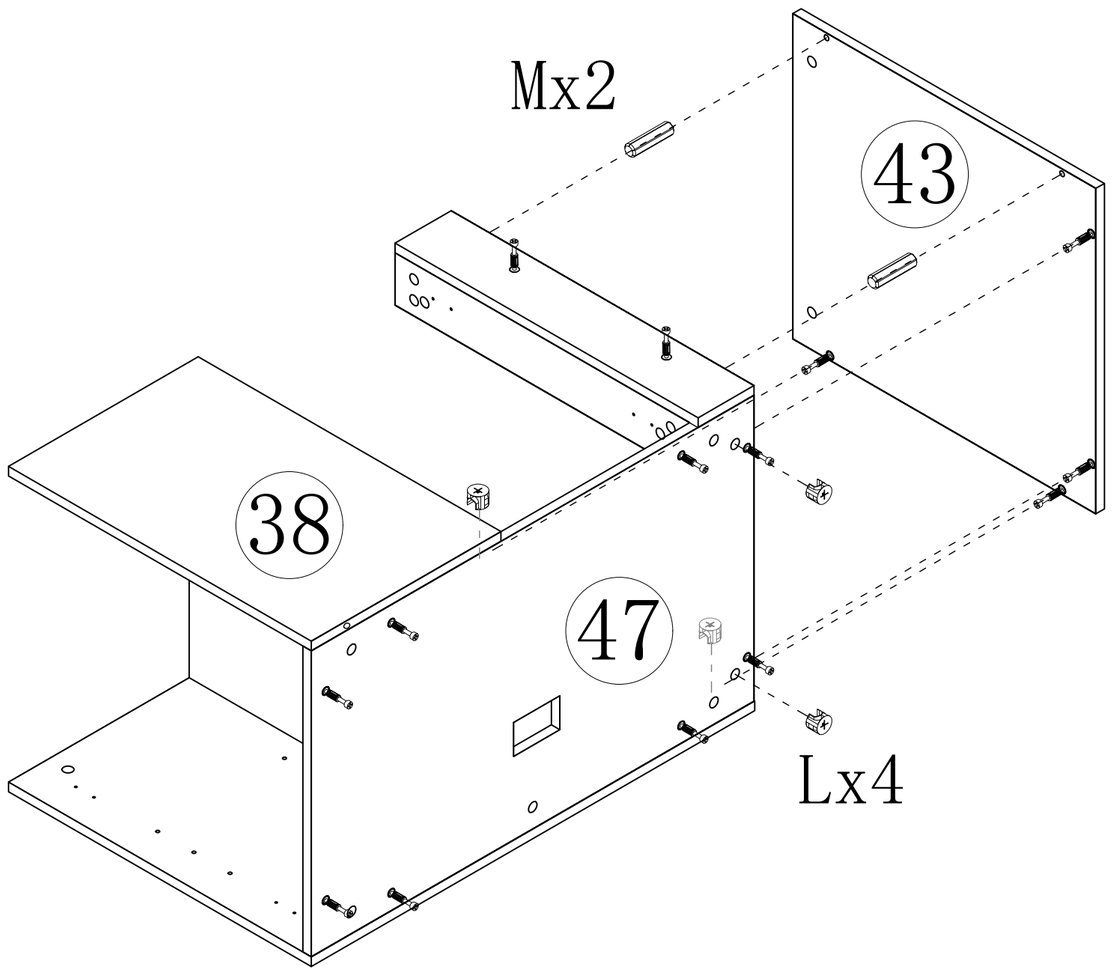

step 30

L 13 PCS

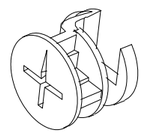



P 4 PCS




Ø3.5*14

64 1 PC



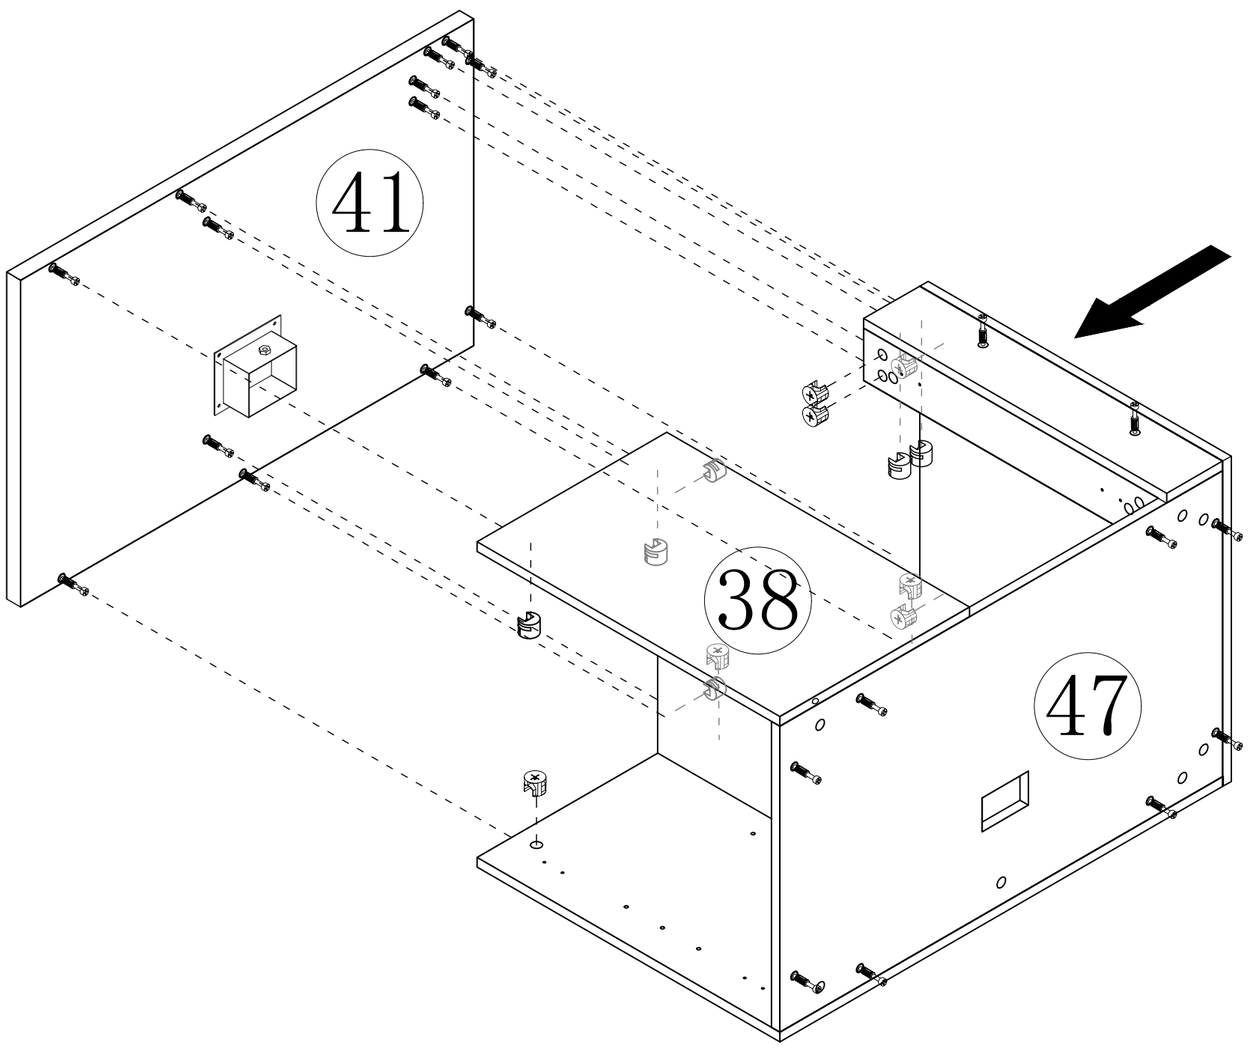


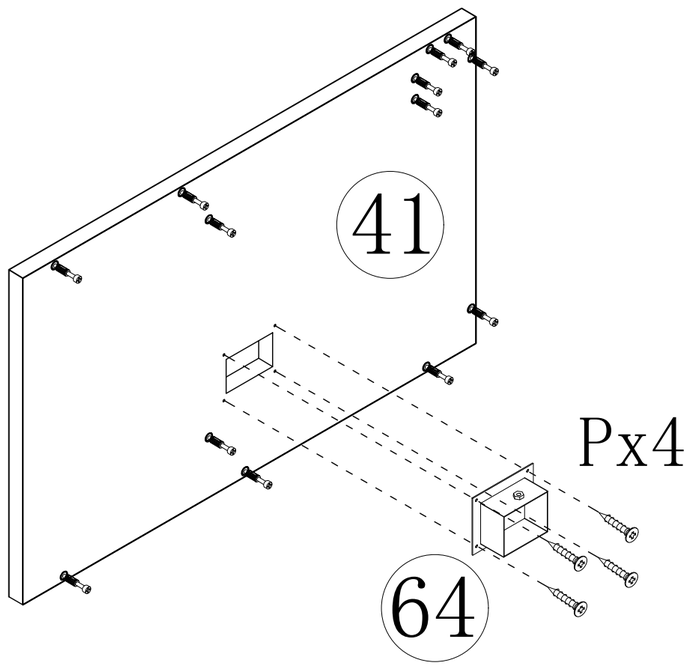


ASSEMBLY INSTRUCTION

step 31


L 8 PCS

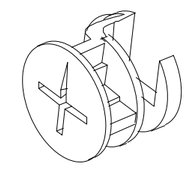


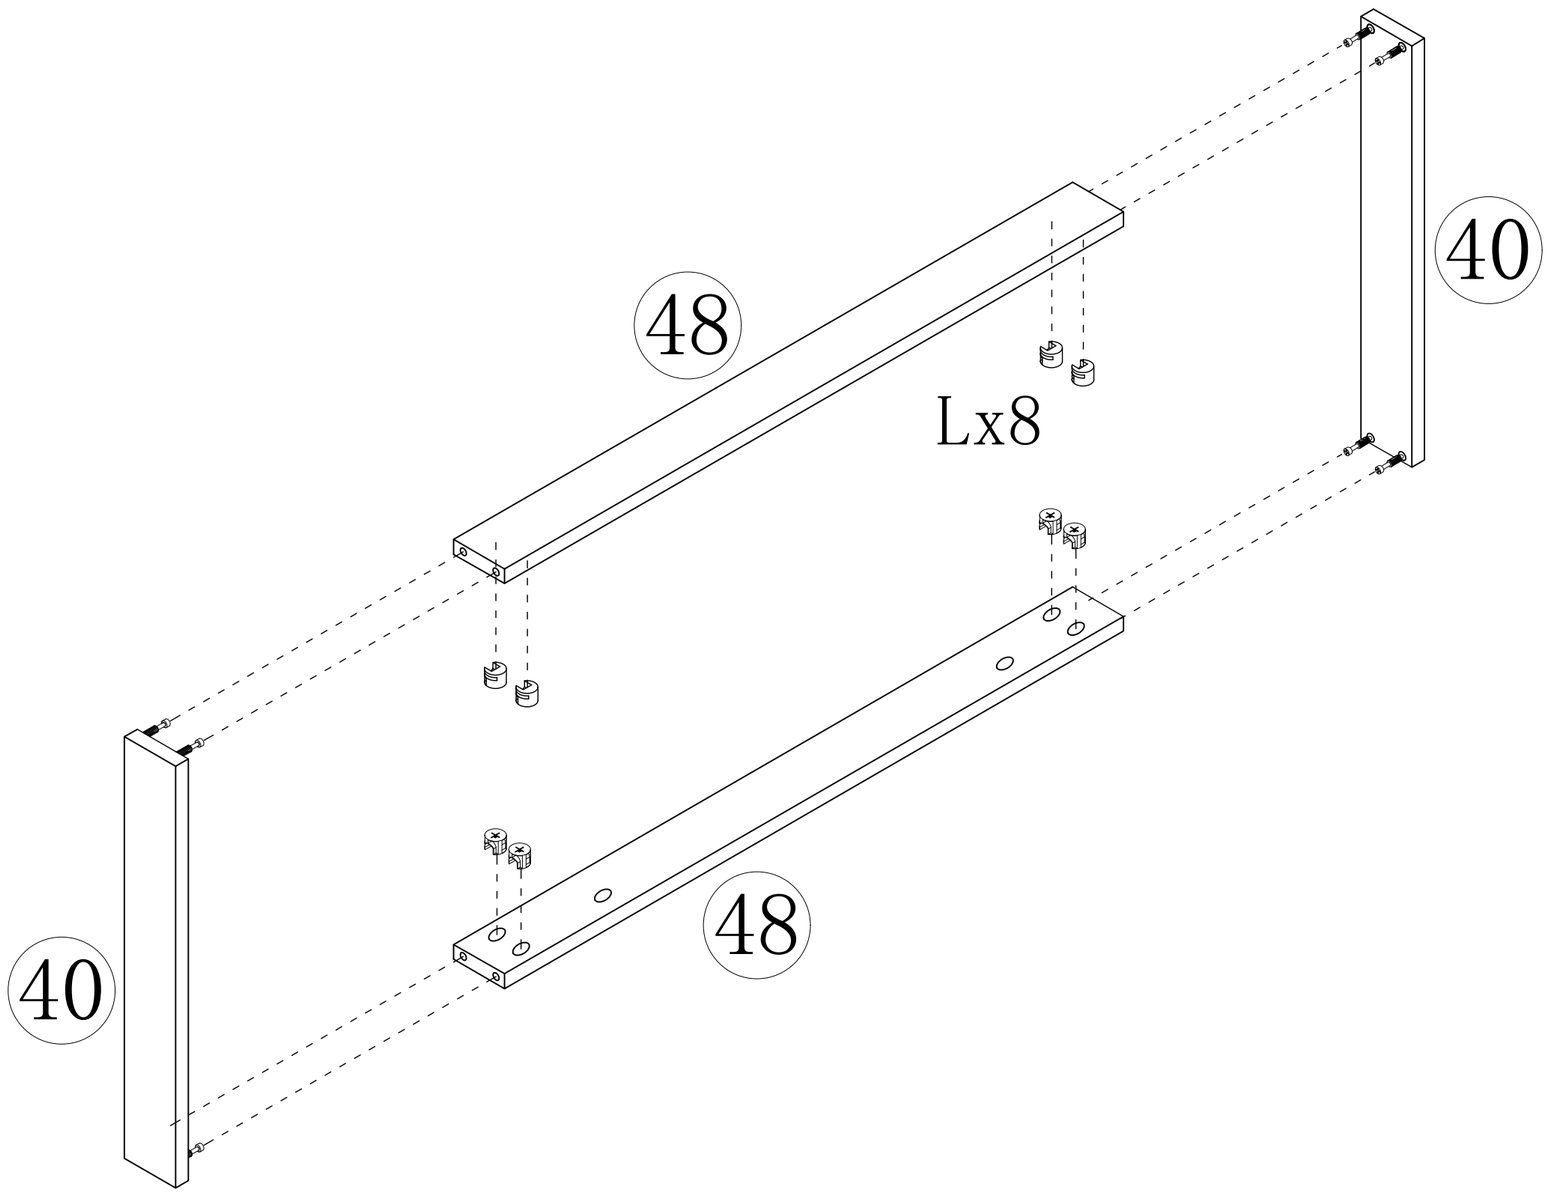

step 32


L 8 PCS

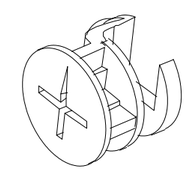

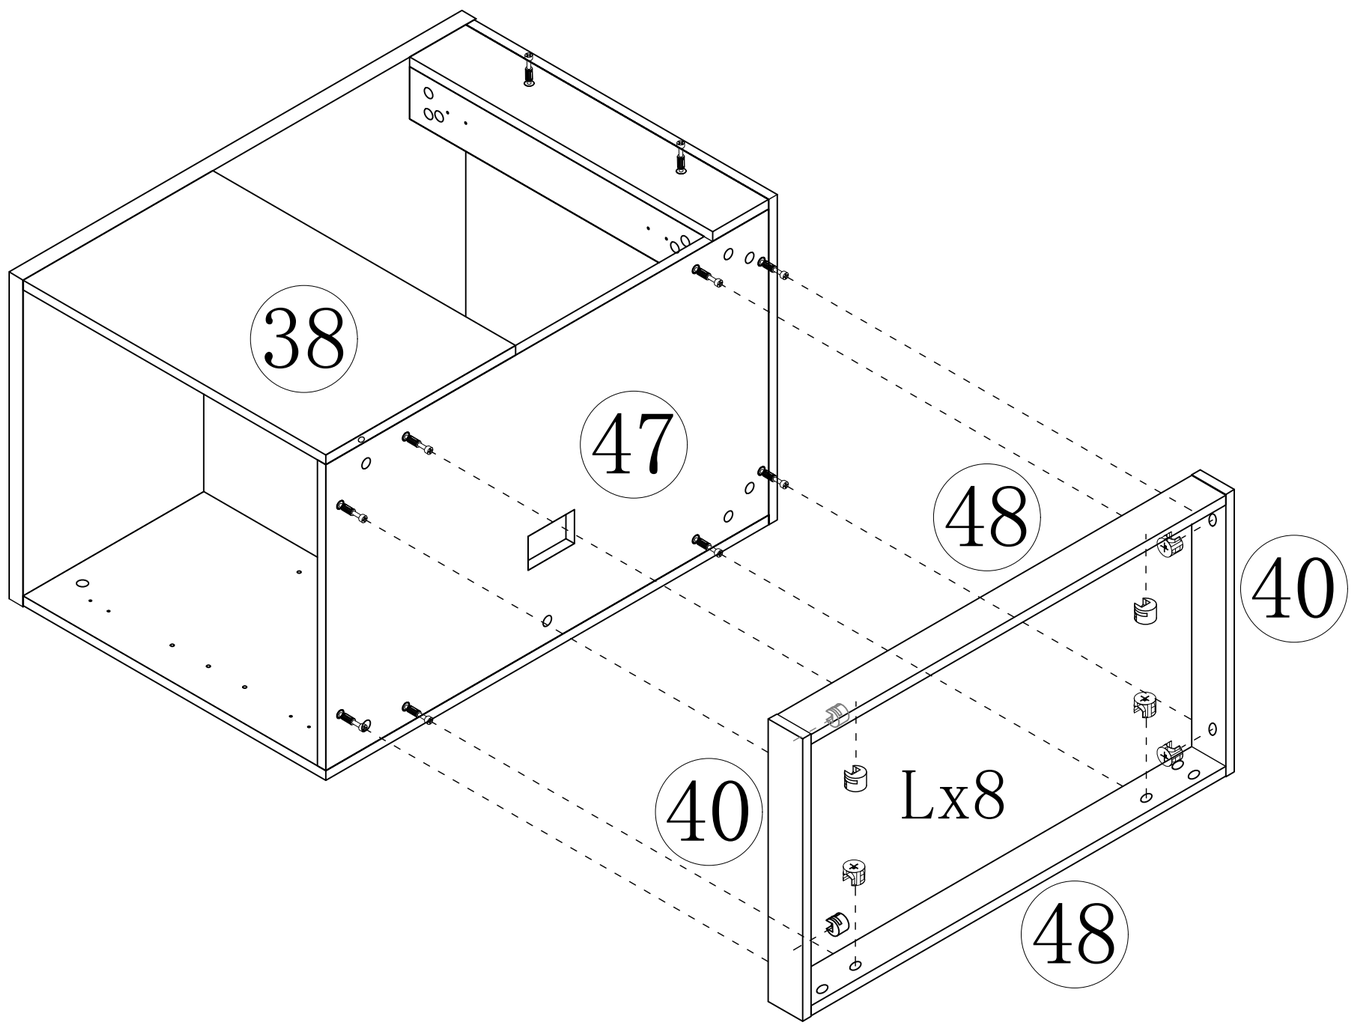


ASSEMBLY INSTRUCTION


step 33

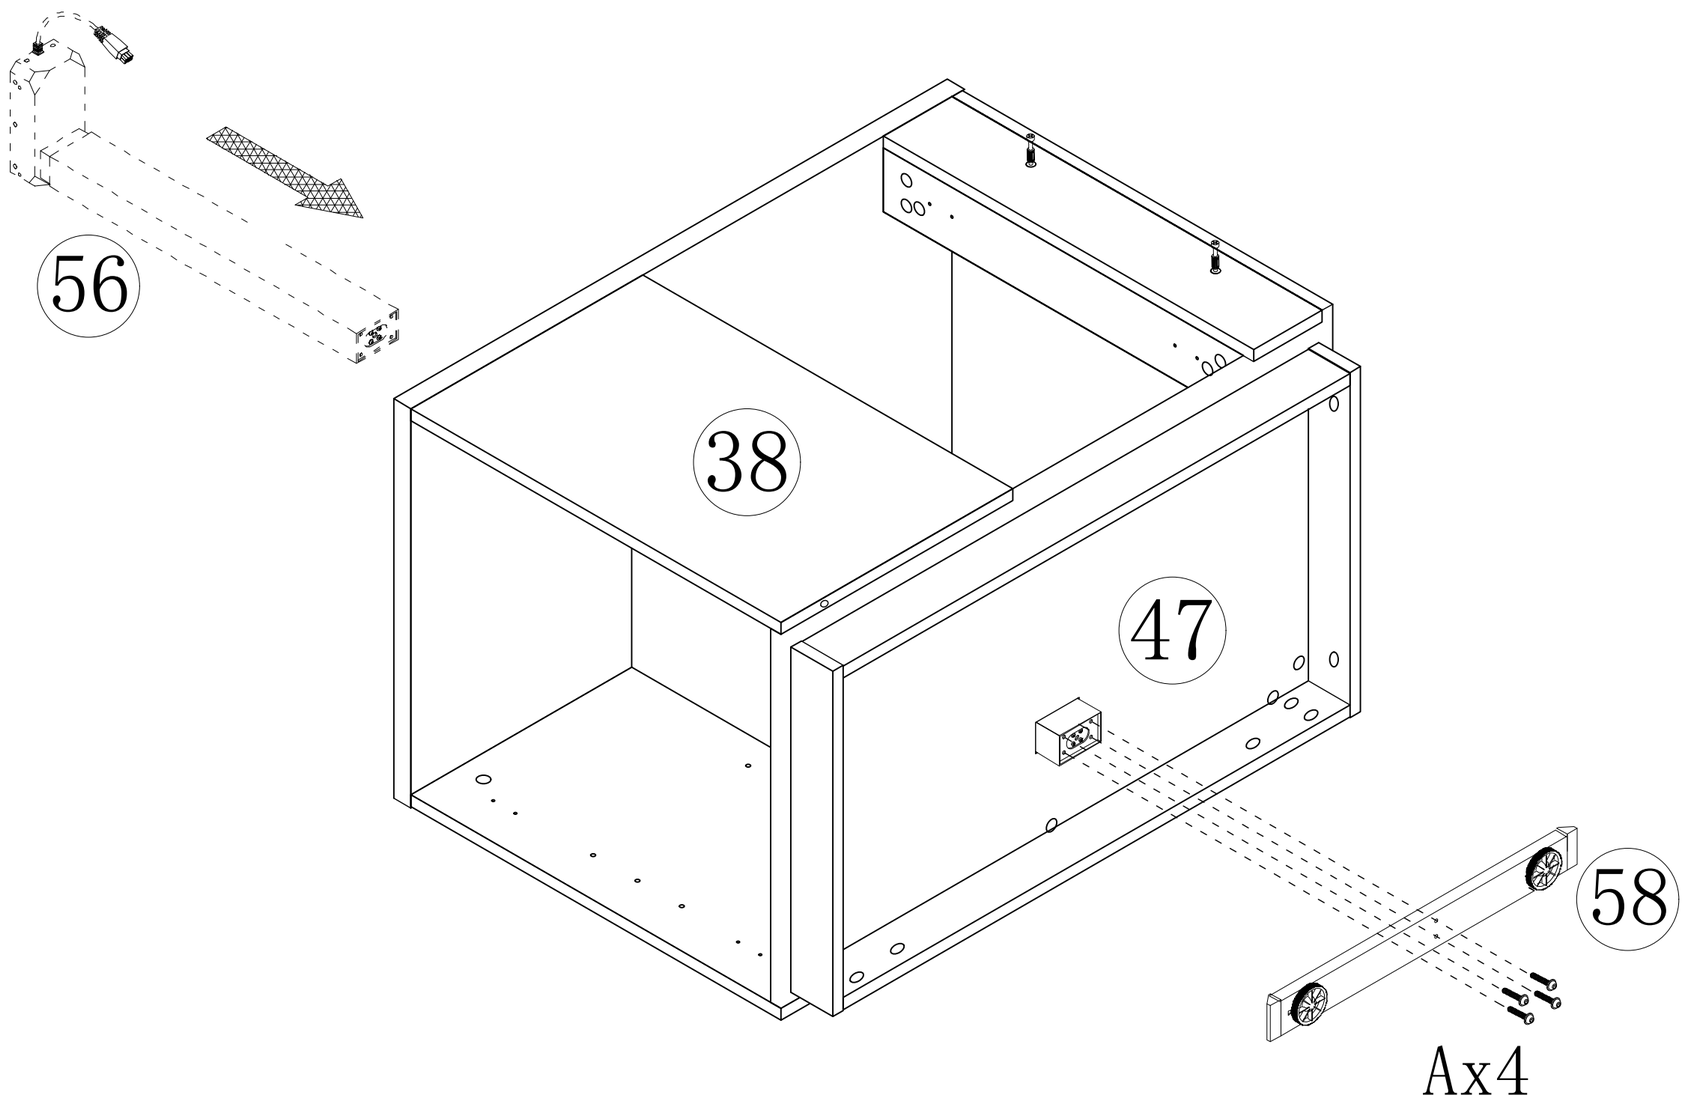

56 1 PCS




A 4 PCS




M6*30

step 34

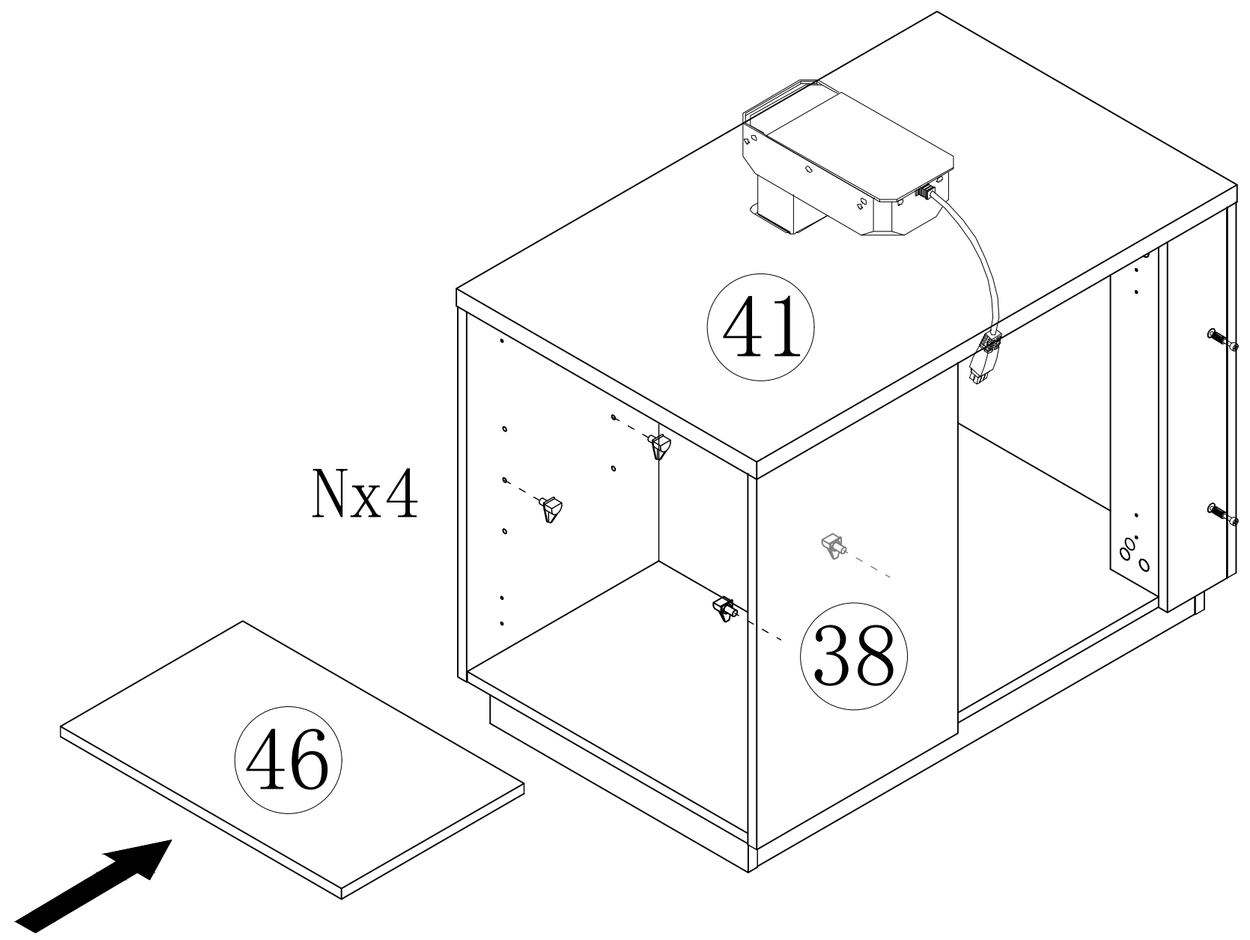



N 4PCS

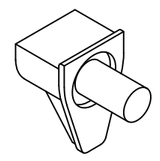



ASSEMBLY INSTRUCTION

step 35

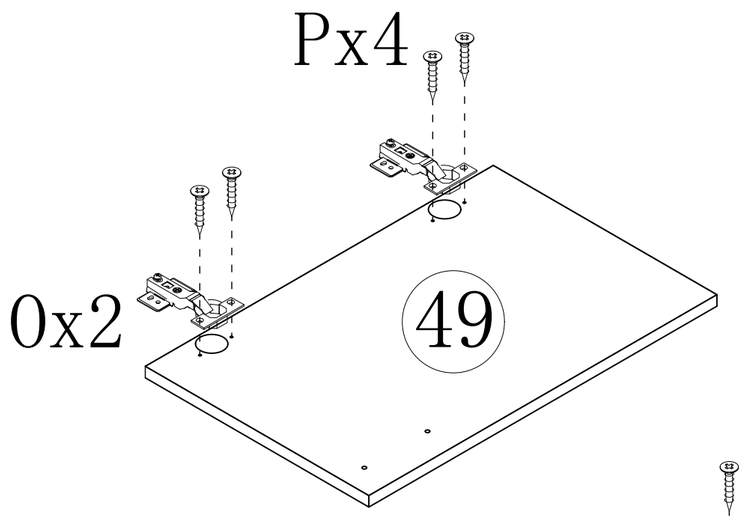

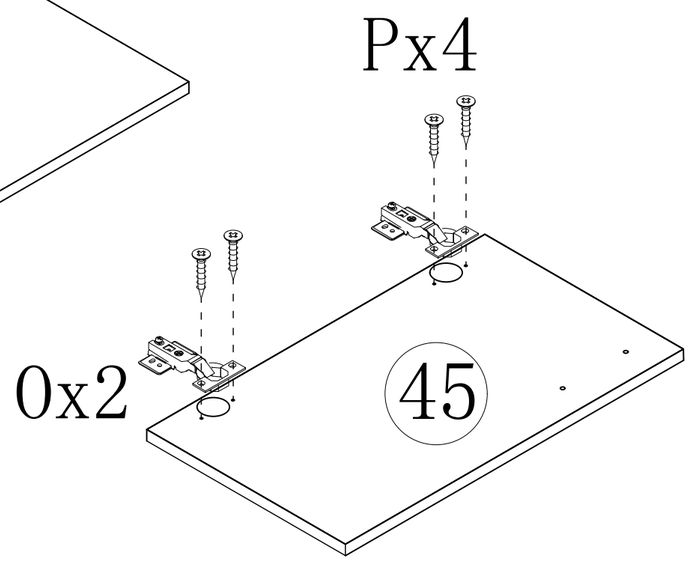


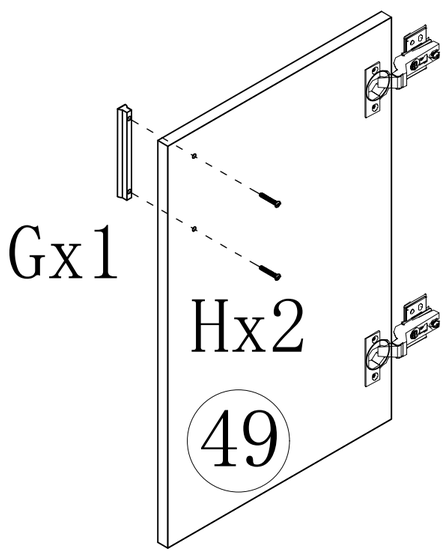

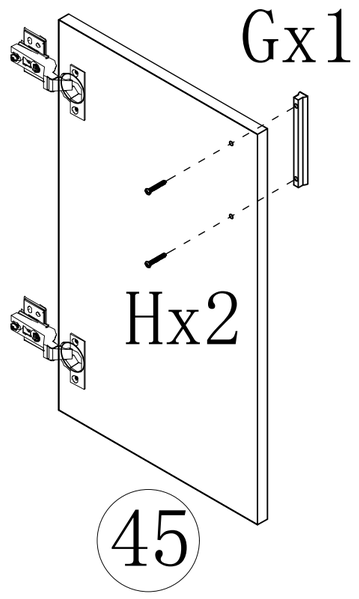

0	4 PCS
P	8 PCS
G	2 PCS
H	4 PCS

step 36

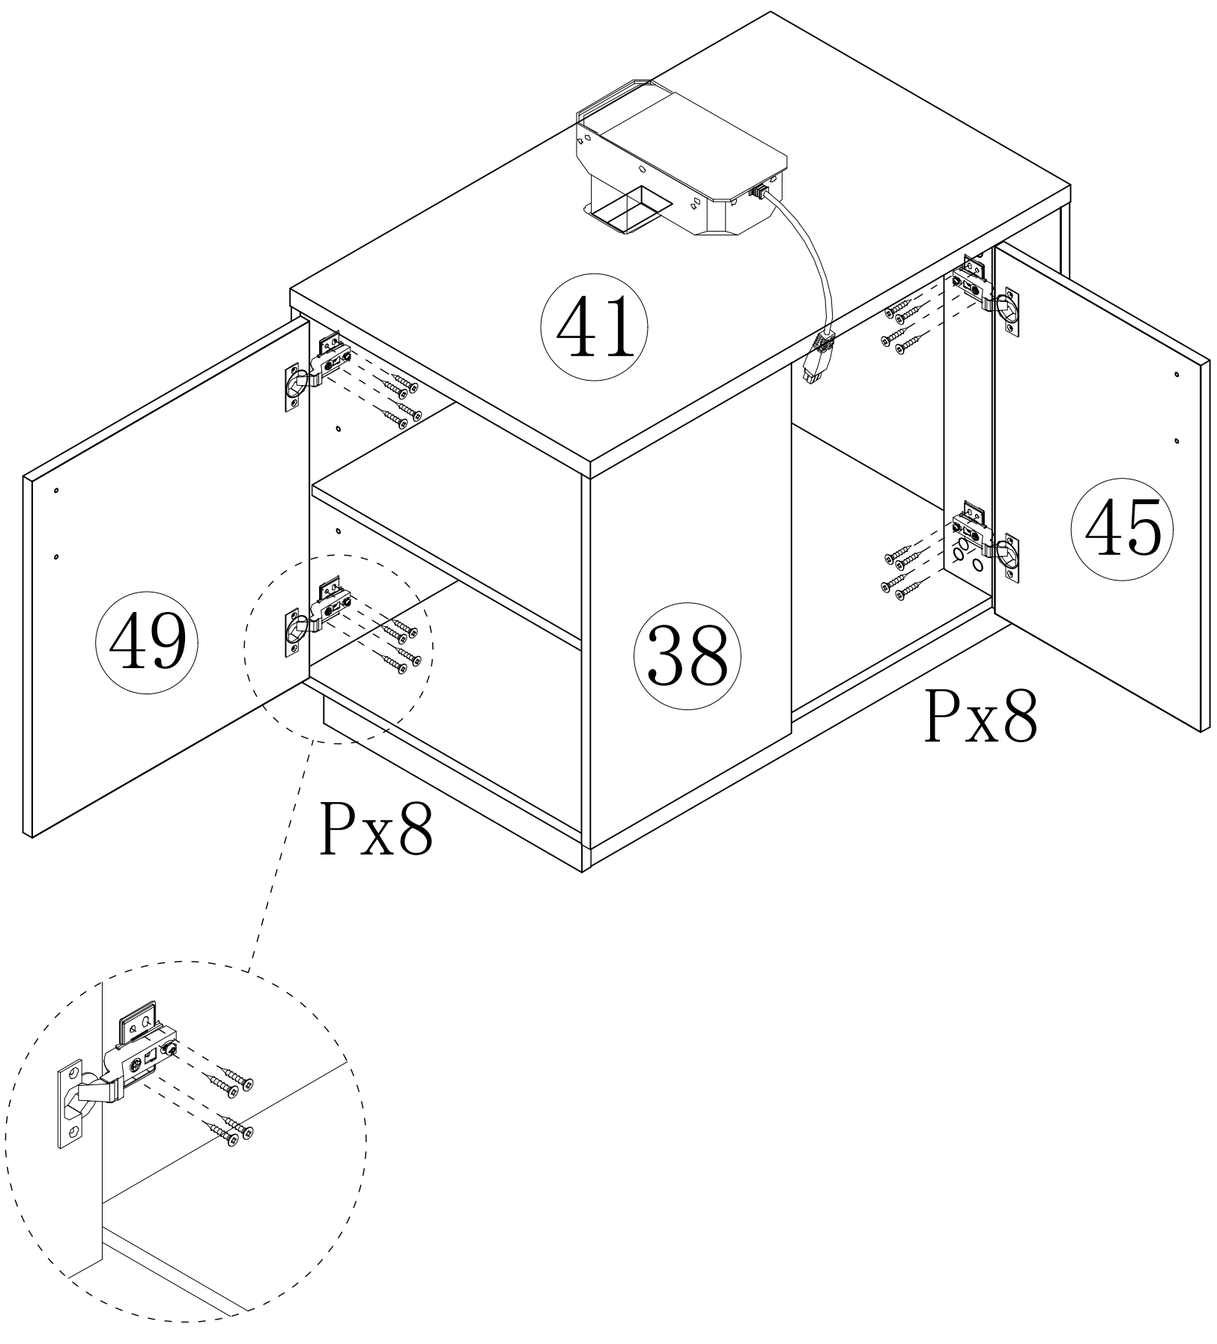



P	16 PCS

ASSEMBLY INSTRUCTION

step 37

L 4 PCS

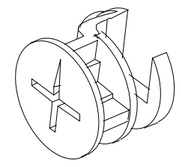

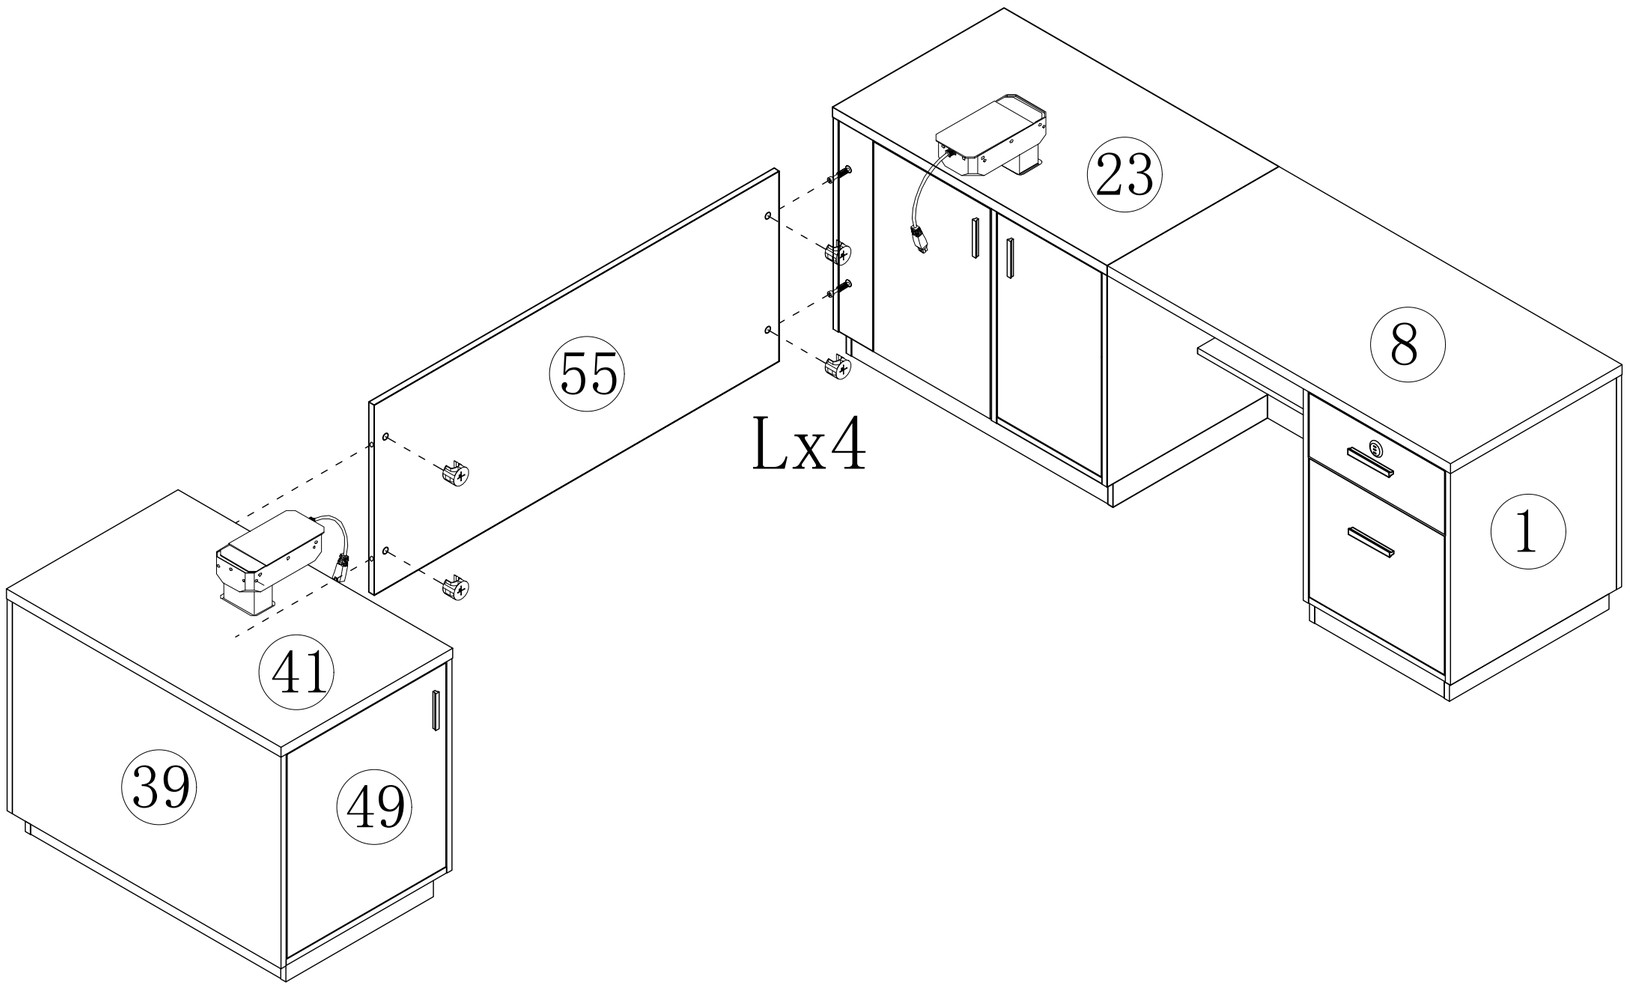


step 38

B 8 PCS




M6*8

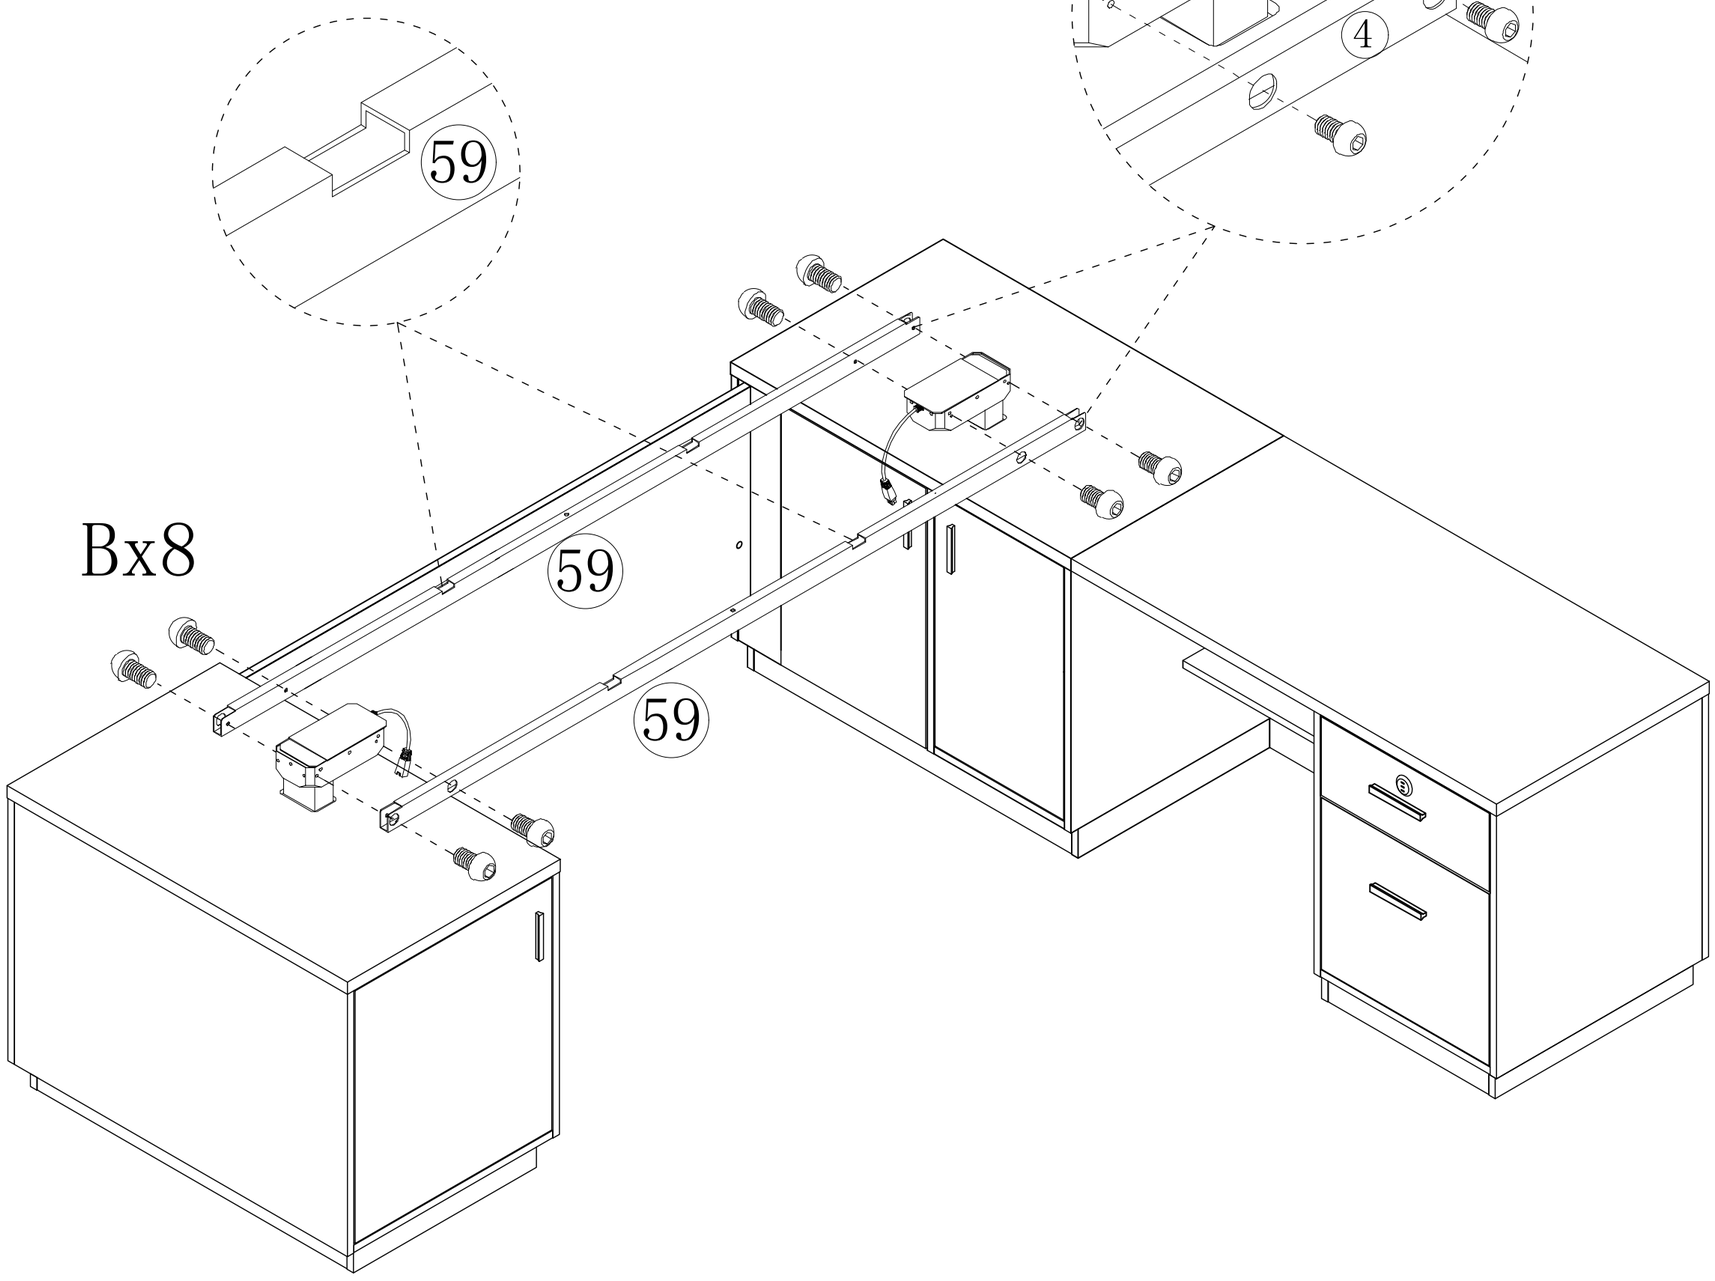

ASSEMBLY INSTRUCTION


step 39

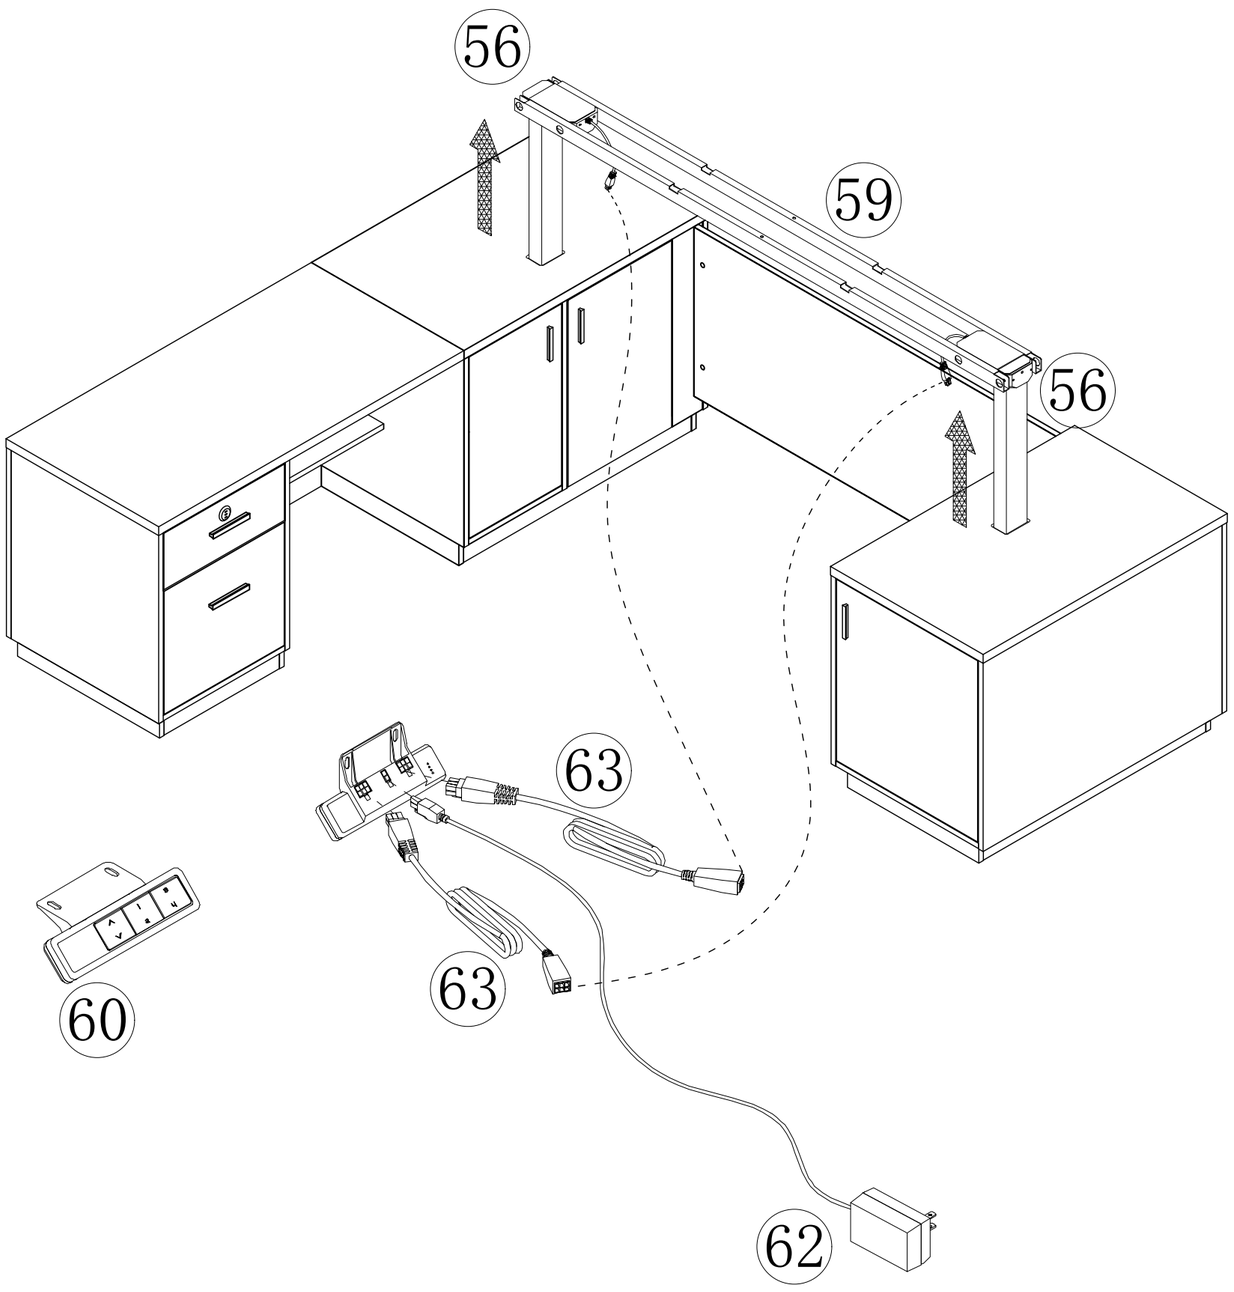

Step1：Connect the controller of the lifting frame, namely accessory 5, to the plugs of the other two accessories 1,7, and 8, and then turn on the power.
Step2：Press the downward button on the controller for 5 seconds- the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.
Step3：Press and hold the "Rise" button, raise the lifting frame to a certain height, then turn off the power and proceed to the next installation step.

step 40

A	4 PCS
	
M6*30	

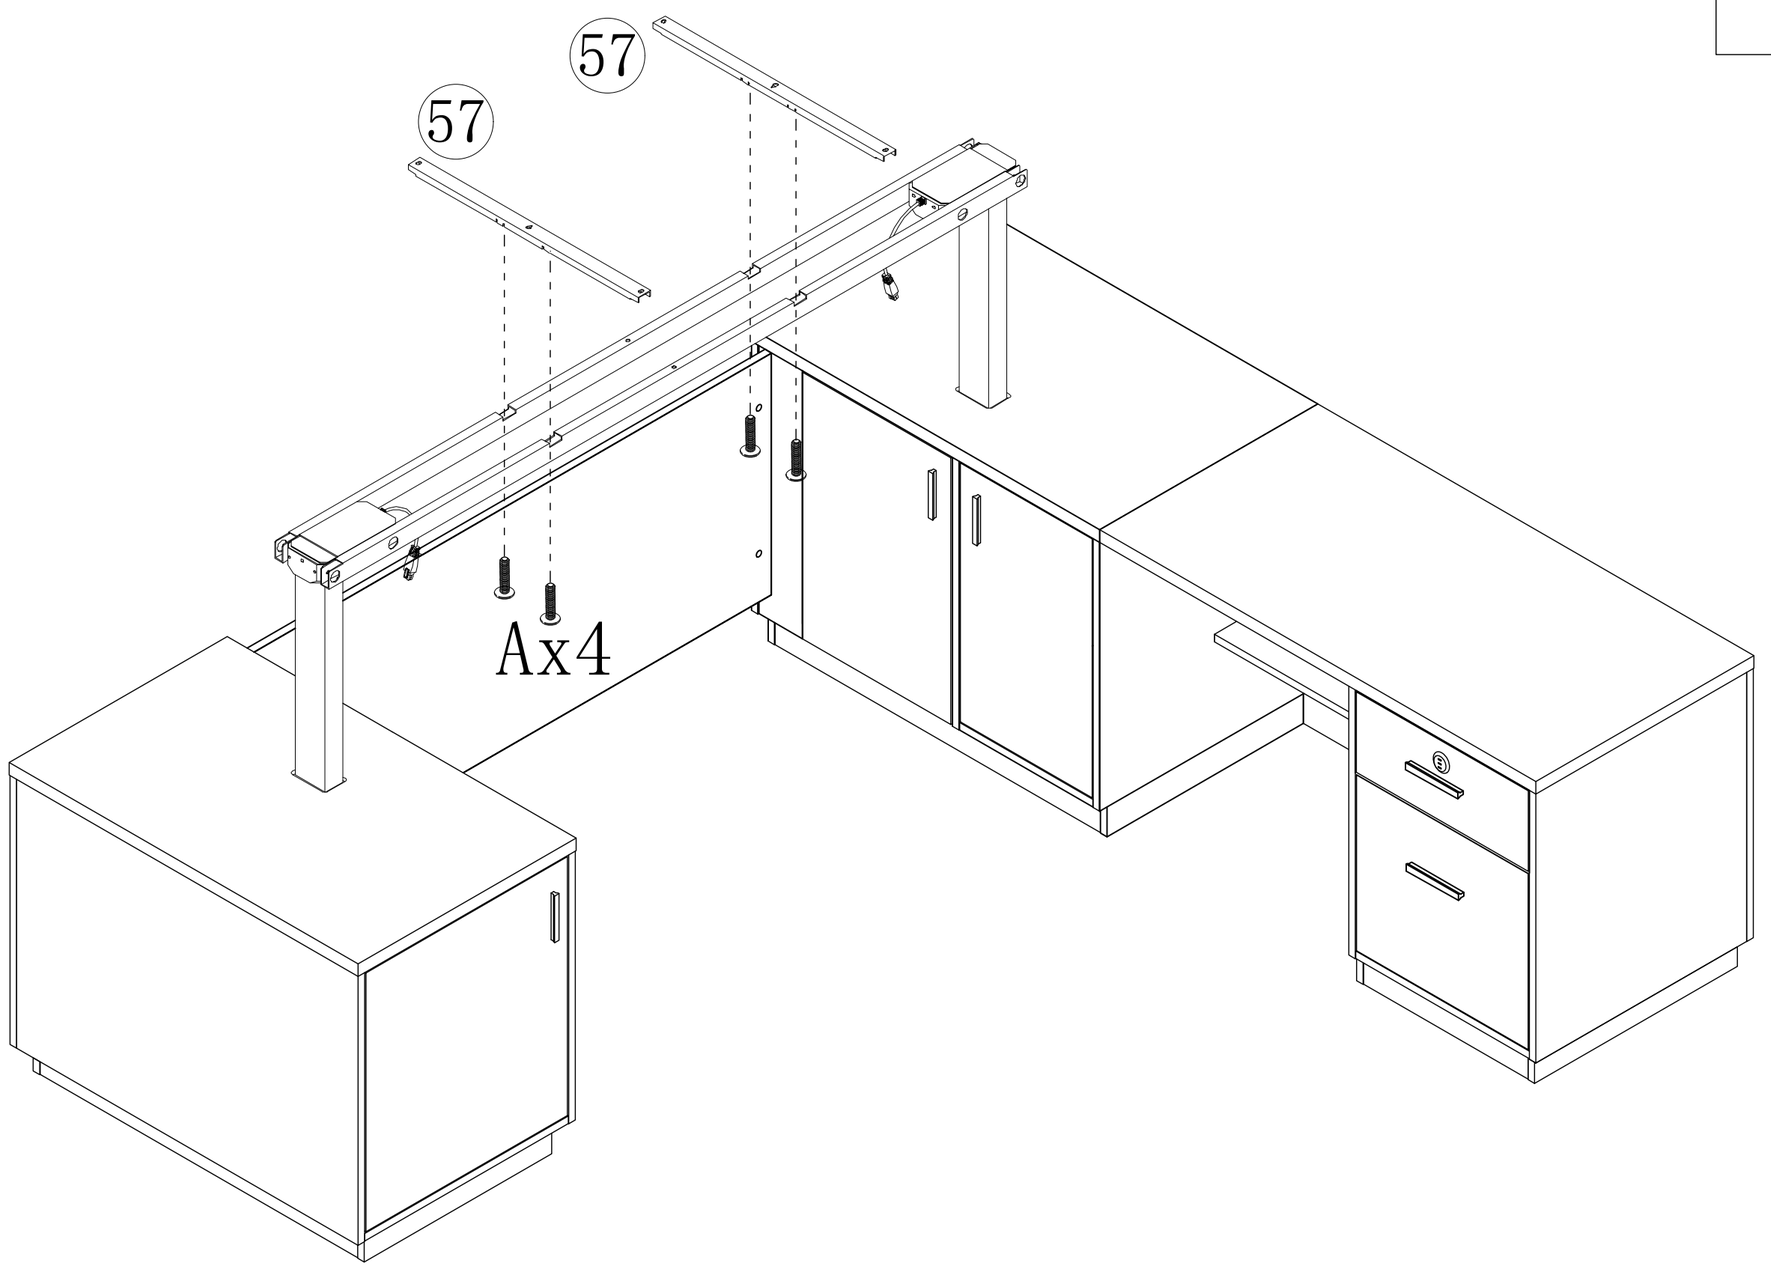


ASSEMBLY INSTRUCTION

step 41

B 4 PCS



M6*8

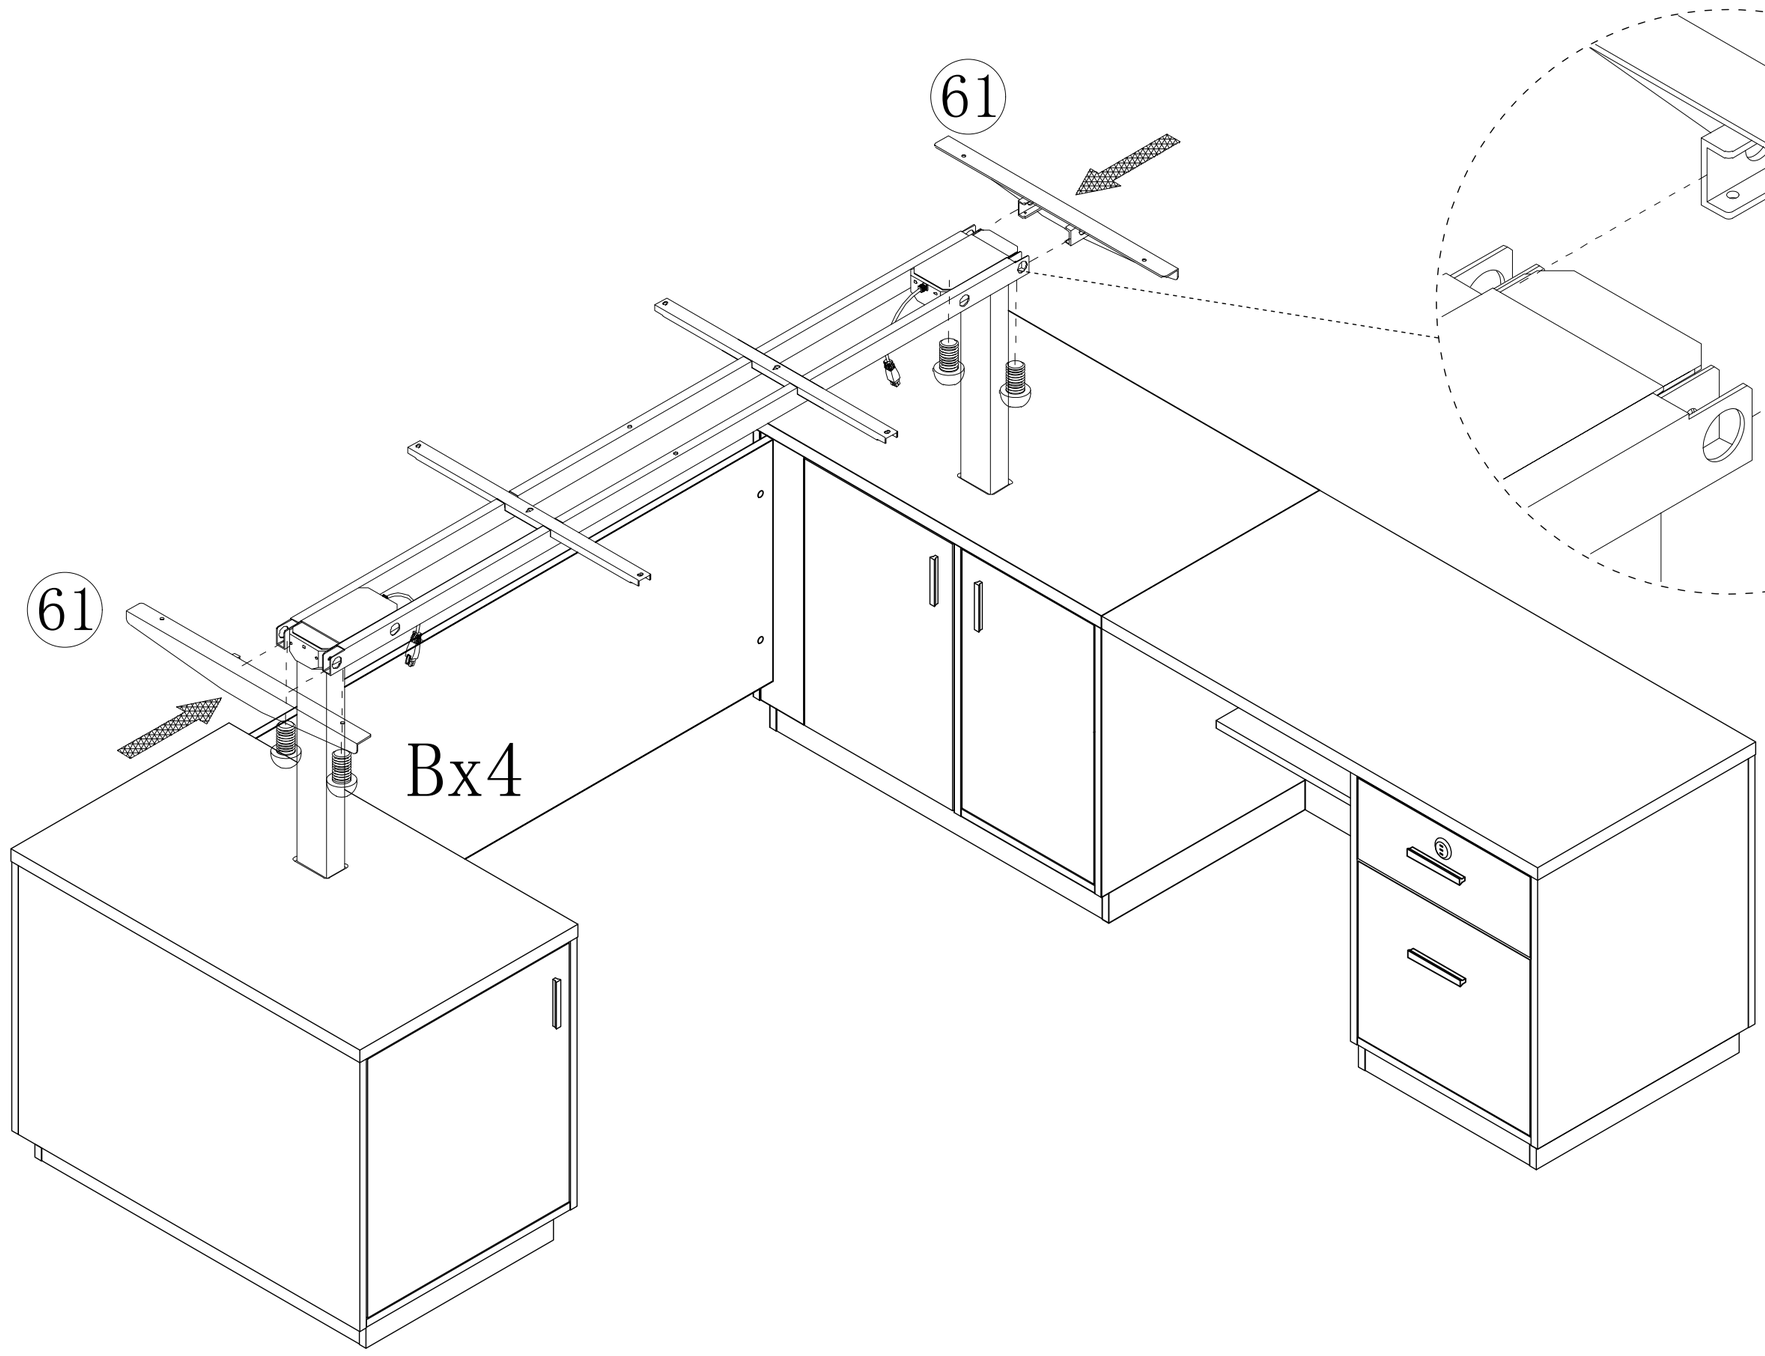


step 42

M 8 PCS




Ø8*30

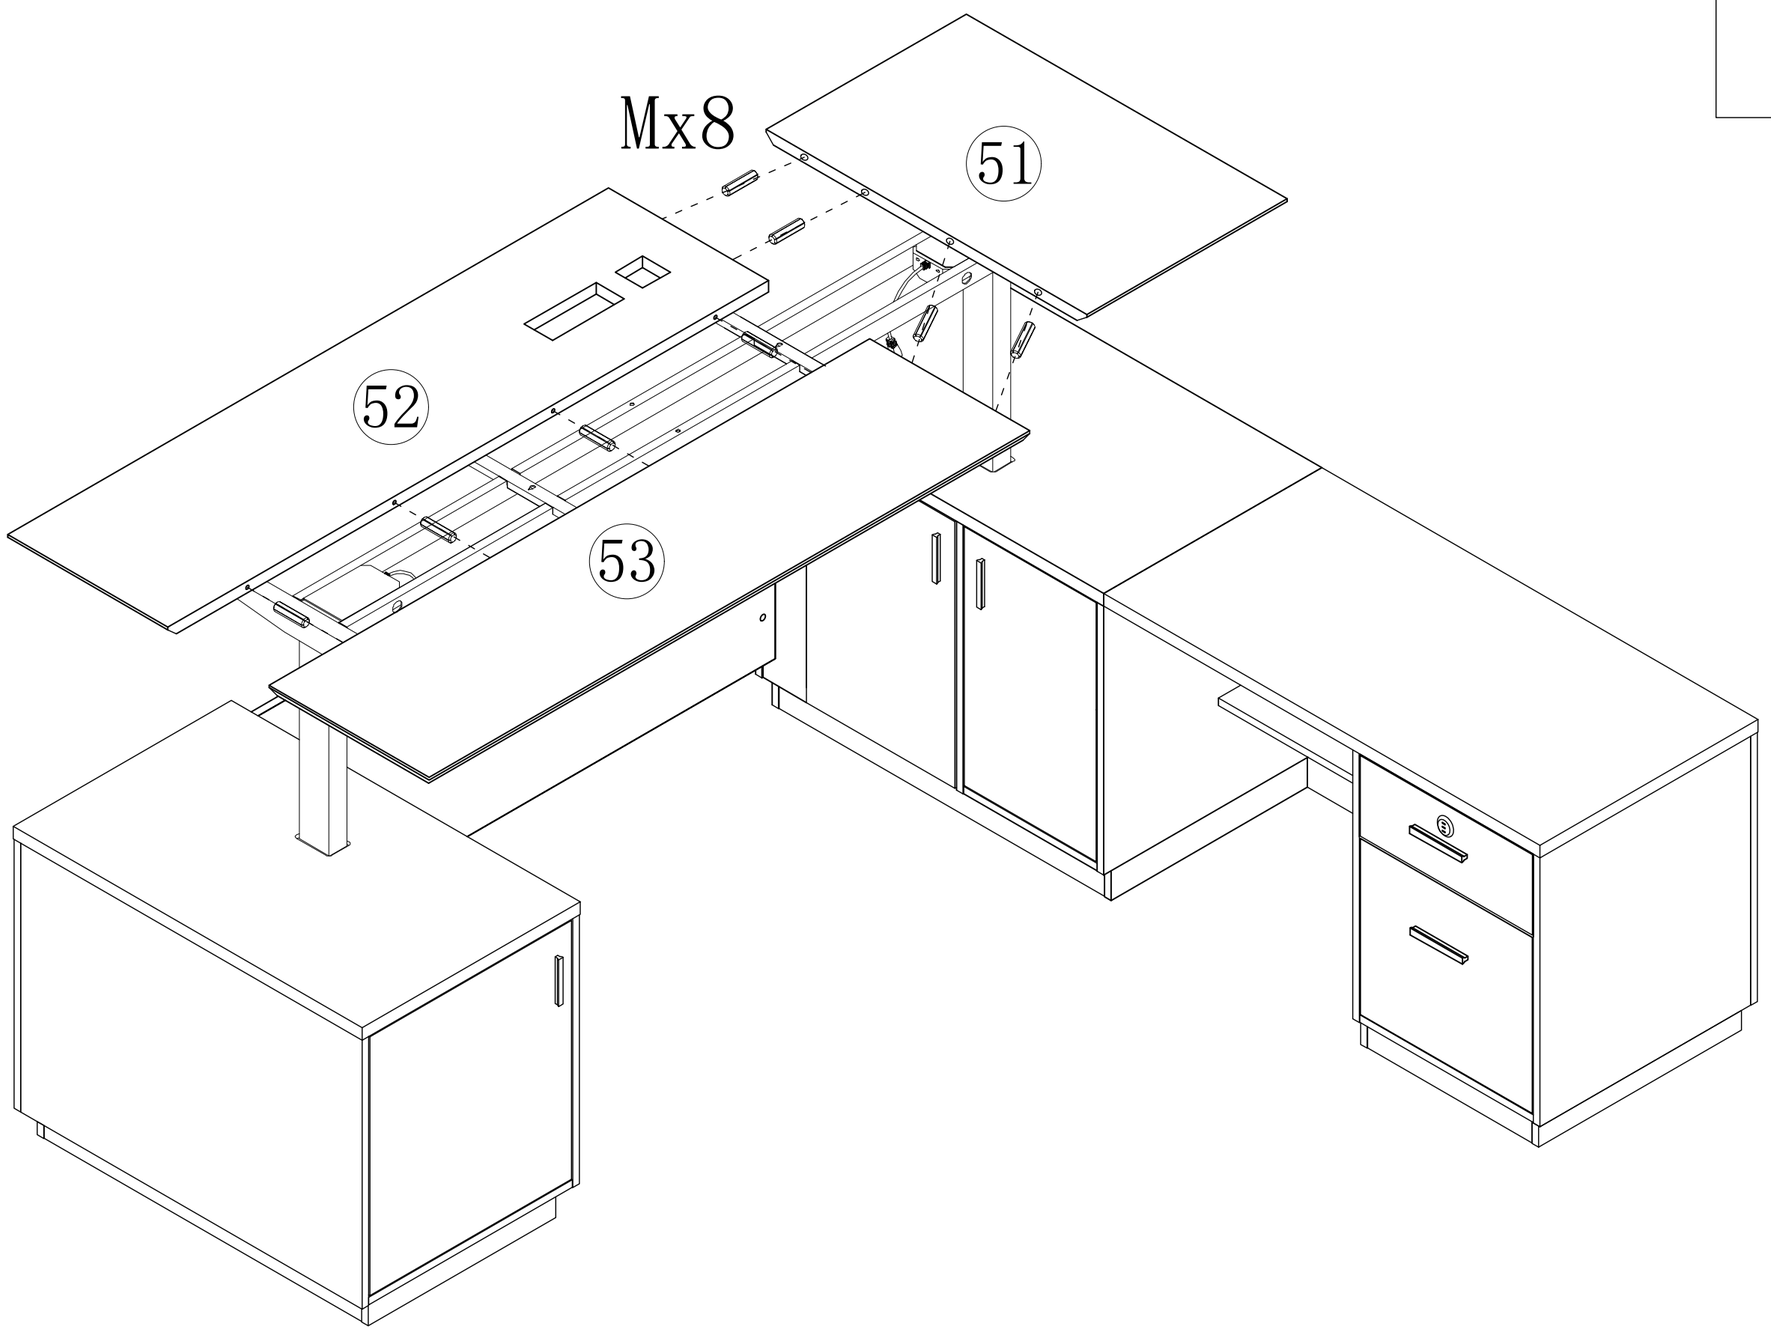

ASSEMBLY INSTRUCTION

step 43

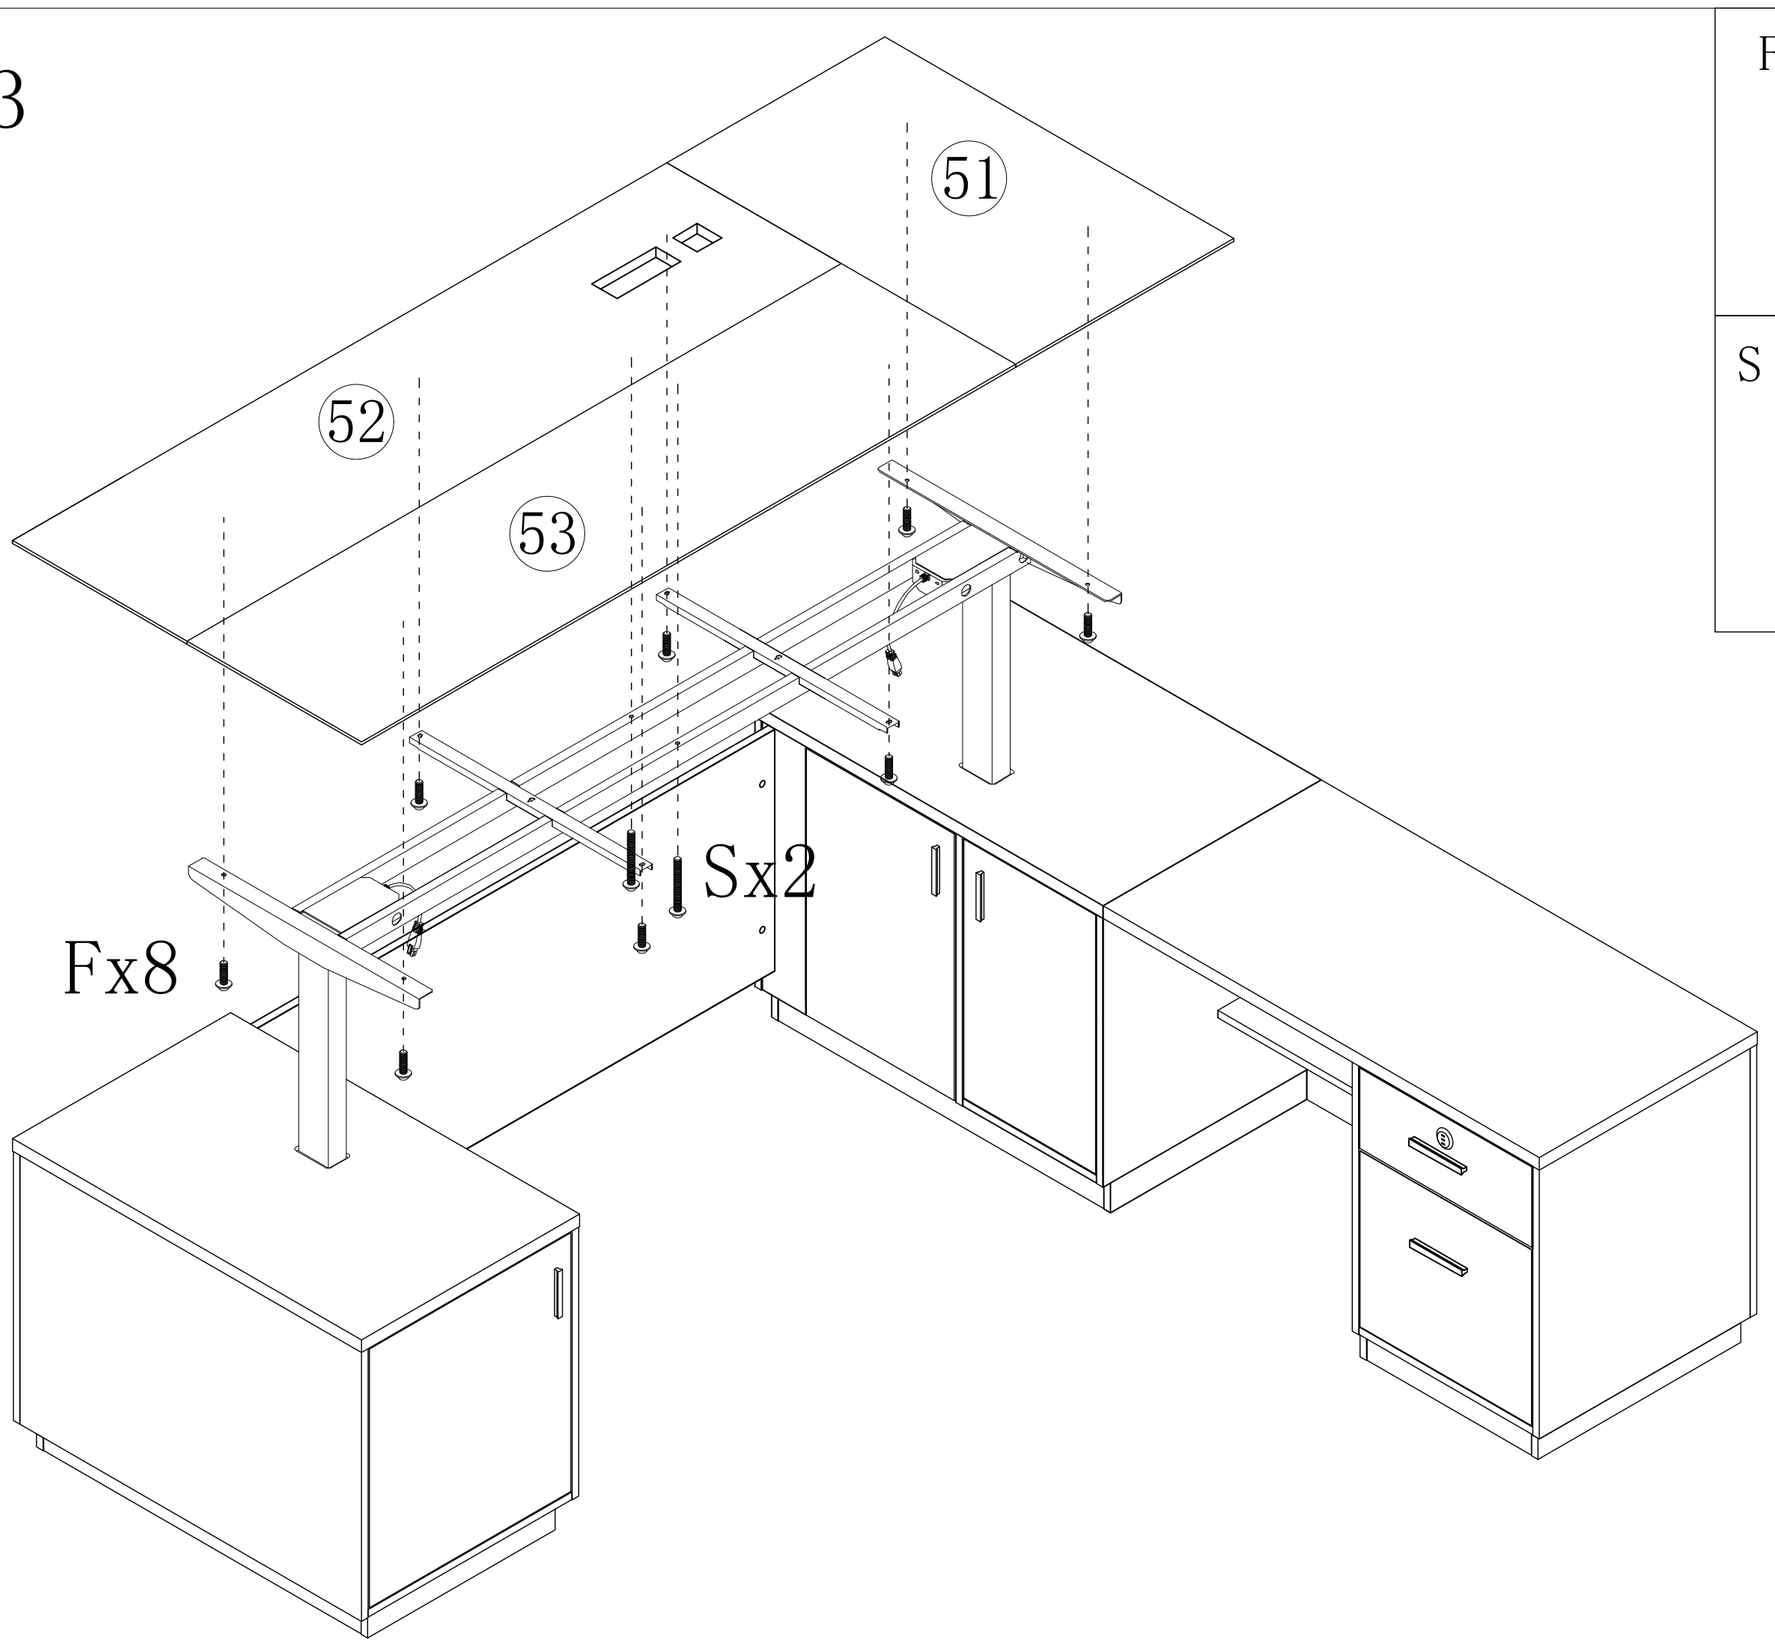


F 8 PCS




M6*16

S 2PCS




M6*55

step 44

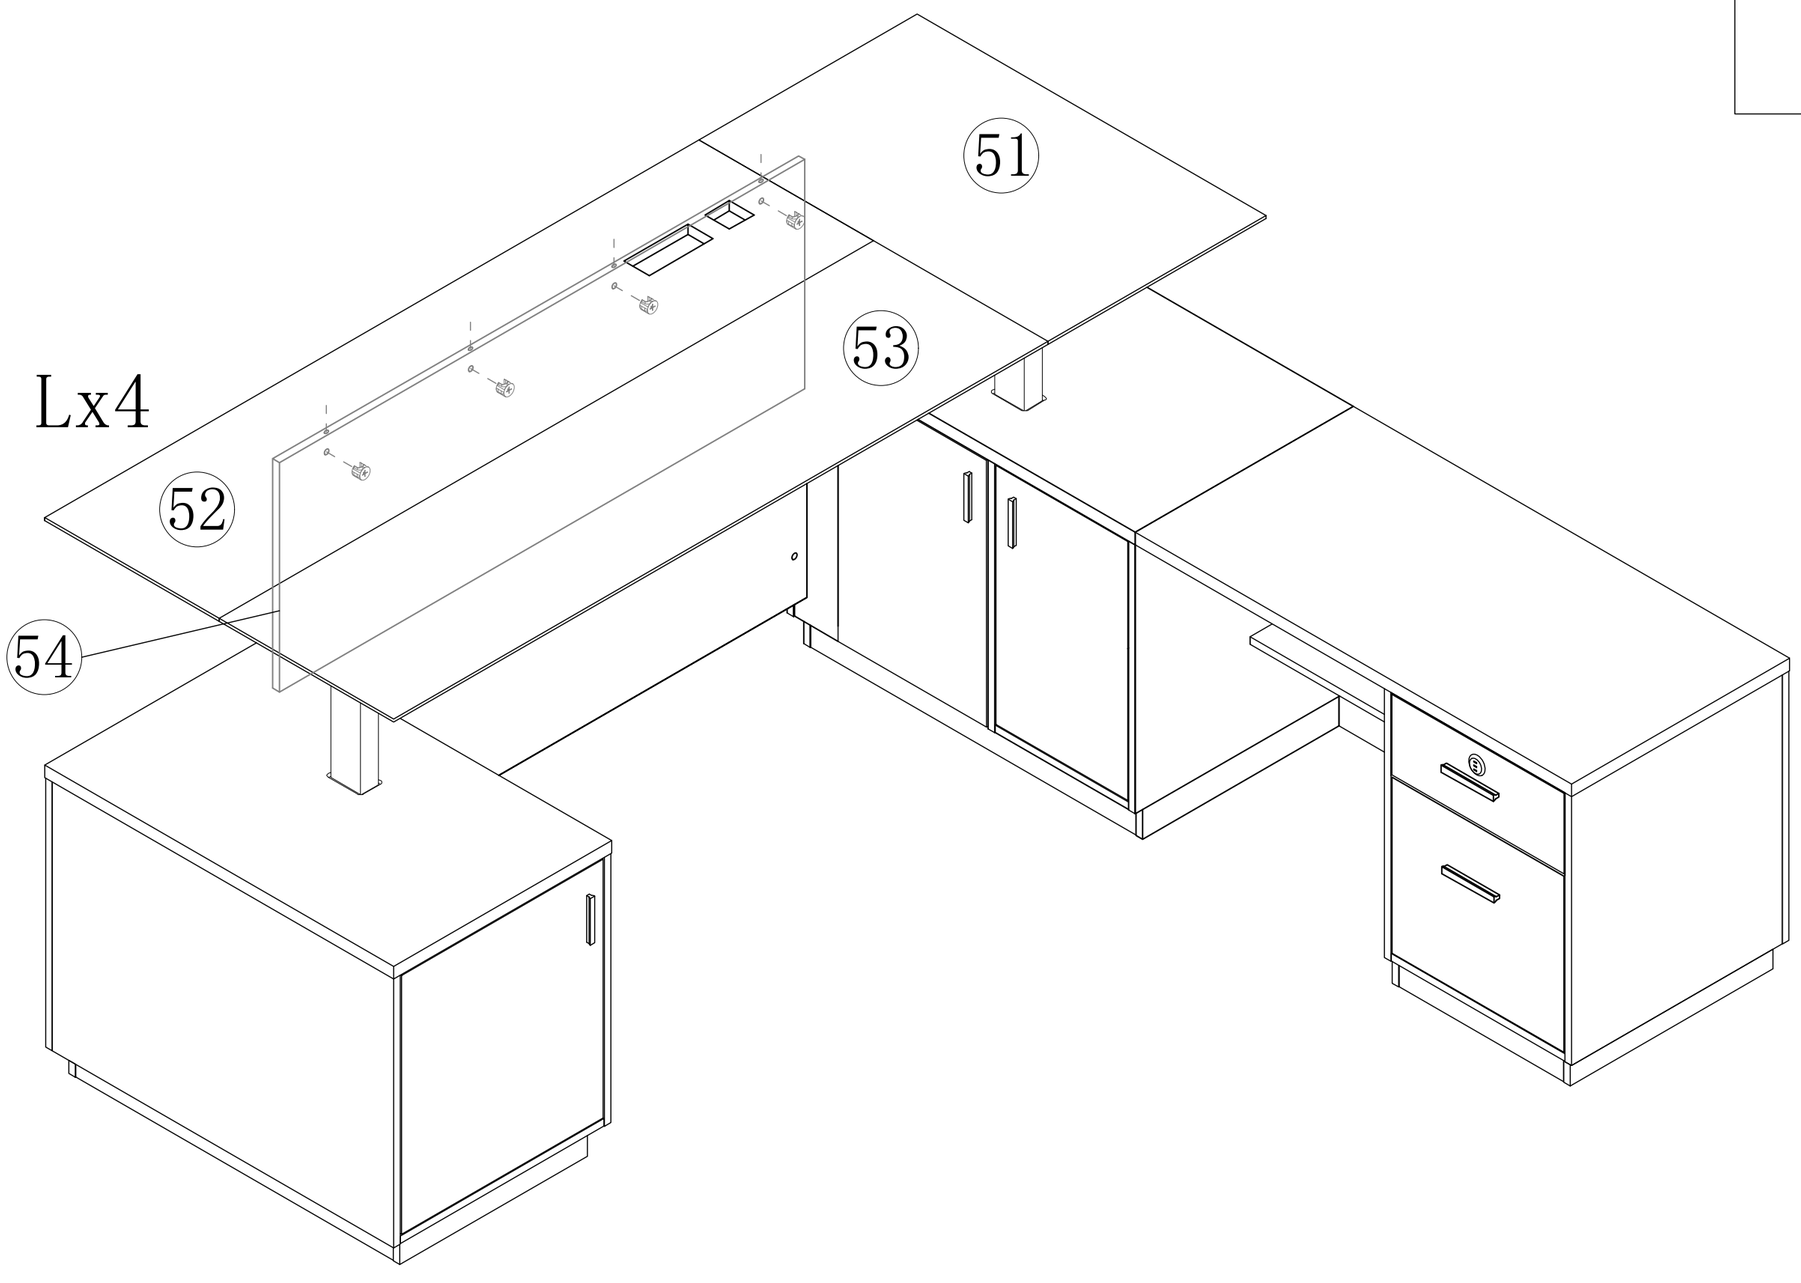



L 4 PCS

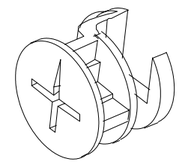



ASSEMBLY INSTRUCTION

step 45


P	2 PCS
	
Ø3.5*14	

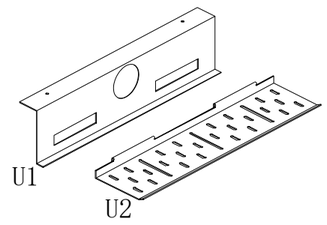
U	1SET
	
U1 U2	

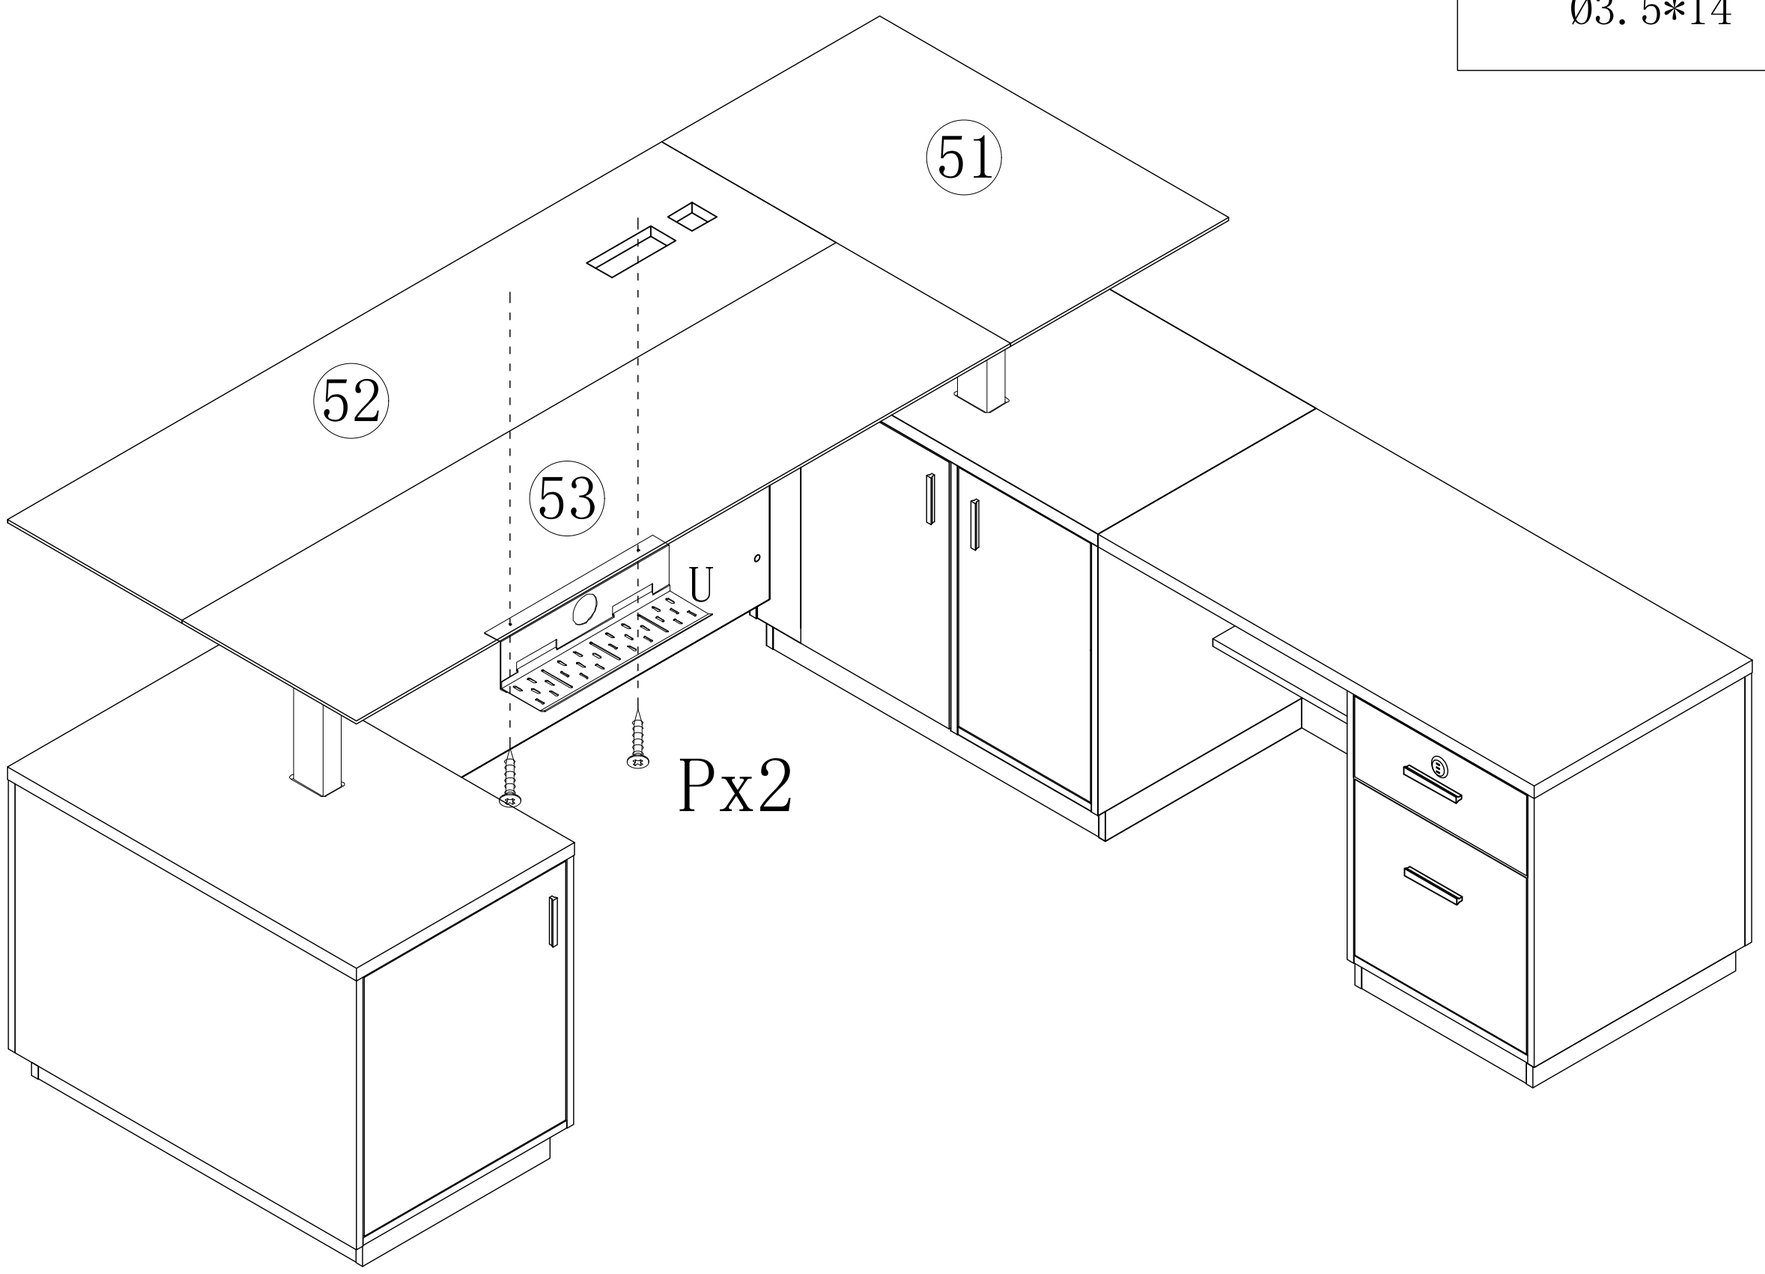


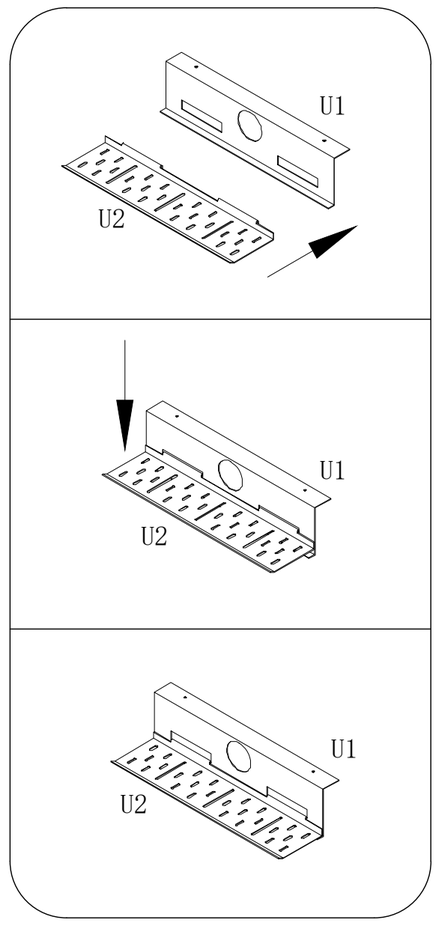



step 46

P	2 PCS
	
Ø3.5*14	

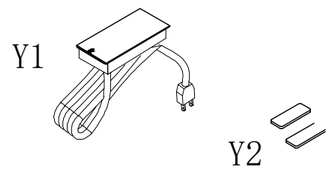Y	1 PC
	
Y1 Y2	

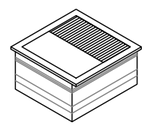T	1 PC
	

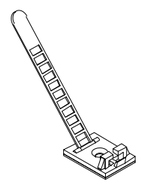H	4PCS
	

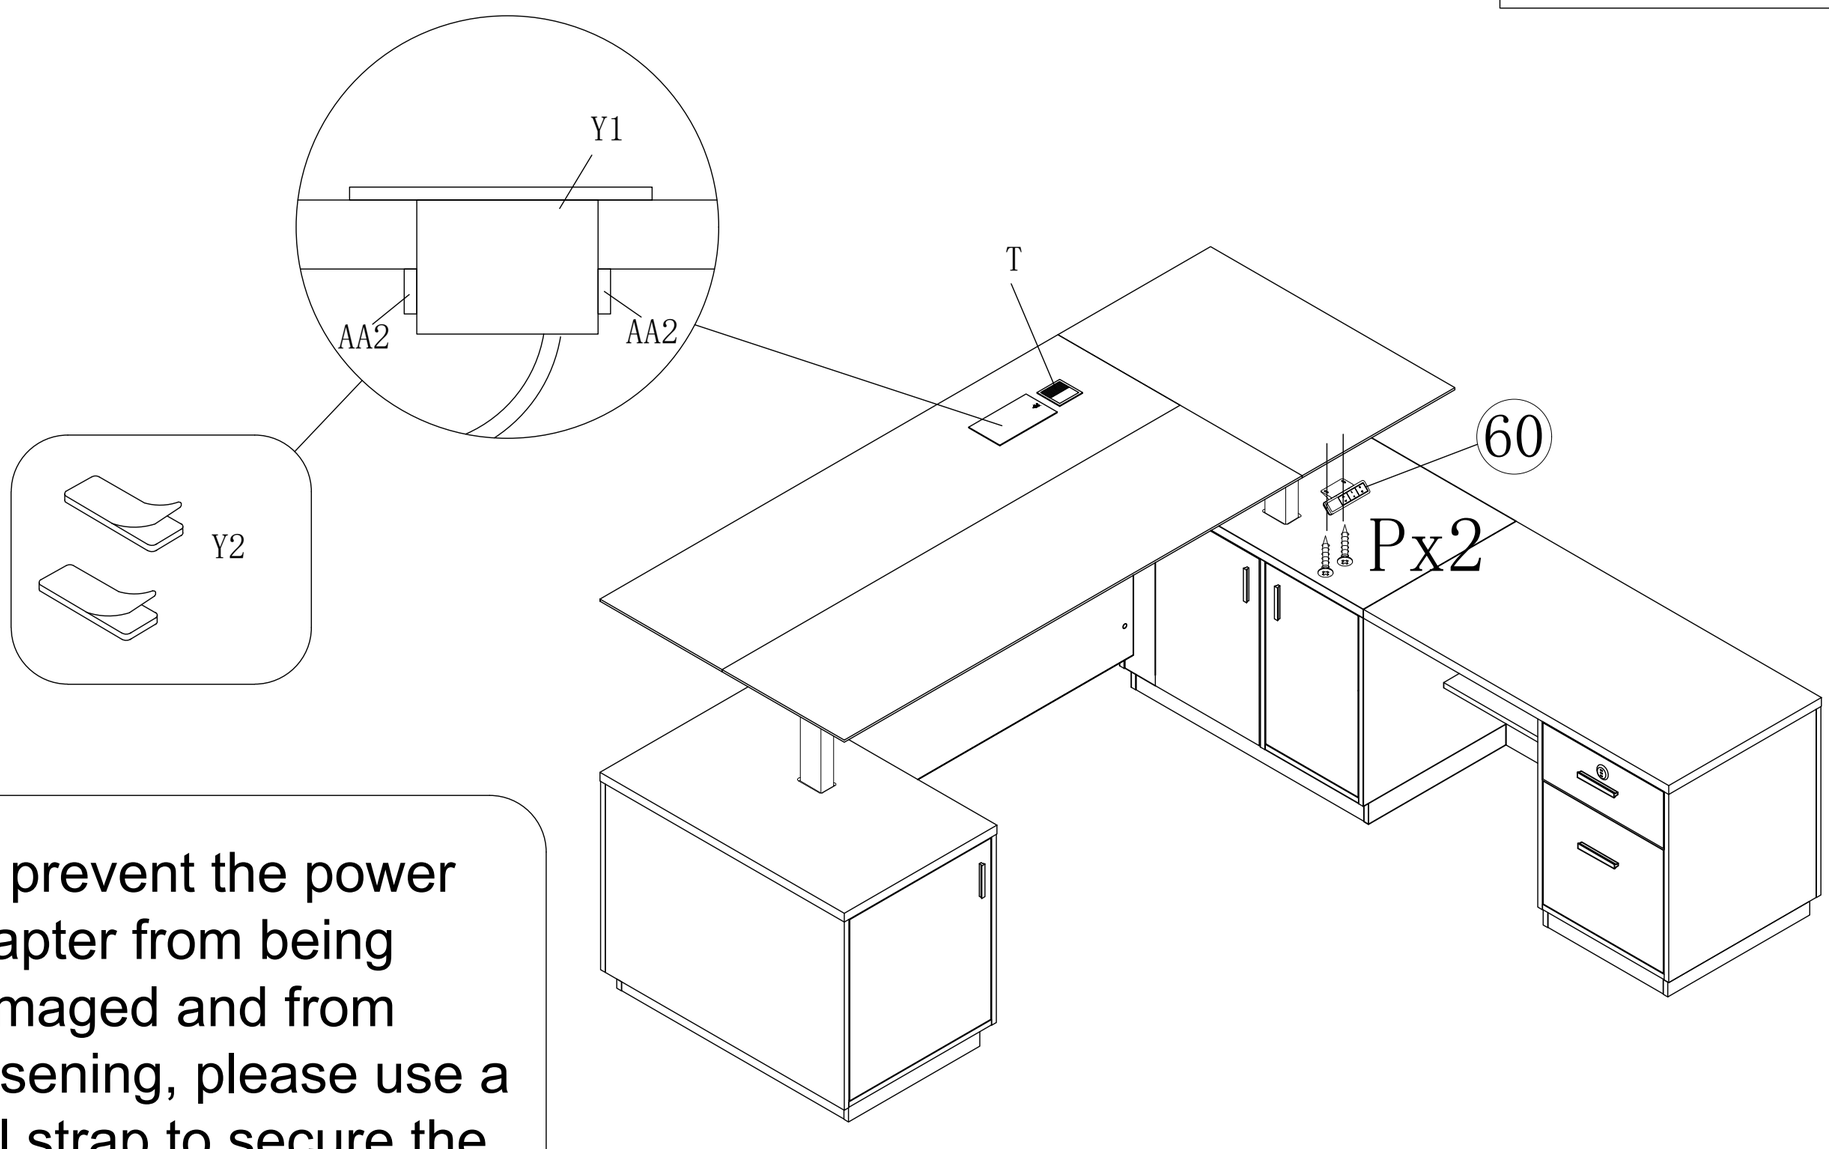


To prevent the power adapter from being damaged and from loosening, please use a pull strap to secure the cable.


ASSEMBLY INSTRUCTION


step 47

I 2PCS



M8*16

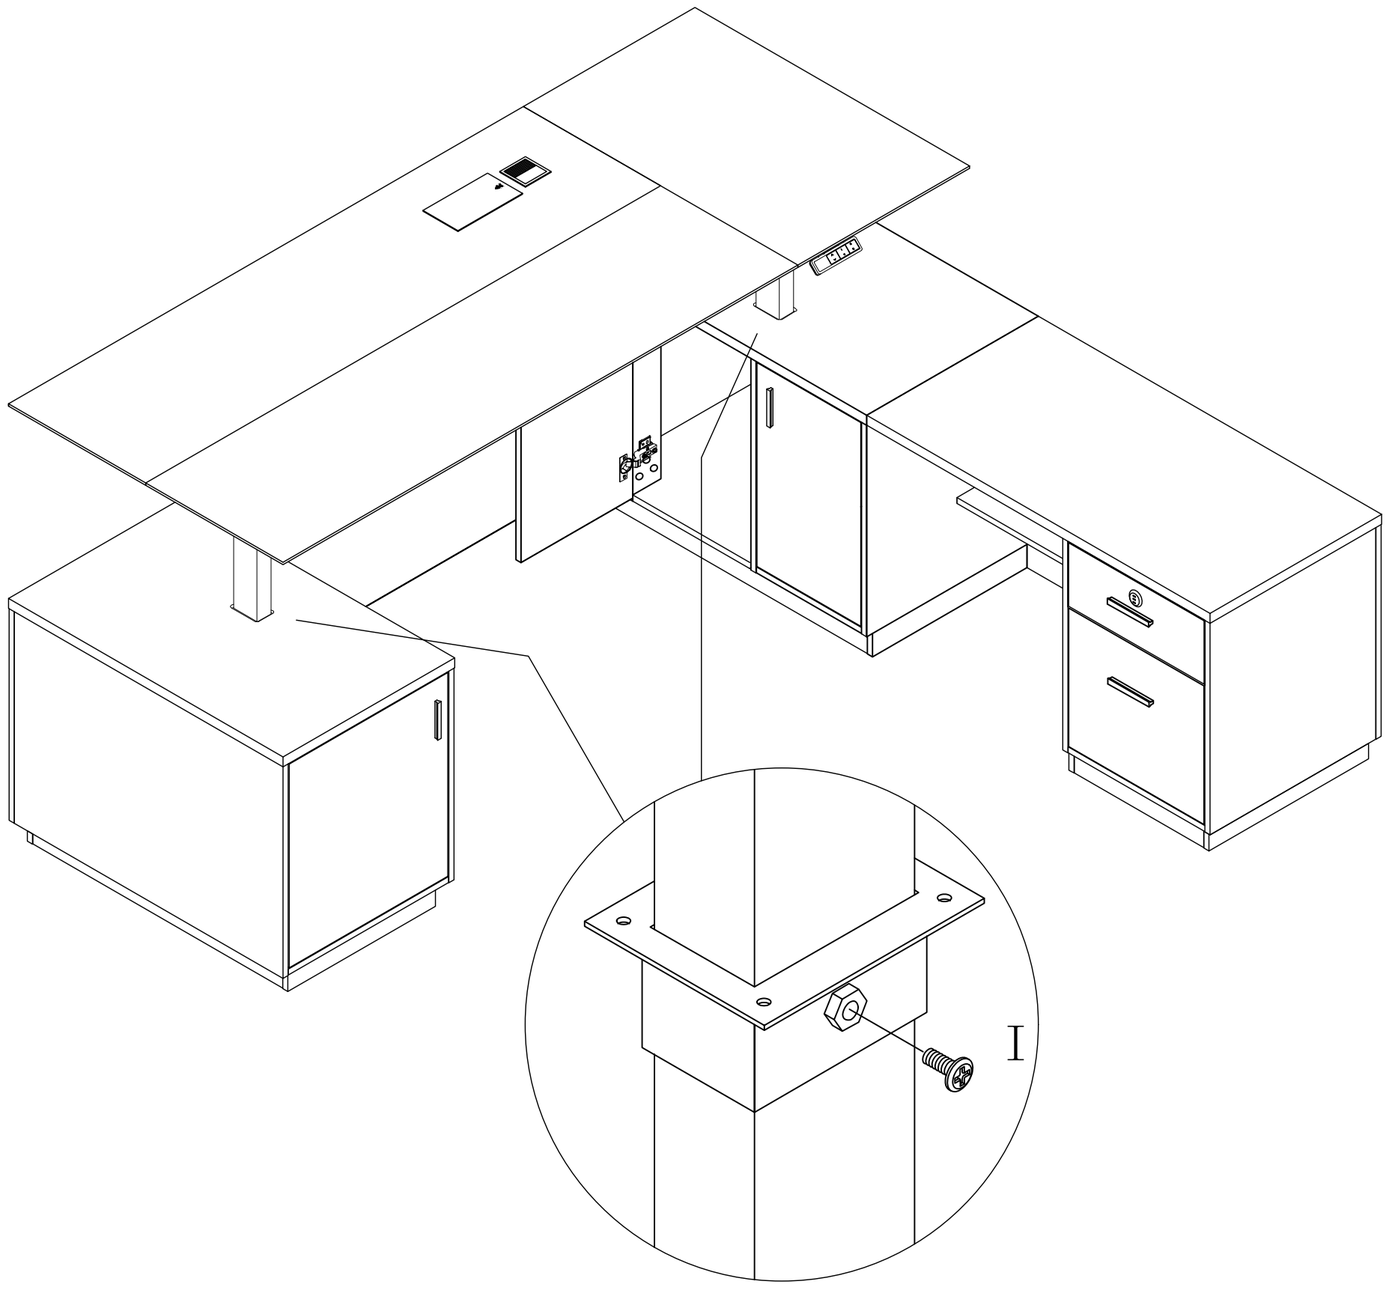

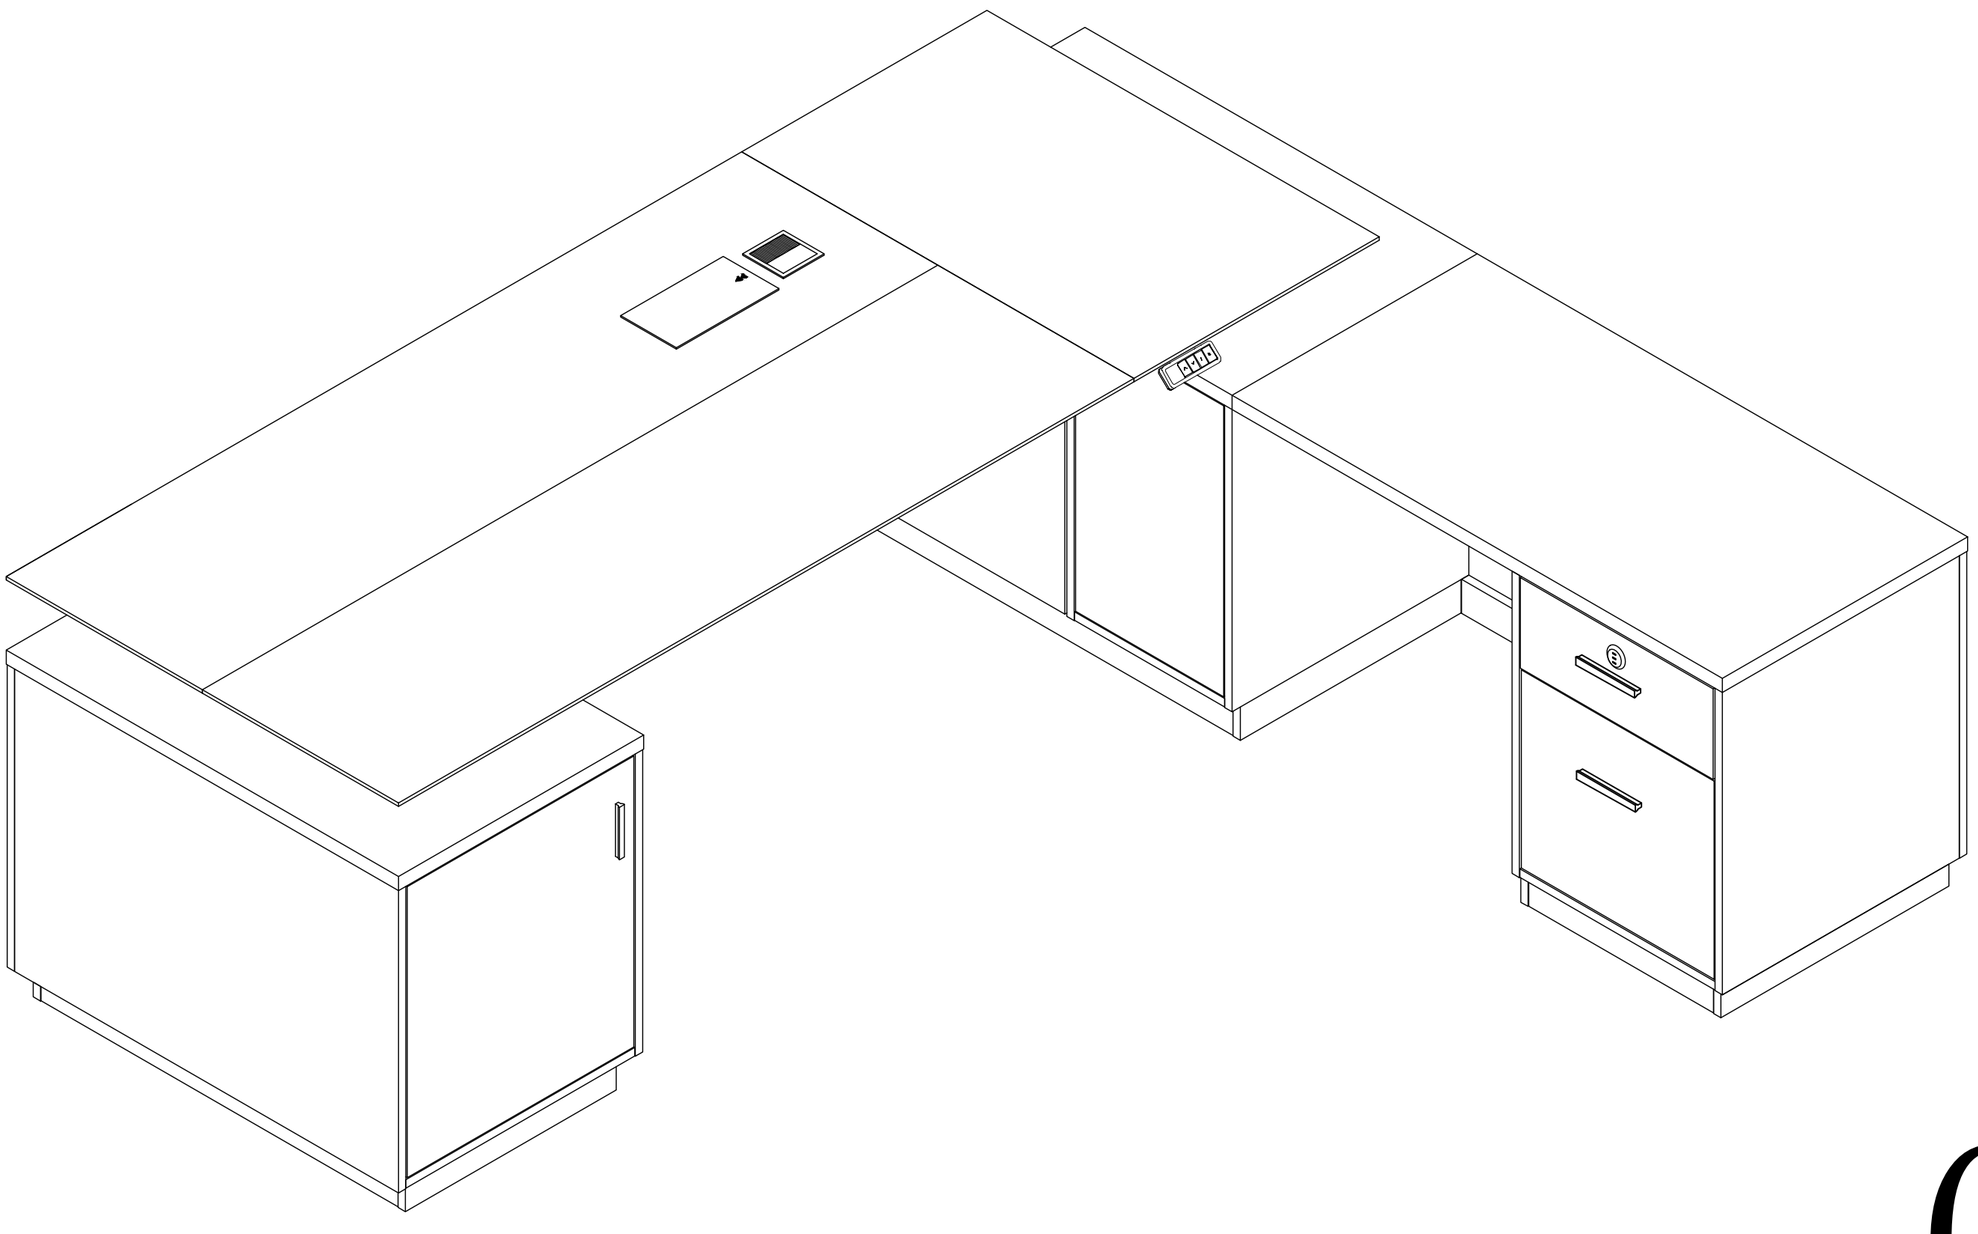

OK

ASSEMBLY INSTRUCTION

Instruction Manual for JCB35M51C Controller (Version 1.0-English)


System Function Description:

1. Lifting and Lowering Function of the Height-Adjustable Desk:

Hold down the upward button, and the column will rise; hold down the downward button, and the column will lower. Release the button, and the movement will stop.

2. Memory Position Function:

Long press the "①/②" button for 3 seconds until the digital tube display flashes. After the number flashes 3 times and stops, the current height will be successfully stored in the corresponding memory position. Short press the "①/②" button and release it, and the tabletop will automatically move to the height of the memory position. During operation, pressing any button can stop the movement.

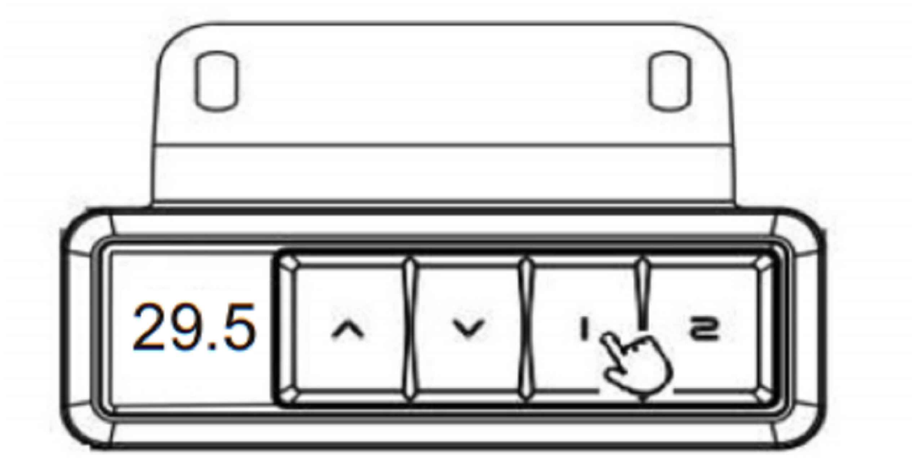

3. Reset Function:

(1) Function Description:

The system needs to be reset under specific circumstances.

These circumstances include:

① When used for the first time, the system will enter the reset state after being powered on.

② Active reset will put the system into the reset state.

③ A system abnormality will cause the system to enter the reset state.

(2) Operation Method:

Bottom Reset: Hold down the downward button until it reaches the bottom. Then release the button, and press the downward button again for 5 seconds— the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.

