
ASSEMBLY INSTRUCTIONS

ITEM NO. FB3012CST-PT
FB3059HAY-PT

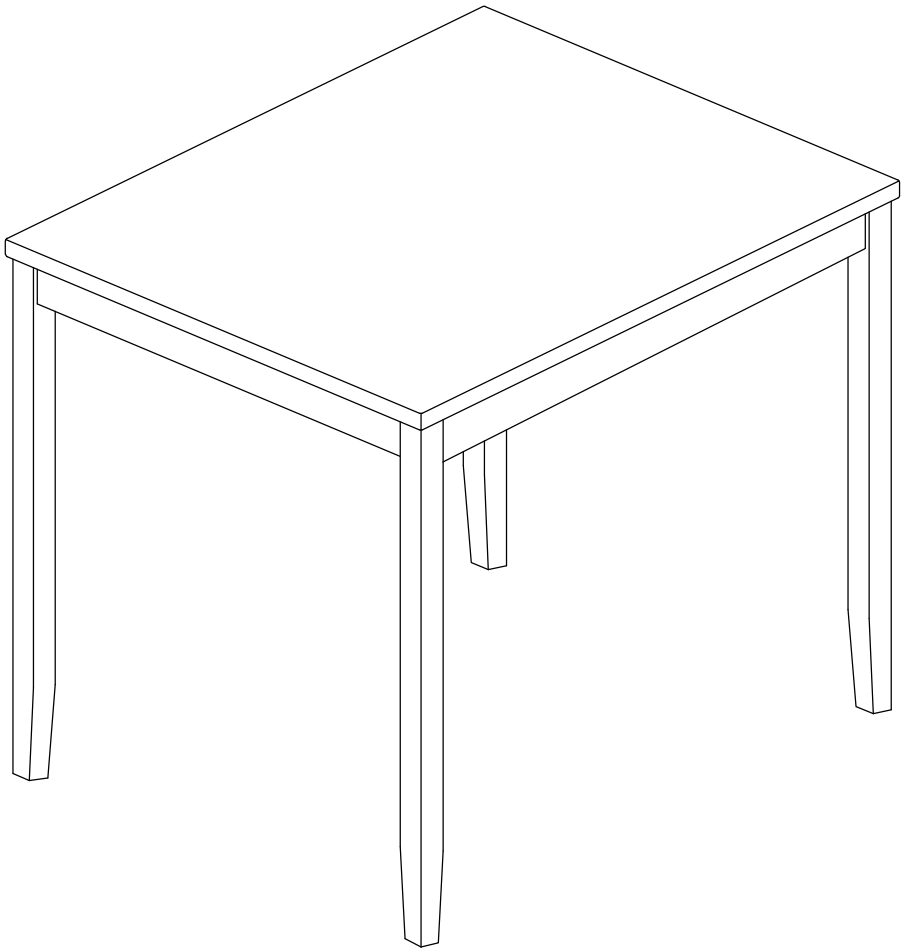

ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Part List


NO.	DIAGRAM	PART NAME	Q'ty
#1		Table Top	1 pc
#2		Table Legs	4 pcs

Hardware List


NO.	DIAGRAM	PART NAME	Q'ty
#A		Bolt Ø5/16" x 2-3/8"	8 pcs
#B		Spring washer Ø5/16"	8 pcs
#C		Flat washer Ø5/16"	8 pcs
#D		Allen key M4	1 pc

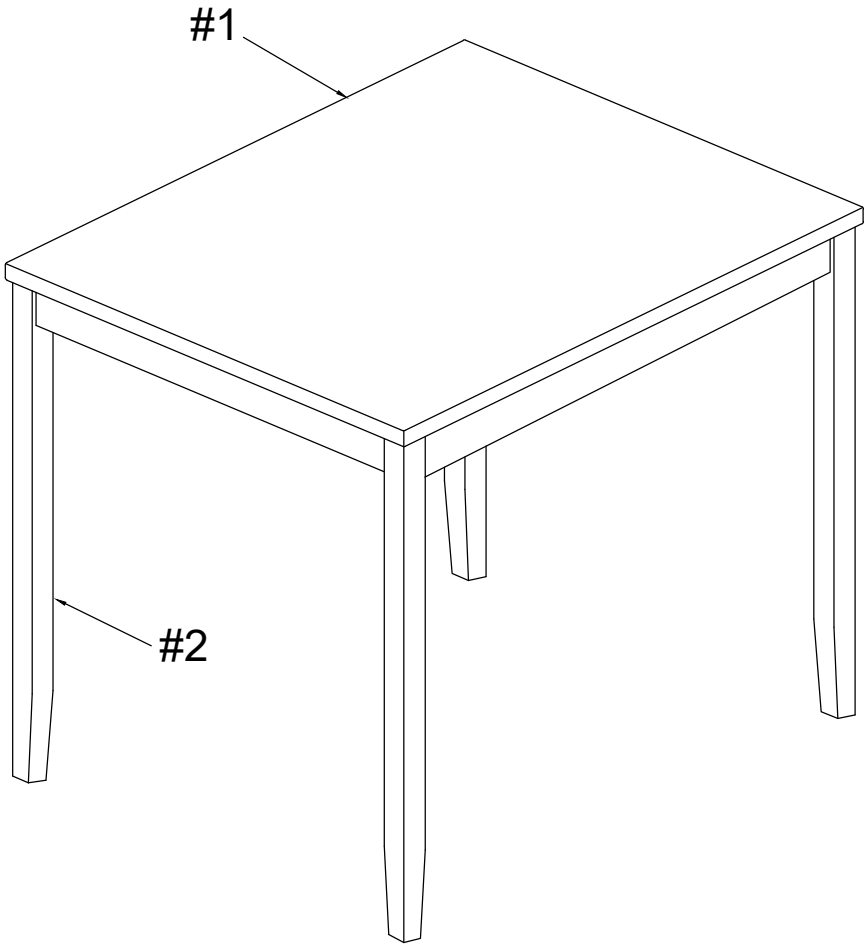

STEP 1

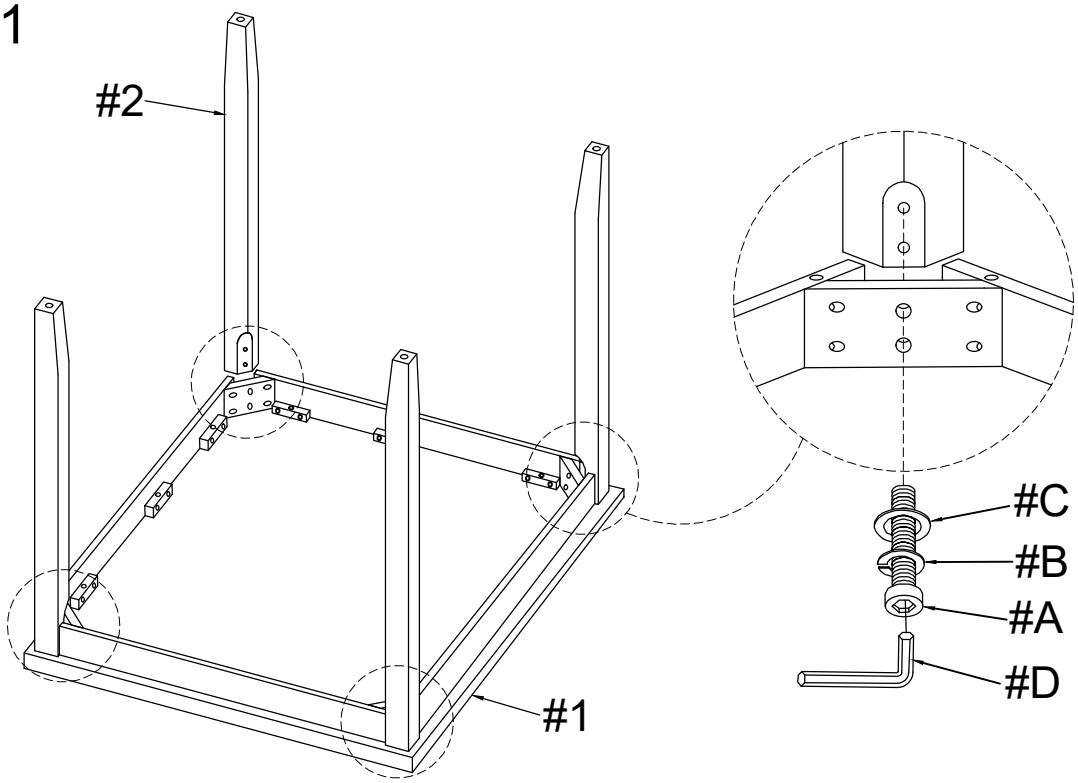


STEP 2

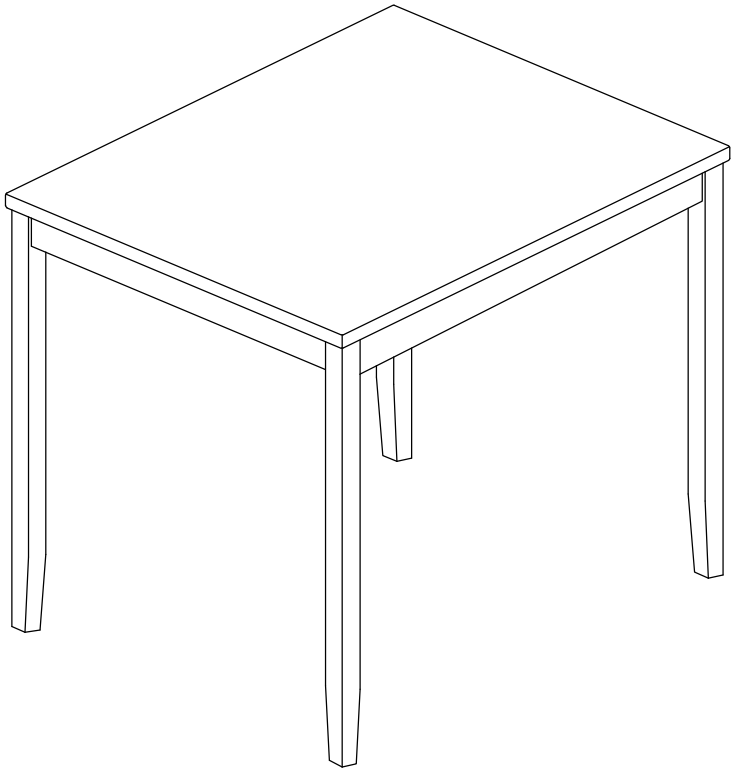

Tighten all screws until completely asembled.

ASSEMBLY INSTRUCTIONS


ITEM NO. FB3013CST-PC-4PK
FB3059HAY-PC-4PK
FB3041HAY-PC-4PK

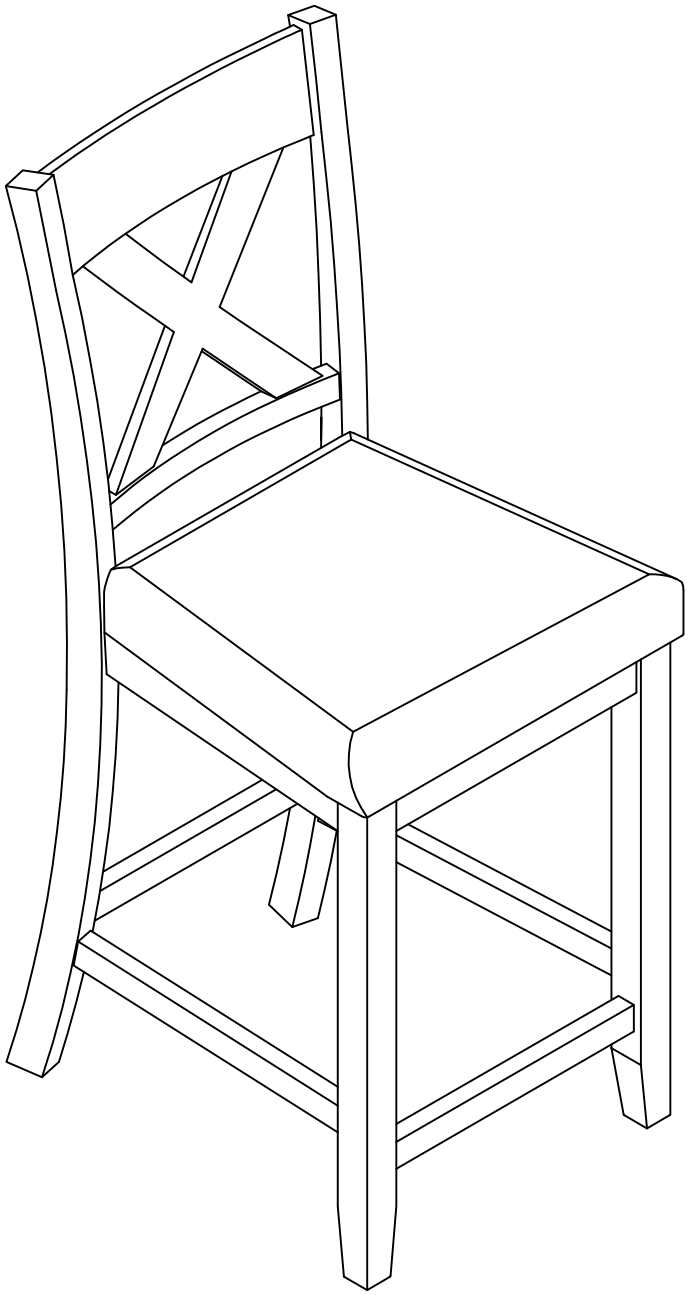




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Exploded View

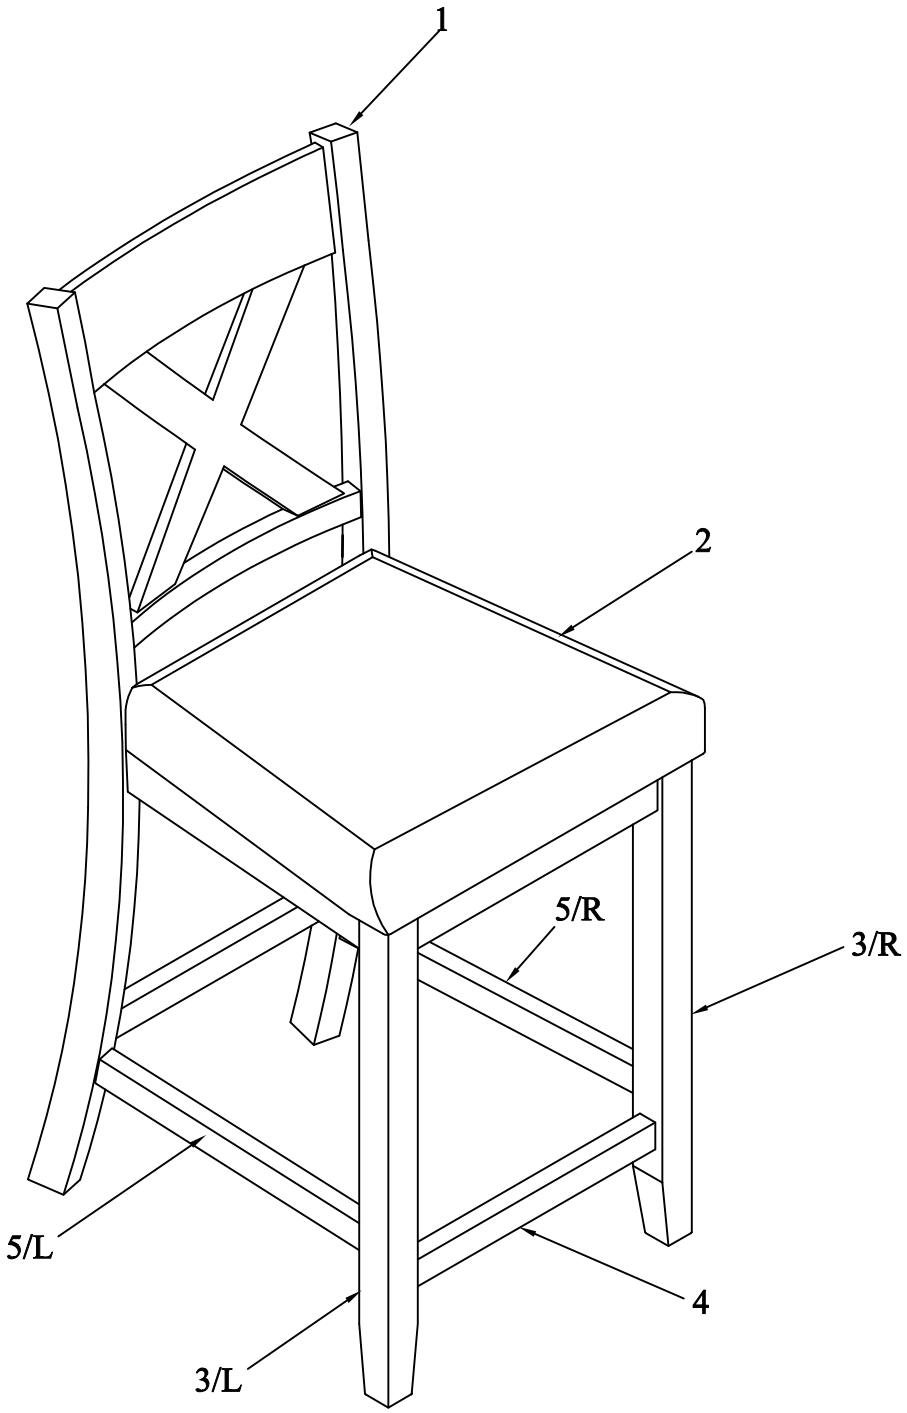


PARTS LIST

NO.	DIAGRAM	PART NAME	Q'Ty
1		CHAIR BACK	1PC
2		SEAT FRAME WITH CUSHION	1PC
3		LEG (LEFT /RIGHT)	2PCS
4		FRONT STRETCHER	1PC
5		SIDE STRETCHERS (LEFT/ RIGHT)	2PCS


HARDWARE LIST

NO.	DIAGRAM	PART NAME	Q'Ty
A		BOLT / BOULON Ø1/4" x 1-1/2"	2PCS
B		BOLT / BOULON Ø1/4" x 2-3/8"	4PCS
C		BOLT / BOULON Ø1/4" x 3"	4PCS
D		LOCK WASHER Ø1/4"	10PCS
E		FLAT WASHER Ø1/4"x 3/4"	10PCS
F		ALLEN KEY 1/6" x 2-1/4"	1PC
H		SCREW #4x45mm	6PCS

STEP 1:

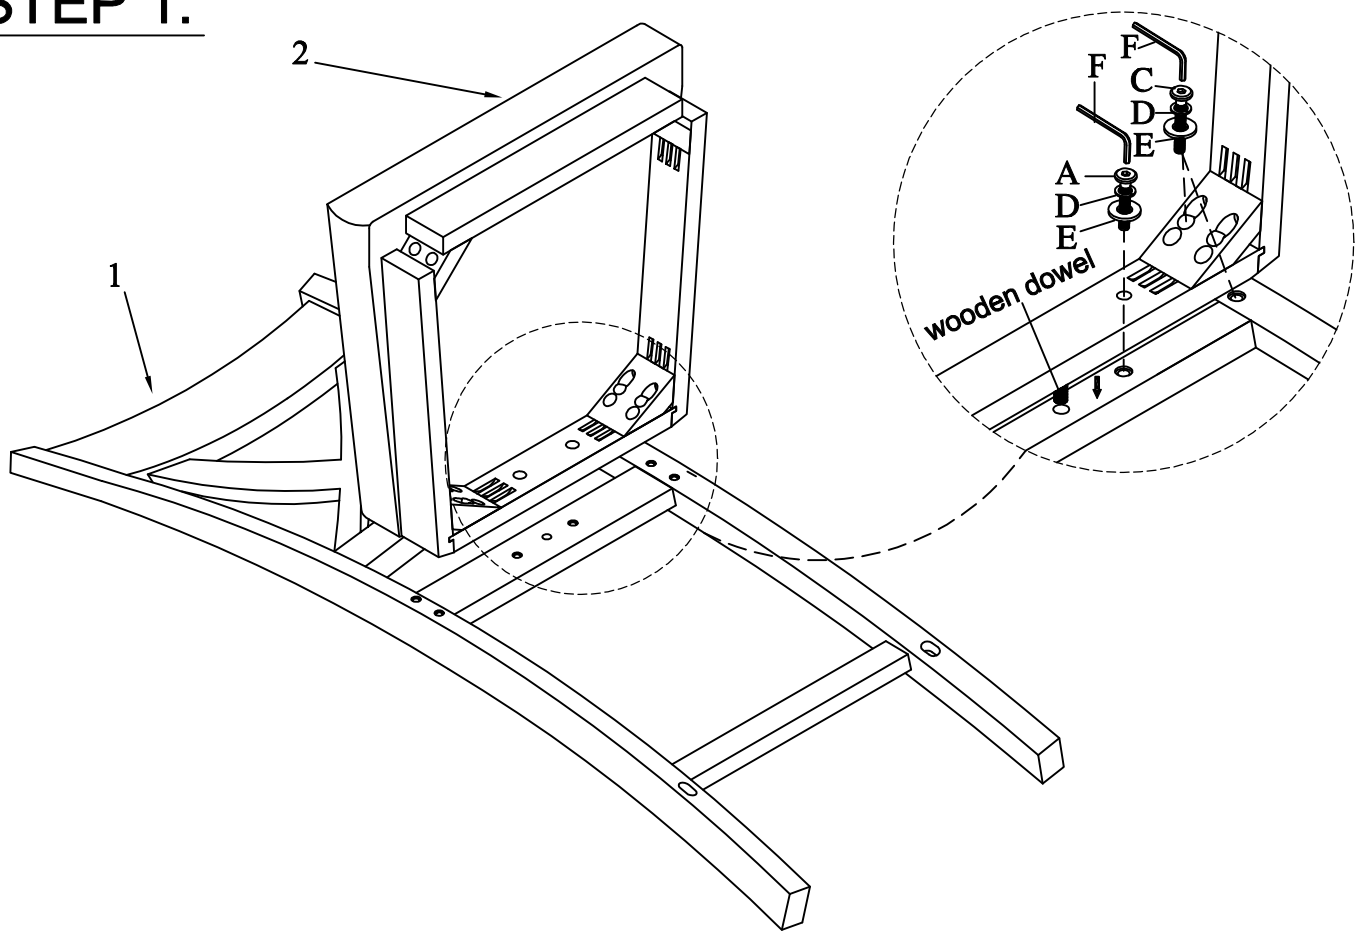


STEP 2:

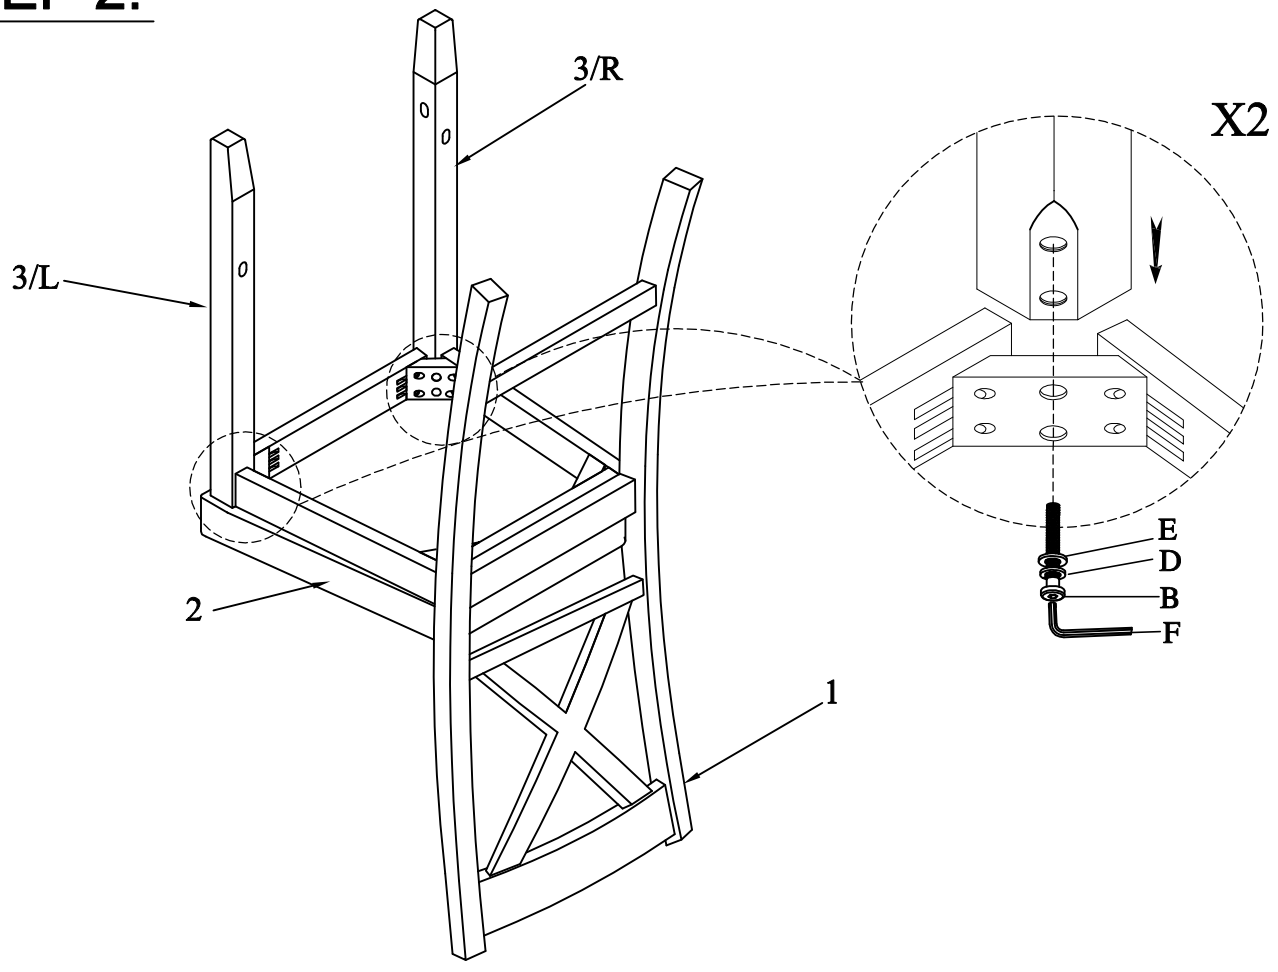


Do not tighten screws until completely assembled.

STEP 3:

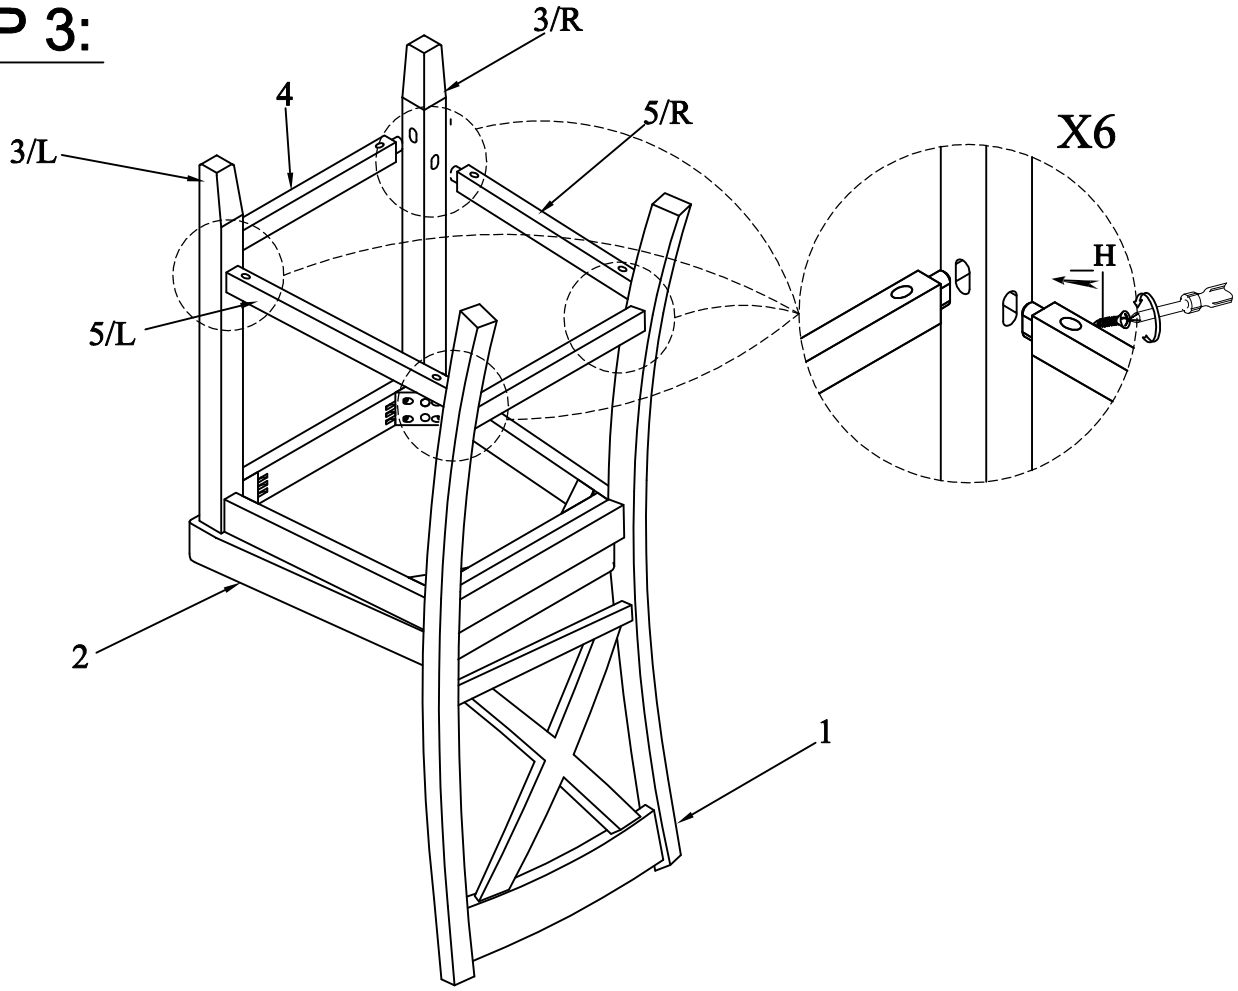

COMPLETED :

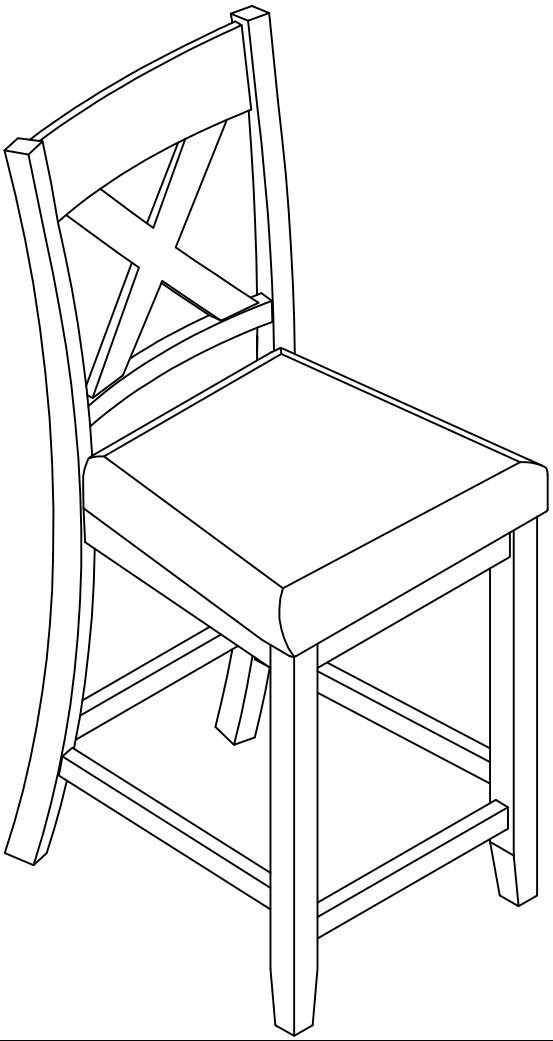

Tighten all screws until completely assembled.