
INSTURUCTION

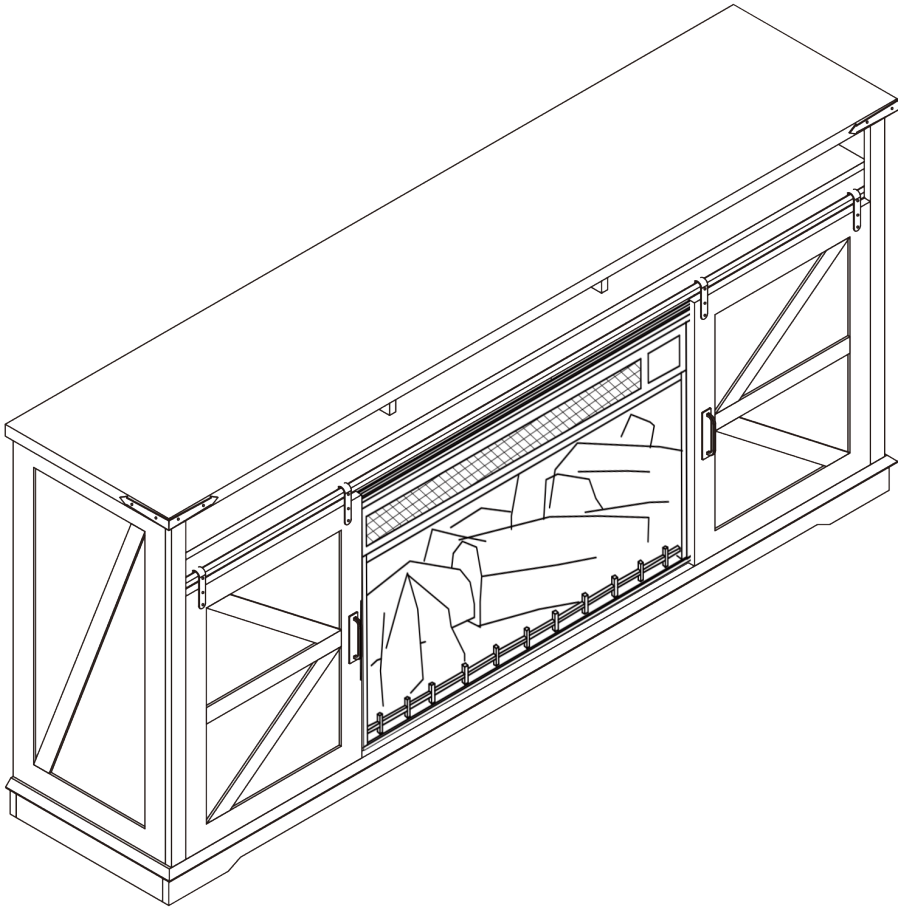


Please read this manual carefully
before use and keep it properly.

SAFETY INFORMATION



Please read and understand this entire manual before attempting to assemble, operate or install the product.

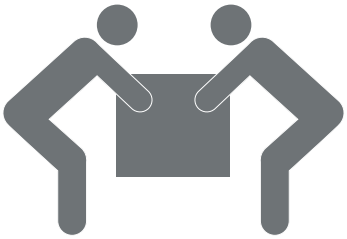

WARING

Some steps are more easily handled with two adults.

CAUTION

1. Before assembly and/or installation, carefully unwrap all parts.
2. Locate and set aside the hardware kit before discarding packaging.
3. Use care when assembling your new product. Take your time and follow assembly instructions closely

● IMPORTANT INFORMATION

Read all instructions before using this appliance.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons including the following:

1. When using the heating function, it is strictly prohibited to cover all air vents with objects.
2. It is prohibited to insert foreign objects into the air inlet and outlet, especially when using the heating function. It is strictly prohibited to touch the air outlet with your hands.
3. There should be no flammable or explosive dangerous goods around the placement of this machine.
4. To prevent electric shock, please remember to turn off the power before cleaning or opening the casing.
5. Before using the remote control, check the code and press the (+/-) keys at the same time.
6. High temperatures may be generated under certain abnormal conditions.
7. Do not partially or fully cover or obstruct the front of this heater.
8. Never leave the heater operating unattended. Extreme caution is necessary if unsupervised children or persons with a disability are nearby.
9. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
10. Always unplug this appliance when not in use.
11. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
12. Do not use outdoors.
13. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may fall into a bathtub or other water container.

14. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
15. To disconnect heater, turn controls to the off, and turn off power to heater circuit at main disconnect panel (for operate internal disconnect switch if provided).
16. Connect to properly grounded outlets only. Do not use a 2 prong adapter. Never use with an extension cord or relocatable power tap (outlet/power strip) as shown in Fig.1.
17.Do not wipe the furnace body with a damp cloth when it is powered on as shown in Fig.2.

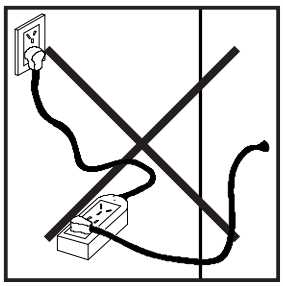


Fig.1


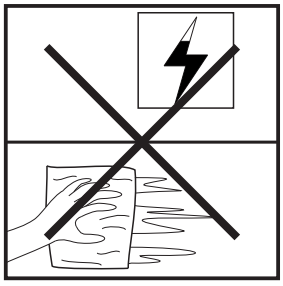


Fig.2


●PRODUCT DESCRIPTION

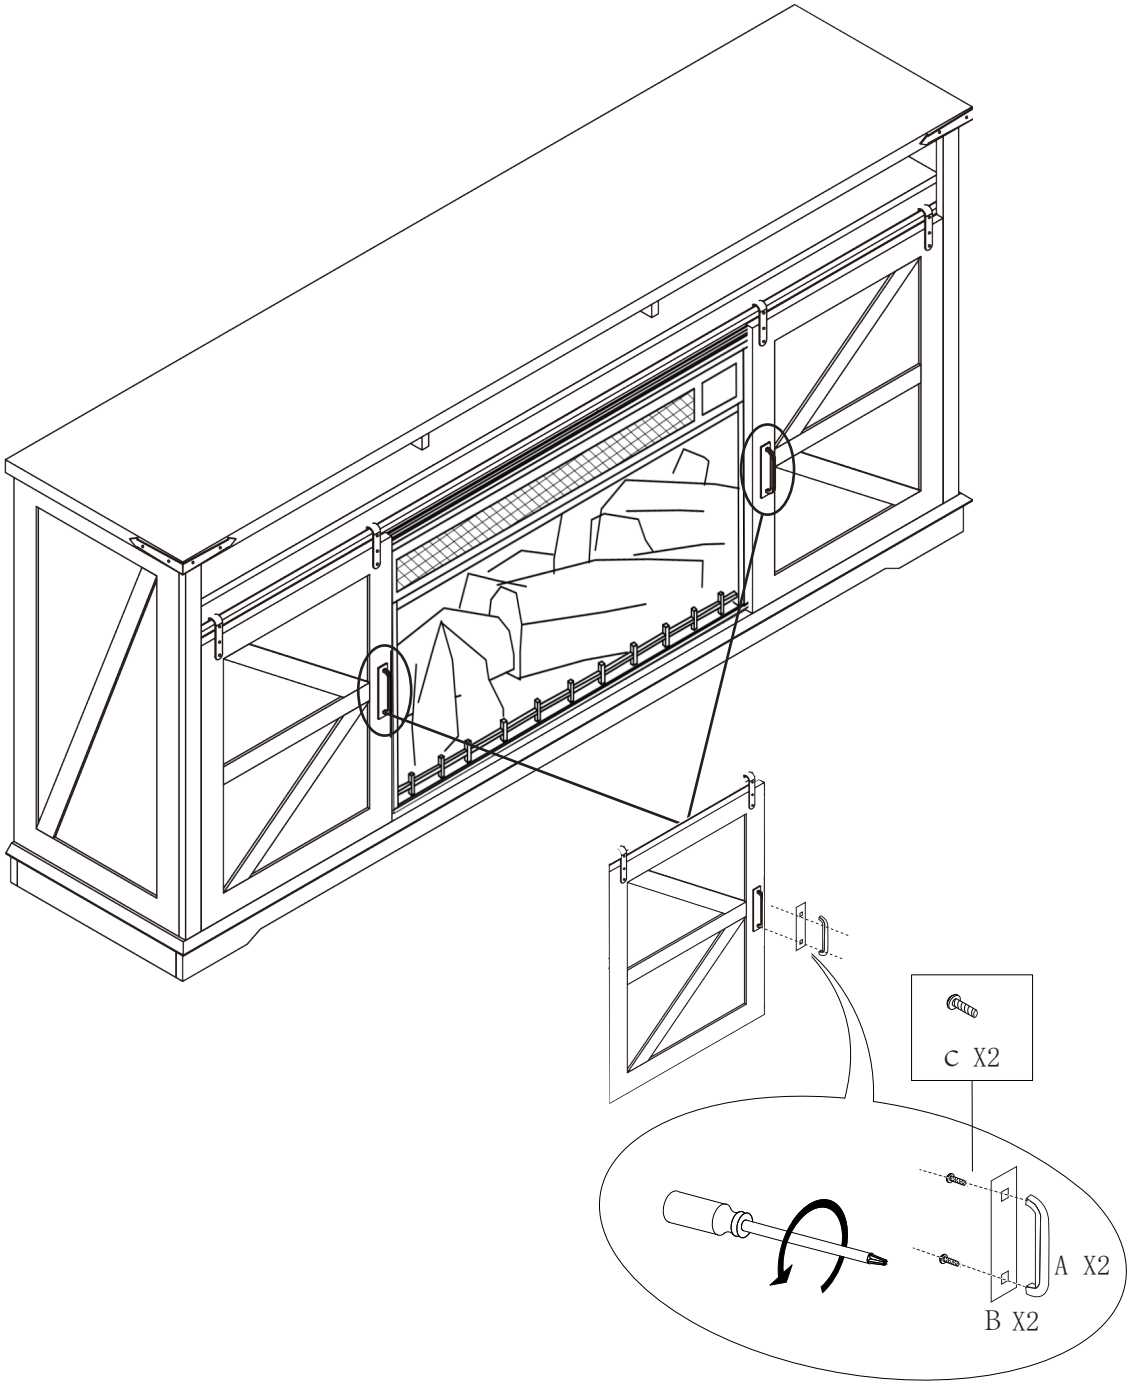

● PART LIST

Ref	Image	Name	Pcs
A		Handle	X2
B		Handle	X2
C		Handle screw	X4

●FUNCTION

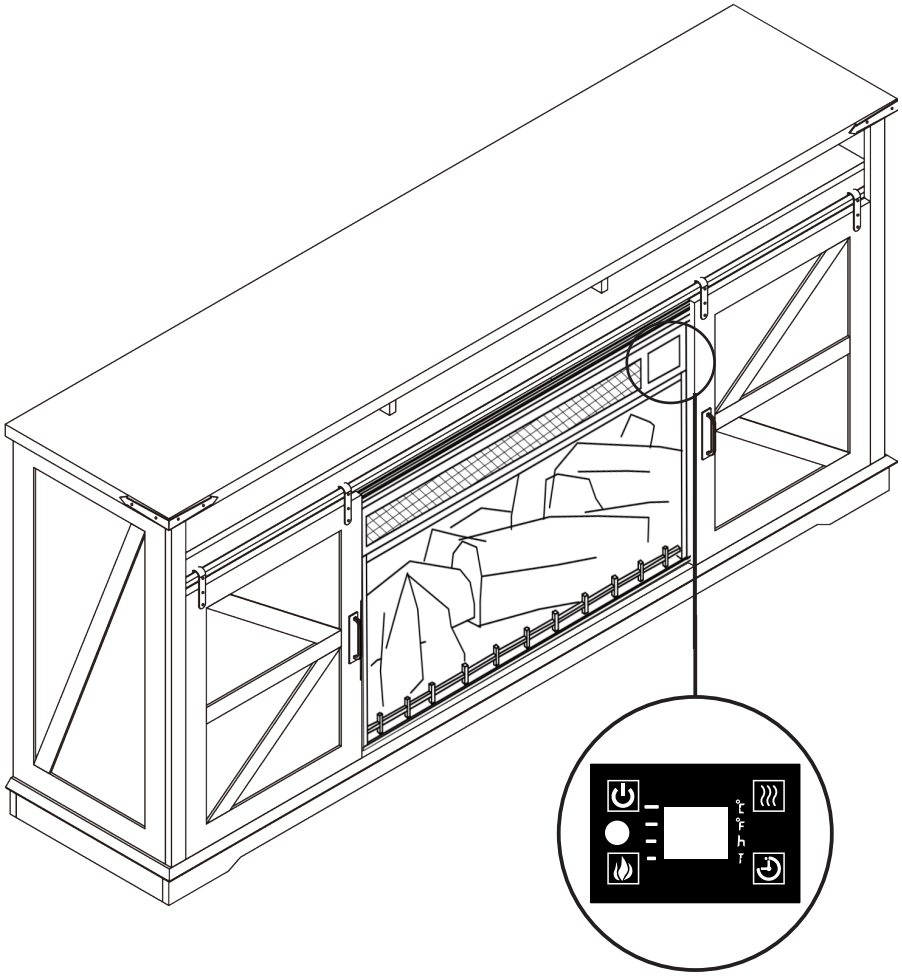

Seven-level adjustable flame color
Three-level adjustable flame brightness

Two-speed temperature adjustment (1500w/750w)
The heating system can be turned on and off independently

Can be set to 1-9 hours

Built-in Bluetooth sound system

Note: First, power on the furnace, and then connect to the furnace's Bluetooth "BT5.0" with other devices(phone and PC,etc).


the technical parameters

Function	Voltage(M)	Frequency(Hz)	Power (W)	Noise(dB)	Energy efficlency grade
Decorative fumice core	110V	50-60Hz	12W-36W	≤20dB	Three
Heating fumace core	110V	50-60Hz	750W-1500W	≤25dB	Three

Note: decorative fumice core is in non heating mode, applicable to the first row of data.

According to the Keypad/remote control instructions

Press the key pad instructions (decorating furnace core/heater core)

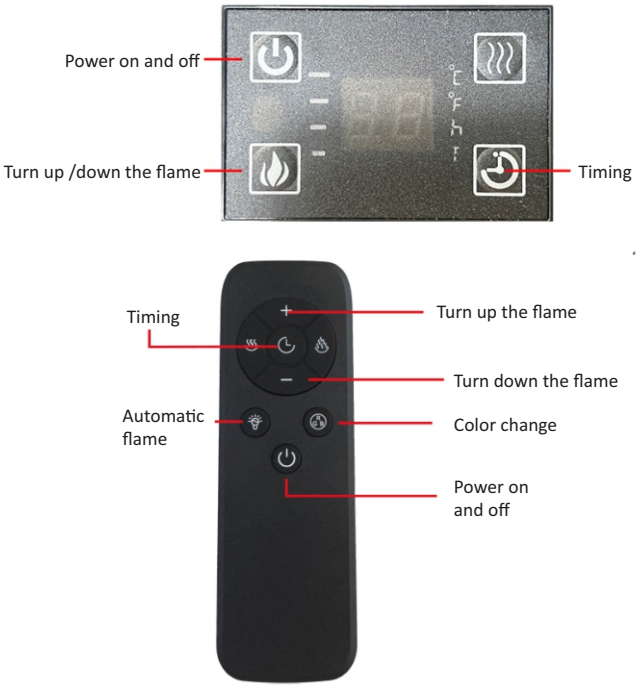

Decorative furnace core



Heating furnace core

Maintenance

1:Before the product is cleanedthe power must be cut off.
2:Prohibition of direct water washing the fuselage.
3:Do not use any abrasive tools or solvents that can damage the surface.
4:Prohibited to open the product for transformationthe proposed regular inspection of the product and clean with a dry cloth to extend its service life.

Troubleshooting


1:After the power is inserted,the hose will emit a “drop"sound as a reference for power-on.
2:The flame light and then go out. check the box is wet.ventilated and dried and restart the power.
3:Heater suddenly does not work.is due to heating and time is too long. Turn off the power it 20 minutes after the restart.
Note: Due the product hardware software upgrades from time to time.such as instructions and products differ.please prevail to the exising product if the above self test method can not solve or have any other questions please contact our after-sales personnel.we will give you a satisfactory reply.

● BATTERY REPLACEMENT

NOTE: Do not mix oldand new batteries.Do not mix alkaline, standard (carbon zinc), or rechargeable (nicad, ni-mh, etc.) batteries.


CAUTION:

1. Always purchase the correct size (AAA) and grade of battery most suitable for the intended use.
2. Replace all batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment which is not to be used for an extended period of time.
6. Remove used batteries promptly.
7. Some batteries may be overdischarged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

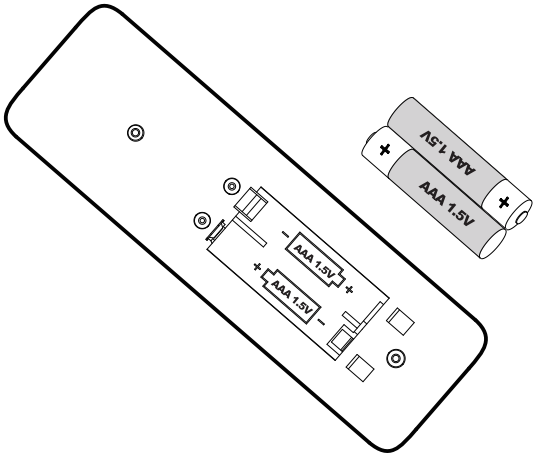

For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

NOTE: Battery disposal Please always dipose of batteries at a suitable recycling point.

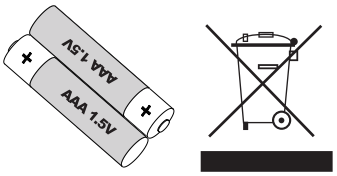

●1-YEAR LIMITED WARRANTY

The manufacturer warrants that your new Electric Fireplace is free from manufacturing and material defects for a period of one year from date of purchase, subject to the following conditions and limitations.

1. Install and operate this appliance in accordance with the installation and operating instructions furnished with the product at all times. Any unauthorized repair, alteration, willful abuse, accident, or misuse of the product shall nullify this warranty.
2. This warranty is non-transferable, and is made to the original owner, provided that the purchase was made through an authorized supplier of the product.
3. The warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service, after said defect is confirmed by the manufacturer's inspection.
4. The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).
5. Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s),repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for same.
6. The owner/user assumes all other risks, if any, including the risk of any direct, indirect or consequential loss or damage arising out of the use, or inability to use the product, except as provided by law.
7. All other warranties – expressed or implied – with respect to the product, its components and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded.
8. The manufacturer neither assumes, nor authorizes any third party to assume on its behalf, any other liabilities with respect to the sale of the product.
9. The warranties as outlined within this document do not apply to non accessories used in conjunction with the installation of this product.
10. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty is void if:

1. The fireplace is subjected to prolonged periods of dampness or condensation.
2. Any unauthorized alteration, willful abuse, accident, ormisuse of the product.
3. You do not have the original receipt of purchase.