Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.







- Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Dining Table

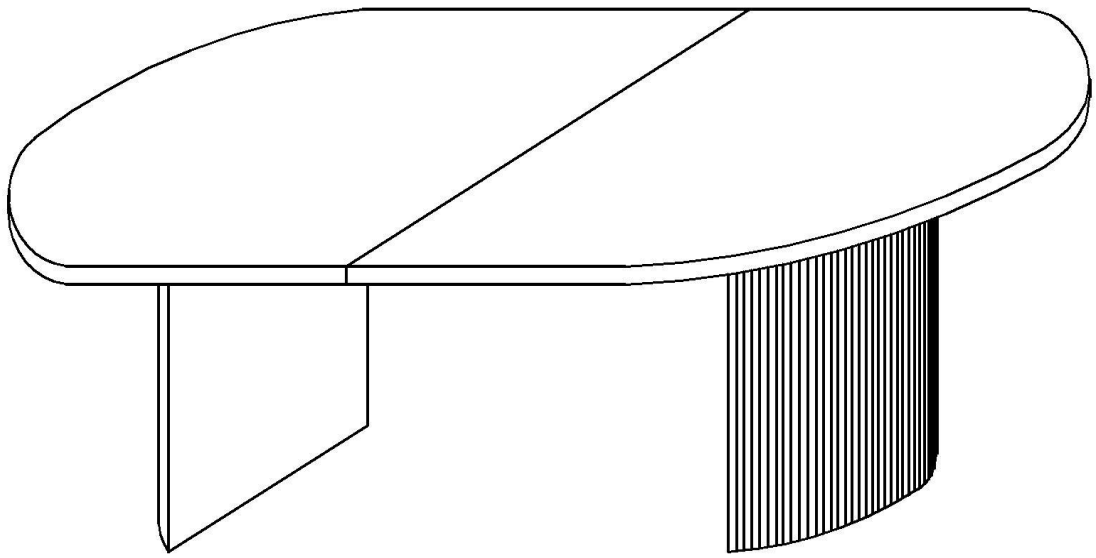

Parts List

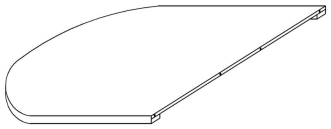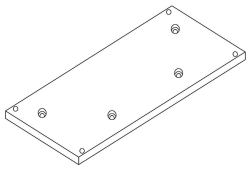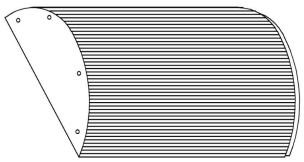
Label	Picture	Description	QTY
A		Table Top	2
B		Plate	2
C		Crossbar	2
D		Table Base	2

Hardware

Label	Picture	Description	QTY
①		5mm Allen Wrench	1
②		Bolt (M8*32mm)	17
③		Bolt (M8*57mm)	13
④		Spring Washer (M8)	30
⑤		Flat Washer (M8)	30

Assembly Preparation


Before Beginning Assembly:

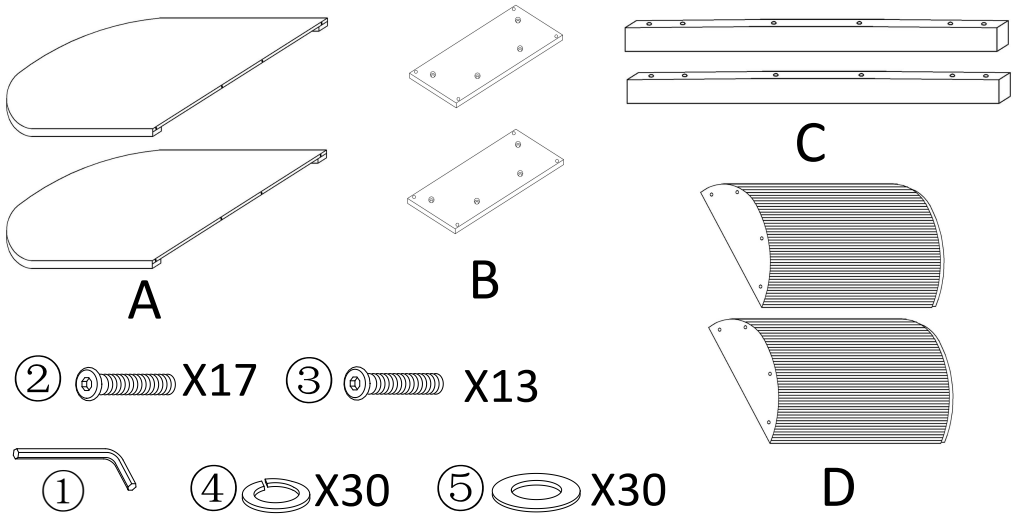

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-


Assembly Steps

Overview

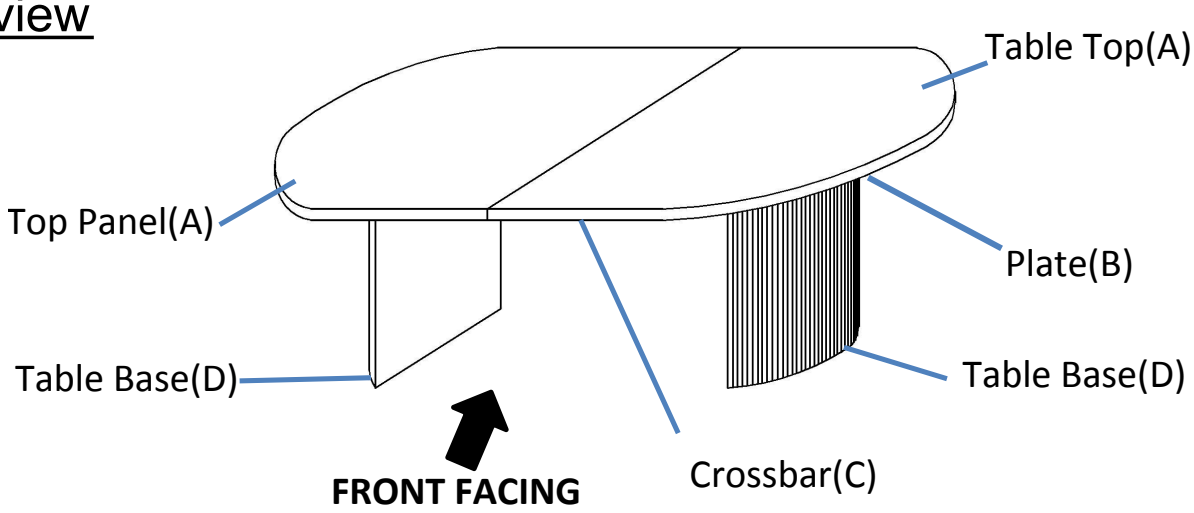


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

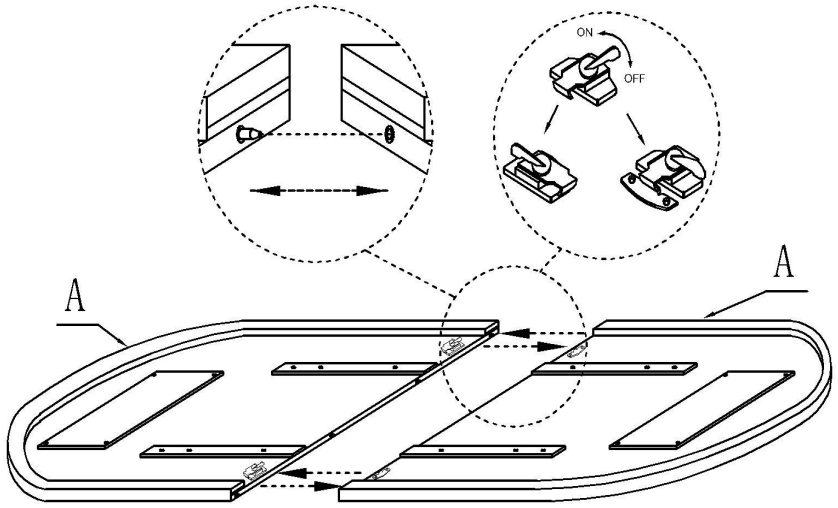


Please put the two Table Top (A) together as shown.
Place all parts on a clean, undamaged surface.

Step 2

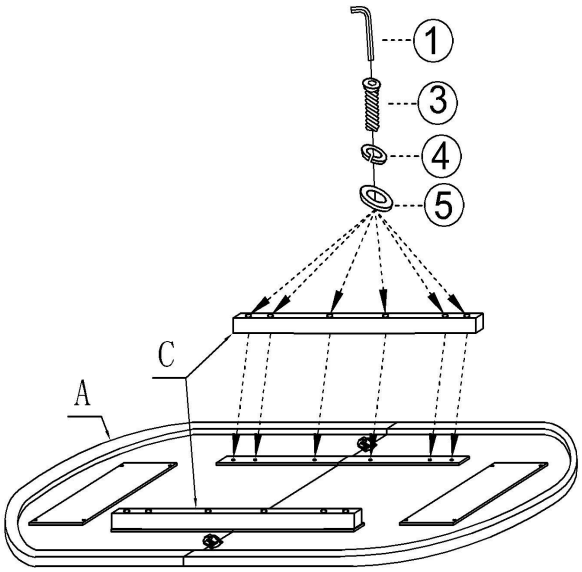


The bottom of the table top should be facing up as shown in the picture above. Use the Allen Wrench (①), Bolts (③), Spring Washers (④), and Flat Washers (⑤) to fix the Crossbar (C).

Step 3

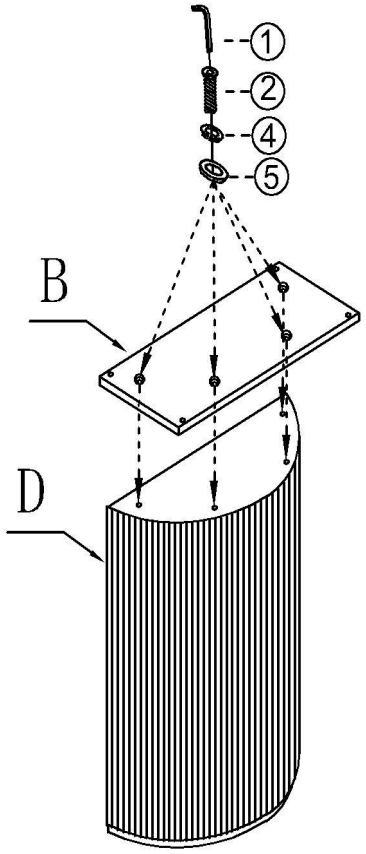


As shown in the picture: Please use the Allen Wrench (①) and Bolts (②), Spring Washers (④), Flat Washer (⑤) to fix the Plate (B) and the Table Base (D).

Step 4

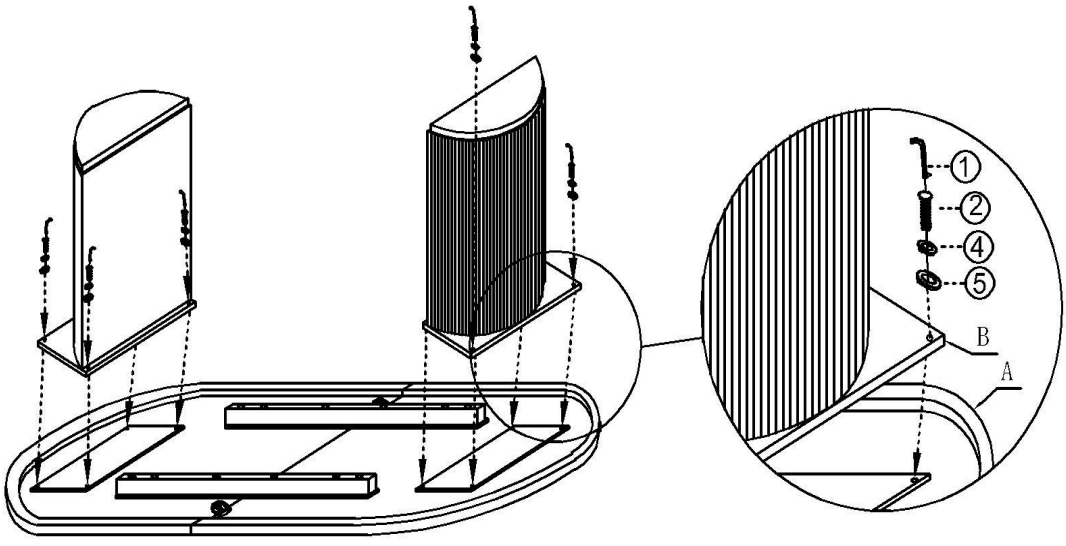

As shown in the picture: Please use the hexagonal wrench (①), bolts (②), spring washers (④), and flat washers (⑤) to fix the Table Top (A) and Plate (B).

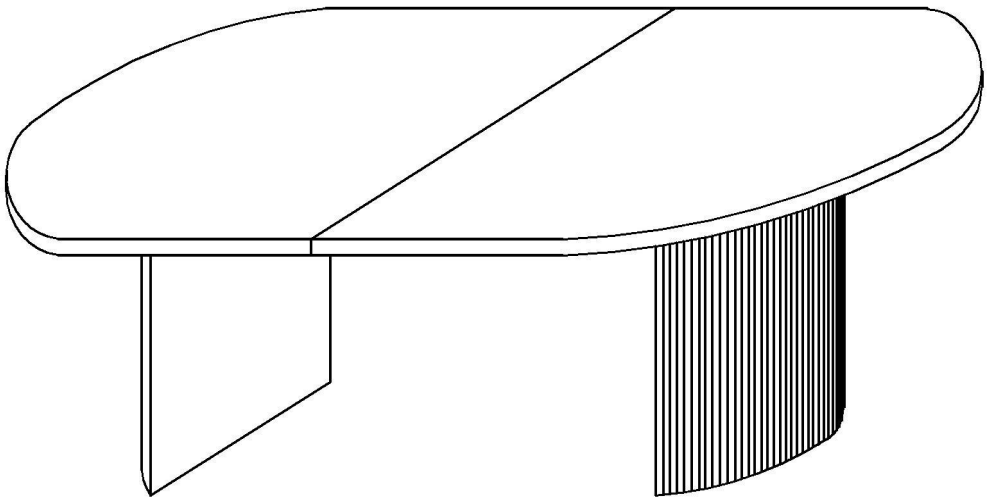Step 5	
Your Dining Table is ready for use. This Dining Table should only be used on a flat, level surface.	