
Instruction Manual

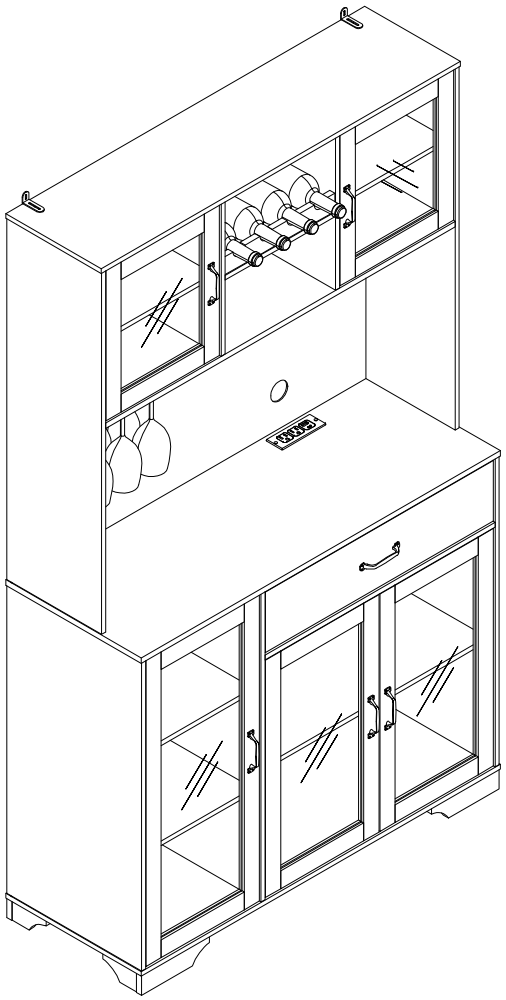


Thank you for trusting our service and ourproducts,Be sure to check all packing If any part(s) are missing or damaged ,Please contact us ,Our team will resolve your issue as quickly as possilble

Customer Service :furniture.help24hrs@outlook.com


BUYING TIPS




If you have any questions below, please feel free to contact us. We will respond within 24 hours.

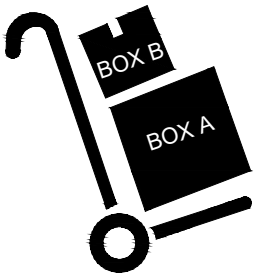


Attention
our product comes with TWO PACKAGES with TWO TRACKINGS may NOT be delivered at the same time.

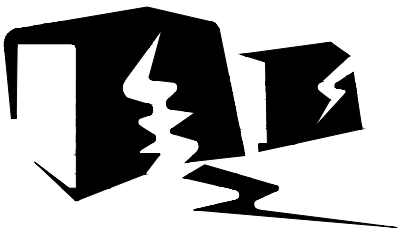

ANY DAMAGE

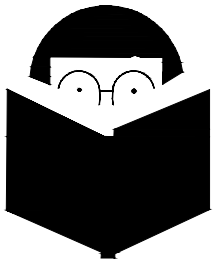

READ INSTRUCTIONS CAREFULLY

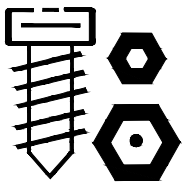

MISS SOME PARTS




OTHER QUESTIONS

GENERAL INFORMATION, TIPS AND TRICKS

1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening bolts.
7. Make sure all screws and bolts are tightly fastened before the unit is used.


MAXIMUM RECOMMENDED WEIGHT LOADS

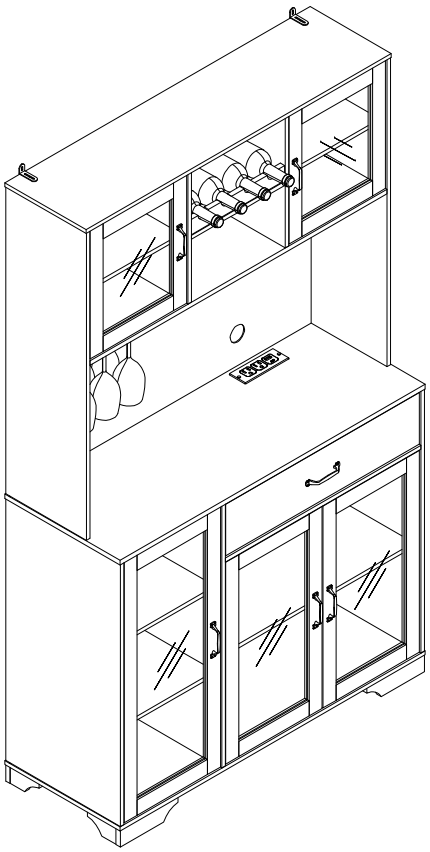


THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

IMPORTANT

Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface.
NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.
Insert Dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

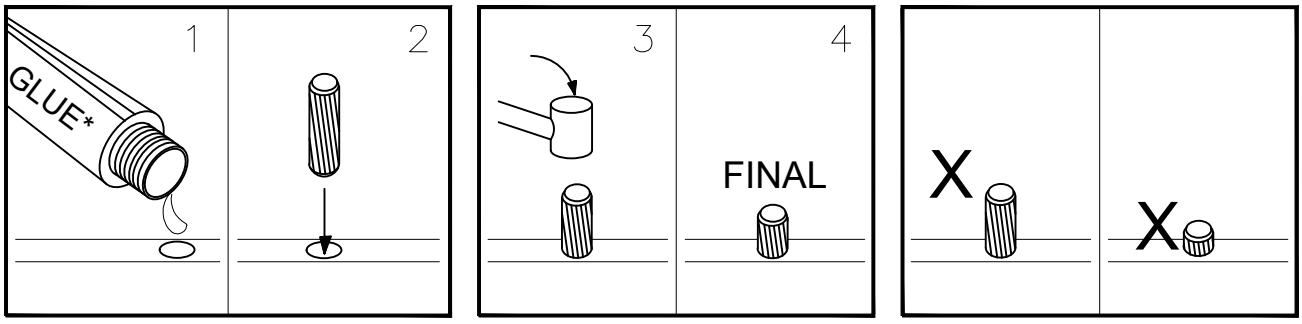


CAM LOCK SYSTEM OPERATION

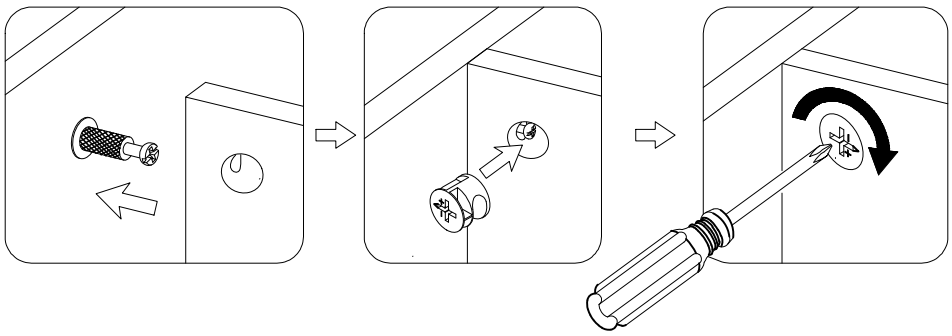



HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.


BOARD IDENTIFICATION-1

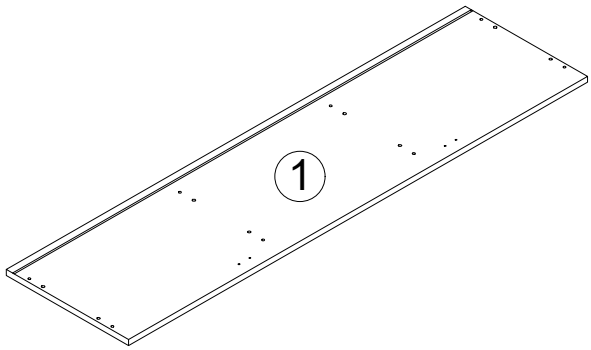


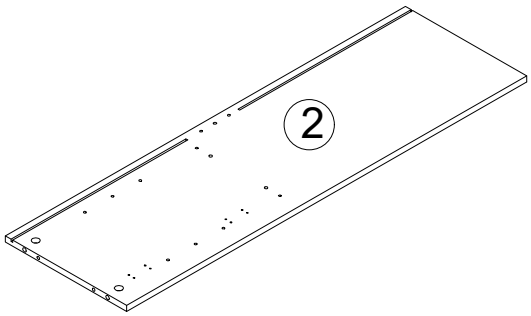


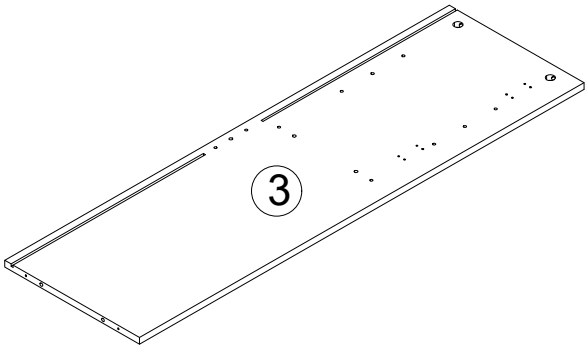


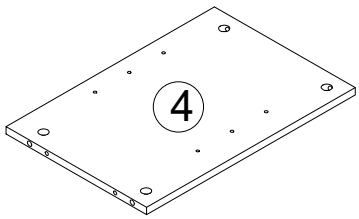


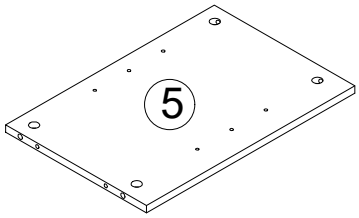

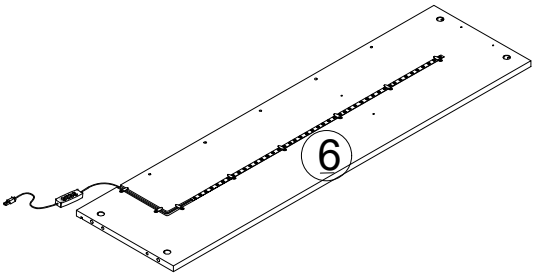


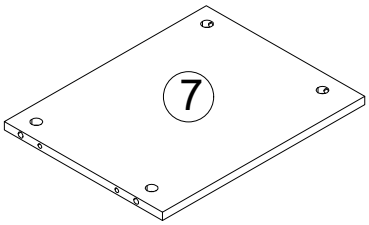

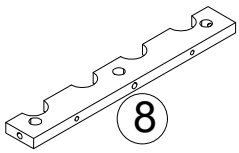

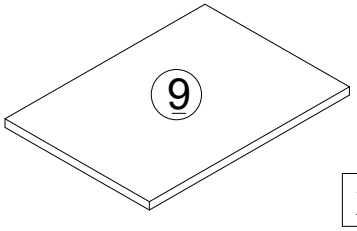


x 2

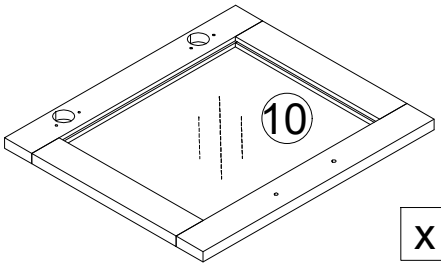



x 2


BOARD IDENTIFICATION-2

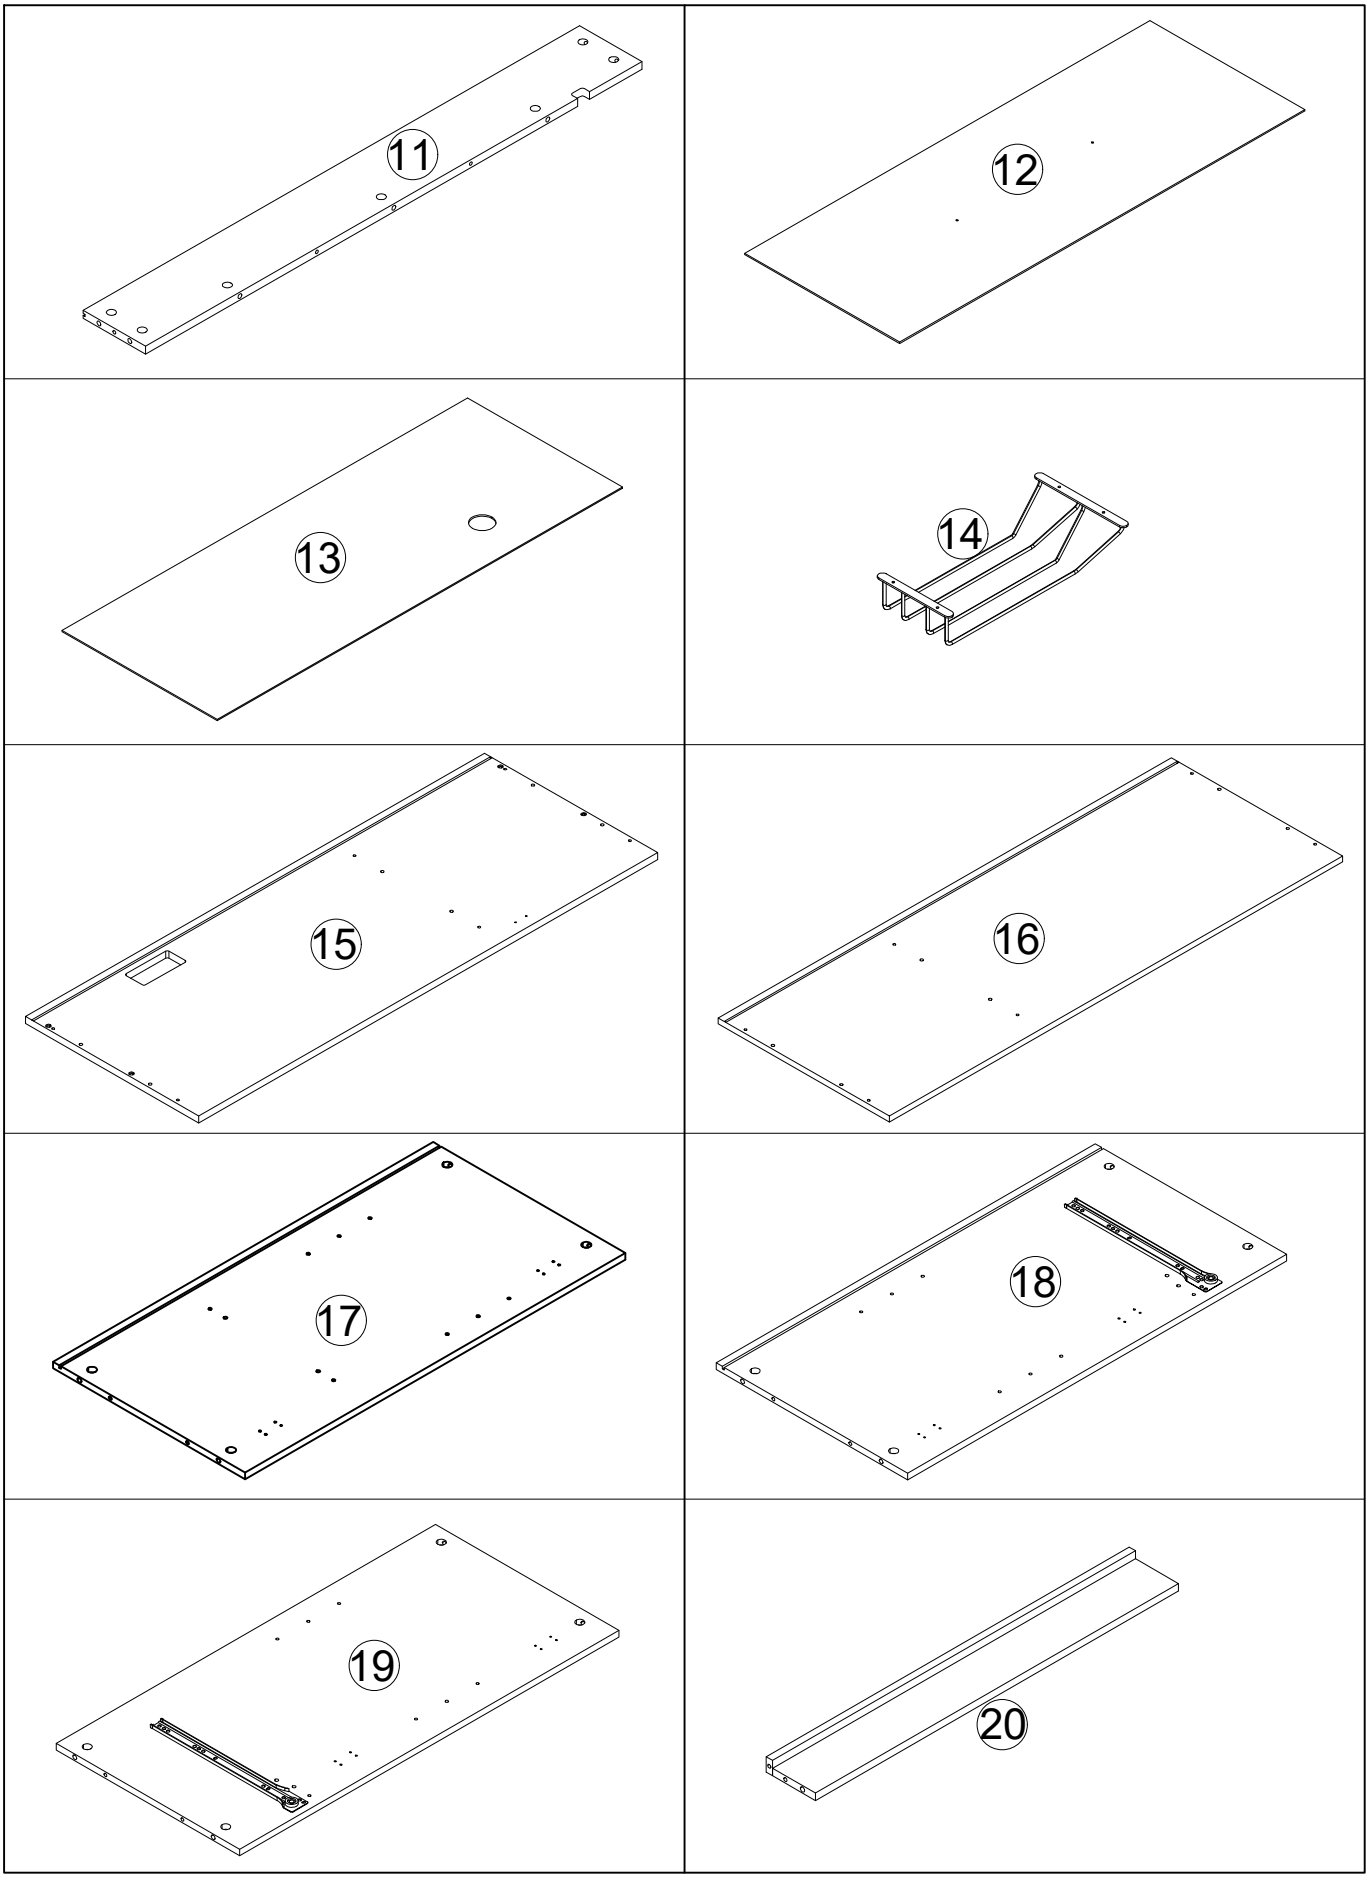


BOARD IDENTIFICATION-2

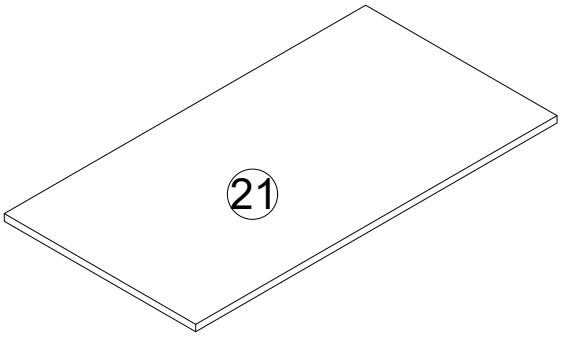


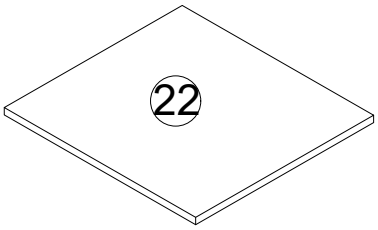


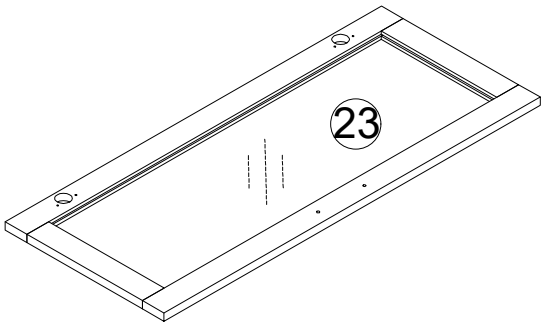


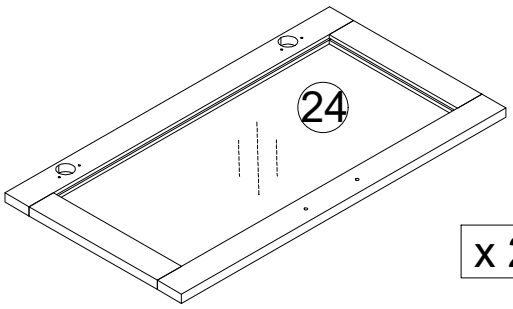



x 2

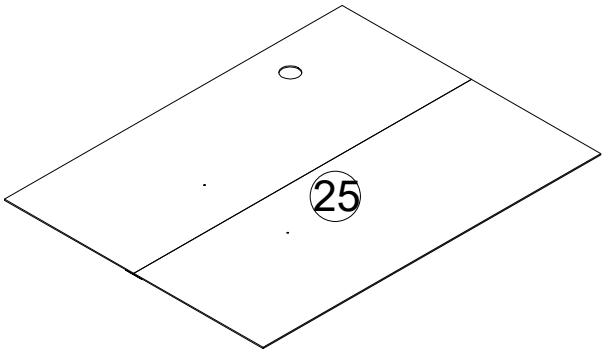

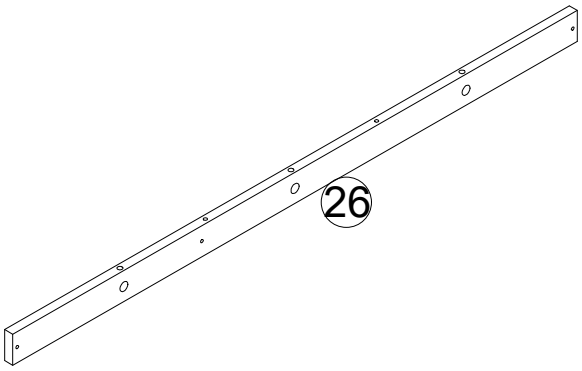


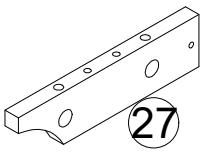

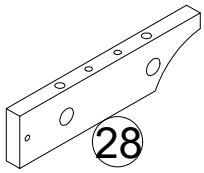

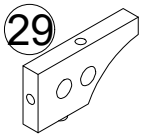



x 2

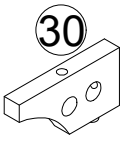



x 2


BOARD IDENTIFICATION-2

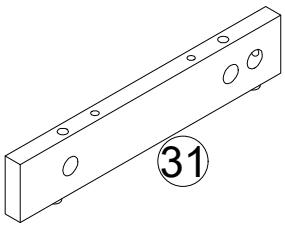


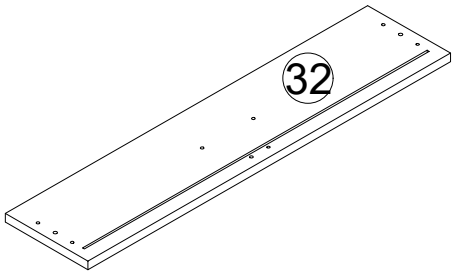


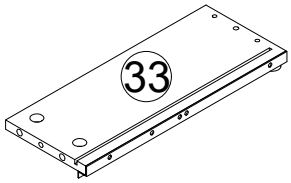


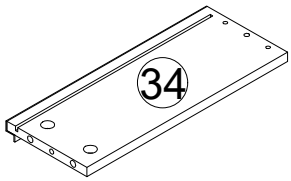

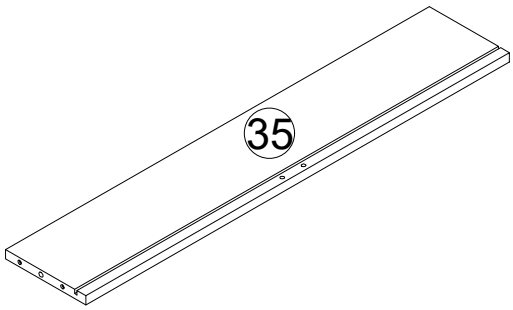


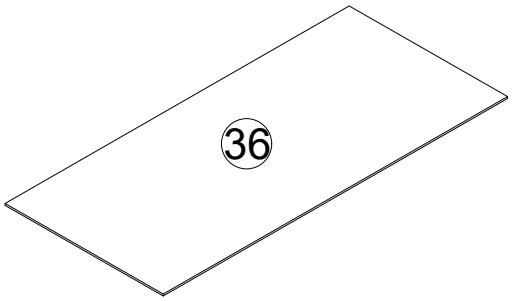







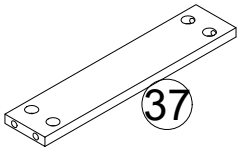


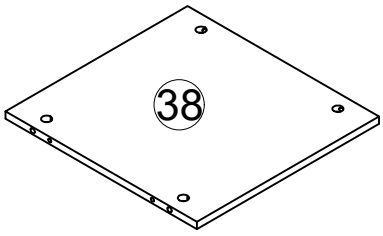


BOARD LDENTIFICATION

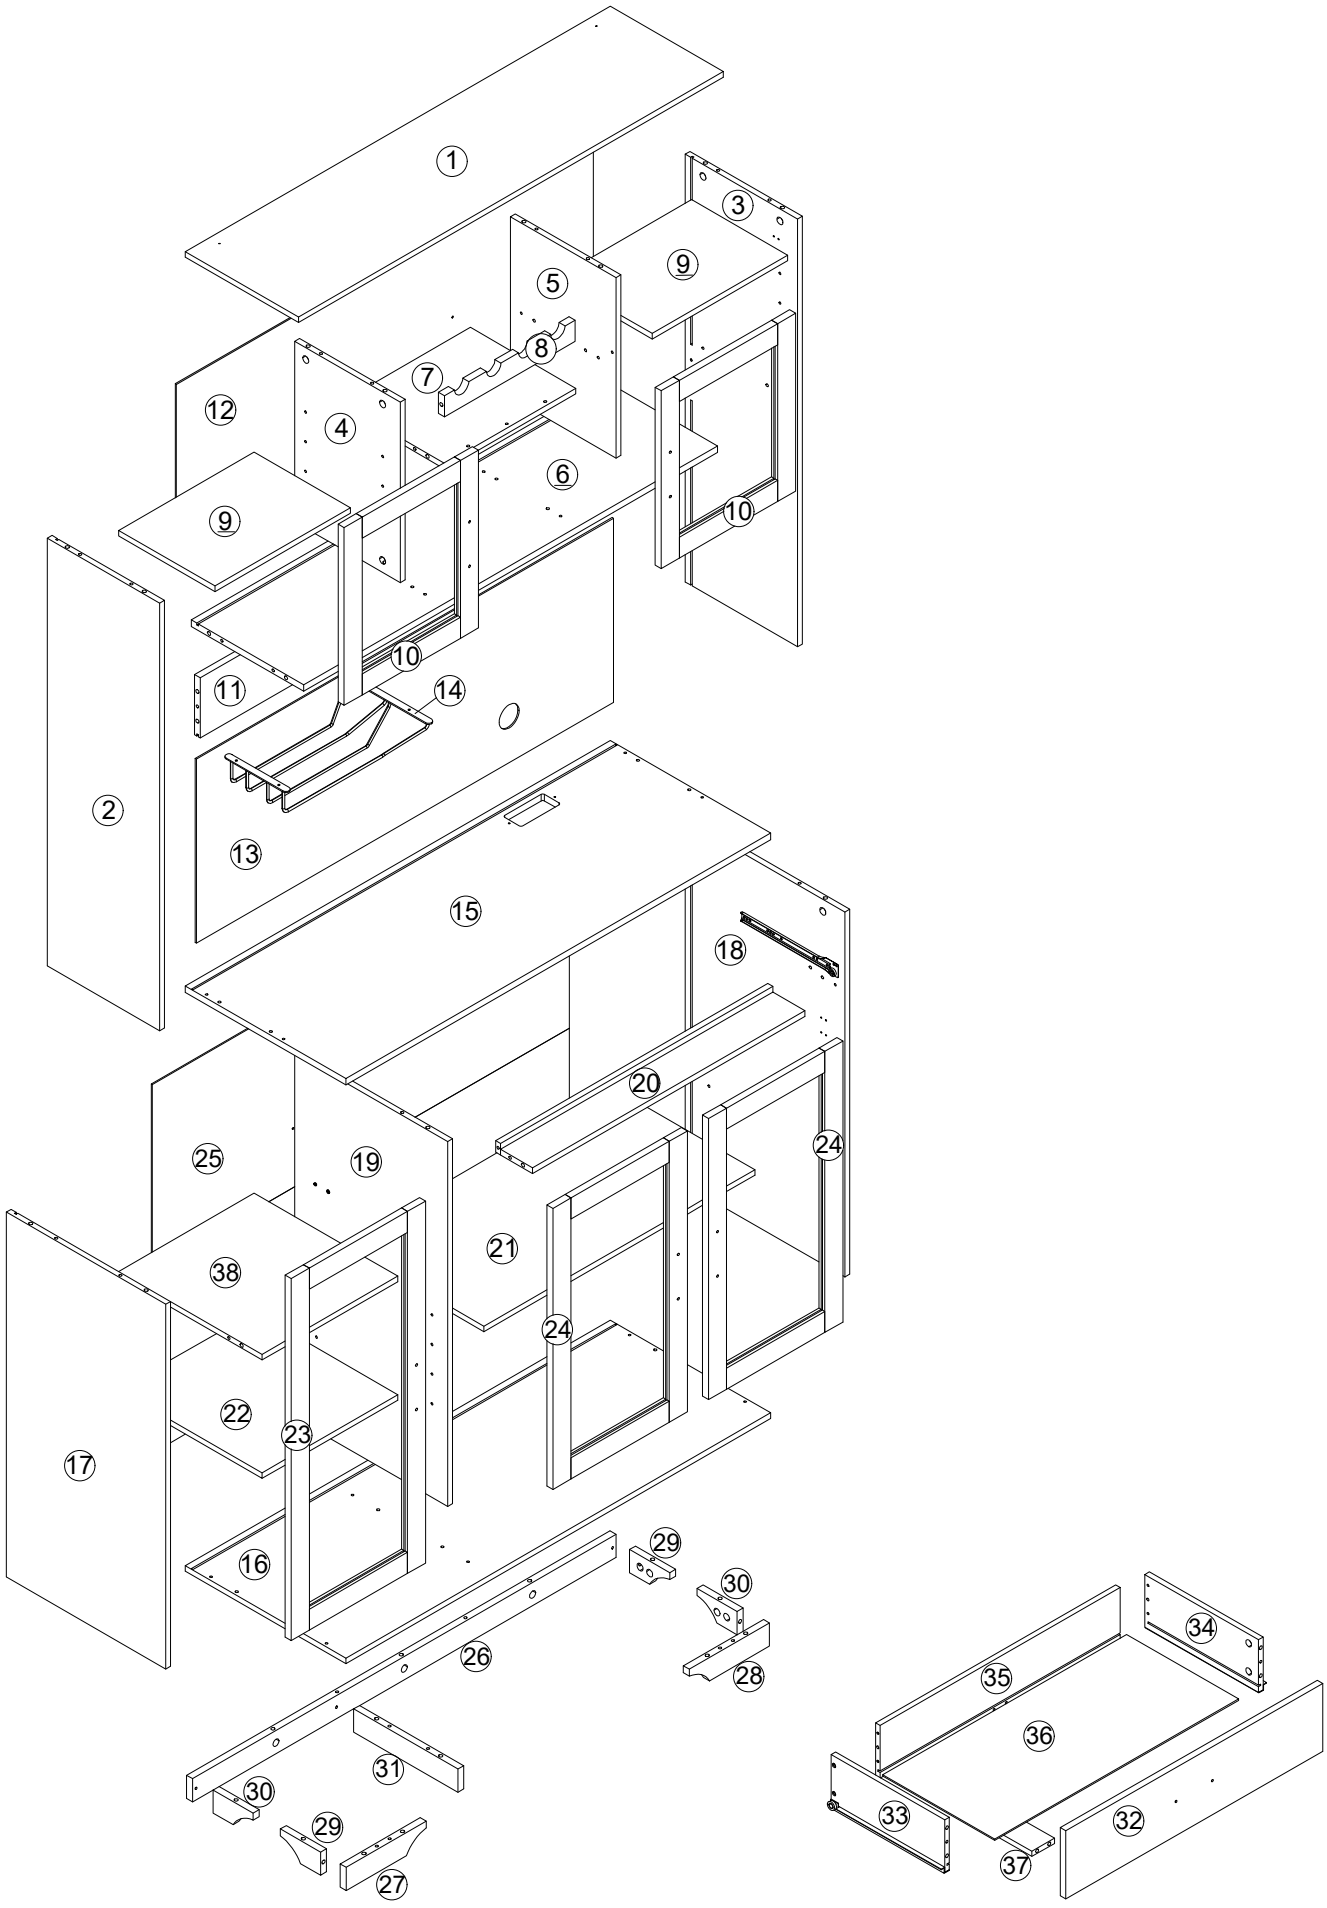


HARDWARE IDENTIFICATION

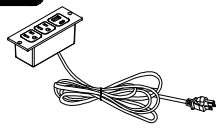A  Glue Qty:1	B  Wooden Dowel Ø6 X 30mm Qty:62	C  Cam Lock Ø15 X 9mm Qty:74	D  Cam Bolt Ø7 X 34mm Qty:74	E  Handan Qty:6
F  Handle Bolt Ø5/32X20mm Qty:12	G  Wood Screw Ø3 X 14mm Qty:8	H  Wooden Door Stop Qty:4	I  Wood Screw Ø4*30mm Qty:4	J  Wood Screw Ø3 X 16mm Qty:36
K  Plastic Wedge Qty:36	L  Wood Screw Ø3.5 X 14mm Qty:4	M  Shelf Support Qty:16	N  Hinge Ø26mm Qty:10	O  Wood Screw Ø3.5 X12X 7mm Qty:60
P  USB Lnterface Qty:1	Q  Wood Screw Ø3 X 12 X 6mm Qty:2	R  Wood Screw Ø4*40mm Qty:4	S  Wood Screw Ø3.5 X 16mm Qty:4	

WALL MOUNTING KIT


T  Wall Bracket Qty:2	U  Wall Anchor Qty:2	V  Short screw Ø4 X 12mm Qty:2	W  Long screw Ø4 X 38mm Qty:2	

STEP 1

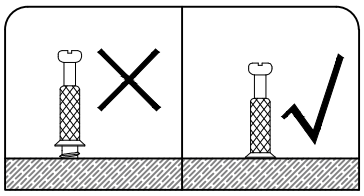



B 4 x

D 7 x

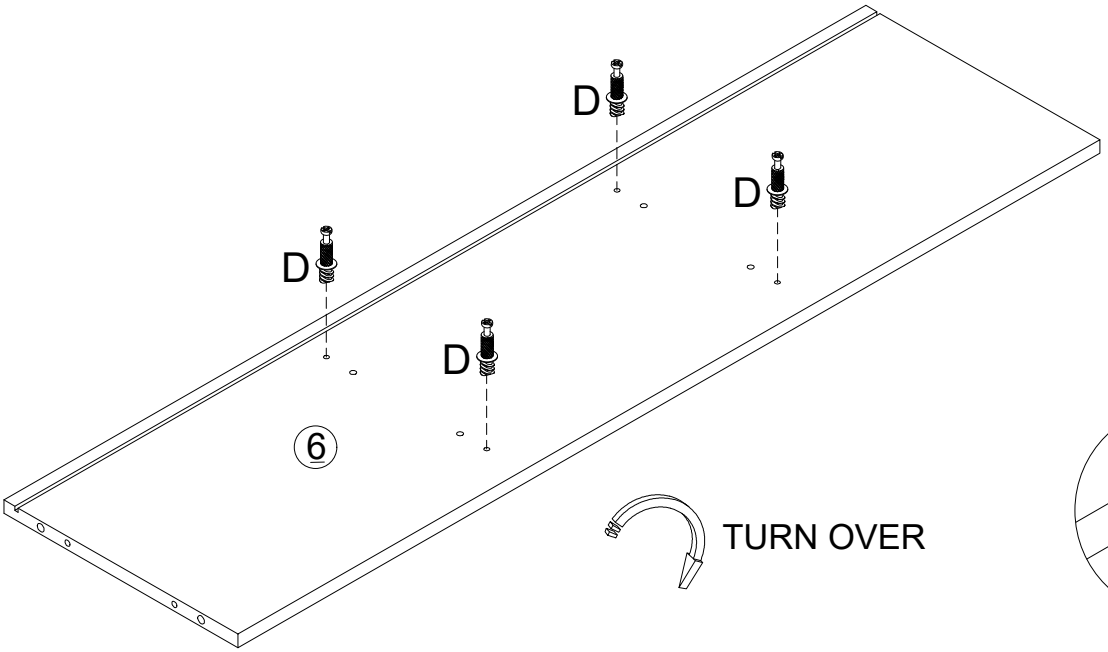


TURN OVER

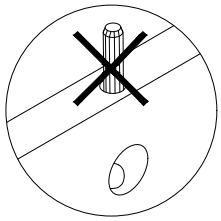


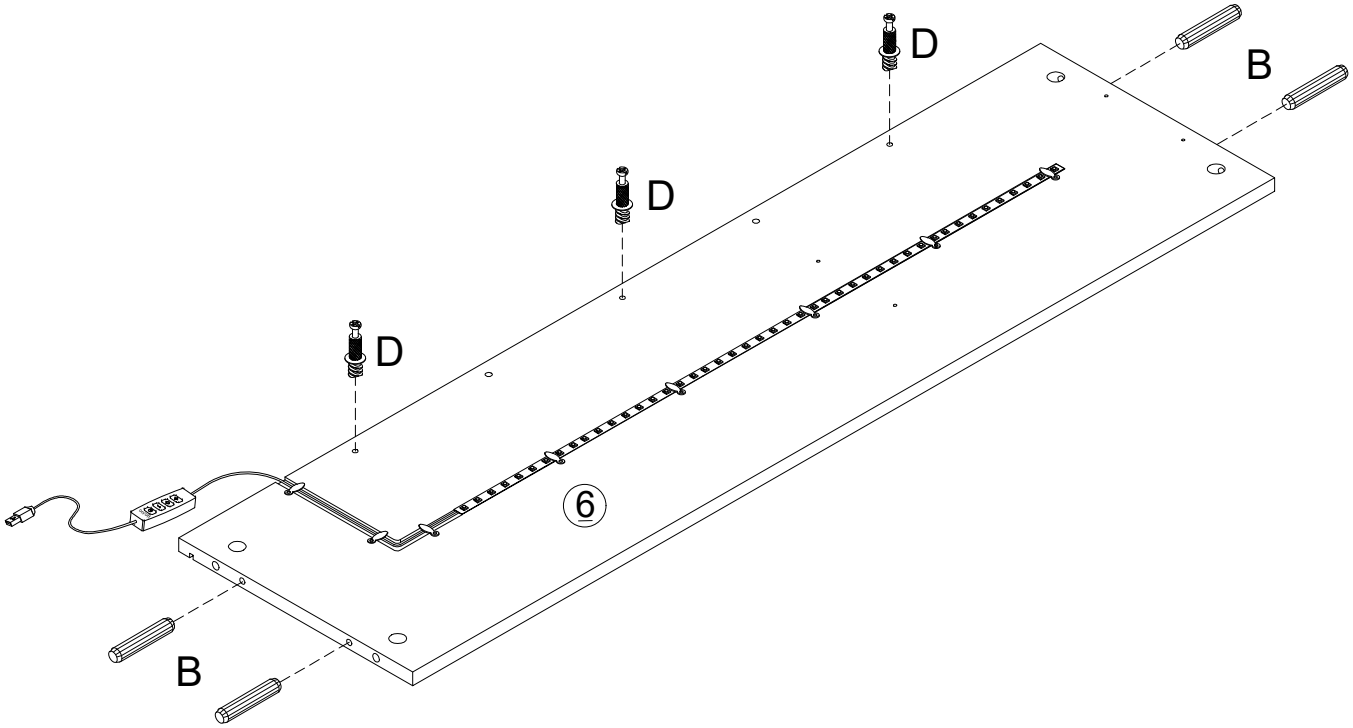

STEP 2


B
4 x

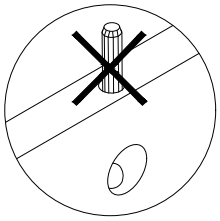

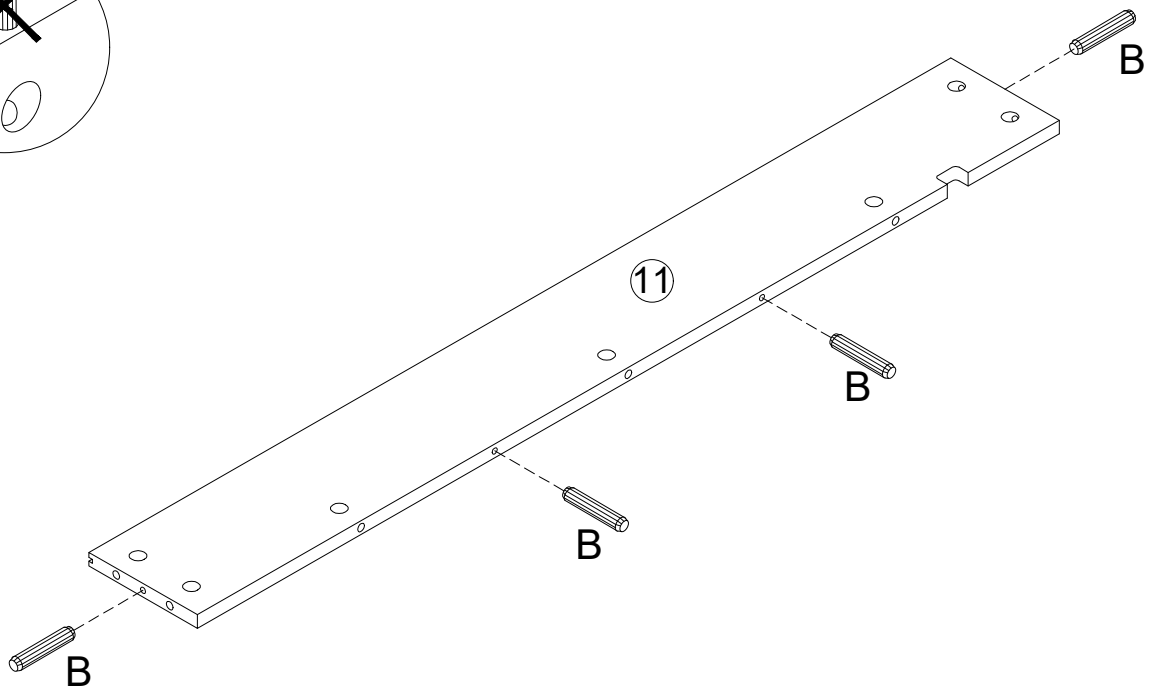


STEP 3

C
3 x

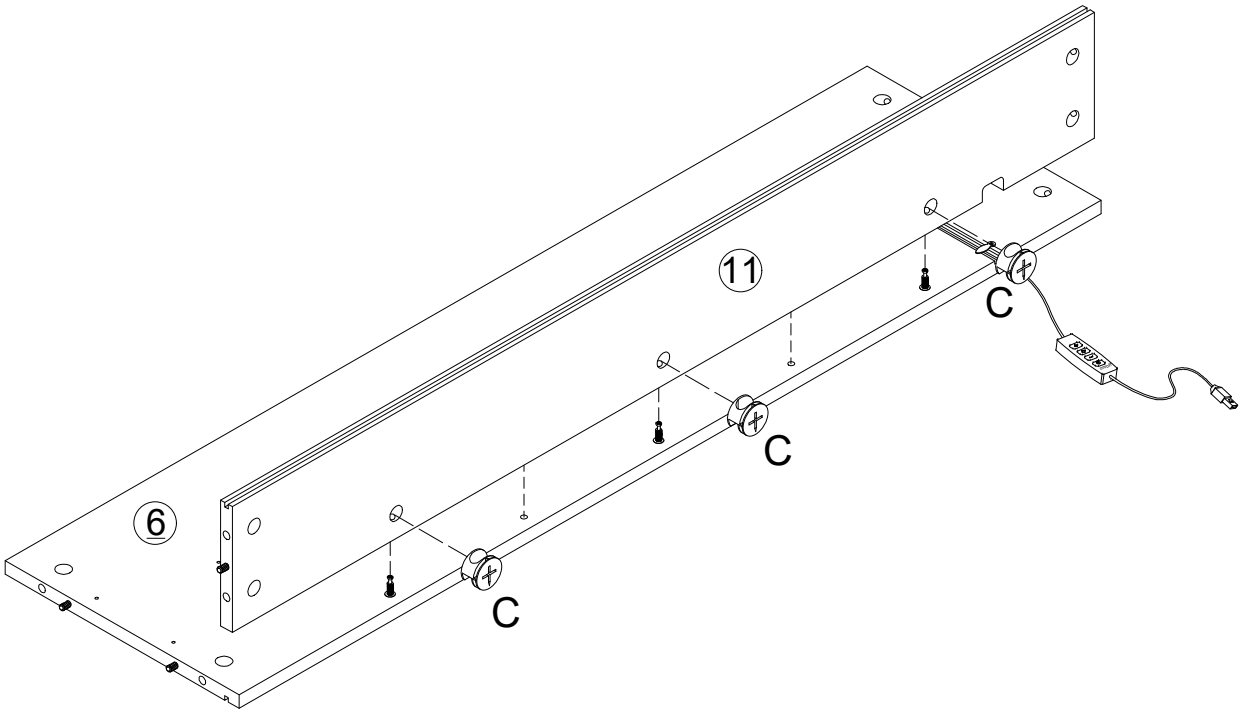

STEP 4

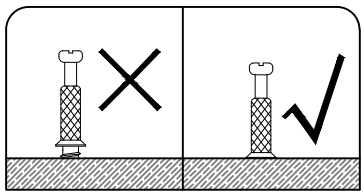


B 8 x




D 8 x



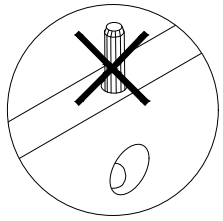


STEP 5


C 4 x

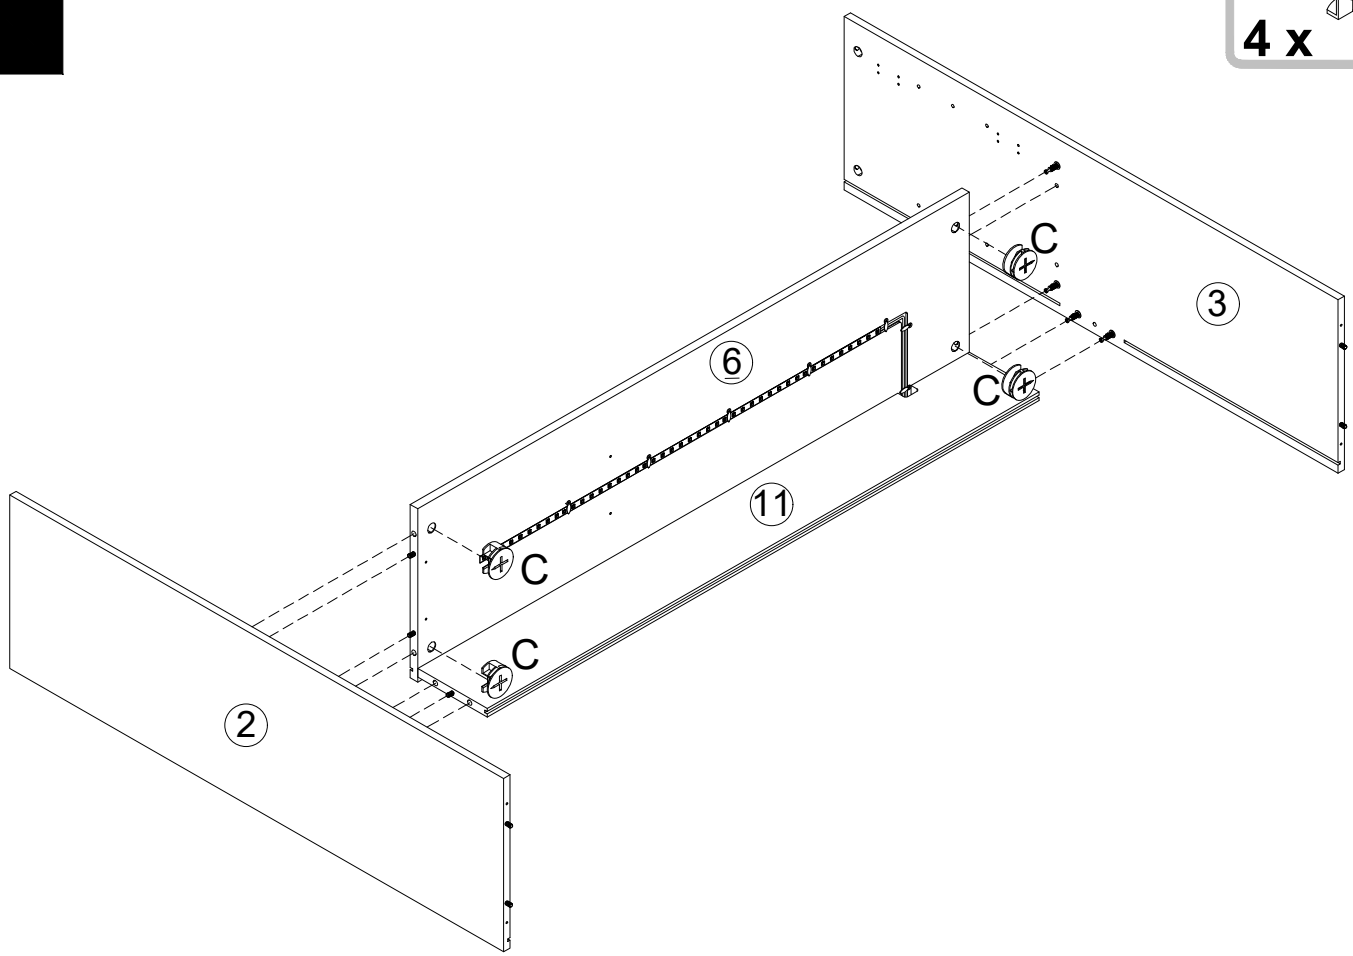

STEP 6

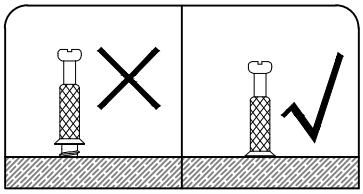



B 8 x

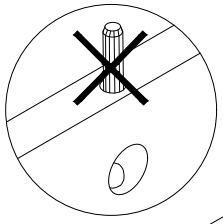


TURN OVER

D 6 x

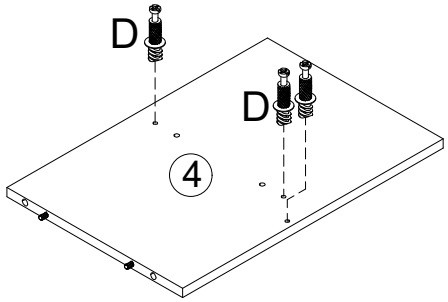


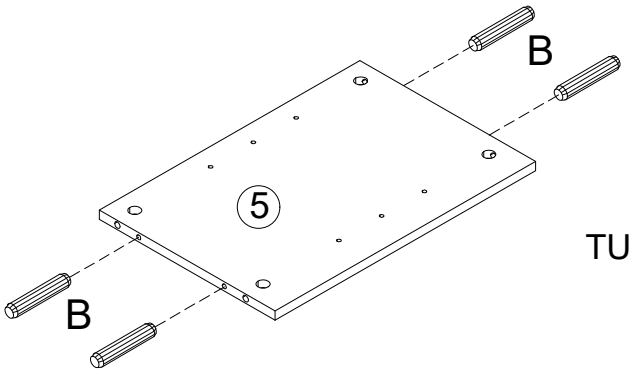


TURN OVER

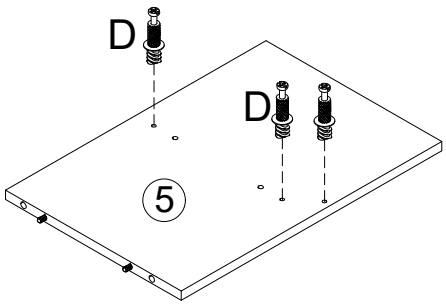


STEP 7

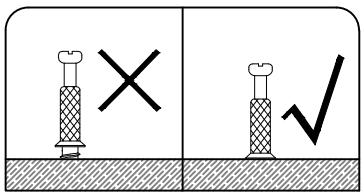

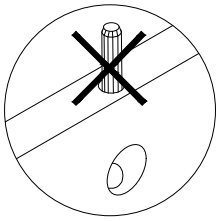



B 6 x

D 1 x

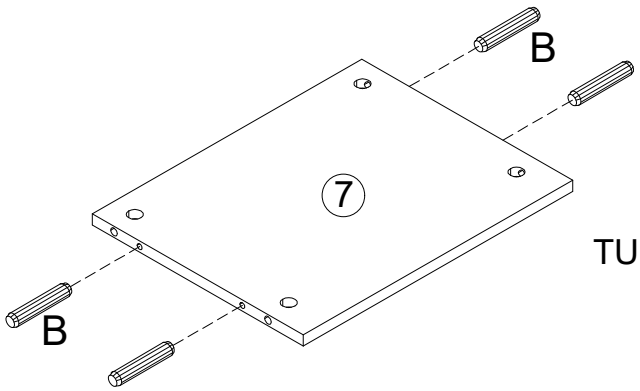

TURN OVER

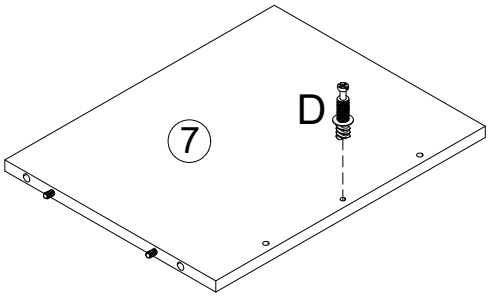


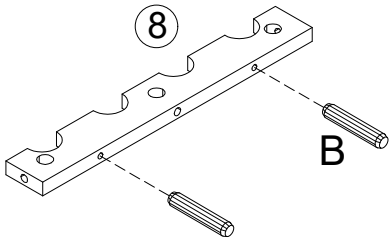

STEP 8

C


1 x

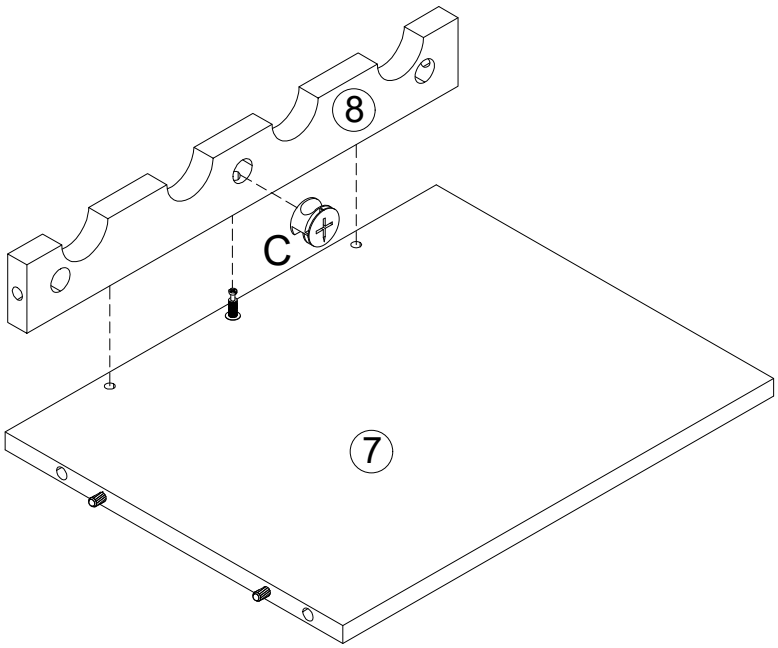

STEP 9

C


6 x

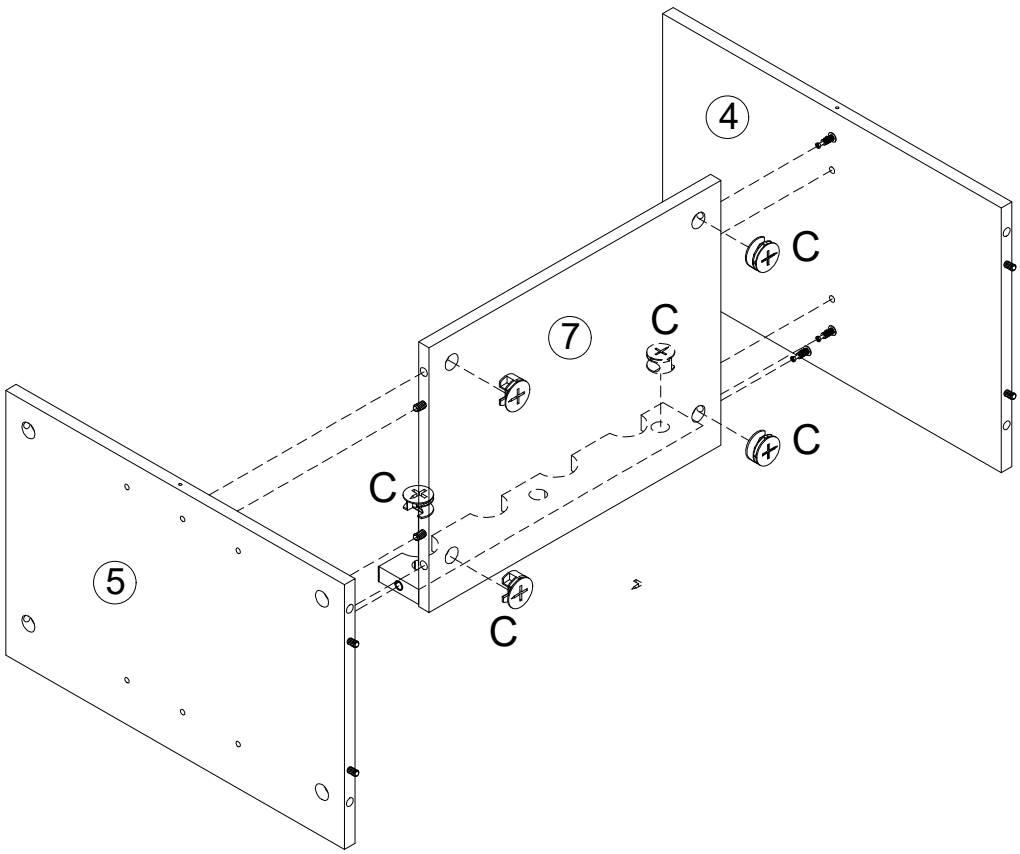

STEP 10


C 4 x


L 4 x

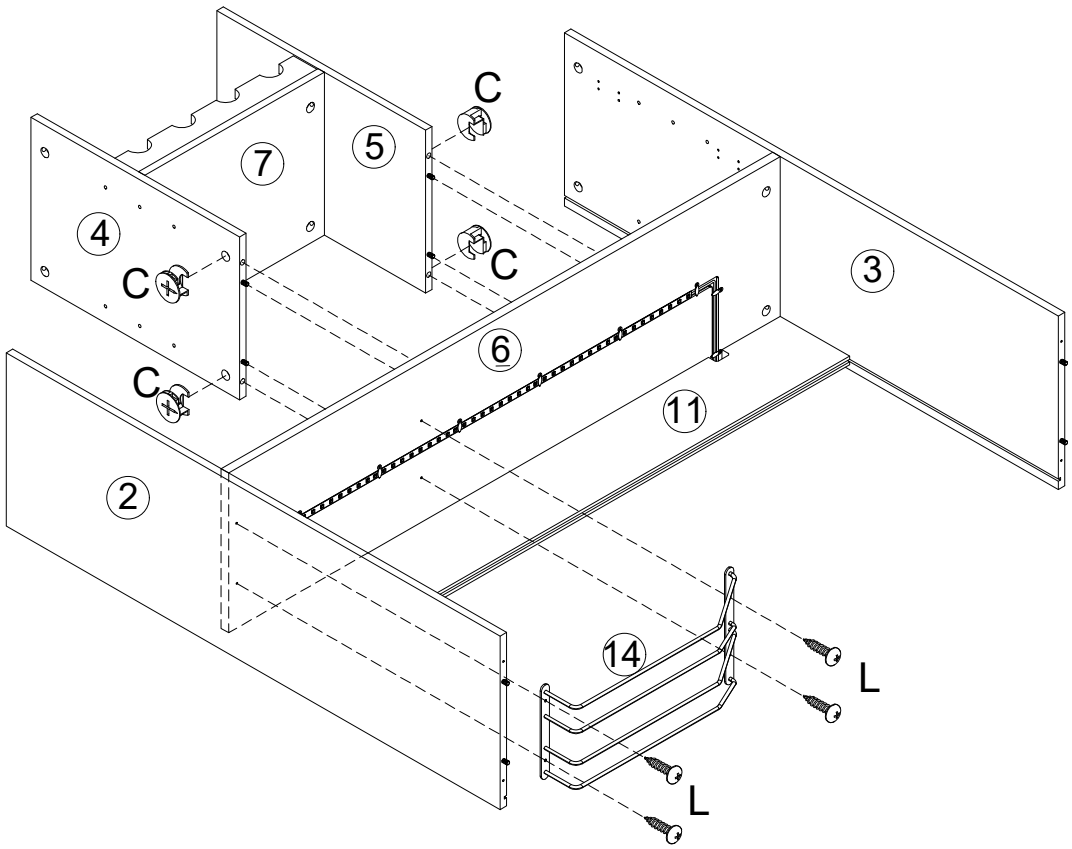


STEP 11

C 4 x

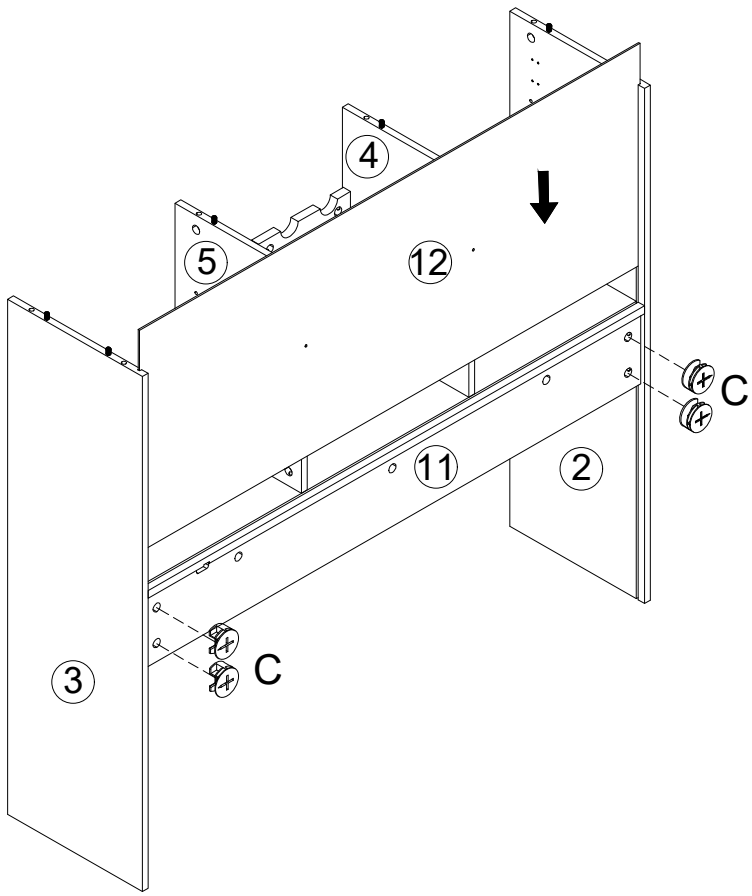


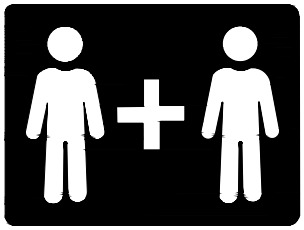

STEP 12

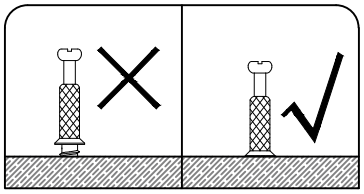


H	G	D
2 x	4 x	8 x

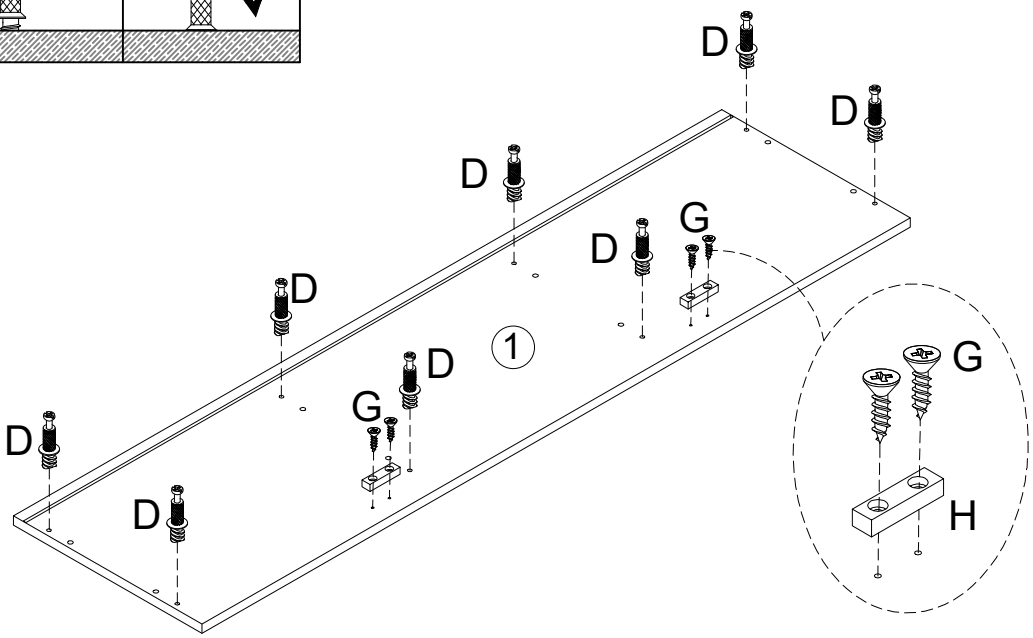


STEP 13


C
8 x

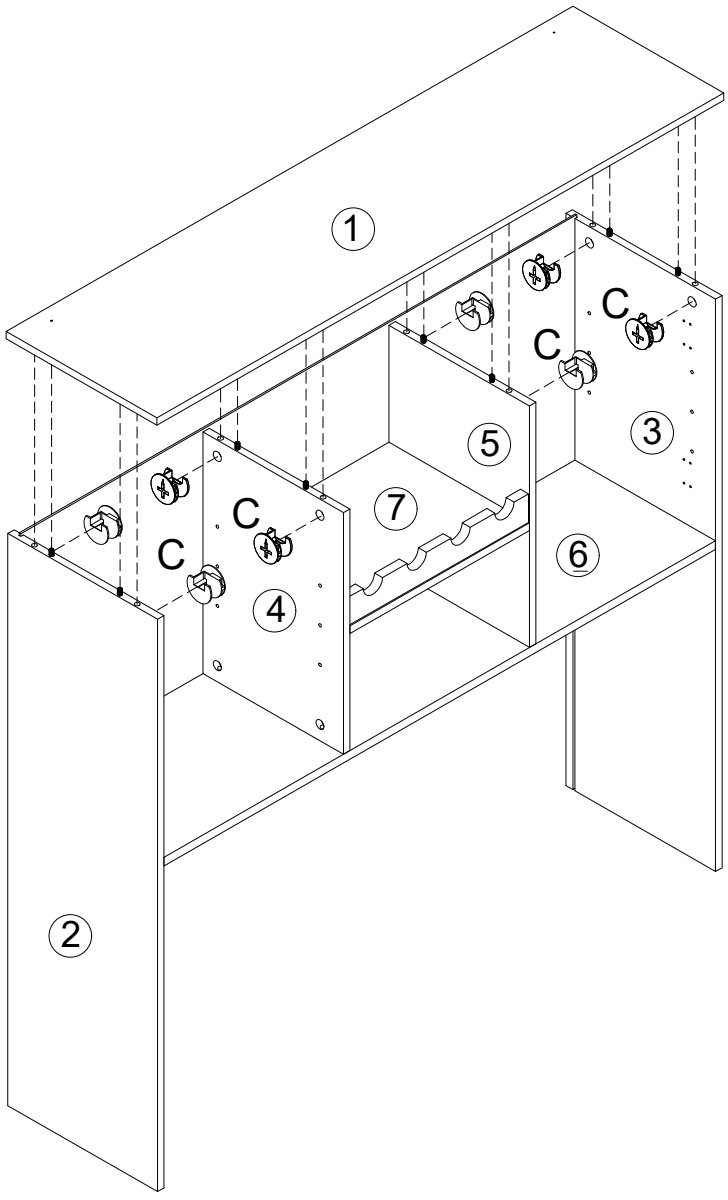


STEP 14

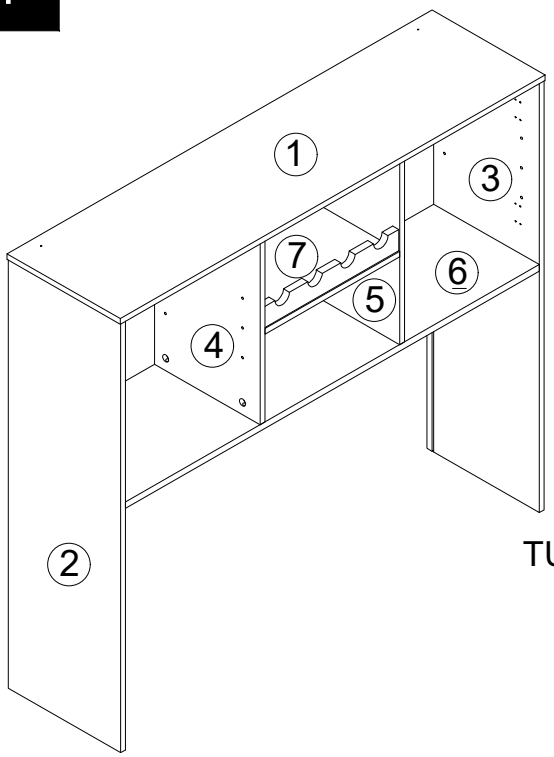


TURN OVER

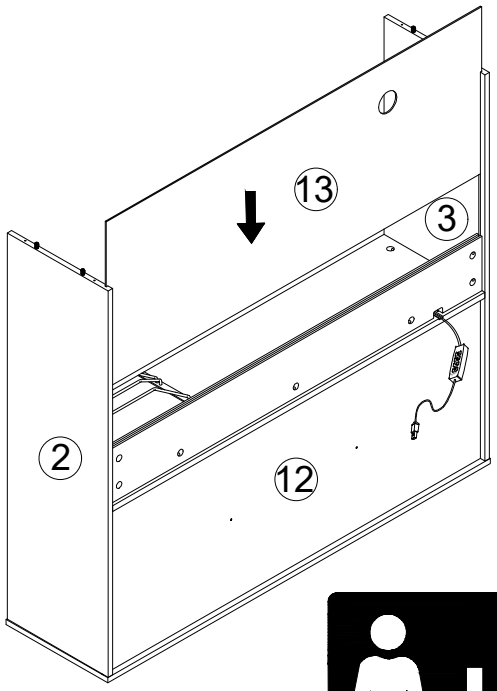


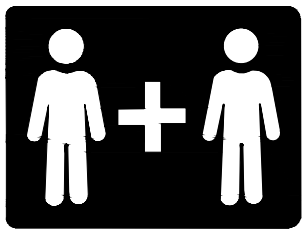


STEP 15

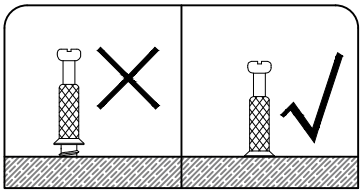

H	G	D
1 x	2 x	6 x

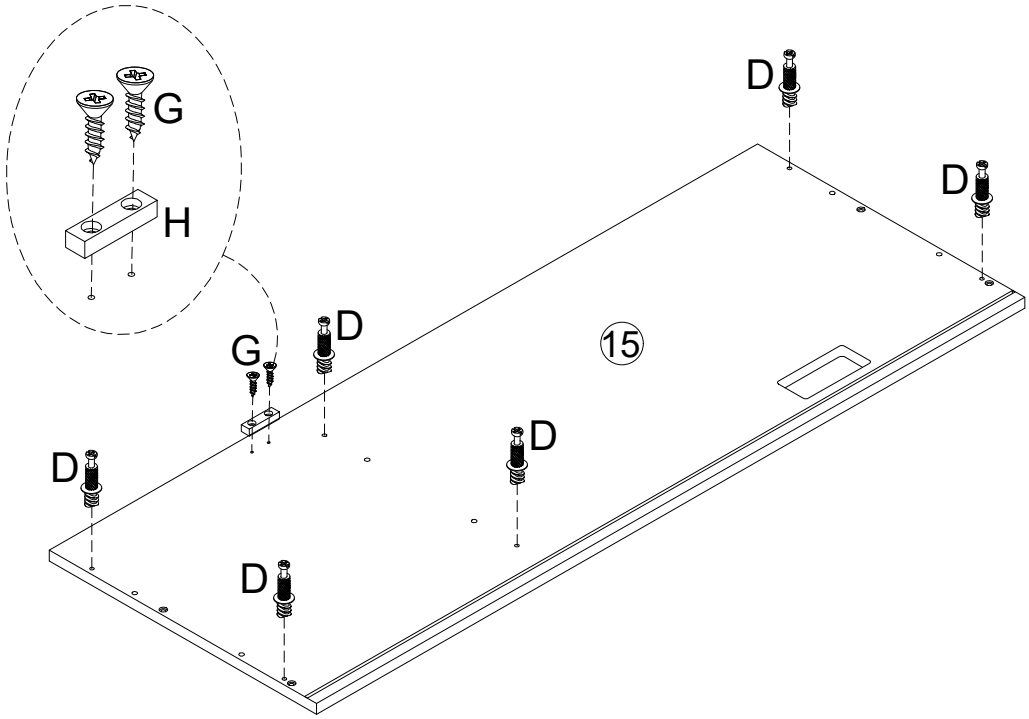


STEP 16

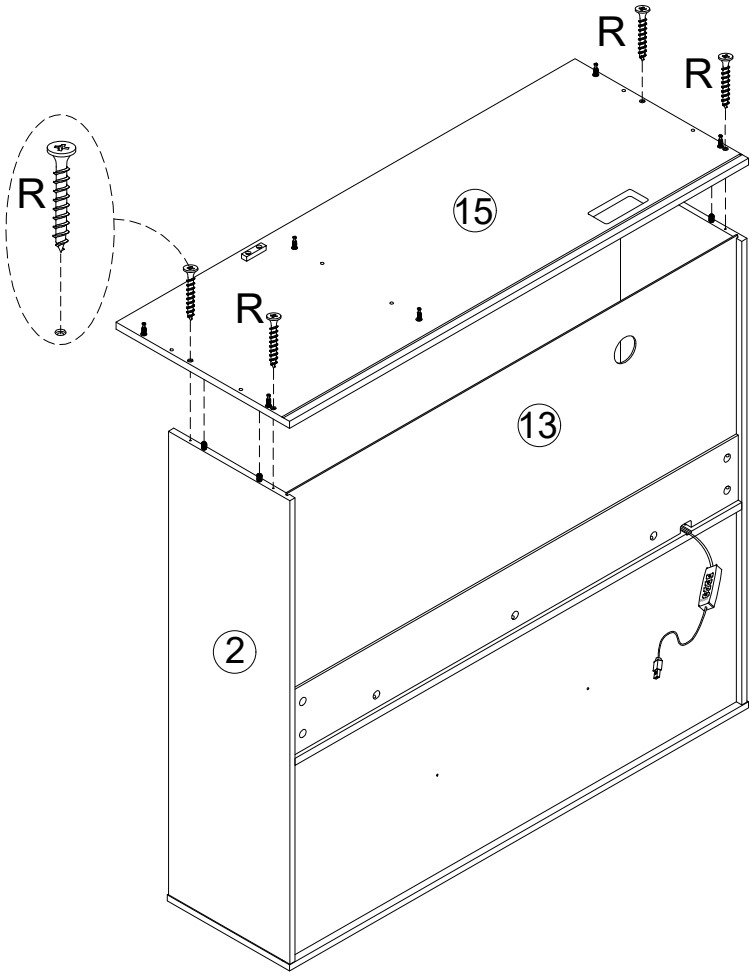


R 4 x

STEP 17

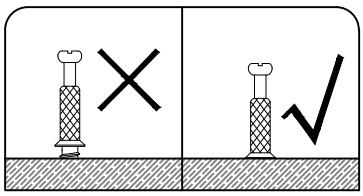


D 5 x

B 8 x

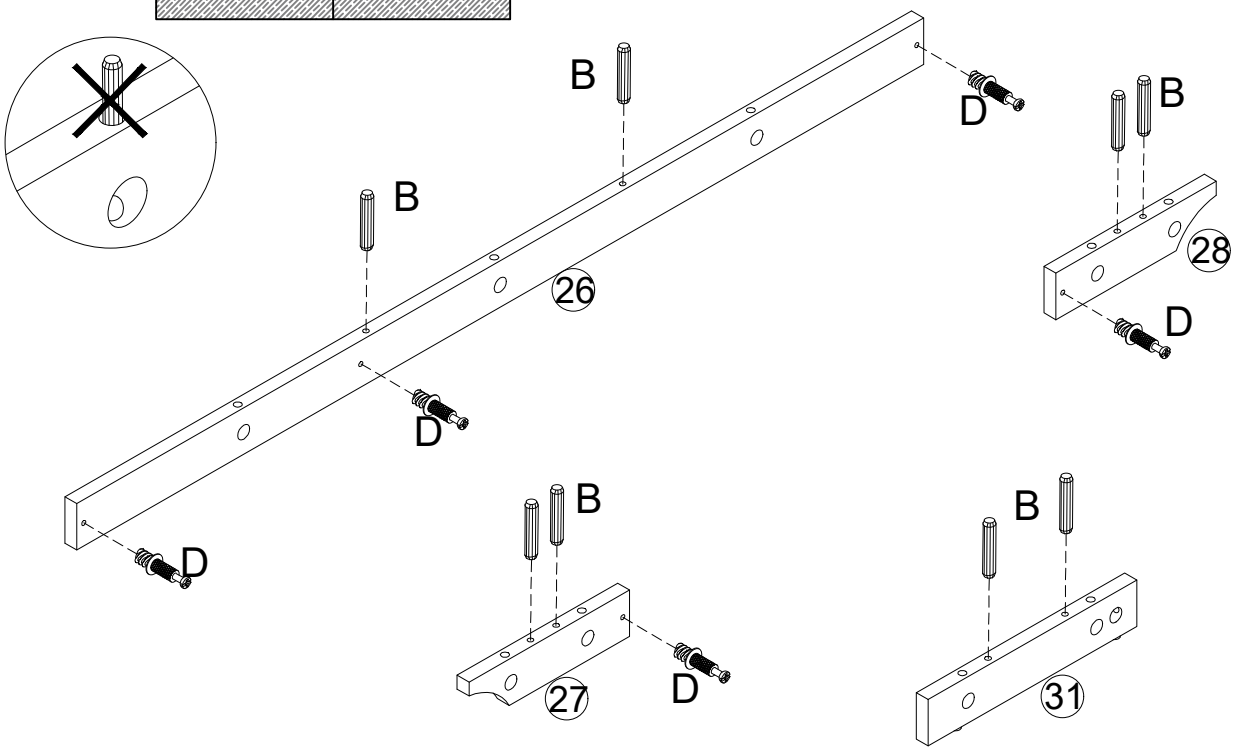


STEP 18

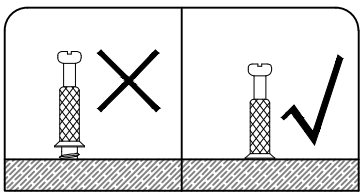


D
19 x

STEP 19


C
5 x

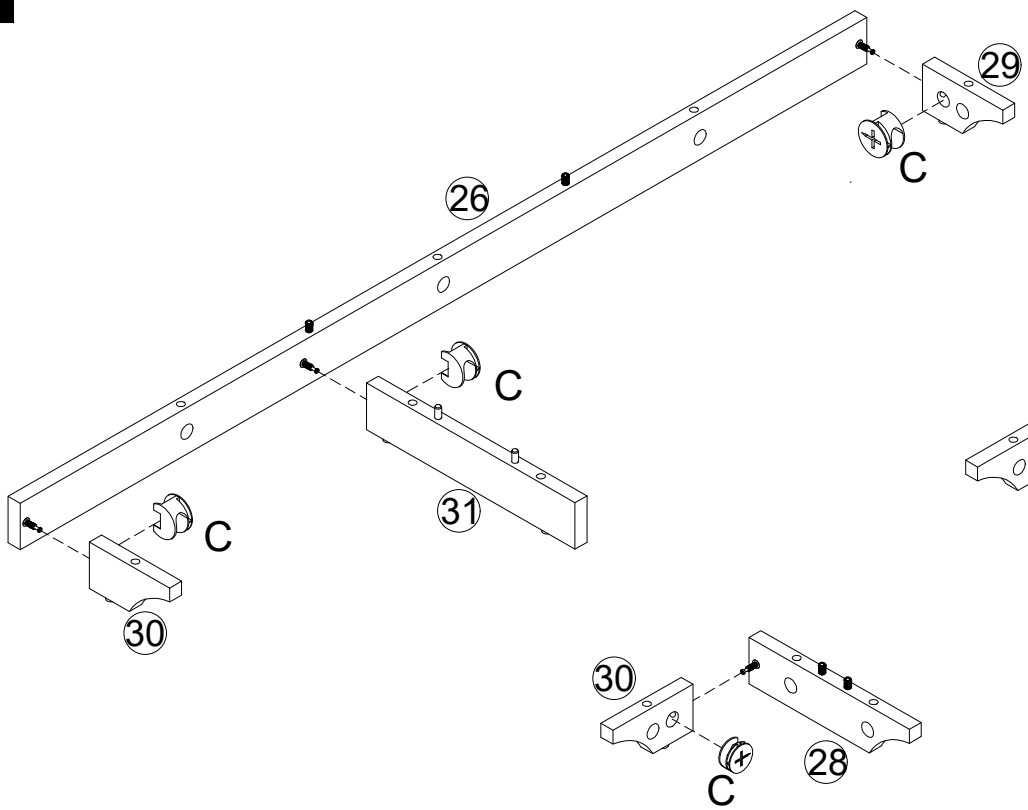

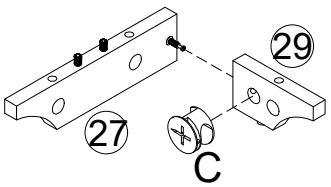

STEP 20


C 13 x

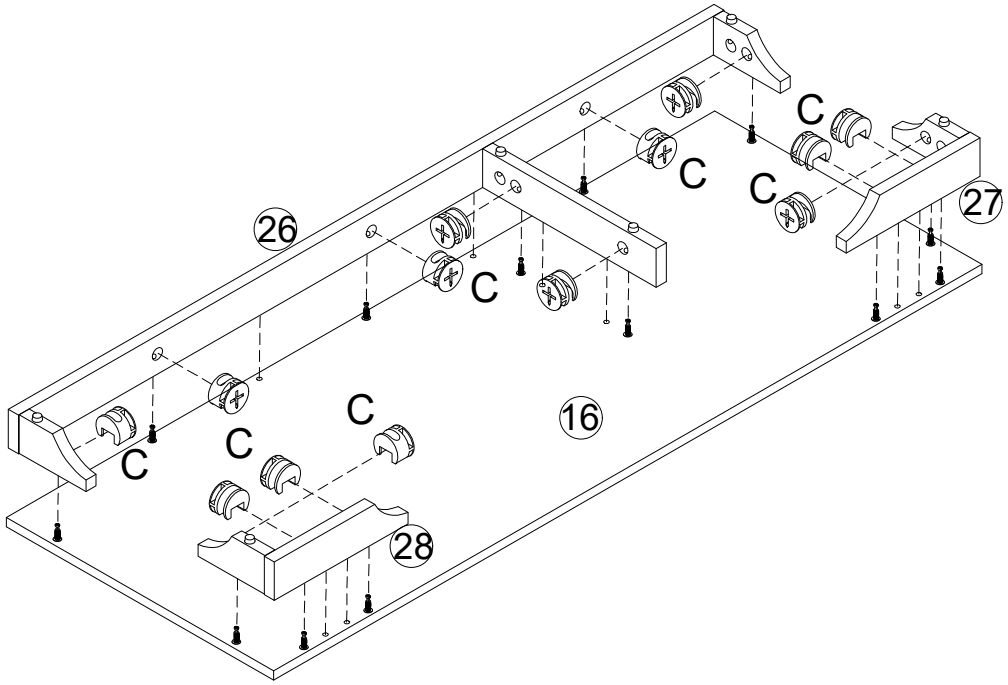

STEP 21

D 3 x


B 8 x

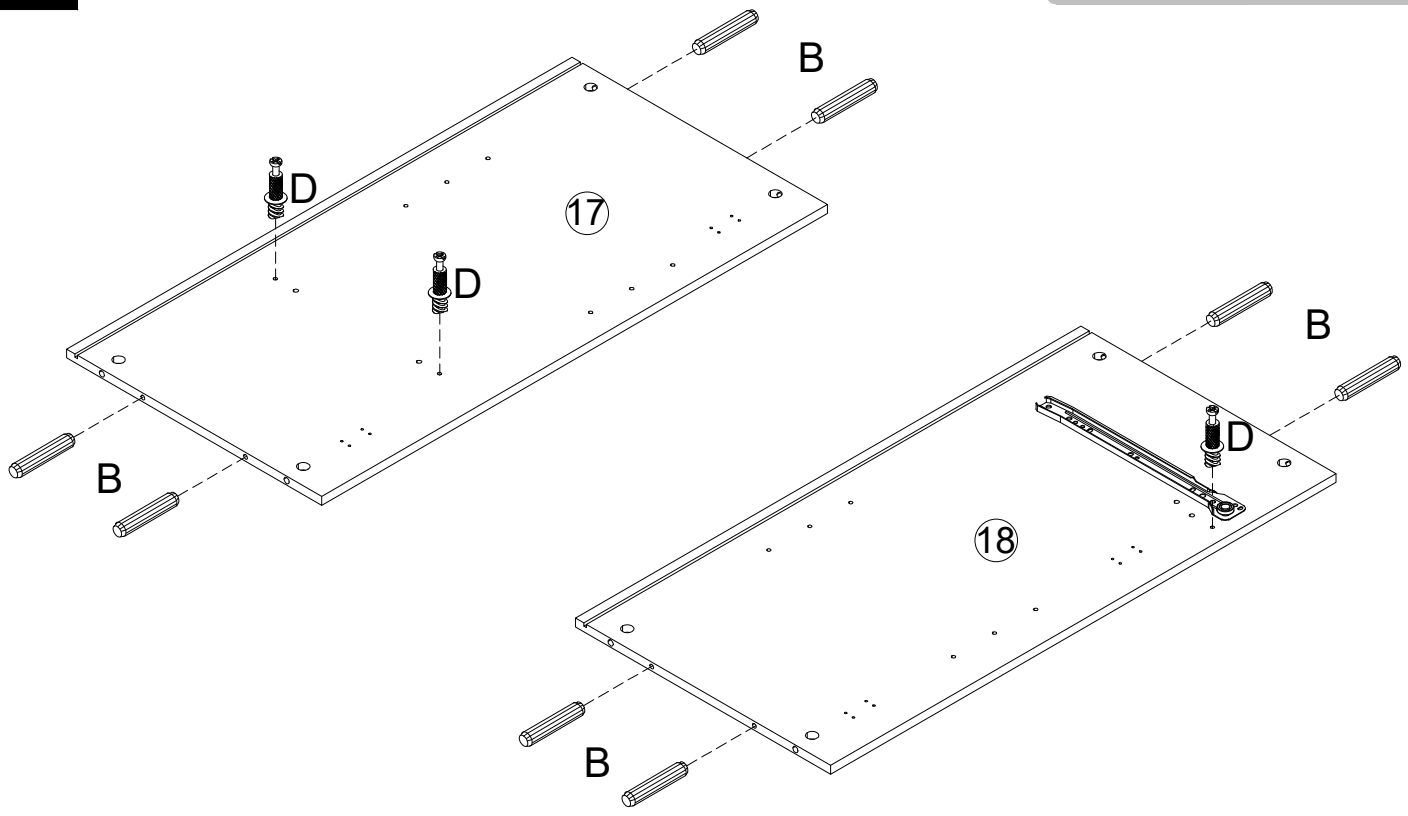

STEP 22

B 4 x

D 3 x

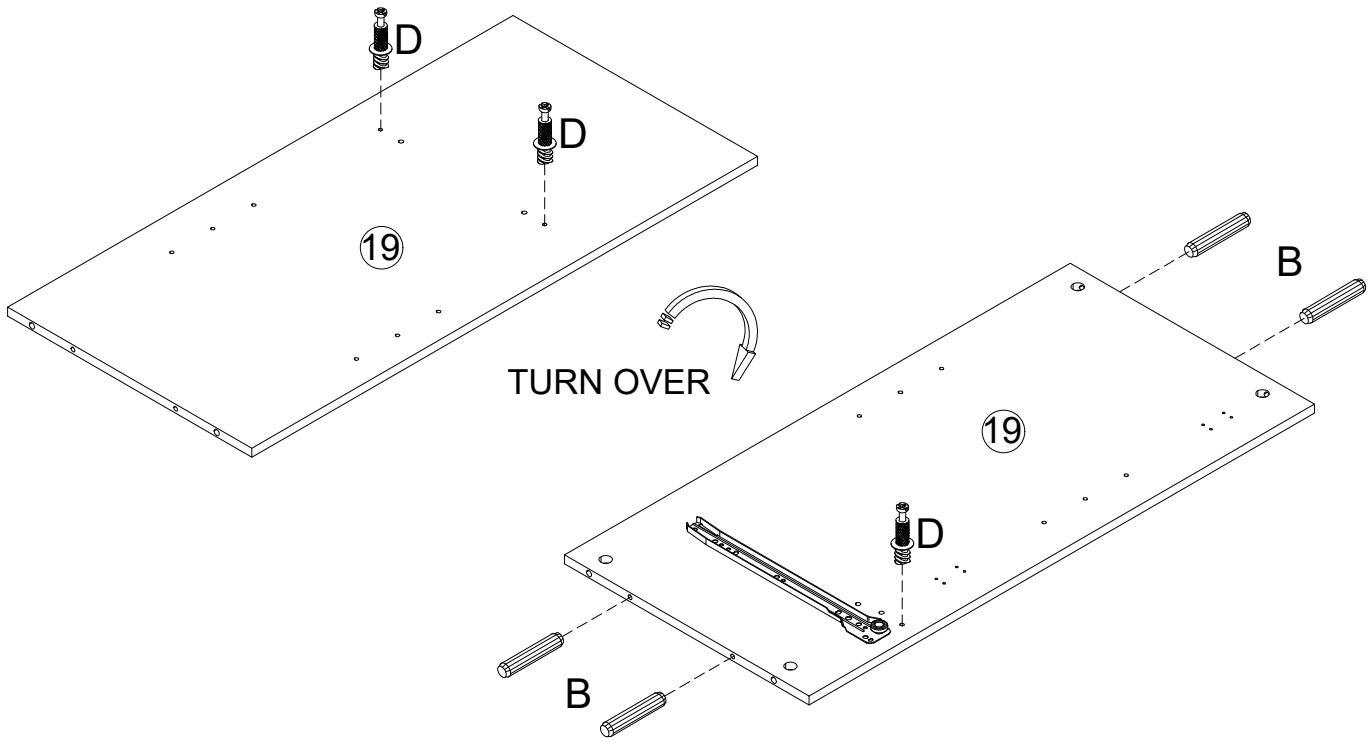


STEP 23

H 1 x


G 2 x

B 8 x

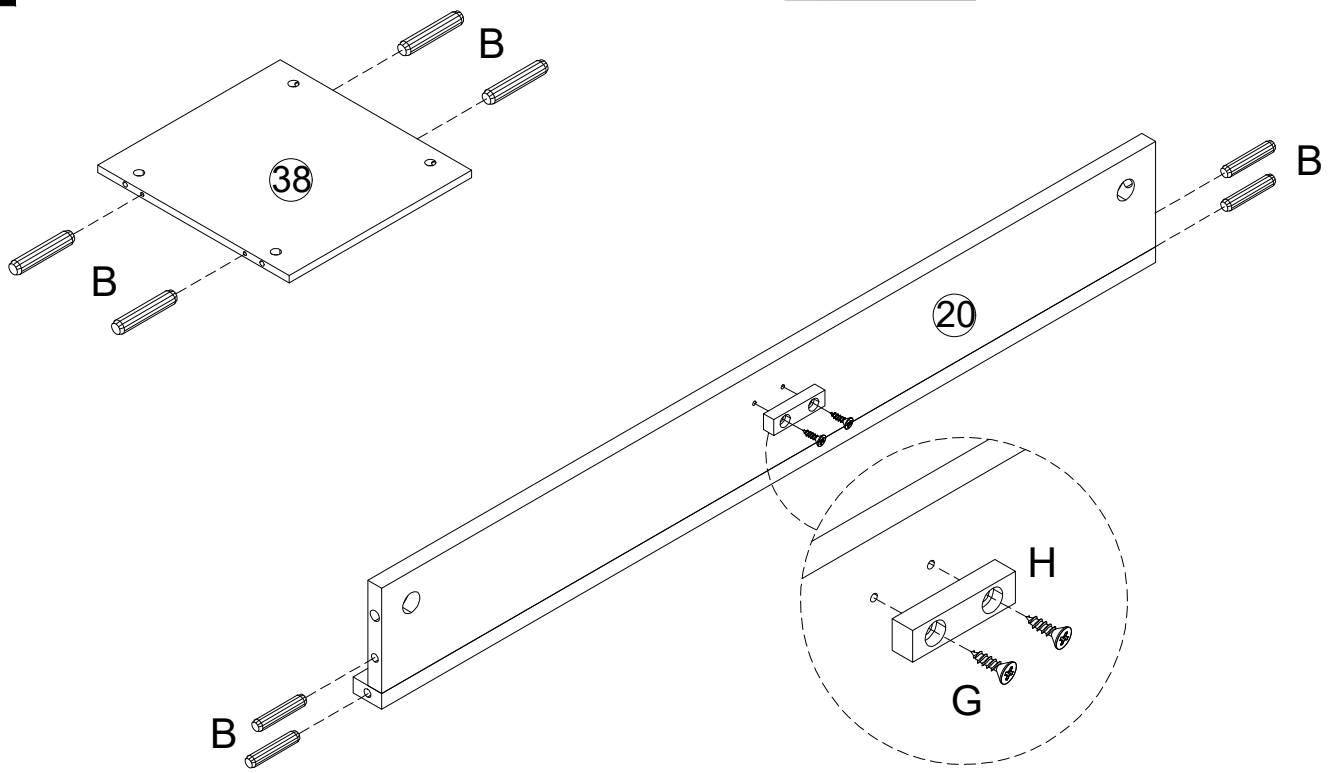

STEP
24


C
4 x

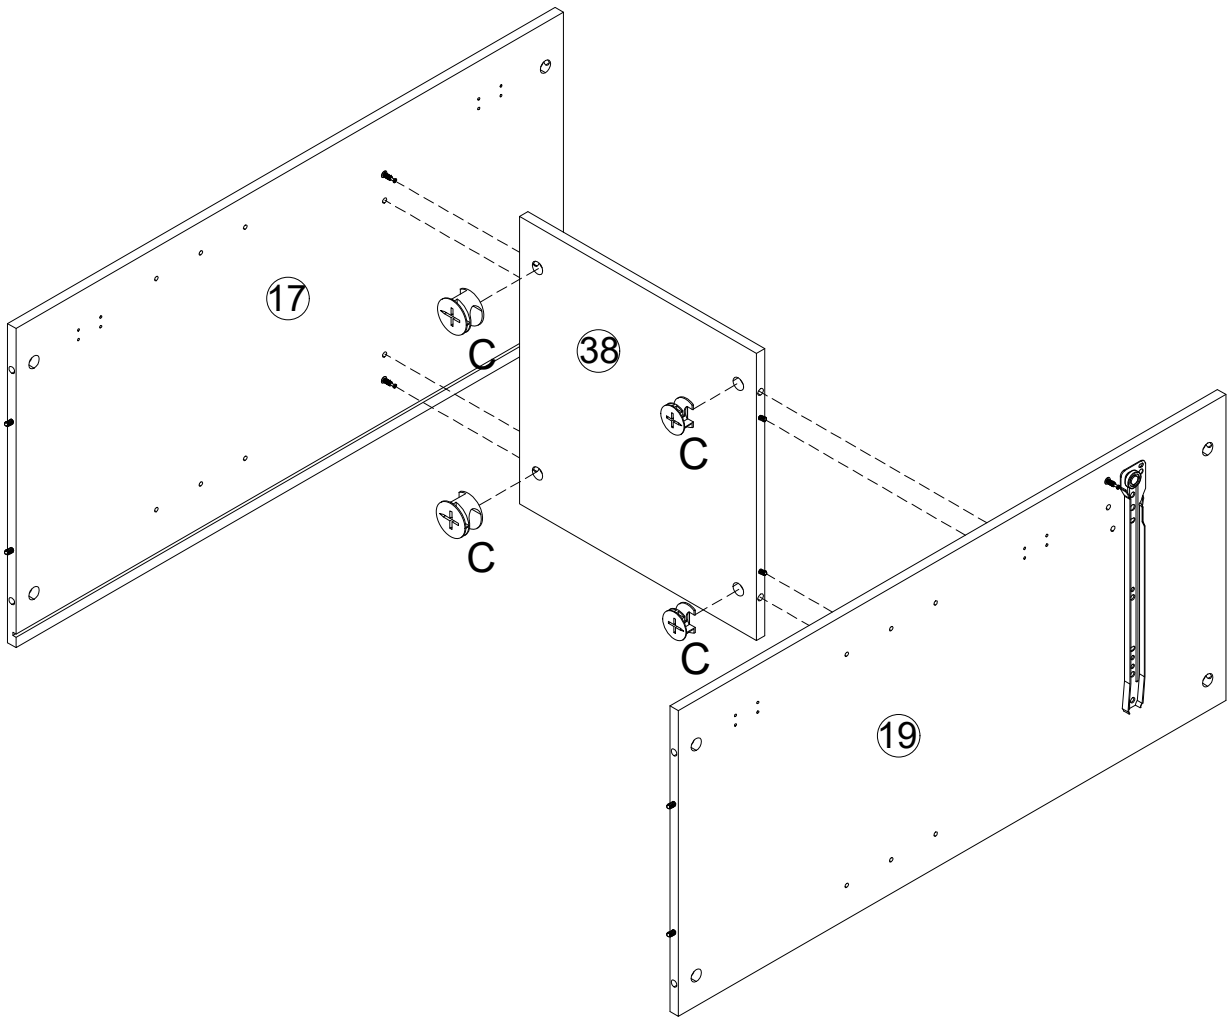

STEP 25

C


2 x

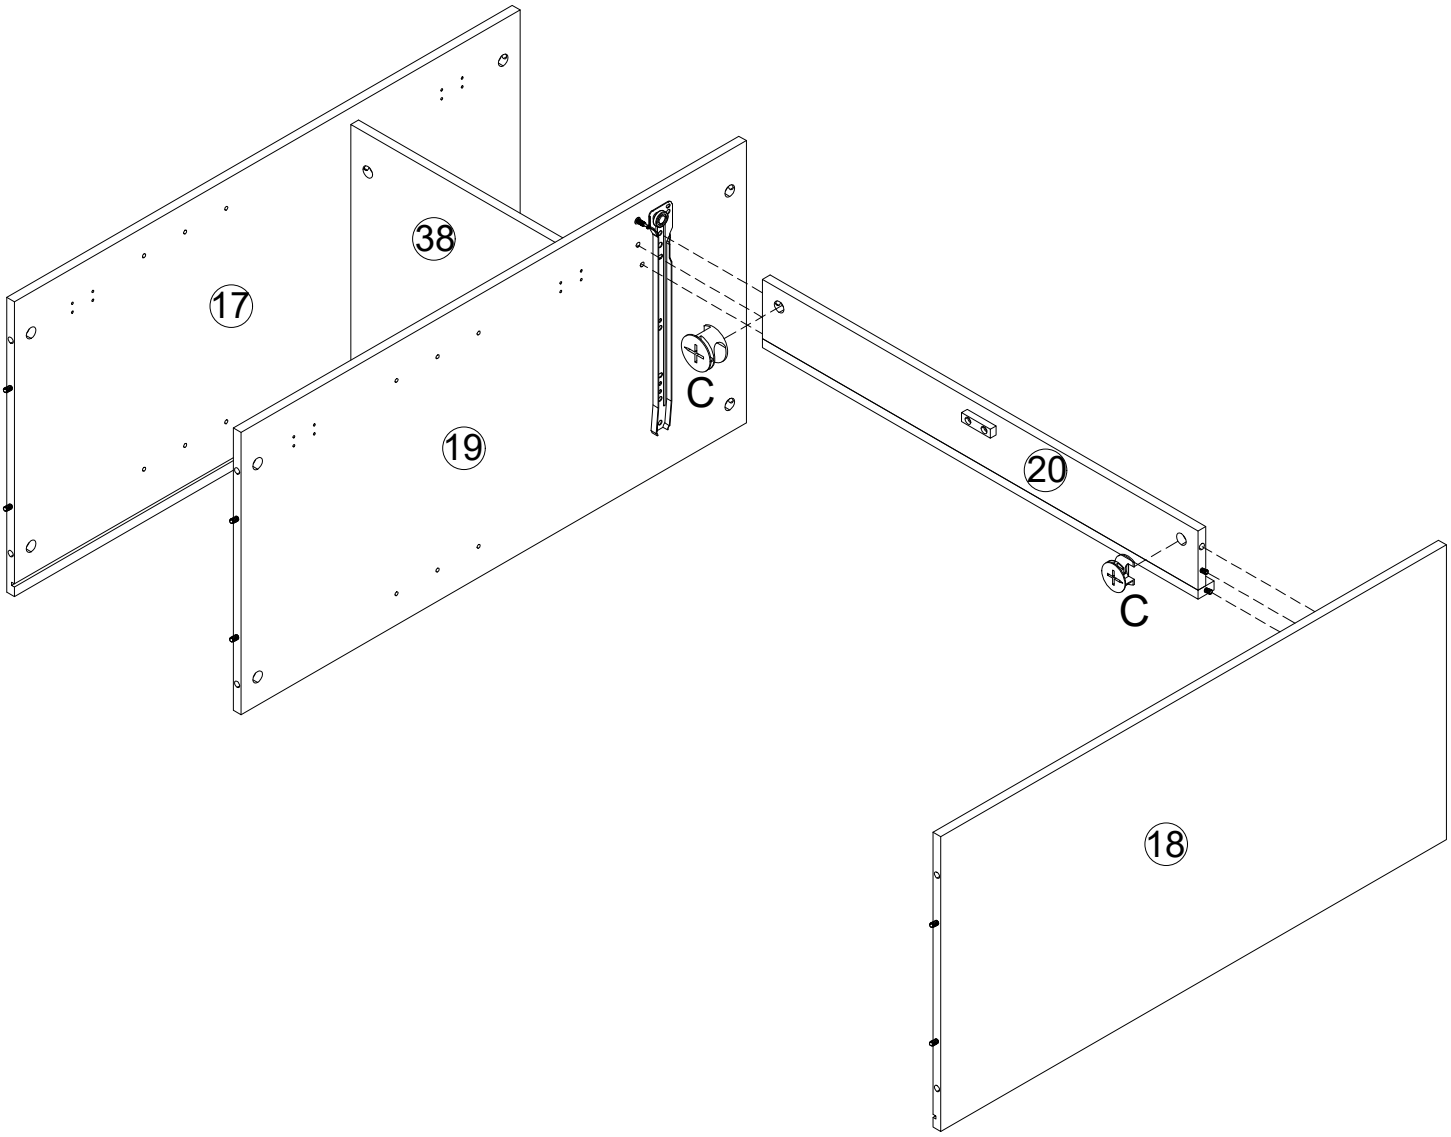


STEP 26


C

6 x

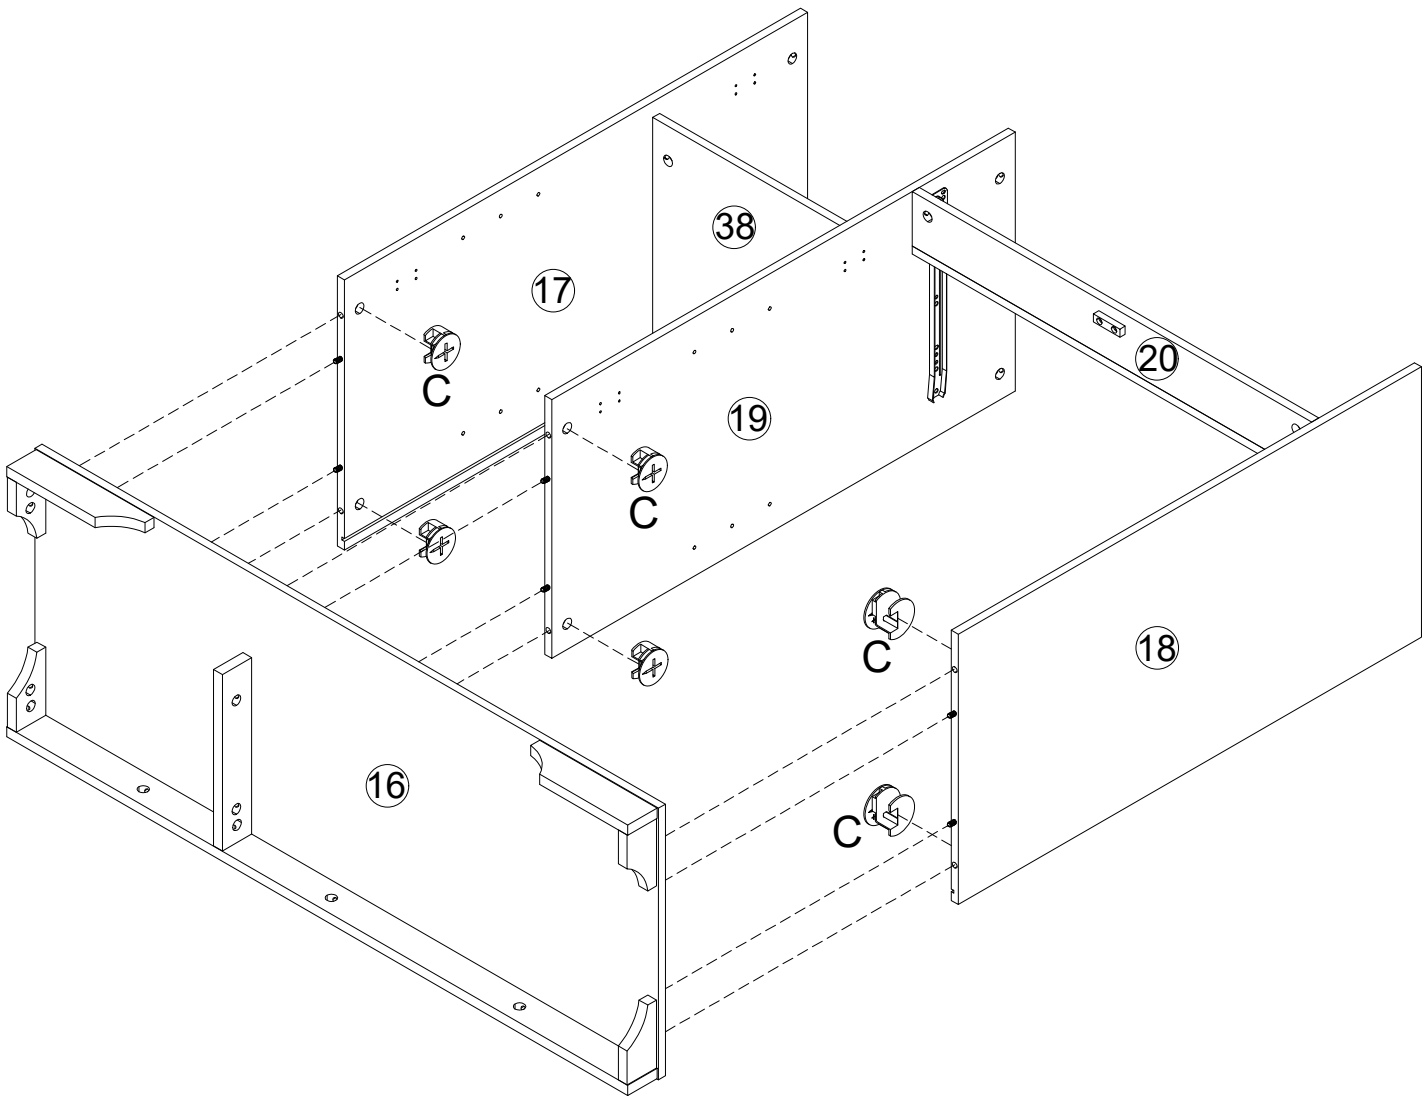


STEP
27

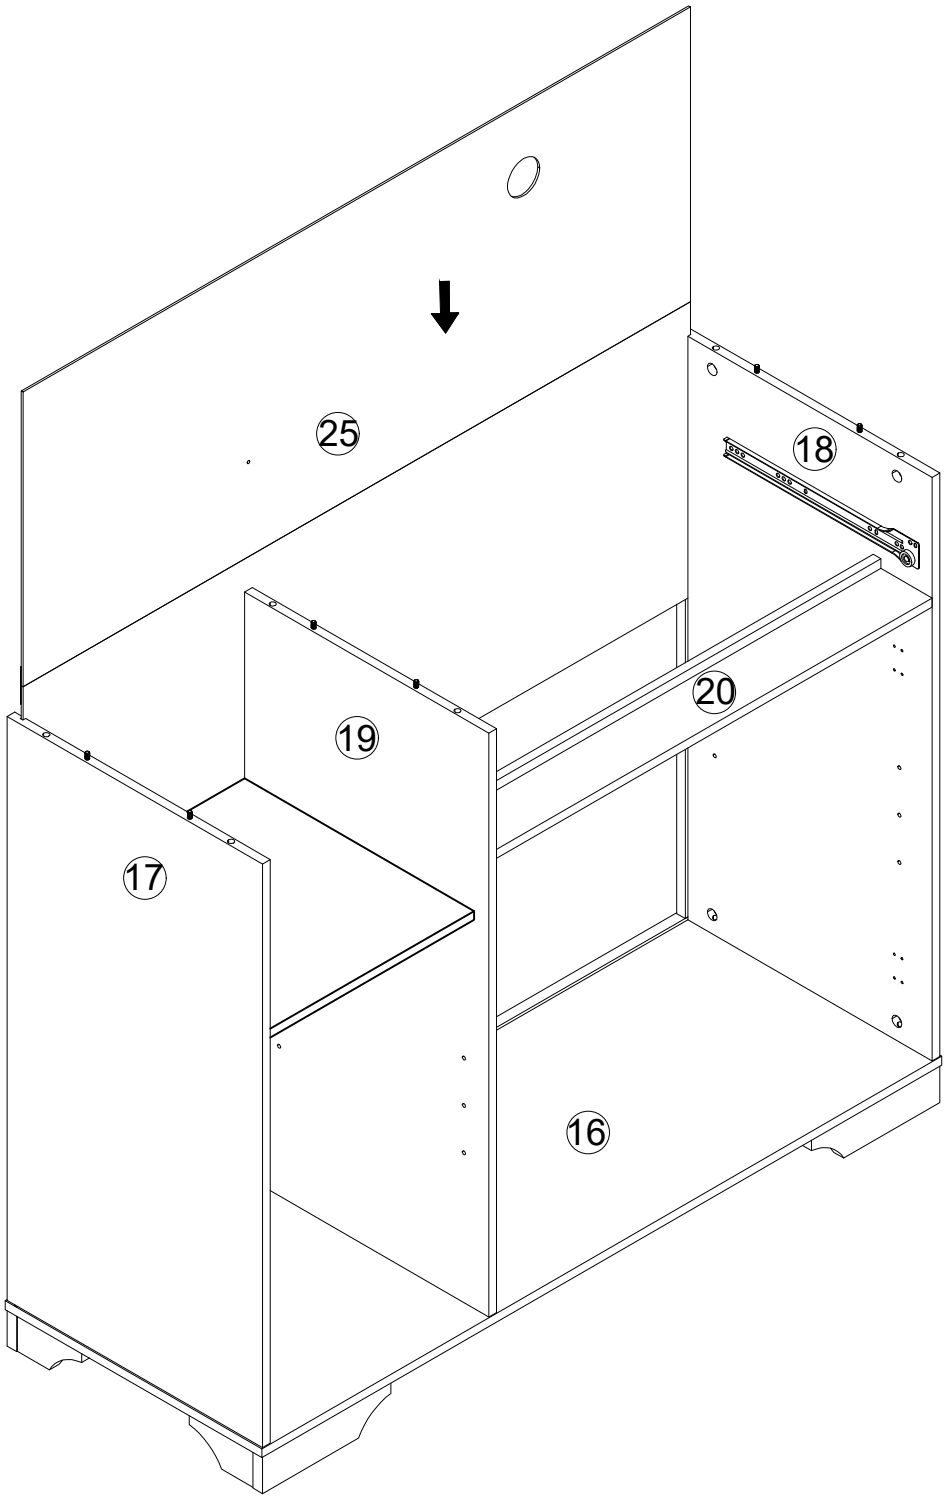

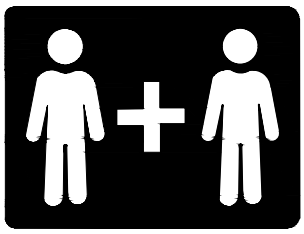

STEP
28


C
6 x

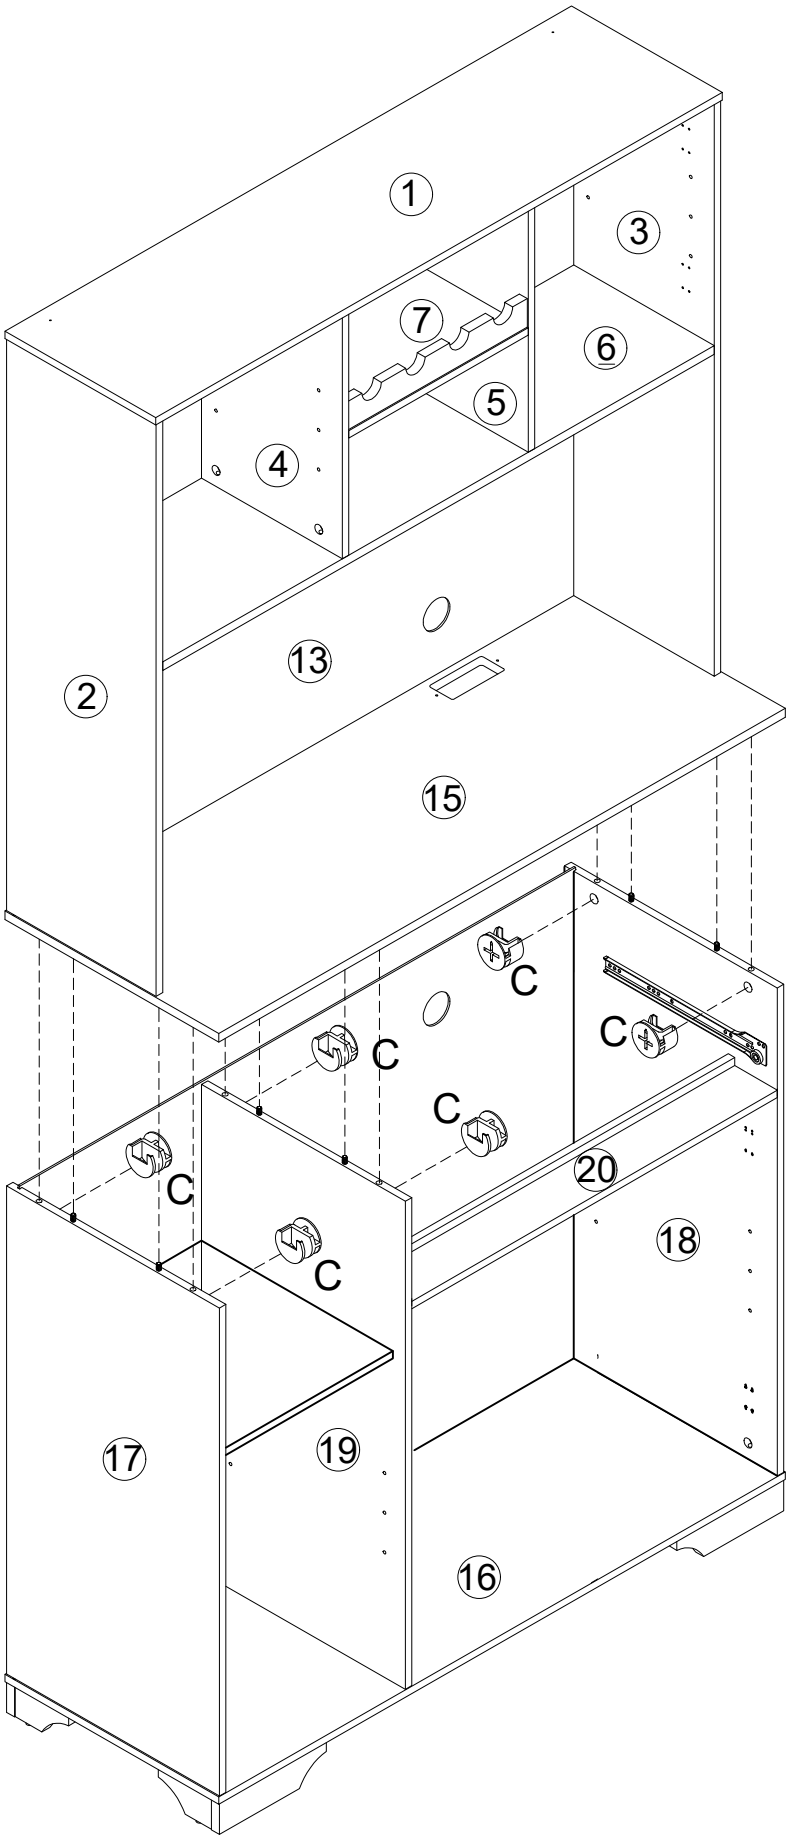

STEP 29


Q 2 x

P 1 x

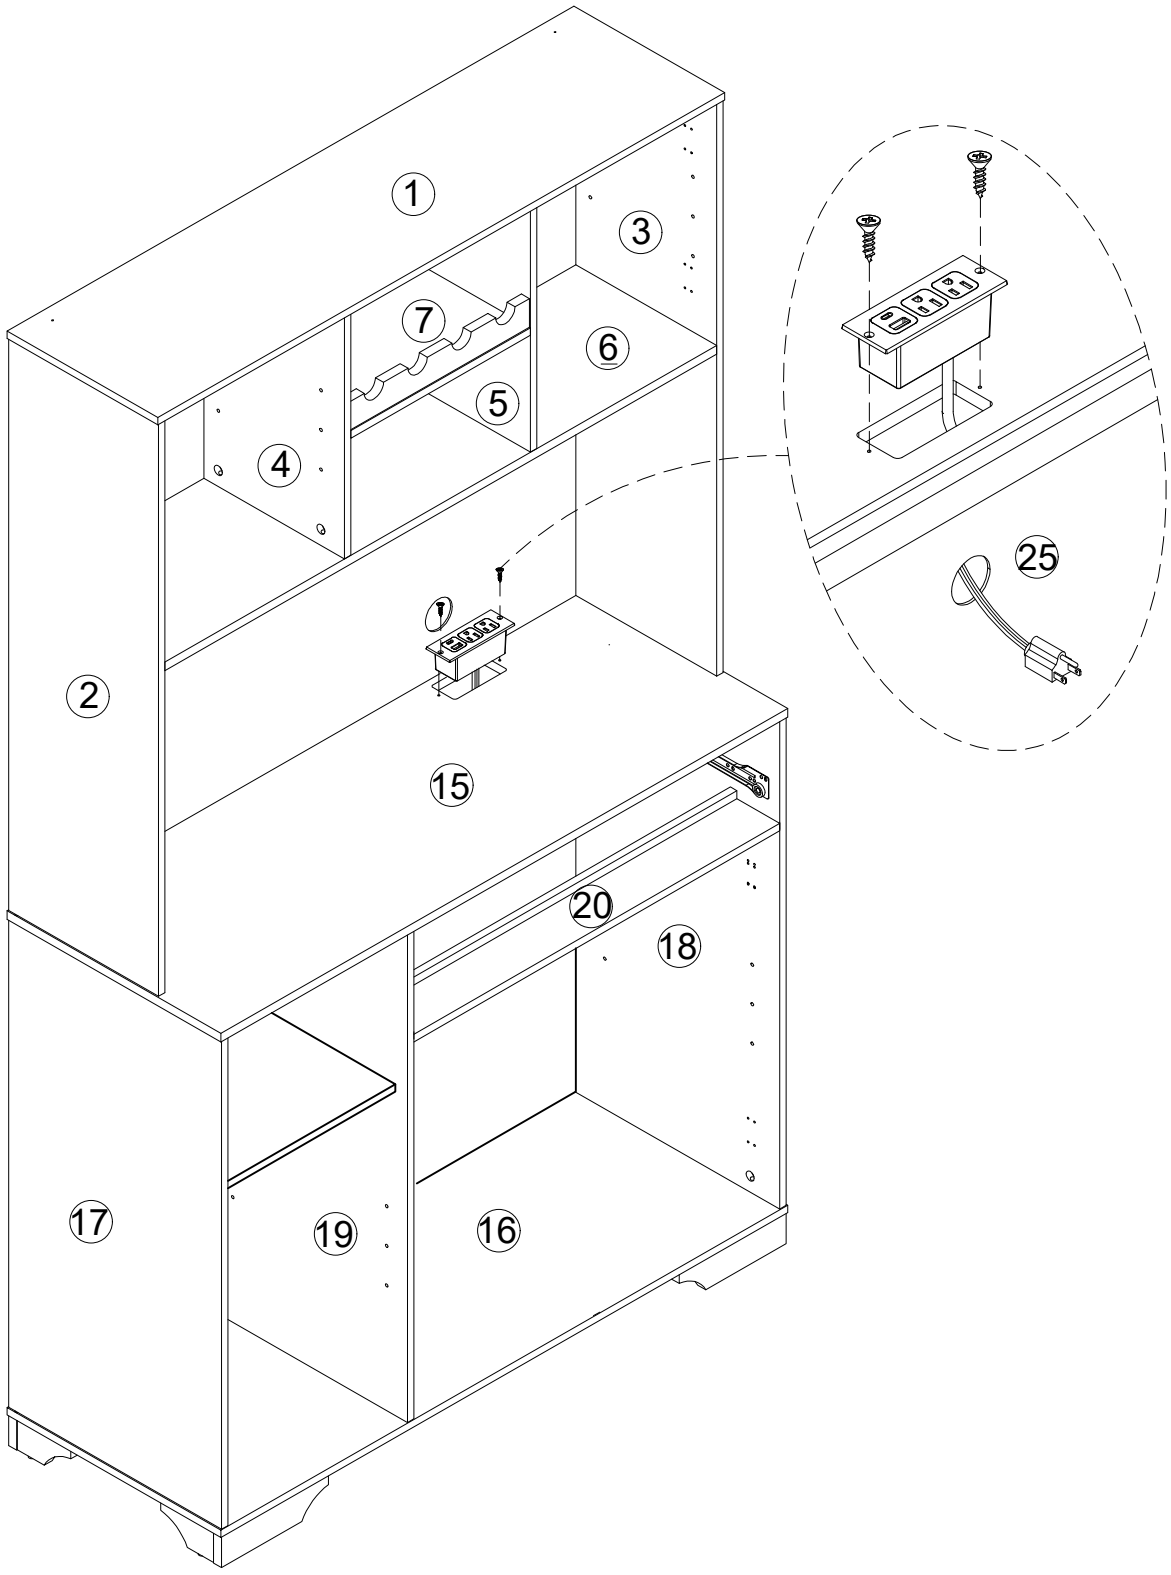


STEP 30


S	K	J
4 x	36 x	36 x

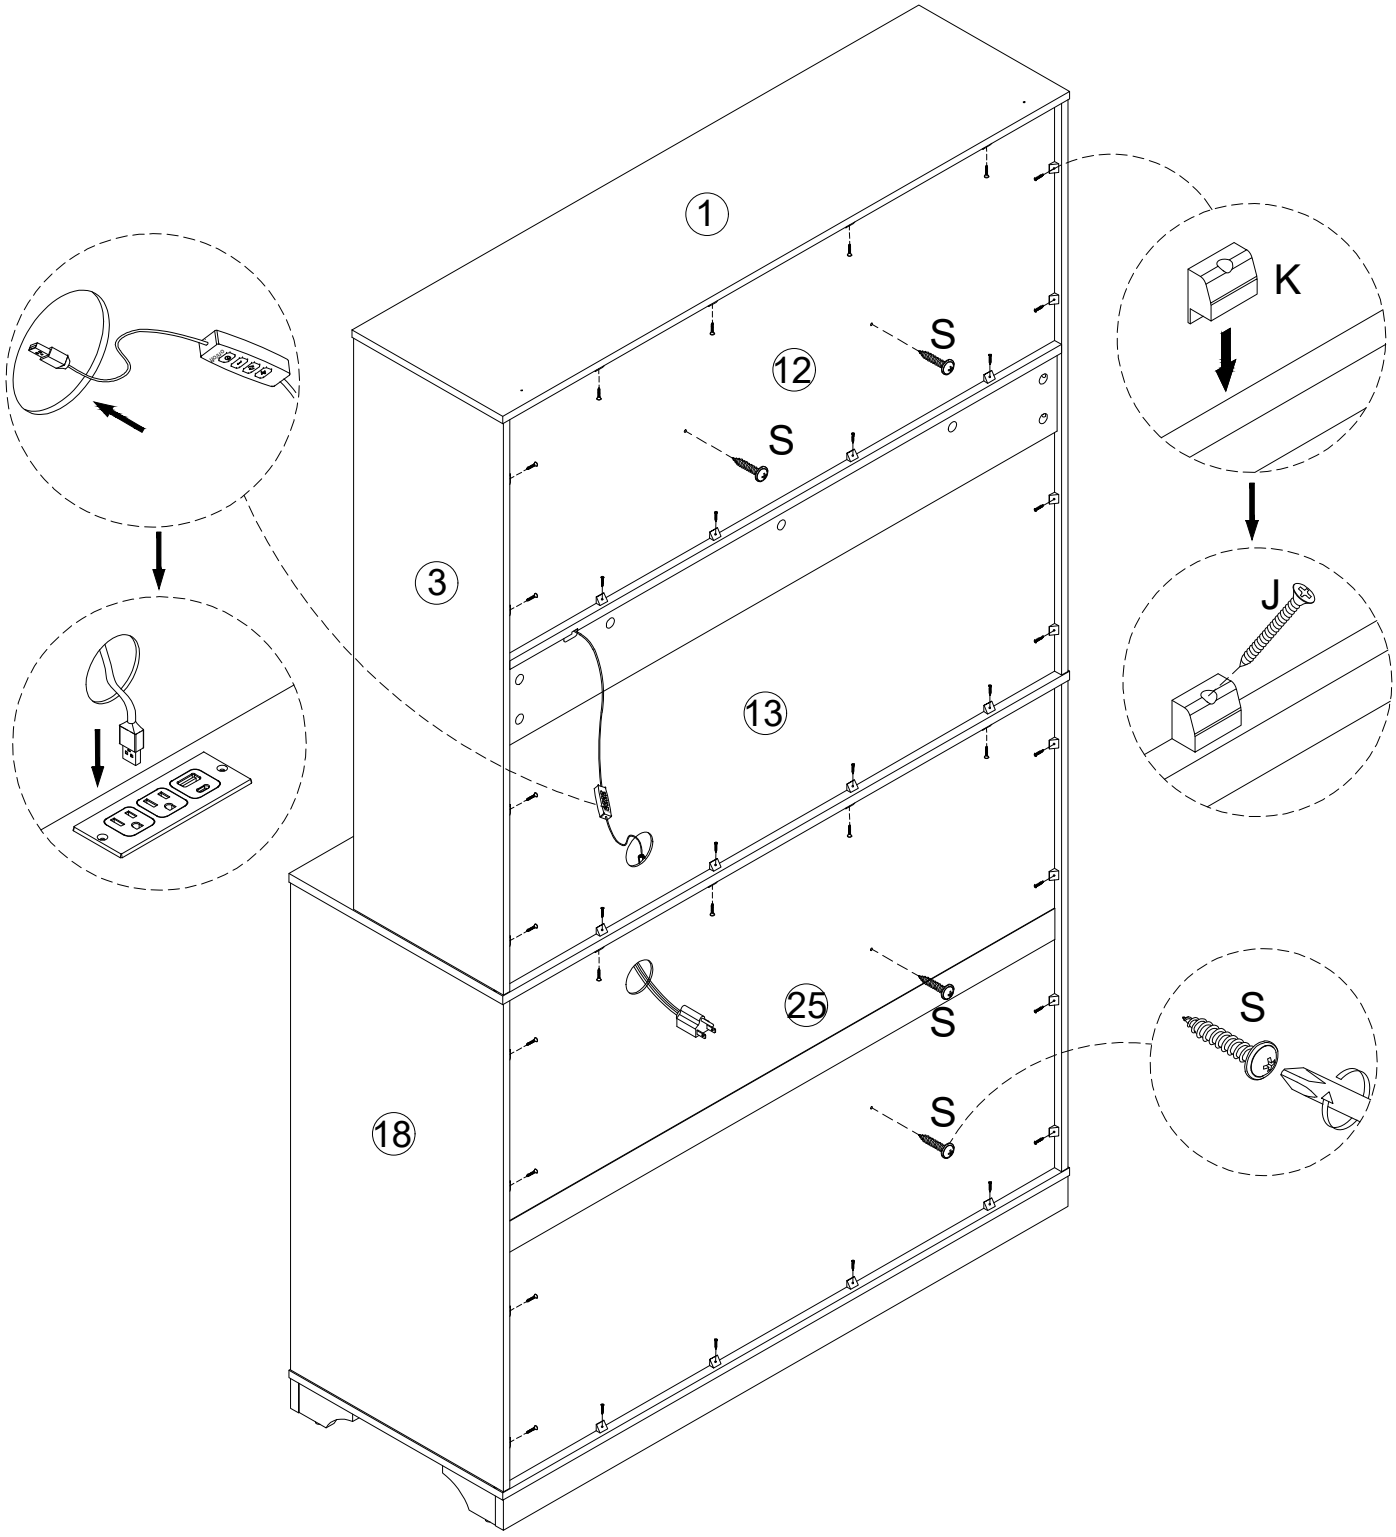


STEP 31

O	N	F	E
20 x	10 x	10 x	5 x

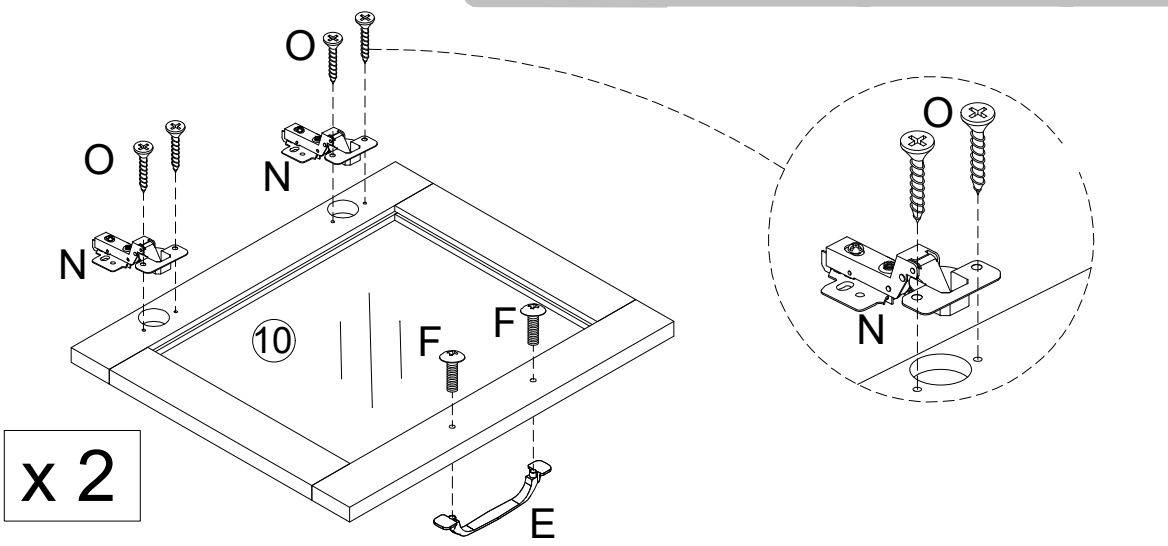


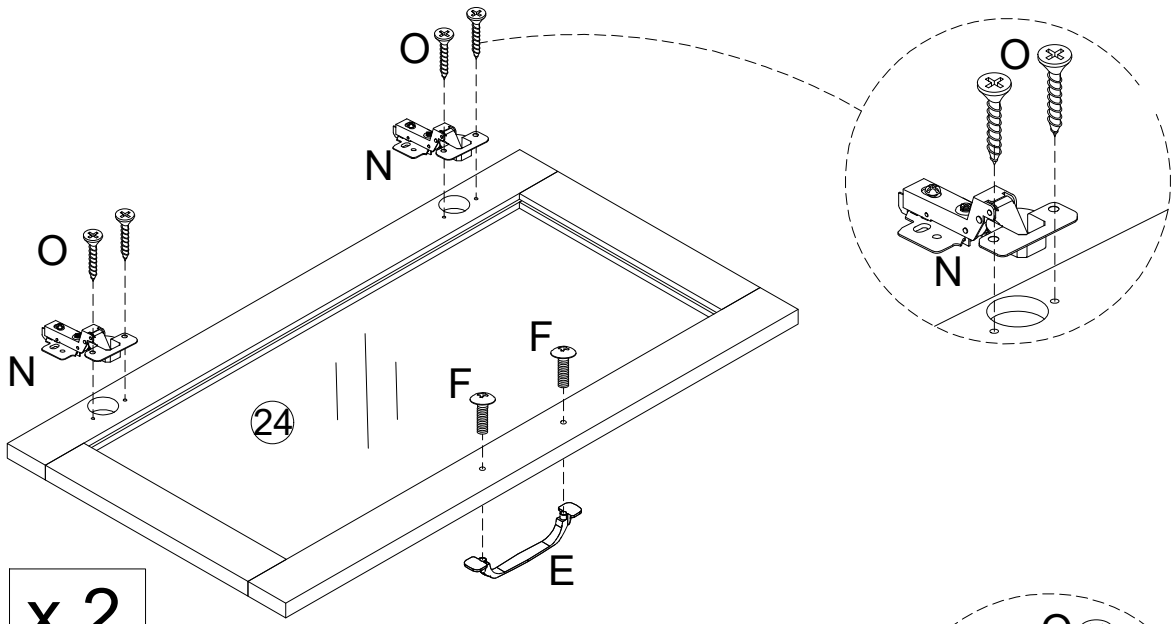

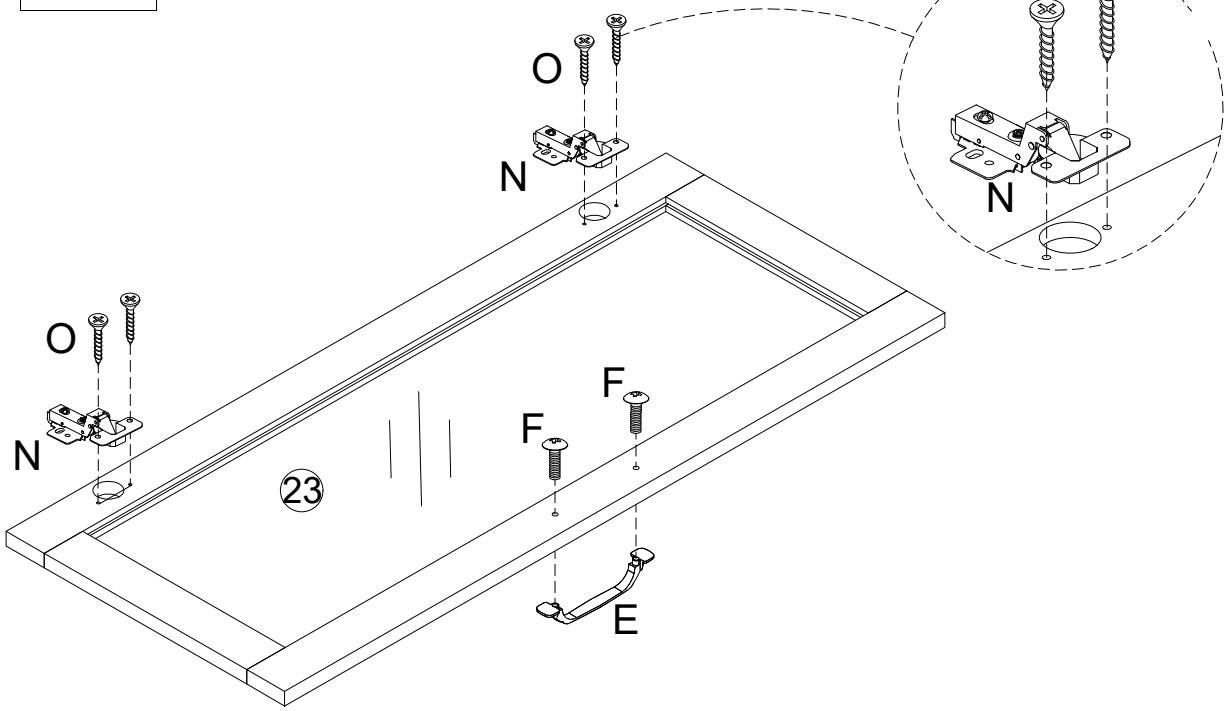


STEP 32

O 24 x

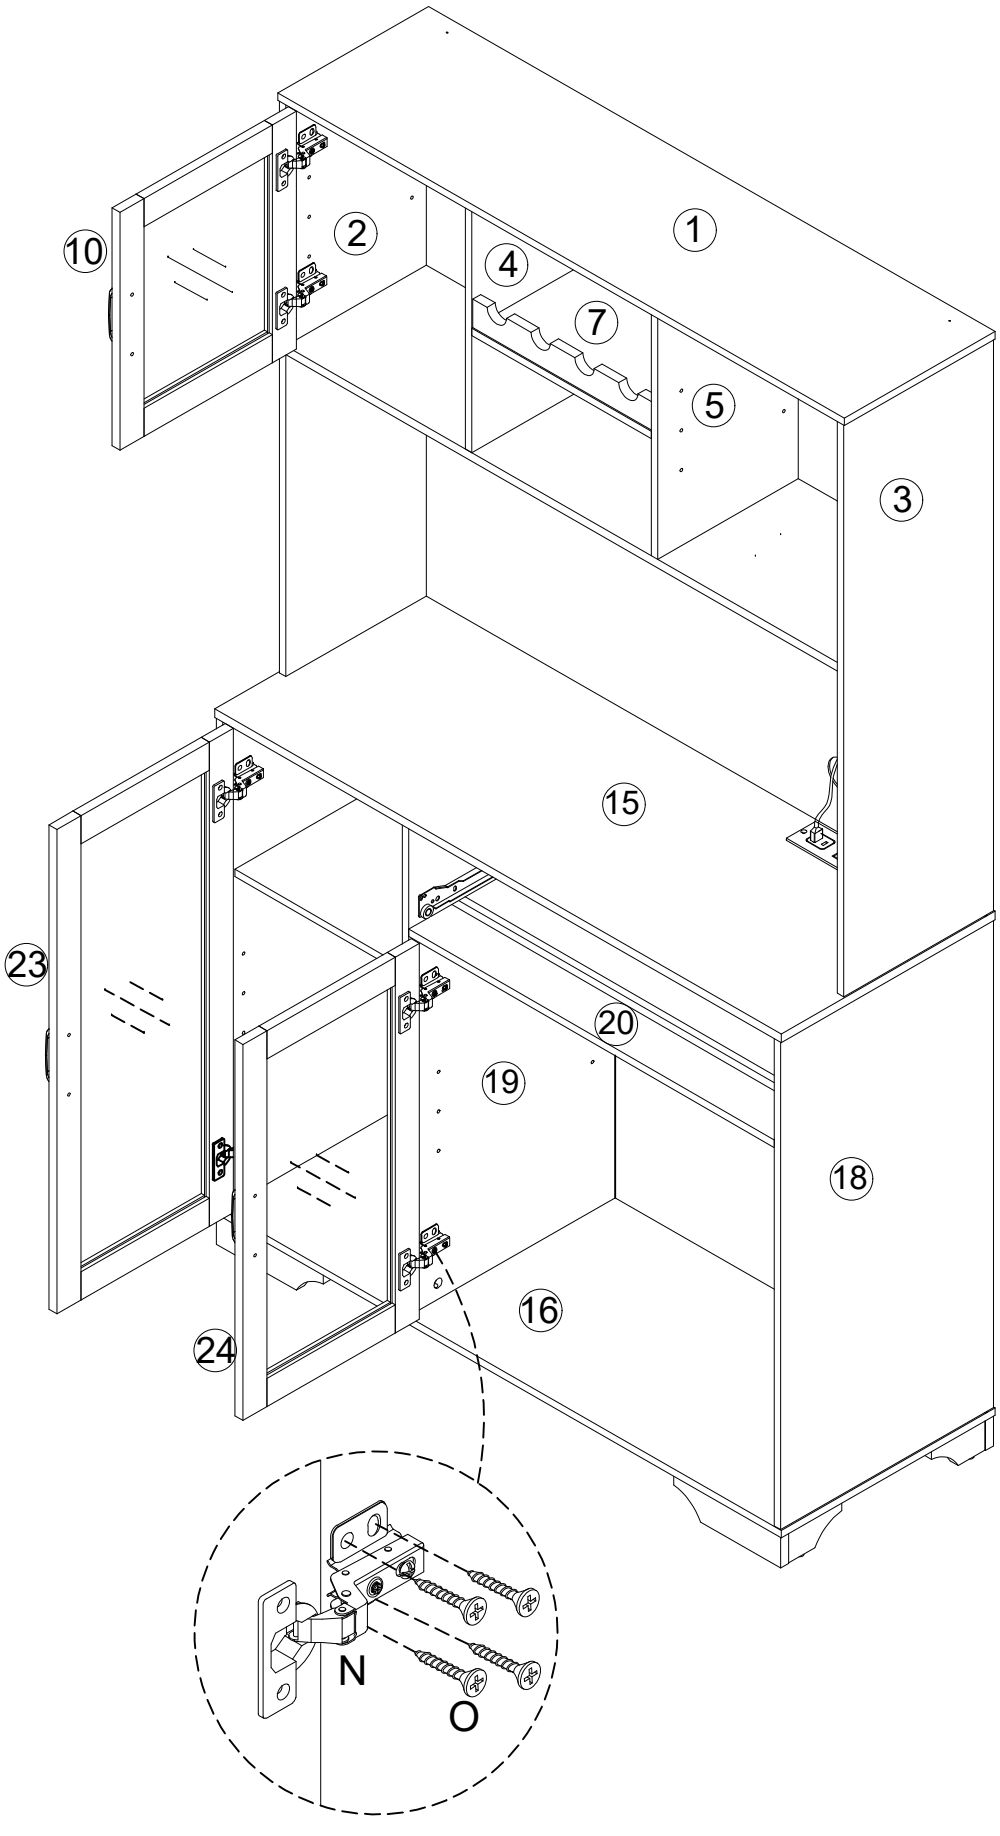



STEP
33

O
16 x

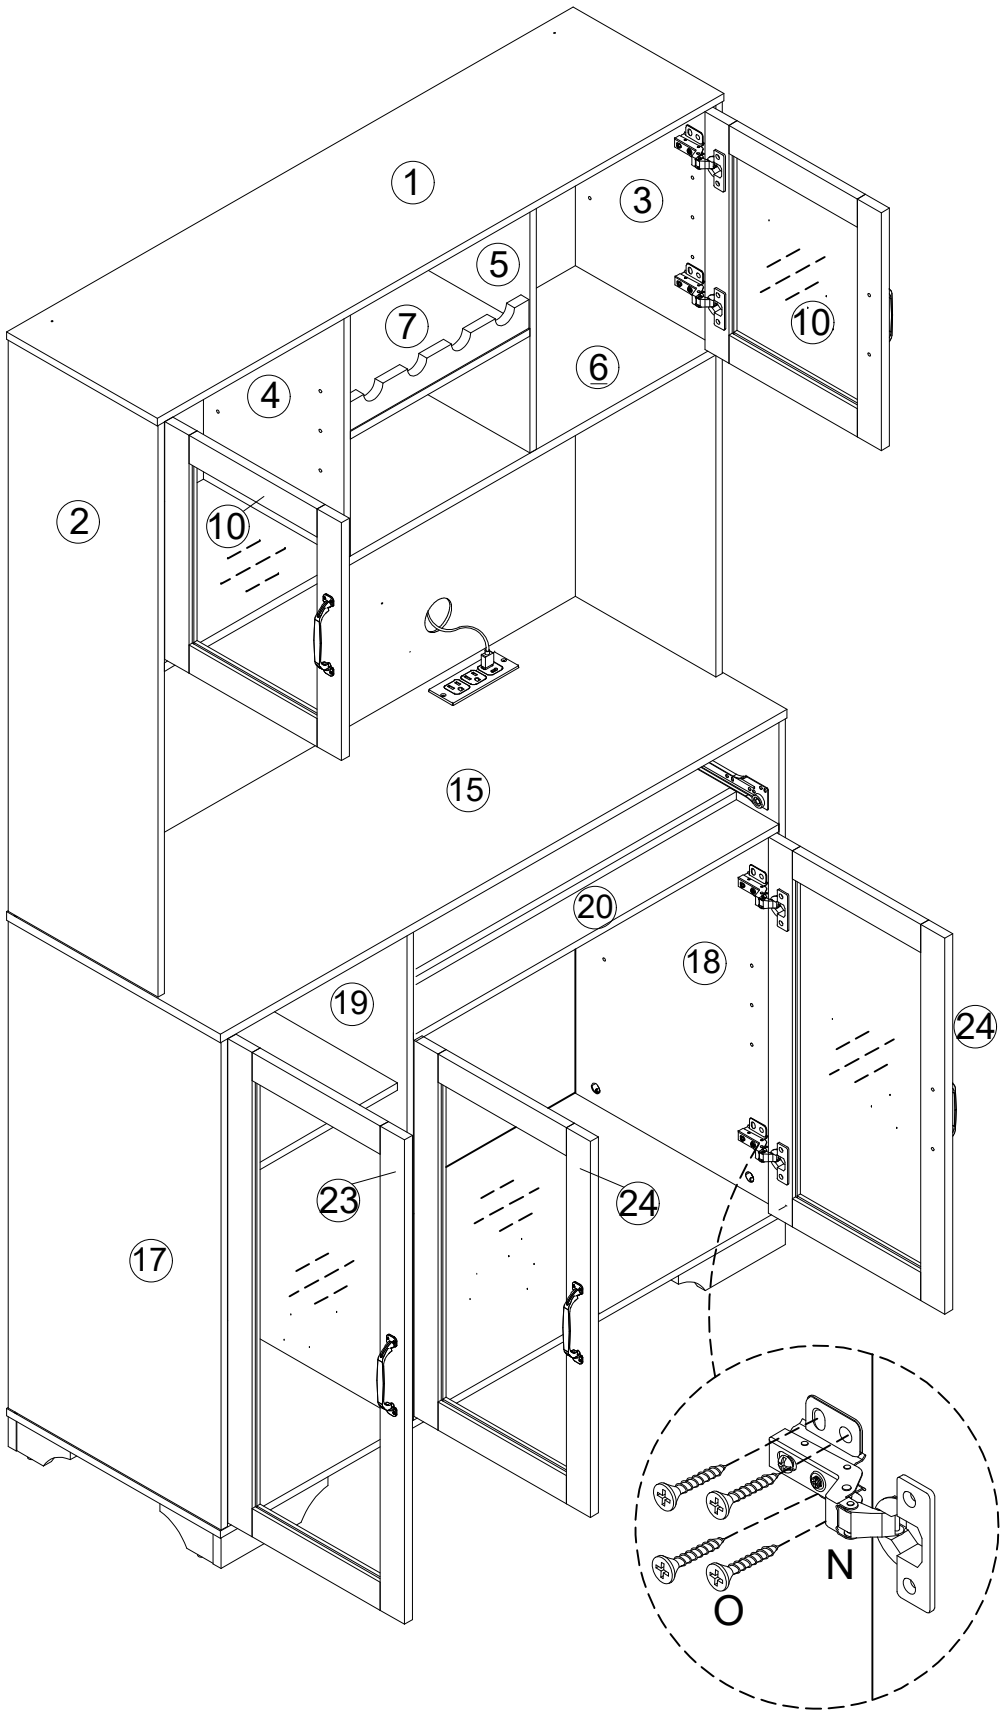


STEP
34

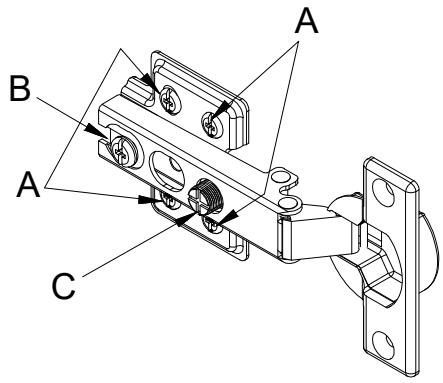


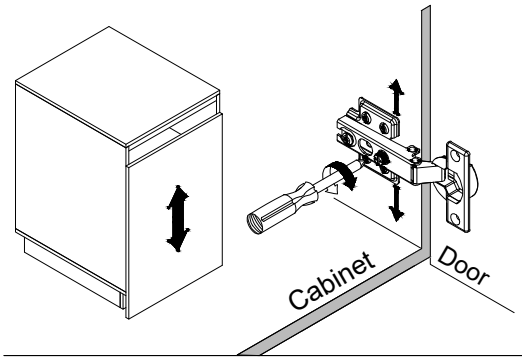

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

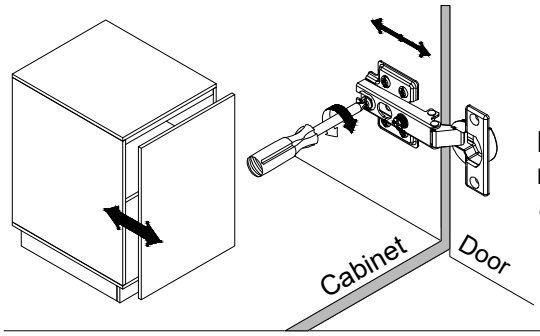


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

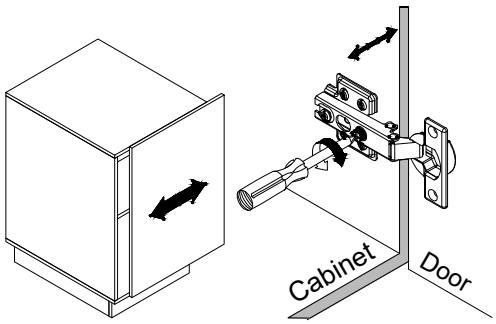


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP
35

M
16 x

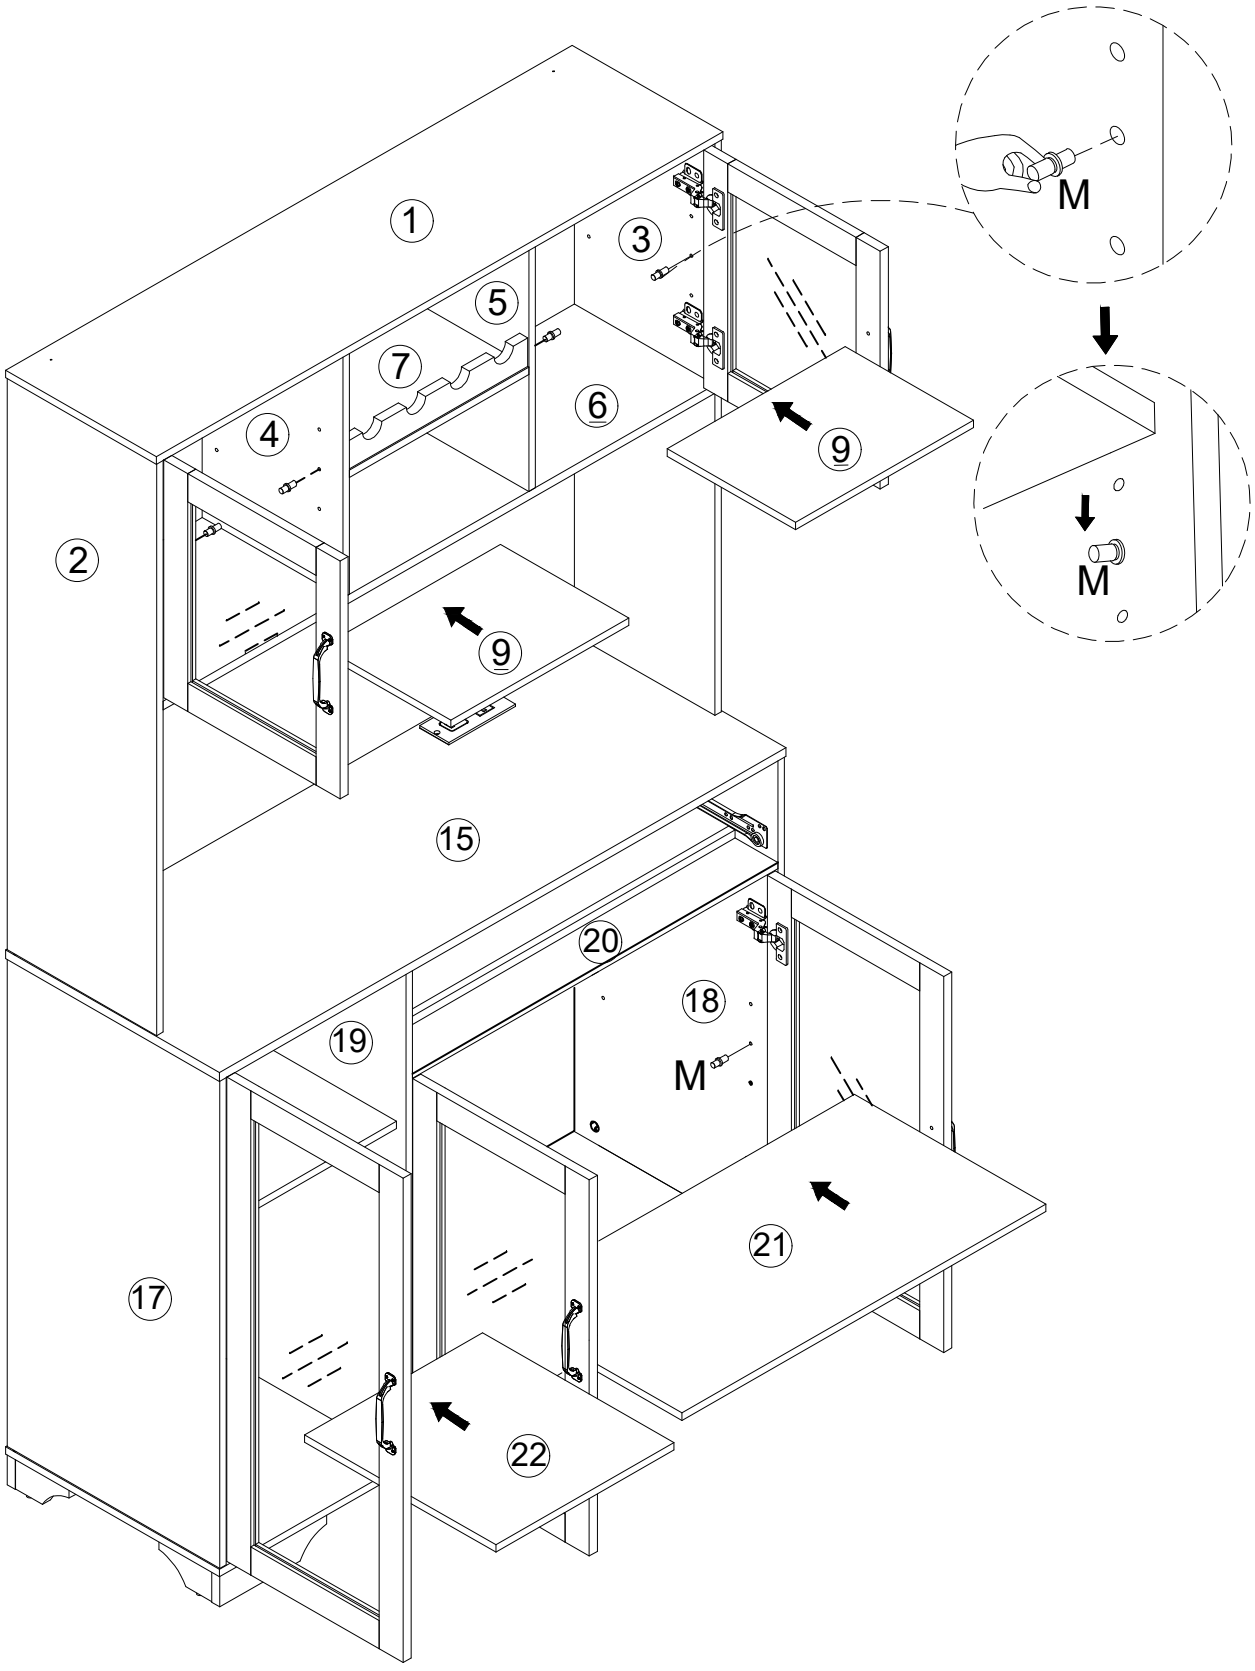


STEP 36

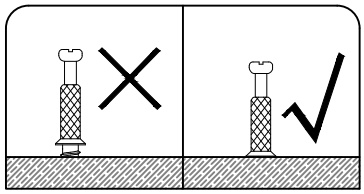


F 2 x

E 1 x

D 6 x

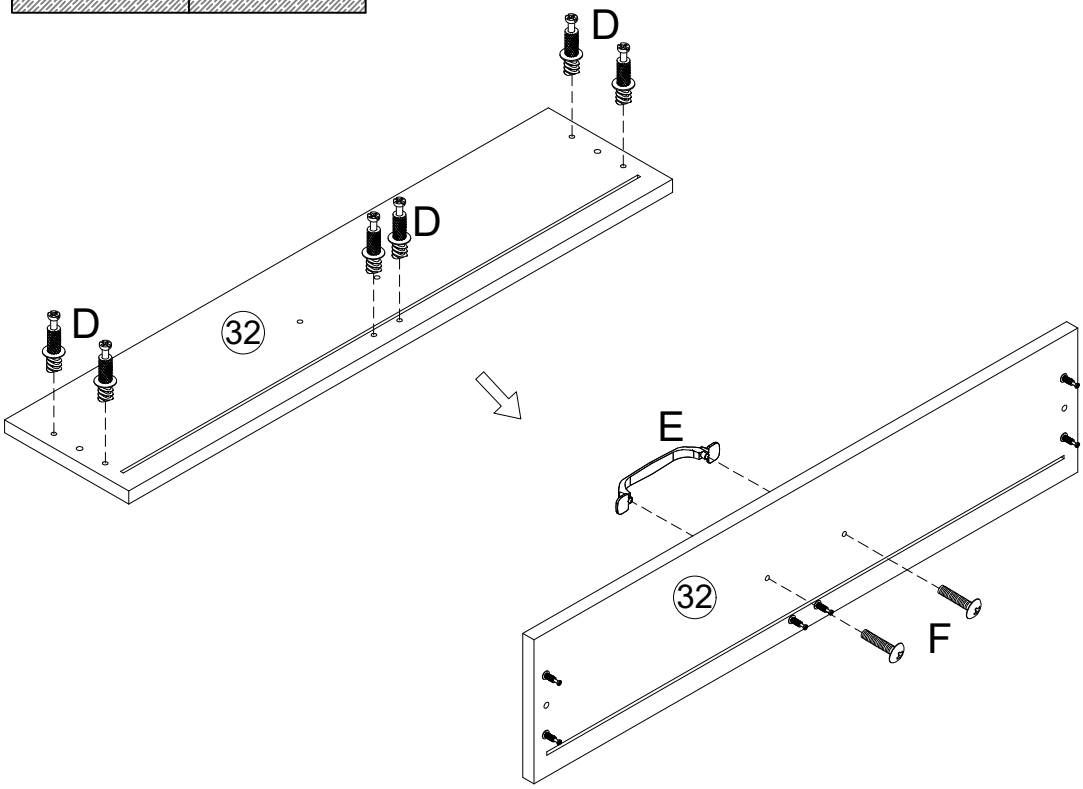


STEP 37

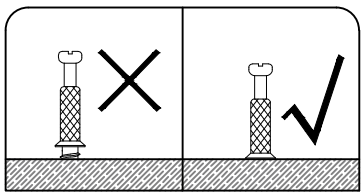

D 2 x


B 4 x

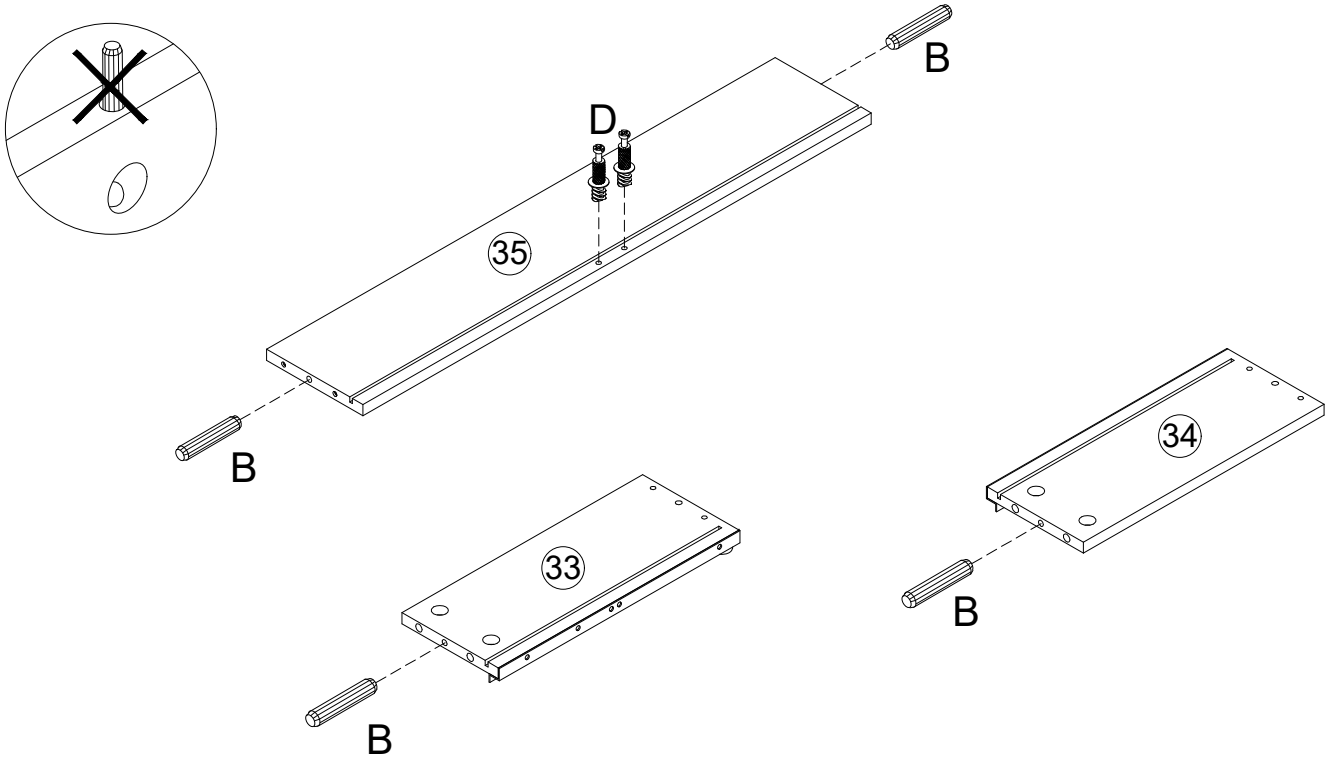


STEP 38

I 4 x

C 2 x

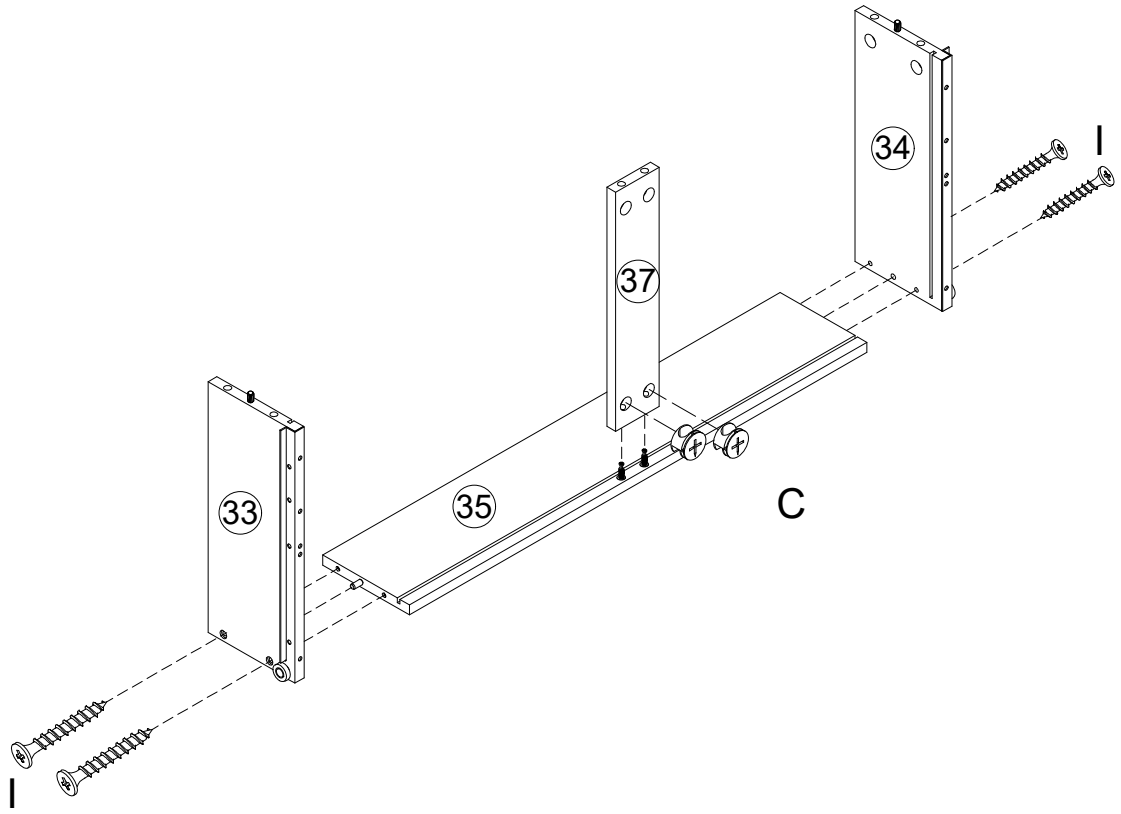


STEP 39

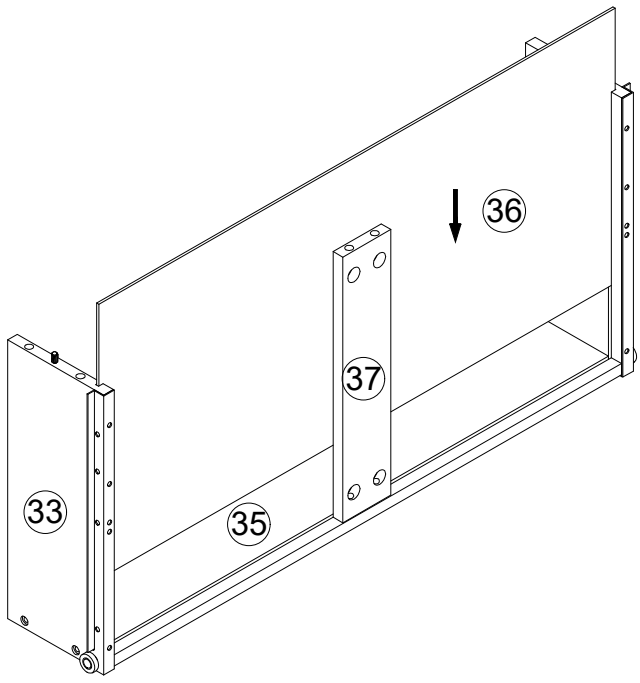



STEP
40

C
6 x

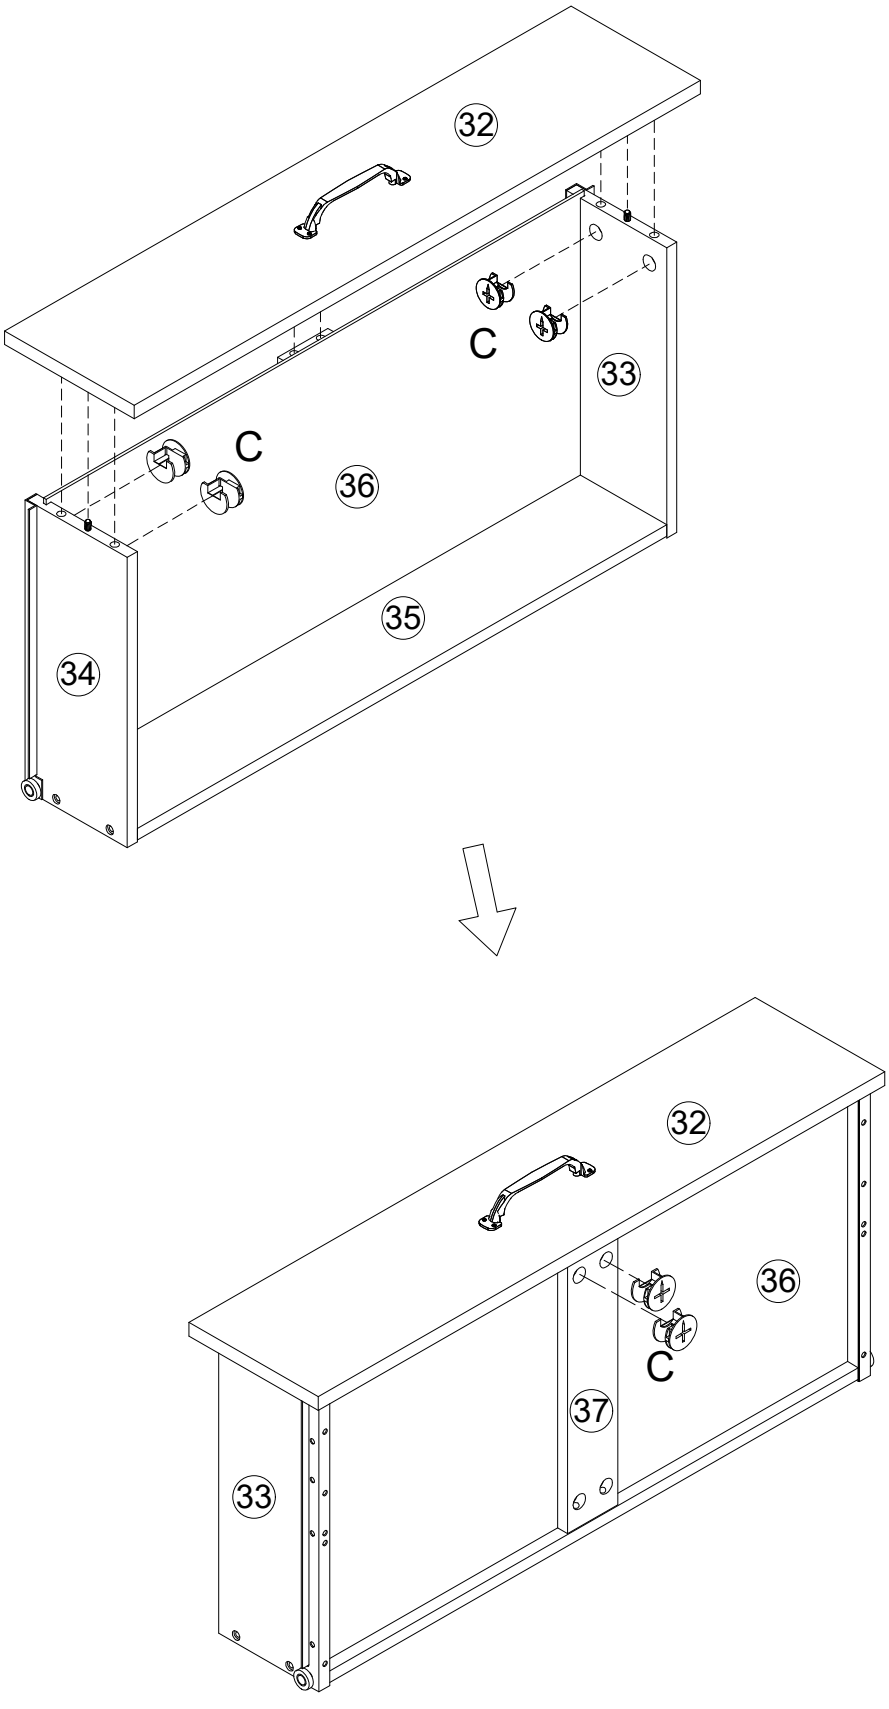



STEP
41

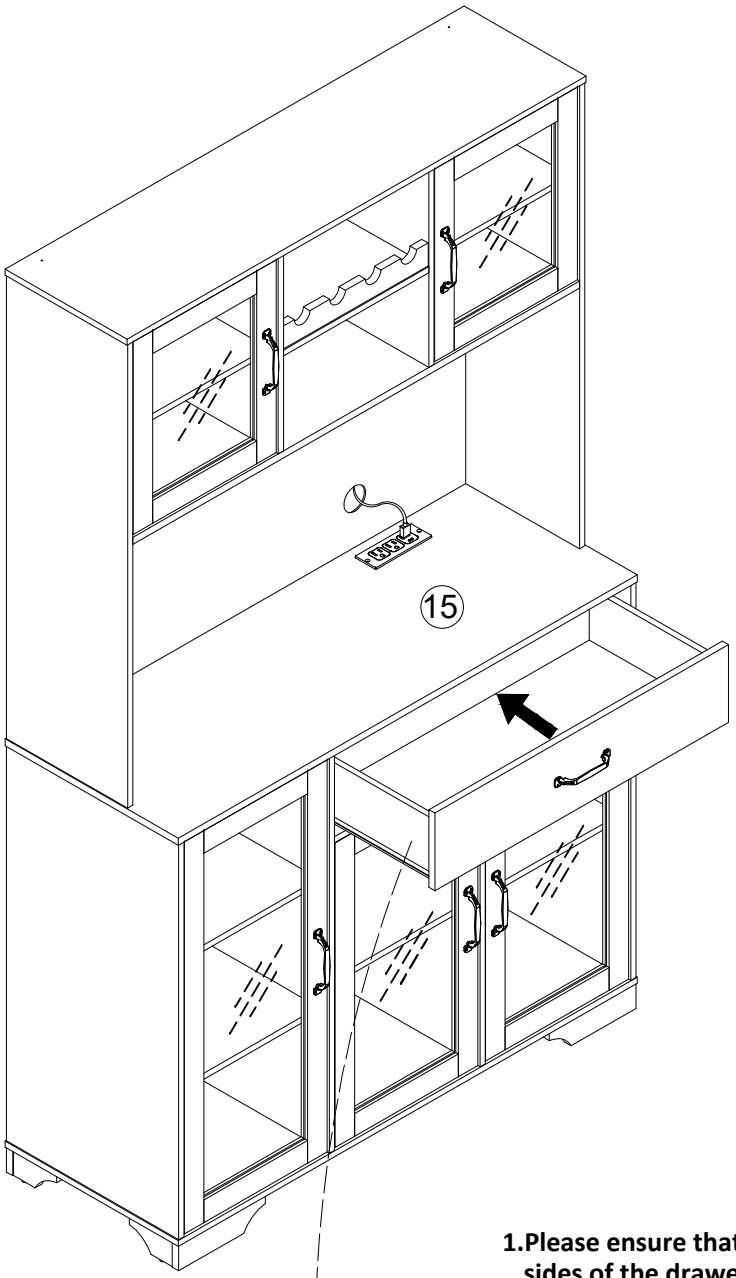

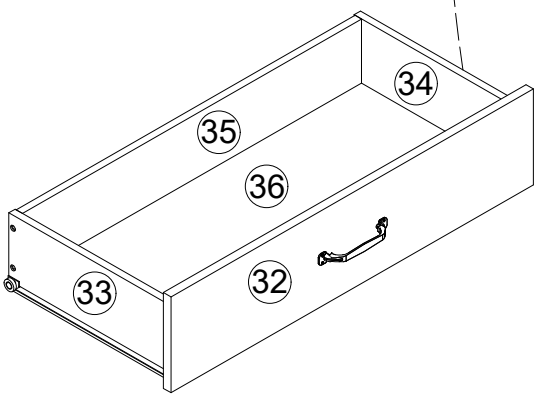


1.Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

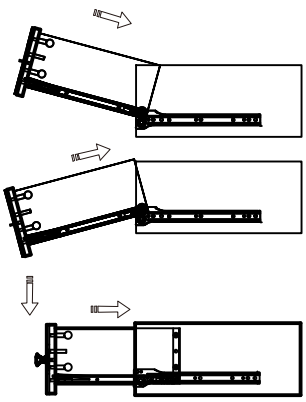


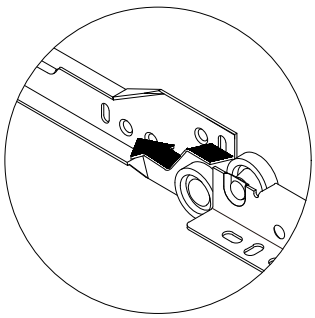

2.If the following occurs, redo thé first two step.




(both wheel are off the rails)




(one wheel is off the rail)

STEP 42

W	V	T	U
2 x	2 x	2 x	2 x

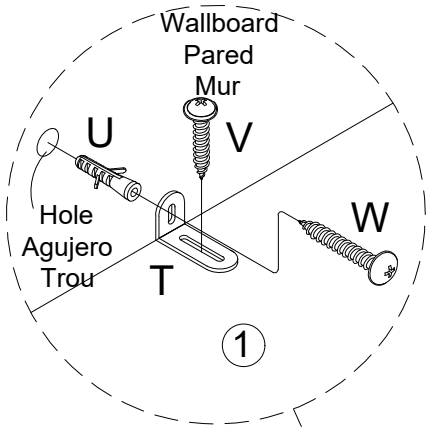

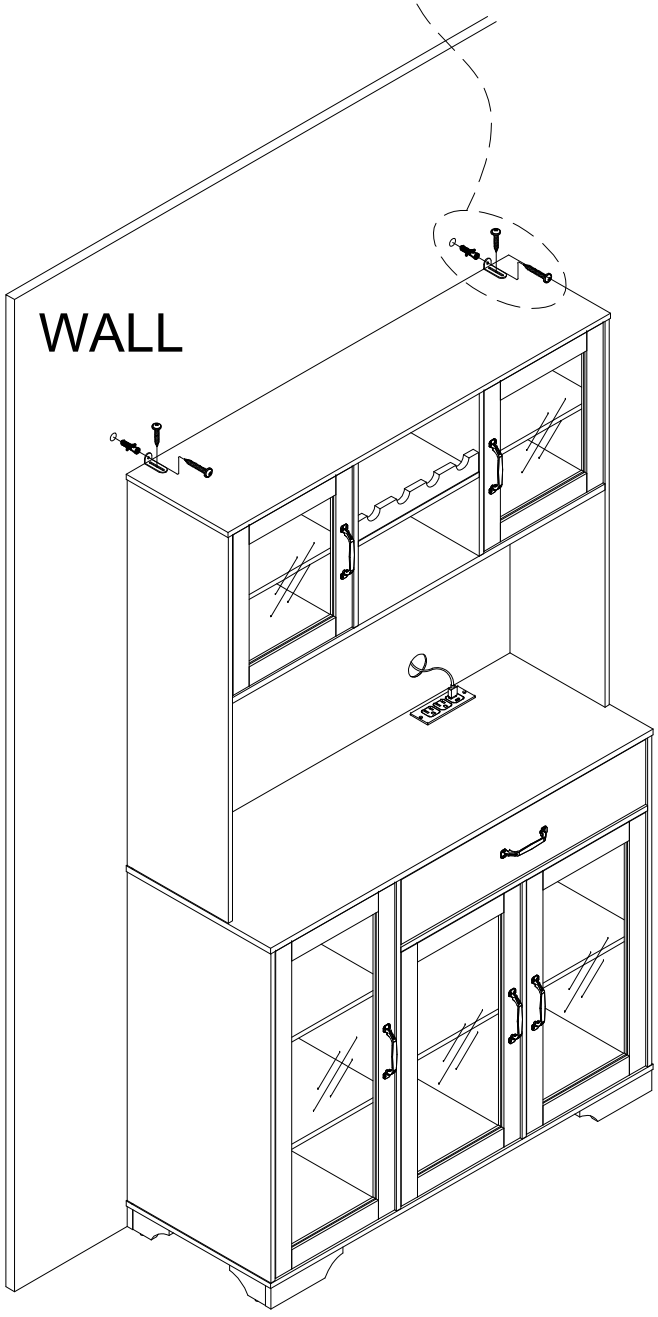

Drill a 3/16" diameter hole (5mm) in the wallboard. Tap the wall anchor(U) into the hole until it is flush. Fasten the wall bracket (T) to the wall anchor (U) with the screw (W).

Taladre un agujero de 3/16" de diámetro (5mm) en la pared. Golpea la ancla de pared (U) en el agujero hasta que sea parejo. Abroche la escuadra de pared (T) al la ancla de la pared (U) con el tornillo (W).

Percez un trou de 3/16" de diamètre (5mm) dans le mur. Enfoncez l'ancrage mural (U) dans le trou jusqu'à ce qu'il soit affleurant avec le mur. Fixez le support mural (T) à l'ancrage mural (U) avec la vis (W).

⚠ CAUTION

Please make sure all bolts are securely tightened. Failure to do so may result in collapse of unit, property damage or injury.

⚠ ADVERTENCIA

Asegúrese de que los tornillos esten bien apretados. No hacerlo, puede resultar en derrumbe de mueble, daño del producto o lesión personal.

⚠ ATTENTION

Veuillez vous assurer que tous les boulons sont serrés solidement. Le non respect de cet avertissement peut provoquer l'effondrement du produit, des dommages matériels ou des blessures.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

Caring for Wood Furniture

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.