
ELECTRIC RIDE ON CAR

Owner's Manual

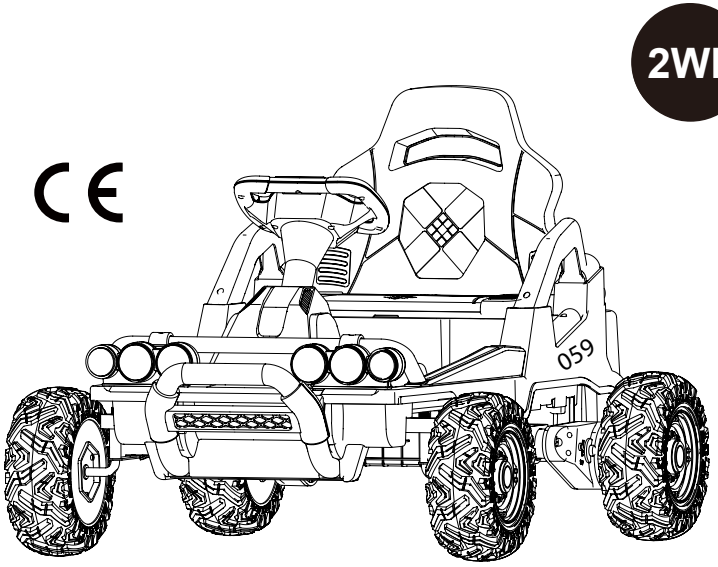

Note: Manual illustrations are for demonstration purposes only. Illustrations may not be the same as the exact appearance of the actual product.
Read and understand this entire manual before allowing children to use this product. Please keep the 17-character order ID with your side before contacting us.
Order ID: _____ - _____-_____.
For assistance, please send Email to: anpabo.service@gmail.com

Table of Contents

1. About Your New Vehicle 1

2. Warning 2

3. Parts List 3

4. Parts Diagram 4

5. Installation Steps 5

6. Dashboard Indication 12

7. Remote Control Operation 13

8. Charging Indication 14

9. Troubleshooting Guide 15

10. Safety Reminder 18

11. Maintaining 19

12. Note About Fuses 19

13. Disposal Of Battery 20

14. Warranty 20

About Your New Vehicle

Please read this manual carefully before installation in order to avoid operating errors or damages.
The owner's manual contains important safety information as well as assembly, use, and maintenance instructions. Please save it for future use.
The Ride-on Car must be assembled by an adult who has read and understood the instructions in this manual.

Specifications

Battery	24V 4.5AH*1
Charger	Input:AC 100-240V 50-60Hz Output:DC 24V/28.8V
Suitable age	3+ years old
Load capacity	132 lbs
Speed	1.8-5mph
Product size	49.6x31.1x30.3 inches
Charge time	8-12 hours (not exceed 20 hours)

⚠ WARNING!

1. Before charging and using the vehicle, please connect the power cable to the fuse first. And make sure the metal terminal of the fuse is firmly plugged into the cable terminal. Otherwise the vehicle cannot be powered on.
2. To prolong battery life, please fully charge the battery before every use. The charging must be done by adults.
3.Adult assembly is required. Get children away from the screw spilled pin and other dangerous sharp tips.
4.To avoid damages and choke hazards caused by ingesting, please keep children under 3 years old away from the small parts!
5. Children should drive under the supervision of adults.
6.Keep the packaging material (plastic bags) away from children.
7. Please check the car regularly to make sure the cables, plugs,outer case and other parts are valid. If something was damaged, please stop using the car until it is fixed!
8. The remote control requires two 1.5V AAA dry cell batteries.
9. Make sure children know and follow these rules for safe driving and riding:-always sit in the seat.-always wear shoes.
10. Do not tow anything behind the vehicle or overload it. Do not exceed the maximum 132 lbs. weight capacity.
11. This vehicle is designed for use on grass, asphalt, or other hard surfaces; on generally level terrain; by children 3 years of age and up.

Parts List

1 Vehicle body
x1



2 Front bumper
x1



3 Wheel
x4



4 Armrest
x2




5 Steering wheel
x1



6 Backrest
x1



7 Seat cushion
x1



8 Bogie
x 1



9 Rear axle
x1



10 Transfer Plum Blossom Buckle
x2



11 M8 Lock nut
x 7



Placed in the rear and front axle

12 M8 washer
x 7




Placed in the rear and front axle

13 M10 washer
x2



Placed in the rear and front axle

14 Socket wrench
x 2



15 M4×12 Screw
x 15




16 Charger
x1




17 Remote control
x1



18 Instructions
x1




19 Rear support
x1



20 M4×20 Screw
x 4



21 Gear box
x2




22 Wrench
x1





Parts Diagram

If you experience a problem with this product or are missing a part, please first contact anpabo.service@gmail.com, rather than return this product to the store directly. Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.

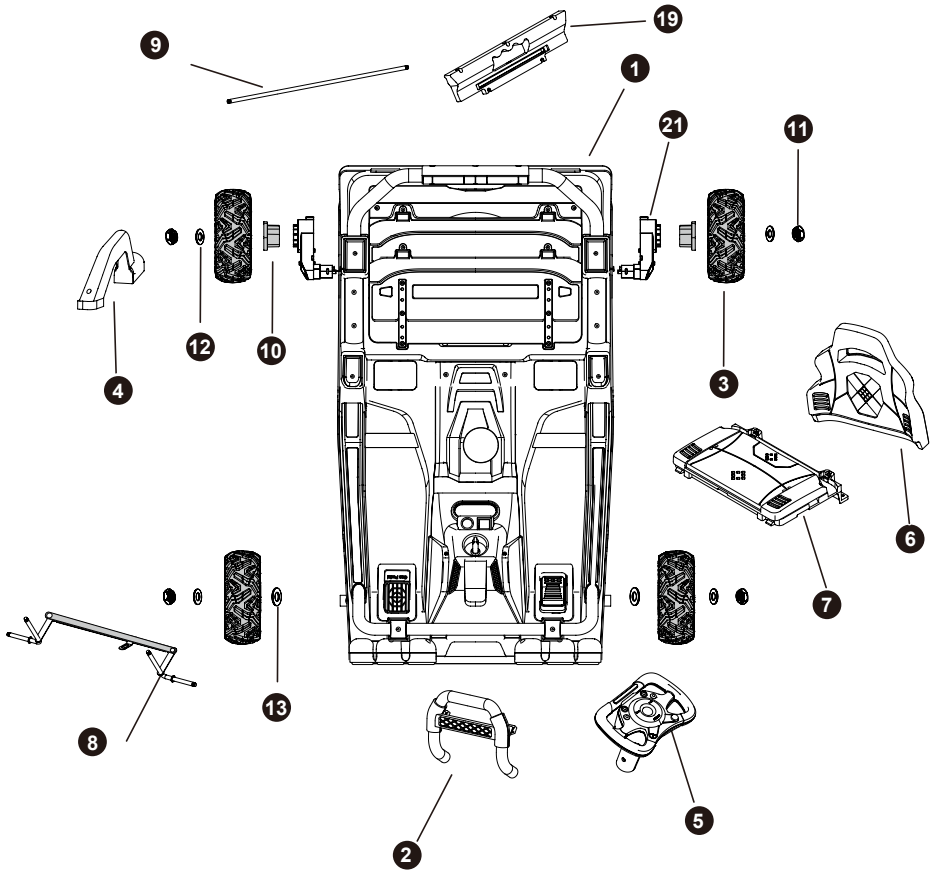


Assembly tools required:

Socket wrench (Included)	Screwdriver (Not included)	Scissors (Not included)	Wrench (Included)	2*AAA1.5V for Remote Control (Not included)
				


Installation Steps

Connect the power cord

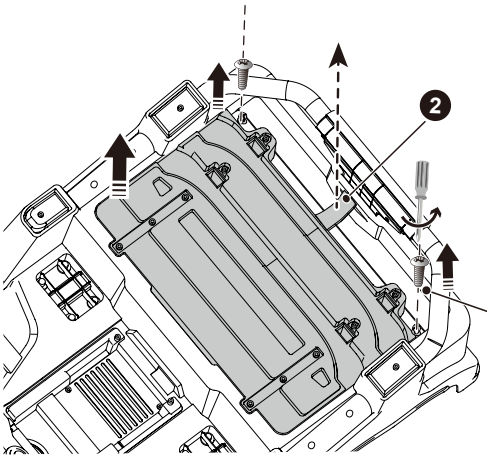


1.Use a screwdriver to unscrew the screw.

2.Pull up and pull out the top cover of the battery compartment

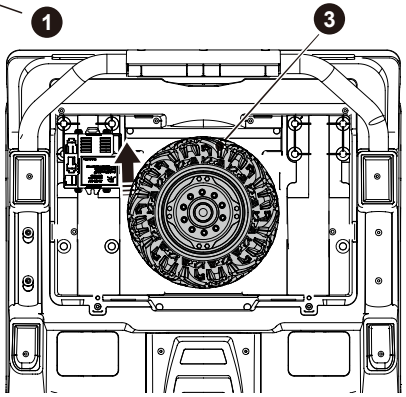


3.Remove the wheels from the battery compartment.

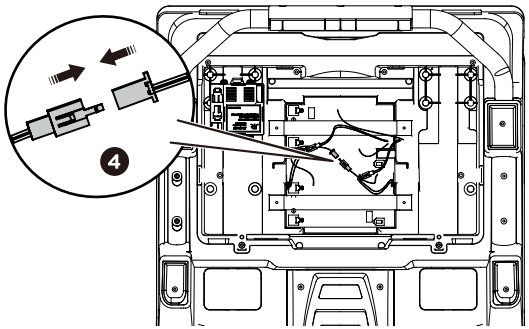


4.Connect the battery cable. Turn on the power switch. Press the forward switch, then press the foot pedal to test the function. If the car can move properly, it is ok. If it can not be turned on or goes forward, please reconnect all wires to avoid poor contact.

5.Fix the battery compartment top cover to the vehicle body with the screwdriver.

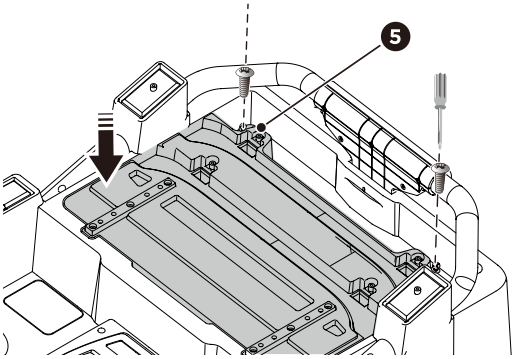


Installation Steps

Install the rear support

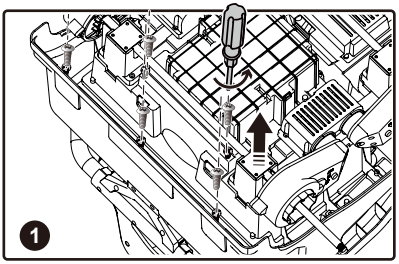



1.Use a screwdriver to remove the pre-installedscrews on the car body.


2. Use 5 M4x12 screws to secure the rear support.

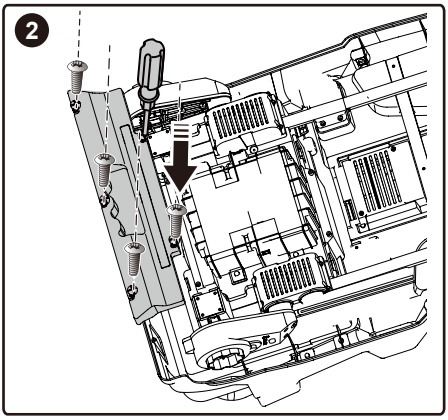

Cut the cable ties and take parts

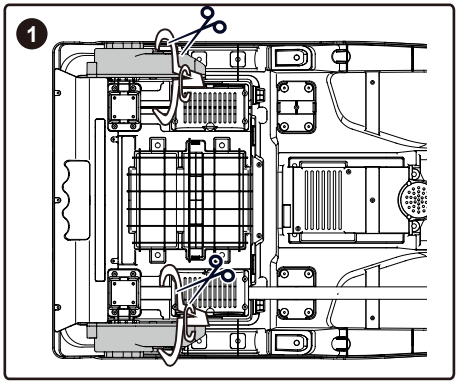

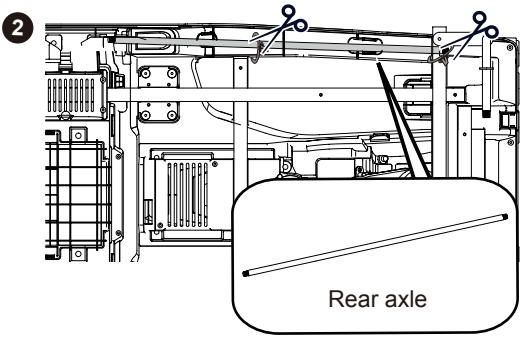

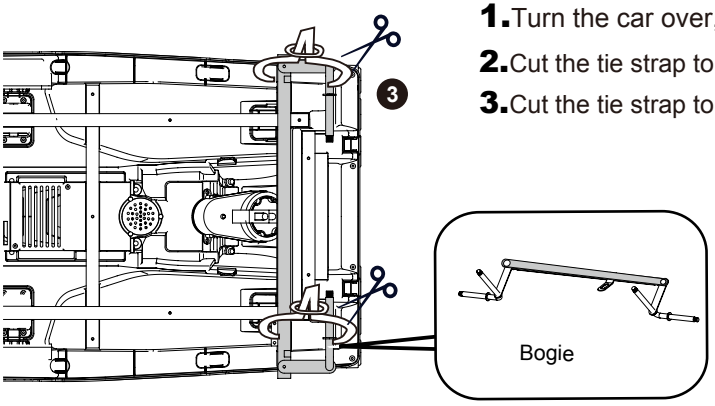


1.Turn the car over, cut the cable ties.


2.Cut the tie strap to take out the rear axle.

3.Cut the tie strap to take out the bogie.

Installation Steps

Install the rear wheel

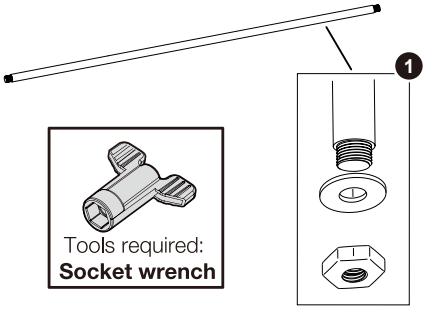


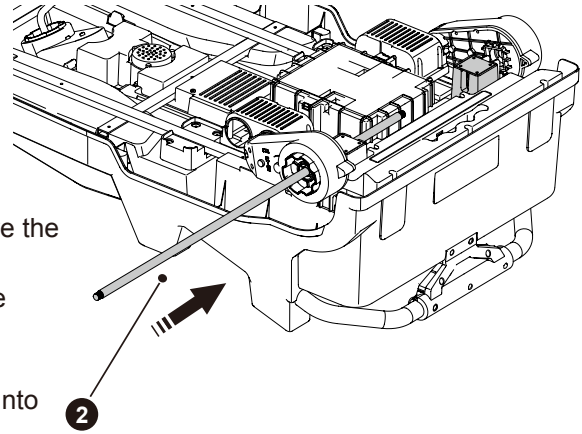

1.1.Use socket wrench to remove the nuts and washers at both ends.

2.Insert the rear axle through the motor and fix it at the bottom of the car.


3.Clip the plum blossom buckle into the tire.

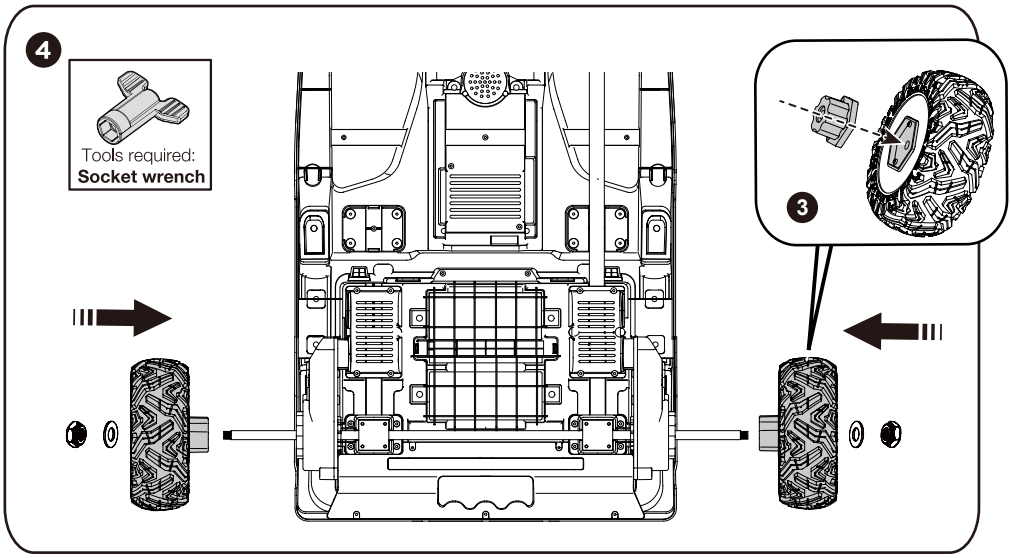

4.Install the wheels on both sides of the rear axle, then put a washer and nut on each side. Use two wrenches to tighten the nuts on both sides at the same time.


Installation Steps

Install the front wheel

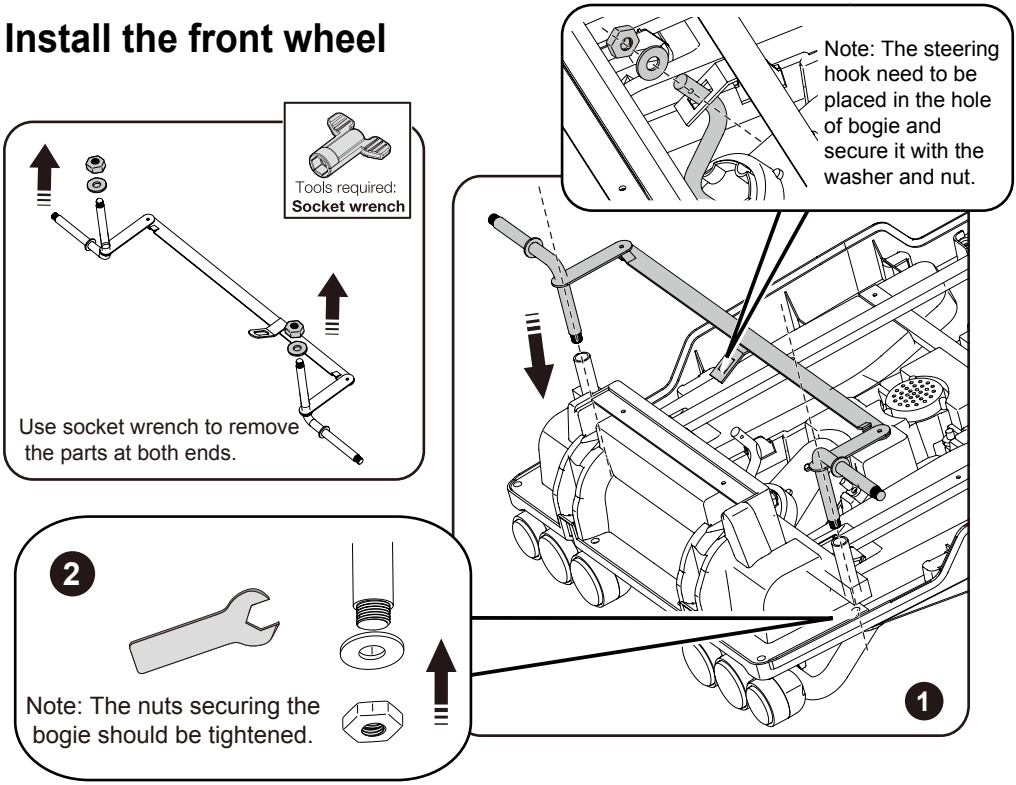

1. Turn the body over and insert the bogie into the sleeve supporting the square tube. (Please note the position of the iron piece with a hole in the middle of the steering bracket.) Then let the seeing lever go through the hole in the steering bracket.


2. After passing the bogie end through the sleeve on the support square pipe, put washers and nuts on both sides of the bogie end in turn and secure them with wrench.

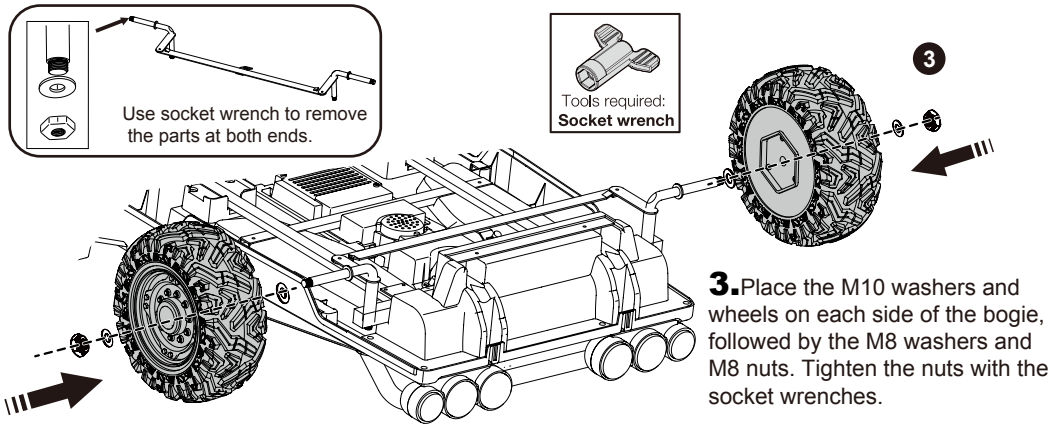


3. Place the M10 washers and wheels on each side of the bogie, followed by the M8 washers and M8 nuts. Tighten the nuts with the socket wrenches.

Installation Steps

Install the front bumper

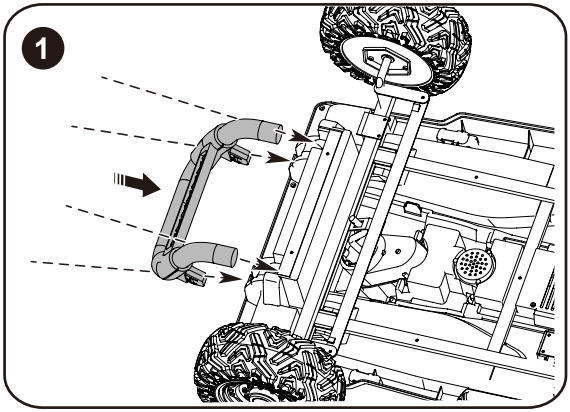


1. Insert the front bumper into the corresponding hole in the vehicle body.

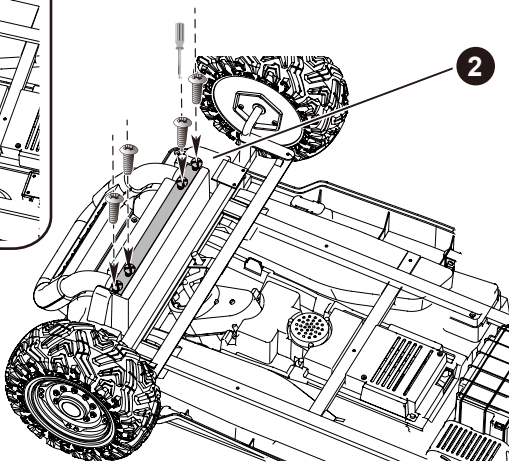


2. Fix the front bumper to the vehicle body with screws.

Install the steering wheel

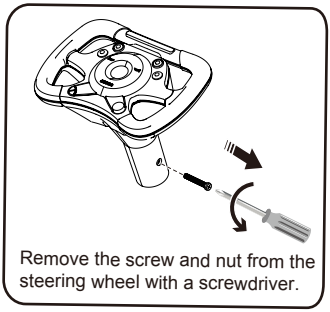

Remove the screw and nut from the steering wheel with a screwdriver.

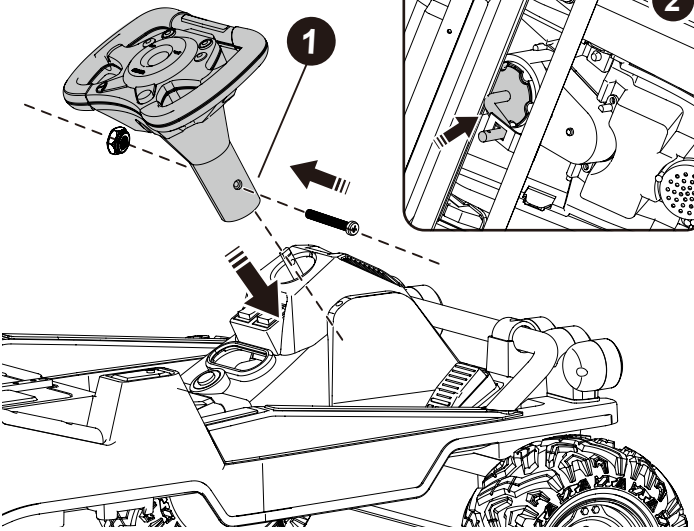


1. Insert the steering wheel into the steering wheel holder.


2. Put one of your hands on the bottom of the front of the car, push the steering lever (as shown in illustration 2) to ensure that the steering lever passes through the steering wheel. Finally, insert the screw through the hole on the steering column base and fix it with a lock nut.

Installation Steps

Install the seat

1.Insert the backrest into the holes on the vehicle body.and fixed with two screws.

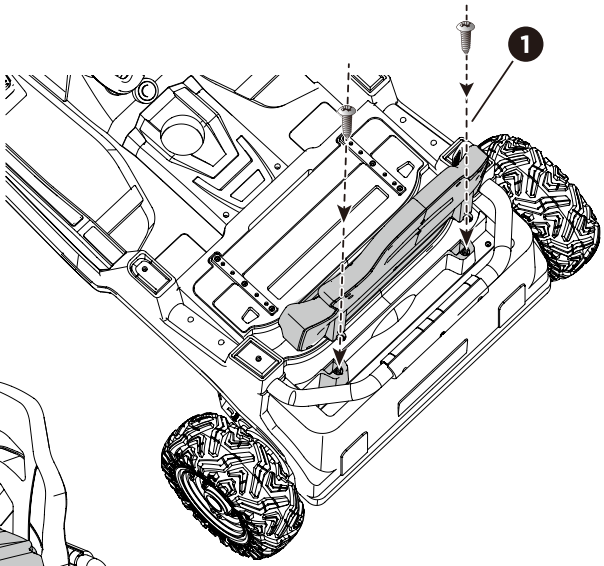


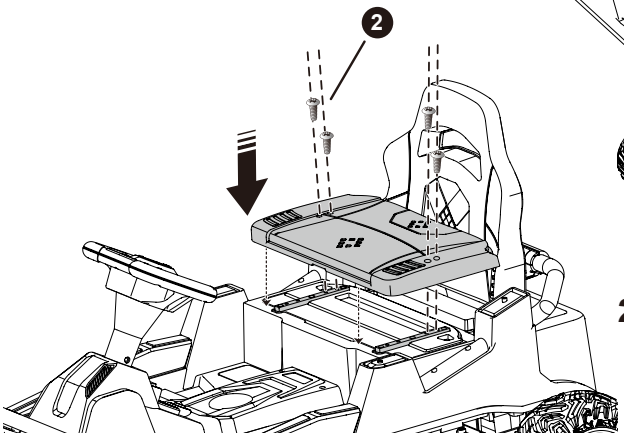


2. Fix the seat on the car body with four M4*20 screws.

⚠ PAY ATTENTION TO !


- Loosen the screws of the backrest and seat cushion and snap the backrest into the front position to shorten the distance from the seat to the pedal. Then re-fasten the screws of the backrest and seat cushion.

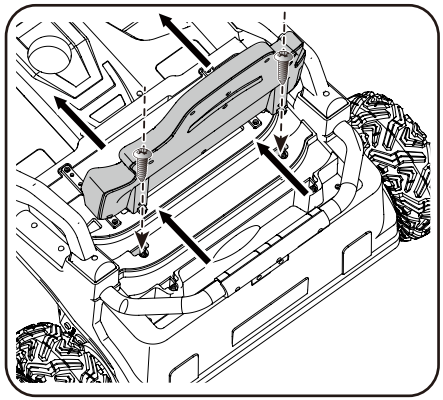

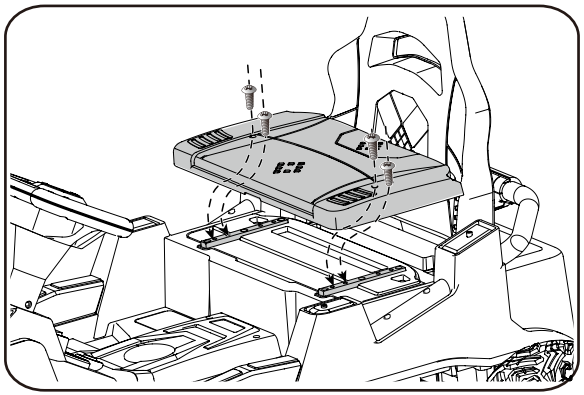


Installation Steps

Install the armrests

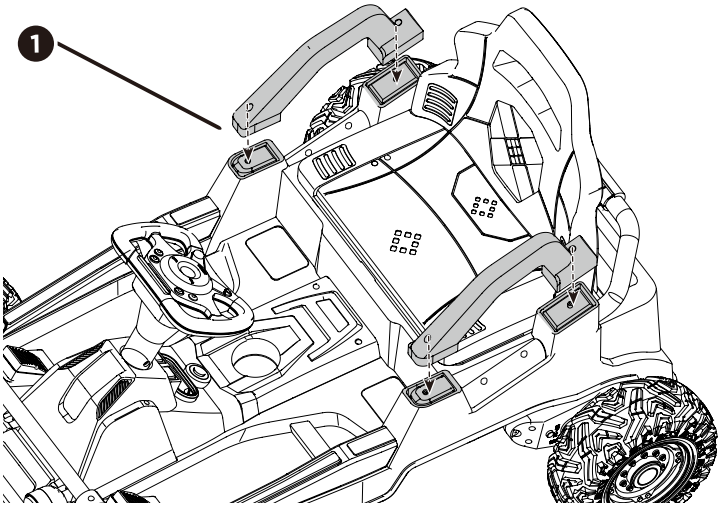


1.Insert the armrest into the slot.

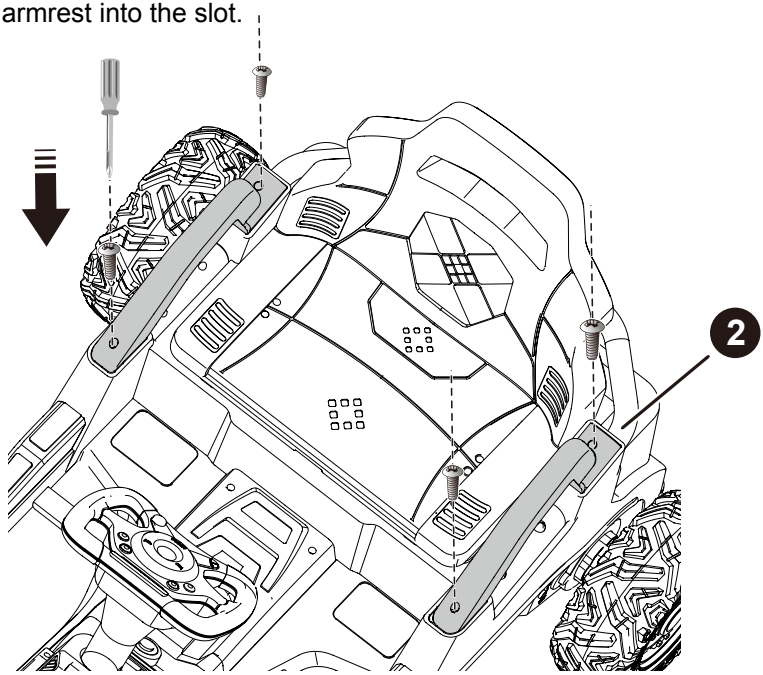

2.Secure the armrest with screws.

Dashboard Indication

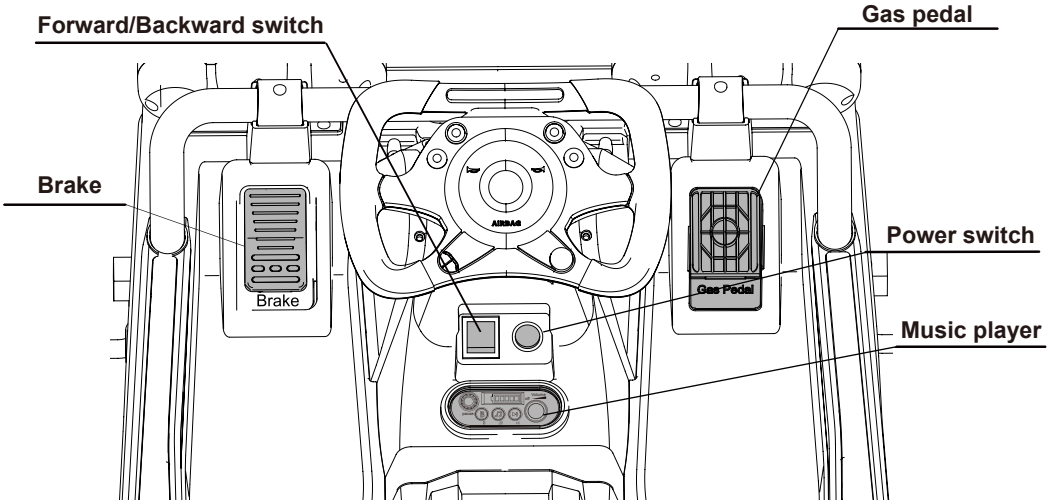

1.Power switch

Press the red power switch to turn on/off the vehicle. You will hear an engine when the car is powered on. At the same time, the headlights and colored lights on both sides will light up.

2.Music player

3.Brake

Step on the brake pedal switch and the car will stop.


4.Forward/Backward switch

In manual steering mode, the user can press the forward/backward switch to make the vehicle go forward or reverse.

5.Gas pedal


Step on the gas pedal and the car will move.

Music Player Operation

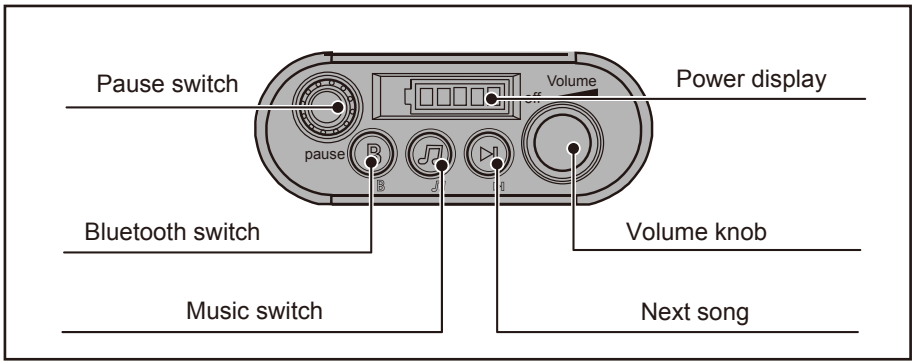

Remote Control Operation

Step 1: Open the battery cover of the remote control and put 2 pcs AAA(1.5V) batteries into it.
Step 2: Turn on the power switch on the car.
Step 3: Press and hold the Forward and Back buttons at the same time, the speeddisplay light will flash. Wait for a moment, the speed display light stops flashing, which means that the remote control and the car have been paired successfully.
Speed button: A red light for low speed, two red lights for medium speed, three red lights for high speed.
Brake button: Press the brake button (P button) to stop the car, and the red speed display light will flash. Press the brake button once again, the car will work again.

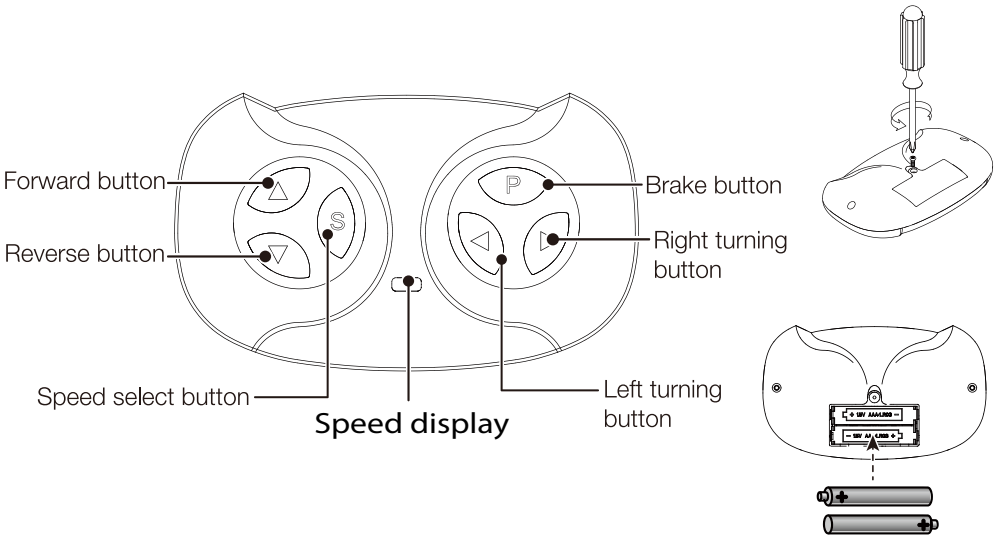


Note: When the remote control is paired and in operation, the remote will override
the manual mode, and the pedal switch of the car will be invalid. If the remote is


Charging Indication

⚠ WARNING!

- **Only an adult is allowed charge and recharge the battery!**
- **This charging protection will cut all all the functions of the vehiclewhen charging.**

- The vehicle must be OFF when charging.
- When the vehicle begins to run slowly, recharge the battery.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

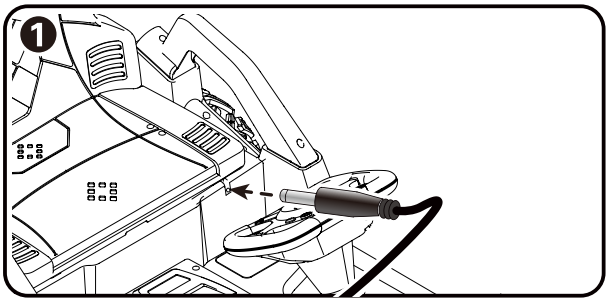

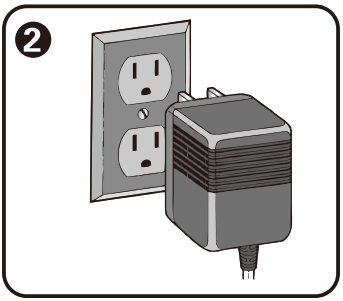

1. Plug the charger port into the input socket (the socket is below the seat).

2. Plug the charger plug into a wall outlet. The battery will begin charging.

Note:

- Damage to the battery may occur if it is completely drained.
- Charge the battery for about 8 - 10 hours.
- Do not charge the battery for more than 20 hours.
- **Charge the battery at least once a month even if not operating the vehicle for a long time to maximize the battery life.**
- Do not charge or store the battery upside down.
- Keep the charger and battery away from flames, sparks, or any flammables.

Troubleshooting Guide

IMPORTANT! If you experience a problem with your vehicle, first check the Problemsand Solutions Guide below,. If you still experience a problem, please contact customer service by WhatsApp at (661)241-3484 (5:30 PM - 8:30 PM PST, Monday toFriday) or send email to anpabo.service@gmail.com.

Problem	Possible Cause	Solution
Vehicle does not run/Can not move	Power cable is not connected	Please refer to the installation steps to ensure that all wire connectors are connected. If you are not sure if the power cable is connected well or not, reconnect the power cable and see if the vehicle can be turned on.
	Undercharged battery	Charge the battery. A new battery should have been charged for at least 12 hours before using the vehicle for the first time. After first-time use, recharge the battery for 8-12 hours after each use. Never charge the battery longer than 20 hours.
		Check all connectors. Make sure the charger connector is plugged into the battery, and that the charger is plugged into the wall.
		Make sure power flow to the wall outlet is "ON".
	Charging Protection	The car can't be started up at all when in charging state. Please unplug the charger from the outle wall and unplug the charging port from input socket.
	Charger is not working	There is no sure way to tell if your charger is working unless you have a volt meter. If you suspect there is a problem with your charger, contact the seller or Customer Service for diagnosis and repair.
	Dead battery	If your battery is old or if you have not followed Battery Care instructions, your battery may be dead. If you are unsure whether or not the battery is dead, contact the seller or Customer Service for diagnosis and repair.
	Motor damage	Contact the seller or Customer Service for diagnosis and repair.
Vehicle was running but suddenly stopped	Loose wire or loose connectors	Please refer to the installation steps and check all wires and connectors to ensure that all wire connectors are connected, and that there are no loose wires around the motors.

Troubleshooting Guide

Vehicle was running but suddenly stopped	Tripped thermal fuse	A thermal fuse may "trip" and shut down operation of the vehicle if the vehicle is overloaded or the driving conditions too severe. The fuse will automatically reset itself after approximately 25 seconds, allowing the vehicle to resume normal operation. To avoid repeated automatic shutdowns, do not overload the vehicle by exceeding the 132 lbs maximum weight capacity or by towing anything behind the vehicle. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motors. If a thermal fuse continually trips. contact the seller or Customer Service.
Short run time	Undercharged battery	Charge the battery. A new battery should have been charged for at least 12 hours before using the vehicle for the first time. After first-time use, recharge the battery for 8-12 hours after each use. Never charge the battery longer than 20 hours.
		Check all connectors. Make sure the charger connector is plugged into the battery, and that the charger is plugged into the wall.
		Make sure power flow to the wall outlet is "ON".
	Overcharged battery	There is no sure way to tell if your charger is working unless you have a volt meter. If you suspect there is a problem with your charger, contact the seller or Customer Service for diagnosis and repair.
	Battery is old and willnot accept full charge	Even with proper care, a rechargeable battery does not last forever. Average battery life is 1 to 3 years depending on vehicle use and use conditions. If you are unsure, consult the seller or Customer Service.
Vehicle runs sluggishly	Battery needs charging	Be sure to charge the battery after each use.
	Battery is old and will not accept full charge	Even with proper care, a rechargeable battery does not last forever. Average battery life is 1 to 3 years depending on vehicle use and use conditions. If you are unsure, consult the seller or Customer Service.
	Vehicle is overloaded	Do not exceed the maximum load capacity of 132lbs or tow objects behind the vehicle.
	Driving conditions are too stressful	Use only on generally level ground.

Troubleshooting Guide

Loud clacking or grinding noise from motor gearbox	Broken gears	Contact the seller or Customer Service.
Vehicle does not respond to remote control	Remote is not paired with the vehicle	Pair the remote with the car by following the instructions.
	Batteries in the remote control have run down	Replace new batteries.
	Remote is damaged	Contact the seller or Customer Service
Charger gets warm during use	It is normal for some chargers to get warm during use	No action required. If your charger does not get warm during use, it does not mean that it is not working properly.
Vehicle can't turn right/left	The steering wheel is not connected properly	If the car only can be turned left/right by controlling the remote, but can't turn left/right by using the steering wheel, please reinstall the steering wheel.
	The front axle or steering hook is not installed in the correct way	1. Please refer to the installation video on the product page to ensure that front wheel bracket is installed properly. 2. Make sure that the steering hook is hooked with the hole of front wheel bracket.
	The steering motor is broken	If your car steers normally in manual mode, but won't steer when using the remote, please contact customer service to get a new steering motor for replacement.
Battery is not charging	Charger is broken	If the indicator light of the charger keeps showing red and never turns green, please contact customer service.
	Dead Battery	Please replace a charger and try to charge the car first. If the indicator light of the charger is still red after changing a new charger, which means there is a problem with the battery and needs to replace the battery.
	Charging port is broken	When the charger is plugged into the wall plug or socket, but the green light of the charger is always on (the battery is run out of power at this time), please contact customer service to get a new charging port.

For assistance, please send an Email to: anpabo.service@gmail.com or WhatsApp: +1 (661) 241 3484

Safety Reminder

Safety Reminder

• Do not drive the car on slippery streets, roads, slopes, and other dangerous places.
• Do not drive the car on a smooth surface, such as marble and floor tile.
• The car is only for one person. Do not exceed the load limit. The maximum load is 132 lbs.
• Do not modify the original circuit or other electric devices of the car.
• Keep the remote and this ride-on car away from rain and fire.
• The car may stop when it encounters big obstacles. Move away the obstacles, then it will run again.
• Please turn off the power when the car is not in use. Plug out the battery connector. If the car needs to be idled for a long time, please plug out the battery connector.

The following safety hazards may result in serious injury or death:

• This product contains small parts. Keep children away during assembly. Make sure to remove all packaging material and parts from underneath the vehicle's body.
• Use of this vehicle in unsafe conditions, such as snow, rain, loose dirt, mud, sand, or gravel, may result in an unexpected accident, such as tipping over, and could damage the electrical system or battery.
• Do not operate this vehicle in an unsafe manner. Examples include but are not limited to: Pulling the vehicle with another vehicle or similar device/ Allowing more than 1 rider/ Pushing the user.
• Never leave a child unattended. Make sure that the child always sits in the seat when using this vehicle.

Maintaining/Note About Fuses

Maintaining

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Note About Fuses

The battery features a thermal fuse with a rest fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact after-sales service center.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

⚠ Risk of Fire.Do Not Bypass. Replace Only with A New Fuse.

Disposal Of Battery/Warranty

Disposal Of Battery

•Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
•Do not dispose of a lead-acid battery in your regular, household trash.
•The lead-acid battery must be recycled or disposed of in an environmentally sound manner.
•The incineration, landfilling, or mixing of sealed lead-acid batteries with household trash is prohibited by law.
•Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries or your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries
•Do not use old and new batteries together, or mix different types of batteries.

Warranty

For the original purchaser, the six-month limited warranty covers our ride-on vehicle. This warranty covers normal use and does not cover the vehicle or battery if damaged by unreasonable use, neglect, abuse, accident, misuse, improper service or other causes not arising out of defects in material or workmanship. Evidence of any attempt at consumer repair will void this warranty.

We will be happy to correct any problems that you may have or answer any of your questions regarding the purchase of this product. Please contact us at our customer service email: anpabo.service@gmail.com or WhatsApp: +1 (661) 241 3484 for any assistance and replacement parts.

EXECUTION STANDARD :EN 71 EN62115 ASTM F963 CPSIA