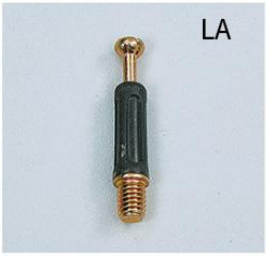
Dear Customer,
Thank you for choosing our products! We truly value your experience. If you find any damaged plates or accessories during the installation, please do not hesitate to contact us immediately. We are committed to providing you with a free replacement service to ensure your satisfaction with our products.
Thank you for your understanding and support!
Warm regards,
[Your Name]
Customer Service Email: homefurnishassist@gmail.com

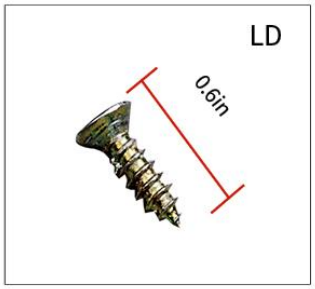


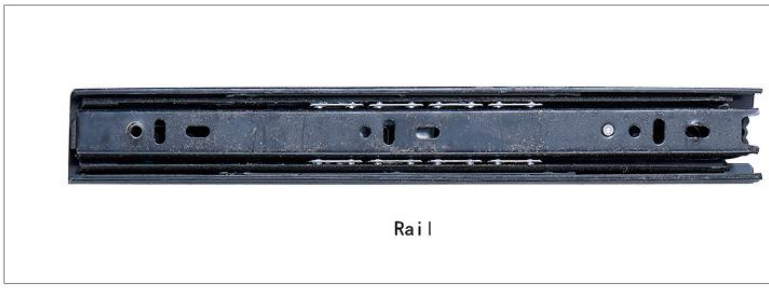

Black connecting rod




large buckle



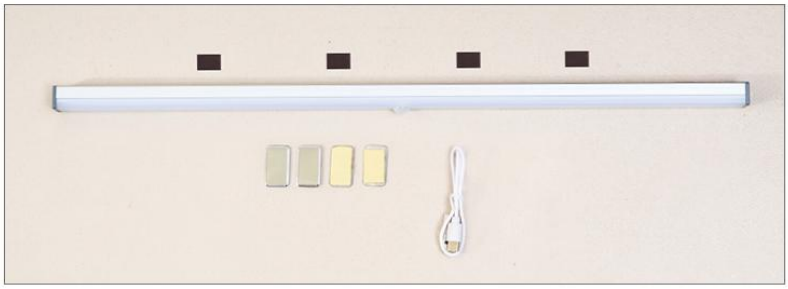

Tip Screws



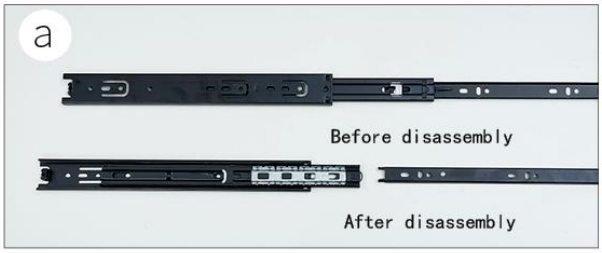


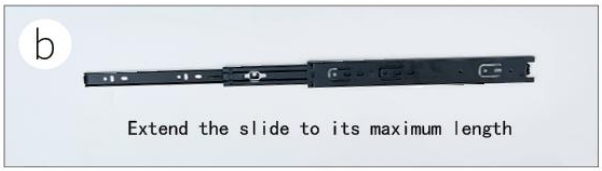




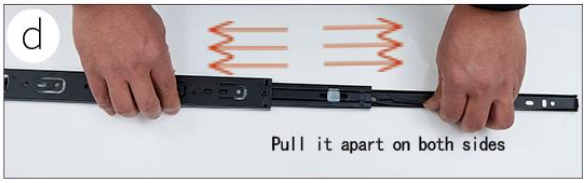
## BEFORE INSTALLING THE PRODUCT, DISASSEMBLE THE SLIDE. SLIDE DISASSEMBLY STEPS

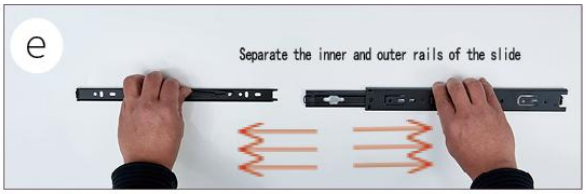






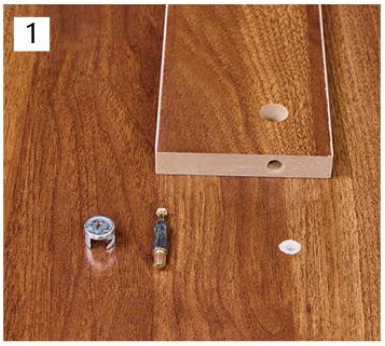


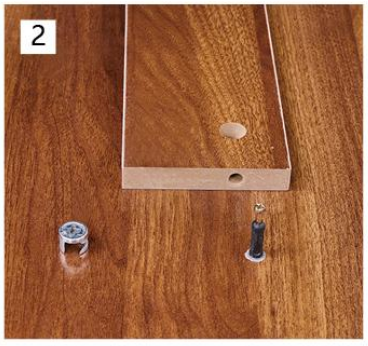













Connecting rods and circular cam locks are fittings used to connect wood panels. The method of use is shown in the diagram. Pay special attention to the direction of the arrow on the circular cam lock. When beginning to place it, ensure the arrow direction aligns with the hole direction on the side of the wood panel. After assembling the panels, tighten the circular cam lock clockwise.(If there is a gap between the panels during assembly, simply adjust the circular cam lock so that the arrow direction aligns with the hole direction on the side of the wood panel.)









001

All boards have numbers on them. If you find any damage, please contact us, and we will promptly send you replacements.



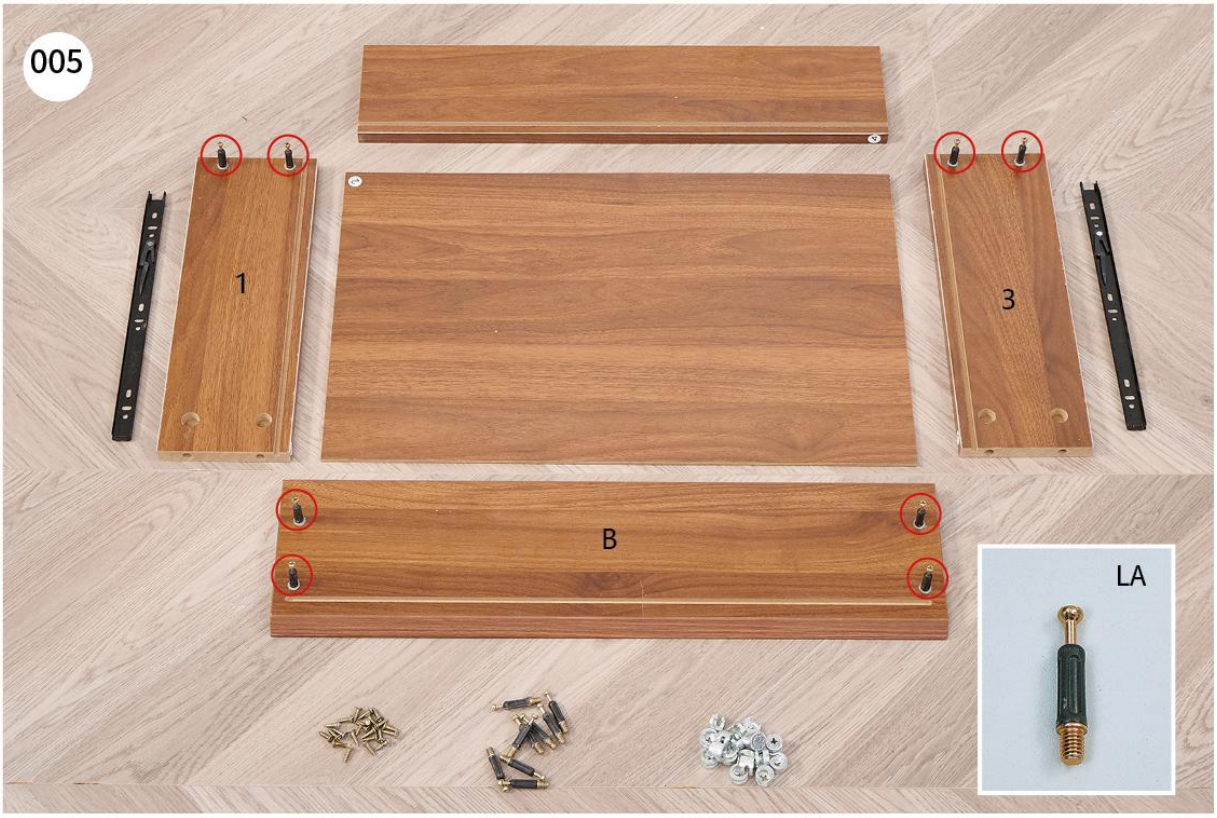

002




Install the red part as shown in the diagram.


003
4
1
2
3
B
C
First, install the drawers. The installation steps for the drawers are identical; we will use one as an example.


004
4
1
2
3
B

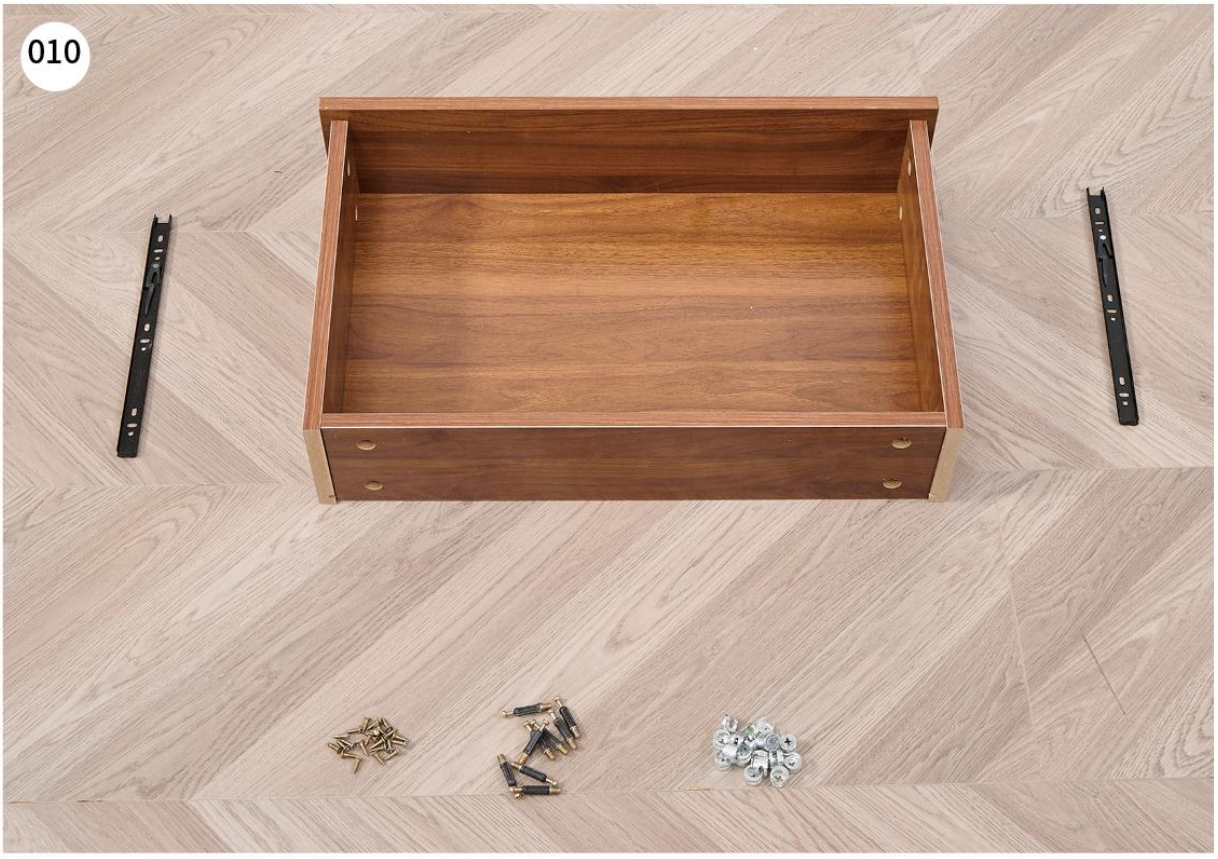

005
1
3
B
LA

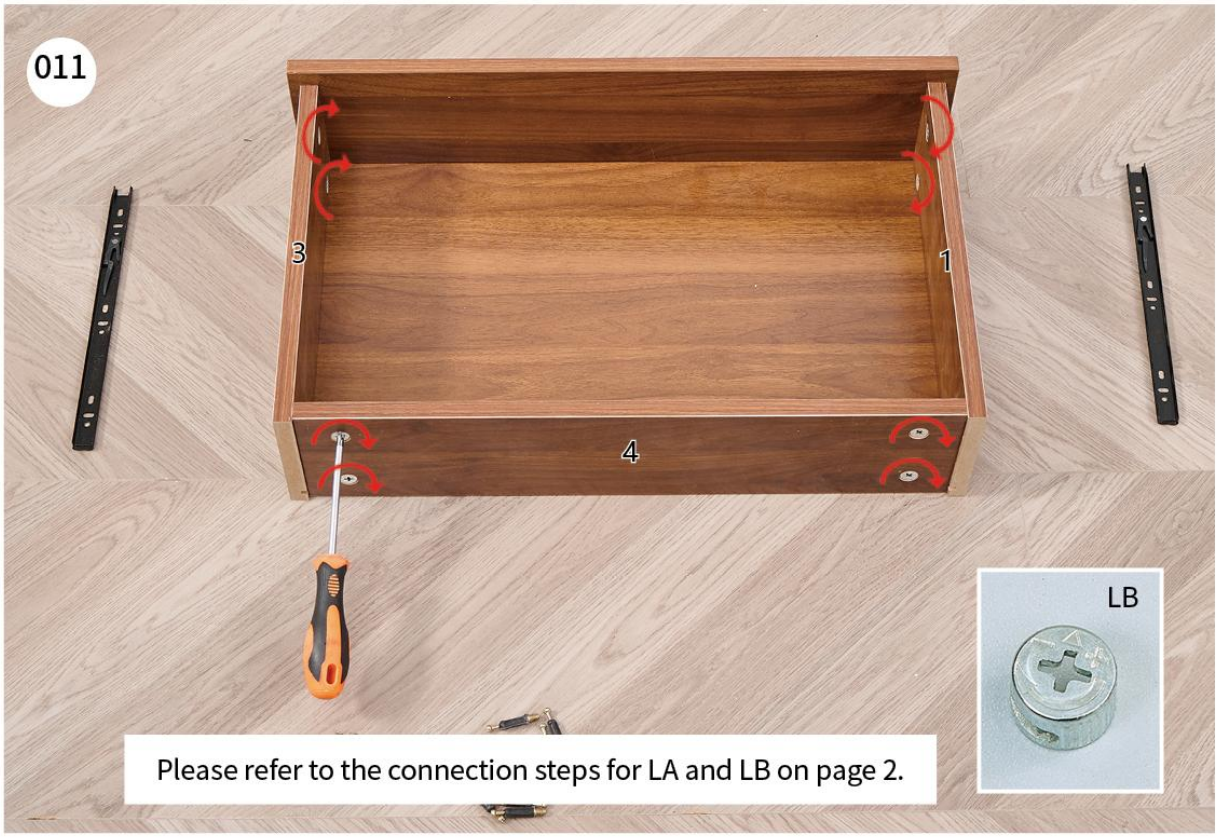

006
4
1
3
Assemble boards 1, 3, and 4 as shown in the diagram.


007
1
3
4
2
B


008
2


009
B

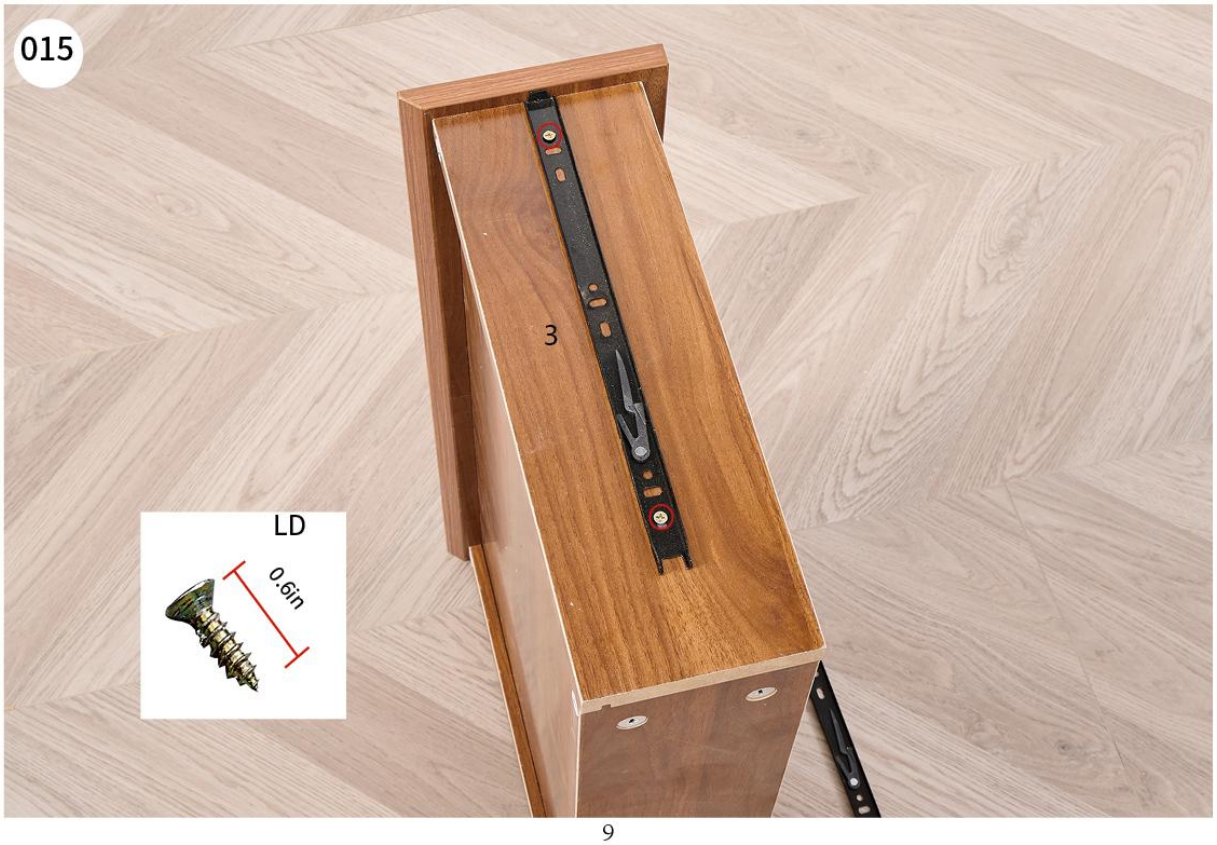

010


011
3
1
4
LB
Please refer to the connection steps for LA and LB on page 2.


012
3
Install the inner rail of the slide track on Plate No. 3.


013
3


014
3


015
3
LD
0.6in

016




Install the inner rail of the slide track on Plate No. 1.

017



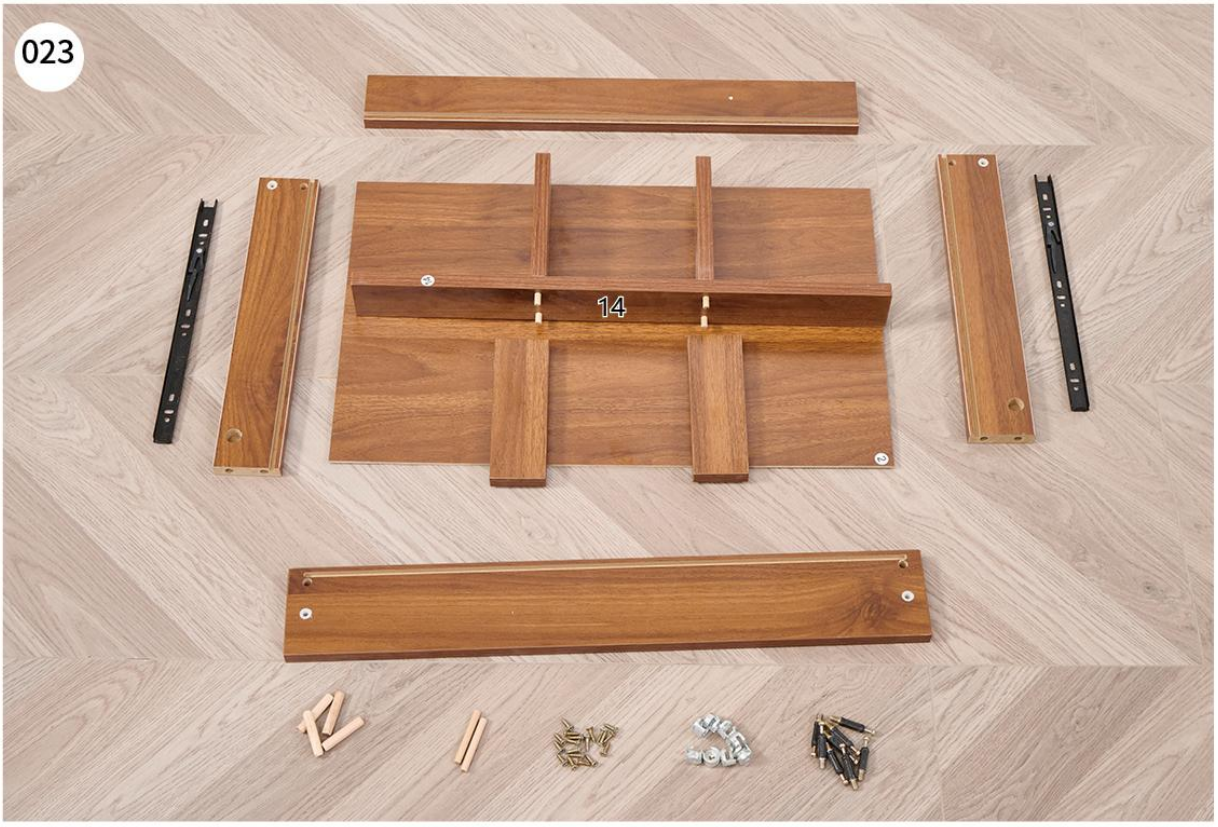

018

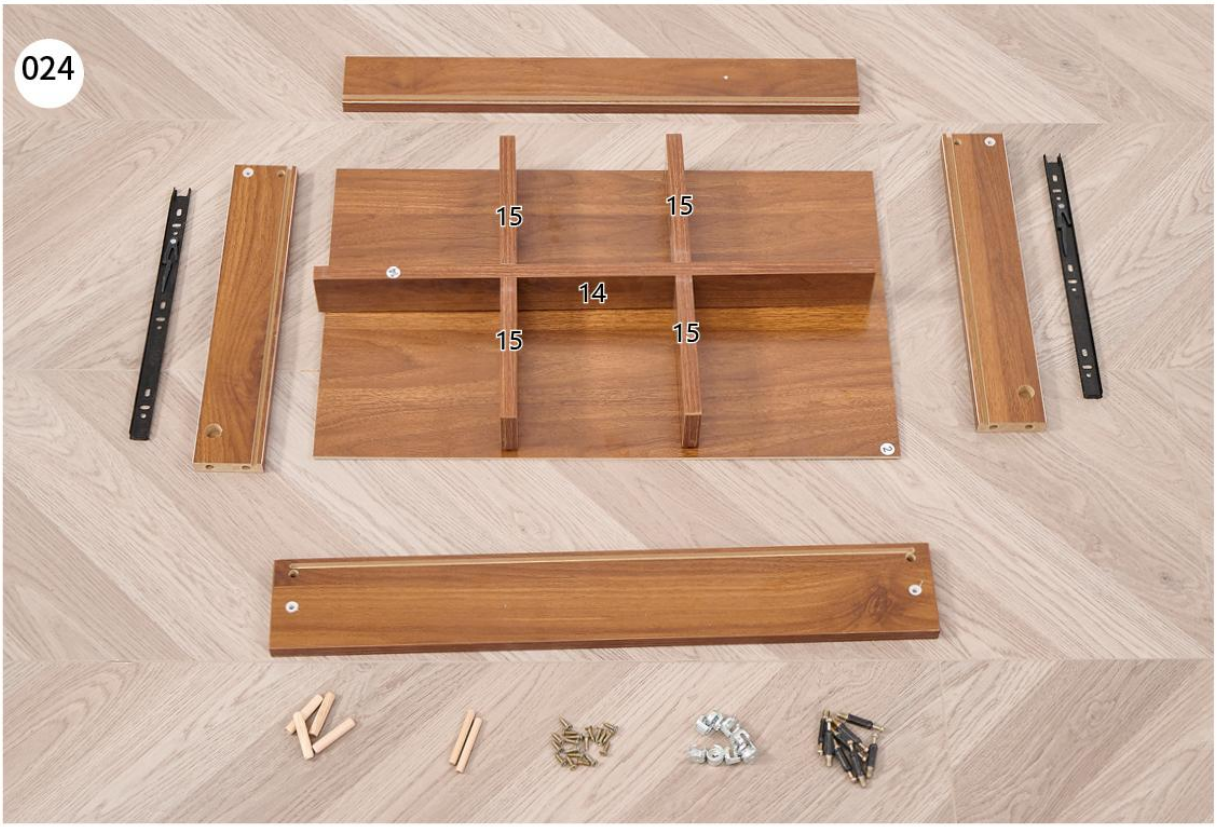


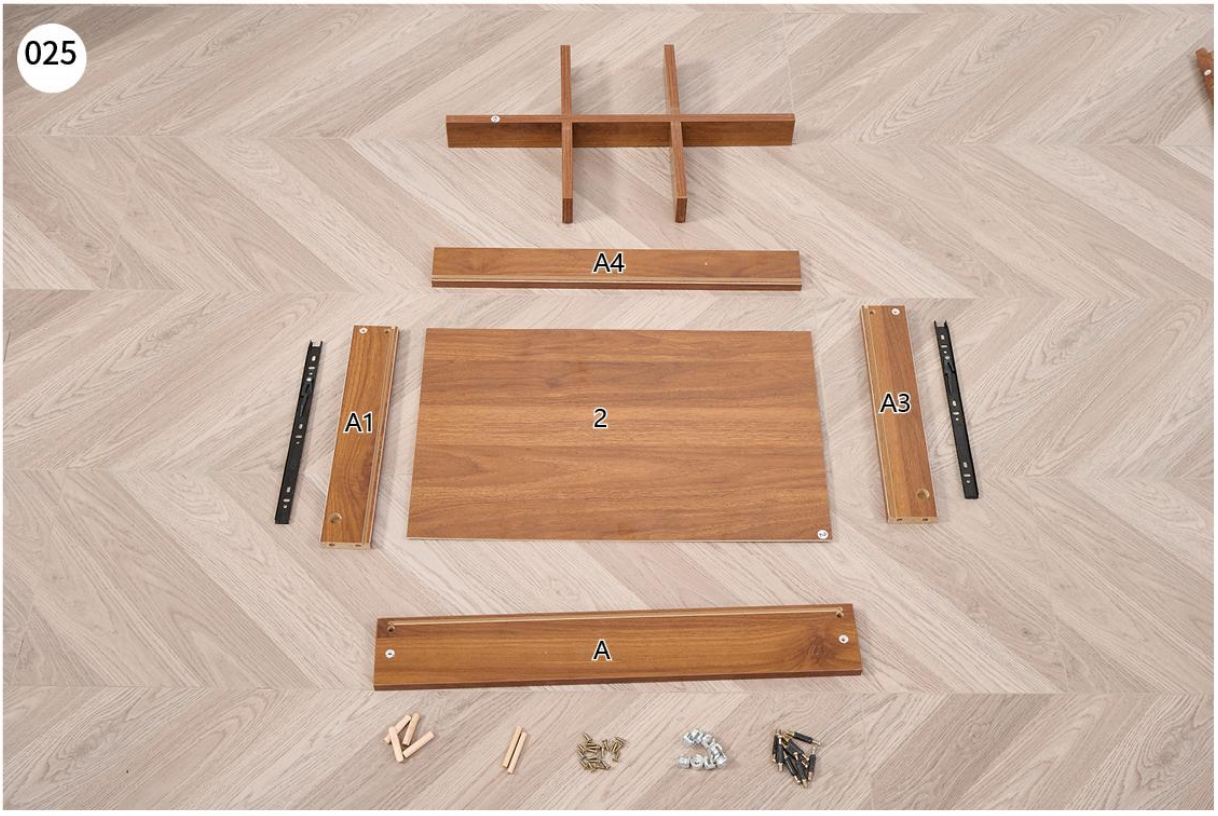

019
B
C
All large drawers have the same numbering and installation steps.

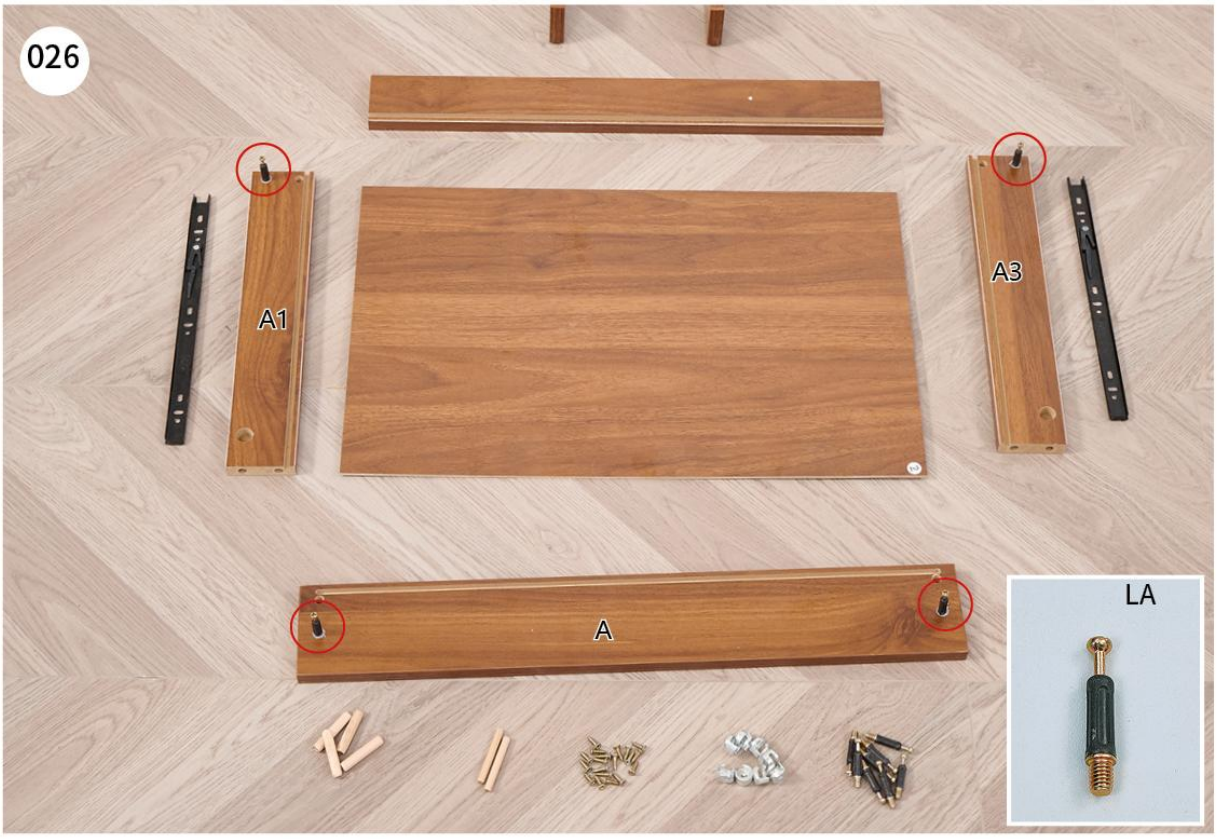

020
A
Install the red part as shown in the diagram.


021
A4
15
15
A3
A1
14
15
2
15
A
022
14
LF
Install Drawer A, which follows the same installation steps as Drawers B and C but with a different numbering.

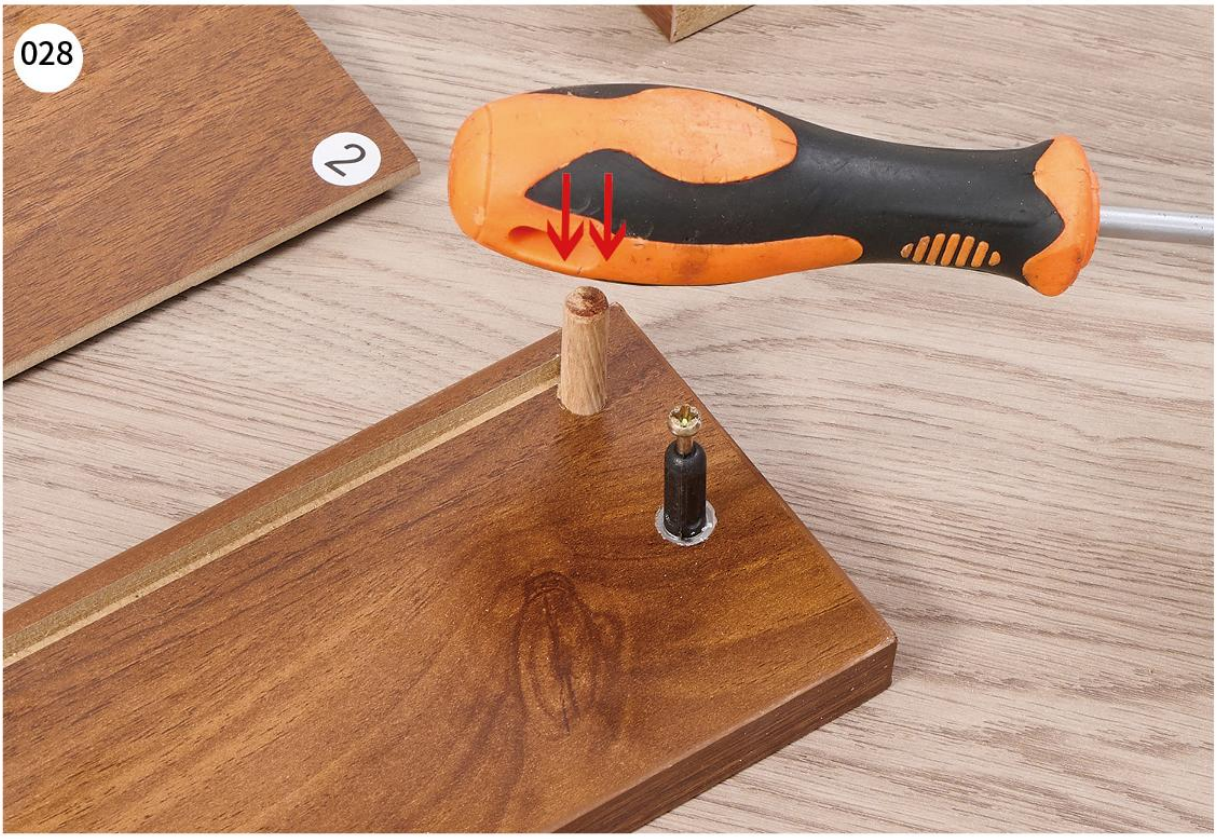

023
14


024
15
15
14
15
15


025
A4
A1
2
A3
A


026
A1
A3
A
LA


027
A1
A3
A
LE


028
2


029
A4
A1
A3
2
A


030
A1
A3
A4
2
A


031
2


032
A


033


034
A3
A1
A4
LB


035
A3


036
A3


037
LD
0.6in
A3


038
A1


039
A1


040
A1
LD
0.6in

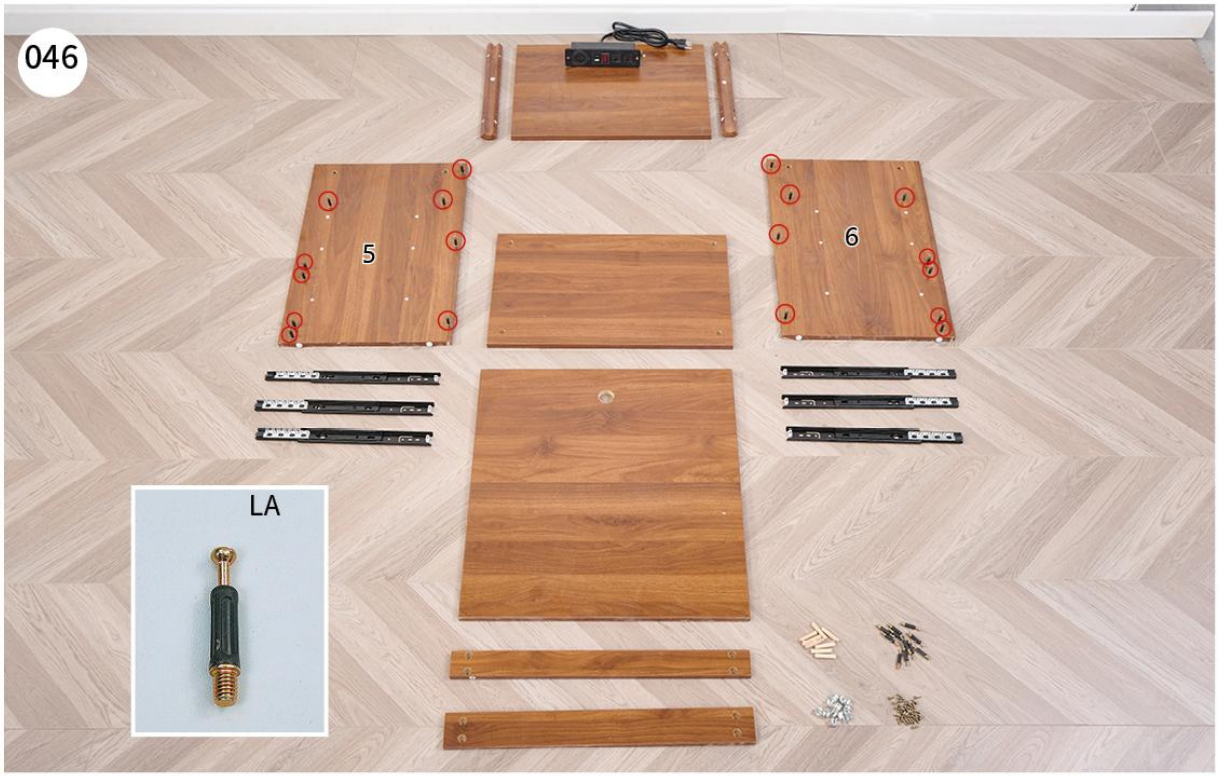

041


042
A4
15
15
A1
A3
14
15
15
A

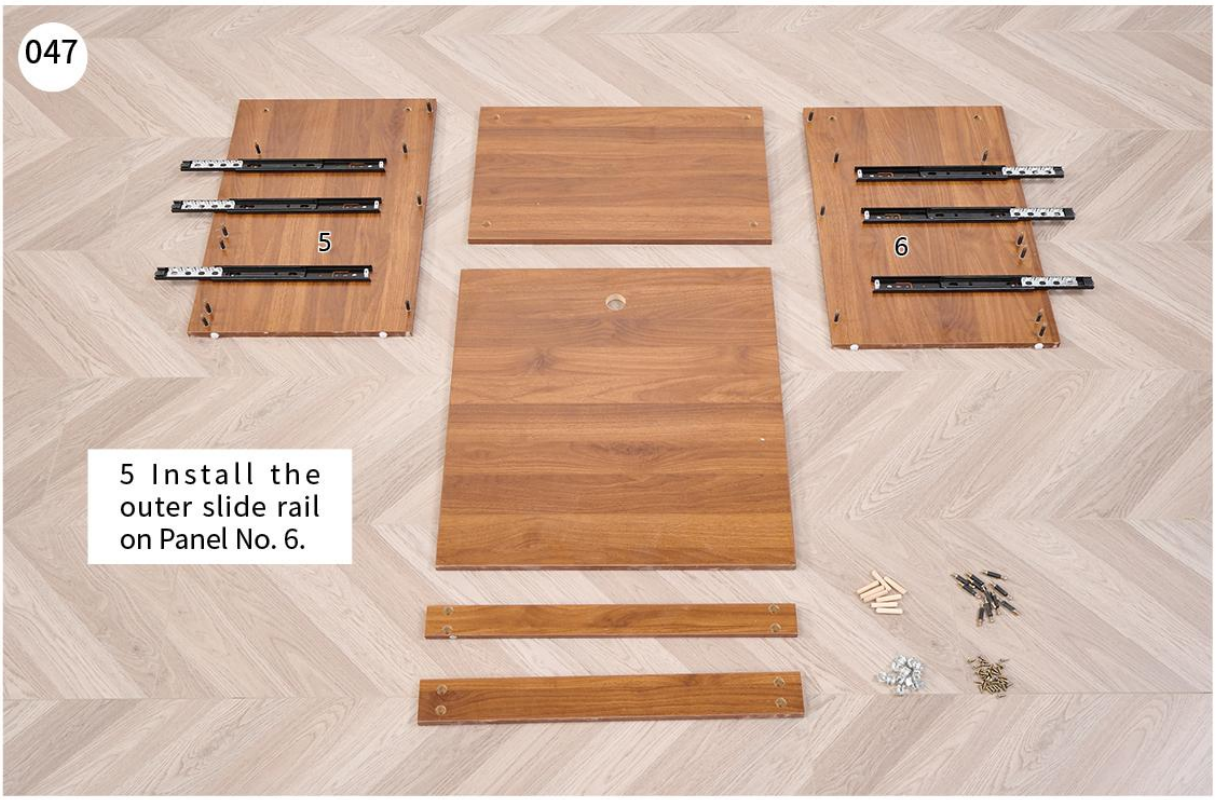

043
A
B
C


044
Install the frame.


045
12
11
13
5
6
8
7
9
10


046
5
6
LA

047


5
6
5 Install the outer slide rail on Panel No. 6.

048


5
Please note: The hole at the very end of the slide rail is for positioning, as shown in the figure.

049


5

050



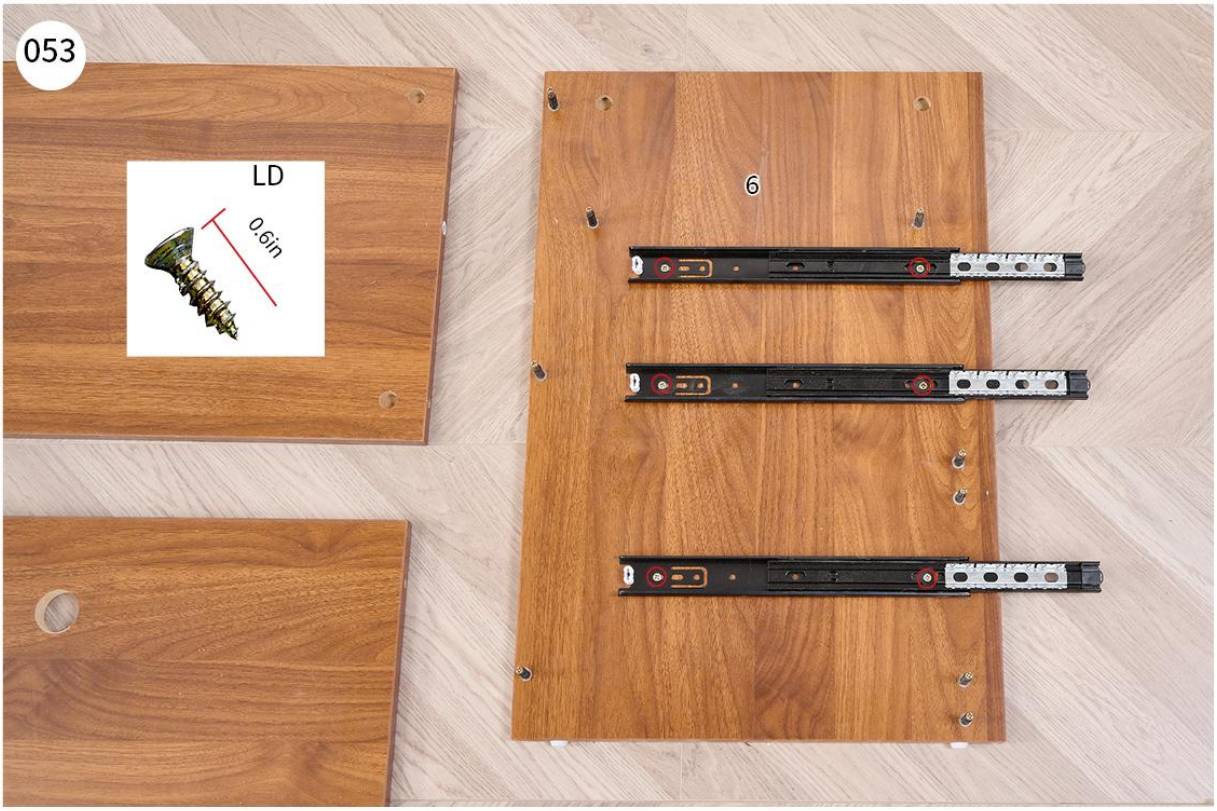

051

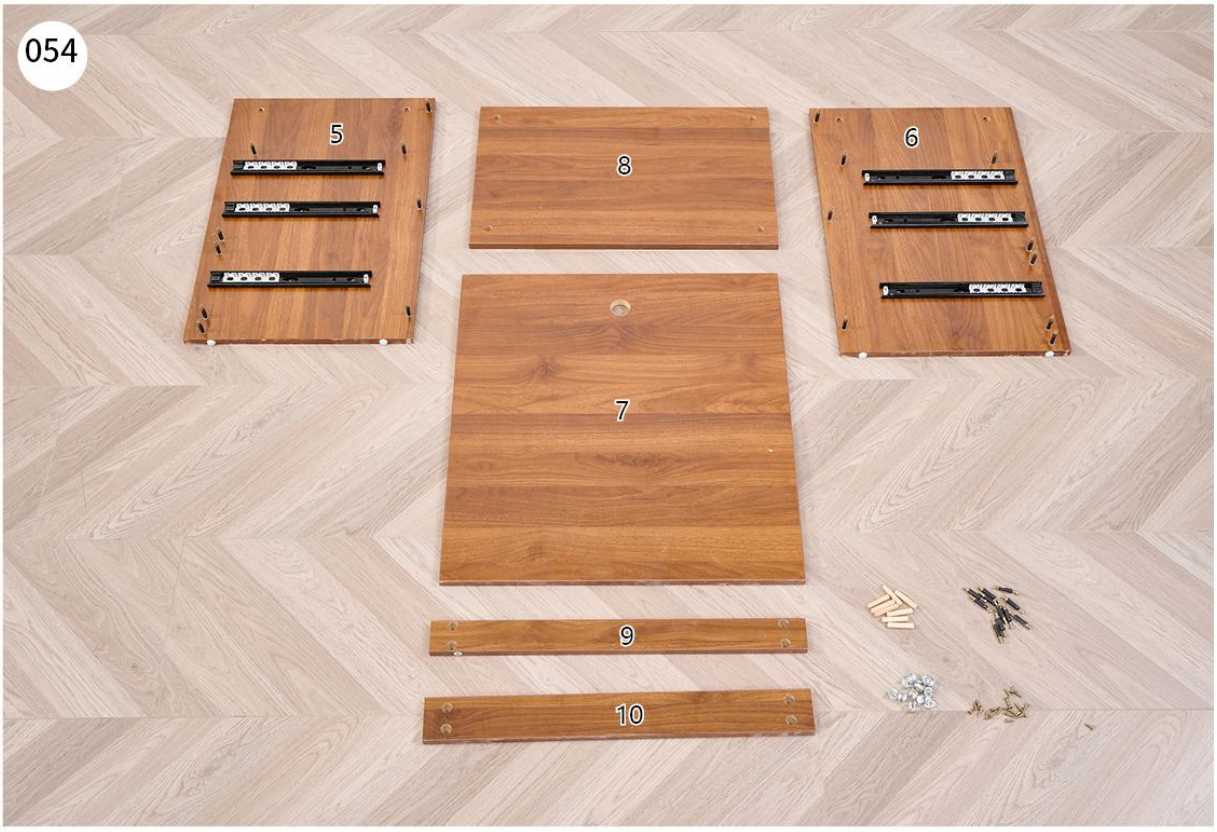


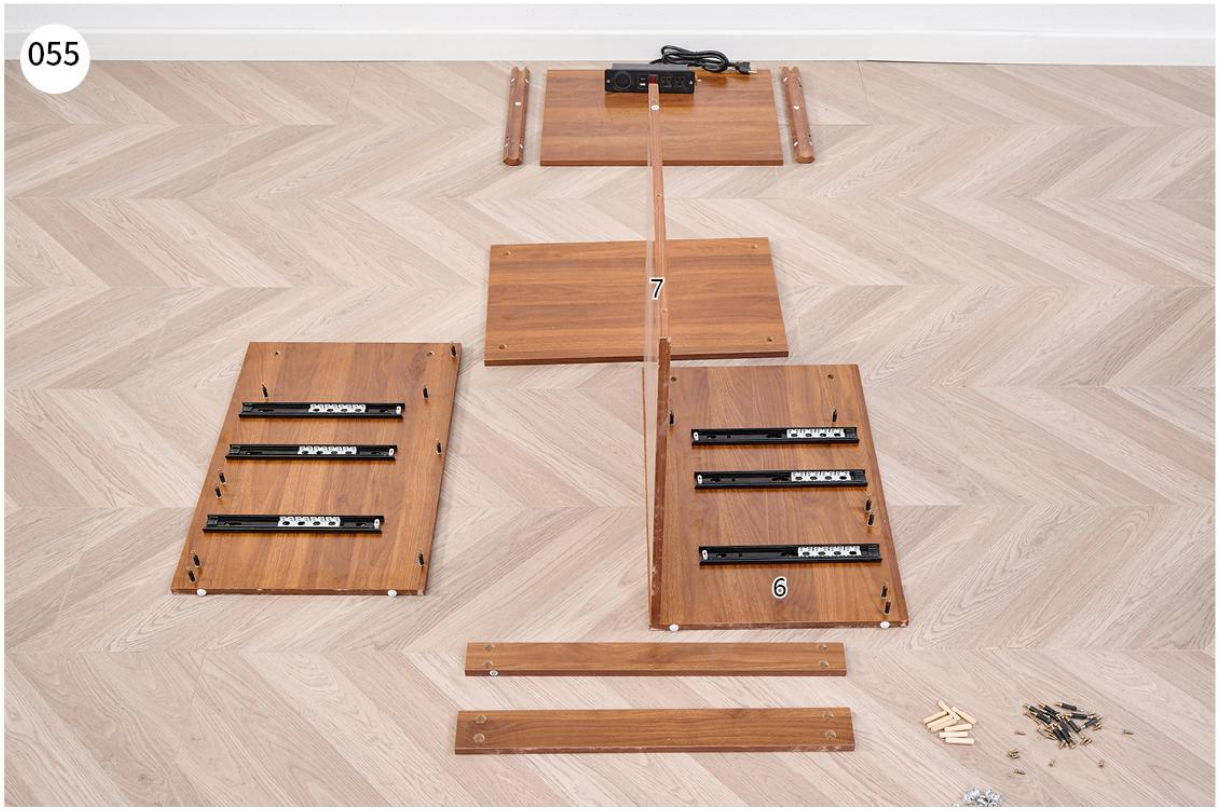

052



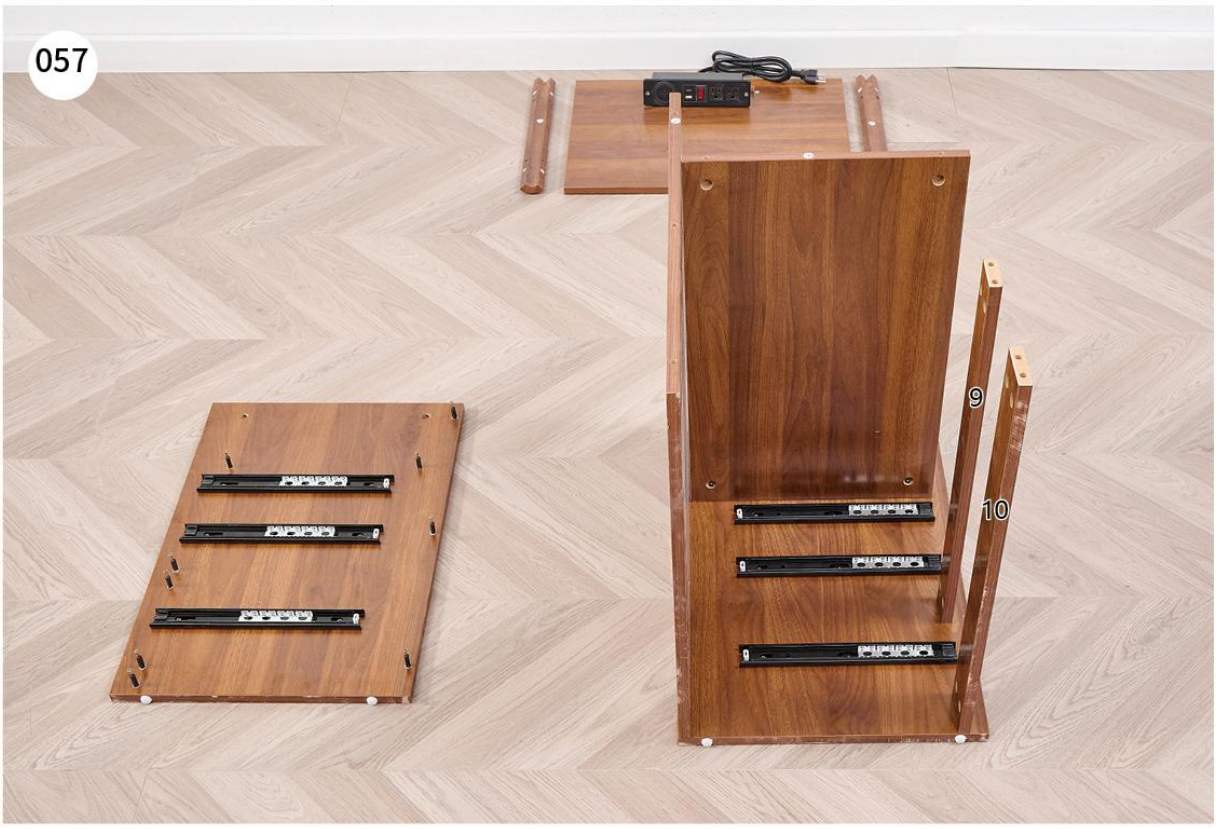

Please note: The hole at the very end of the slide rail is for positioning, as shown in the figure.


053
LD
0.6in
6

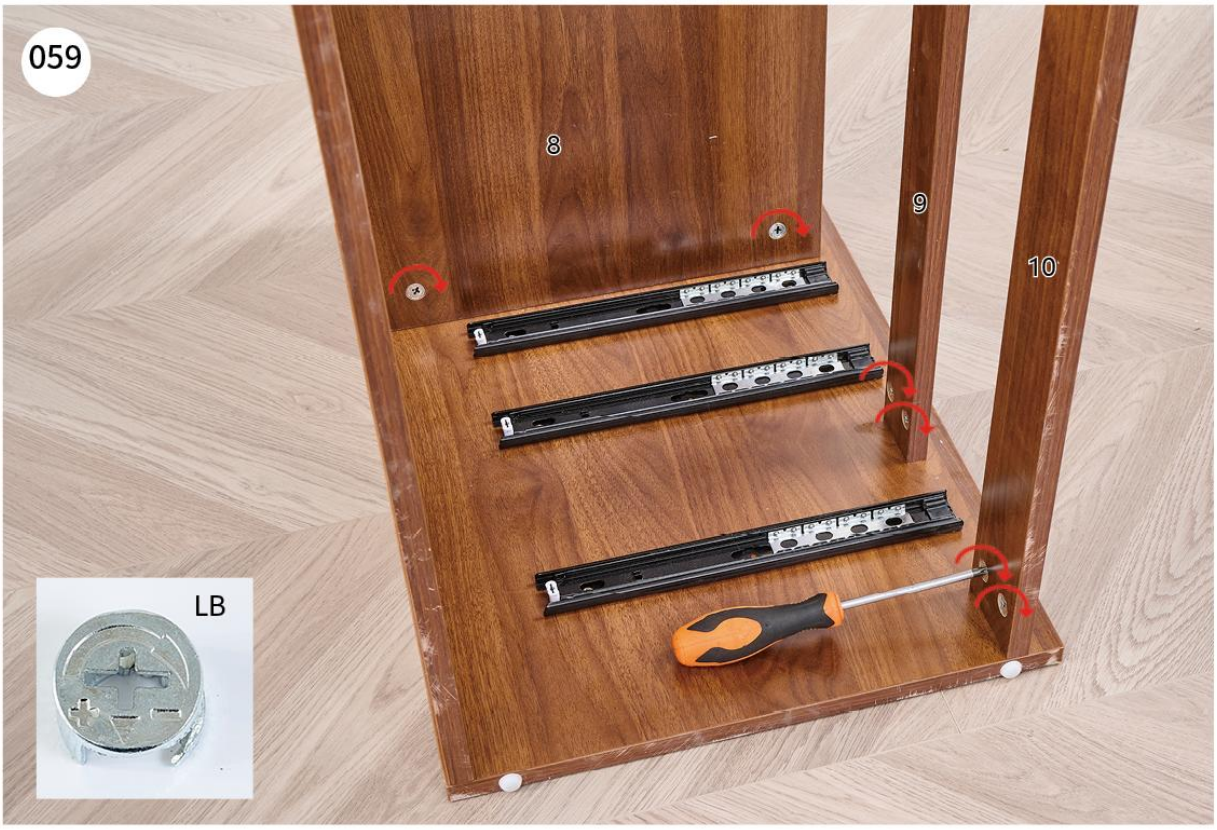

054
5
8
6
7
9
10


055
7
6


056
8


057
9
10

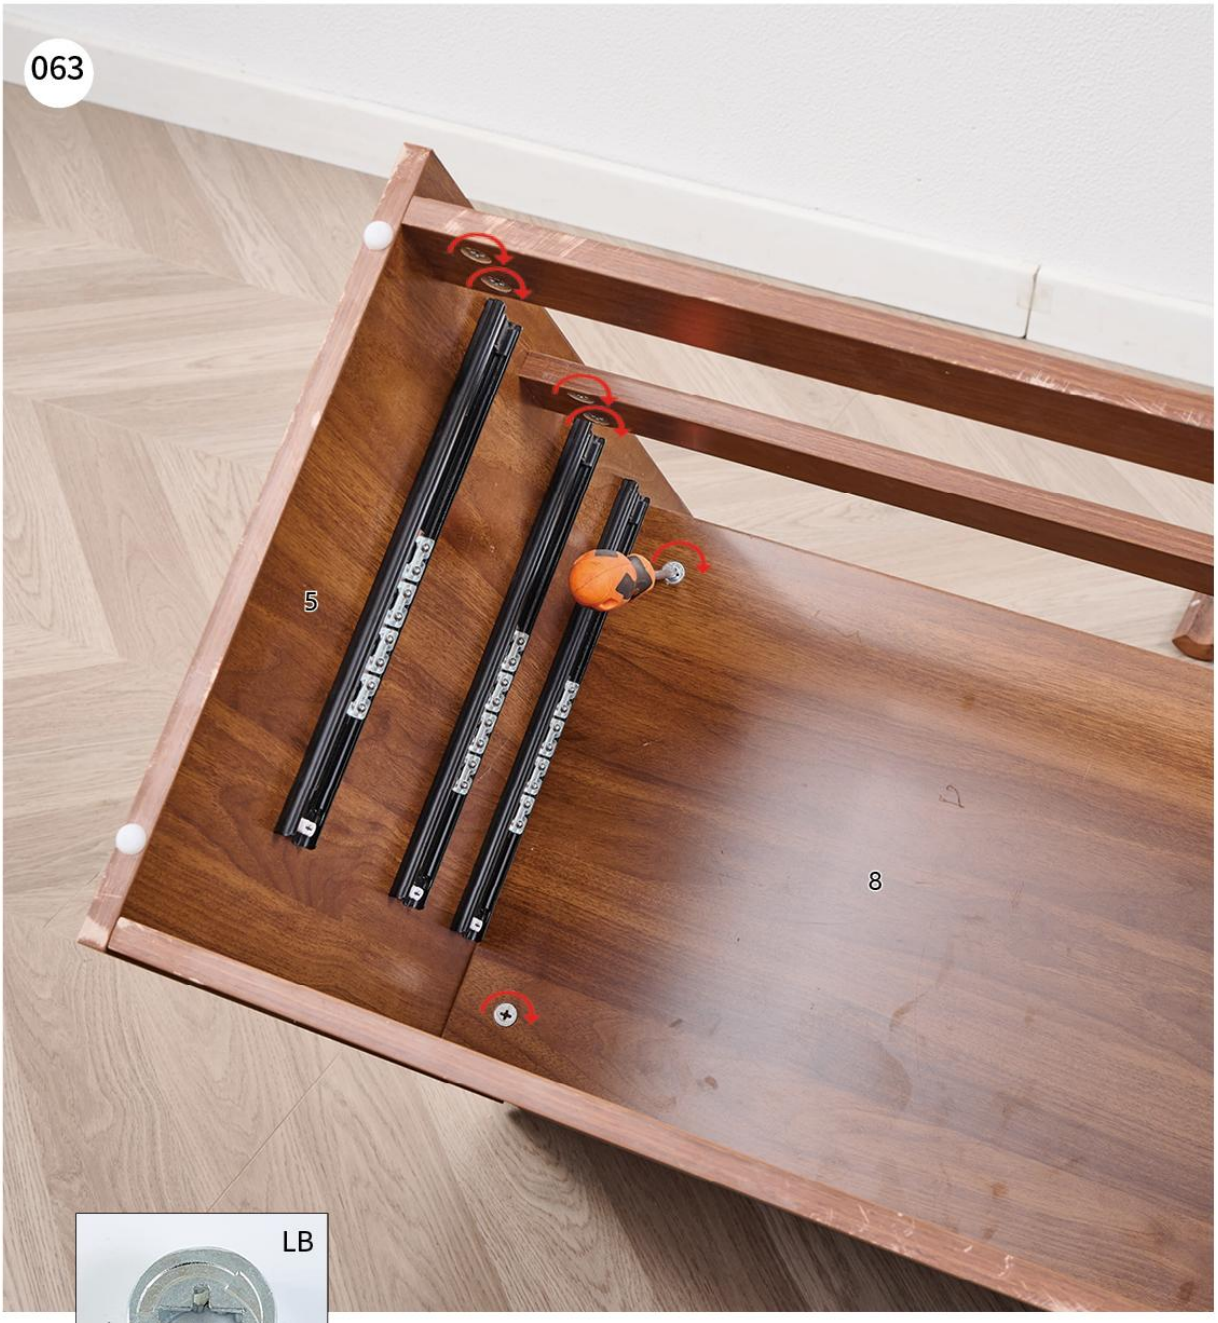

058


059
8
9
10
LB


060
5

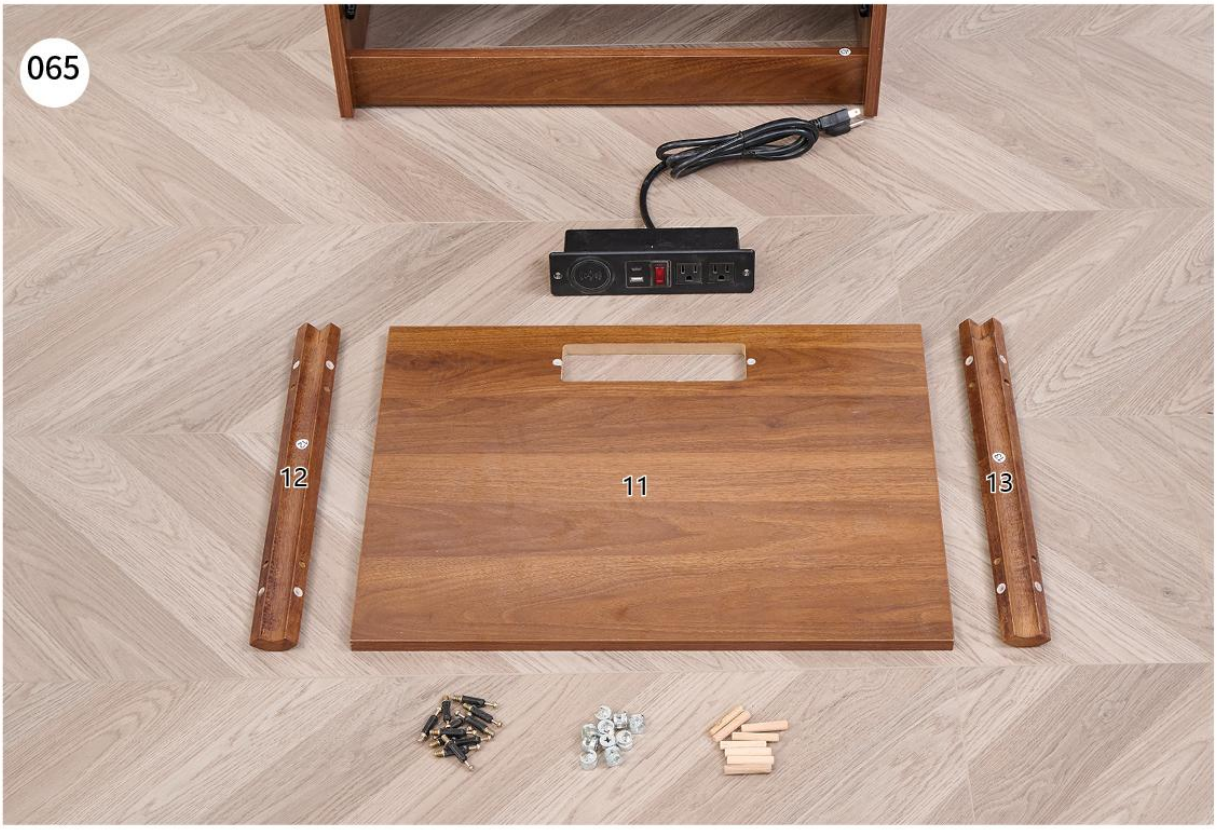

061
7
LB

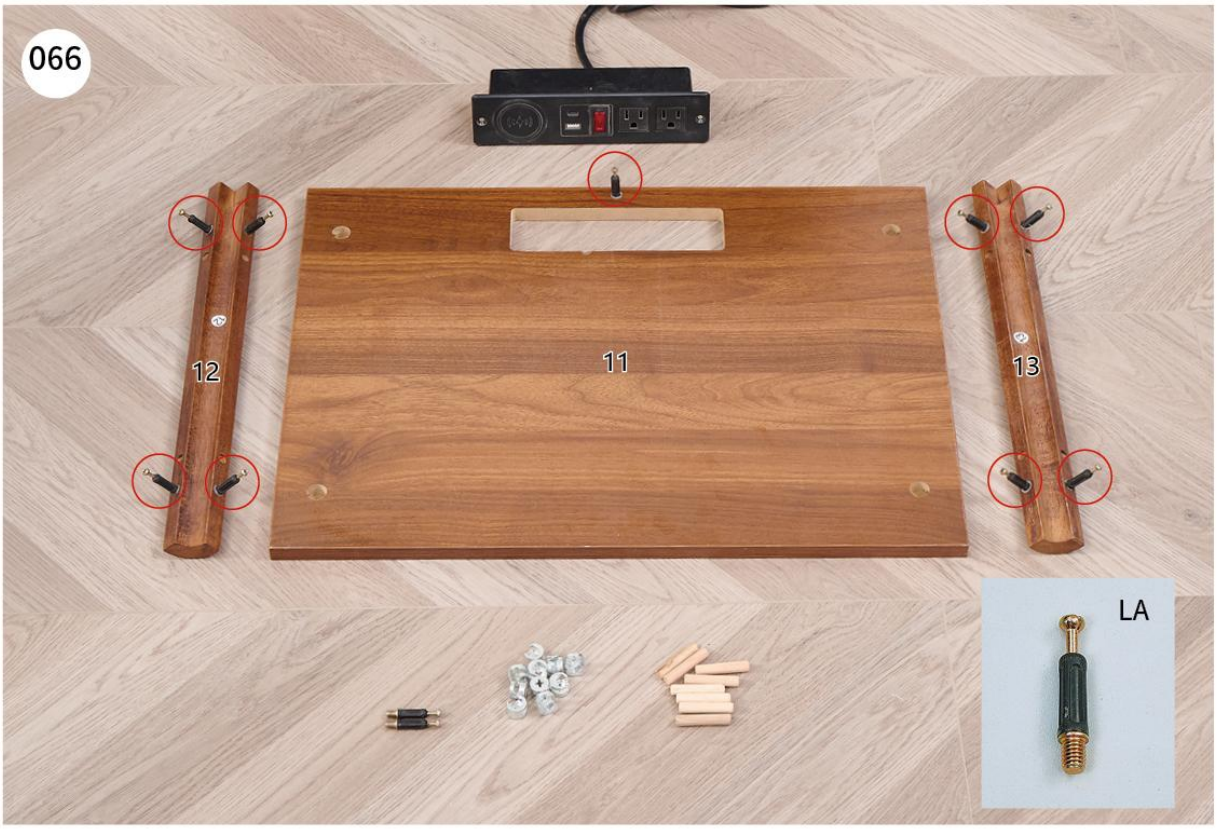

062

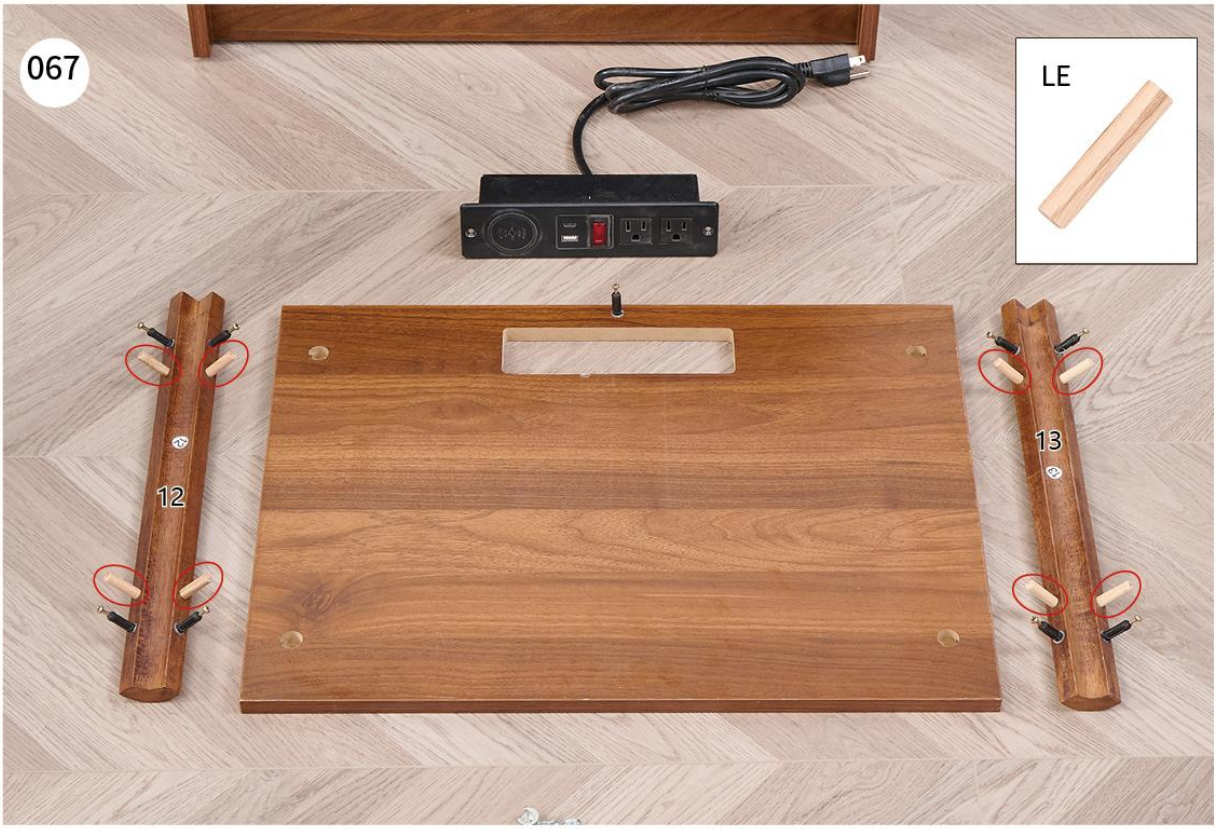

063
5
8


LB


064


065
12
11
13


066
12
11
13
LA


067
LE
12
13


068
Please note that the side with the right angle on Panels No. 12 and No. 13 is the rear side, which is on the same side as the power strip.
12
11
13


069
LB
11


070
12
11
13


071
13
11
12

072



073



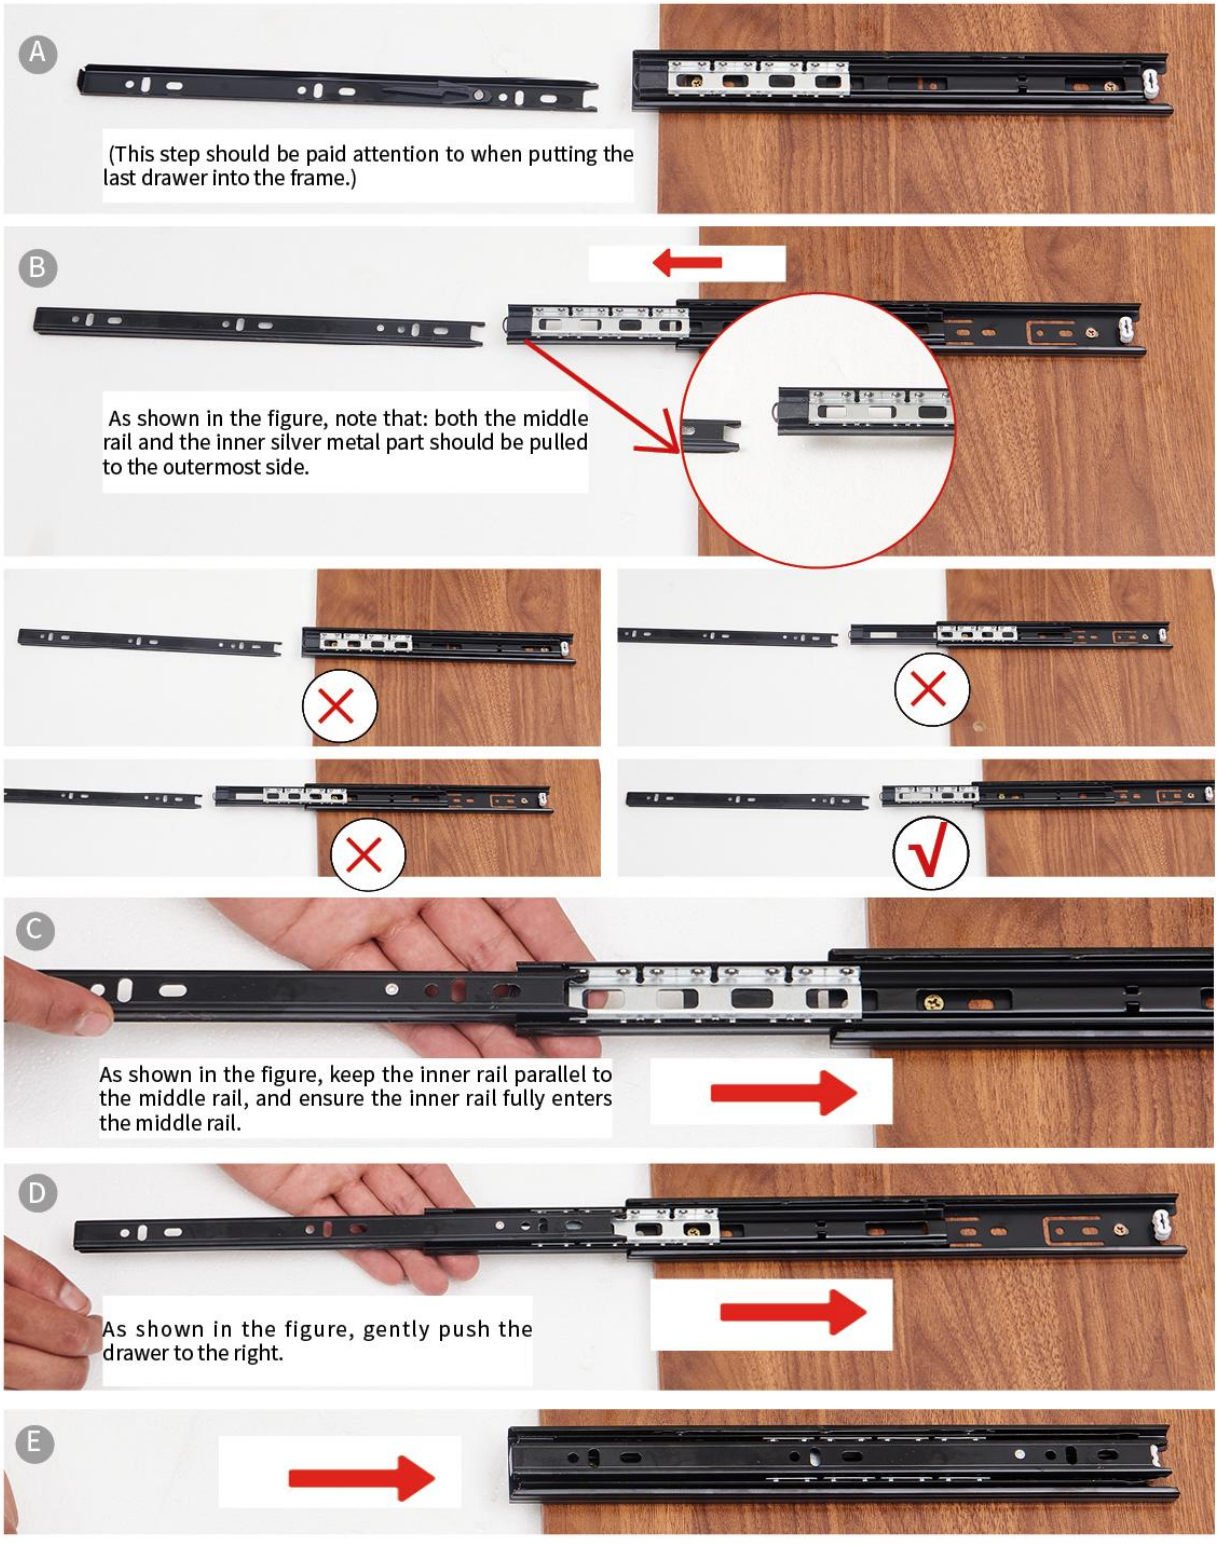

074
LB
7


075


076
LD
0.6in
11


077
A
B
C

# NOTES ON INSTALLING THE DRAWER:




078


079


080


081


082


083


084


085

086

It’ s fine if the drawer isn’ t installed properly the first time. Press the plastic clip on the inner rail of the slide, take the drawer out and reinstall it.



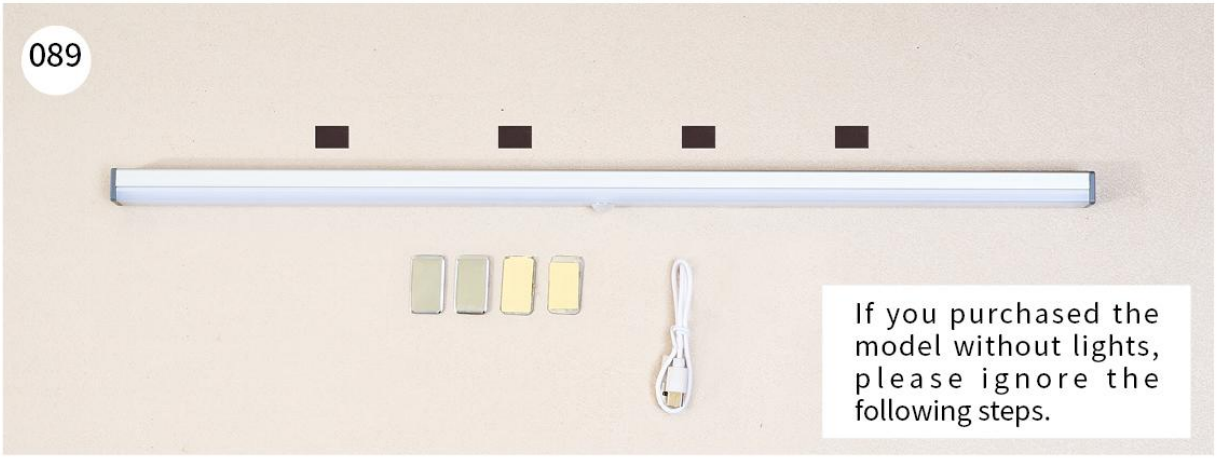
087




088



089



If you purchased the model without lights, please ignore the following steps.

090



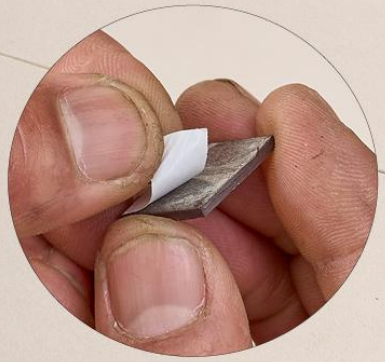
091

Stick the silver magnets onto the surrounding panel



Peel off the protective layer of the silver magnets.

092



Peel off the protective layer of the black magnets and stick them onto the motion-sensing light.

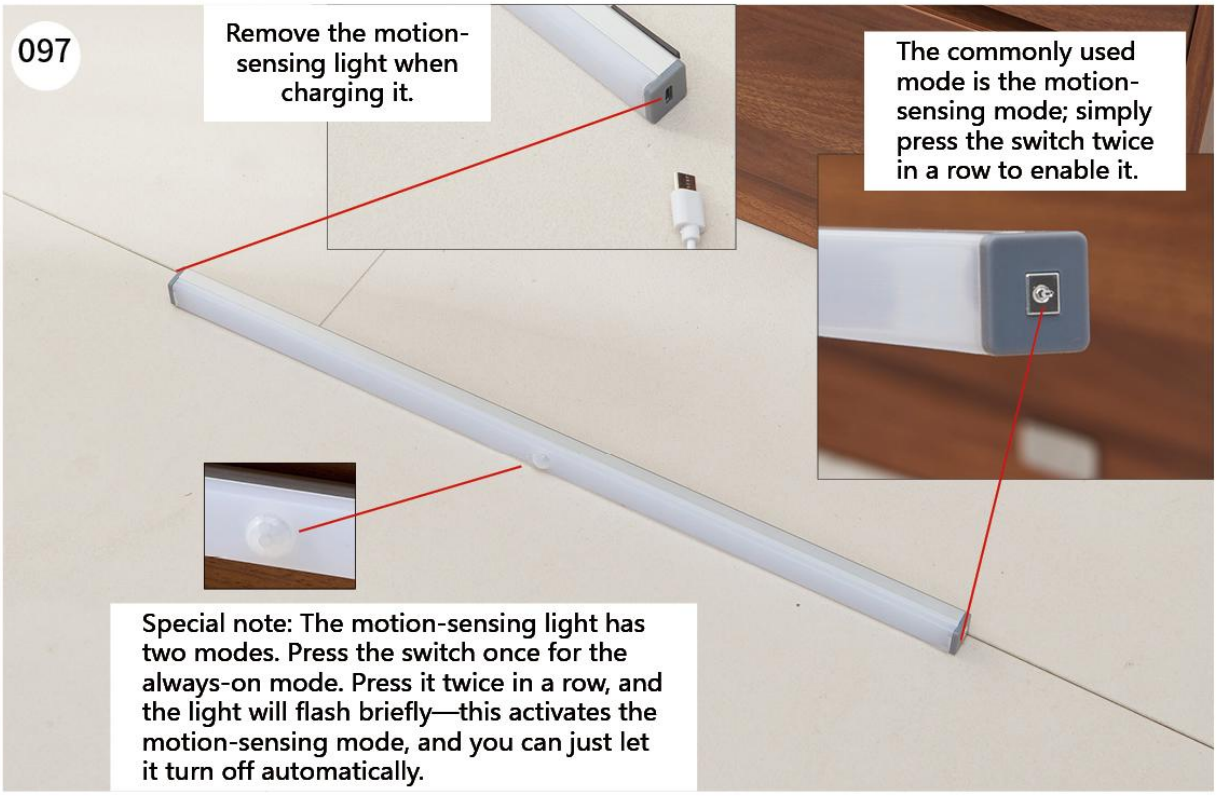
093

Attach the 4 black magnets to the motion-sensing light. (note that their positions should correspond to those of the silver magnets; slight misalignment won’ t affect usage).


094


095


096


097
Remove the motion-sensing light when charging it.
The commonly used mode is the motion-sensing mode; simply press the switch twice in a row to enable it.
Special note: The motion-sensing light has two modes. Press the switch once for the always-on mode. Press it twice in a row, and the light will flash briefly—this activates the motion-sensing mode, and you can just let it turn off automatically.

If there are children at home, we recommend securing the chest of drawers to the wall, which will further enhance safety in use. We have prepared two fixing methods for you, and you can choose either one according to your needs.

