OFFICE DESK WITH 5 DRAWERS

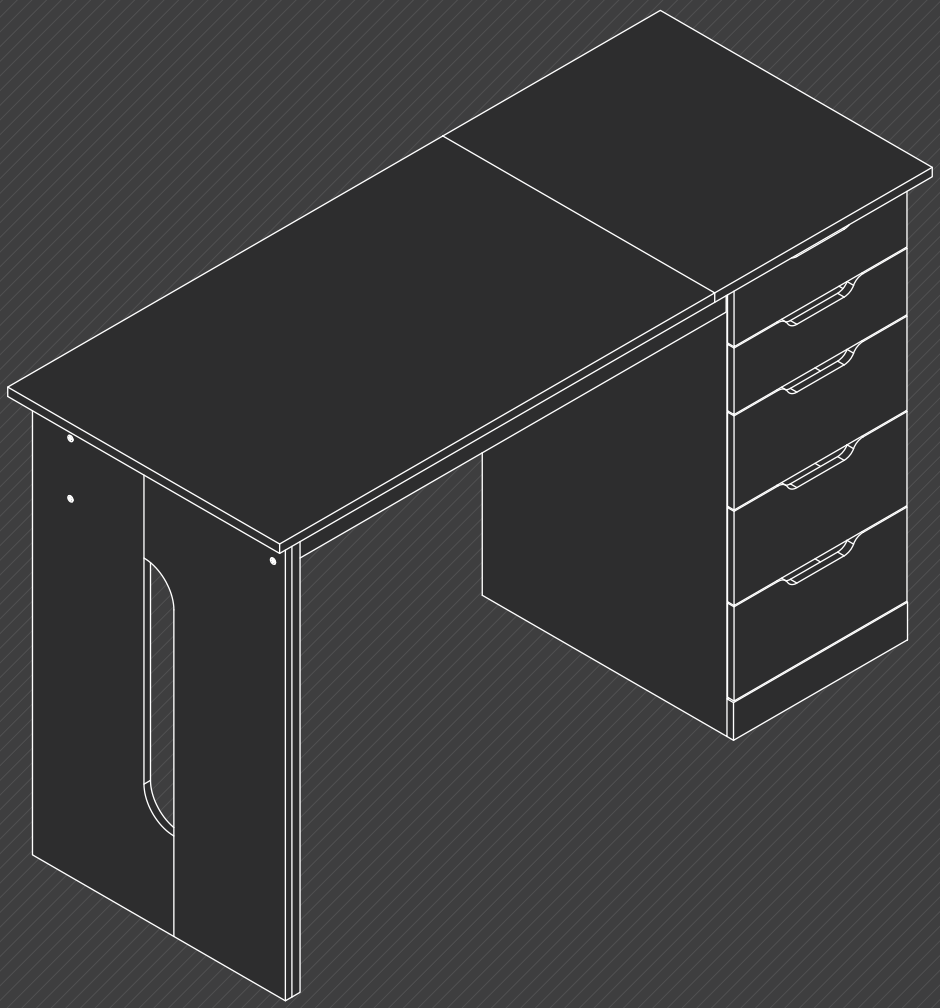

USER MANUAL

Contents

TOPIC		PAGE
01	**SAFETY INSTRUCTIONS**	**01-01**
1-1	Thank You For Choosing Our Product	01
1-2	Precautions	01
02	**INSTALLING MODULES**	**02-24**
2-1	Disassembly Diagram	02
2-2	Parts List	03-04
2-3	Assembly Instructions	05-24
03	**CUSTOMER SERVICE**	**25**
3-1	30-Day Return Policy	25
3-2	1-Year Warranty	25
3-3	Quick Response Within 24 Hours	25
04	**PROBLEMS YOU MAY ENCOUNTER**	**26**
4-1	Problems You May Encounter	26

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included.
Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

Precautions

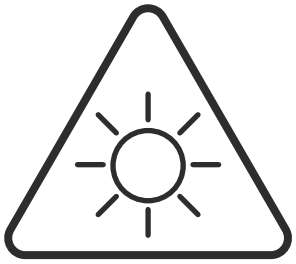

- Avoid long-term direct sunlight exposure.

- Keep away from sharp objects.

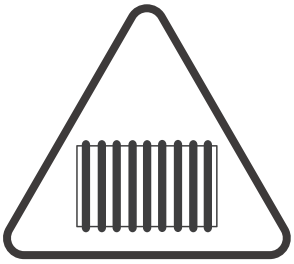

- Keep away from heat.

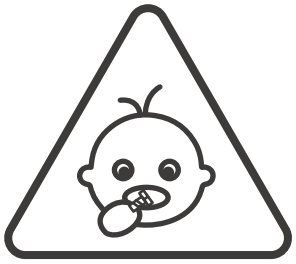

- Keep infants/children away from assembly parts to avoid choking and suffocation.

- Keep away from corrosive substances.

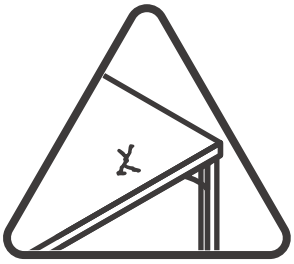

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

Disassembly Diagram

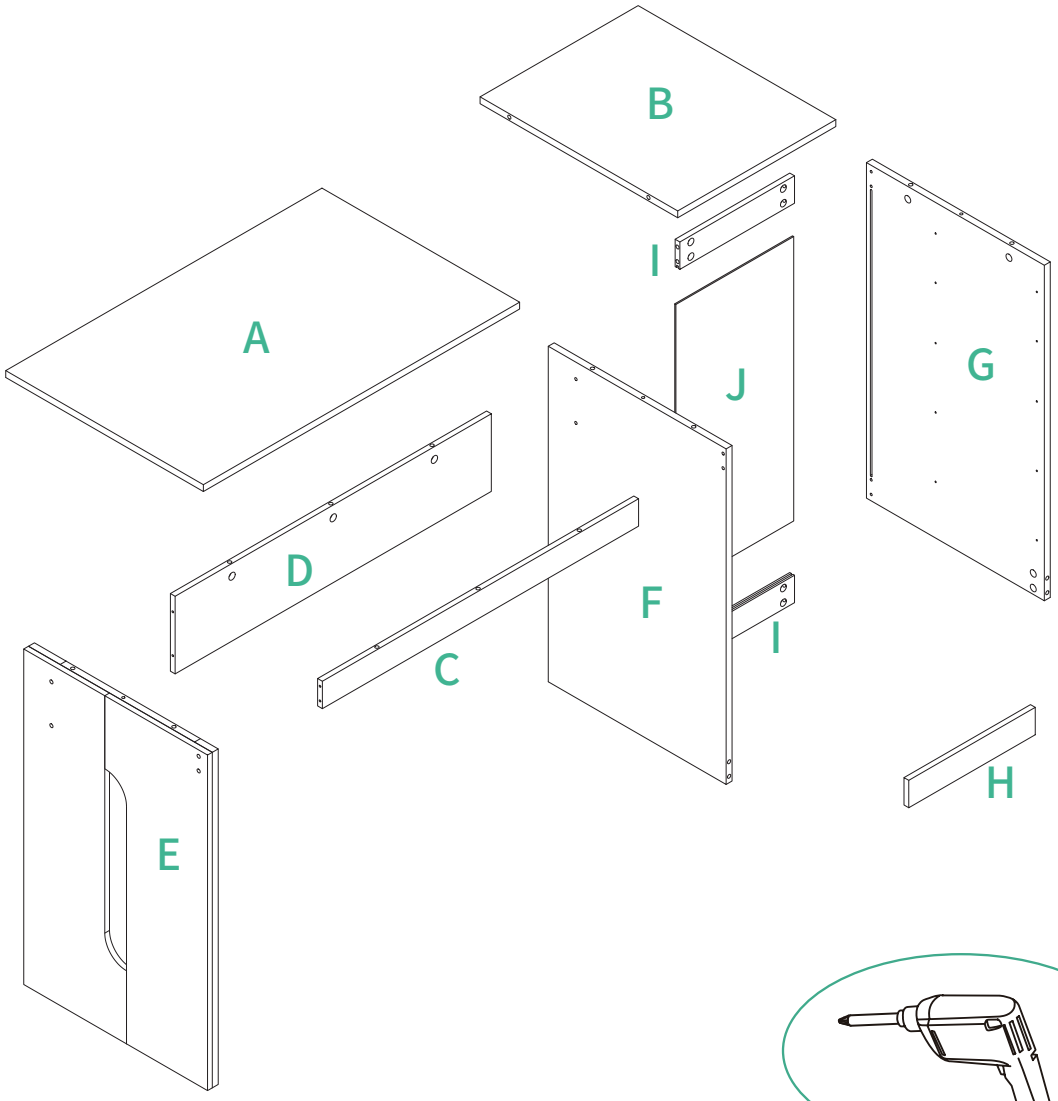

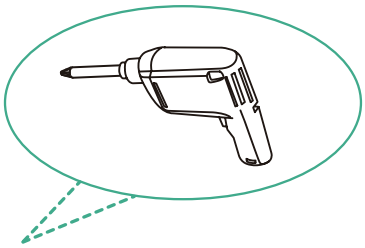

An electric drill is recommended for assembly.

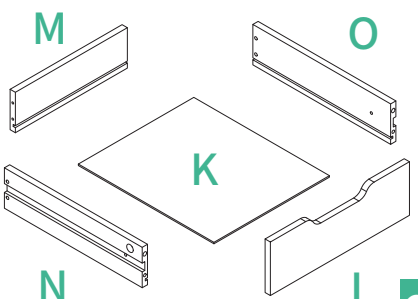

2 Sets

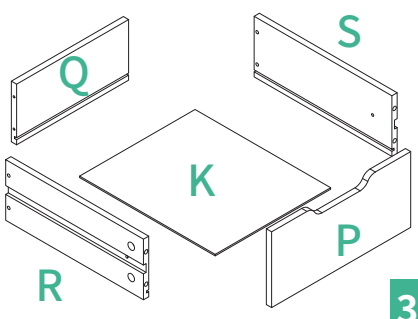

3 Sets

Parts List

For ease and safety, we recommend two people for assembly.

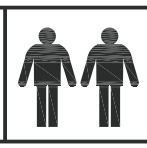



A x1 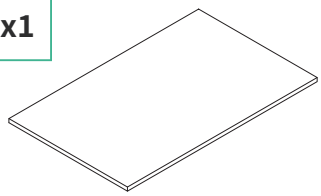	B x1 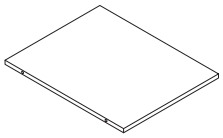	C x1 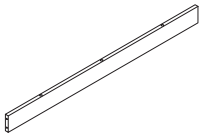	D x1 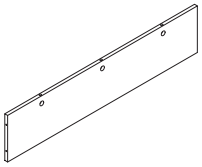
E x1 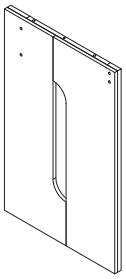	F x1	G x1 	H x1 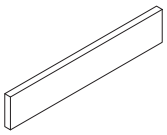
I x2 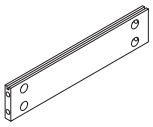	J x1	K x5 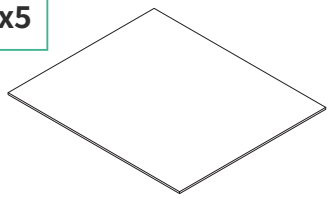	L x2 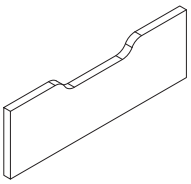
M x2 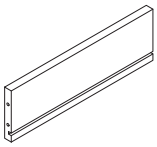	N x2 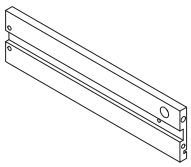	O x2 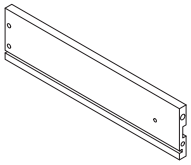	P x3 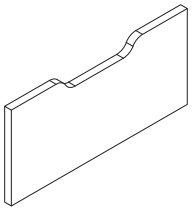
Q x3 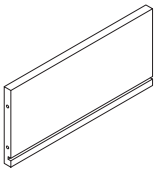	R x3 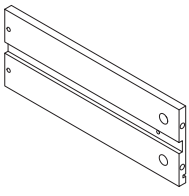	S x3 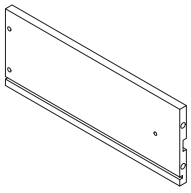	

Parts List

For ease and safety, we recommend two people for assembly.

① x43  35mm 3 Spares	② x8 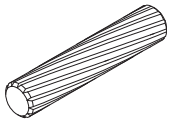 ϕ6x30 1 Spare	③ x47  ϕ15x9.5 3 Spares	④ x3 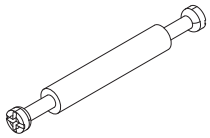 1 Spare
⑤ x31 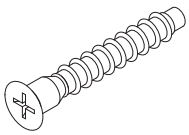 ST5x38 3 Spares	⑥ x12 M4x8 2 Spares	⑦ x33  ST4x12 3 Spares	⑧ x3  1 Spare
⑨ x10 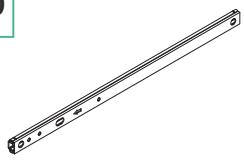	⑩ x7 1 Spare	⑪ x23  3 Spares	⑫ x1 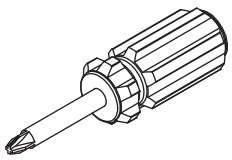

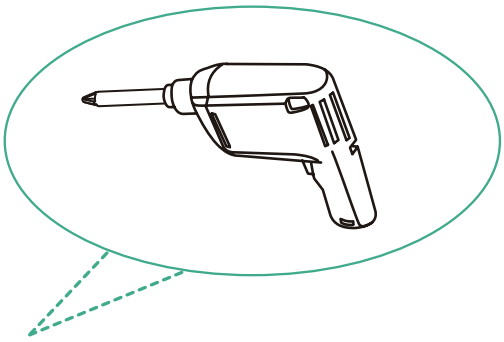

An electric drill is recommended for assembly.

Assembly Instructions

When installing , please lay soft pad on the ground to avoid scratch product.

1 First, align the rail holes with the holes on panel F as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.

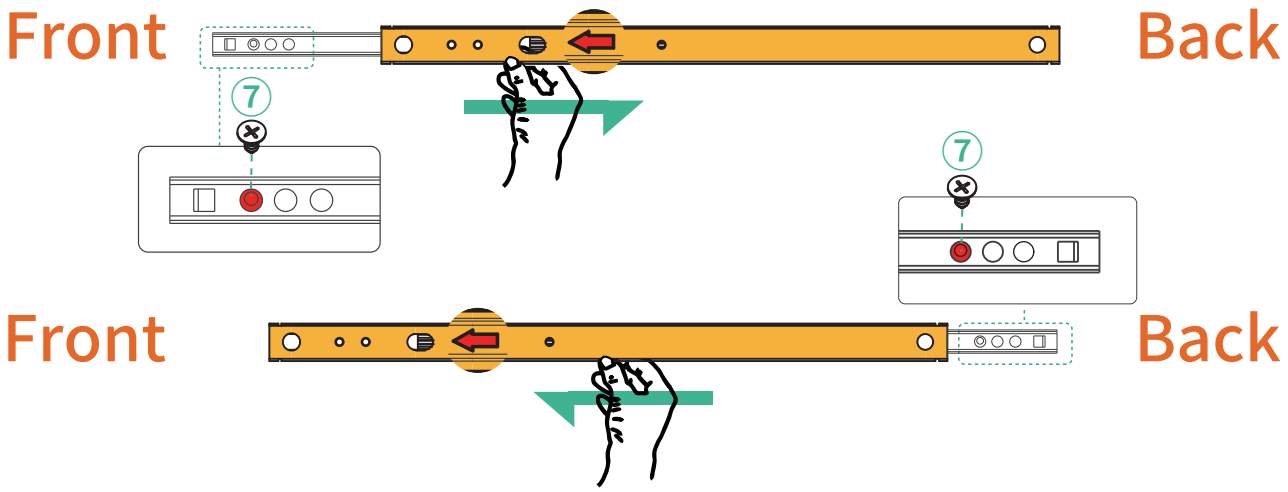

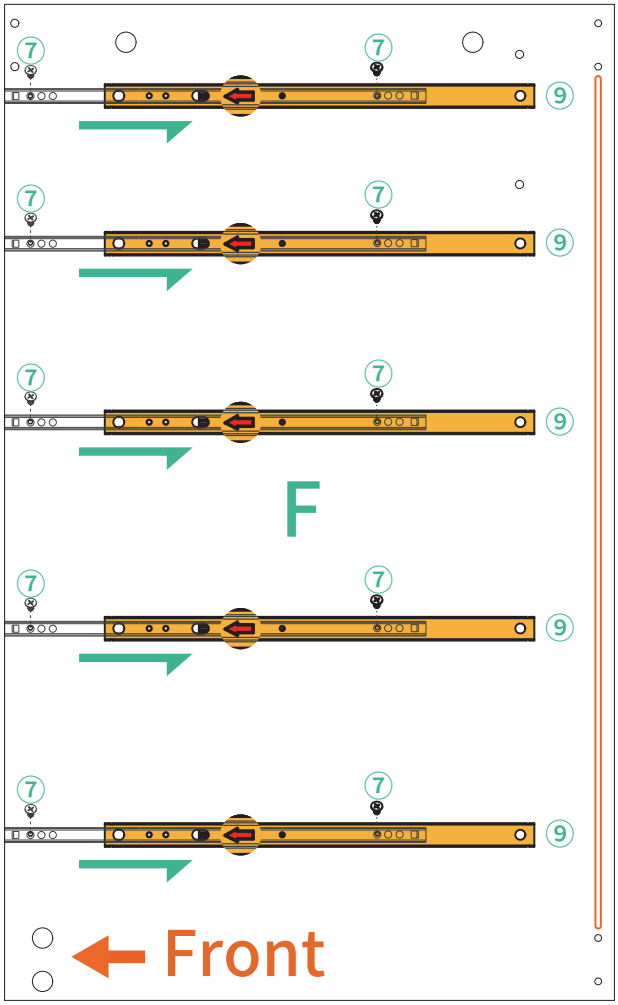

F x1	
⑨ x5	
⑦ x10	

2 First, align the rail holes with the holes on panel G as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.

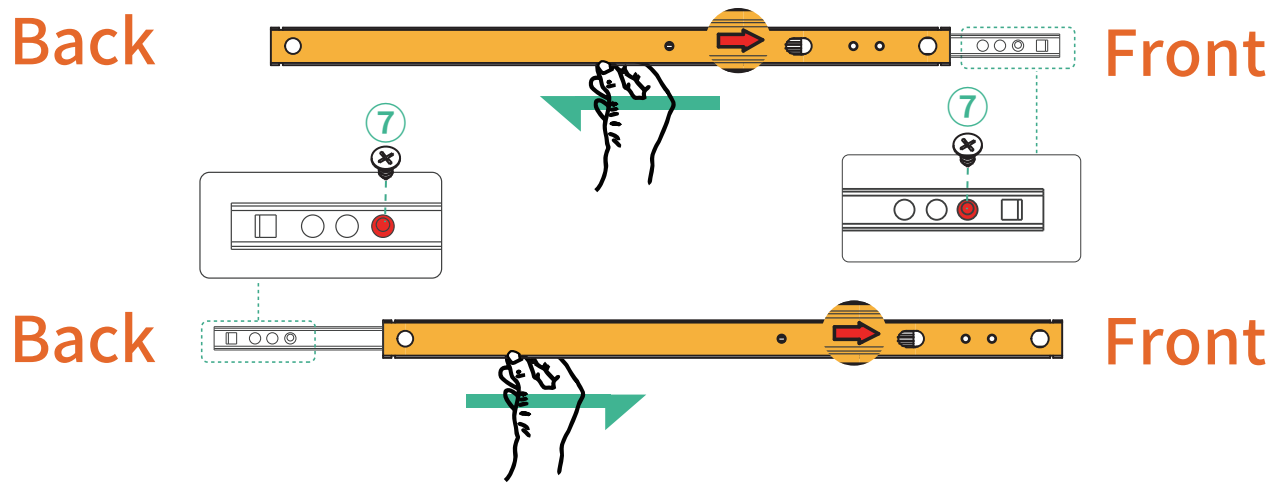

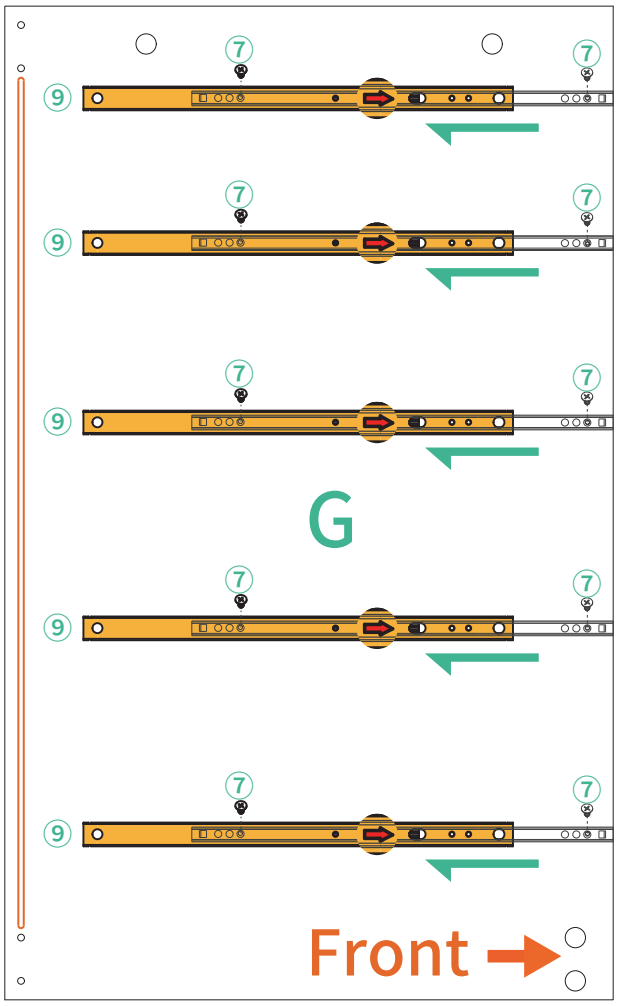

G x1	
⑨ x5	
⑦ x10	

3

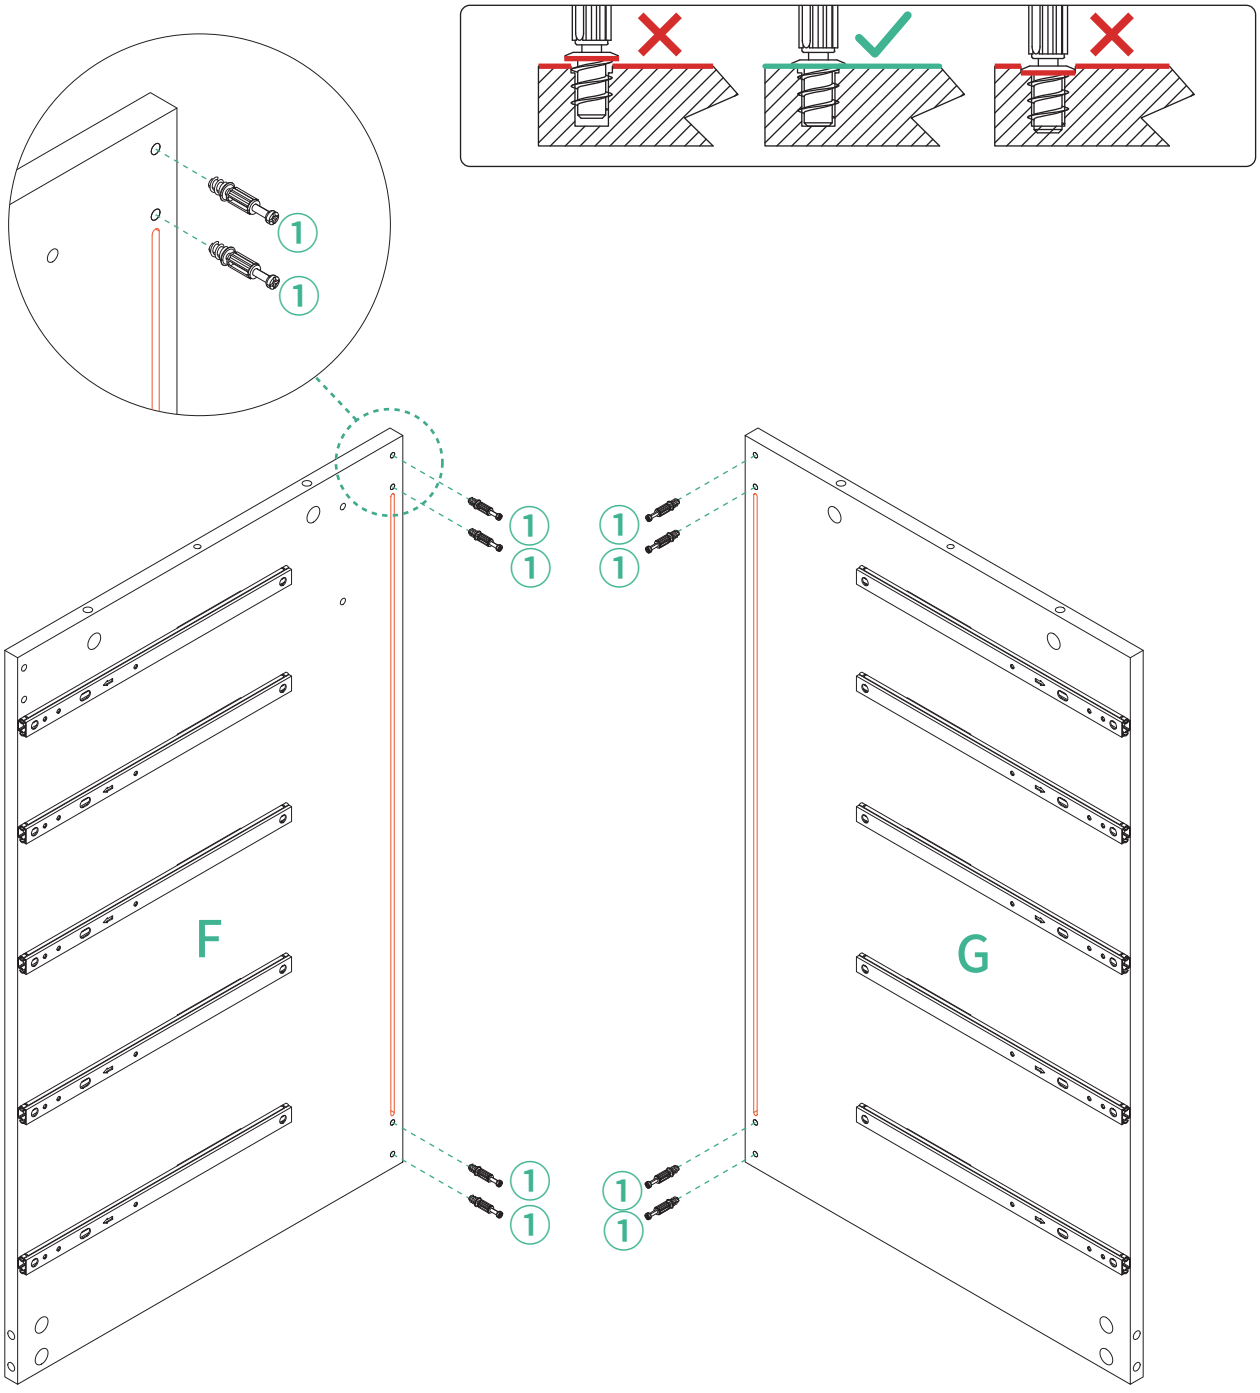

1 x8	

Assembly Instructions

4 When installing Panel I, please note the orientation of the groove.

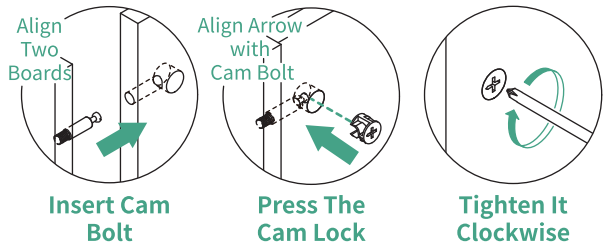

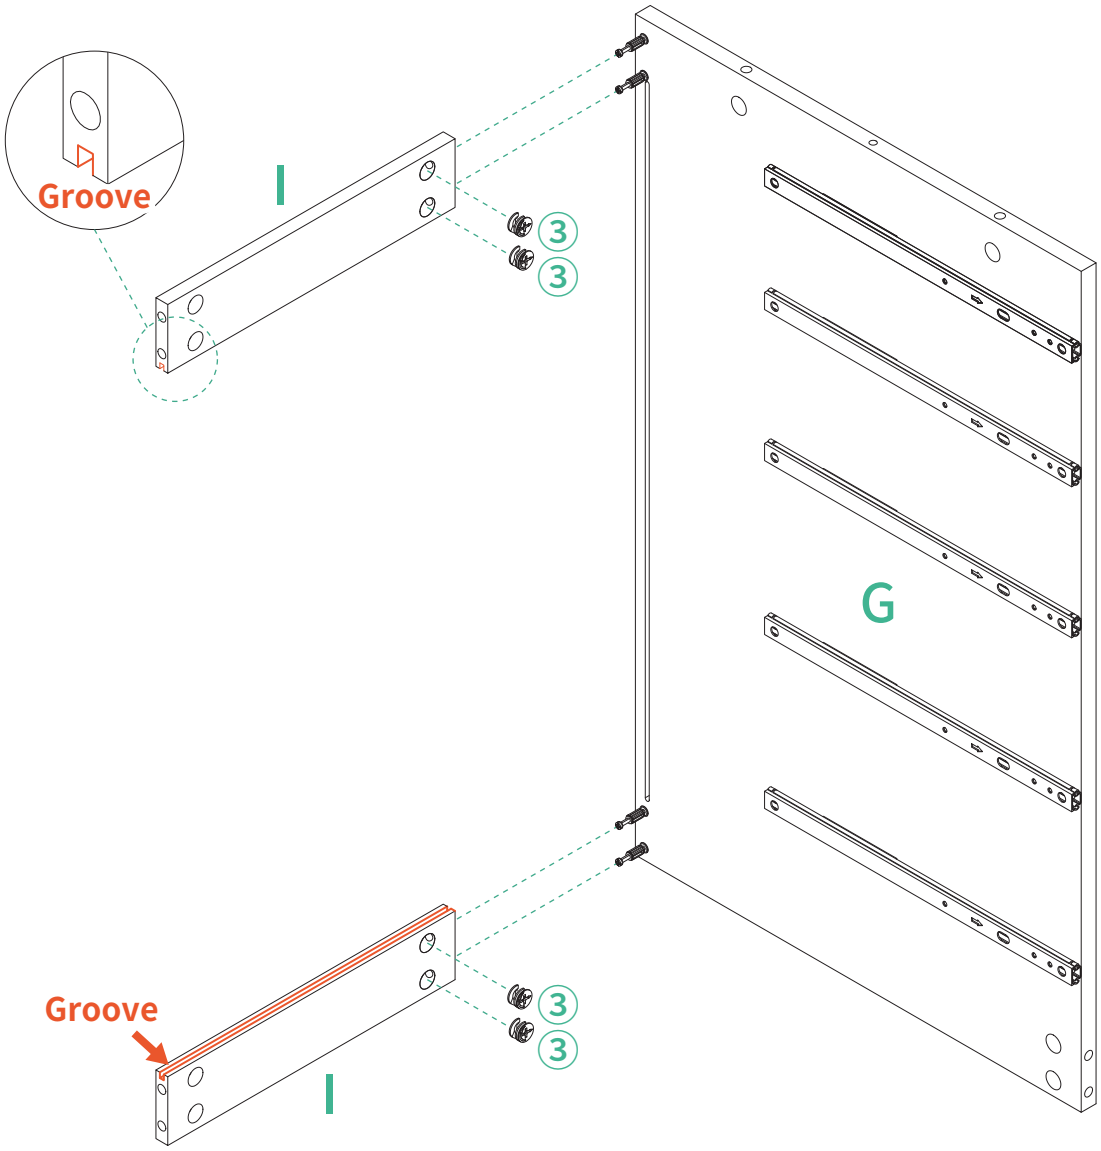

I x2		3 x4		12 x1	

5

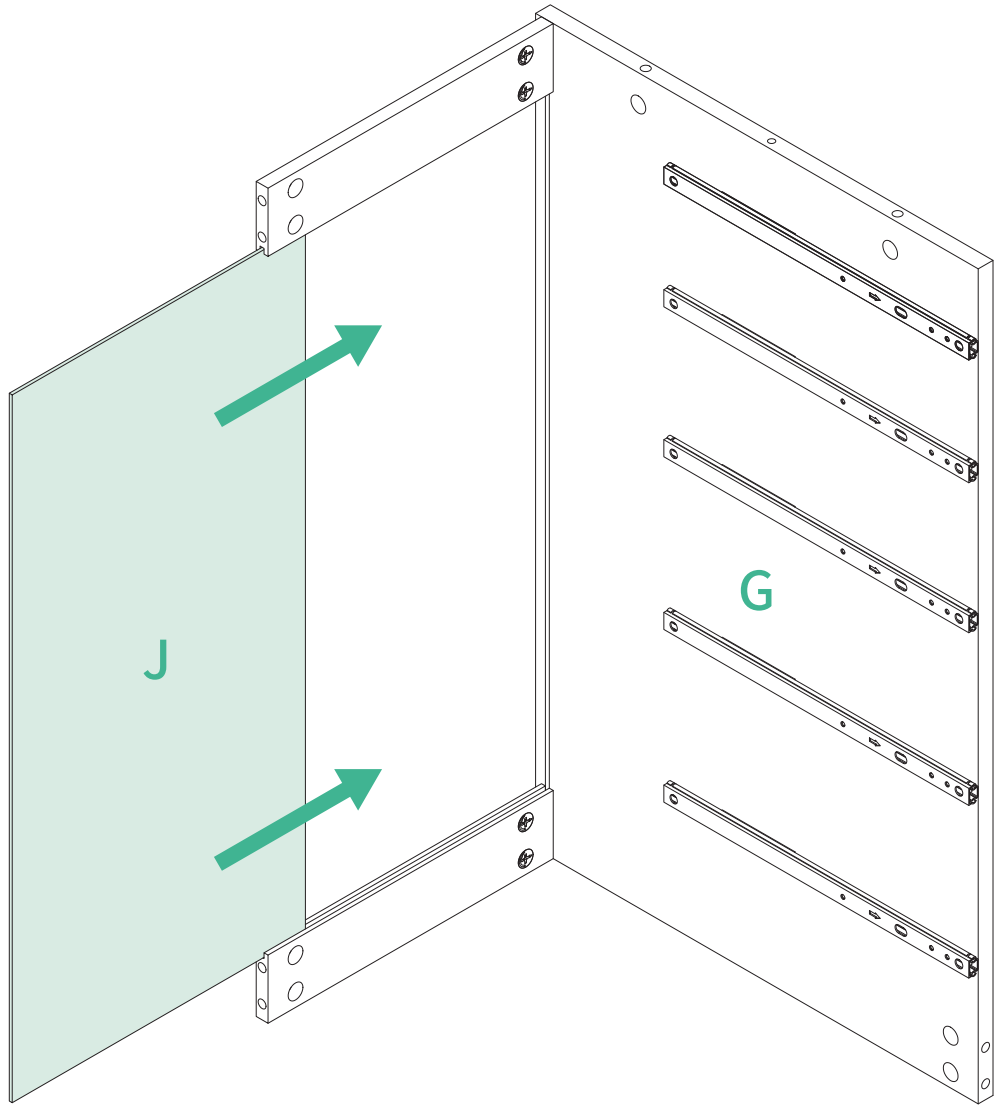

J	
x1	

6

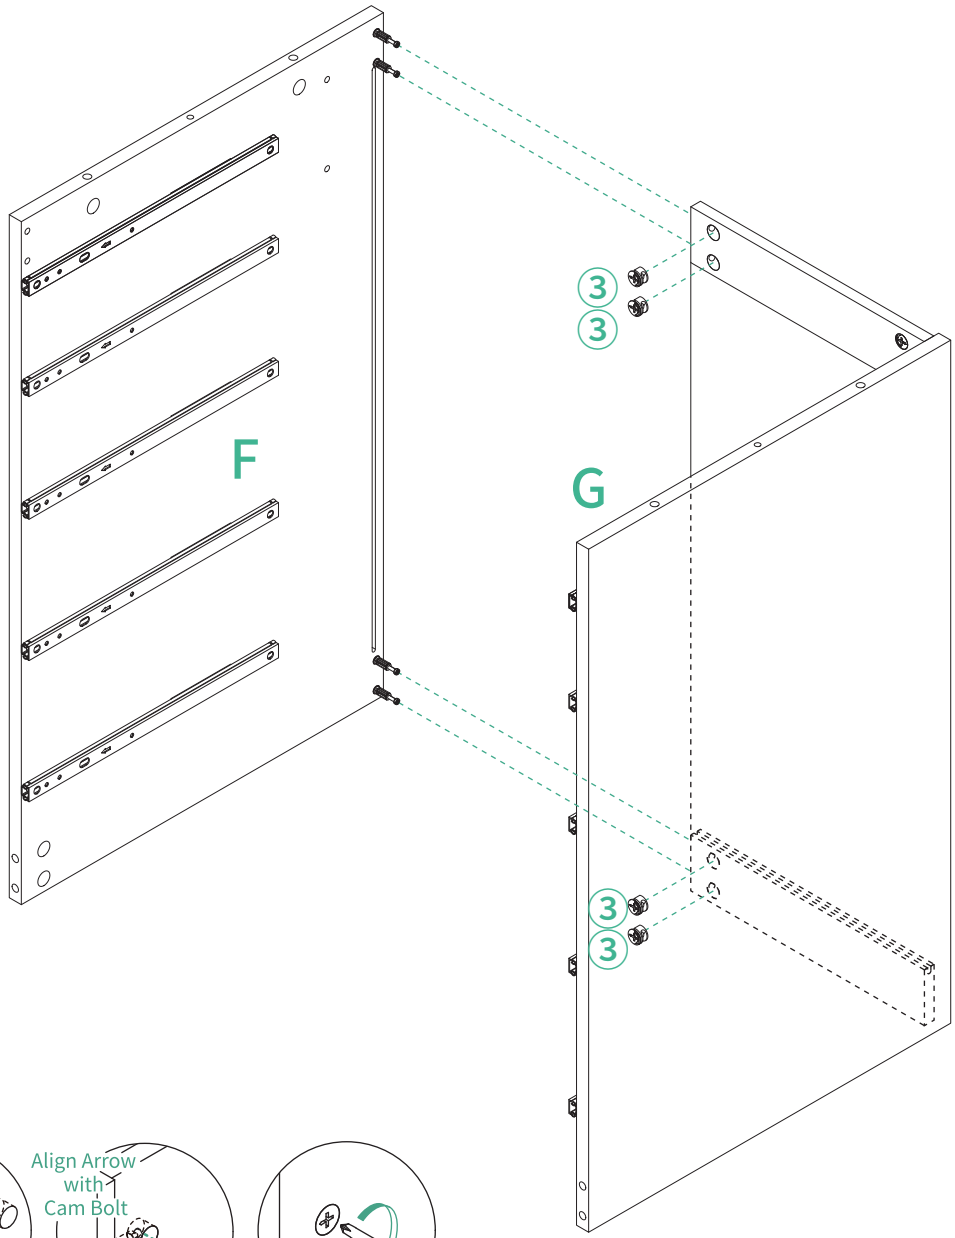

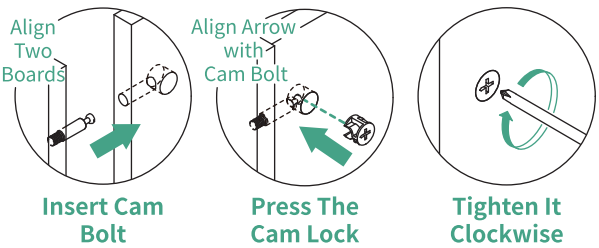

F x1	3 x4	12 x1

7

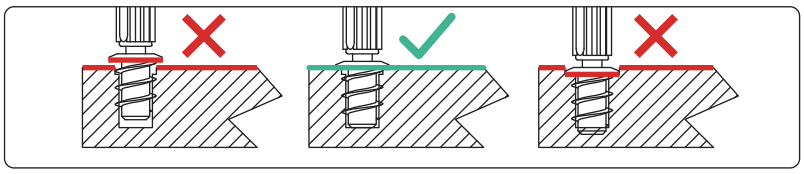

1

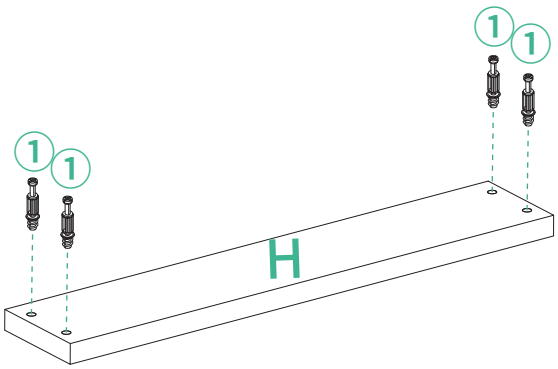

2

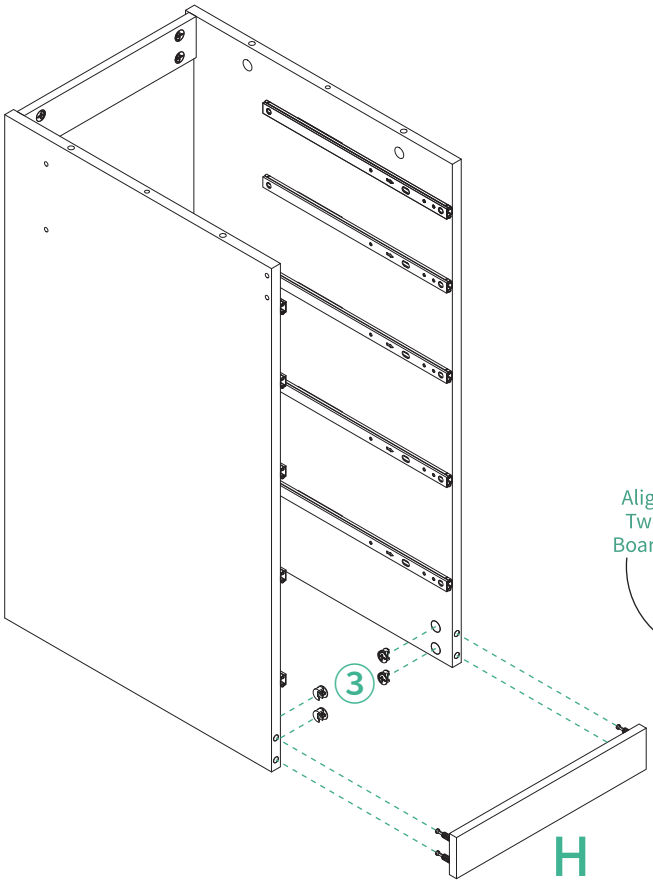

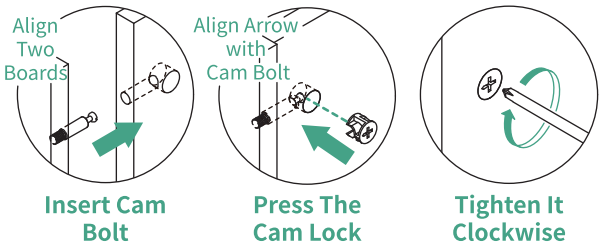

H x1	1 x4	3 x4	12 x1

8 When installing Panel D, please make sure the hole marked with the arrow faces upward.

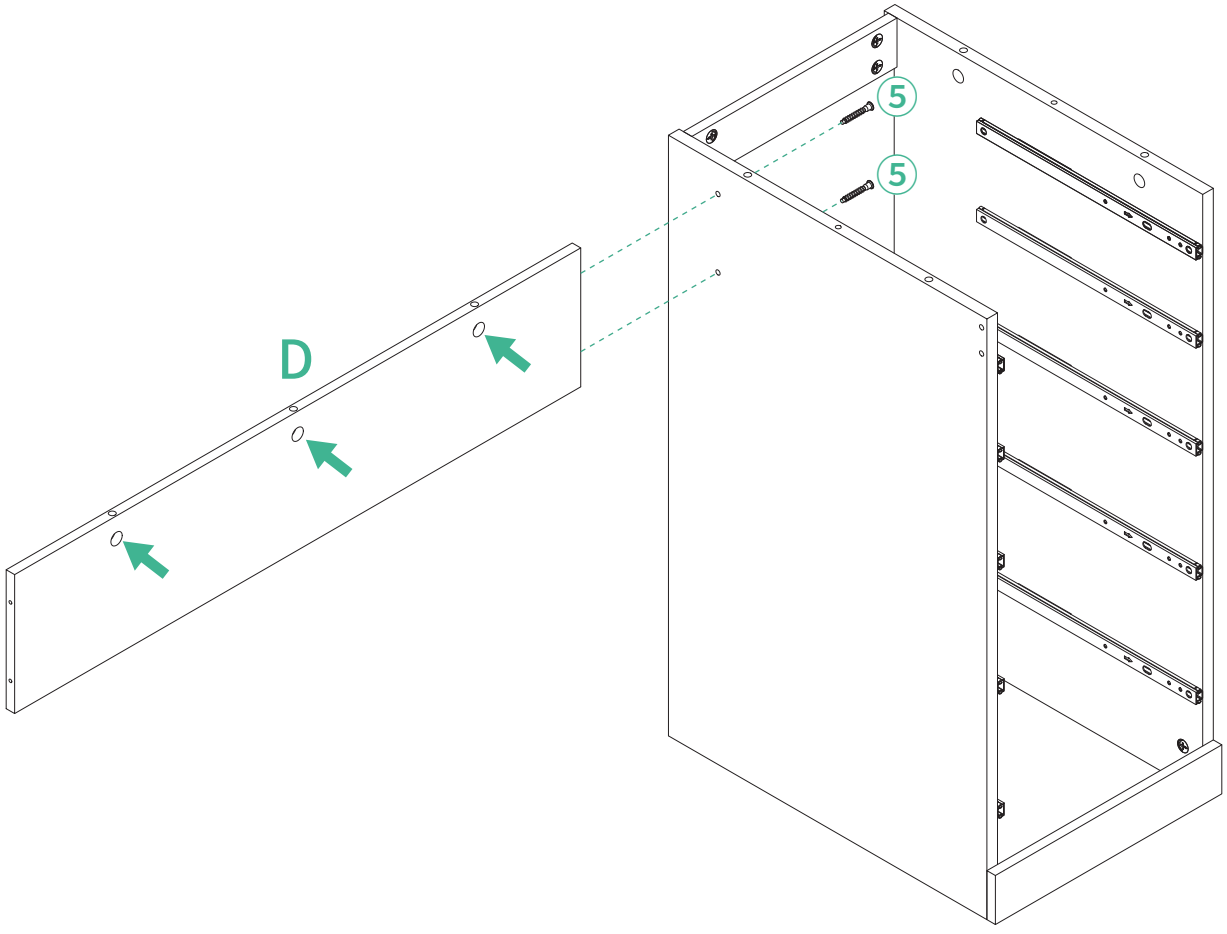

D x1		5 x2	

9 When installing Panel C, please make sure the hole marked with the arrow faces upward.

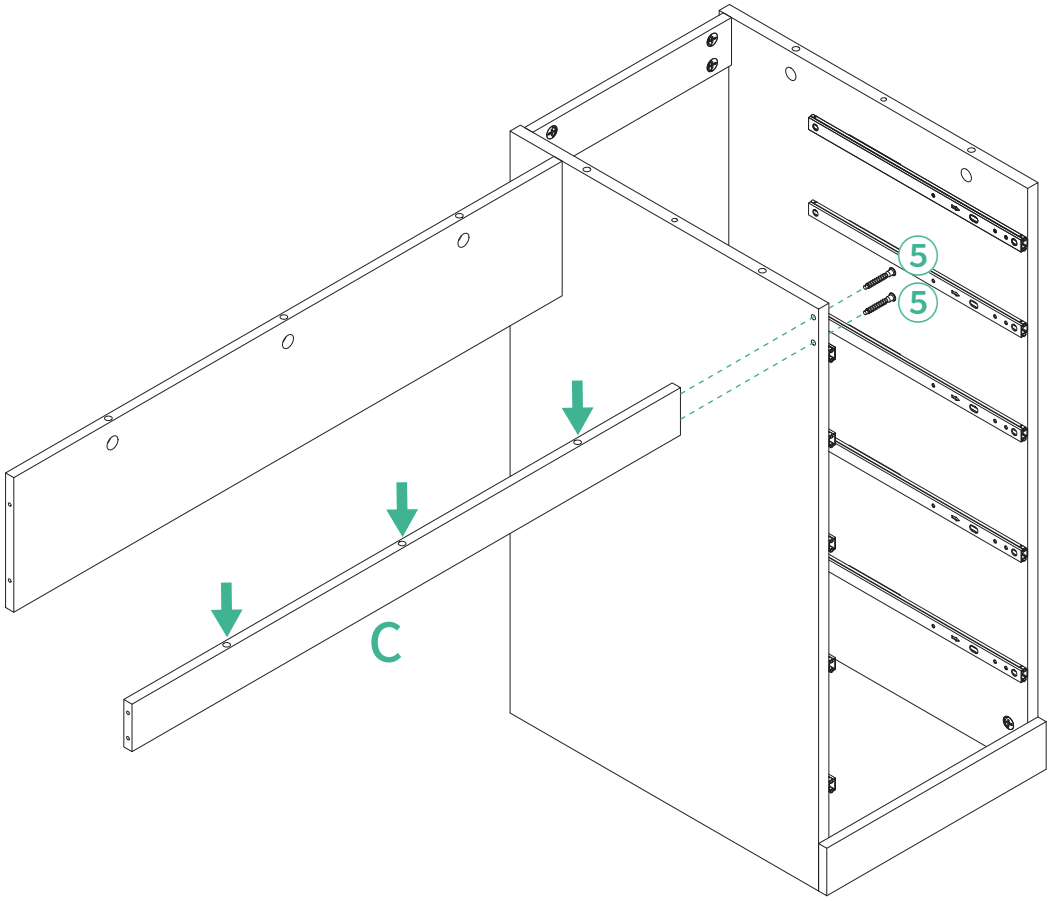

C x1		5 x2	

10

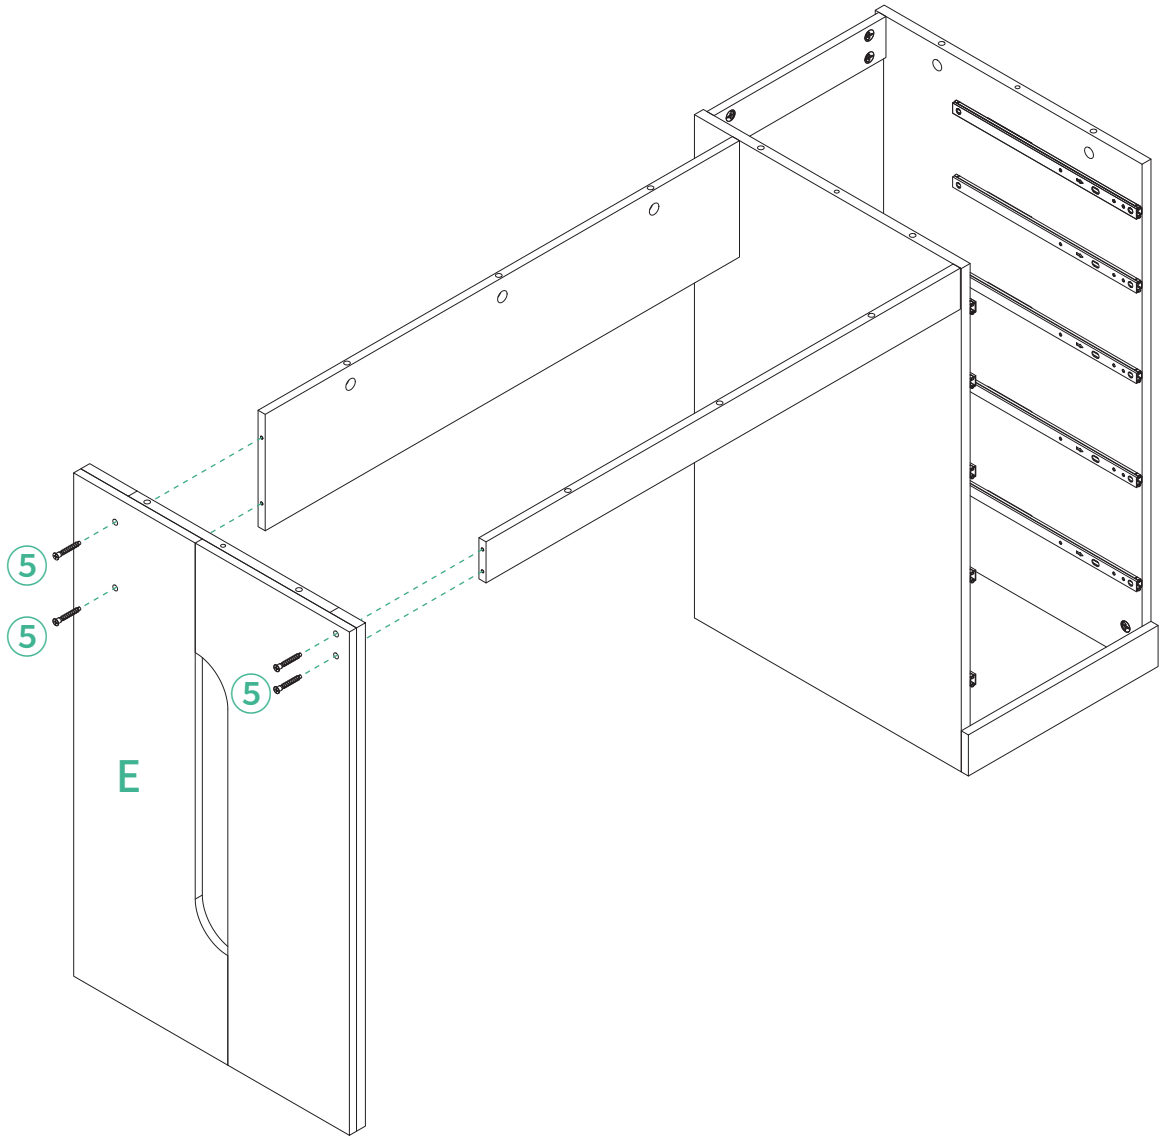

E x1		5 x4	

11

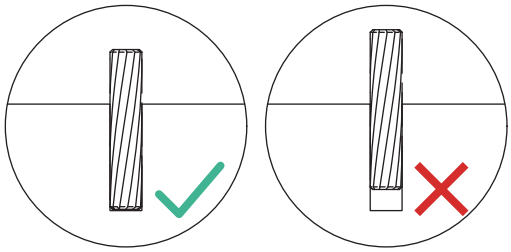

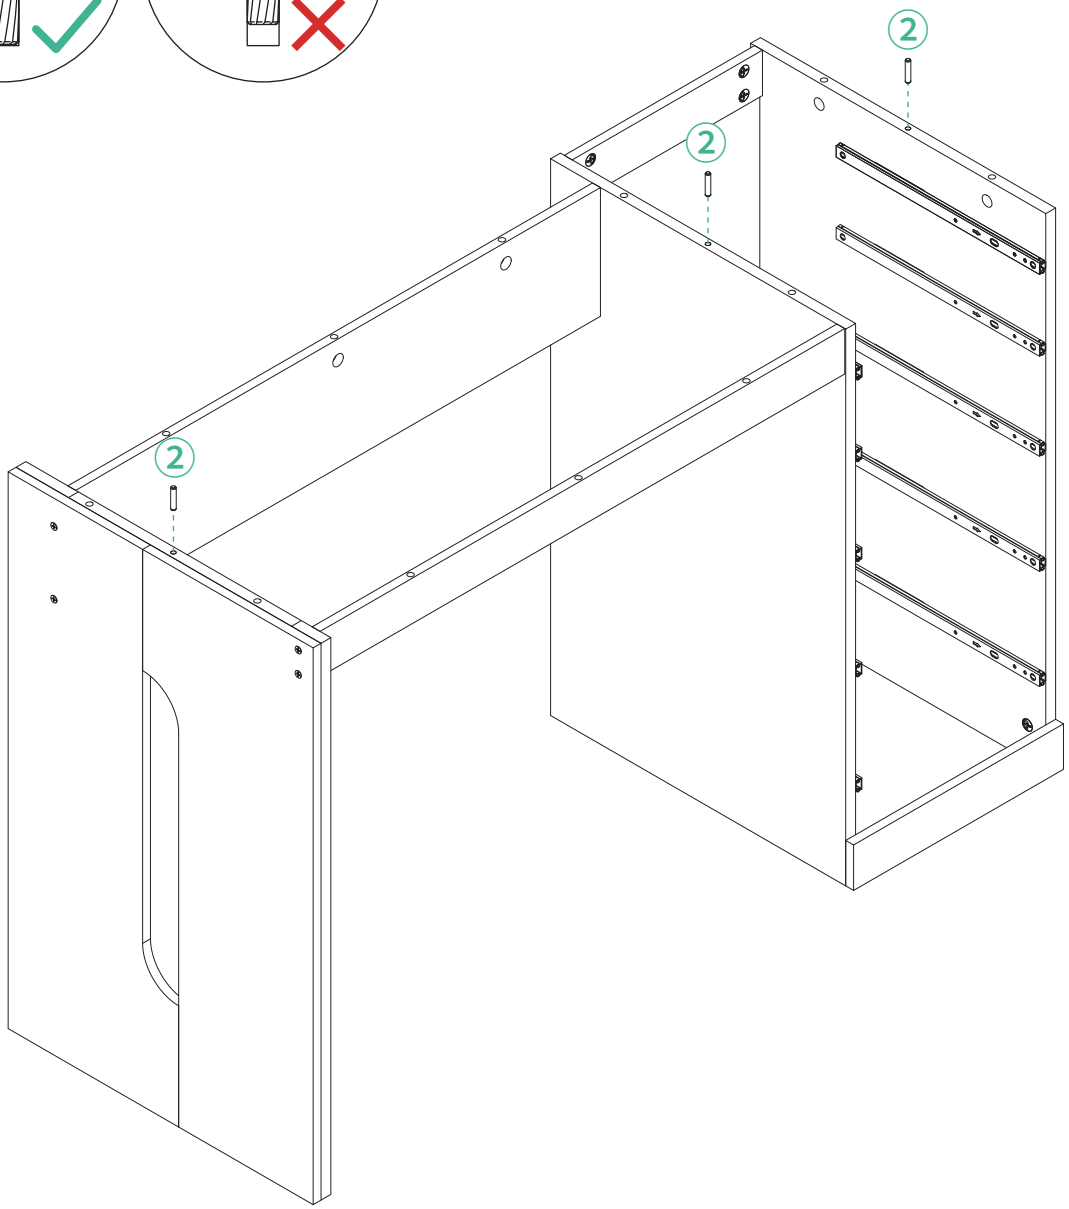

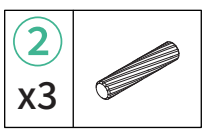

12

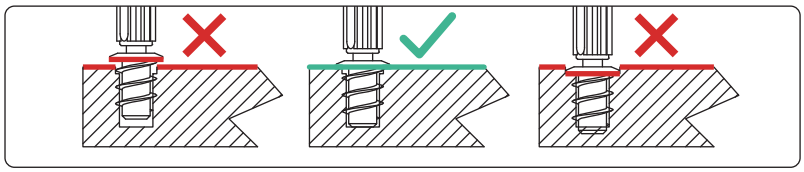

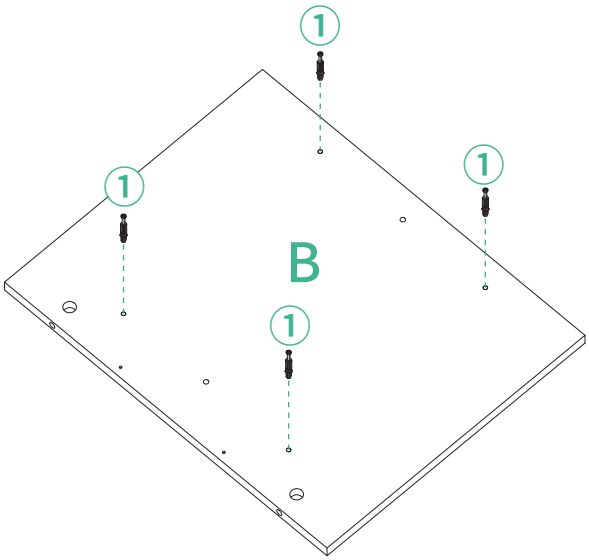

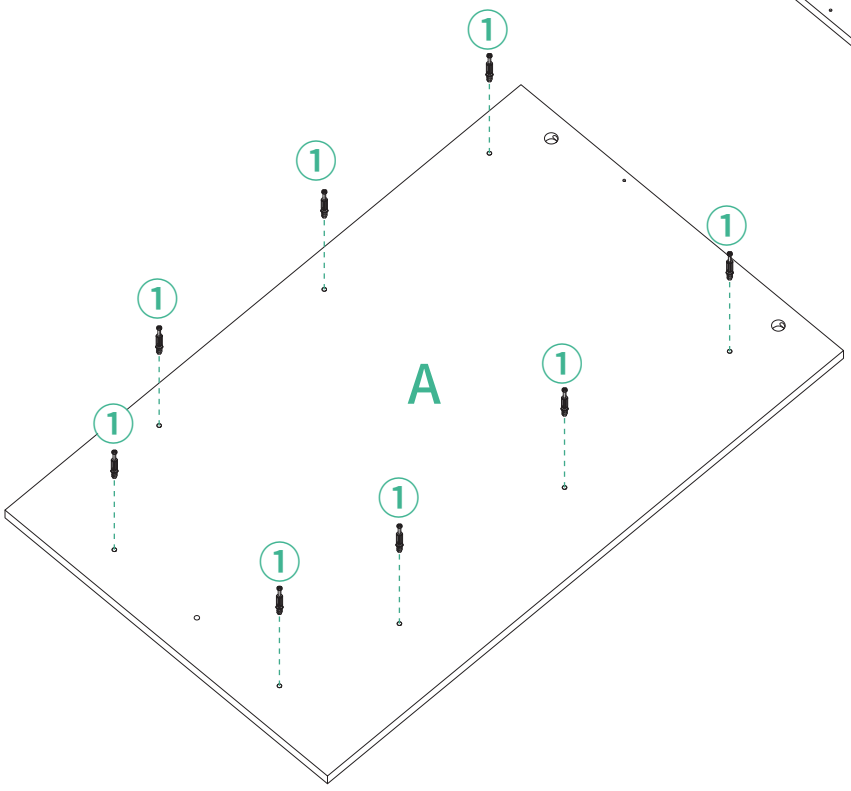

A	B	1
x1	x1	x12

13

Make sure both ends of part ④ are inserted into panels A and B, aligning the panels.

1. Adjust the position of part ④ by hand so that the protruding lengths on both ends are roughly equal.

2.Insert both parts ③, then alternately tighten each side to about 50% so that part ④ is secured, then fully tighten both sides.

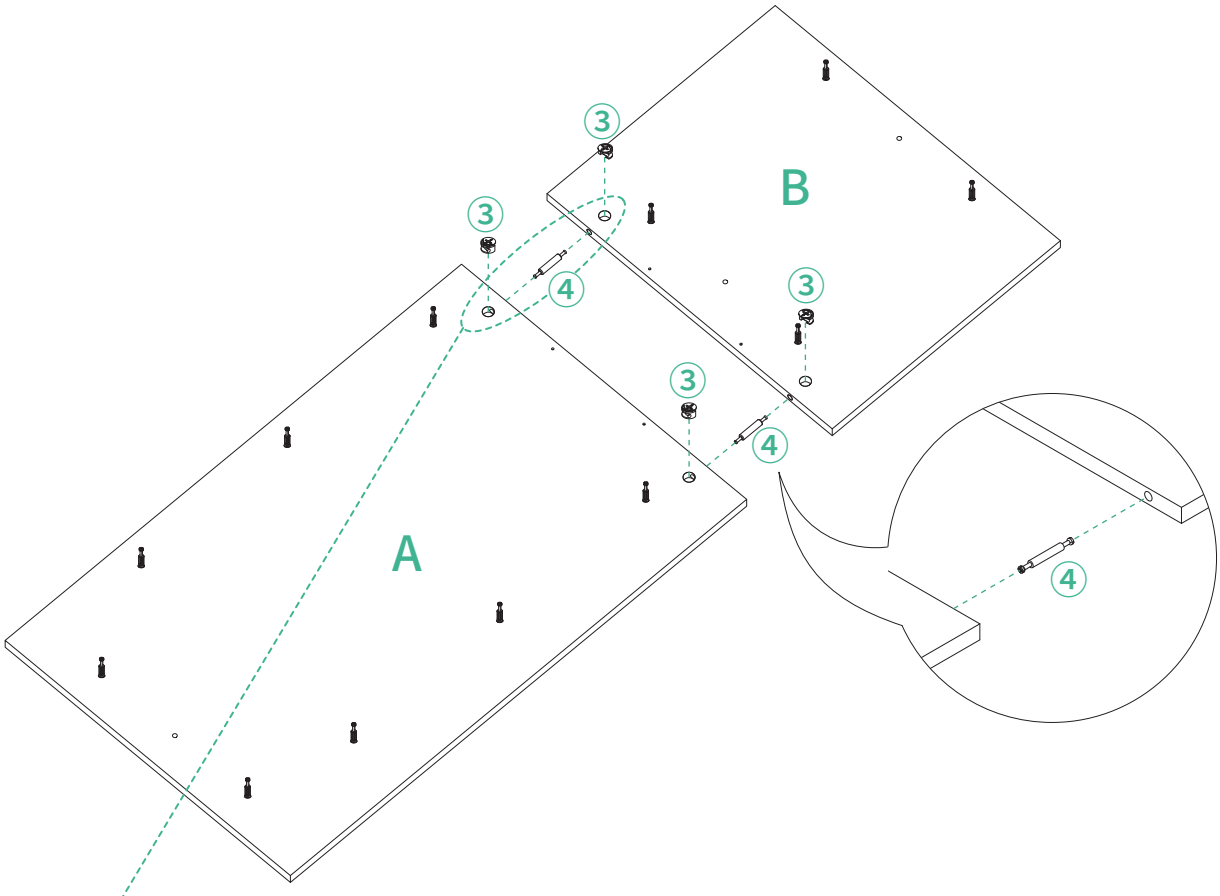

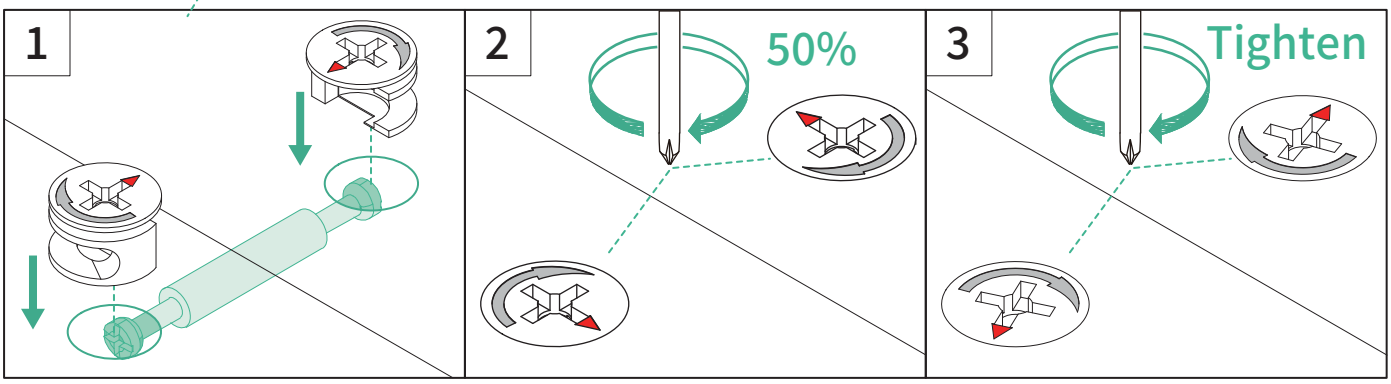

A	B	③	④	⑫
x1	x1	x4	x2	x1

14

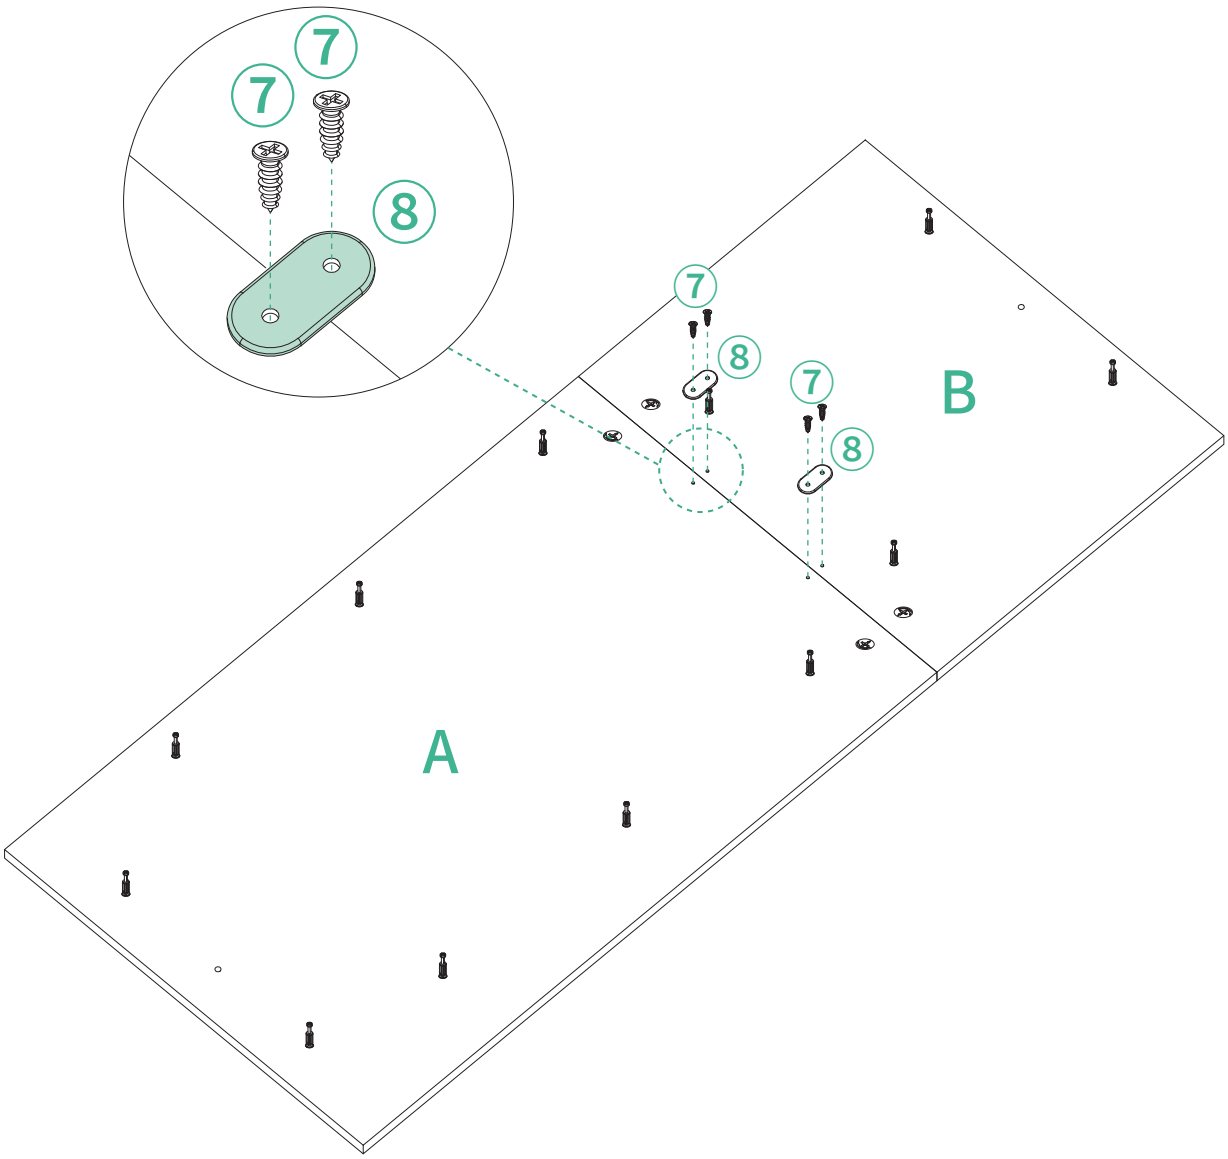

7 x4	
8 x2	

15

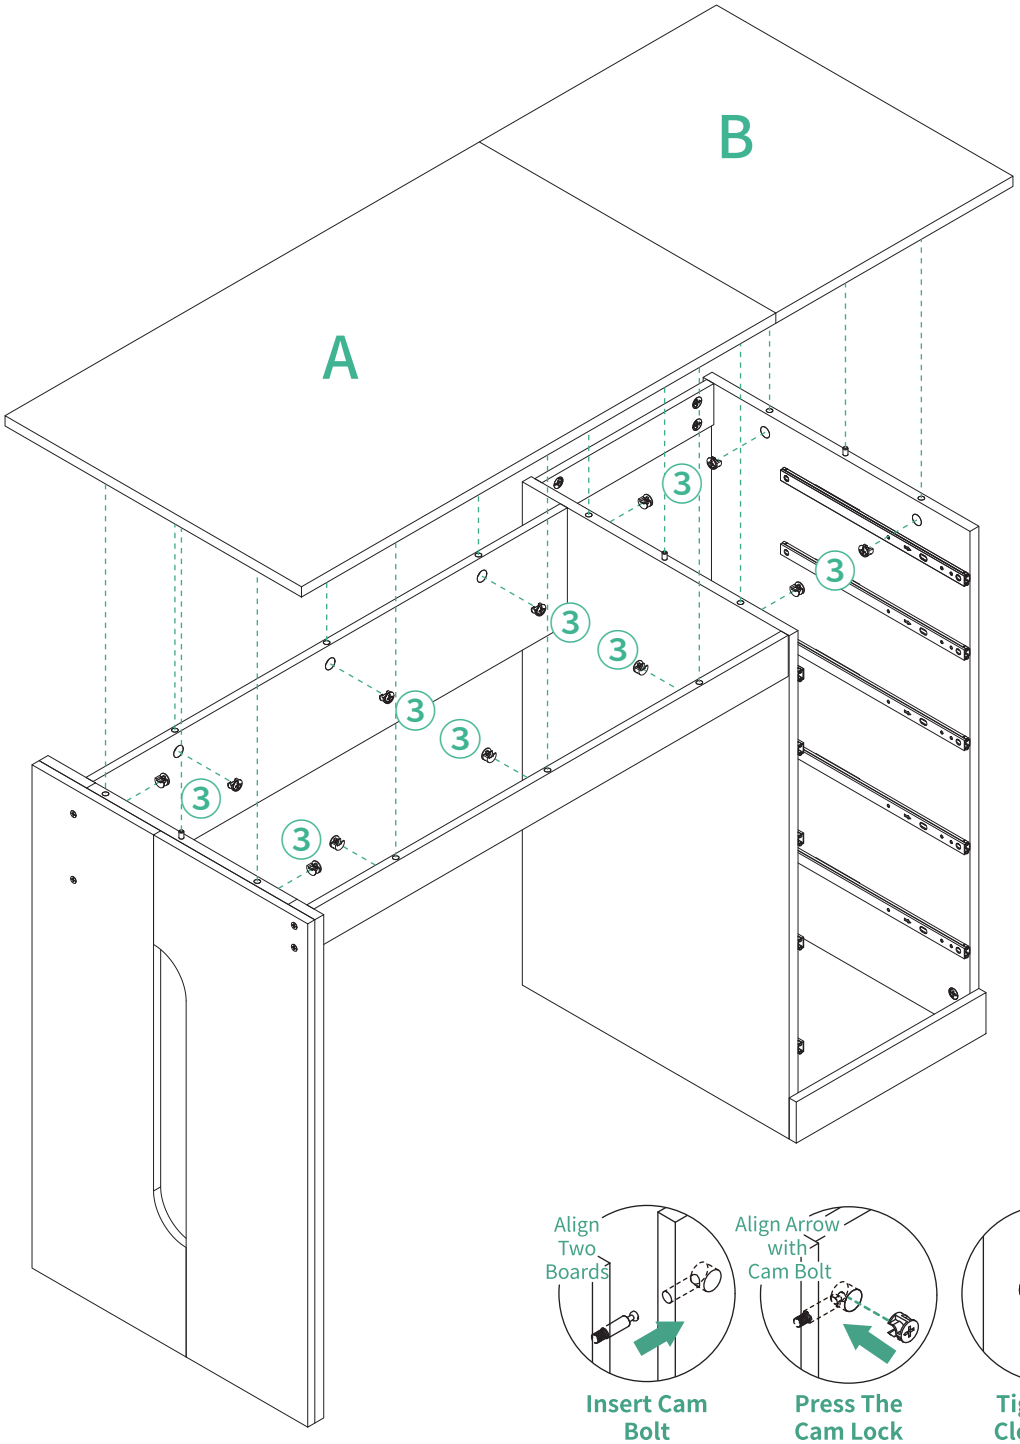
B
A
3
3
3
3
3
3
3
3

Align Two Boards
Insert Cam Bolt
Align Arrow with Cam Bolt
Press The Cam Lock
Tighten It Clockwise

3 x12	
12 x1	

16

2 Sets

1

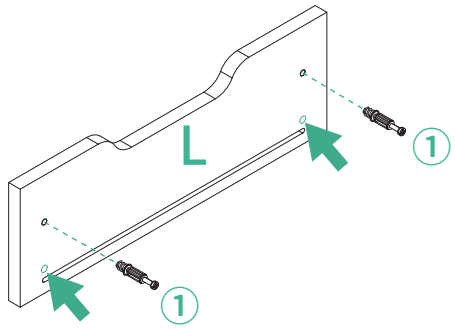

2

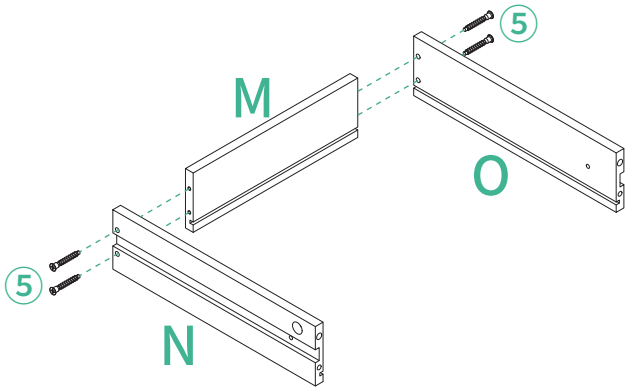

3

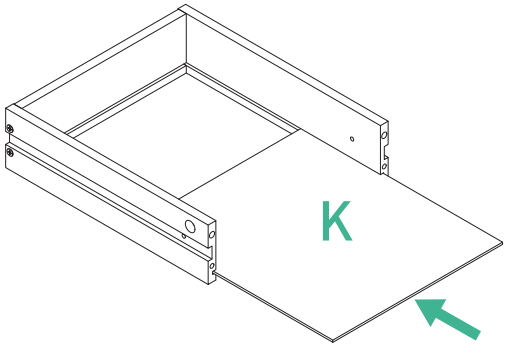

4

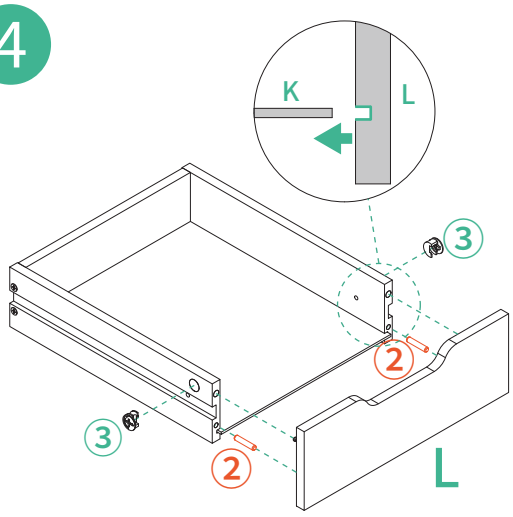

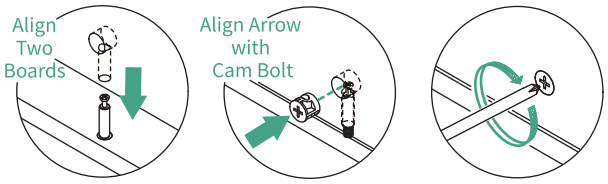

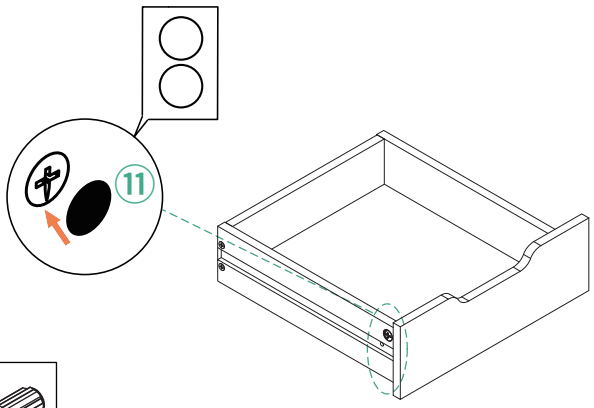

3 x4		5 x8		11 x4		12 x1					
K x2		L x2		M x2		N x2		O x2		1 x4		2 x4	

17

3 Sets

1

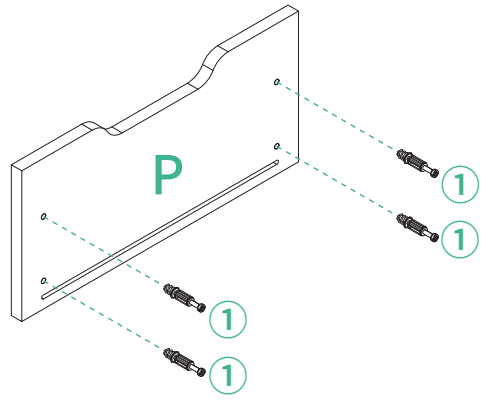

2

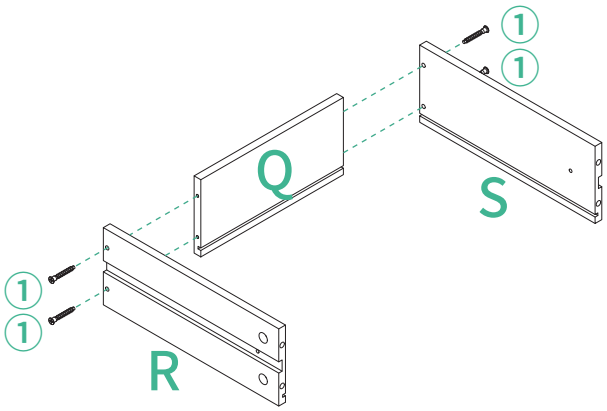

3

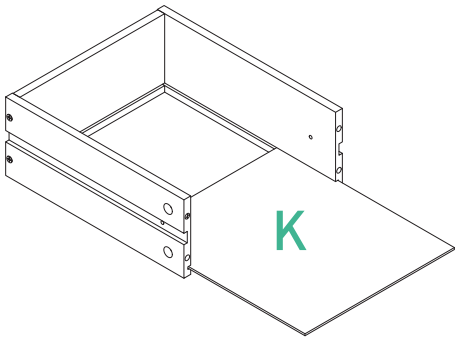

4

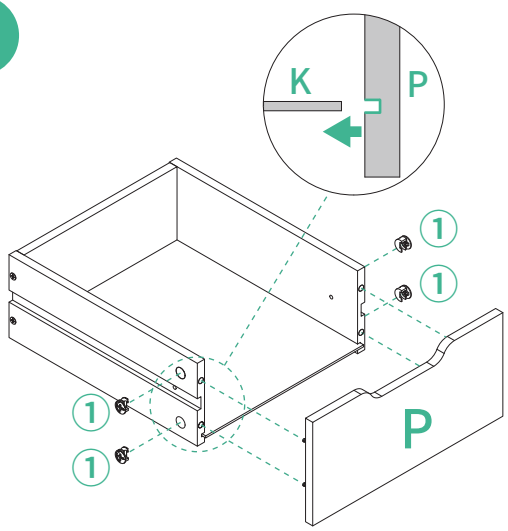

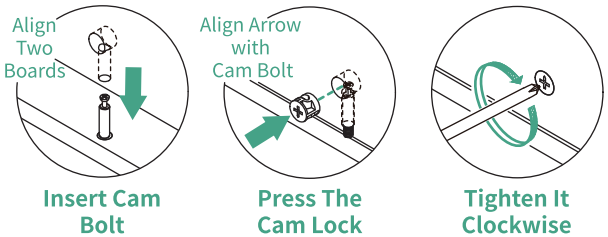

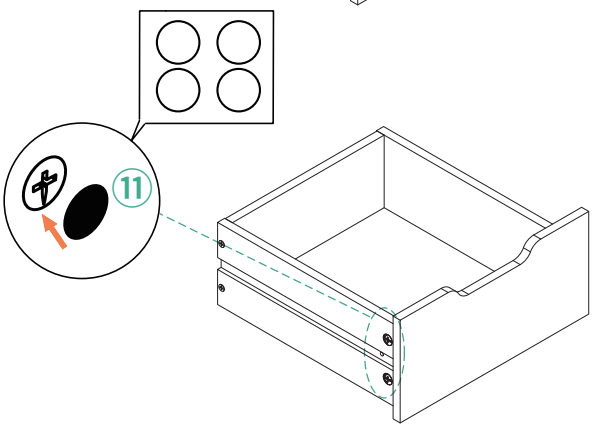

5 x12		11 x12		12 x1											
K x3		P x3		Q x3		R x3		S x3		1 x12		3 x12			

18

⑥ x10

Install the five drawers in the order shown in the enlarged picture.
1. Pull the slide rail to the maximum position.
2. Align the drawer groove with the slide rail, then push it in.
3. Ensure the slide rails are perfectly flush with the front of the drawer. Use a tool if necessary.
4. Finally, press the slide rail by hand, then secure the drawer and slide rail with screw ⑥.

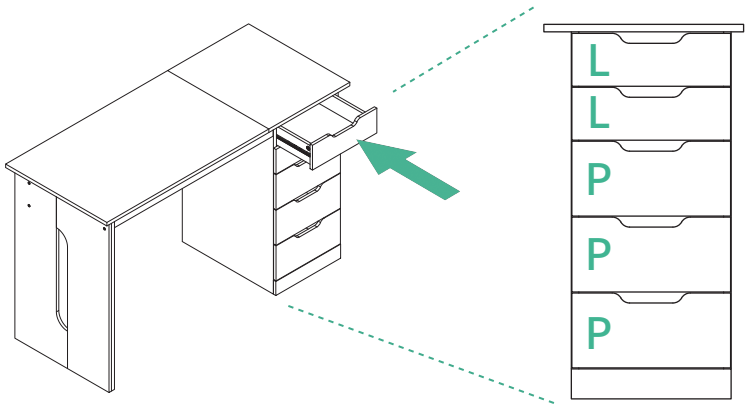

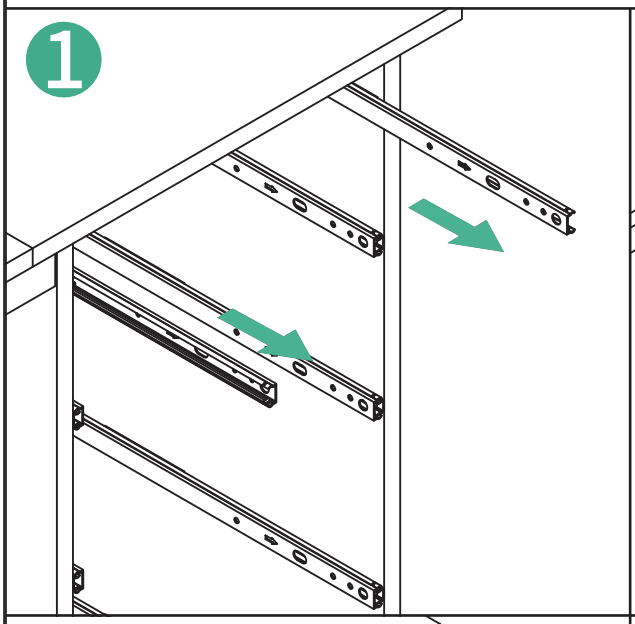

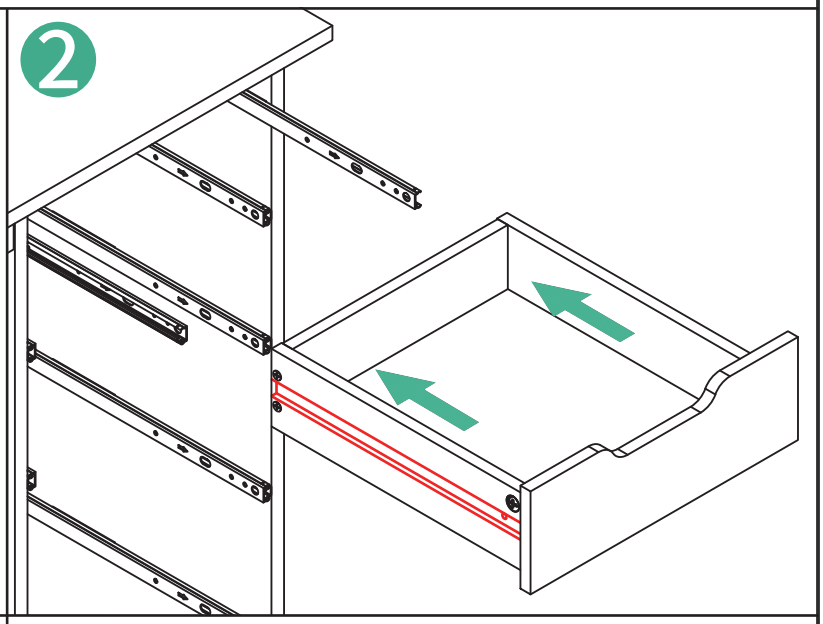

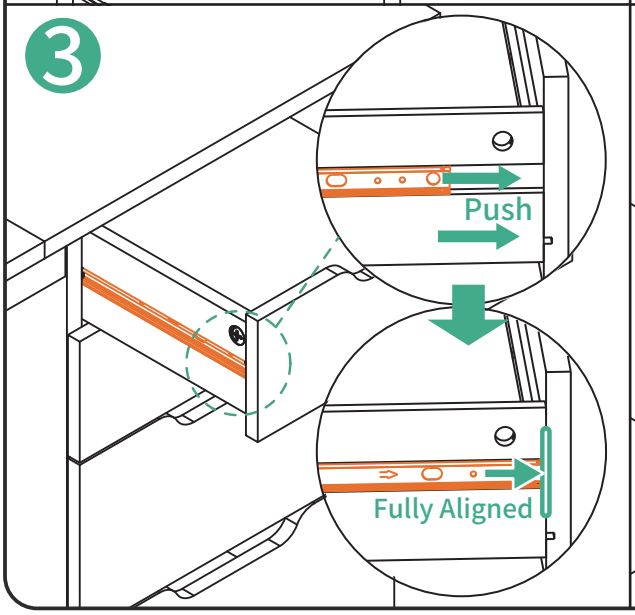

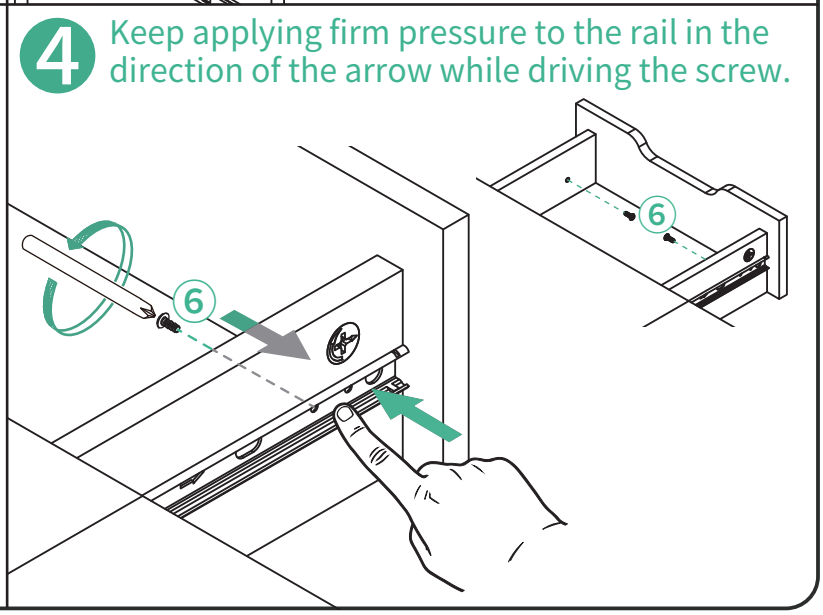

19

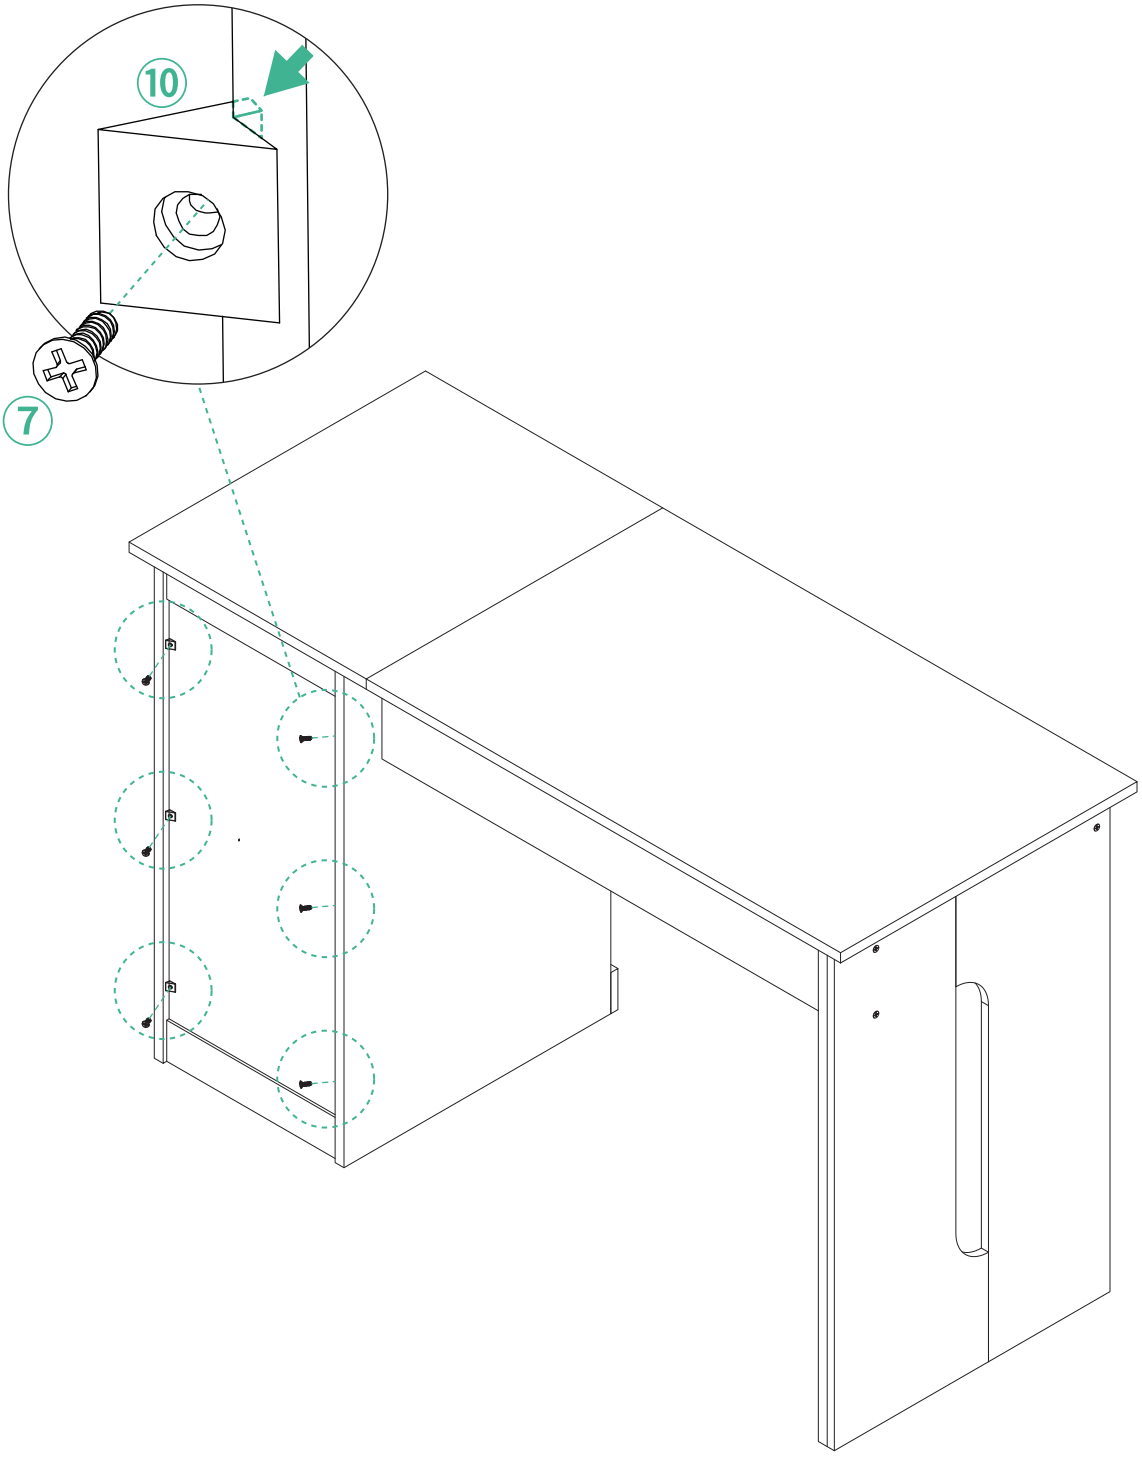

7 x6		10 x6	

20

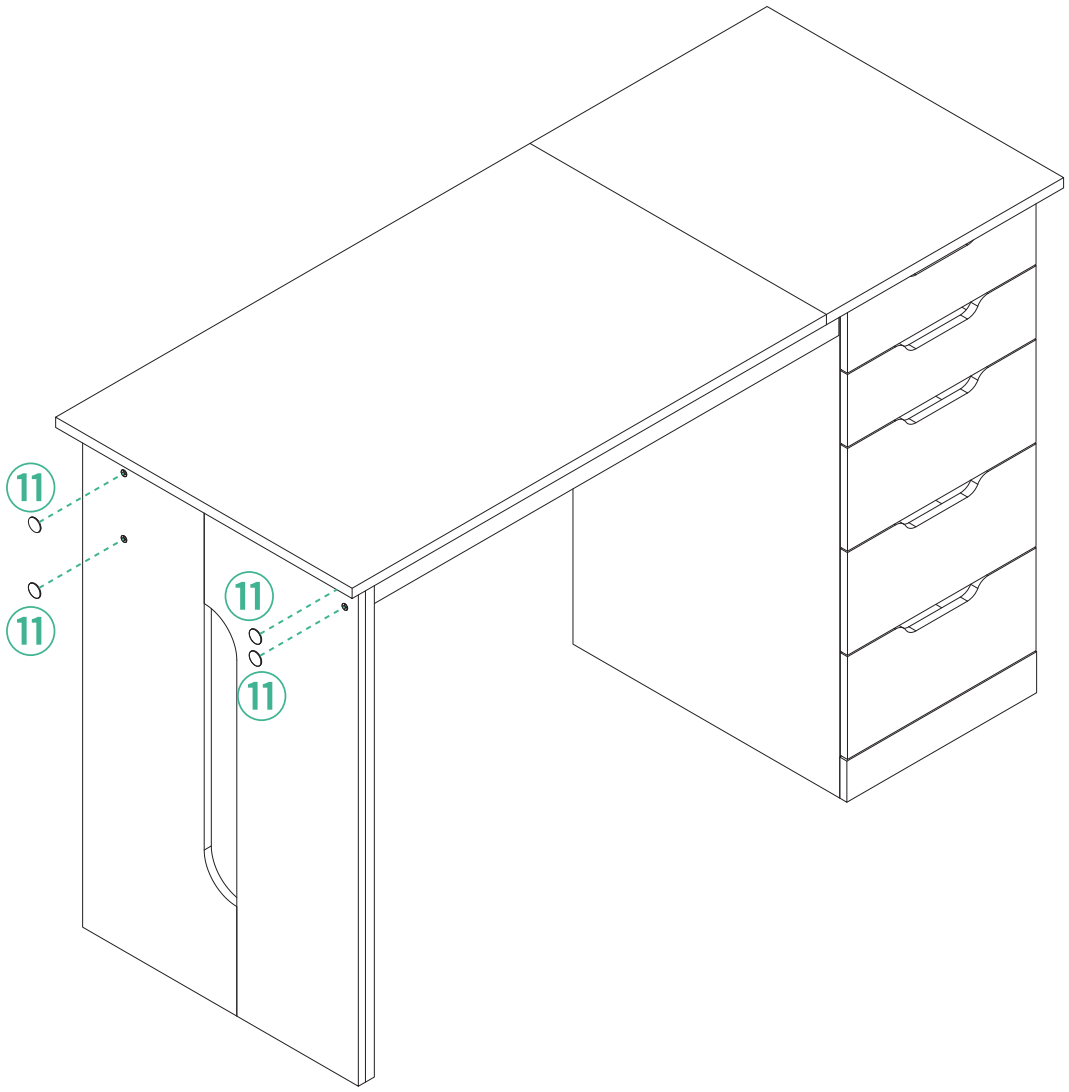

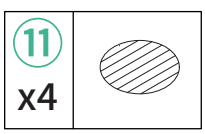

Customer Service

30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.

1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one.
Replacement is free and all shipping costs are covered.

Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1.Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2.If your problem still can’ t be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium quality products and convenient customer service.

MADE IN MALAYSIA