

INSTALLATION
Product Manual

Version: 210095US-03-26A-YE

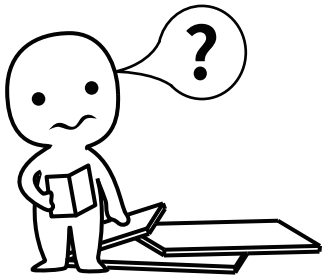


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

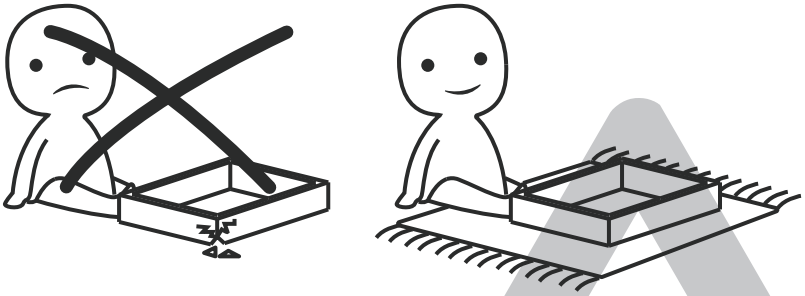


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

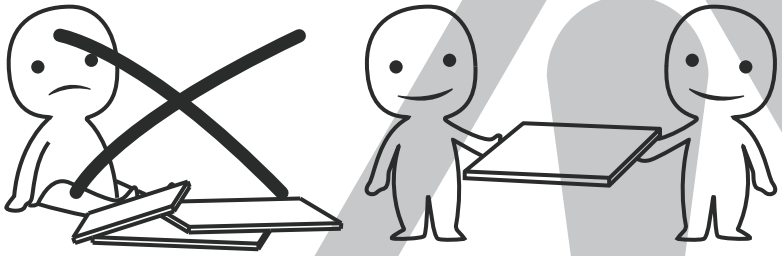

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

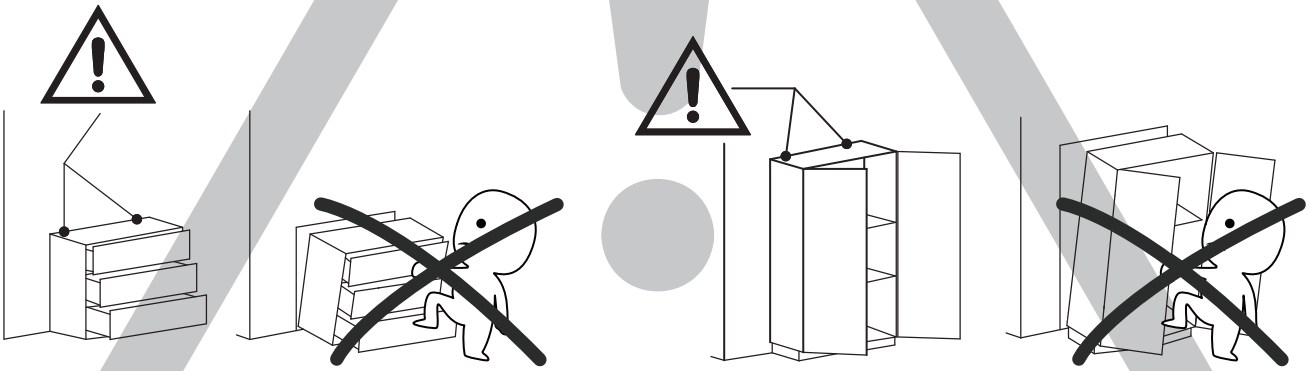

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.





For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




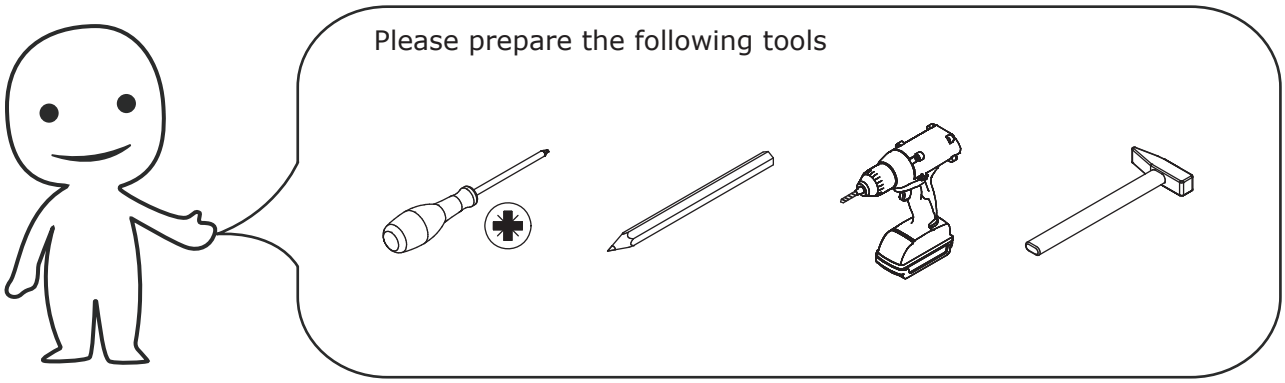


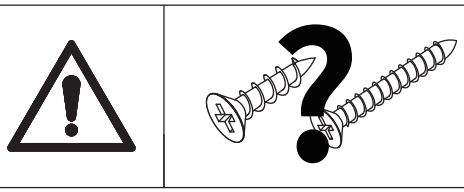


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

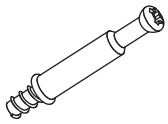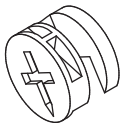A x 53	B x 53	C x 44	D x 56
			
CRA0635A	CRB1295A	CRC0540A	CRD0312A

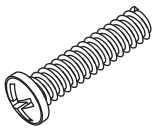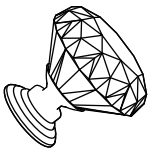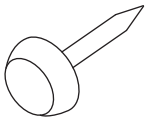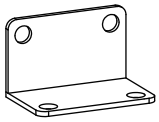E x 5	F x 5	G x 10	H x 4
			
CRE0416A			

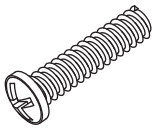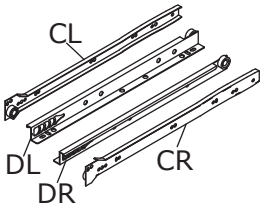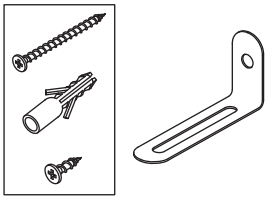J x 3	L x 5	Power plug x 1	M x 1
			
CRE0620A	1.0 x 12''		

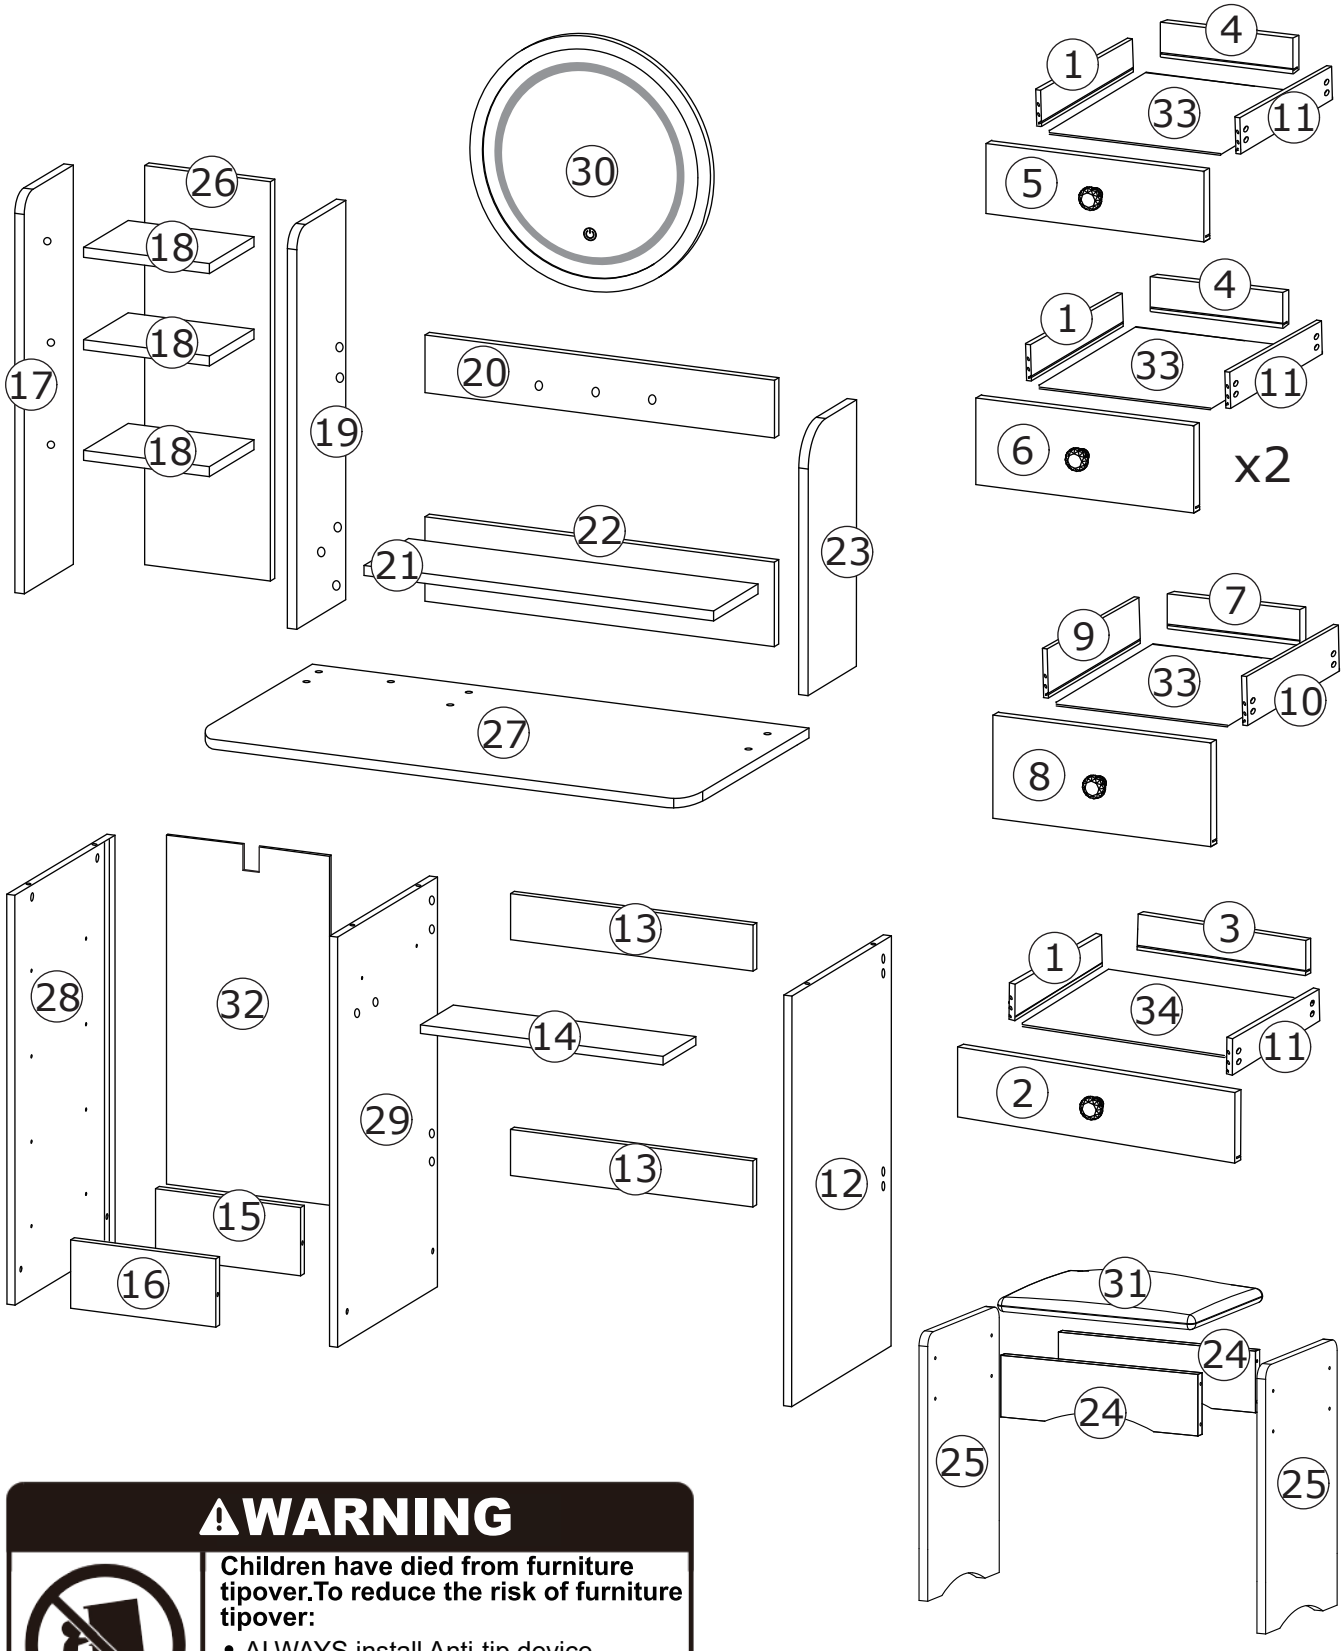


⚠WARNING

Children have died from furniture tipover.To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

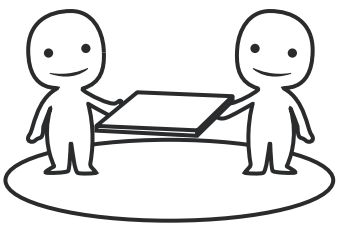



ASSEMBLED BY 2 ADULTS


1

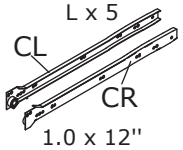
A x 2	D x 10	G x 4	L x 5	
				
CRA0635A	CRD0312A		1.0 x 12''	

Fix slide rail(CL) and (CR) to board 28 and 12 respectively with screw(D) as shown.

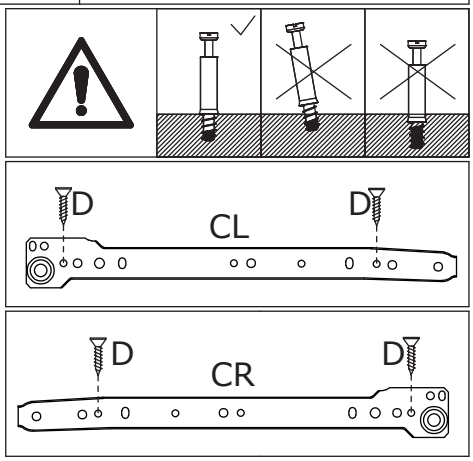

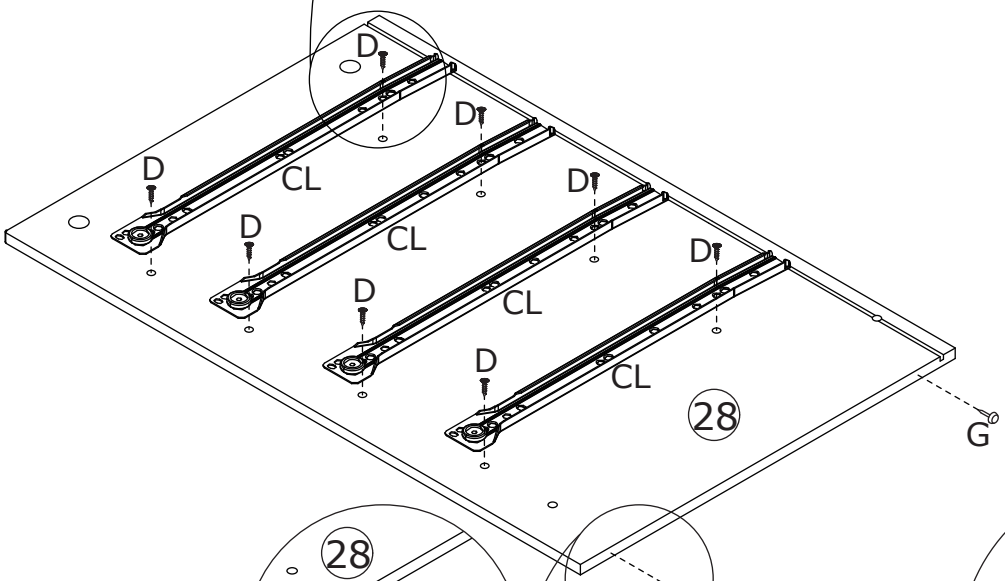


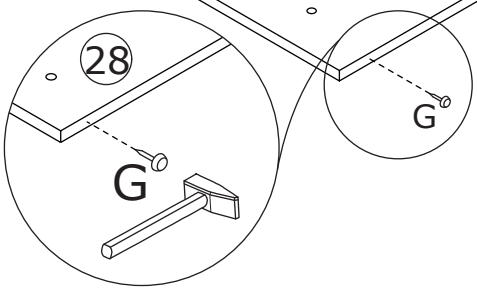


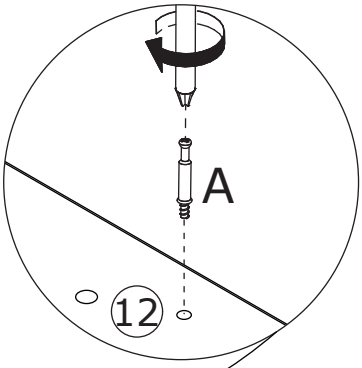



Knock foot peg(G) into bottom of board 28 and 12.


Enfoncer la cheville de pied(G) dans le fond des planches 28 et 12.

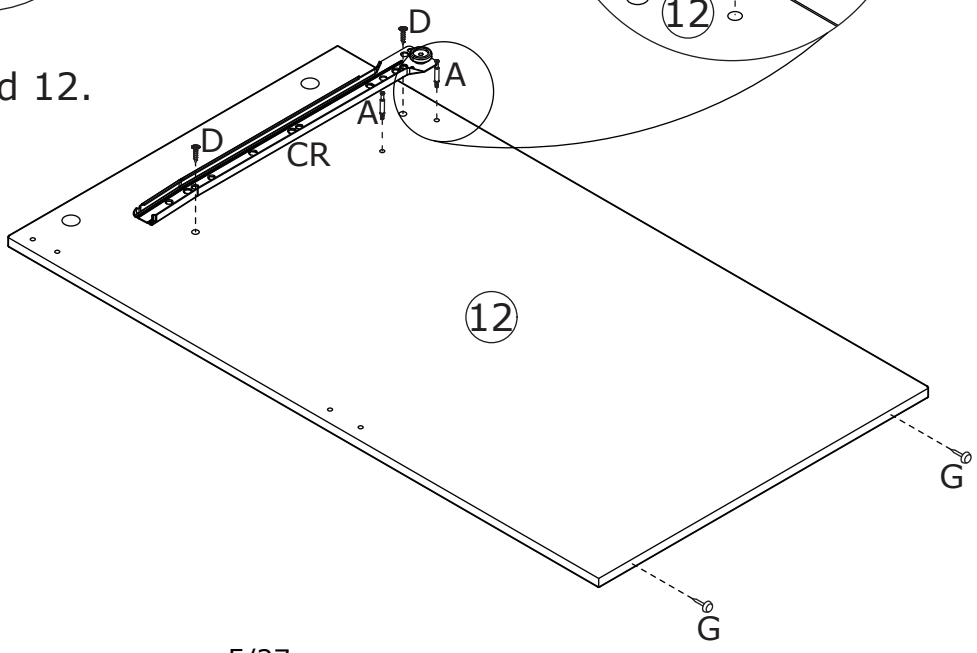


2

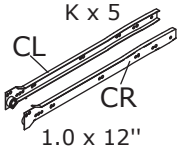A x 2	D x 10	G x 2	K x 5	
				
CRA0635A	CRD0312A		1.0 x 12''	

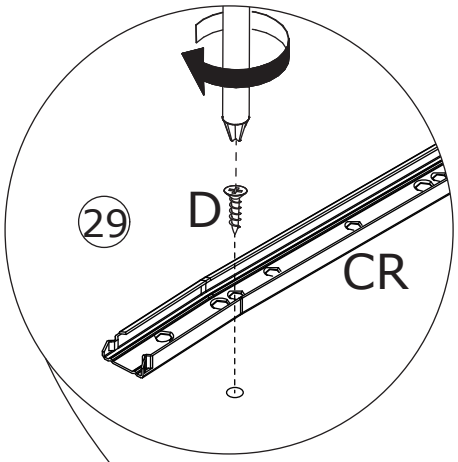


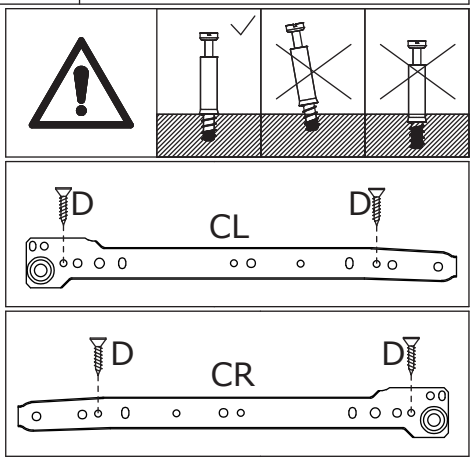

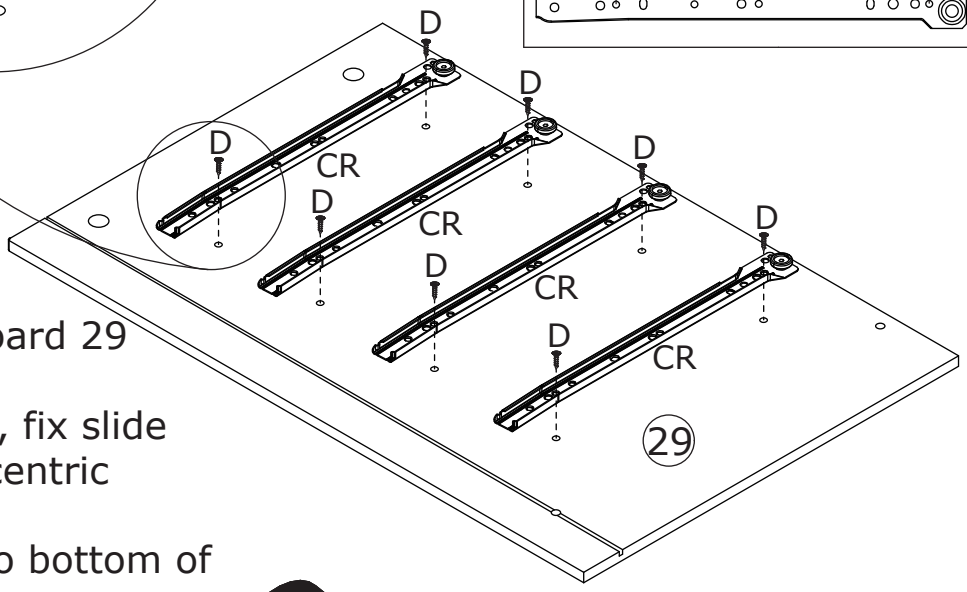


Fix slide rail(CR) to board 29 with screw(D) at first.
Flip the board to back, fix slide rail(CL) and screw eccentric rod(A) into as shown.
Knock foot peg(G) into bottom of board 29.

Flip to back

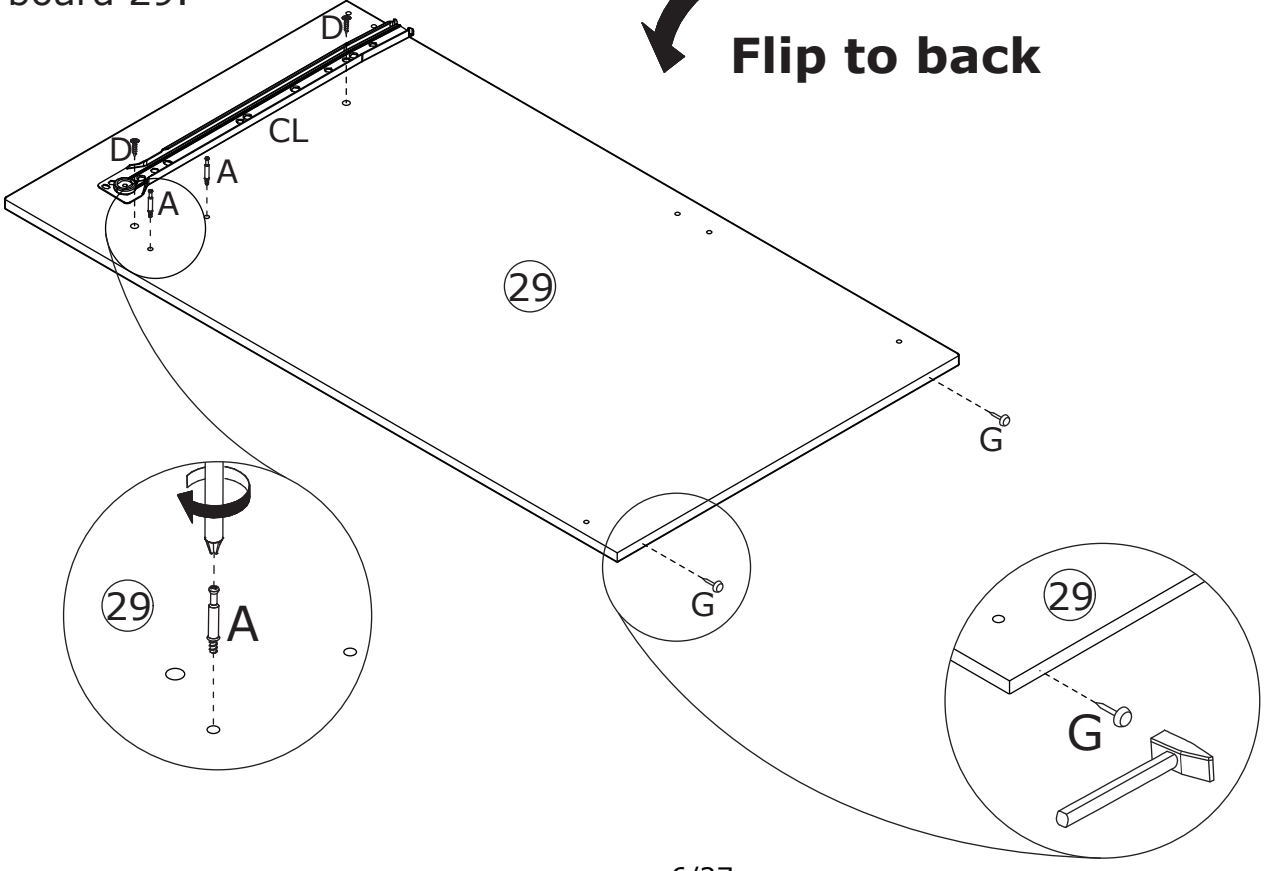



3

C x 4



CRC0540A





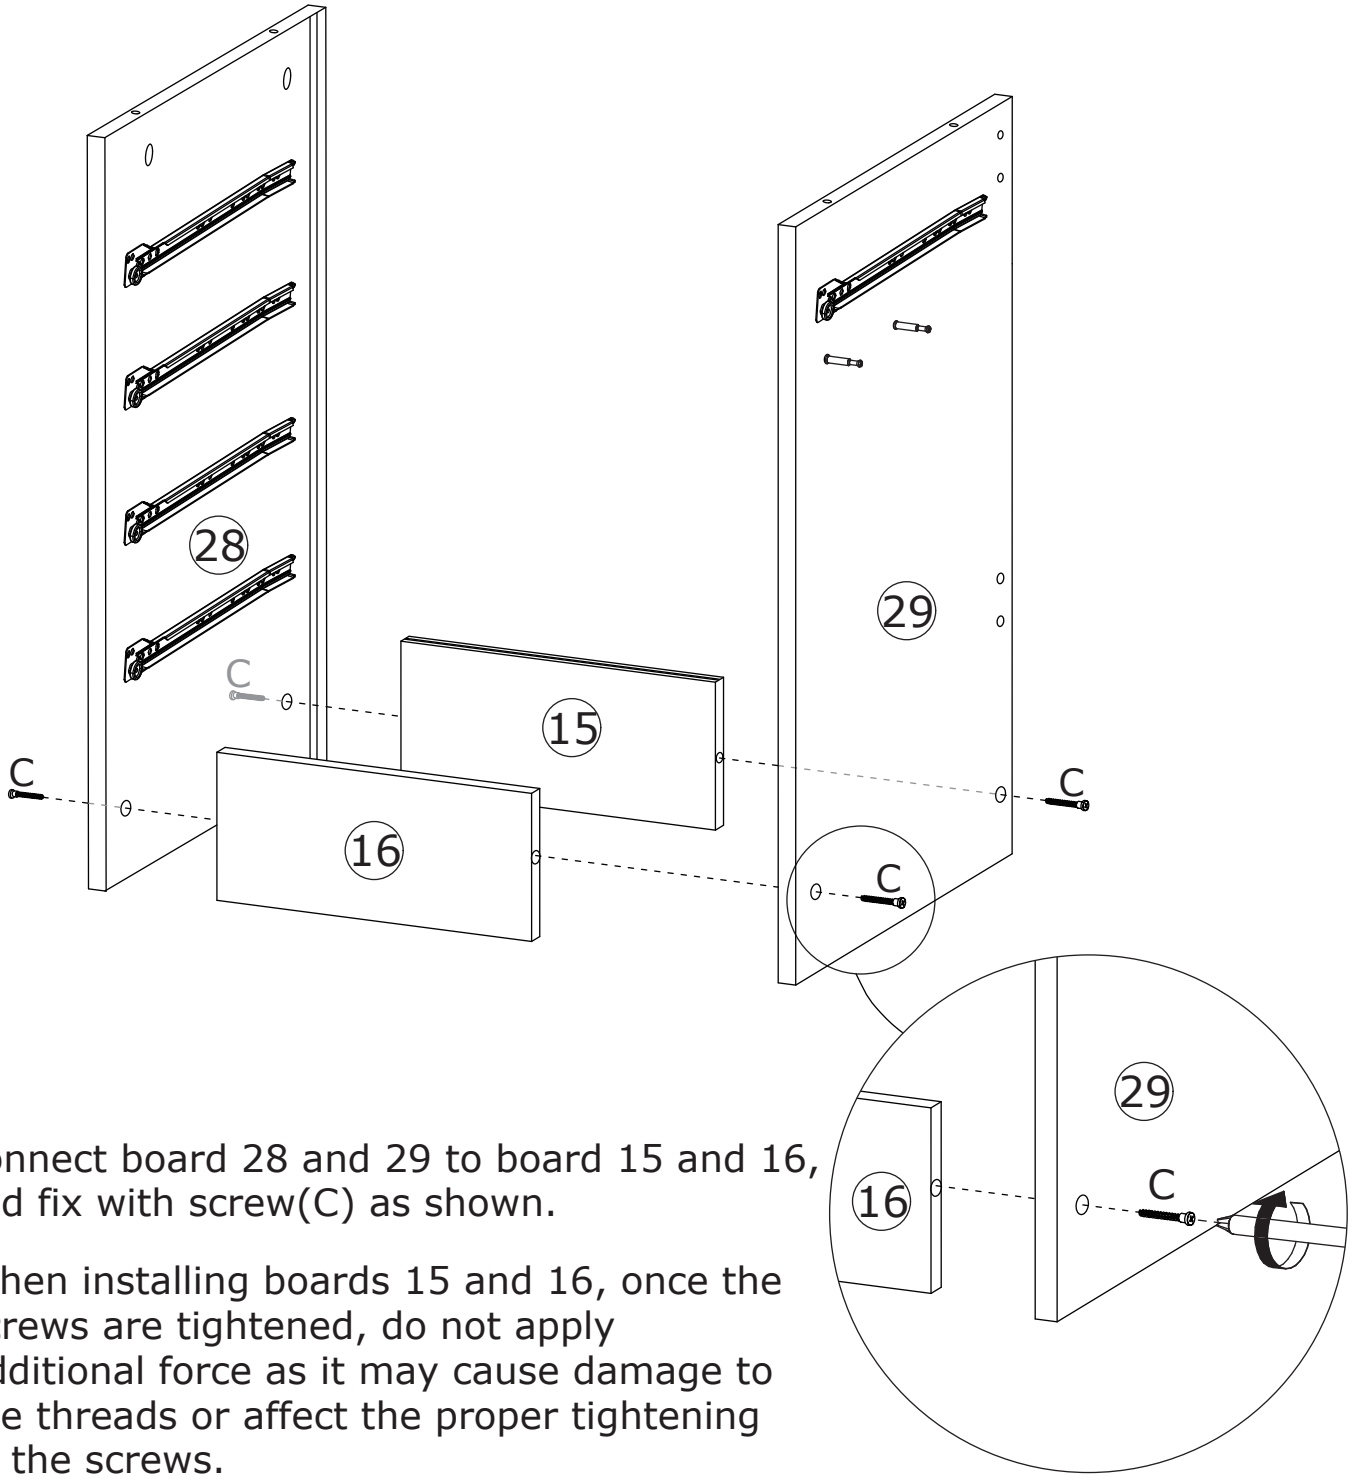



Connect board 28 and 29 to board 15 and 16, and fix with screw(C) as shown.

When installing boards 15 and 16, once the screws are tightened, do not apply additional force as it may cause damage to the threads or affect the proper tightening of the screws.

4


B x 4	C x 8	
		
CRB1295A	CRC0540A	

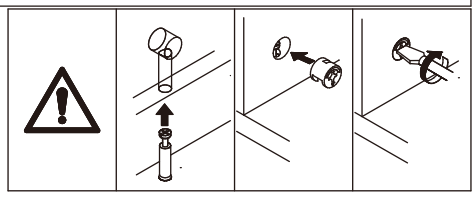

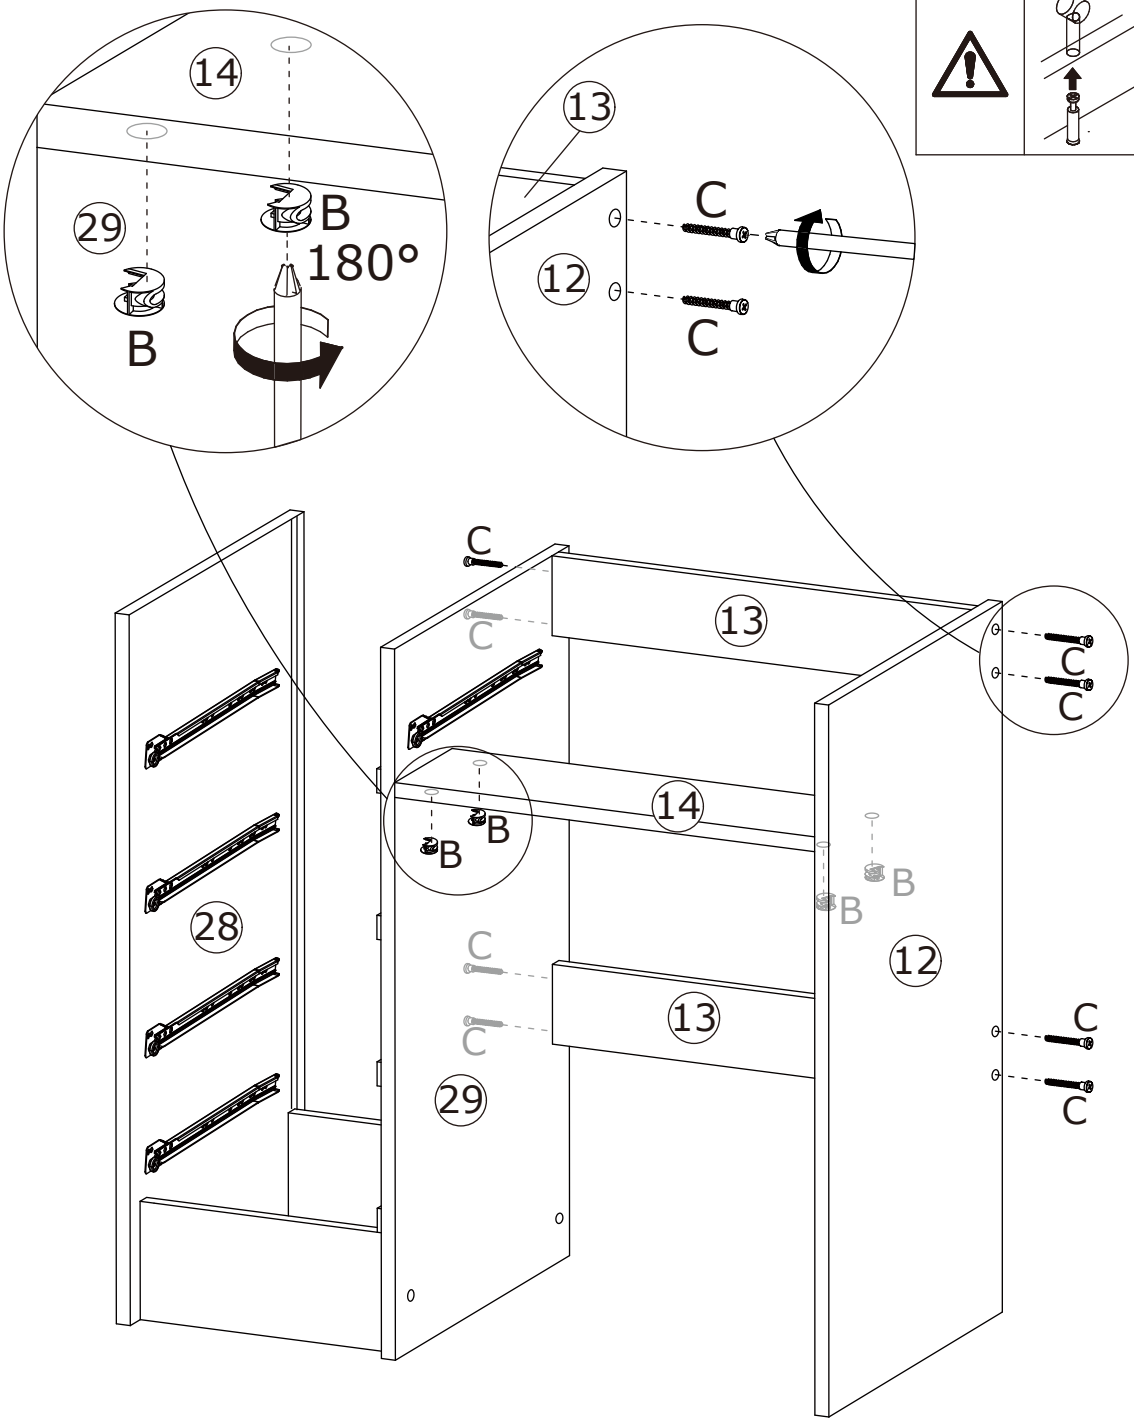



Connect board 12 and 29 to board 14,add cam lock(B) into board 14 and turn clockwise to tighten as shown.
Connect board 12 and 29 to board 13,and fix with screw(C) as shown.


5

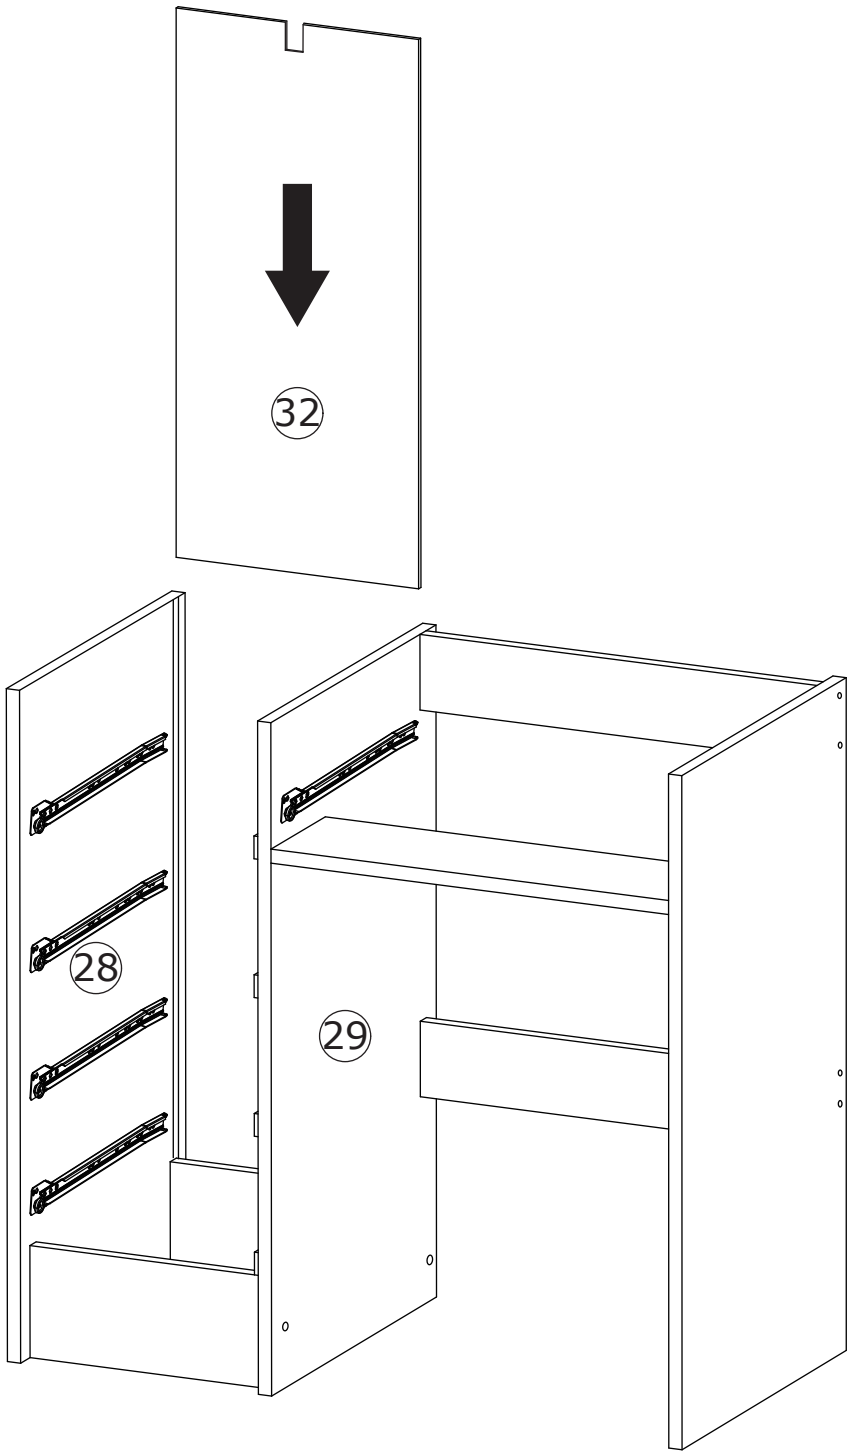

Insert board 32 along available grooves as shown.

6

A x 6	B x 6	M x 1	
			
CRA0635A	CRB1295A		

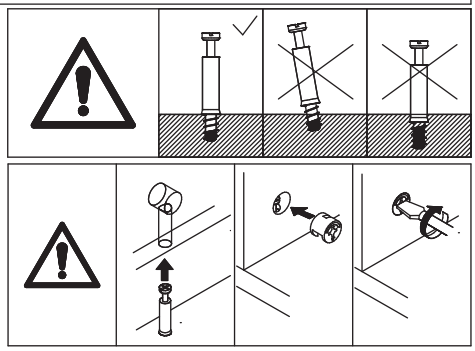


Install the anti-tip device onto Panel 27.
Screw eccentric rod(A) into board 27 at first.
Attach board 27 to the top, add cam lock(B) into board 28,29,12 and turn clockwise to tighten as shown.


7


A x 20





CRA0635A




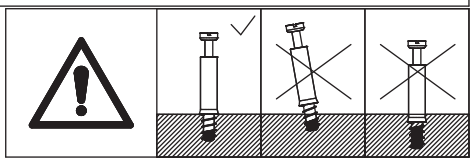


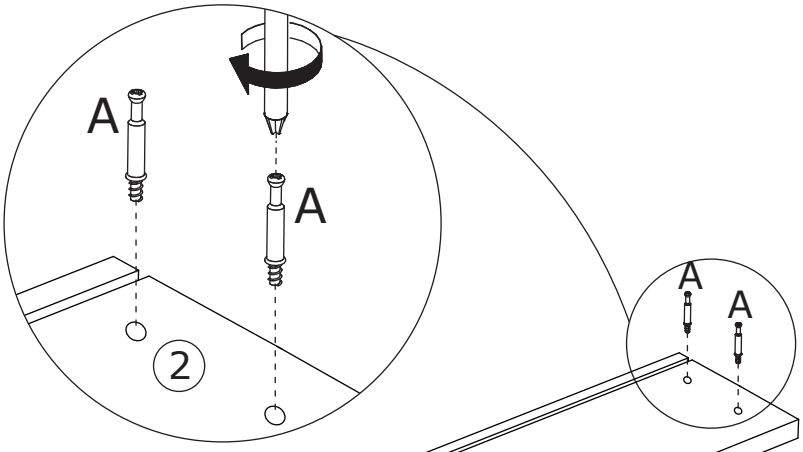

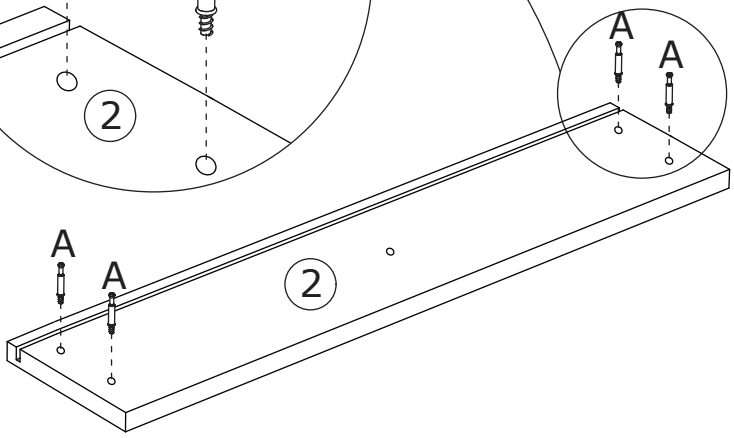

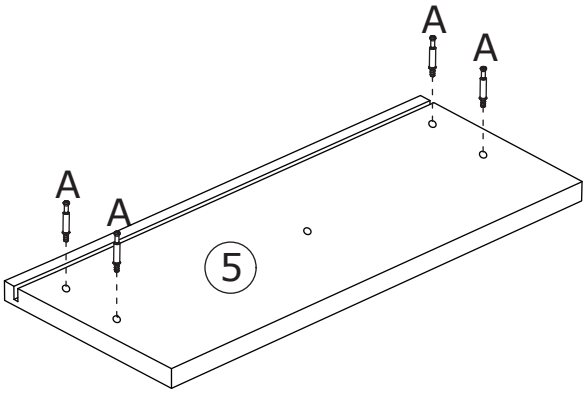


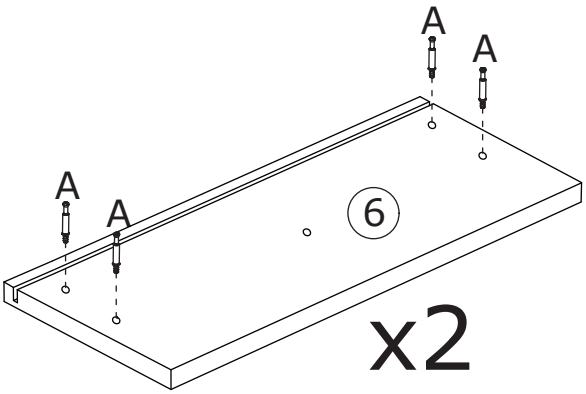


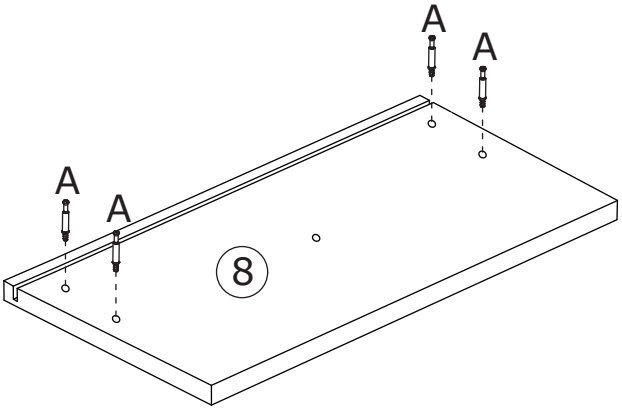


Screw eccentric rod(A) into board 2, 5, 6 and 8 at first.

8

B x 20	E x 5	F x 5	
 CRB1295A	 CRE0416A		

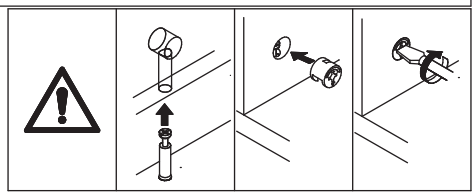

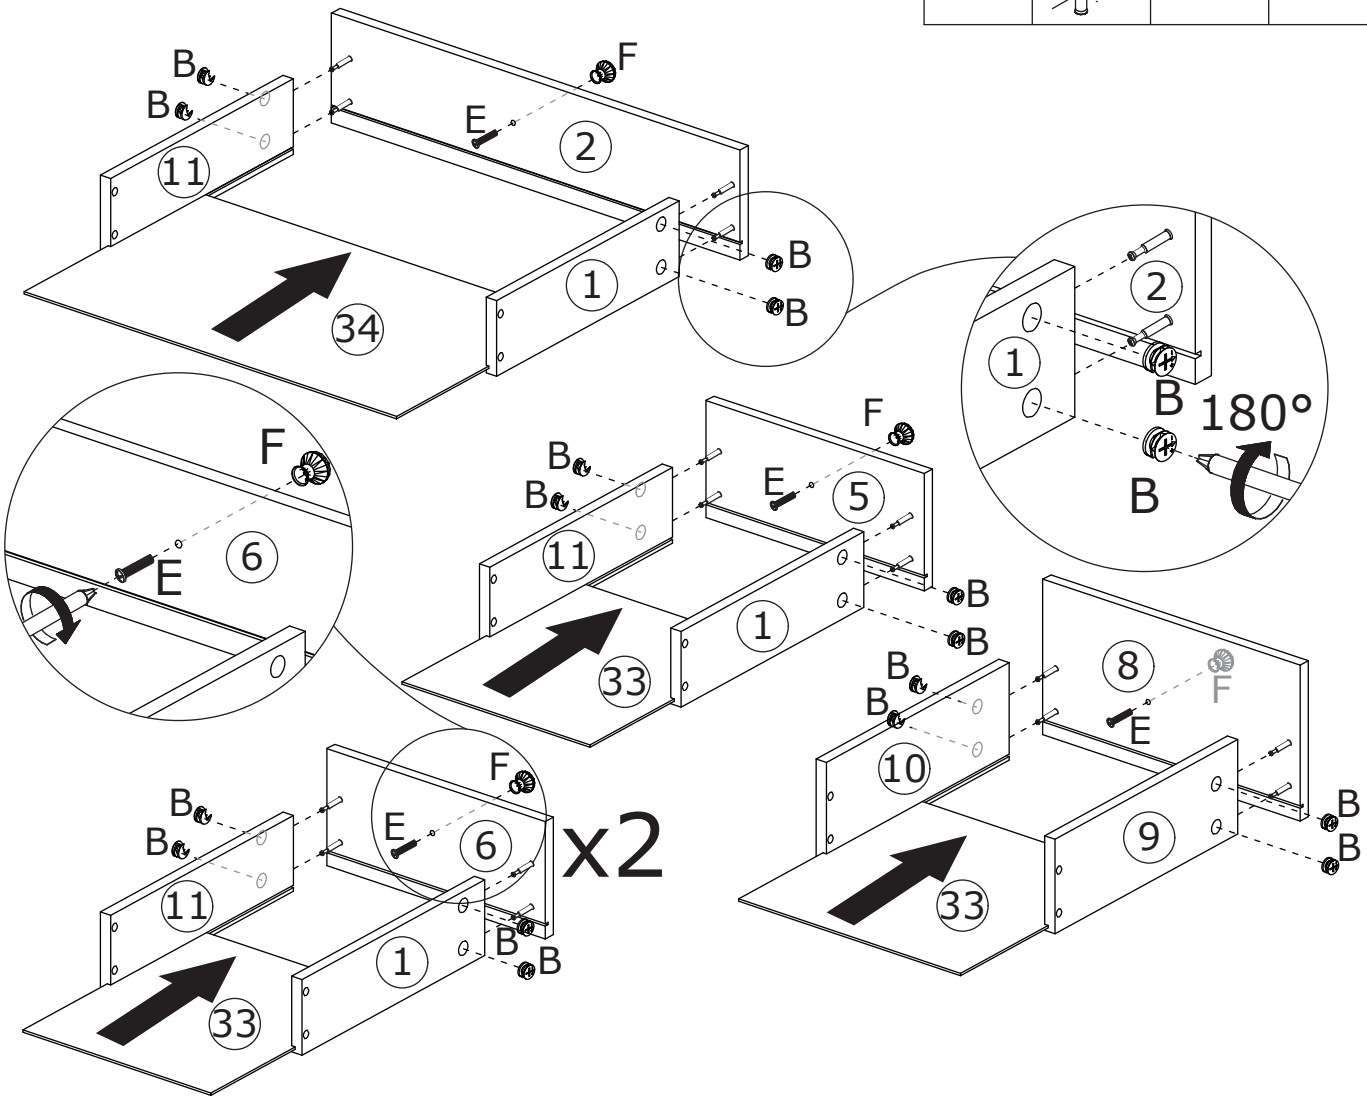


Attach board 11 and 1 to board 2,5,6,add cam lock(B) and turn clockwiseto tighten as shown.


Attach board 10 and 9 to board 8,add cam lock(B) and turn clockwise to tighten as shown.
Insert board 34 and 33 along available grooves as shown.
Fix knob(F) to drawer face with screw(E).


9

C x 20



CRC0540A



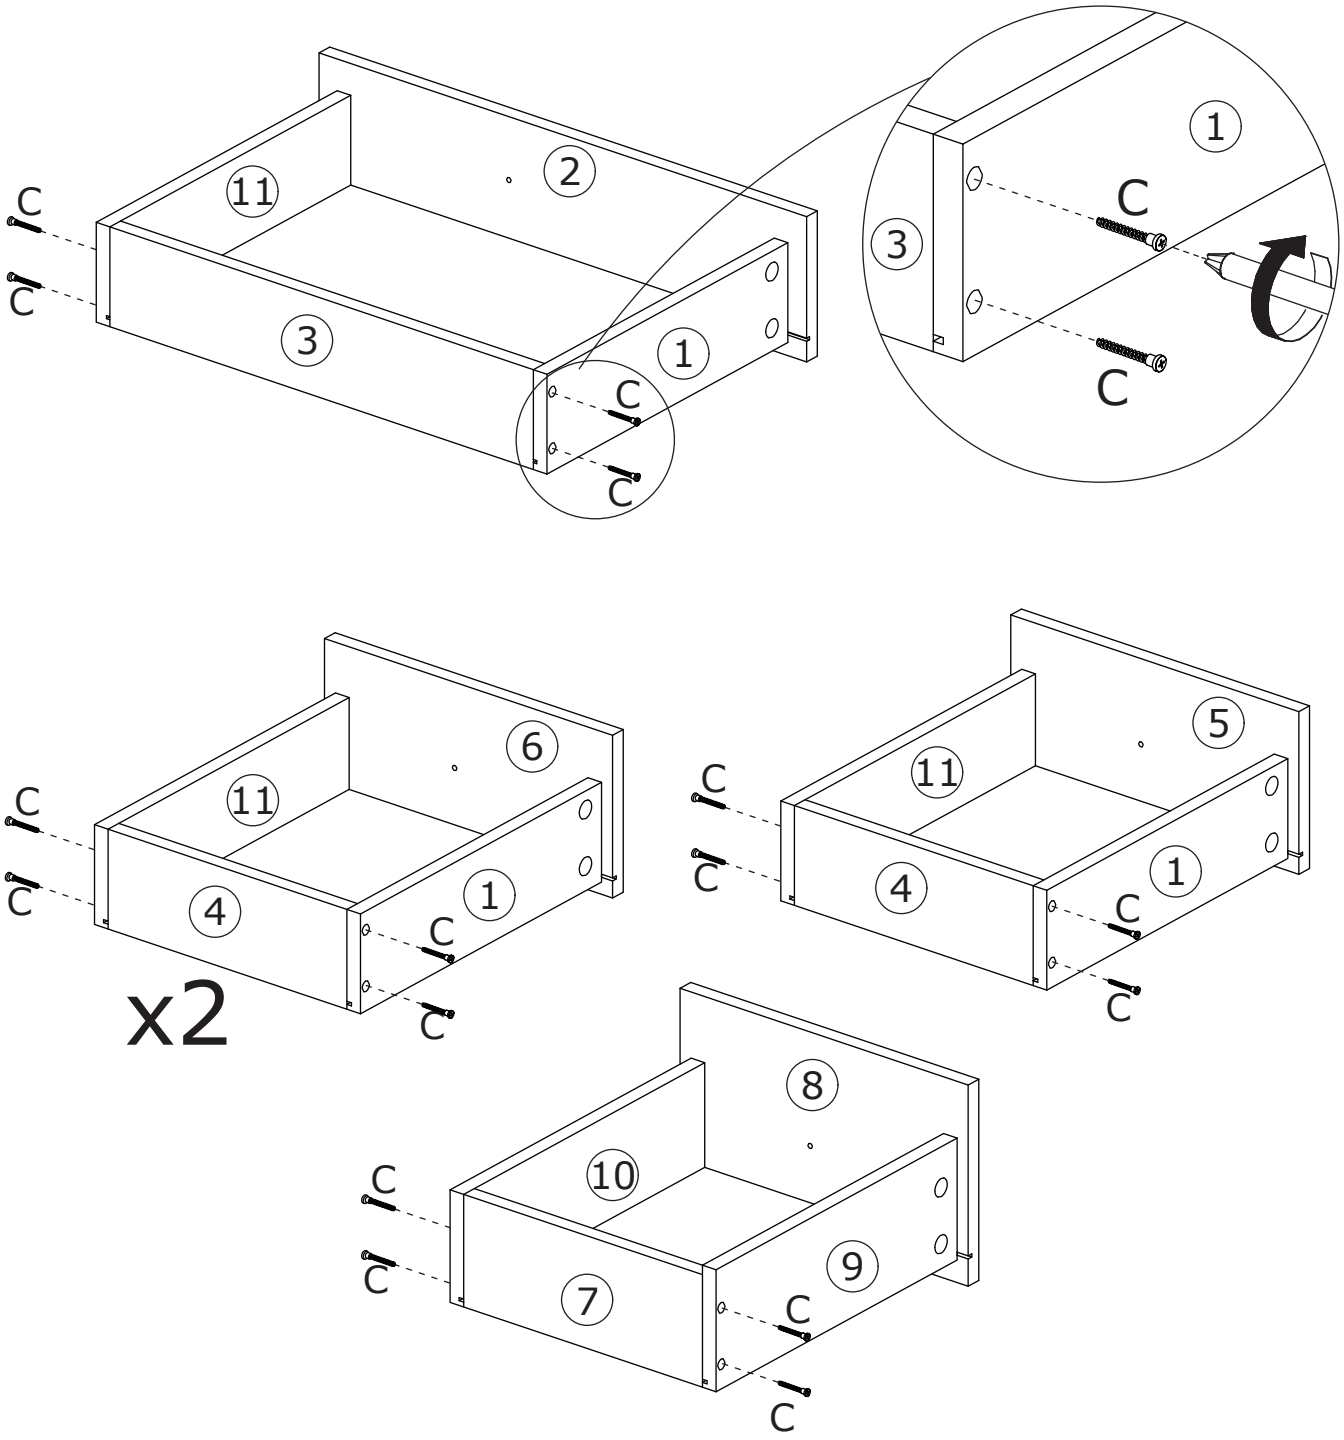

Fix board 3, 4 and 7 to corresponding drawers with screw(C) as shown.


10

D x 20





CRD0312A

L x 5

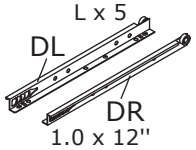


1.0 x 12''



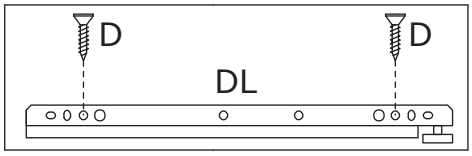





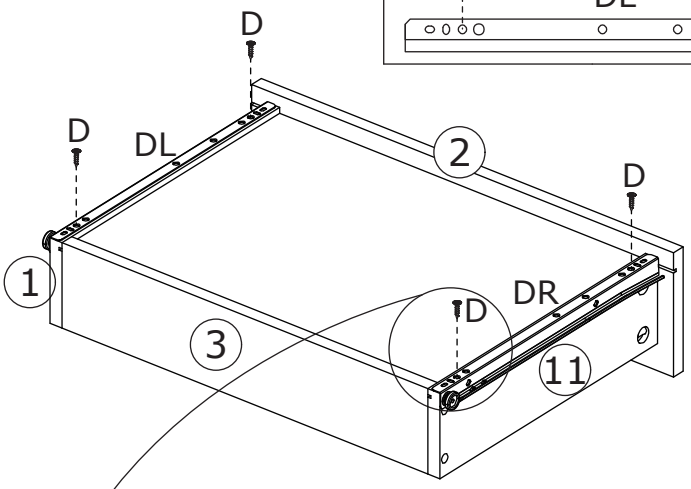


Fix runner(DL) to board 1 and 9 with screw(D) as shown.


Fix runner(DR) to board 11 and 10 with screw(D) as shown.

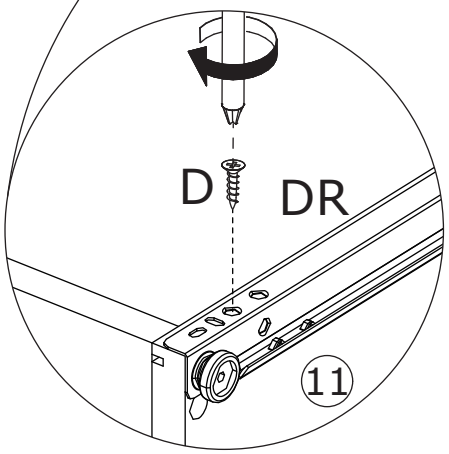

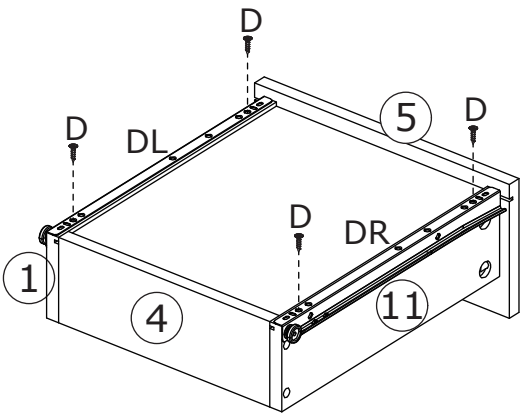


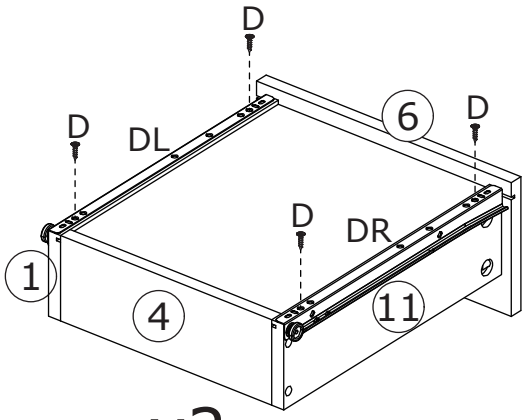


x2

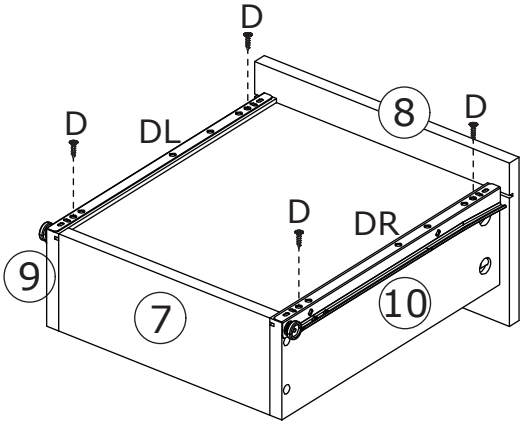


11

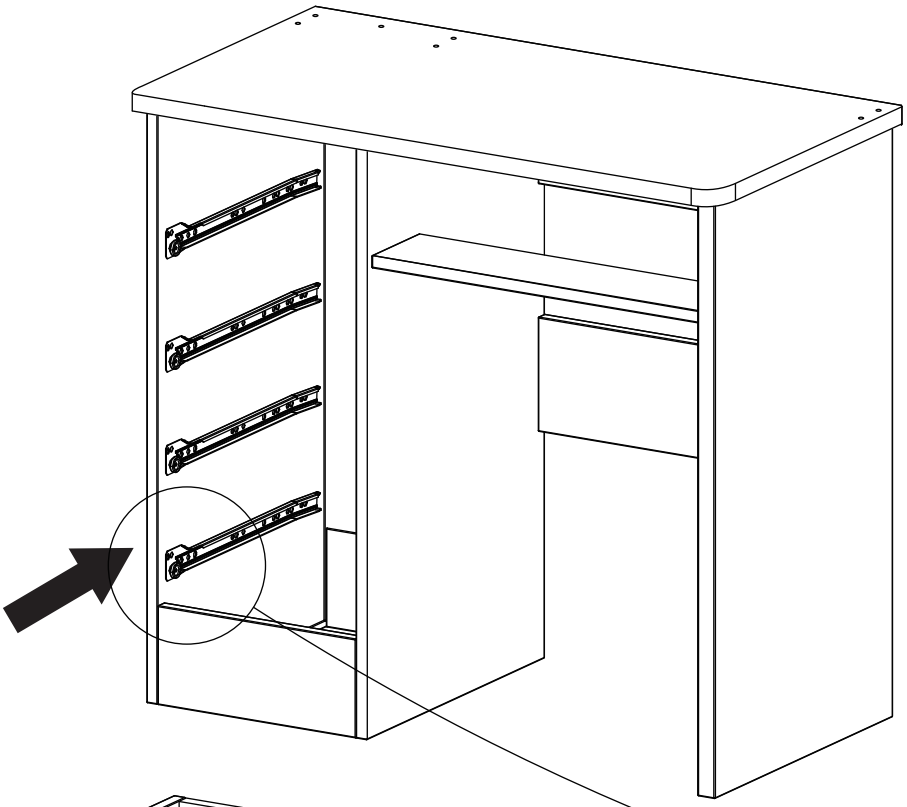

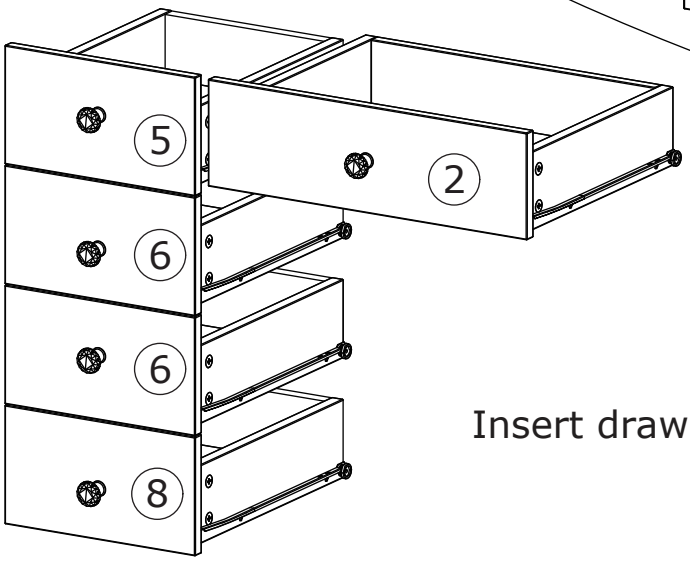

Insert drawers in.

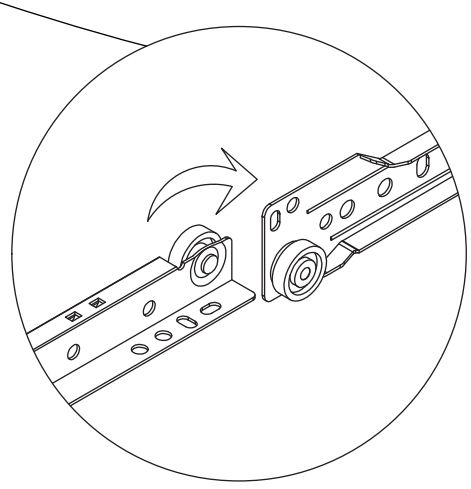



12


A x 13



CRA0635A



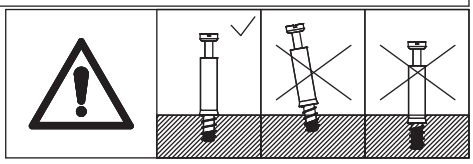

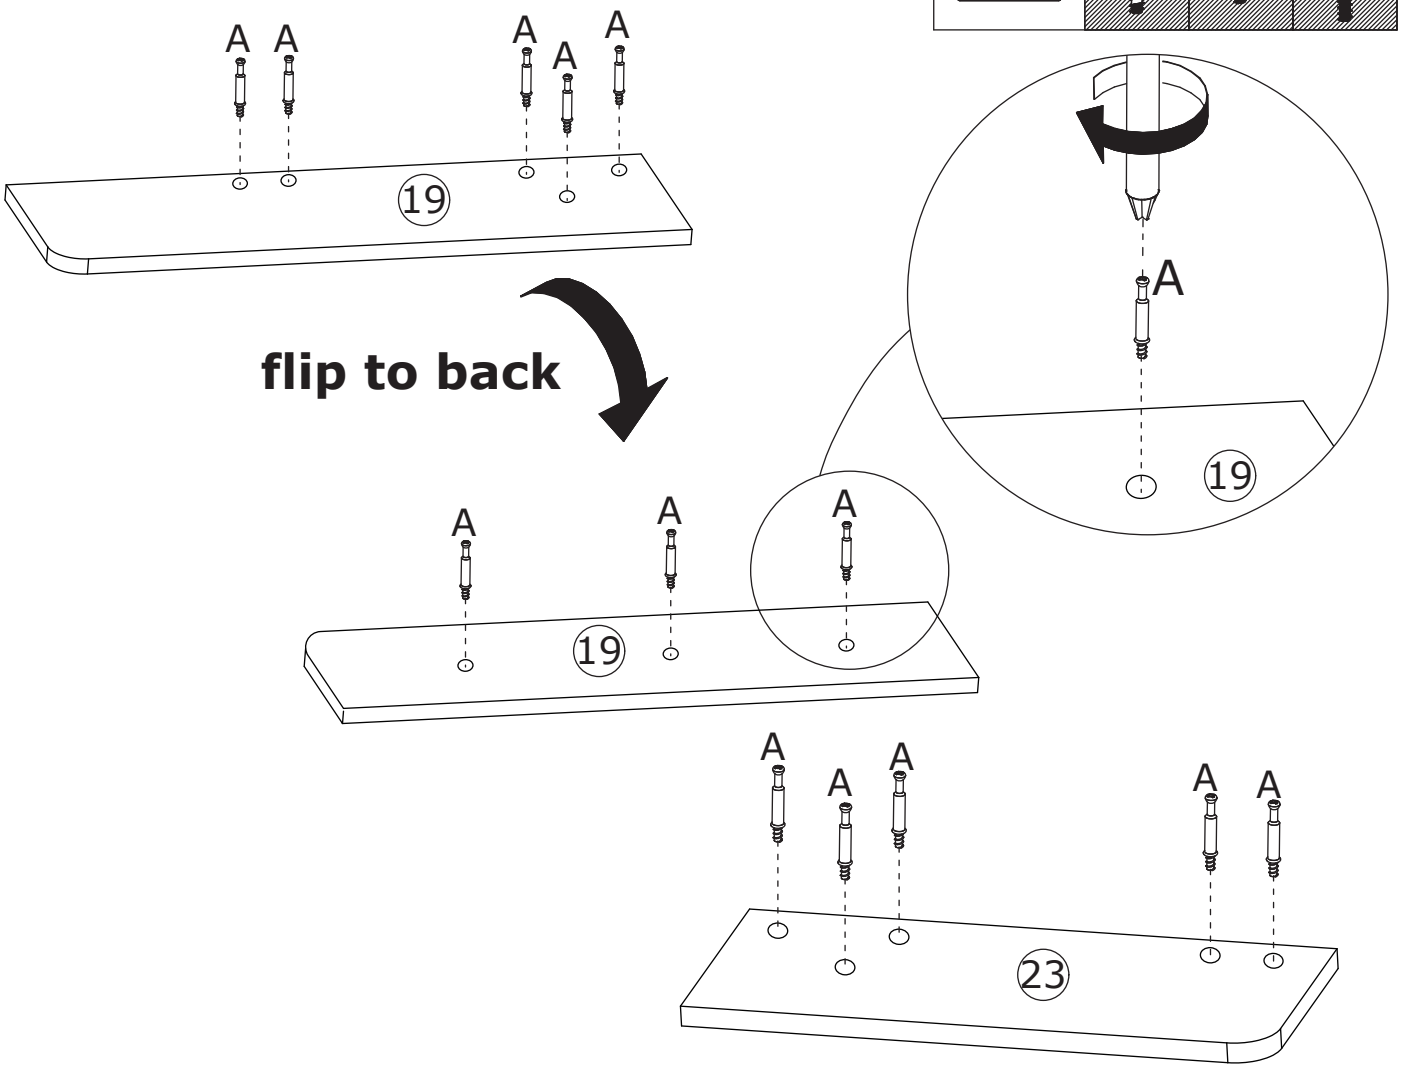


Screw eccentric rod(A) into board 19 and 23 at first.


13


B x 10




CRB1295A



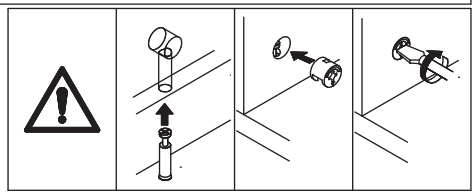

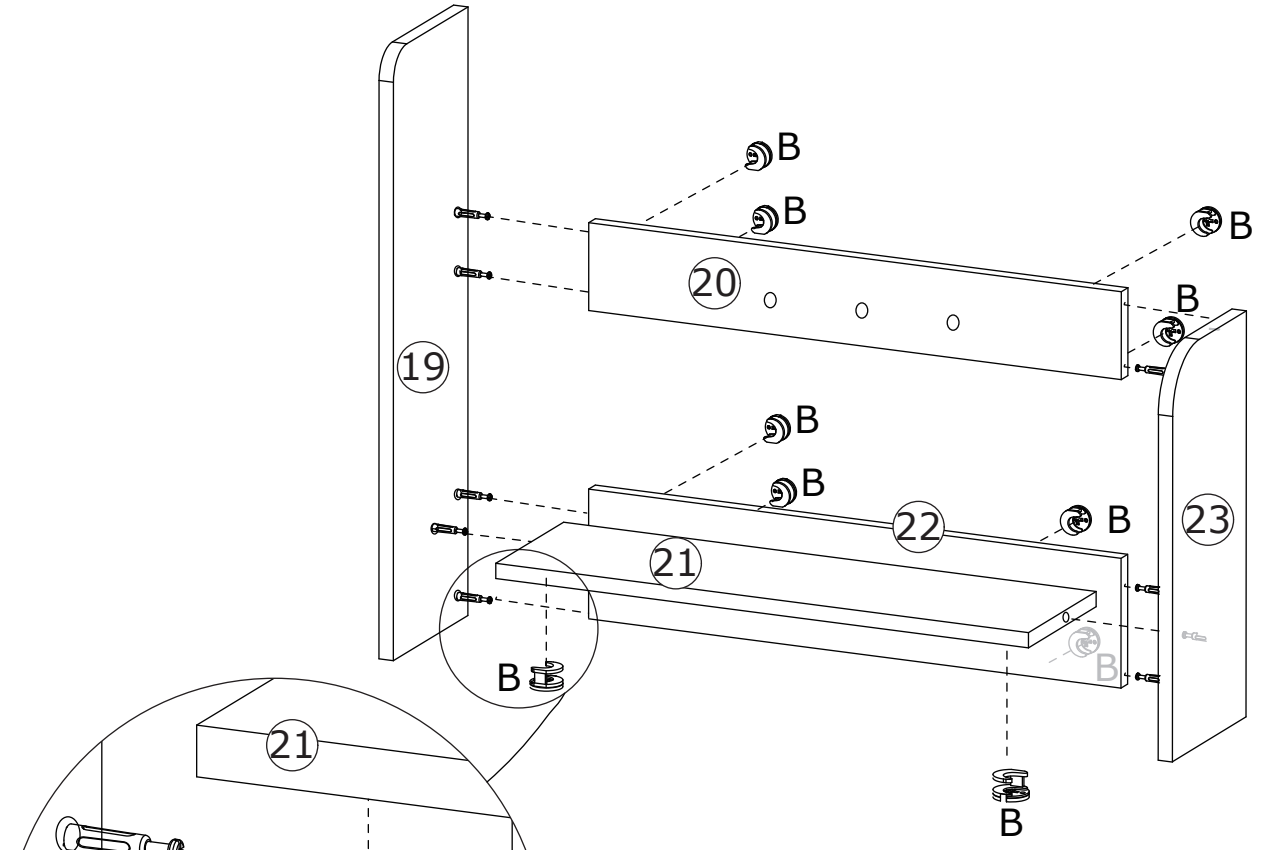


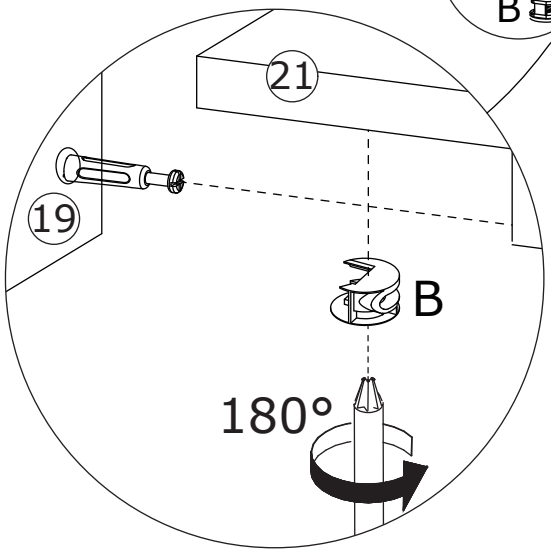


Connect board 23 and 19 to board 20, 21 and 22, add cam lock(B) into and turn clockwise to tighten as shown.


14

C x 1



CRC0540A



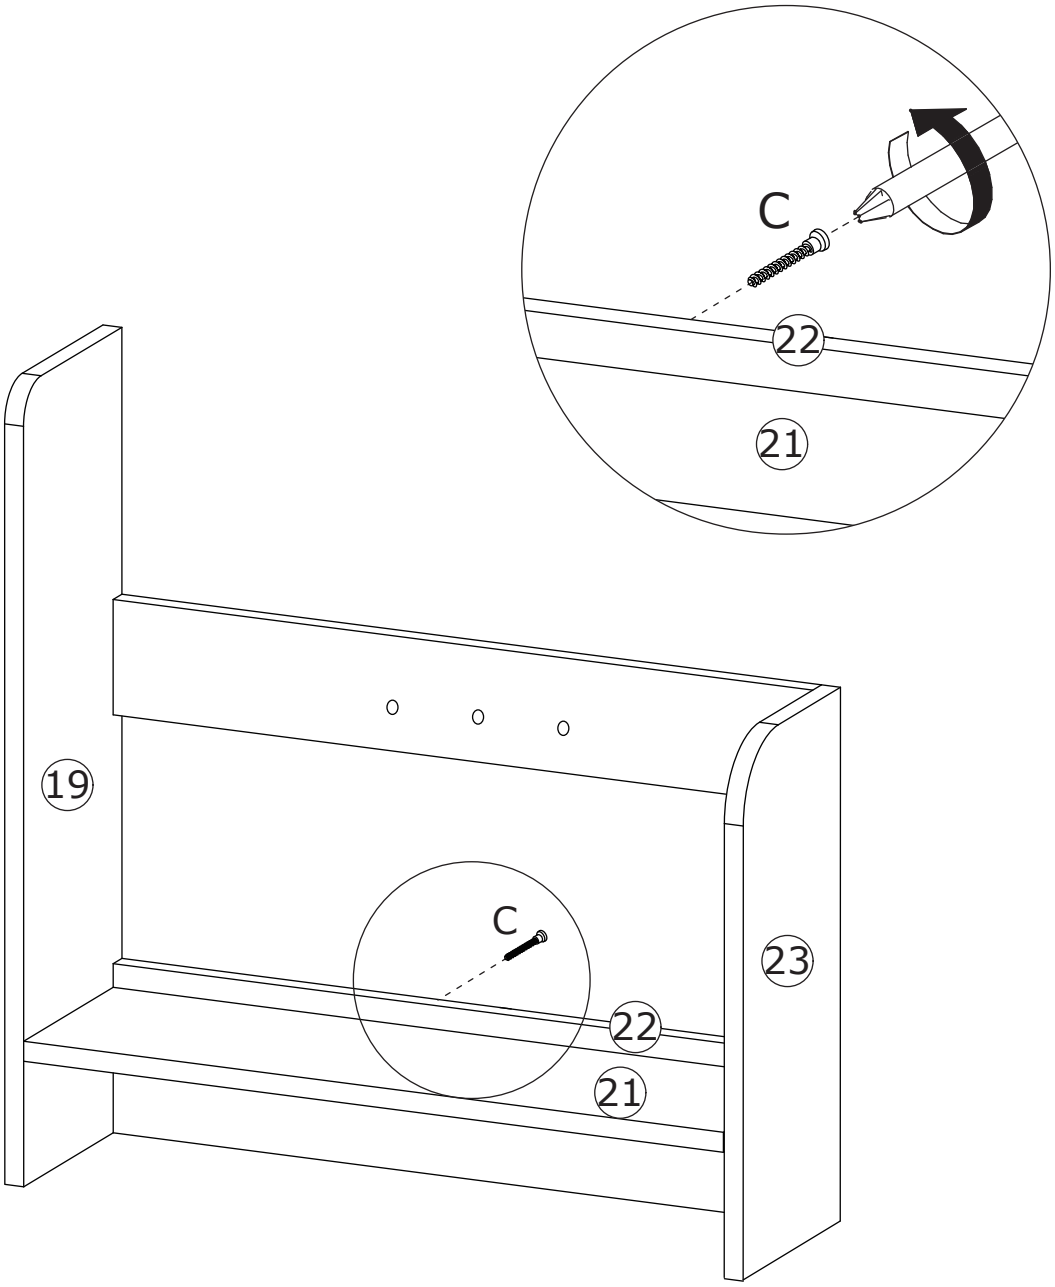


Fix board 22 to board 21 with screw(C) as shown.


15


A x 3



CRA0635A



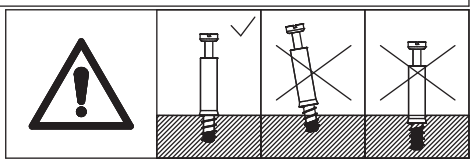

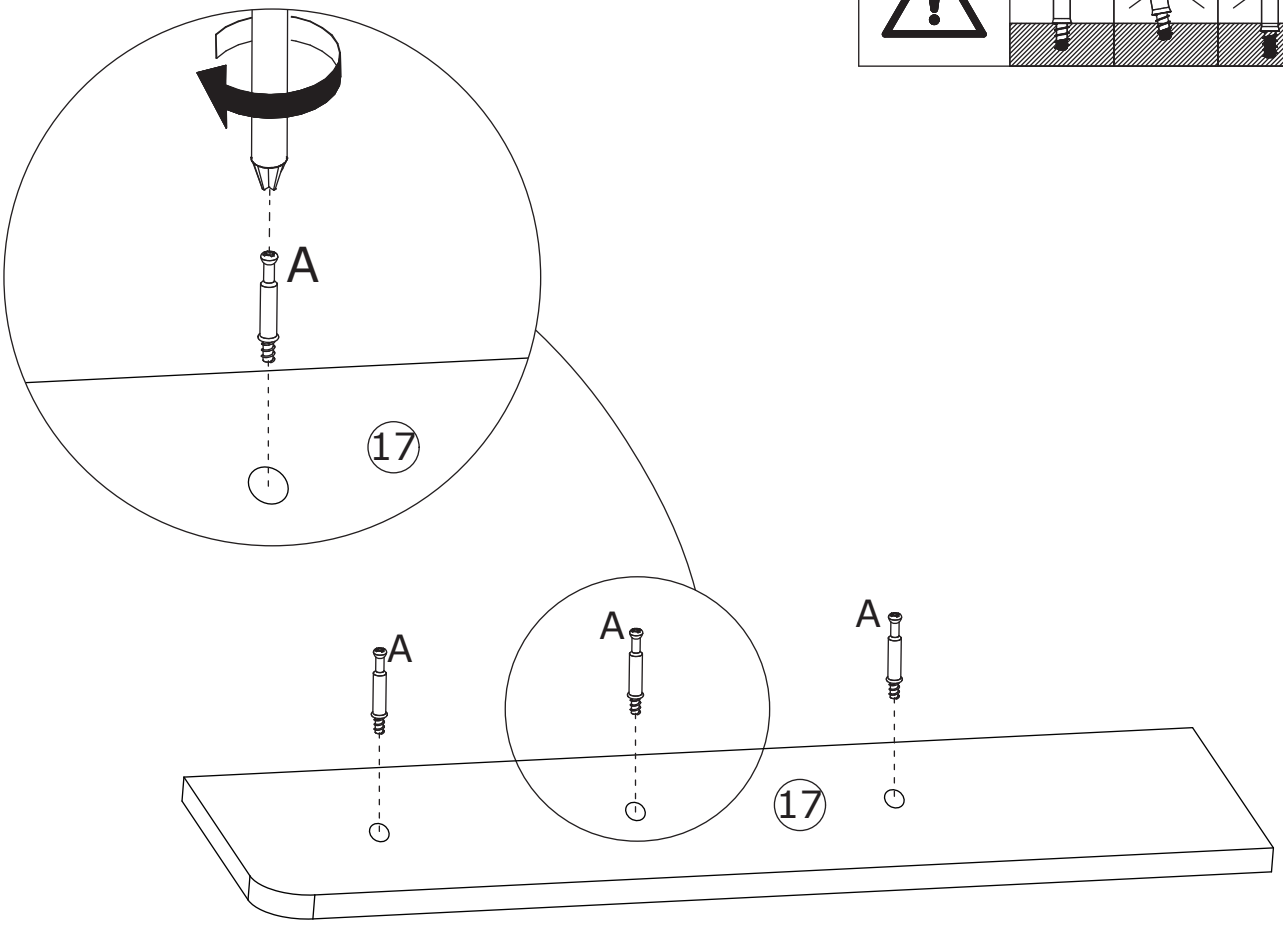


Screw eccentric rod(A) into board 17 at first.


16


B x 6



CRB1295A



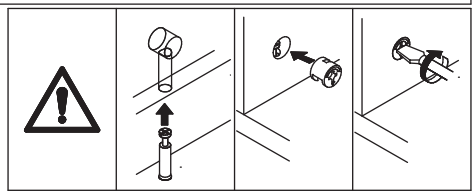


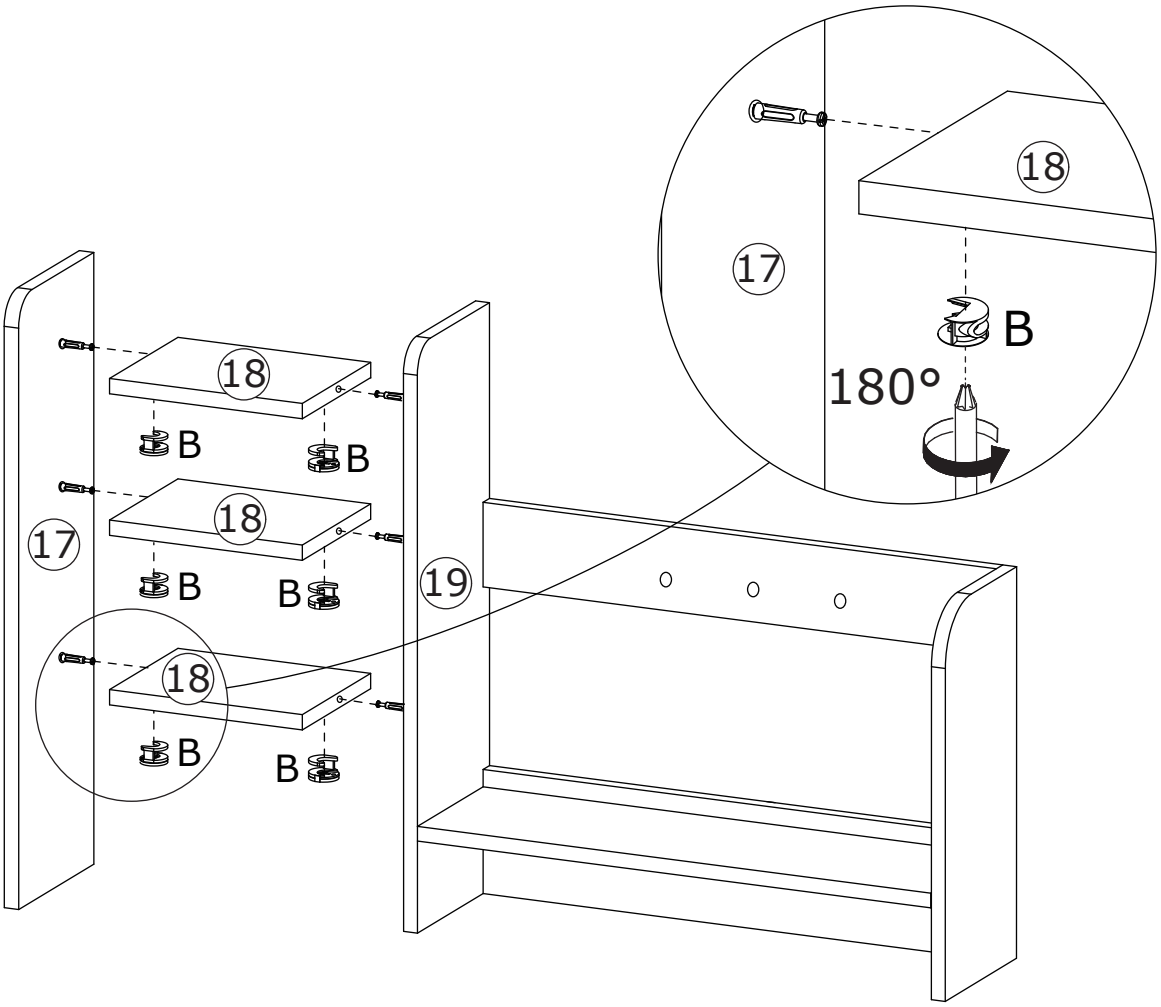


Connect board 17 and 19 to board 18,add cam lock(B) into and turn clockwise to tighten as shown.


17

C x 3




CRC0540A




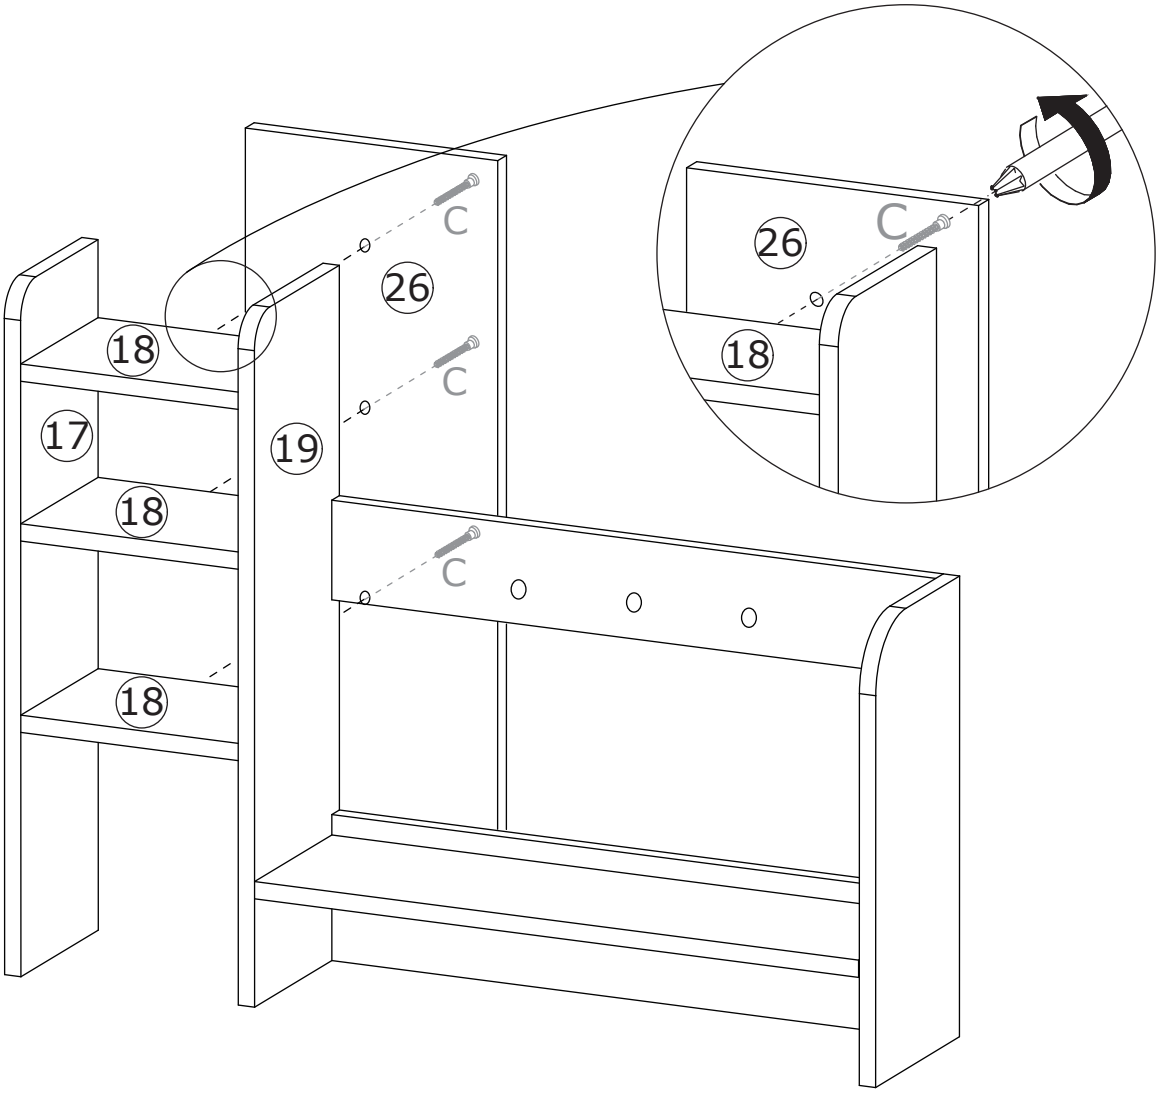

Fix board 26 to board 18 with screw(C) as shown.

18

A x 7	B x 7	
		
CRA0635A	CRB1295A	

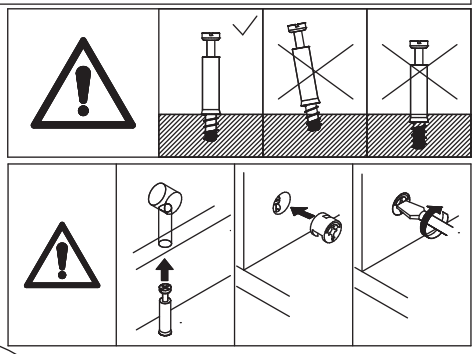


Screw eccentric rod(A) into board 27 at first.
Connect the two components,add cam lock(B) into and turn clockwise to tighten as shown.

19


J x 3




CRE0620A



Fix board 20 to mirror using the screw(J) as shown.

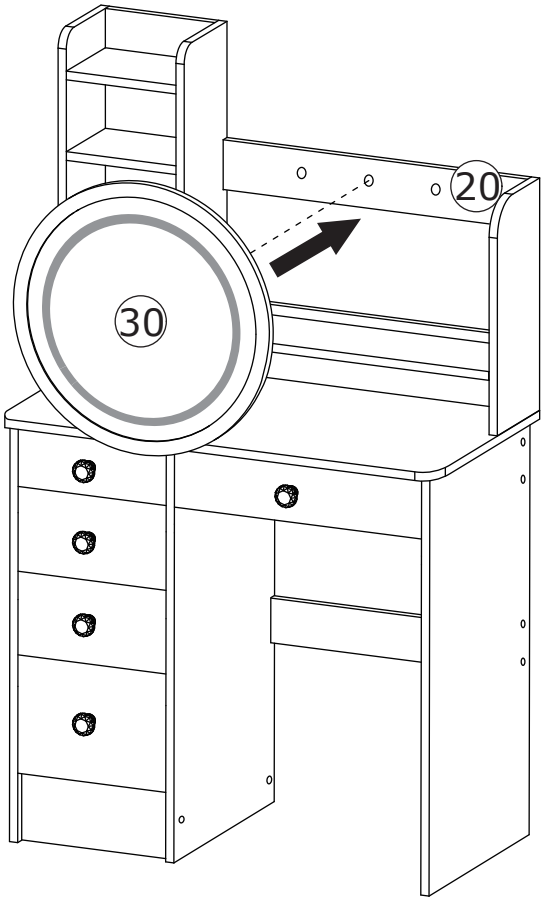


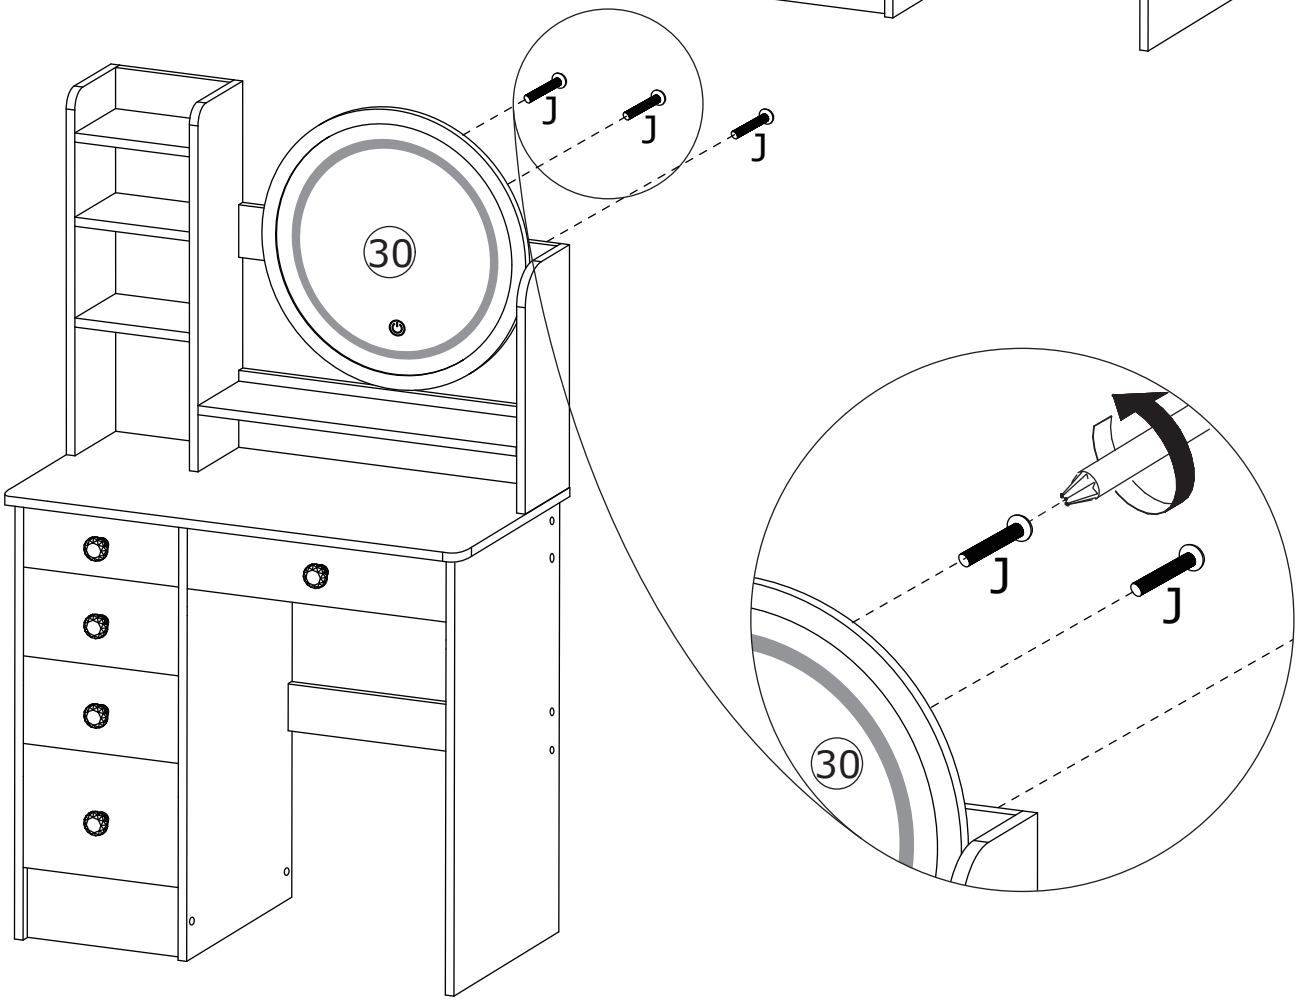



20

M x 1






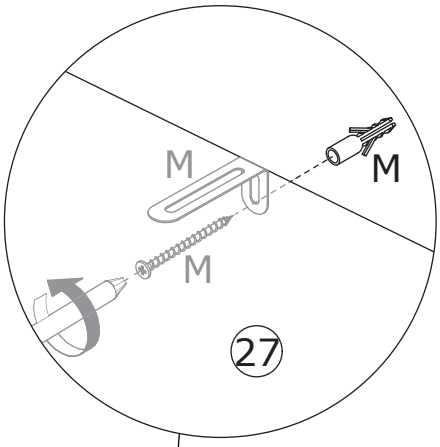


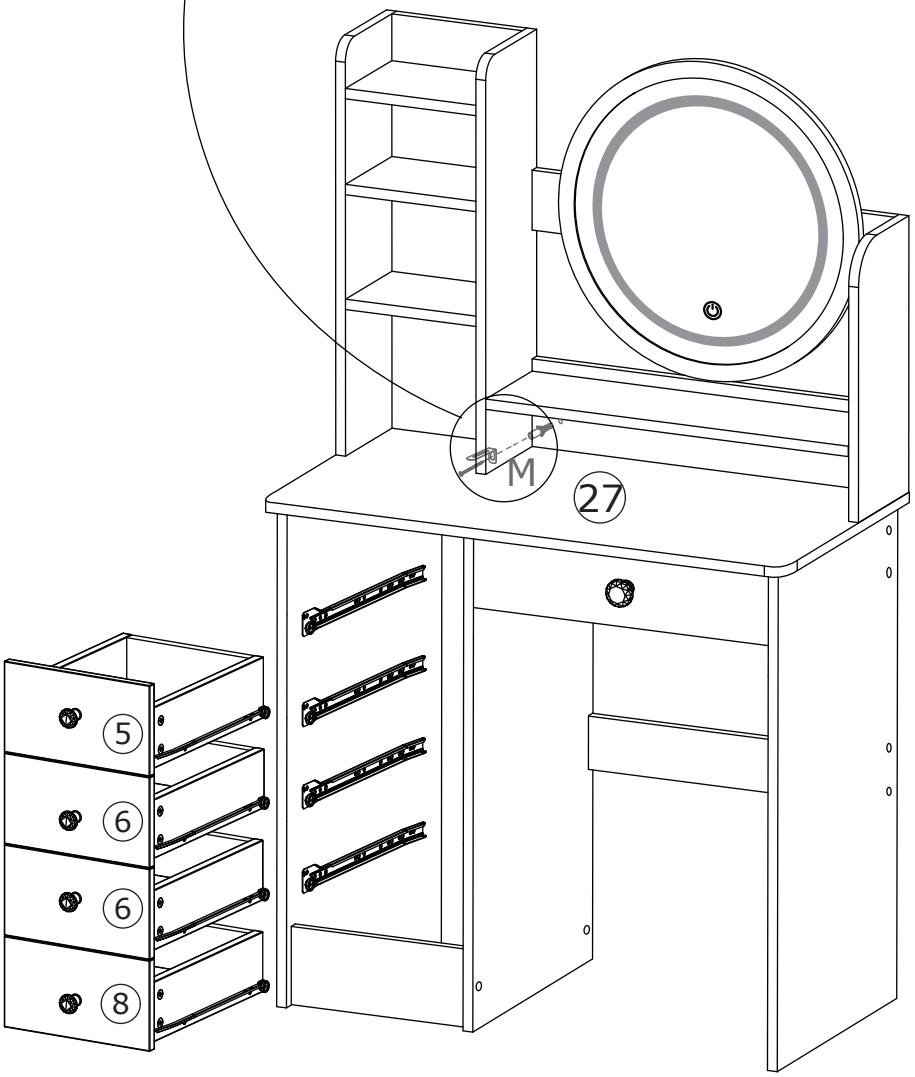


1.

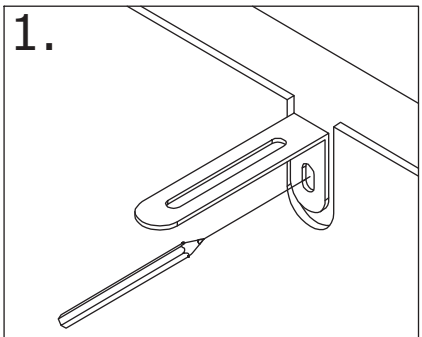


2.

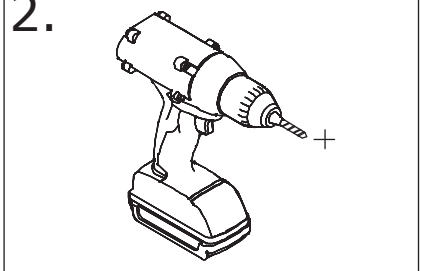

3.

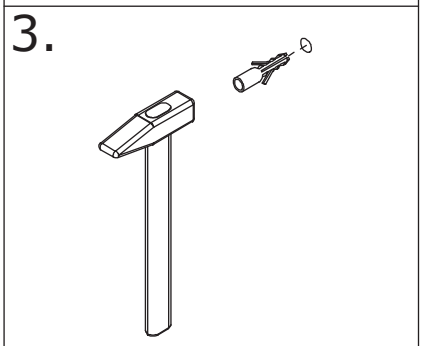


4.

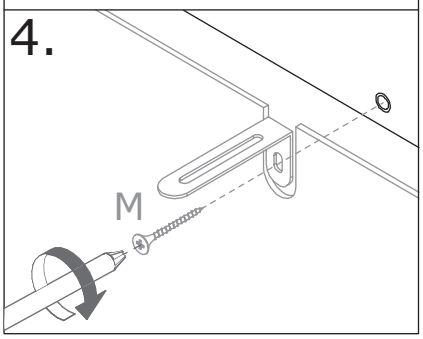


First remove drawers 5, 6 and 8. Secure the combined unit to the wall with the anti-tip device, then fit drawers 5, 6 and 8 back onto the combined unit.


21

C x 8




CRC0540A




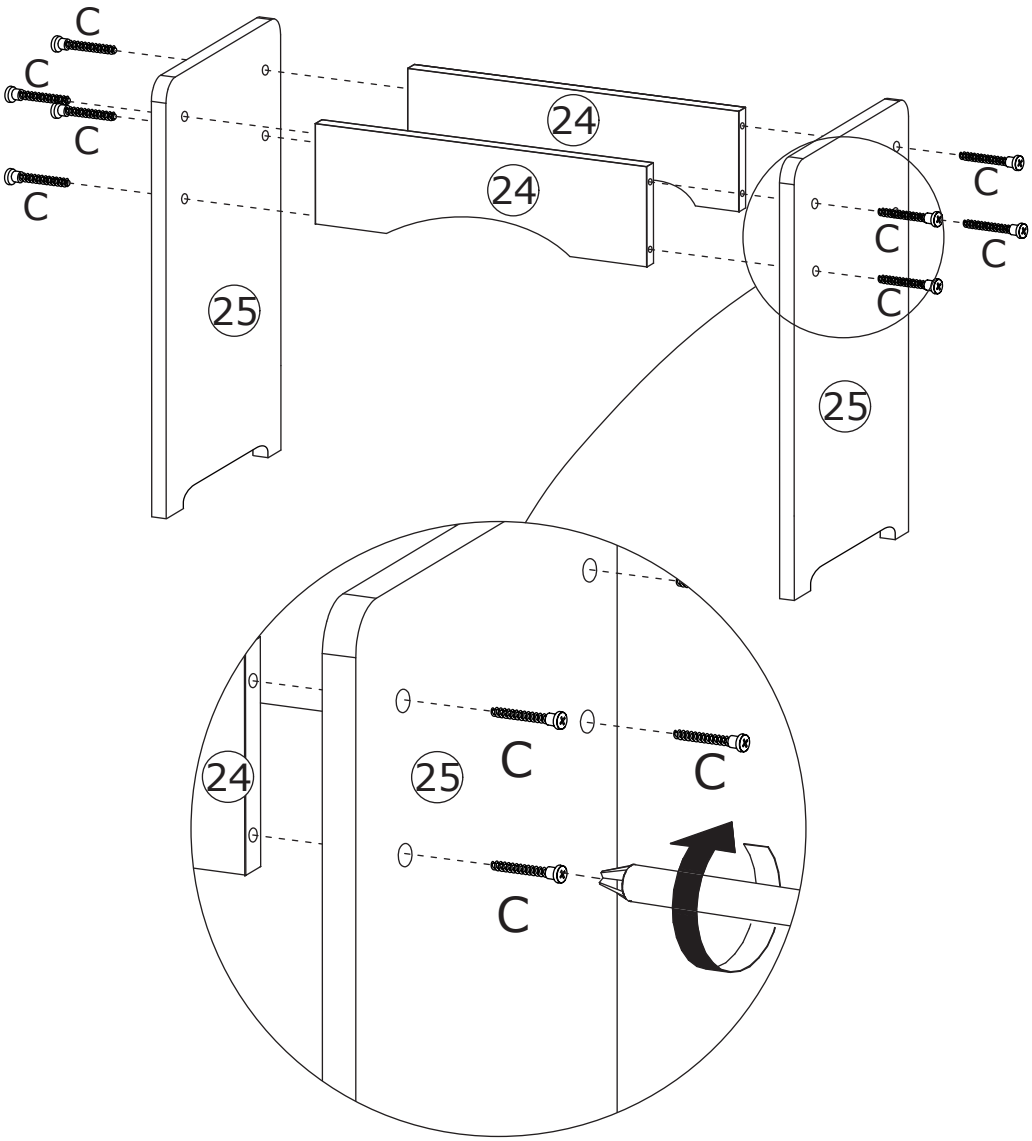

Fix board 25 to board 24 with screw(C) as shown.

22


D x 16	H x 4	G x 4	
 CRD0312A			

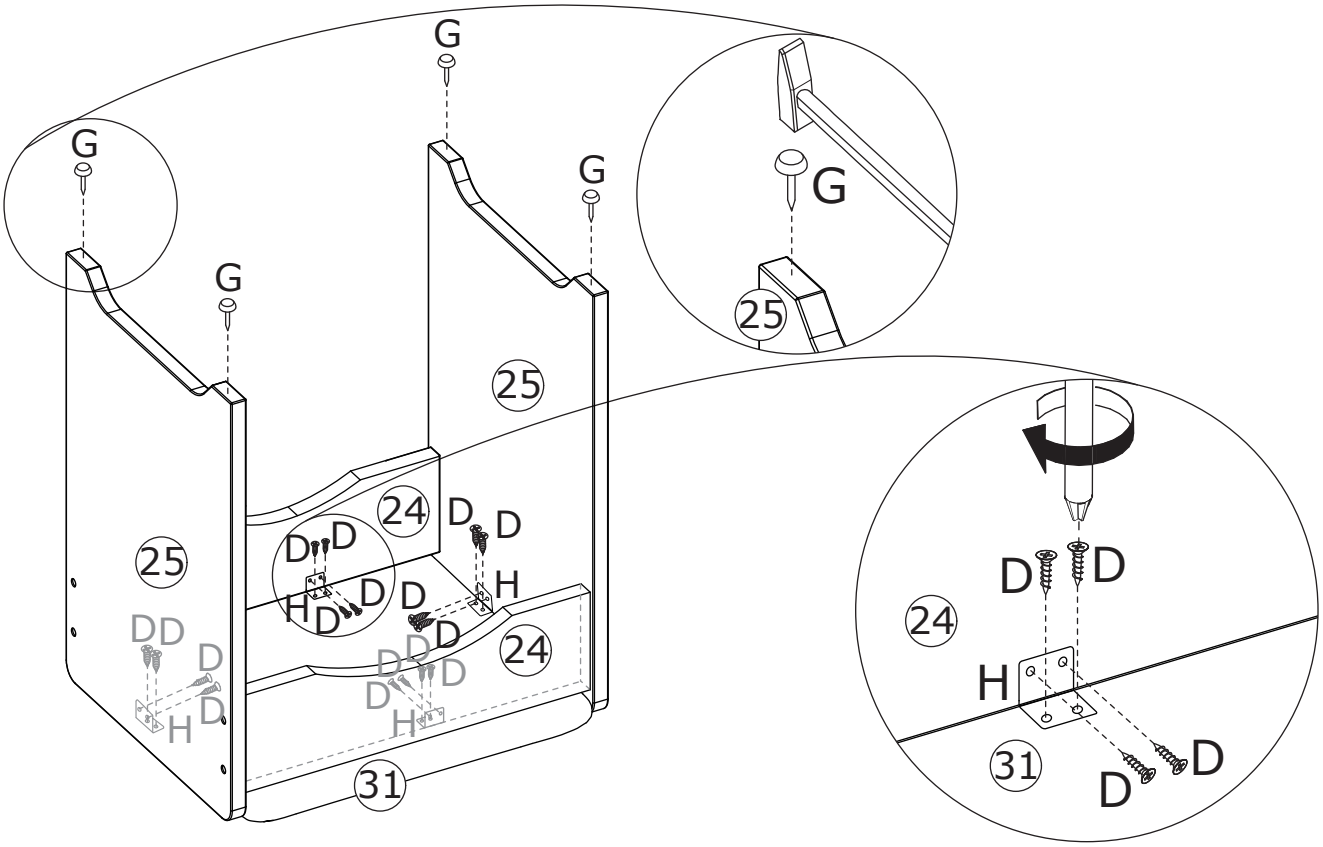


Attach board 31 to stool top and fix corner code(H) to it with screw(D) as shown.Knock peg(G) into the bottom as shown.


23

Power plug x 1





Connect the power cable with light connectors.

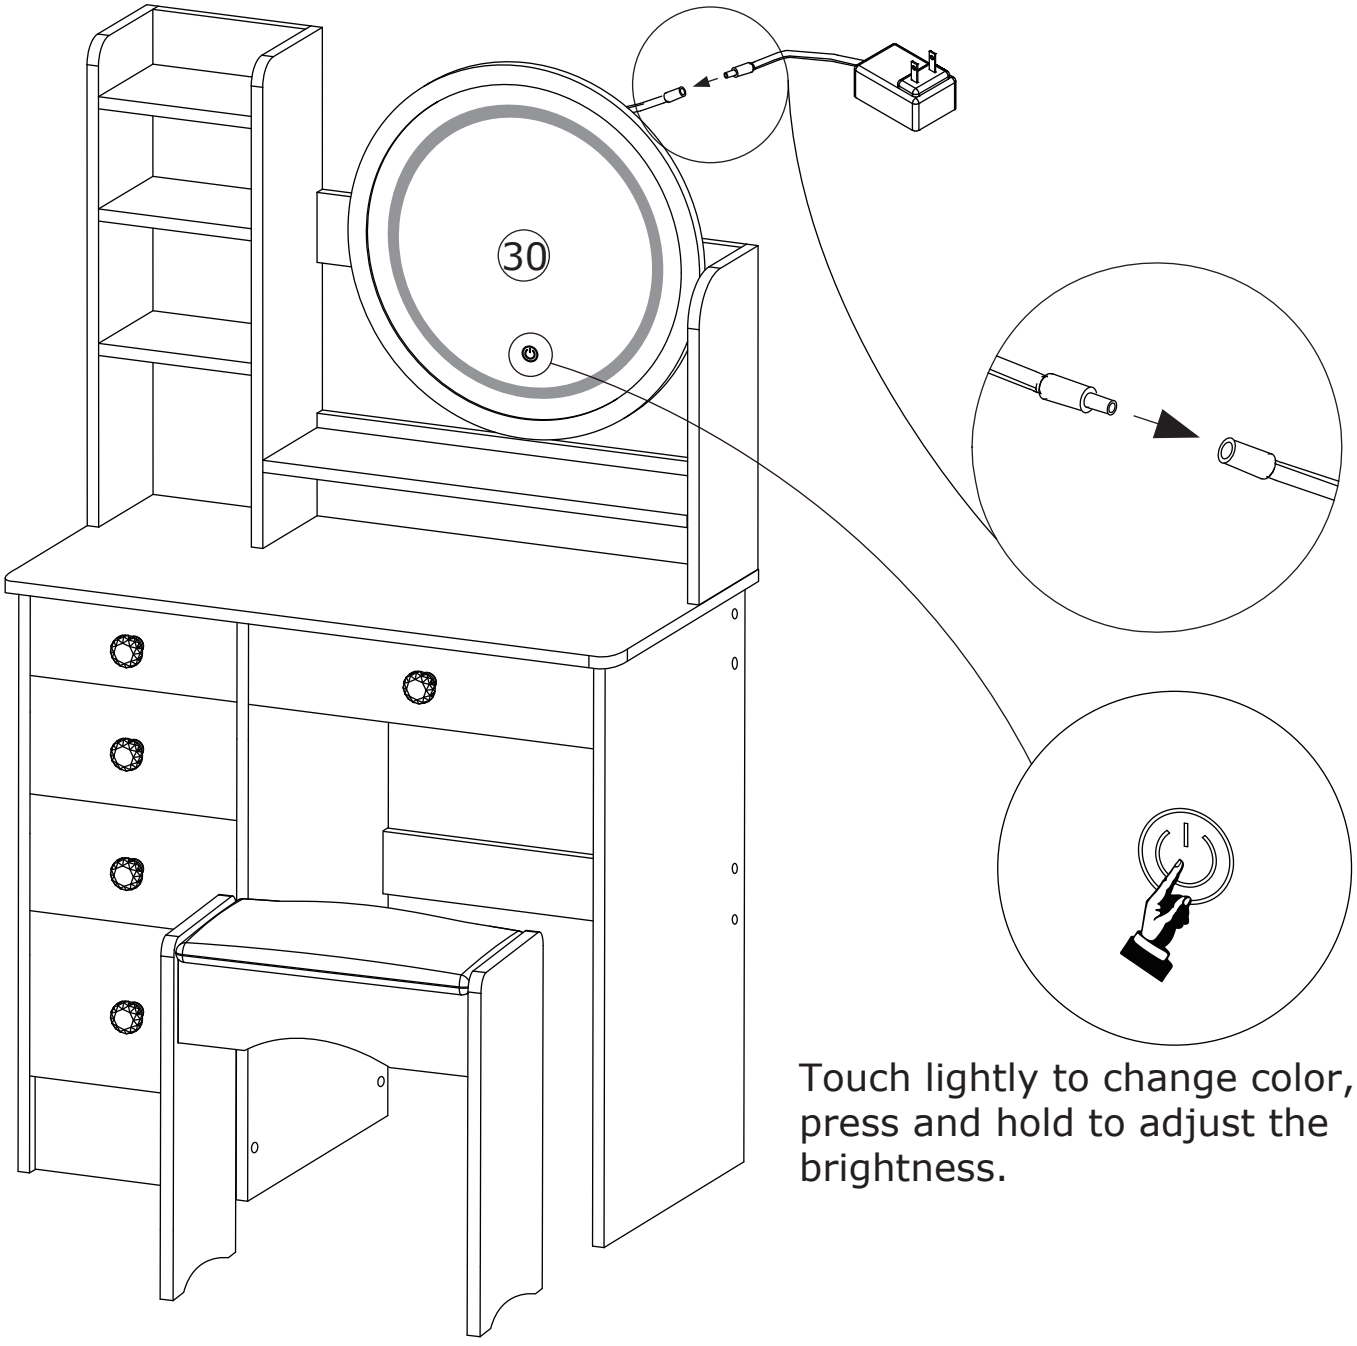

Touch lightly to change color, press and hold to adjust the brightness.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068