Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

	●Not for commercial use. For residential use only.
	●Do not put hot items directly on furniture surface.
	●Do not clean furniture with harsh cleansers or polish.
	●Do not place furniture under direct sunlight.
	●Do not place furniture near heating or cooling vents.
	●Do not write on furniture without a padded barrier to protect the surface.
	●Do not place furniture outside . For indoor use only.
	●Stains may be removed with mild soap solution and damp cloth.
	●Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in Bottom carton for hardware packs and Legs.

Assembly Instructions

Please look in the Bottom Box for Hardware packs and Legs

CABINET

Item No: N758P522967

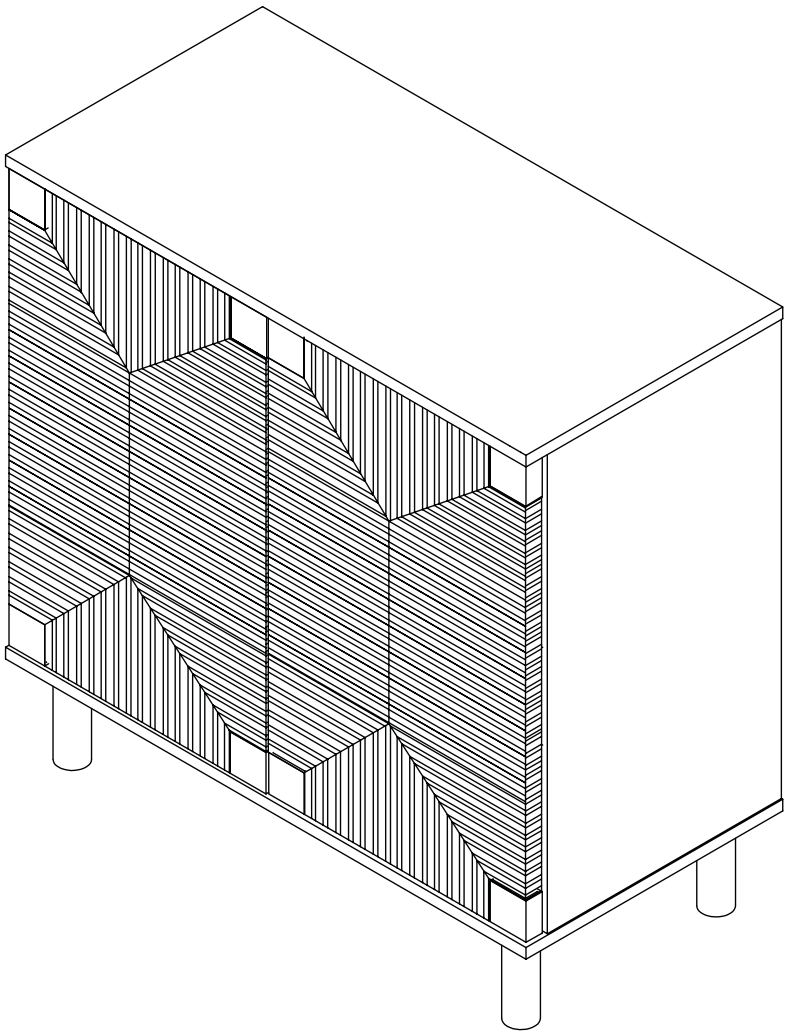












WARNING

CSU






This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Caution: This Cabinet is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Cabinet and to prevent damage to the Cabinet, two adults may be needed to execute these actions.

Parts List

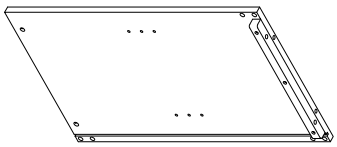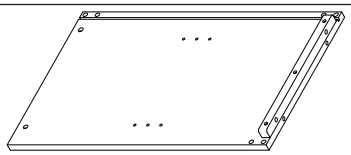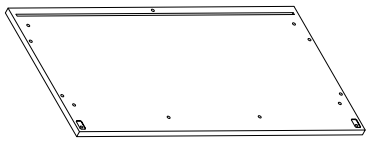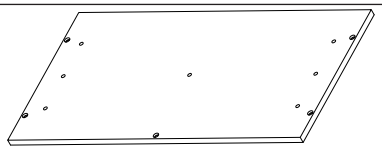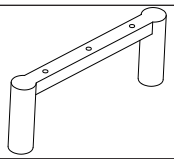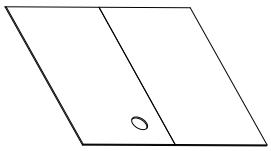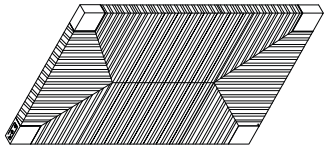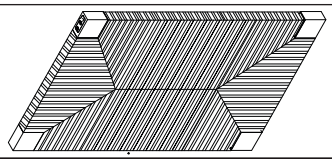
Label	Picture	Description	QTY
A		Left Side Panel	1
B		Right Side Panel	1
C		Top Panel	1
D		Bottom Panel	1
E		Upper Back Stretcher	1
F		Lower Back Stretcher	1
G		Upper Front Stretcher	1
H		Legs	2
I		Center Leg	1
J		Back Panel	1
K		Shelf Panel	1
L		Right Door	1
M		Left Door	1


Hardware

Label	Picture	Description	QTY
1		Magnetic Push Latch	2
2		8*30mm Wooden Dowel	9
3		Cam Bolt ∅6*28	10
4		Cam Lock ∅15*12	10
5		Long Bolt ¼*38mm	14
6		Short Bolt ¼*25mm	5
7		M3*15mm Screw	13
8		Flat Washer ∅12/6*1.5	18
9		Spring Washer ∅12/6*2	18
10		Plastic Washer ∅16/6*4	5
11		T Nuts ∅10 x 10	6
12		Shelf Support Tab	5
13		Allen Wrench K4 x 90	2
14		Plastic Back Panel Clip	5
15		Antitip Kit (sets)	2
15.1		Plastic Anchor	2
15.2		Metal Bracket	4
15.3		M4*40mm Screw	2
15.4		M3.5*15mm Screw	2
15.5		Steel wire	2

Assembly Preparation

Before Beginning Assembly:

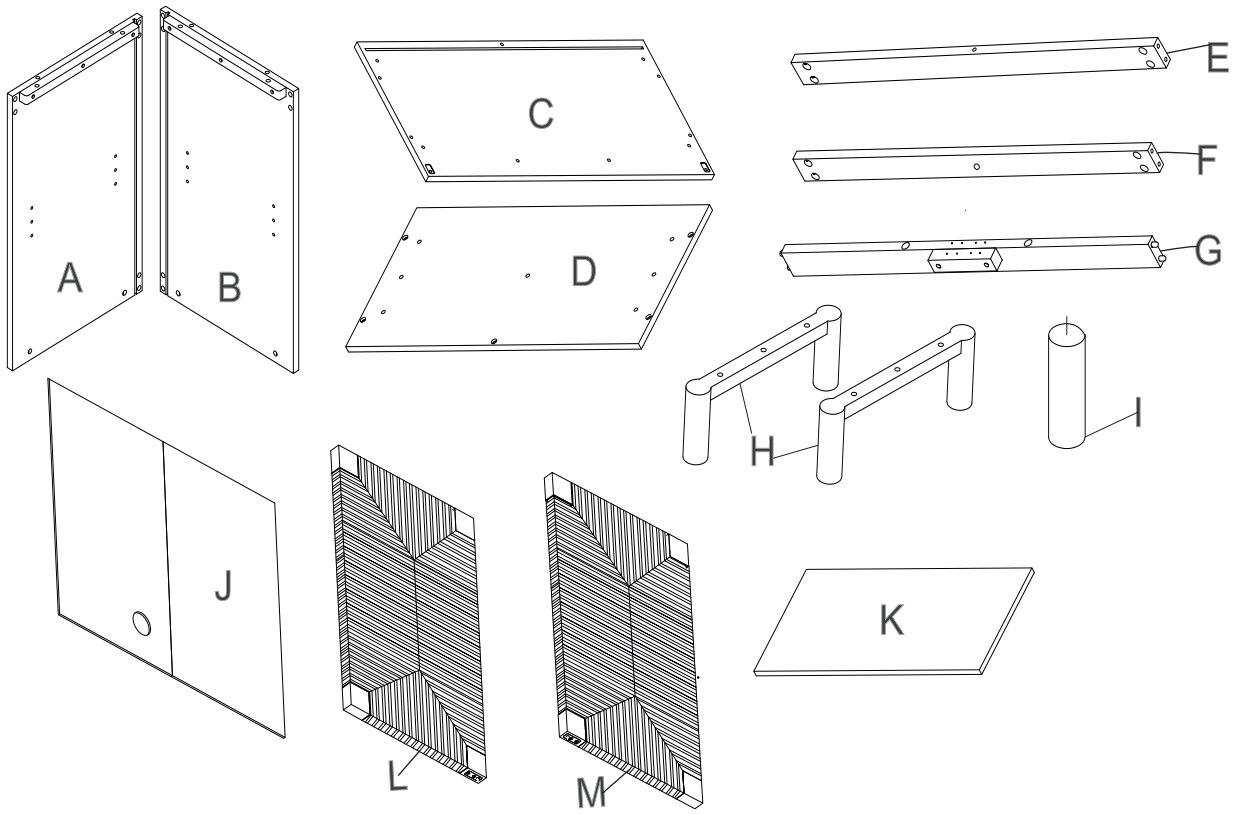


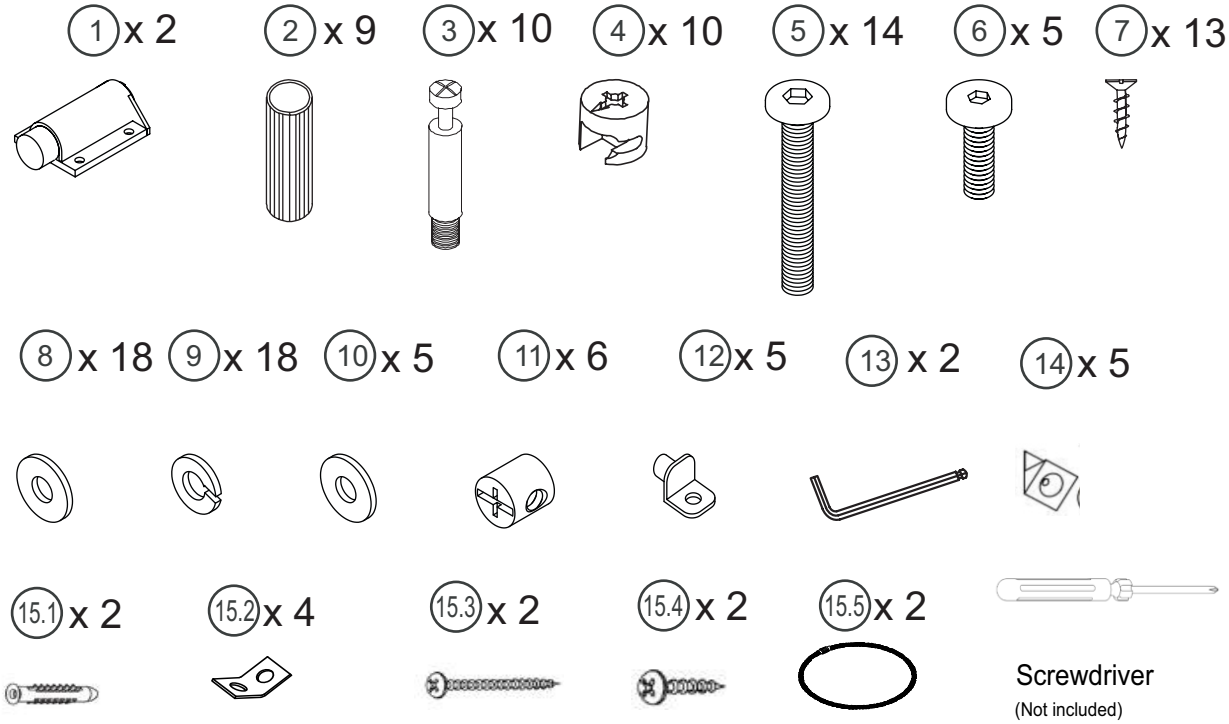


- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview

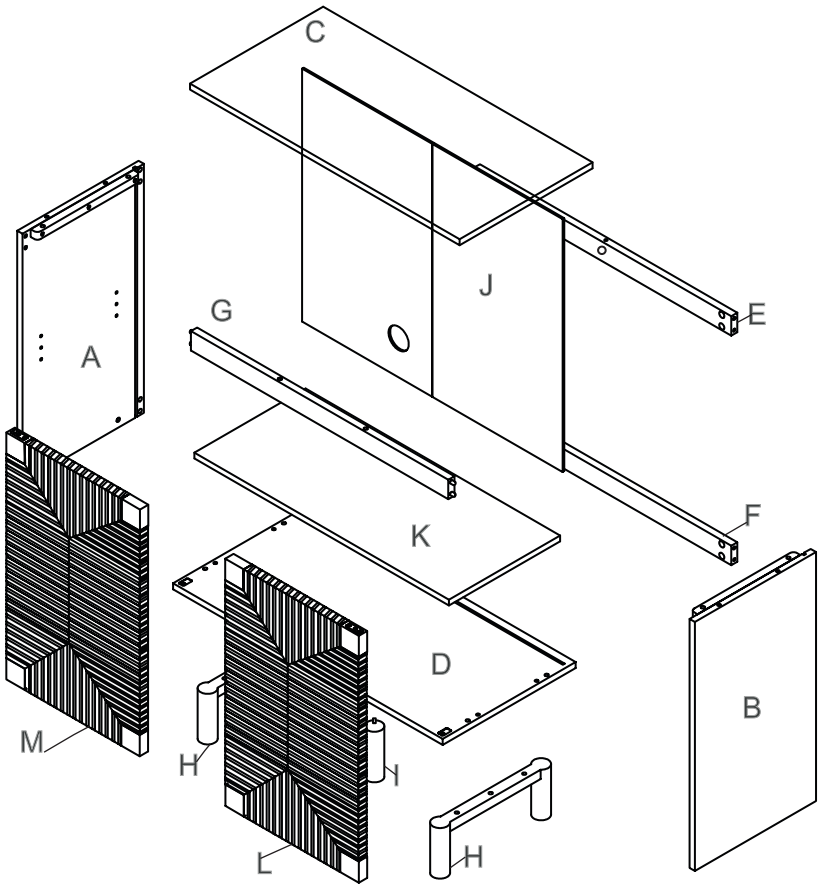

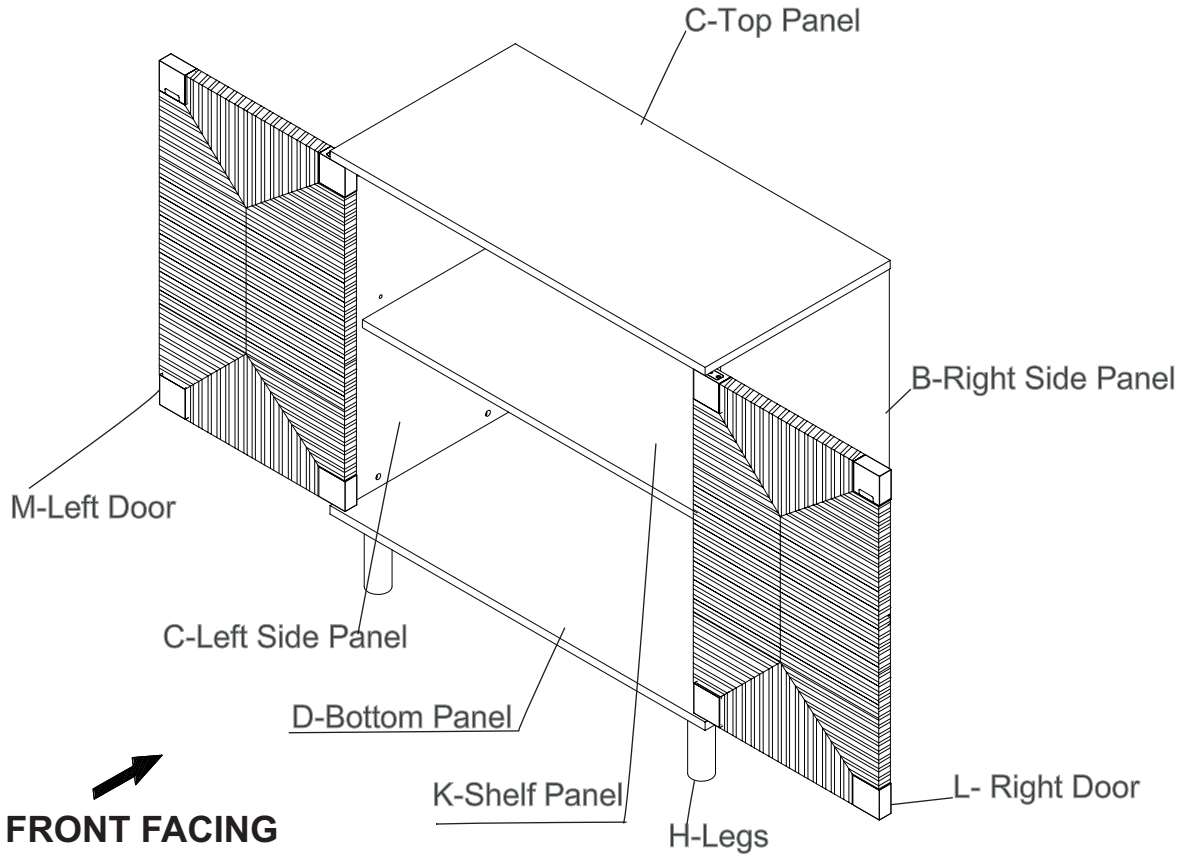

This Cabinet has multiple parts and may require up to some 60 minutes to assemble. To give you an overview of the Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


How to use cam locks

Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.


First, your cam bolt (or cam pin) will need to be properly inserted into the flat side of the board.

Important Note: Only tighten the cam bolt until it is secure. Do not over-tighten.

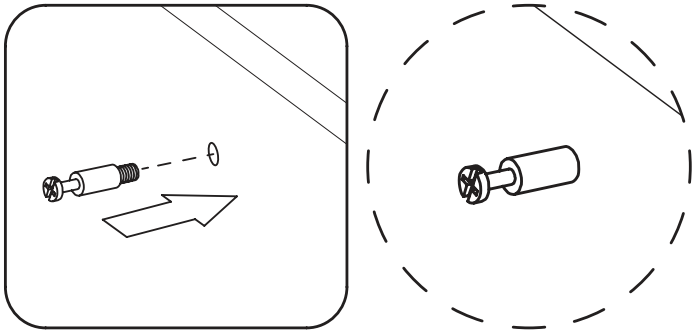


Next, you will fit the proper hole on the edge of the associated joining panel over the cam bolt.

Important Note: When installed properly, the head of the cam bolt will be visible through the larger hole on the side of the joining panel.

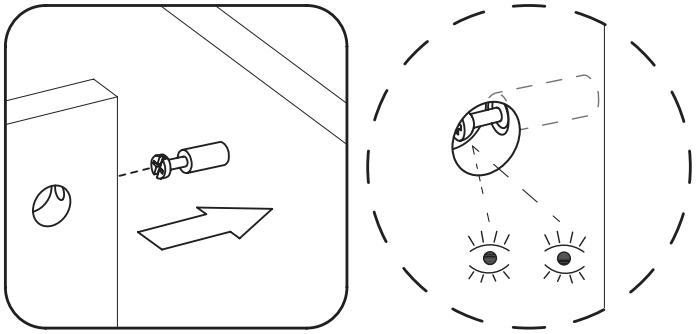


Next, you will notice the cam lock has a “C” shaped back. Commonly, an arrow on the front of the cam lock points in the same direction as the open section on back.

Using these as your cue, insert the cam lock into the large hole so the opening of the “C” fits over the head of the cam bolt.

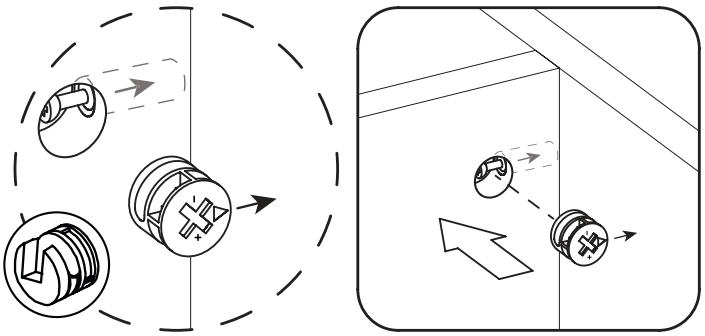

Using a screwdriver, you will turn the cam lock until it stops, usually at 90º or 180º. You will feel the panels pulling closer until they are secured.

Important Note: Only turn the cam lock until the panels are fully engaged & feel secure. Turning too far may lead to hardware failure.

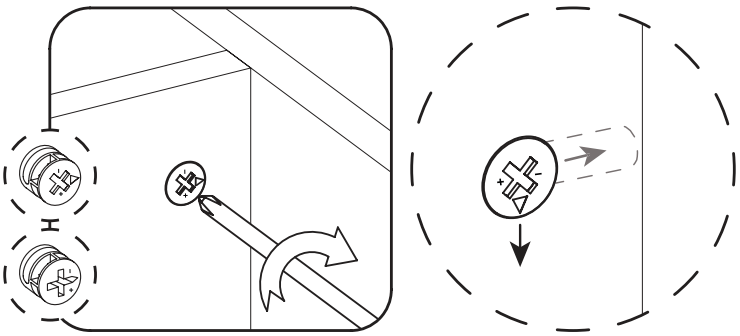


Still having issues?

If a cam lock seems to be spinning in place or is not “catching” or pulling the panels together as expected first remove the cam lock & try again while making sure that everything is properly positioned & oriented.

If you are still having issues getting things working as expected, first remove the cam lock then unscrew the cam bolt slightly (less than 1 complete turn) to see if that helps with the alignment of the cam lock & bolt.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522967


Step 1

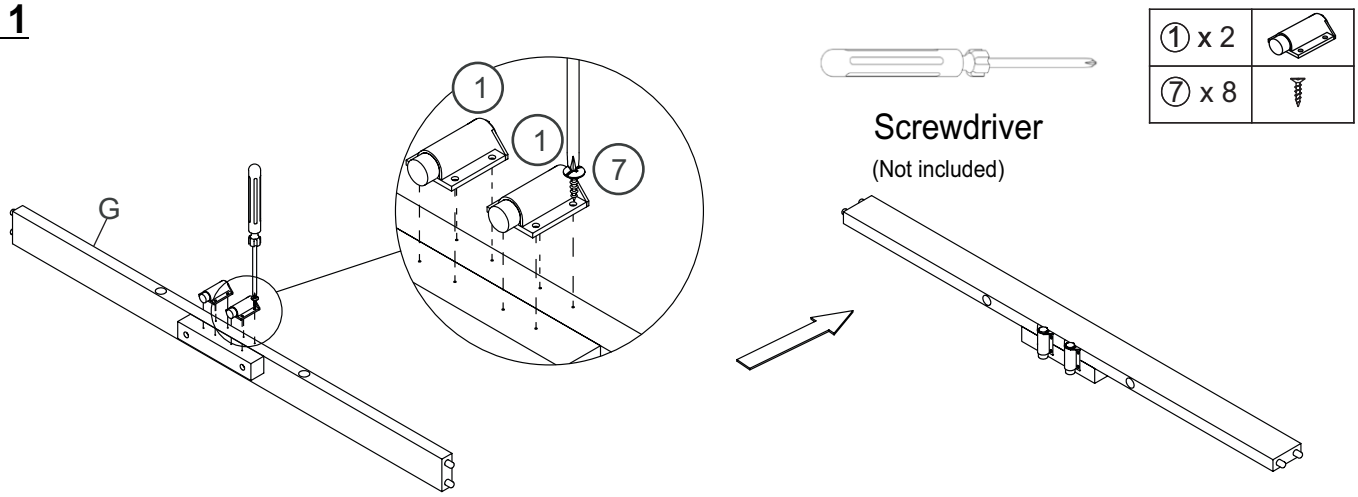

Place all Parts on a clean, non -marring surface.

Attach the Magnetic Push Latch① to the Upper Front Stretcher G. Using the Screw ⑦ M3 x 15 + Screwdriver (Not included) to tighten.

Step 2

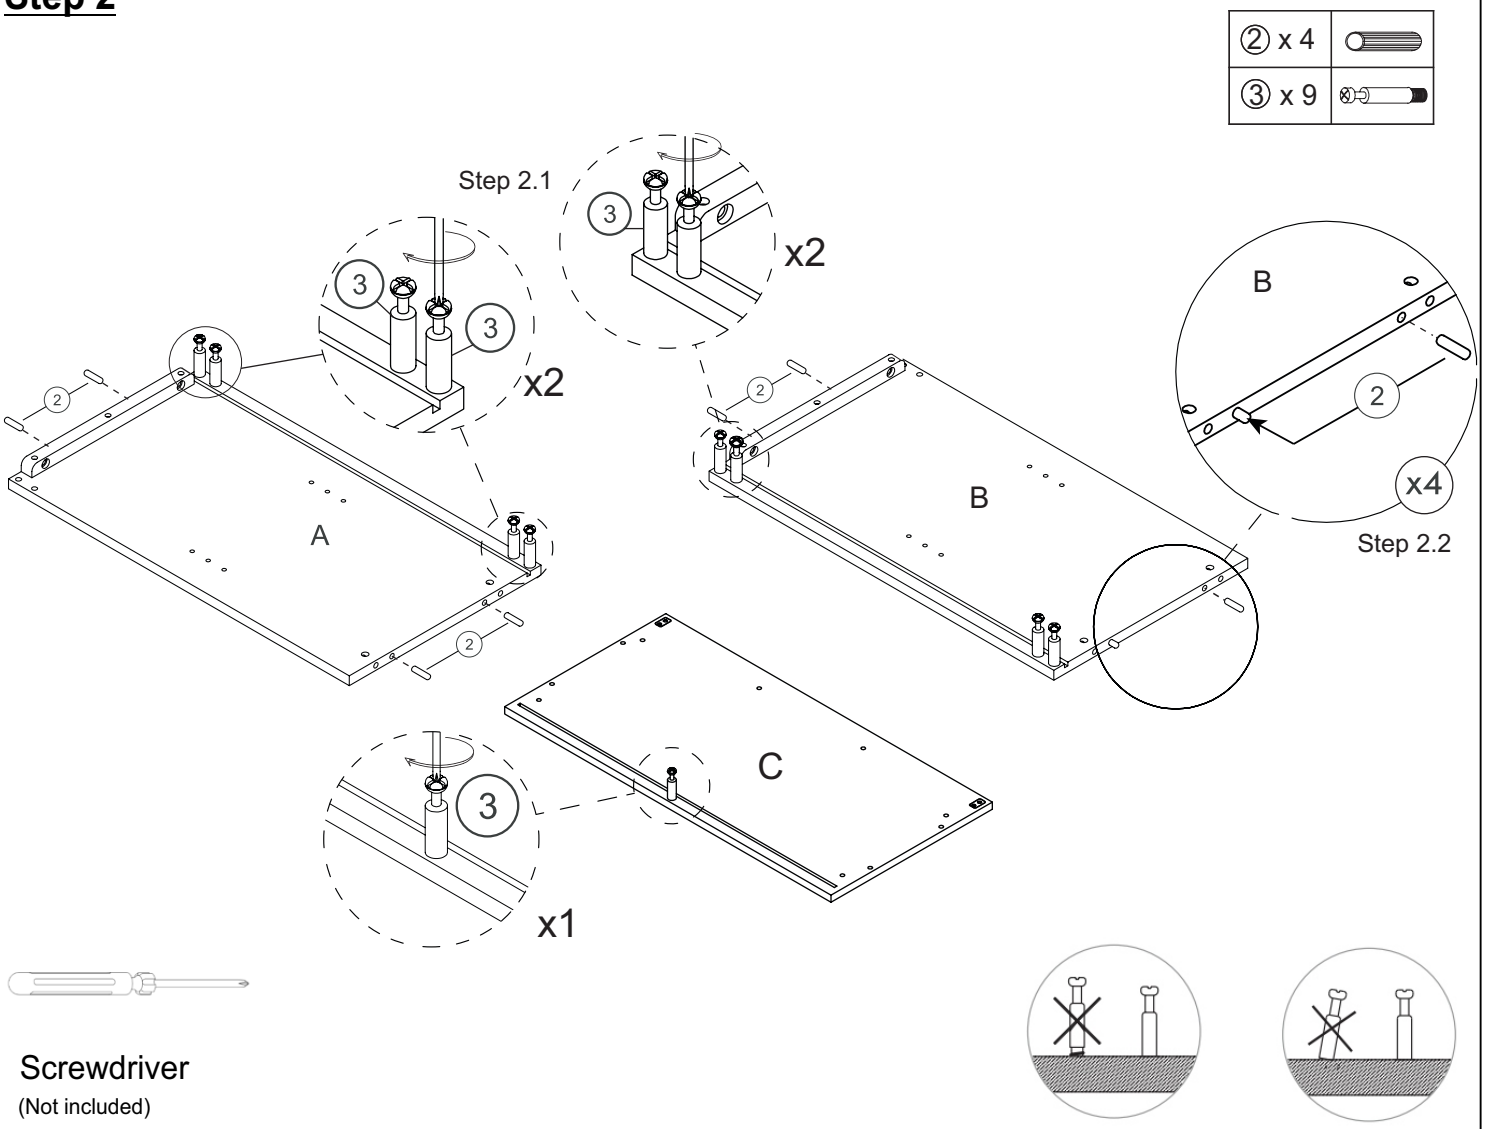


2.1: Tighten Cam Bolts ③ into the Top Panel C, Left side Panel A and Right Side Panel B with the Screwdriver (Not included).

2.2: Insert the Wooden Dowel ② in the Left side Panel A and Right side Panel B.


ASSEMBLY INSTRUCTION
ITEM NO. N758P522967

Step 3

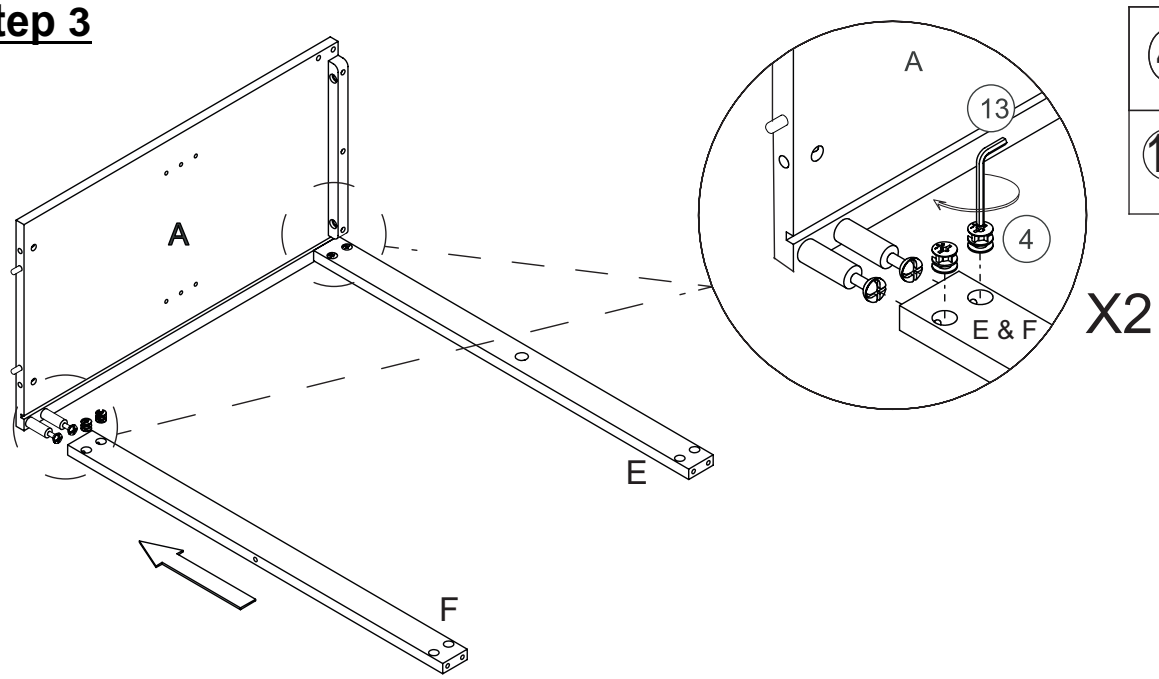

Attach the Left Side Panel A to the Upper Back Stretcher E and Lower Back Stretcher F. Align the holes with the Cam Bolts you inserted in Step 2, then Using the Cam Lock④+ Allen Wrench ⑬to tighten 100%

Step 4

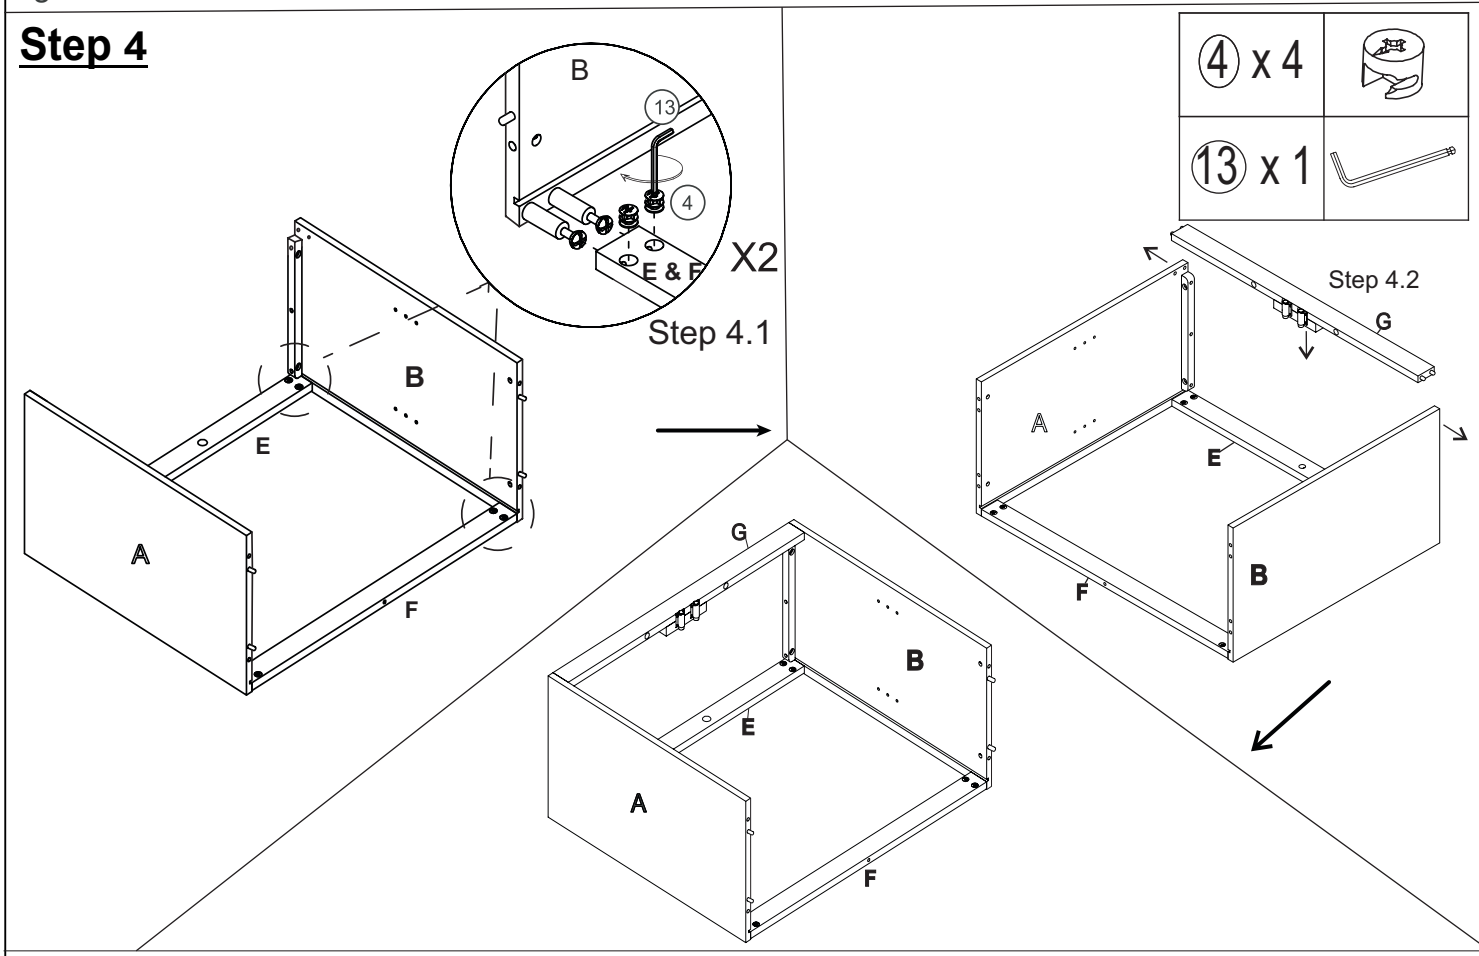


4.1: Attach the Right Side Panel B to the Upper Back Stretcher E and Lower Back Stretcher F by aligning the mounting positions with Cam Bolts you assembled in Step 2 and Using the Cam Lock④ with Allen Wrench ⑬to tighten.


4.2: Attach the Front Stretcher G to Left Side Panel A&Right Side Panel B by aligning the mounting position on parts as shown above.


ASSEMBLY INSTRUCTION
ITEM NO. N758P522967


Step 5

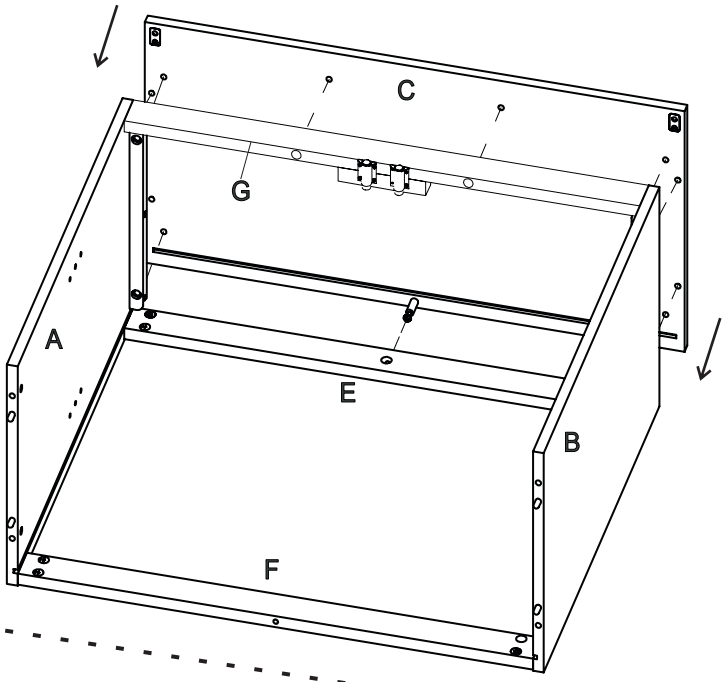


④ x 1	
⑤ x 2	
⑥ x 4	
⑧ x 6	
⑨ x 6	
⑬ x 1	

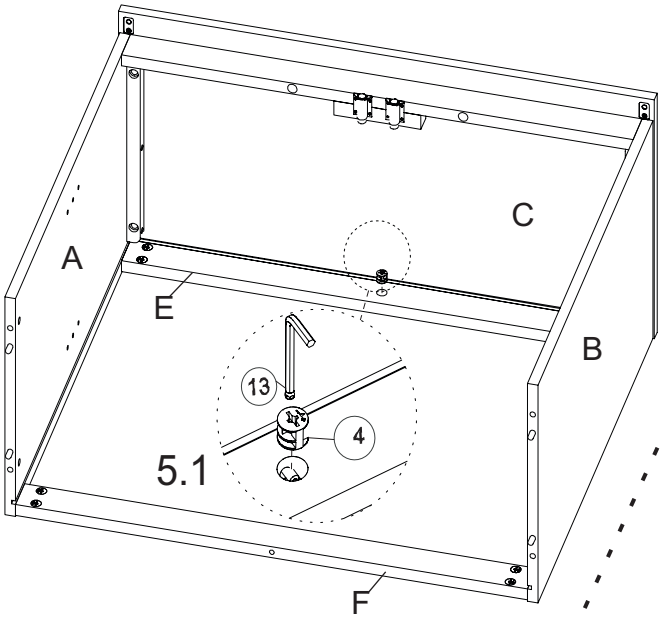

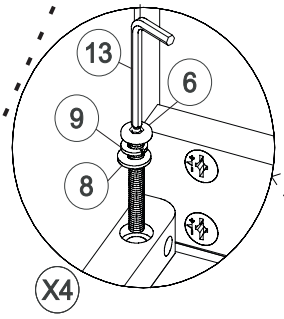

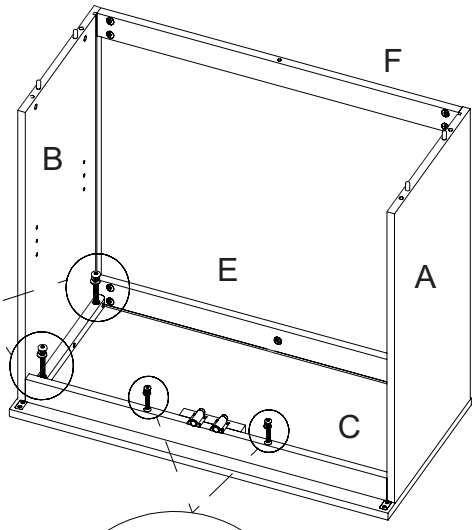

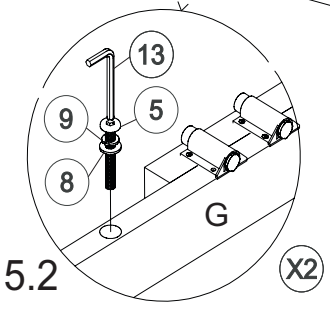

Attach the Top Panel C to the Cabinet. Align the holes with the Wooden Dowel assembled in Step 2,

5.1 - Using the Cam Lock ④+ Allen Wrench ⑬ to assembled the Top C and Upper Back Stretcher E


5.2 - Using the Long Bolts ⑤+ Spring Washer ⑨ + Flat Washer ⑧+ Allen Wrench ⑬ to assembled the Top C and Front Stretcher G

5.3 - Using the Short Bolts ⑥+ Spring Washer ⑨+ Flat Washer ⑧+ Allen Wrench ⑬ to assembled the Top C and Left Side Panel A and Right Side Panel B

Fully tighten the Bolts at this time.


ASSEMBLY INSTRUCTION
ITEM NO. N758P522967

Step 6

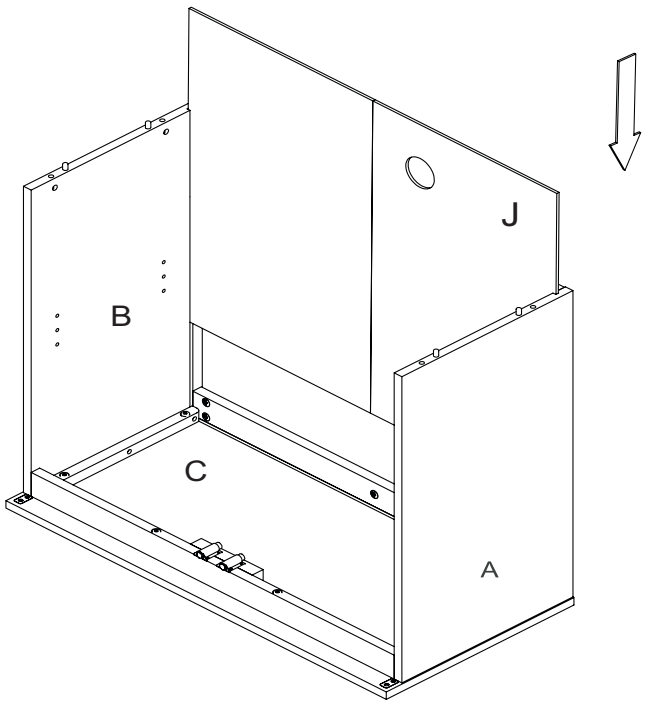

Attach the Back Panel J in Cabinet. Ensure the Back panel J slides into the grooves of both side panels A & B and is fully seated in the groove of the Top panel C.

Step 7

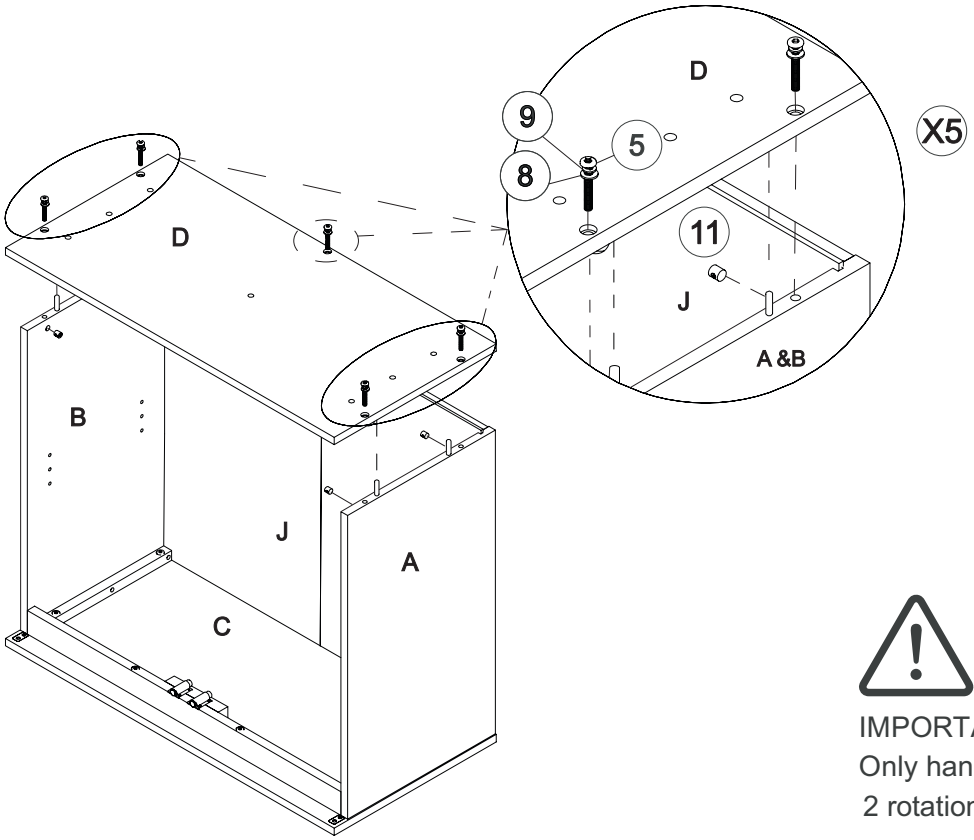

⑤ x 5	
⑧ x 5	
⑨ x 5	
⑪ x 5	
⑬ x 1	

IMPORTANT REMINDER:
Only hand-tighten these bolts 2 rotations at this stage.


Attach the Bottom Panel D in Side Panels A&B by Align the wooden Dowel②on Both side Panel A&B with mounting position on Bottom Panel D. Ensure the Back Panel E is under the Bottom Panel D.

Insert the T Nuts ⑪ into the Both Side Panels A&B and Lower Back Stretcher F, Then fix the Bottom Panel D using the Long Bolts⑤+ Spring Washer⑨+ Flat Washer⑧with Allen Wrench ⑬ as shown above.

Don't fully tighten the bolt fully.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522967

Step 8

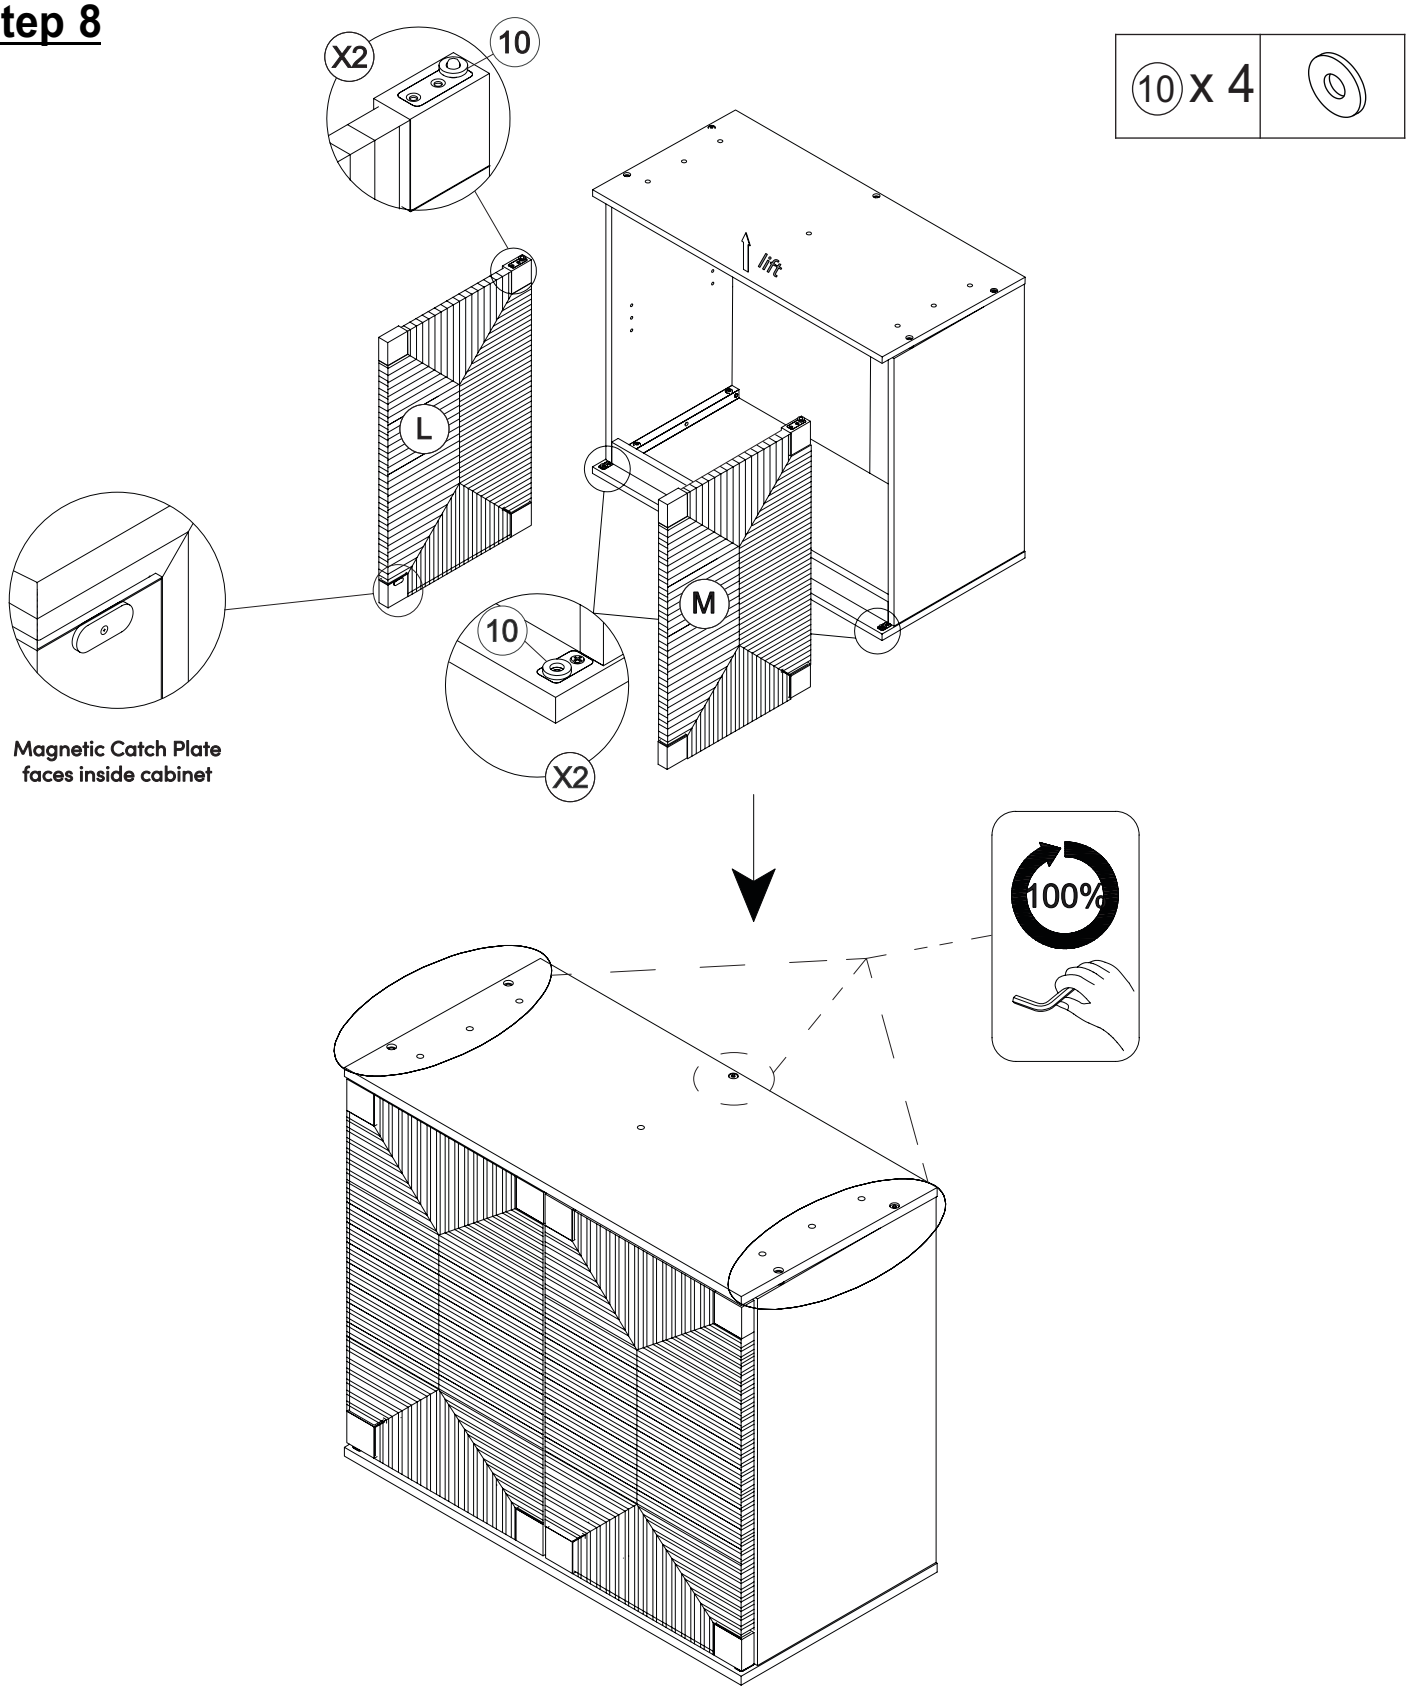


⑩ x 4	

Attach the Right Door L and Left Door M to the Cabinet. Insert a Plastic Washer ⑩ onto the Doors latches before assembling. Slightly lift the Bottom Panel D to allow the Doors latch to slide into the hole on the Top Panel C and Bottom Panel D. Then release and tighten Bolts of the Bottom Panel D to 100% using the Allen Wrench ⑬ as shown above.

Fully tighten the Bolts at this time.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522967


Step 9

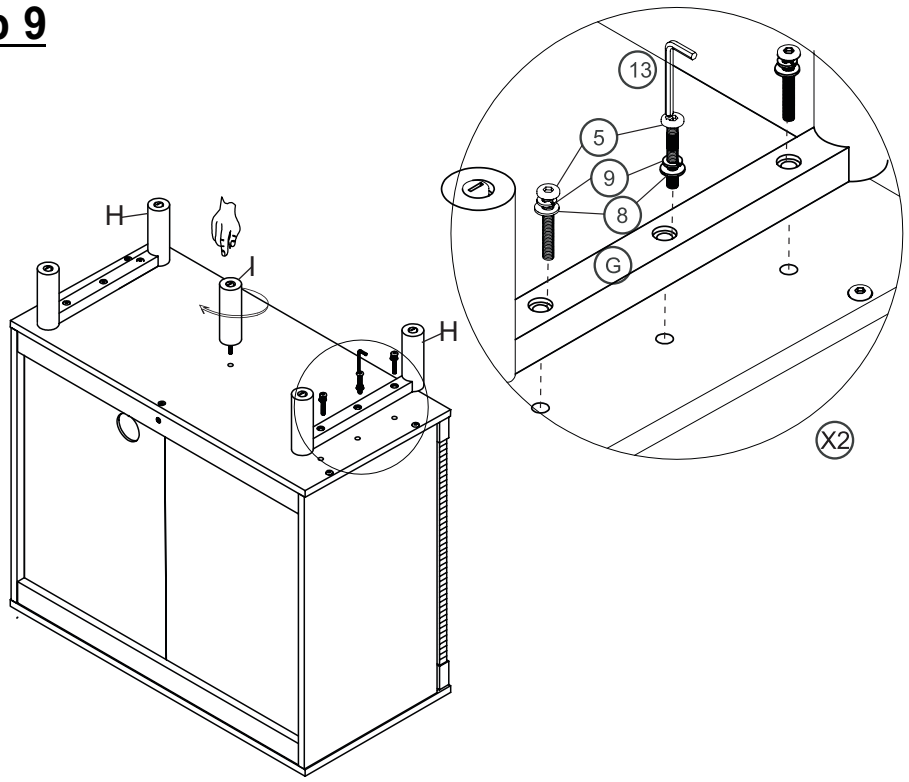

⑤ x 6	
⑧ x 6	
⑨ x 6	
⑬ x 1	

Attach the Legs H and Center Leg I to the Bottom Panel D by using the Long Bolts ⑤ + Spring Washer ⑨ + Flat Washer ⑧ with Allen Wrench ⑬ as shown above.

Step 10

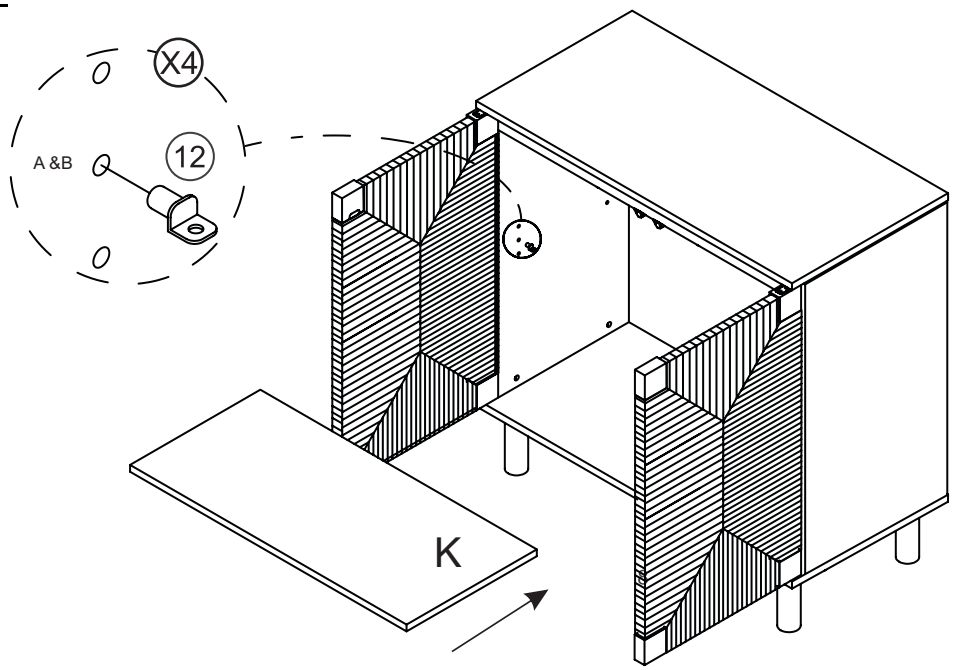

⑫ x 4	


Turn the Cabinet on its right side up with assistant from a second adult. Insert the Shelf Support Tabs ⑫ onto the Both Side Panel A & B .Then slide the Shelf Panel K into the Cabinet.

Shelf Panel K can be adjusted up or down by changing the position of the Shelf Support Tabs ⑫

When adjusting the shelf height, make sure all 4 Shelf Support Tabs ⑫ are installed at the same level.

ASSEMBLY INSTRUCTION
ITEM NO. N758P522967

Step 11

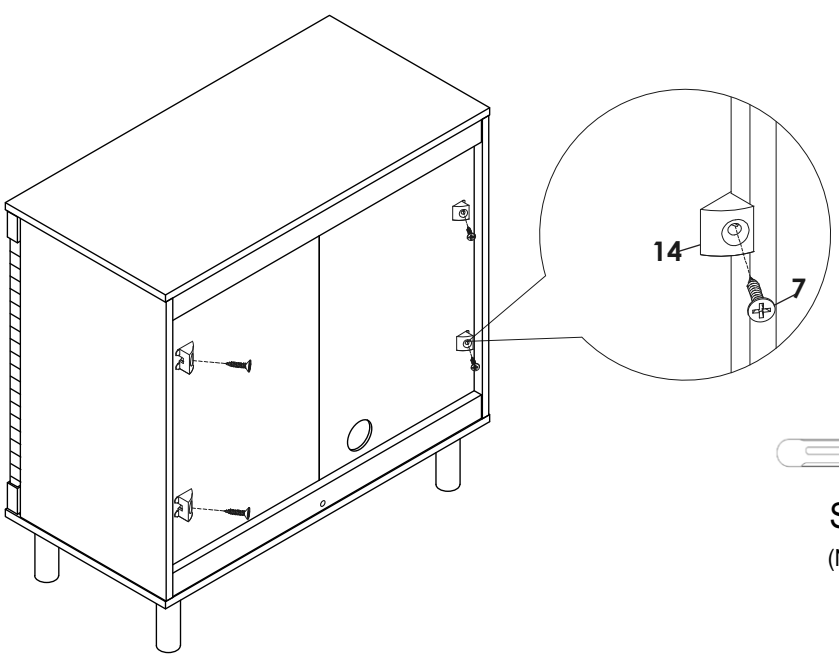


⑦ x 4	
⑭ x 4	



Screwdriver
(Not included)

Attach the Back panel clips ⑭ to Back panel E by using the screws ⑦ with screwdriver (not provided) to secure the back panel J and improve the cabinet stability.

Step 12

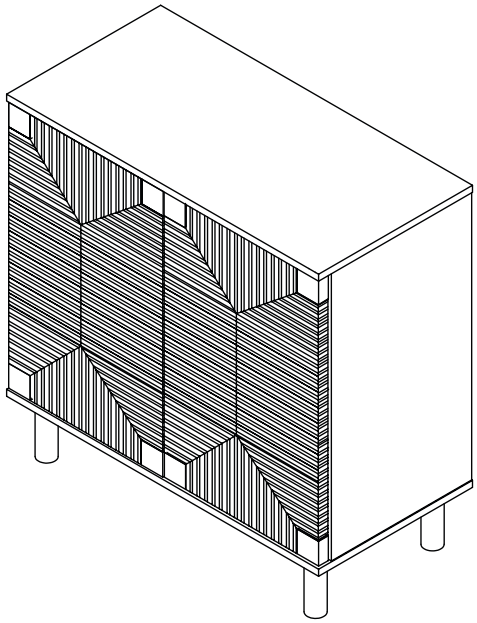

Place the Cabinet on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Don't push too hard, shake on the Cabinet.
This would help to align all the parts at all the joint areas.
CAUTION: When tightening these screws, tighten sequentially.
DO NOT tighten any screws/bolts fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.

WARNING!! IF CABINET IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

Your Cabinet is ready for use.

This Cabinet can only be used on the flat, level surface.


ASSEMBLY INSTRUCTION
ITEM NO. N758P522967

Step 13


15: ANTI-PARKING KIT


15.1	15.2	15.3	15.4	15.5
2 pcs	4 pcs	M4x40mm 2 pcs	M4x15mm 2 pcs	2 pcs

Screwdriver
(Not included)

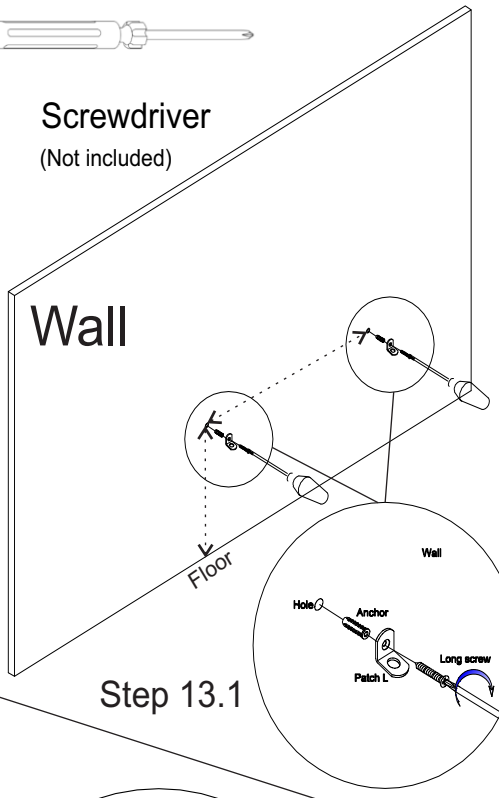


Step 13.1

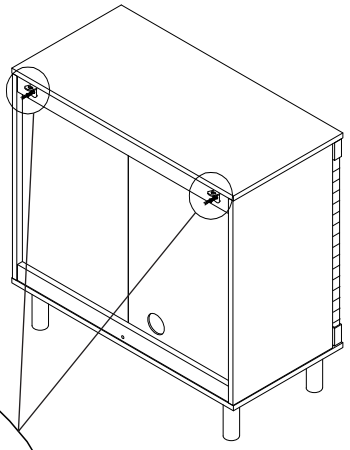

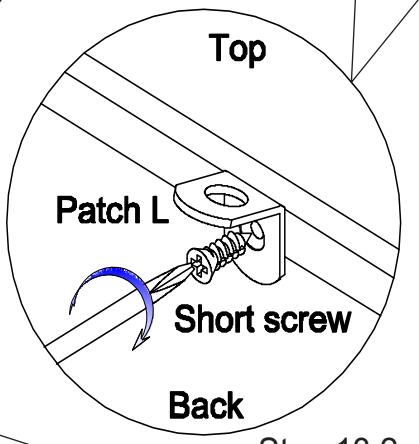

Step 13.2

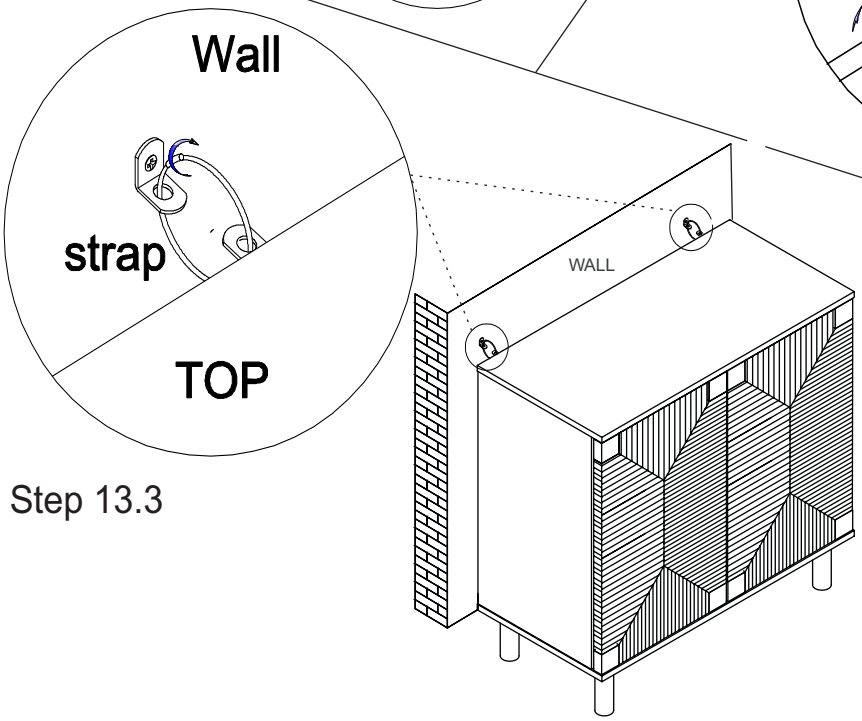

Step 13.3

13 .1: Find the location of the screw holes on the wall. Move the Cabinet back to the wall.
Mark one points the same height as the Cabinet on the wall.

NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to lacate the Wall Frame. Insert the Plastic Anchors (15.1) into the wall and attach Metal Brackets (15.2) to Plastic Anchors (15.1) using long screw (15.3) with Screwdriver.

13.2: Attach the Metal Brackets (15.2) to the Cabinet using the short screw (15.4) with Screwdriver.


13.3: Thread the Strap (15.5) through the 2pcs Metal Brackets (15.2) to secure the Cabinet to the wall.

CAUTION: Restraint Strap (15.5) between the product and Metal Brackets (15.2) on the wall should be \within 3.5")

Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

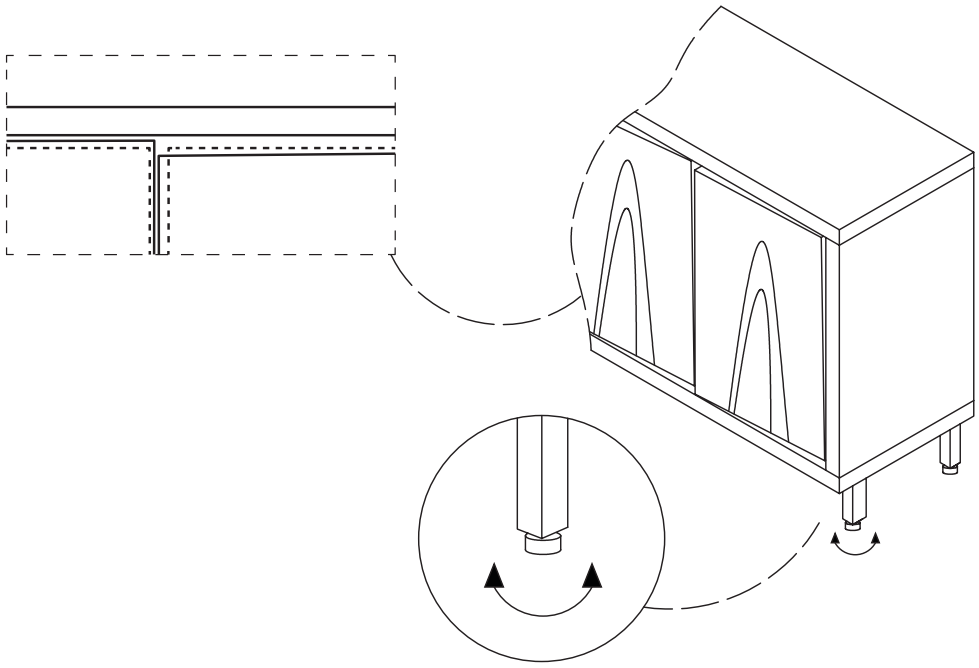

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

