

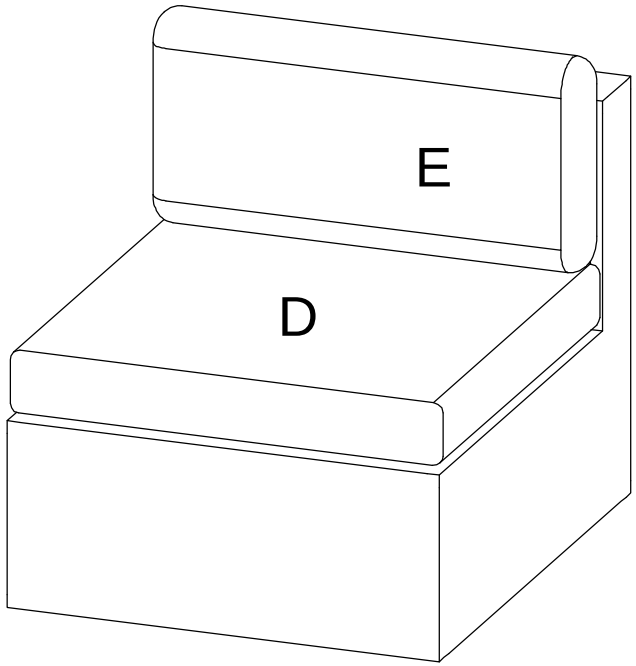


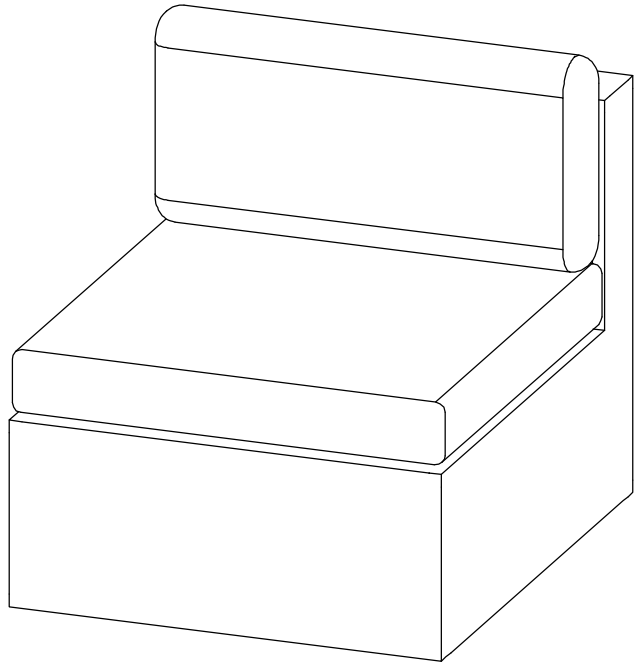


ASSEMBLY INSTRUCTIONS

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A:1PC



B:1PC




C:2PCS



D:1PC



E:1PC





F:10PCS





G:1PC

Do not fully tighten bolts until assembly is complete.

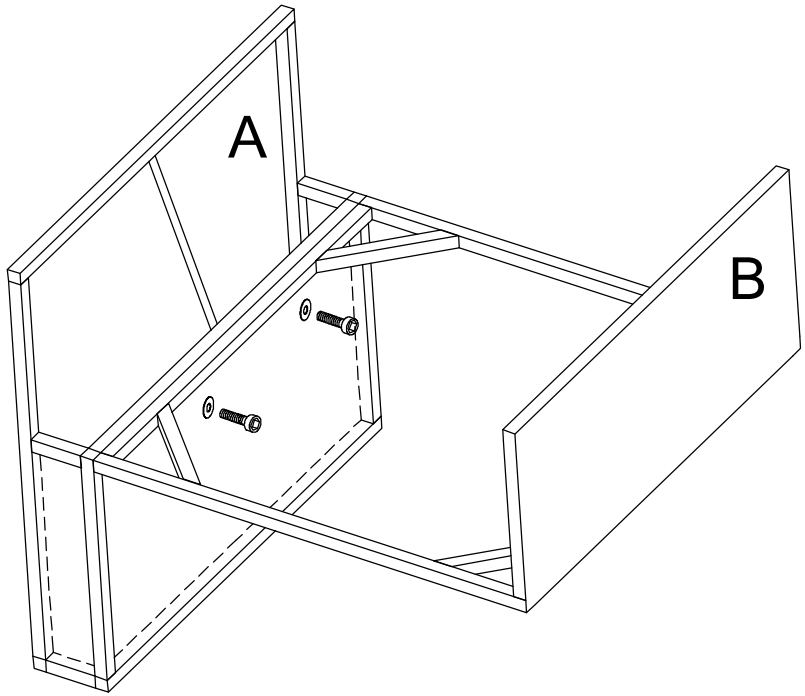

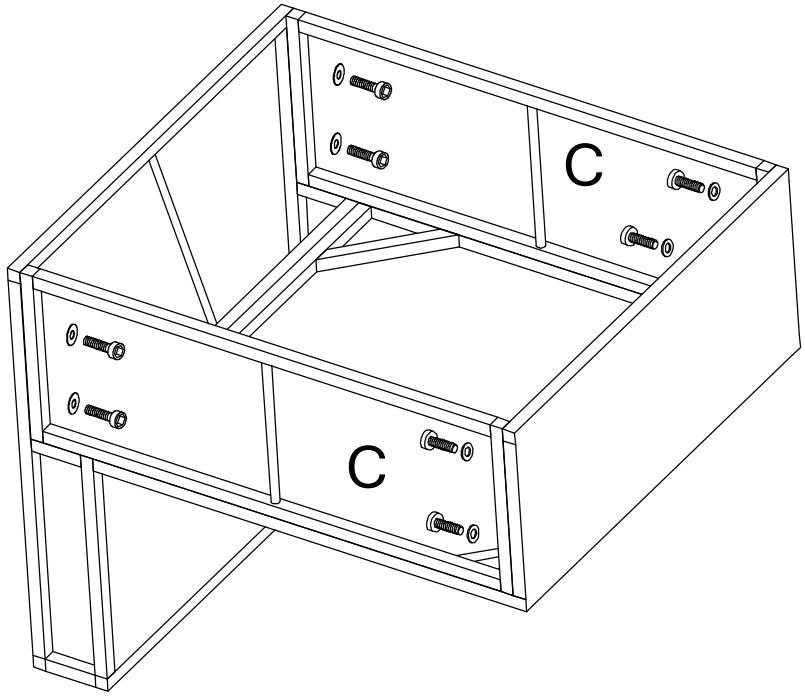

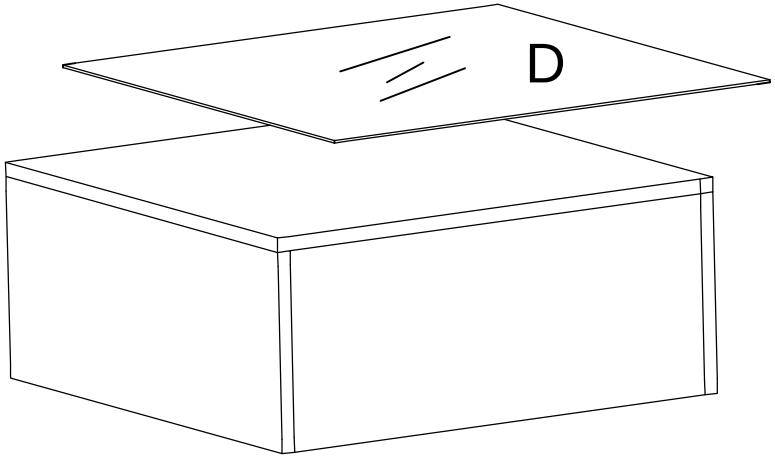


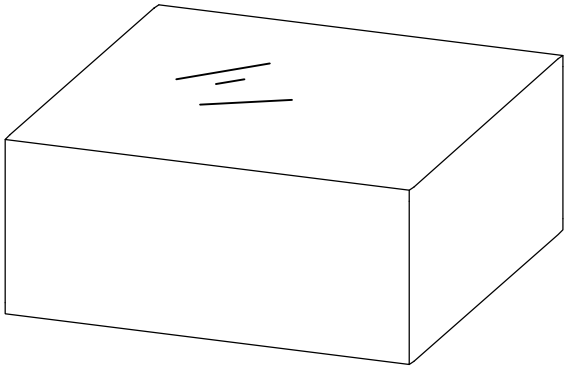


ASSEMBLY INSTRUCTIONS

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.



A:1PC




B:1PC



C:1PC



D:1PC





E:10PCS





F:1PC


Do not fully tighten bolts until assembly is complete.

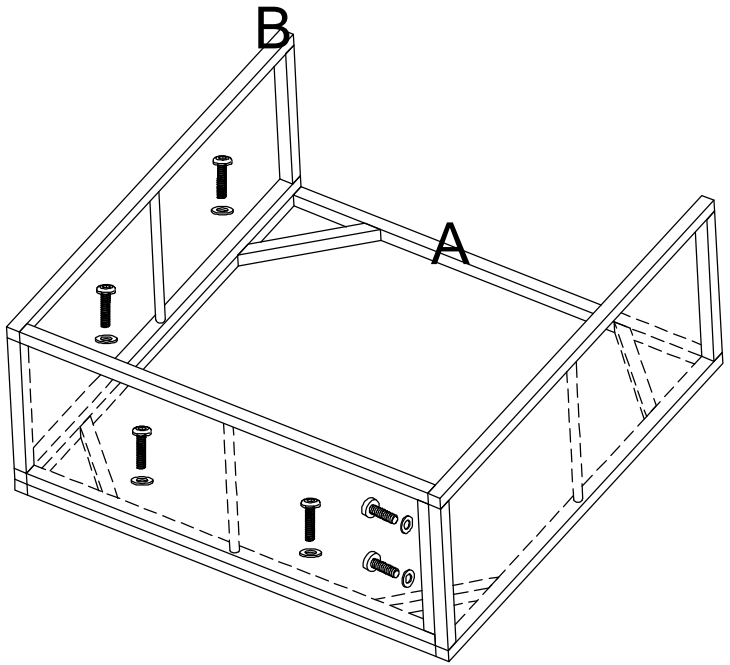

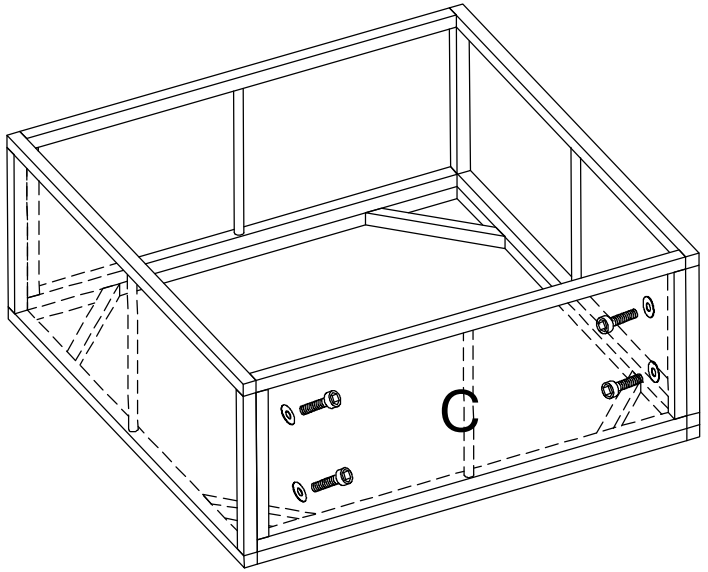

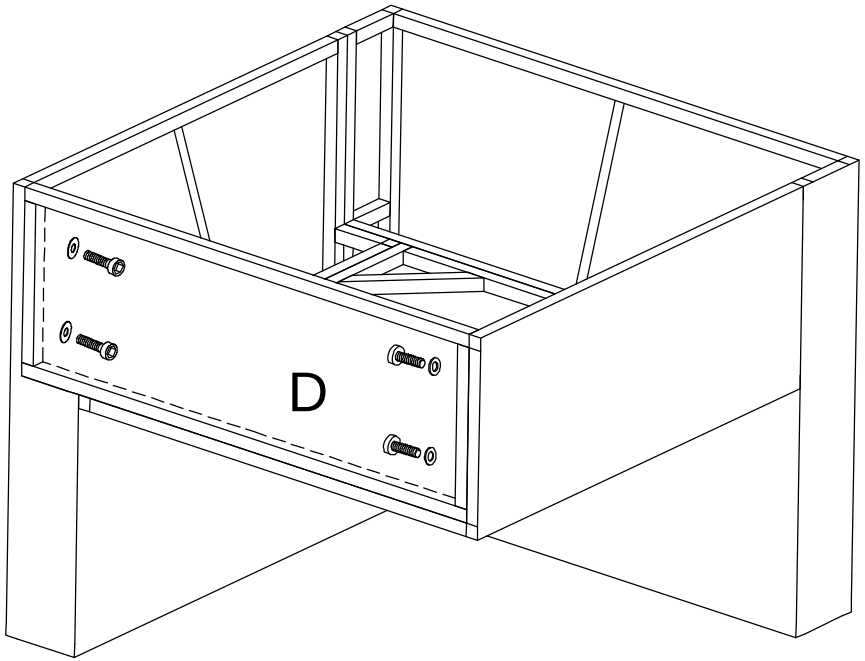

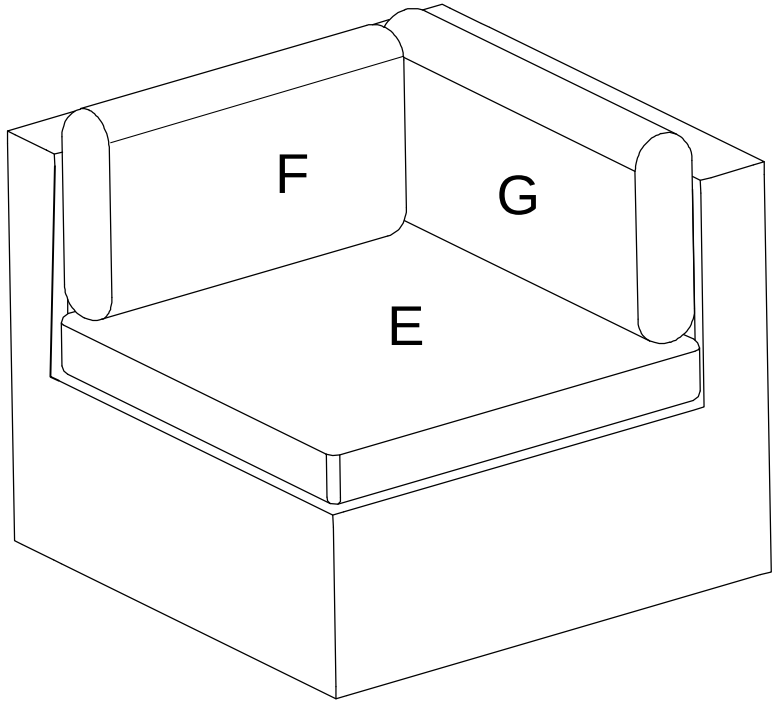


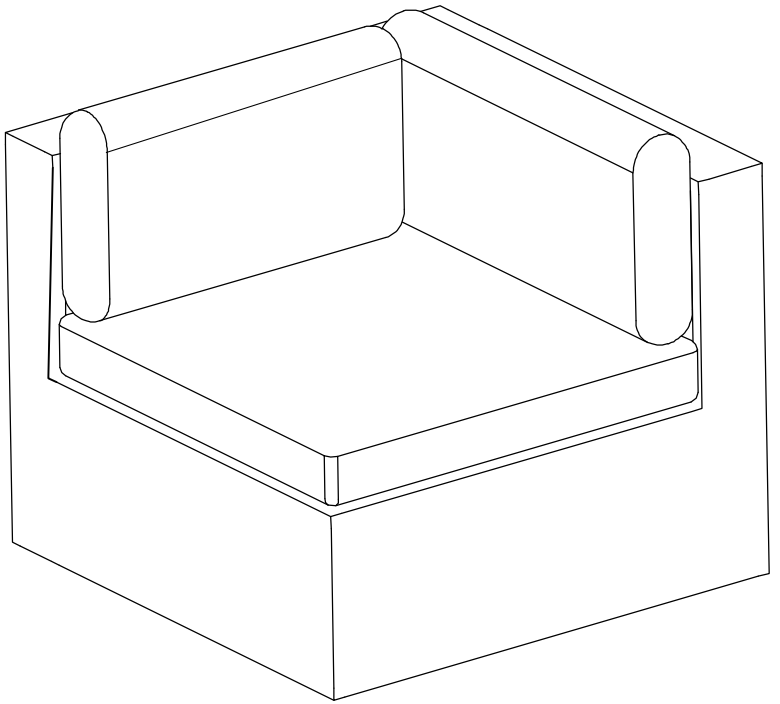


ASSEMBLY INSTRUCTIONS

PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.



A:1PC




B:1PC



C:1PC



D:1PC



E:1PC



F:1PC



G:1PC



H:12PCS



I:1PC

Do not fully tighten bolts until assembly is complete.

