
Aldercliff

Grounded in Nature, Built for Living.

SOILD WOOD FIREPLACE TV STAND

MODEL
H21437-01-YB

SIZE
98 INCH

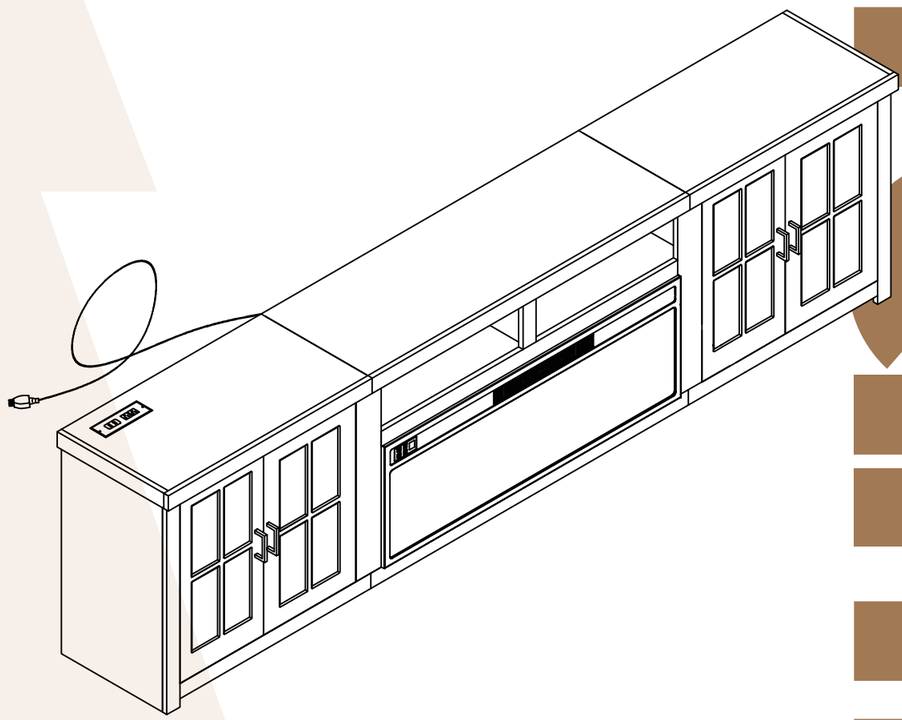

ASSEMBLY GUIDE

Aldercliff

HELLO,

Thank you for choosing Aldercliff.

We're delighted that your new piece has found a place in your home.

Inspired by natural materials and designed for everyday living, our furniture is made to bring warmth, stability, and comfort into your space. We hope you enjoy both the look and the experience it brings.

Assembly is simple-just follow the step-by-step instructions in this guide to get your piece set up and ready to use.

Once everything is in place, we'd love to see how it fits into your home. Feel free to share your experience or leave a review.

Please keep this manual for future reference.

CONTACT US

If you have any questions, need assistance, or are missing parts, please contact us at: **support@aldercliff.com**
(USA) +1 213-466-1241


IMPORTANT NOTICE

This product is shipped in **3 packages** and may arrive separately.

Please make sure all packages have been received before starting assembly.

The electric fireplace insert is included in a separate box.

Fireplace instructions are provided in a separate manual.

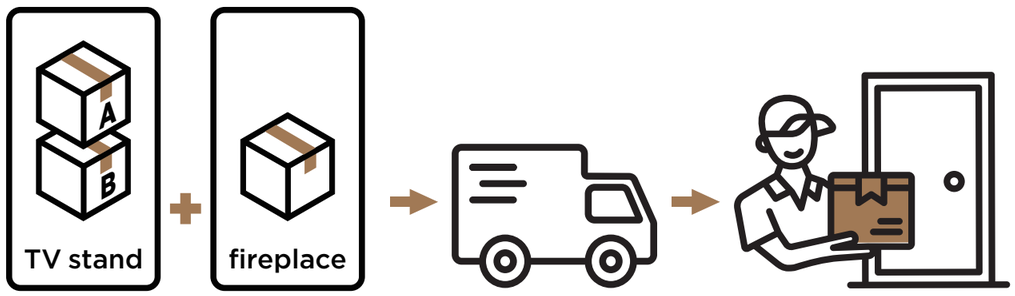

Aldercliff

TABLE OF CONTENTS

Safety Information ---- 04
Before You Start ---- 05
Tools You'll Need ---- 06
Assembly Details ---- 06
Parts List ---- 07
Hardware List ---- 10
Exploded View ---- 11
Assembly Instructions ---- 12
Fireplace Installation ---- 30
Final Check ---- 32
Care In structions ---- 33
Customer Support & Warranty ---- 34

SAFETY INFORMATION

Please read the following safety information carefully before assembly and use.

Adult assembly required. Keep children and pets away during assembly.

To reduce the risk of injury, do not allow children to climb or play on the furniture.

This product must be placed on a flat and stable surface.

Do not exceed the recommended weight limits for shelves and compartments.


Do not sit or stand on the furniture.

Keep the product away from direct heat sources and open flames.


Periodically check and tighten hardware to ensure continued stability.

Aldercliff


BEFORE YOU START

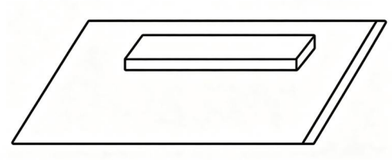


1. Ensure you have enough space for assembly. We recommend protecting your floor with a mat or cardboard to prevent scratches.

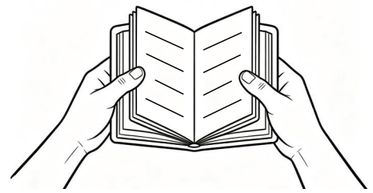


2. Read the instructions carefully and confirm that all parts are included before you begin.

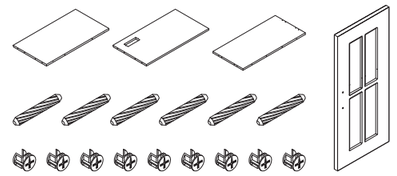


3. Lay out all hardware on a soft surface for easy identification.

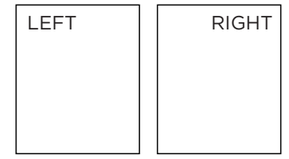


4. Carefully identify all components, especially left and right panels.

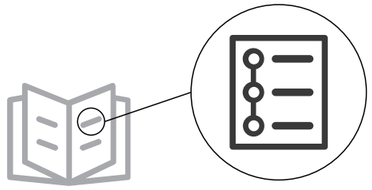

5. Follow the assembly steps in order. Do not skip ahead.

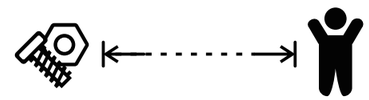


6. Keep small parts away from children during assembly.

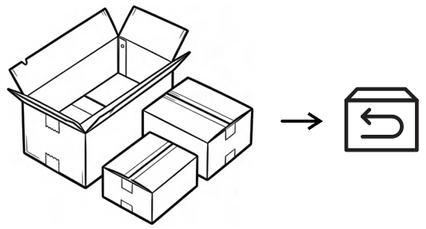

7. Keep all packaging materials until assembly is complete and all parts have been checked. Retaining the original packaging may be required for returns or replacements.


TOOLS YOU'LL NEED

We recommend preparing the following tools before assembly:

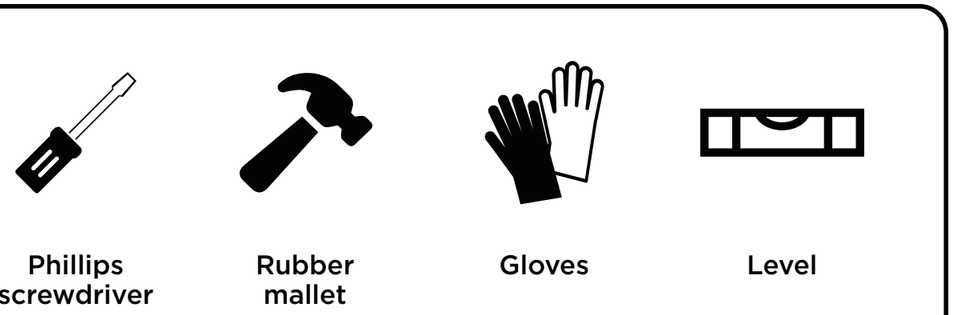

ASSEMBLY DETAILS

IMPORTANT:
2 people recommended for assembly.
This will help to minimize potential damage to the product or injury to persons during assembly.

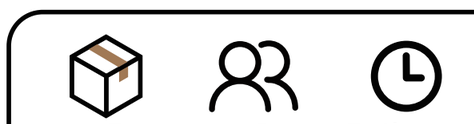

Please do not fully tighten hardware until all assembly steps are completed. This helps ensure proper alignment of all components.

Do not over-tighten screws or use power tools, as this may damage the product.


Illustrations are provided for guidance only. Minor variations in appearance may occur.

Aldercliff


PARTS LIST

2 BOXES


CARTON: A

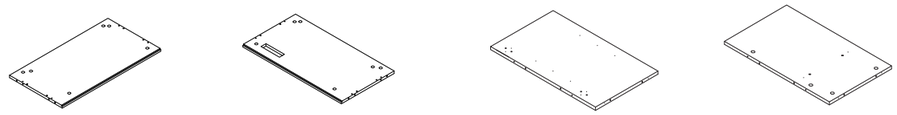

2 x1 | 3 x1 | 9 x1 | 10 x1




11 x1 | 12 x1 | 19 x1 | 21 x1

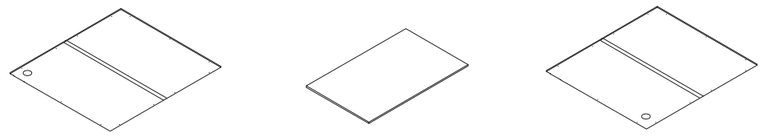


34 x1 | 36 x2 | 38 x1

CARTON: B

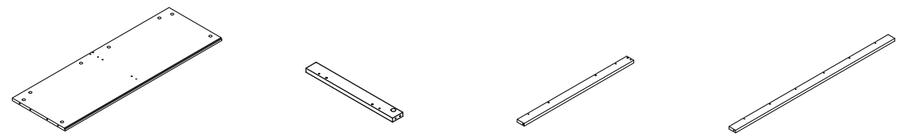

1 x1 | 4 x1 | 5 x1 | 6 x1


CARTON: B




7 x1




8 x1




13 x1




14 x1



15 x1




16 x1




17 x1




18 x1

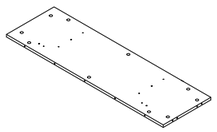


20 x1




22 x1

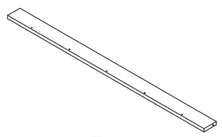


23 x1



24 x1



25 x1



26 x1



27 x1



28 x2

Aldercliff

CARTON: B




29 x2




30 x2




31 x8




32 x1

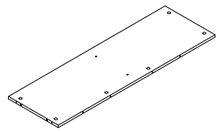

33 x1

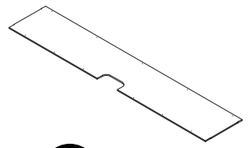


35 x1



37 x4

HARDWARE LIST

CARTON: A



Ø6 x35mm
Ⓐ x60




Ø15x10mm
Ⓑ x76



Ø8 x30mm
Ⓒ x118



Ø4 x35mm
Ⓓ x6



Ⓔ x8




Ø4x40mm
Ⓕ x20



Ø2.5x14mm
Ⓖ x41




Ⓗ x8



Ⓘ x8




Ø3.5x14mm
Ⓙ x48

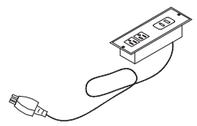

Ⓚ x1



Ø4 x16mm
Ⓛ x8



Ⓜ x4




Ø3*12mm
Ⓝ x2





Ø4x50mm
Ⓞ x12

Aldercliff

EXPLODED VIEW

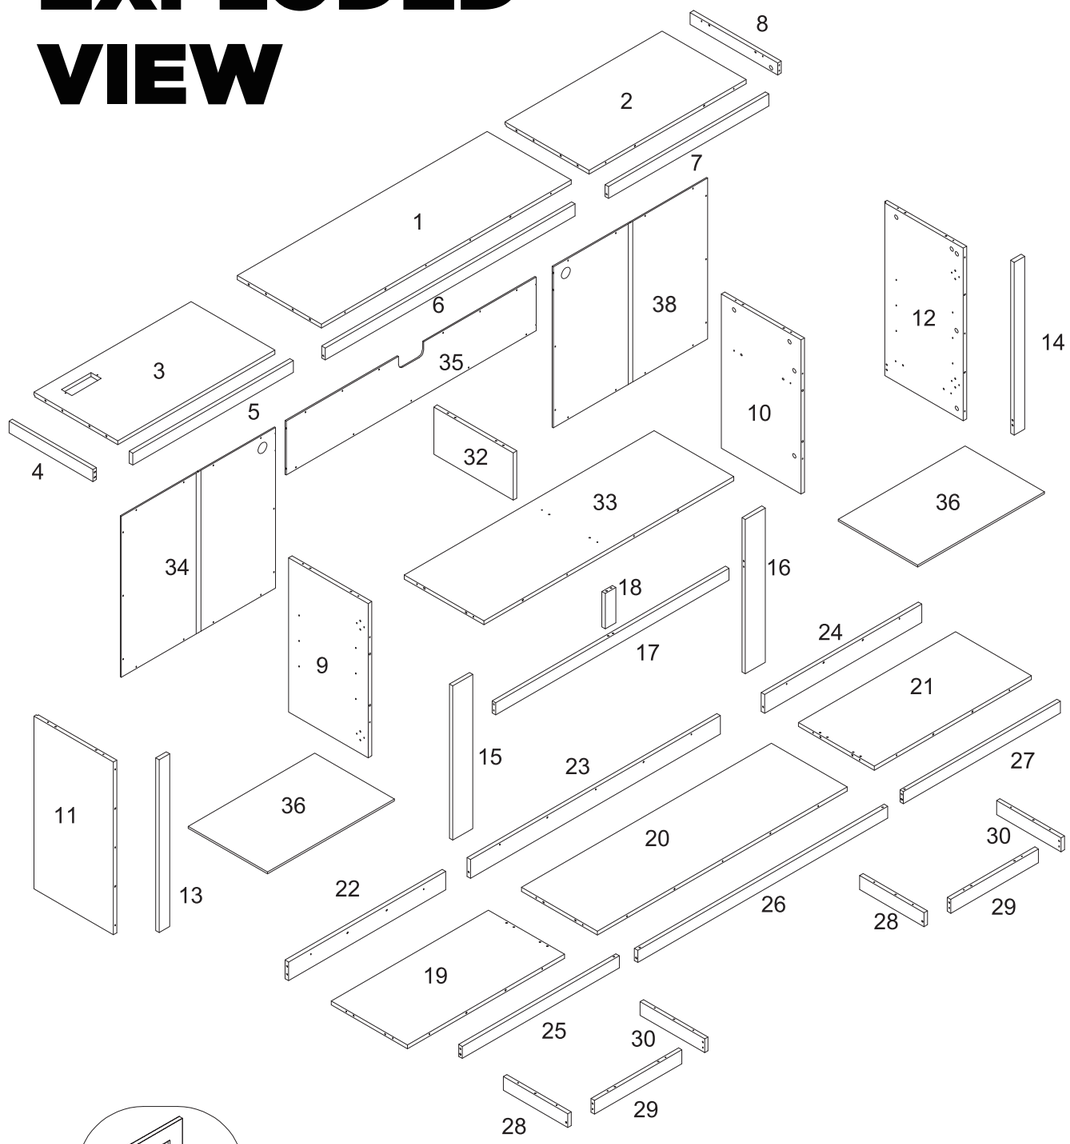

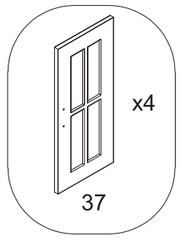






ASSEMBLY INSTRUCTIONS

STEP 1

Ⓐx12 Ⓒx8 Ⓕx8

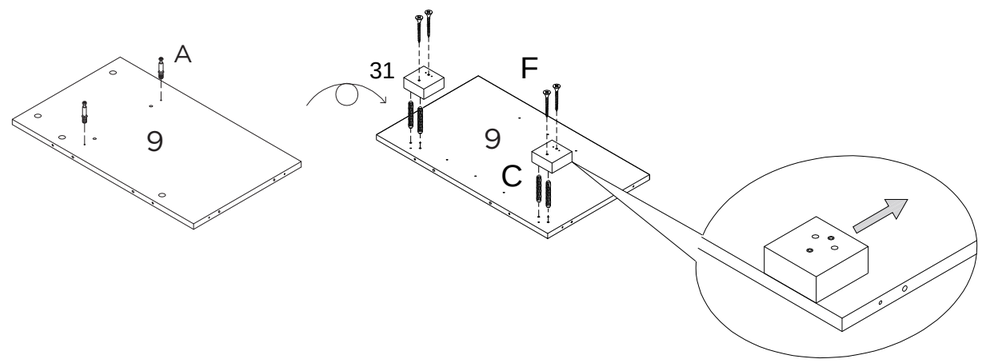

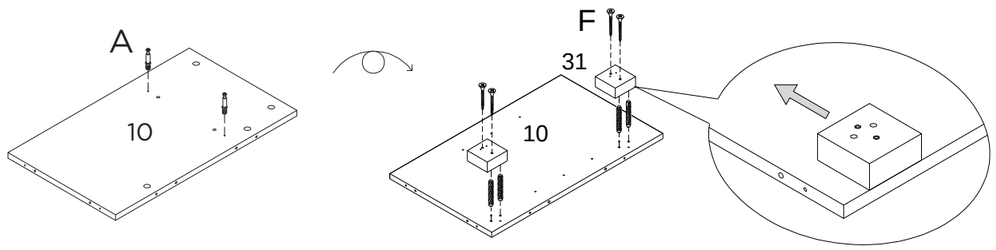


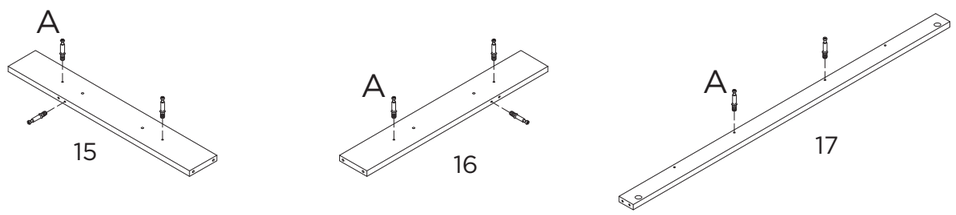

Aldercliff


STEP 2

Ⓑx6 Ⓒx6

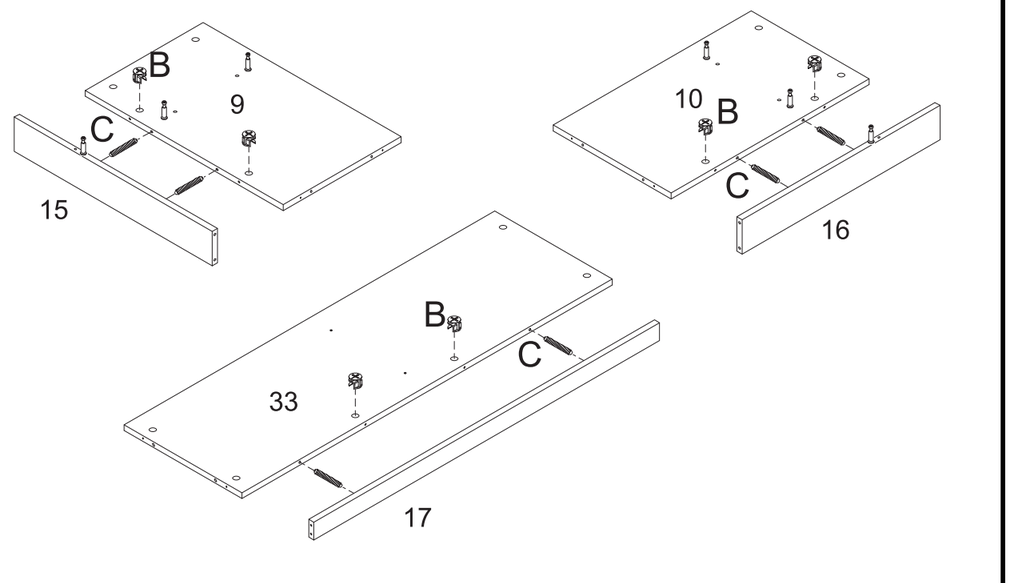


STEP 3


Ⓑx6 Ⓒx6

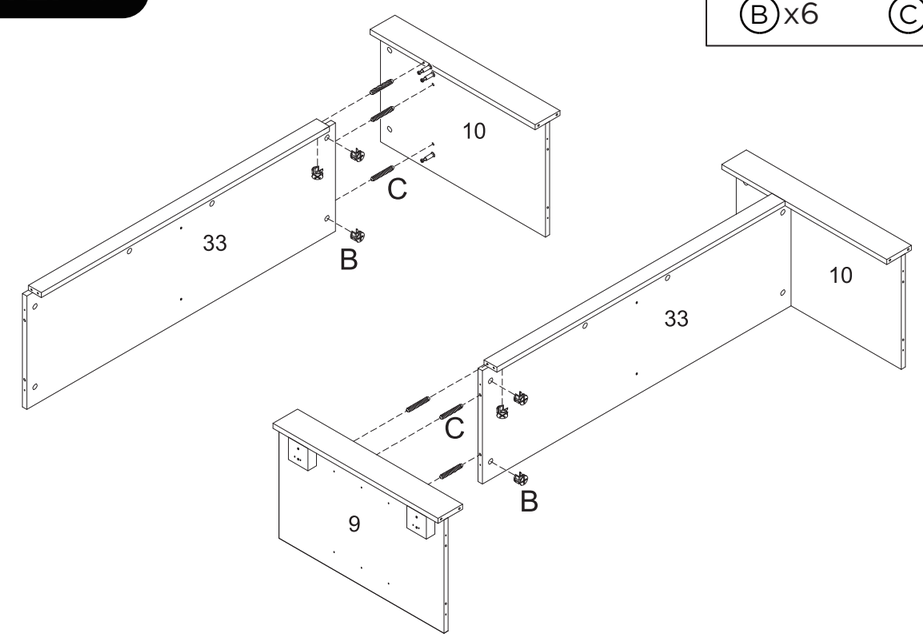


STEP 4

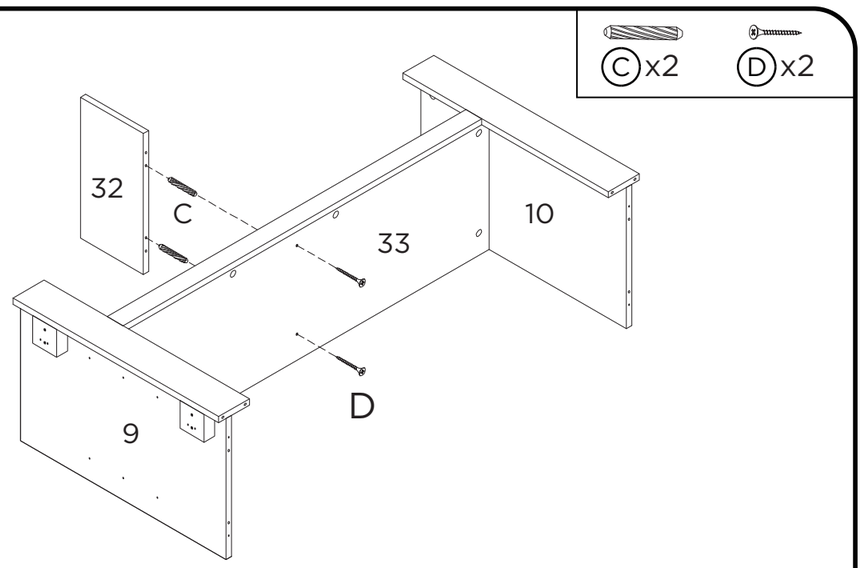


STEP 5

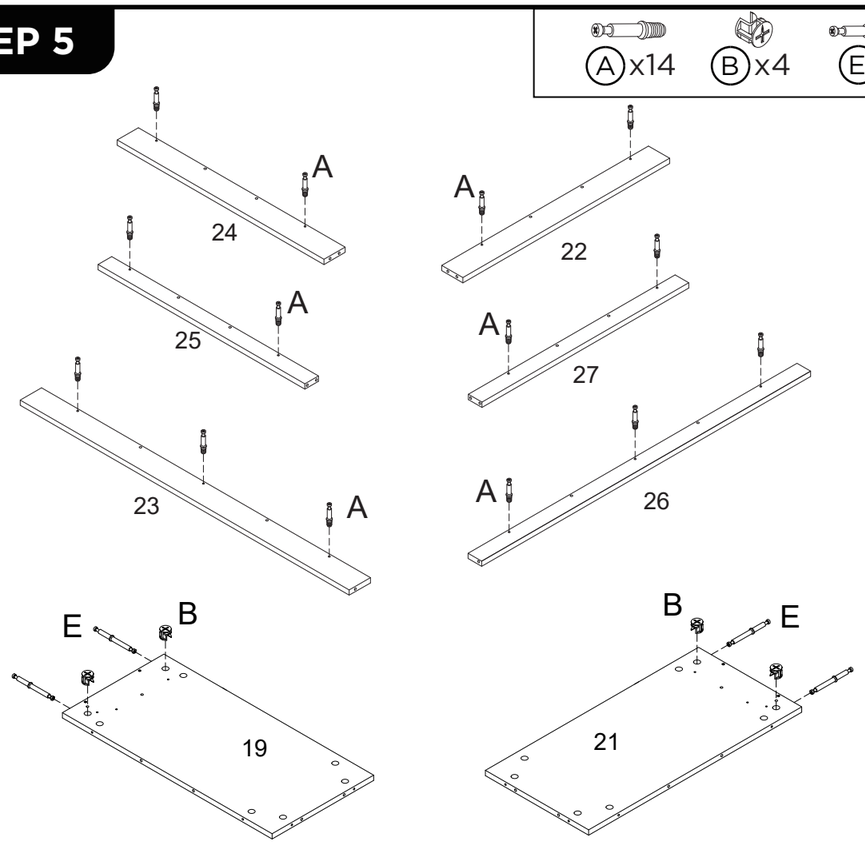

STEP 6

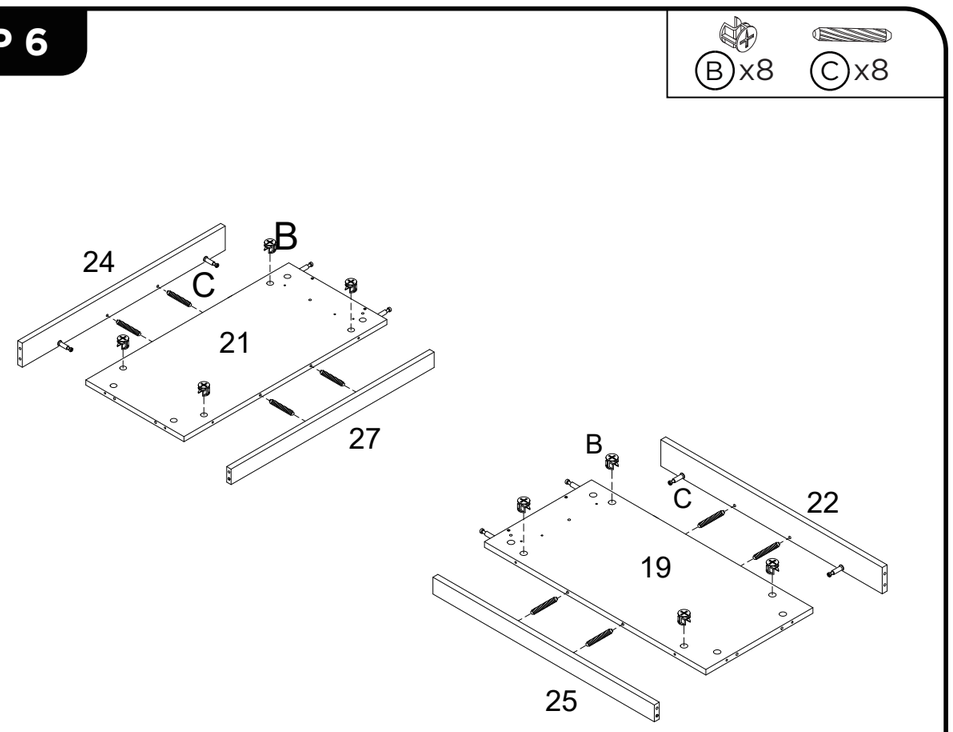


STEP 7

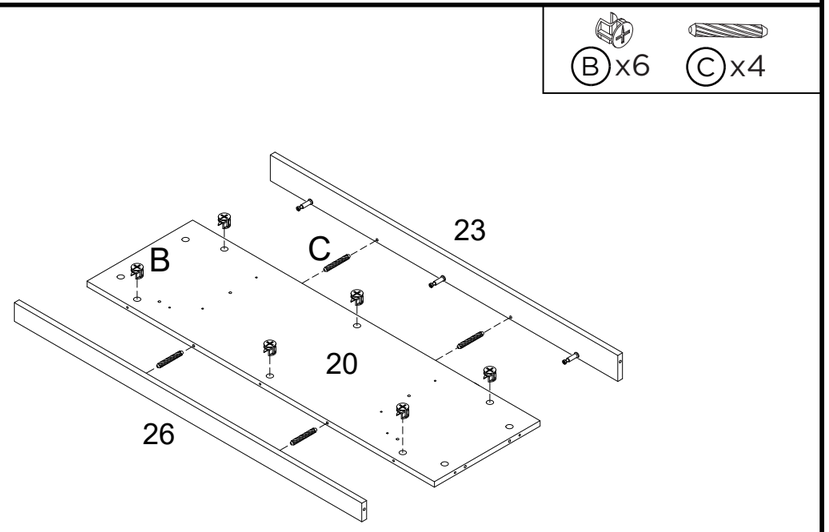


STEP 8

Ⓑx2 Ⓒx4

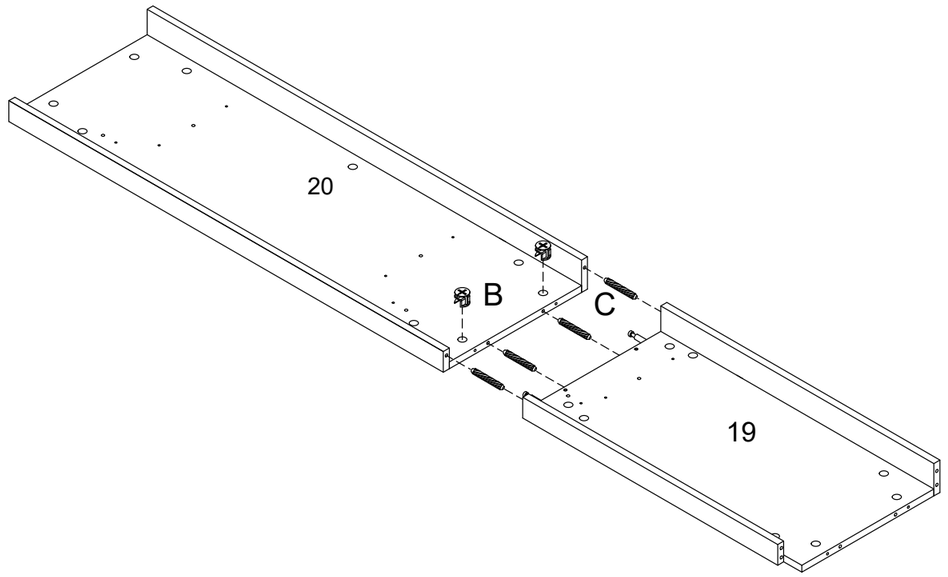


STEP 9

Ⓑx2 Ⓒx4

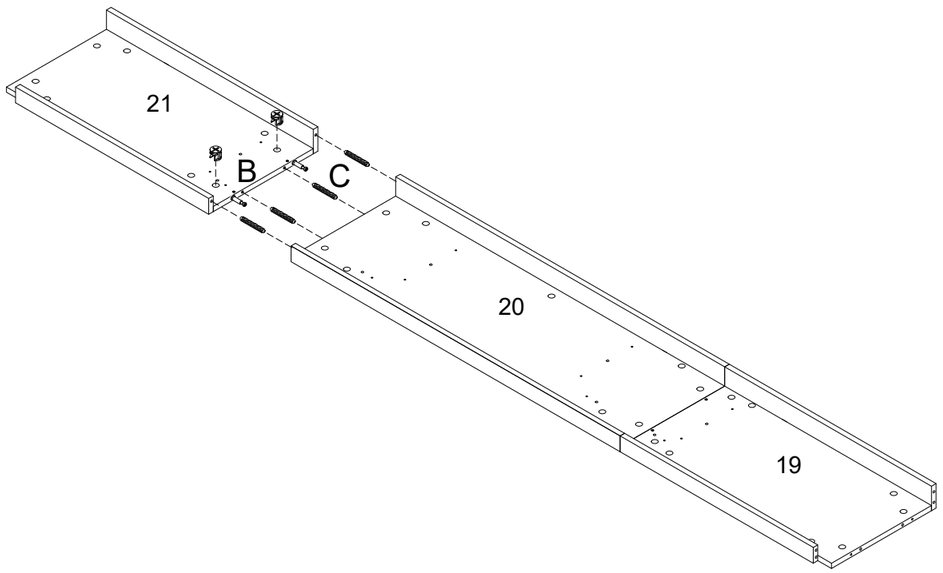


STEP 10

Ⓒx8 Ⓕx4

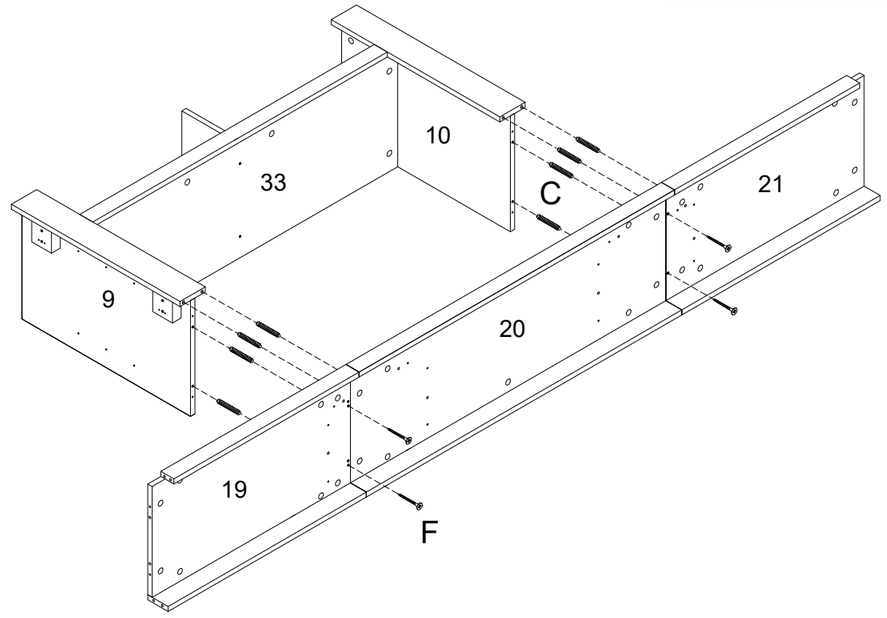


STEP 11

Ⓐx10 Ⓒx8 Ⓕx8

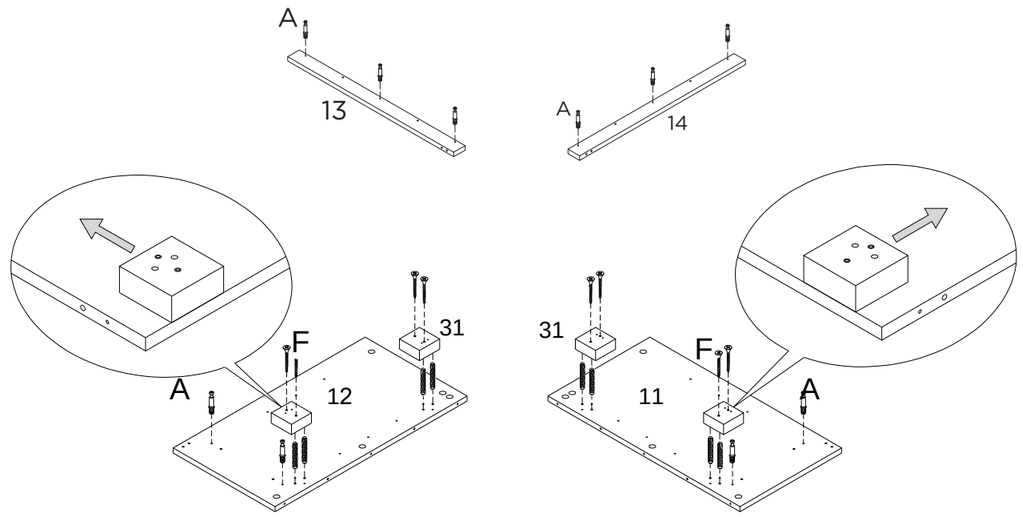

STEP 12


Ⓒx4 Ⓓx4

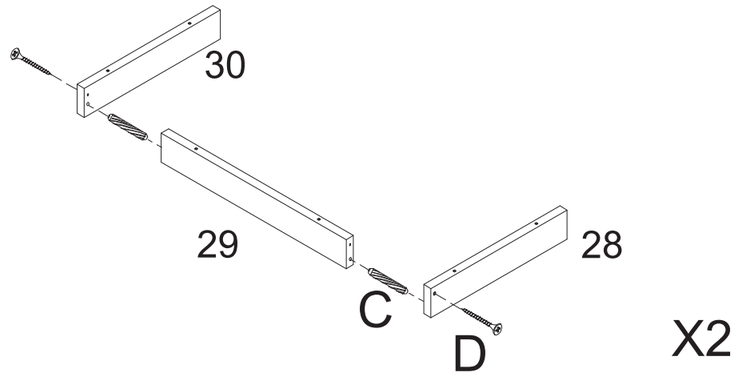


X2

STEP 13


Ⓑx6 Ⓒx4

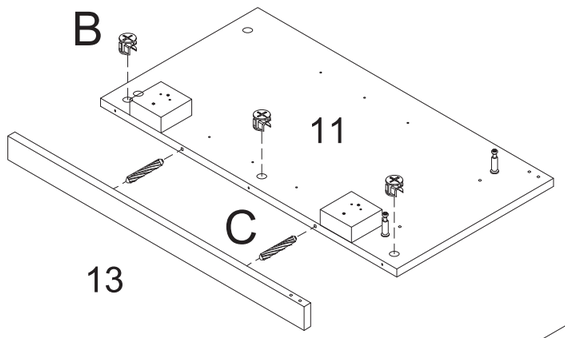

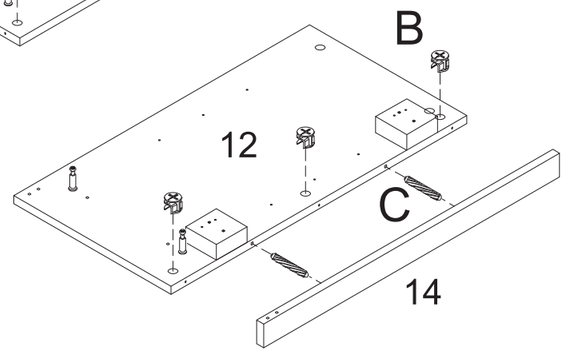


STEP 14

Ⓑx2 Ⓒx6

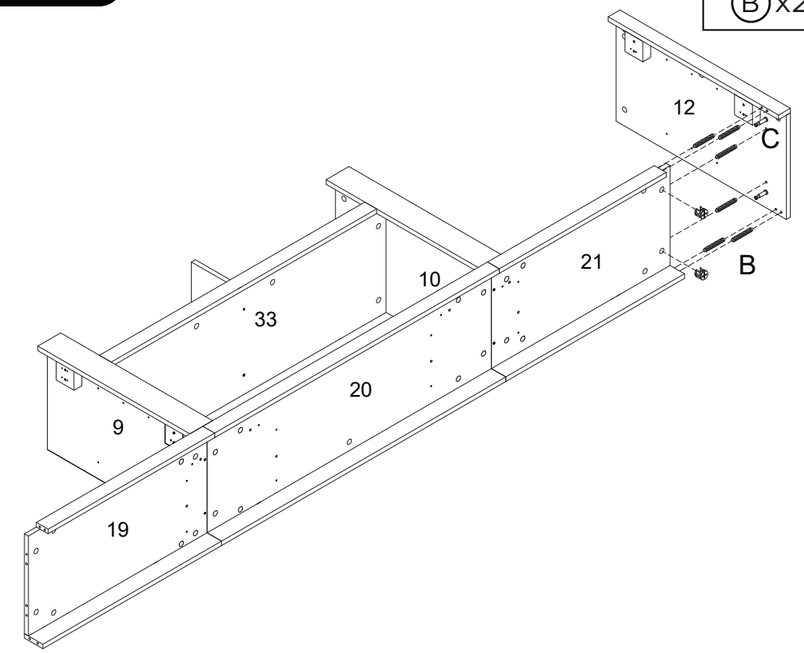



STEP 15

Ⓑx2 Ⓒx6

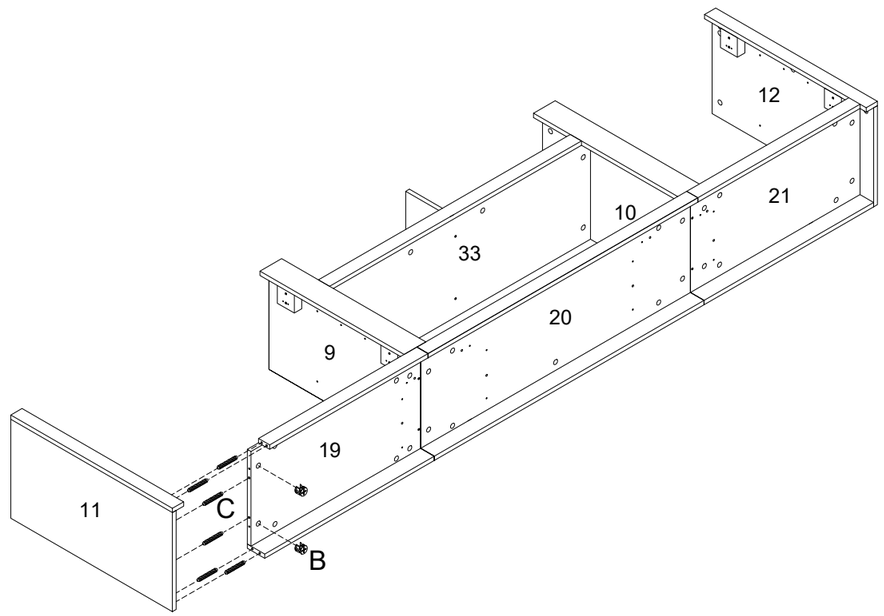



STEP 16



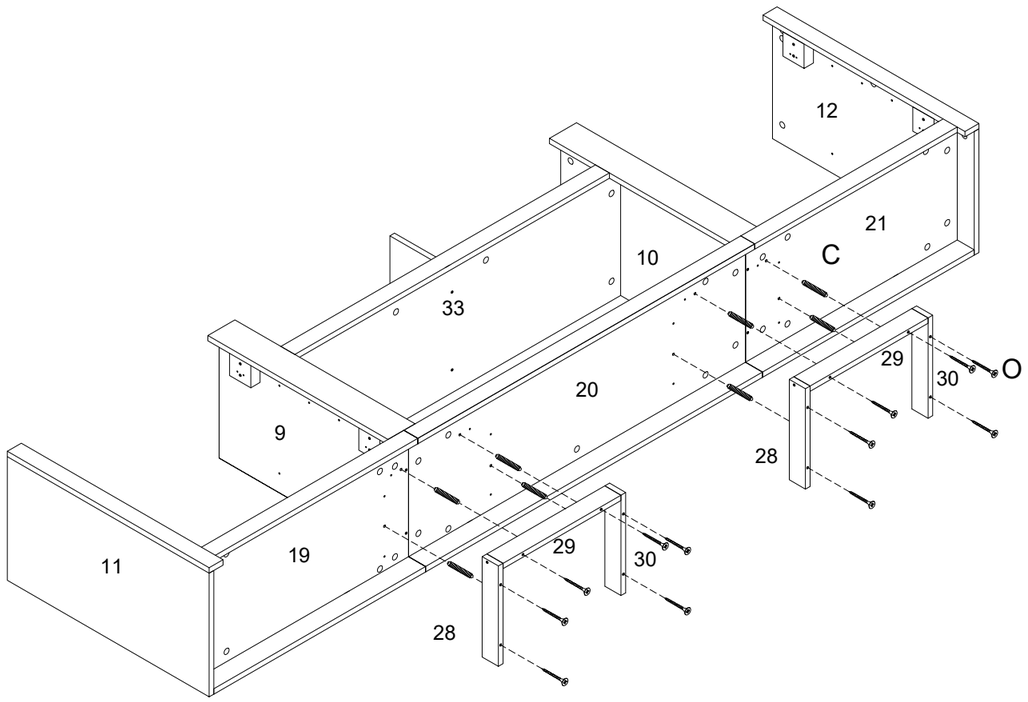


STEP 17



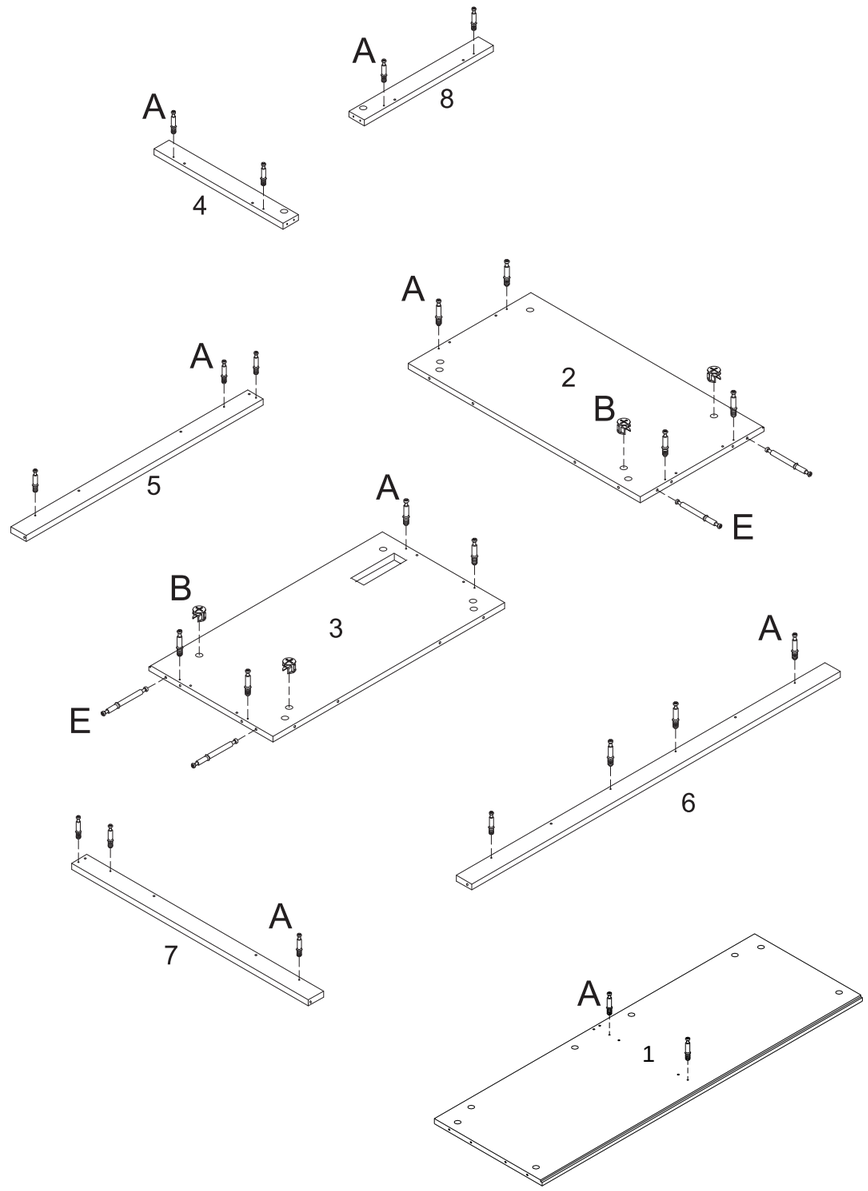


STEP 18

Ⓑ x4 Ⓒ x2

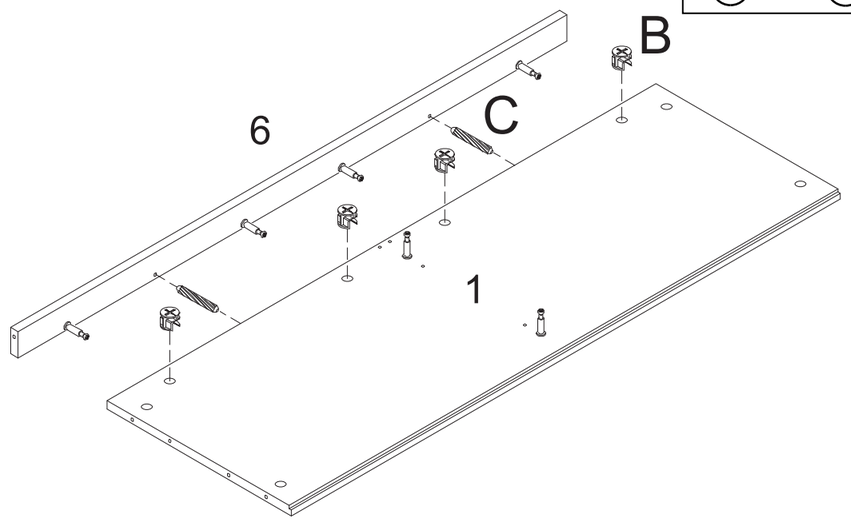


STEP 19

Ⓑ x4 Ⓒ x4

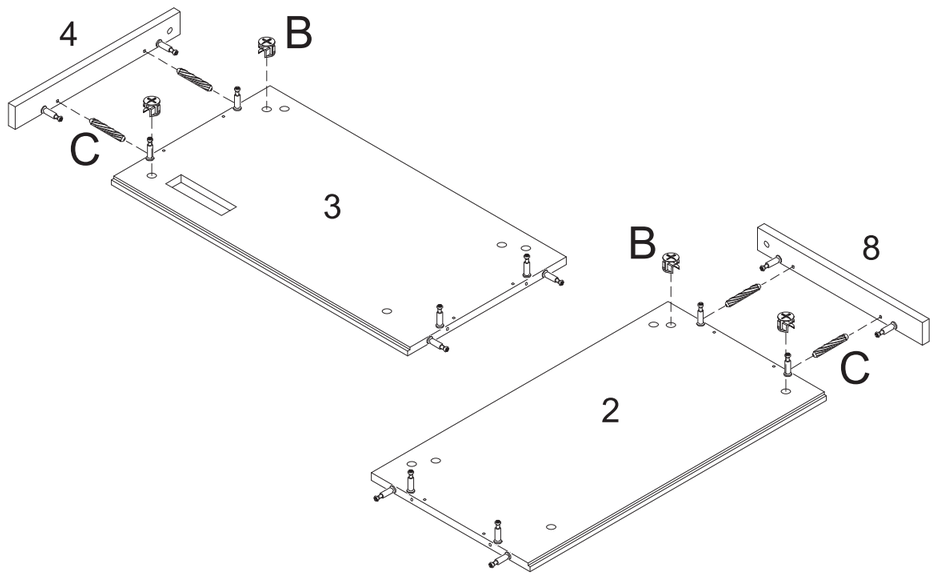


STEP 20

Ⓑ x6 Ⓒ x6

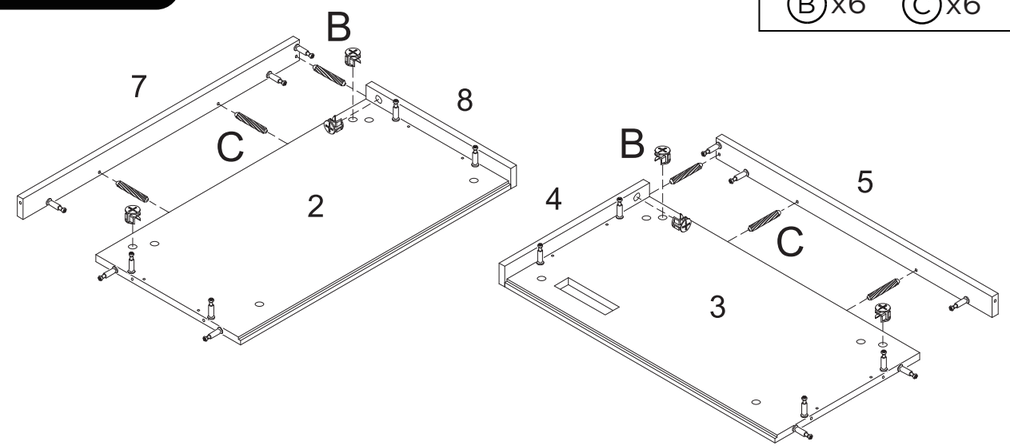


STEP 21

Ⓑ x4 Ⓒ x6

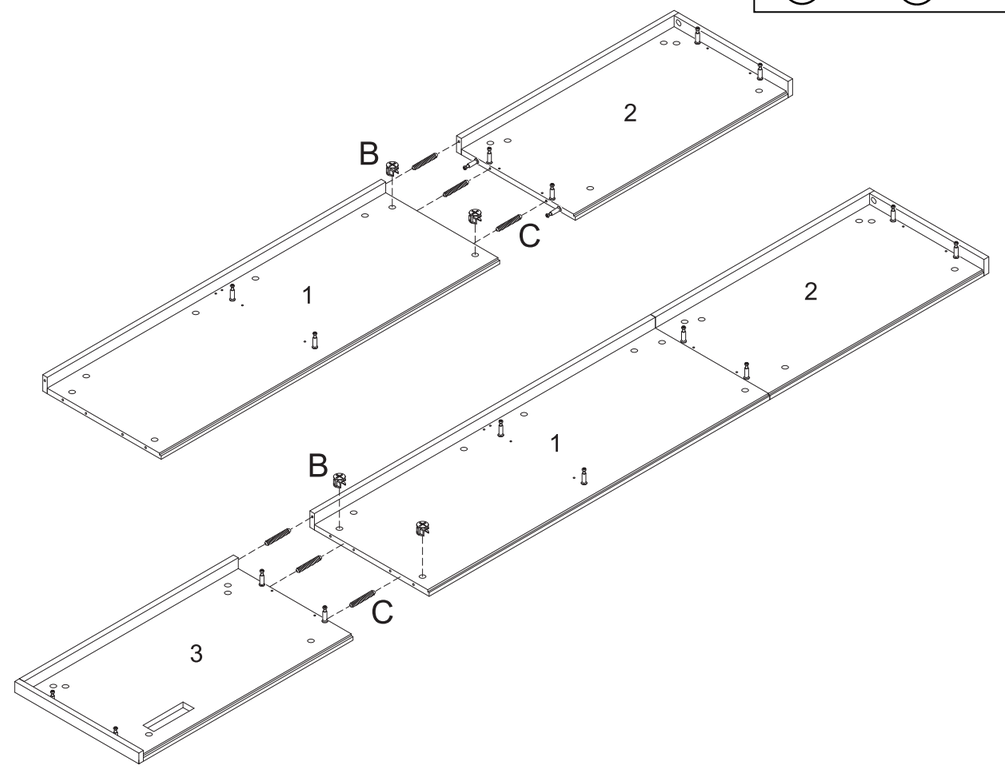

STEP 22

Ⓑx10 Ⓒx14

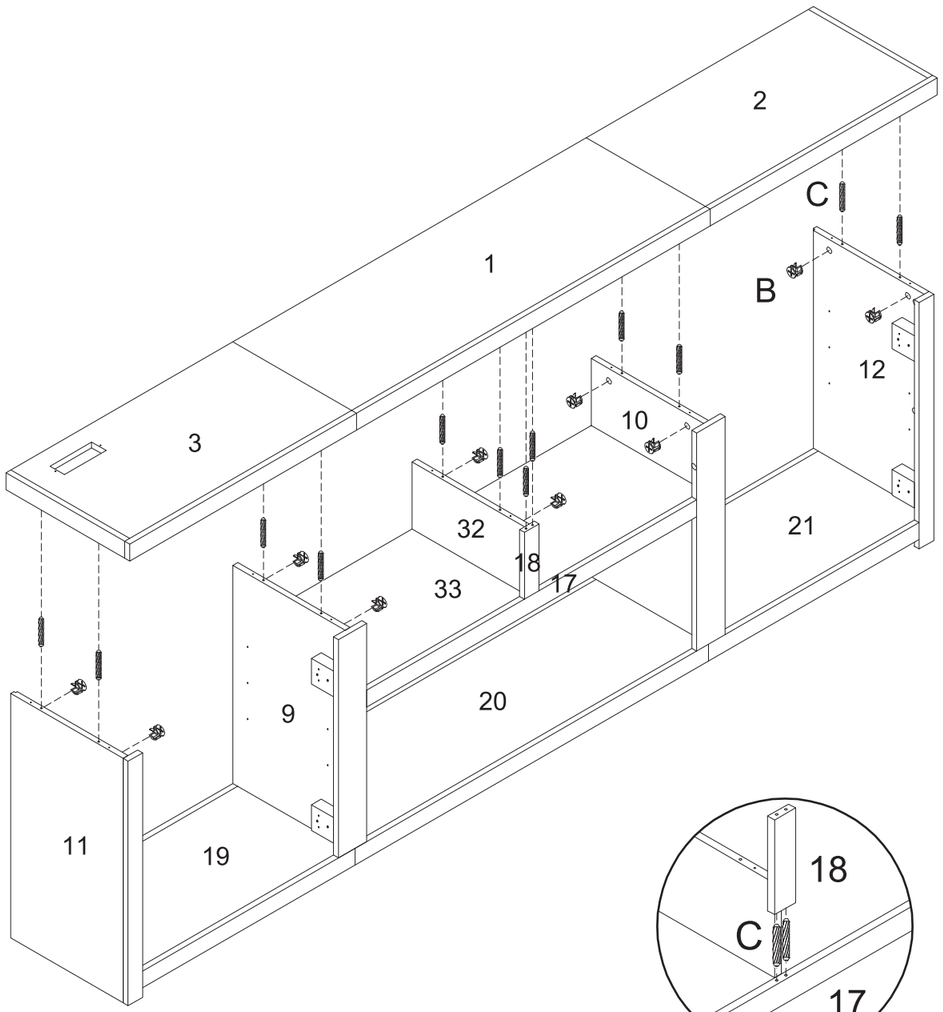


FIRST STEP 1

Aldercliff


STEP 23

Ⓖx41

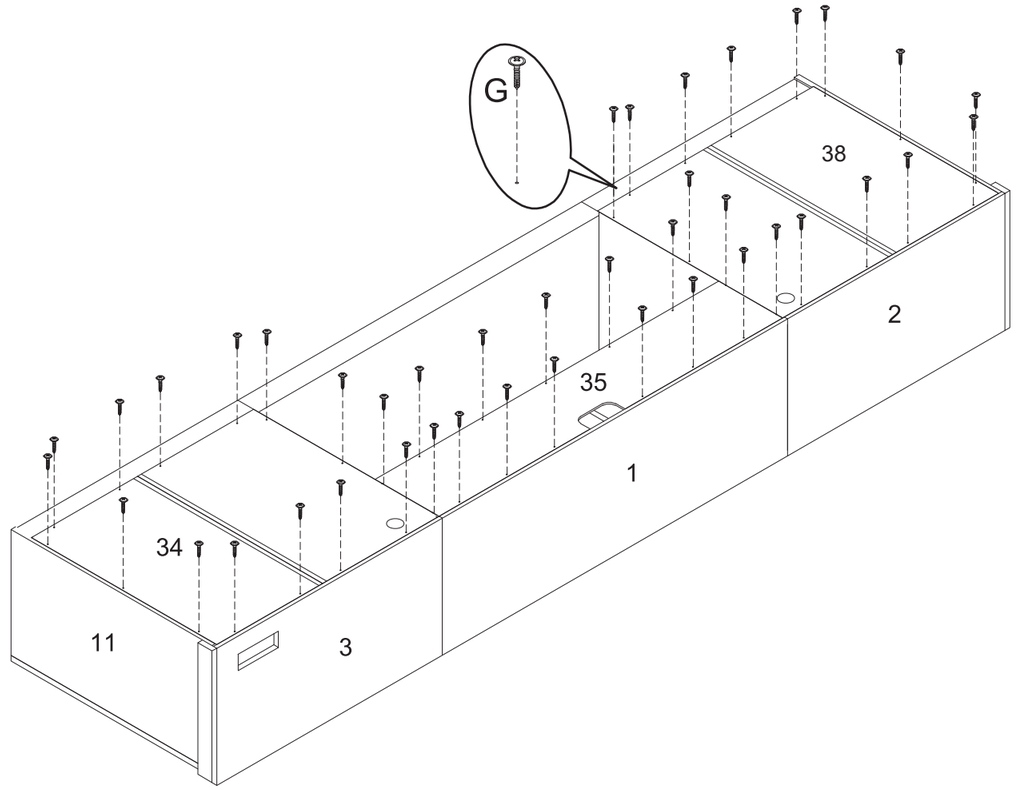

STEP 24


H x8

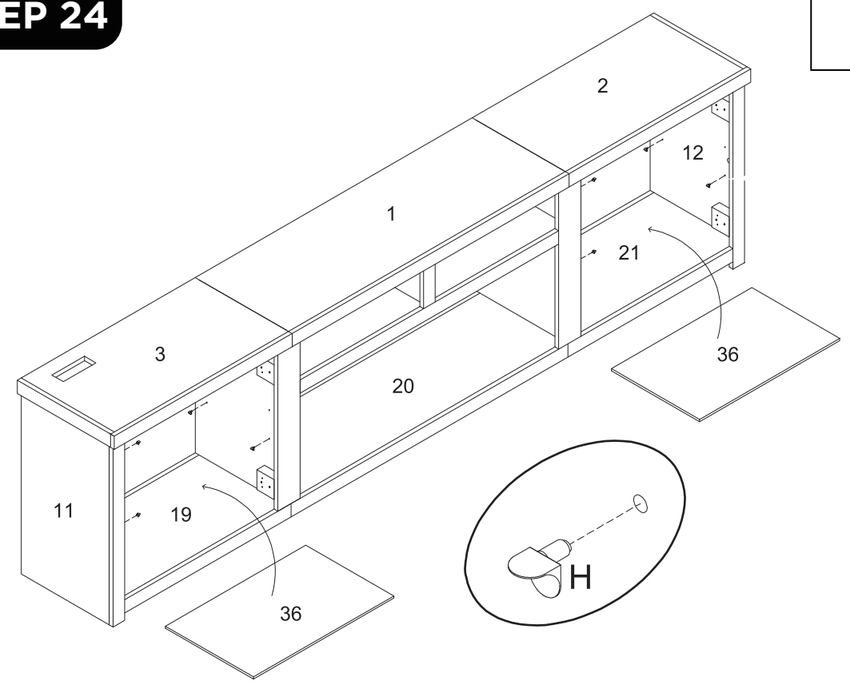

STEP 25


I x8 J x16

X4

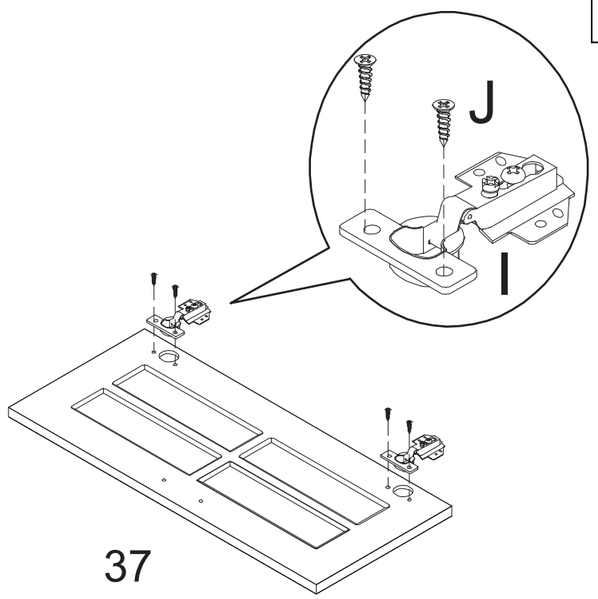


STEP 26


J x16 K x1 L x8 M x4 N x2

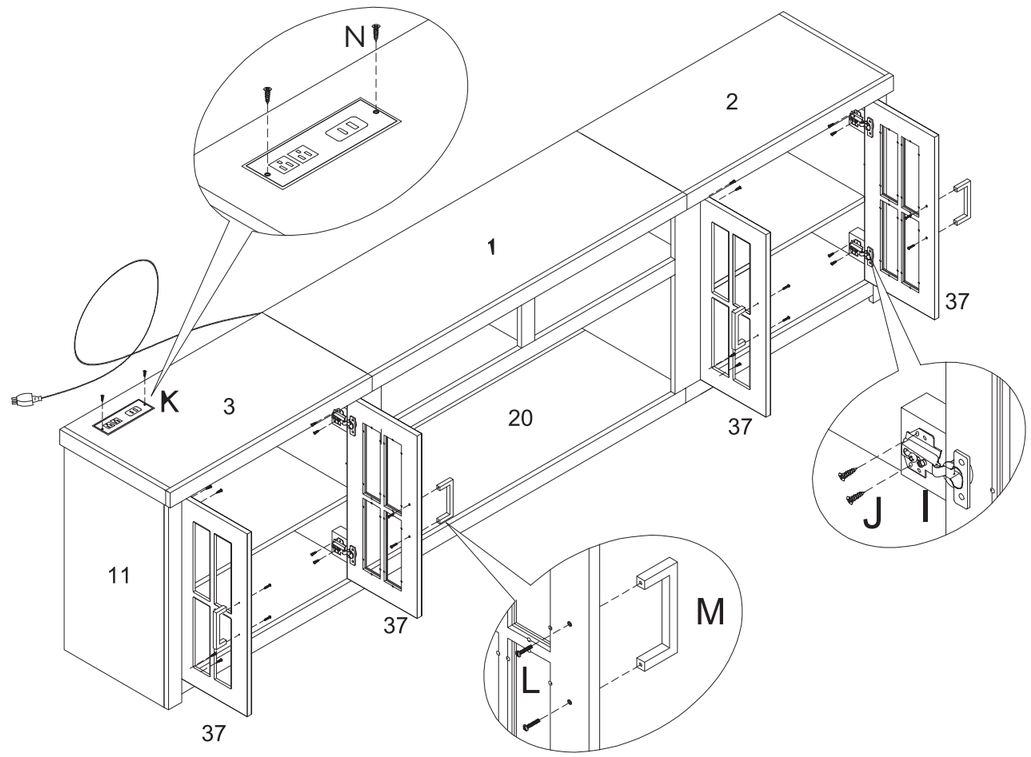


STEP 27

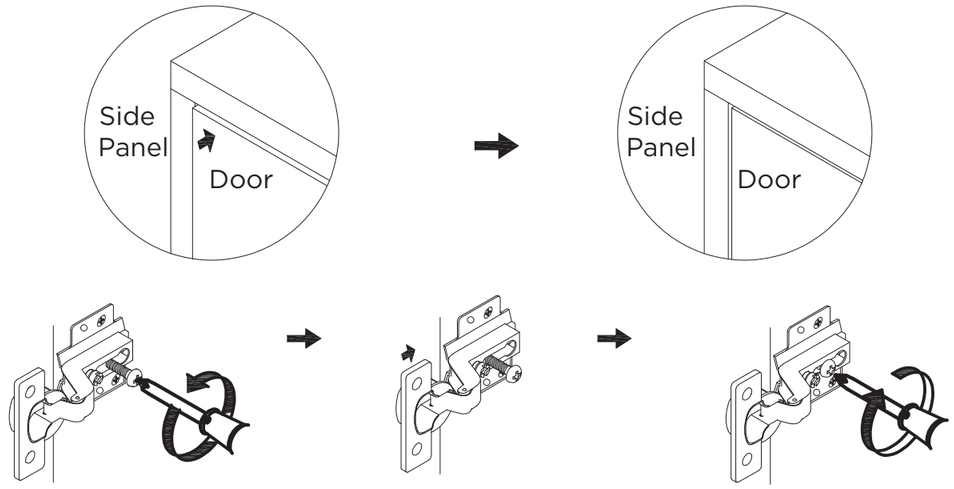


If the top of the door is not level with the side panel, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw.

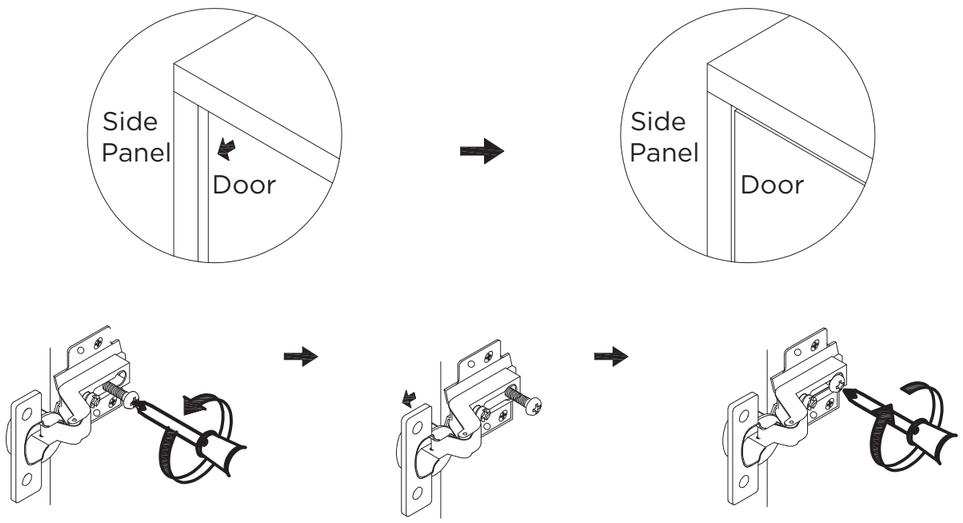

If the top of the door is not level with the side panel, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw as shown.

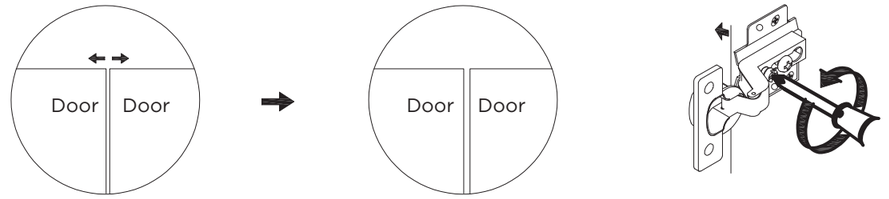


If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

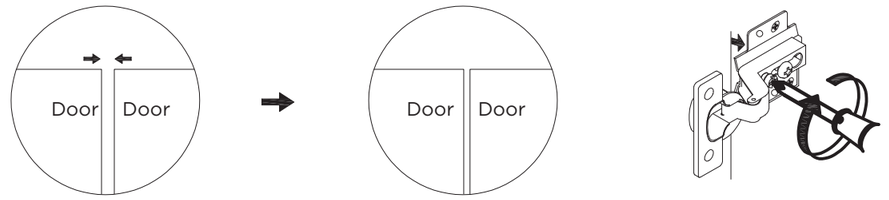

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

J x16

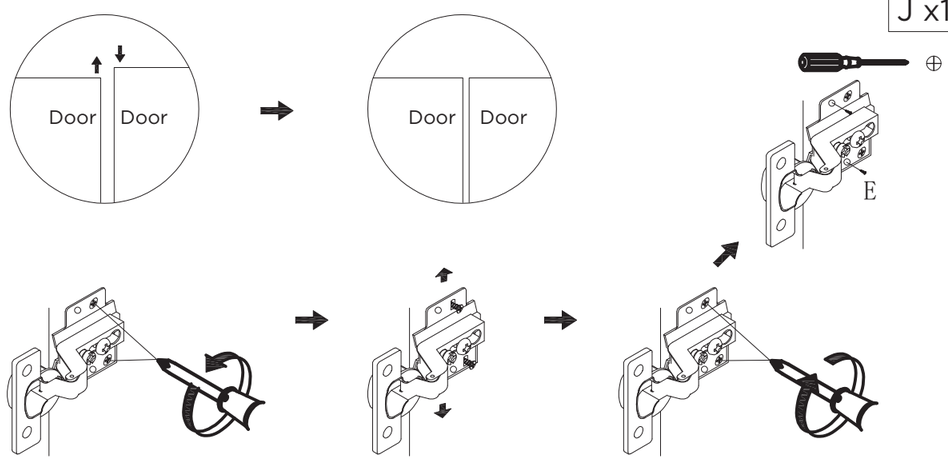

a) If the doors are not leveled with each other, loosen the screws (installed on STEP 28) at the Panel Wing of the hinge, then adjust the hinge up or down until the desired level or when both doors are leveled, and then re-tighten the screws.
b) When all the desired positions are in place, use the remaining Screw (J) to fasten the Wing Panel usingthe front two screw holes on Panel Wing.
The assembly of the Console Table is complete.


FIREPLACE INSTALLATION


If your product includes an electric fireplace insert, please proceed with fireplace installation after completing the TV stand assembly.

The fireplace insert is shipped in a separate box.

Please refer to the separate fireplace instruction manual for installation and operating instructions.

Once the fireplace installation is complete, return to this manual for the final product check.

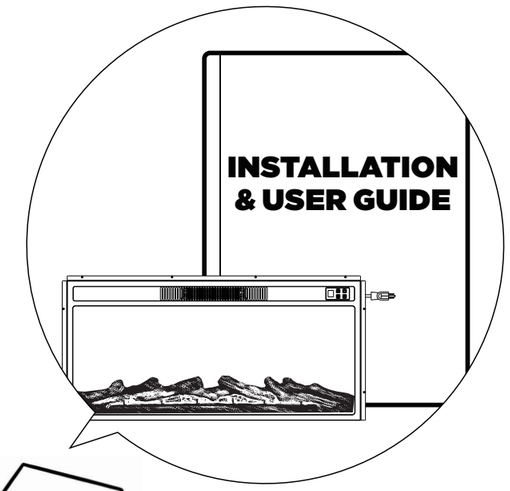


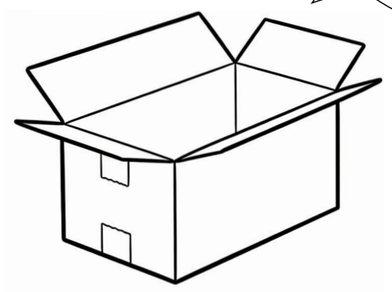

Aldercliff


STEP 28

Illustrations are for reference only,please follow the official fireplace installation manual.

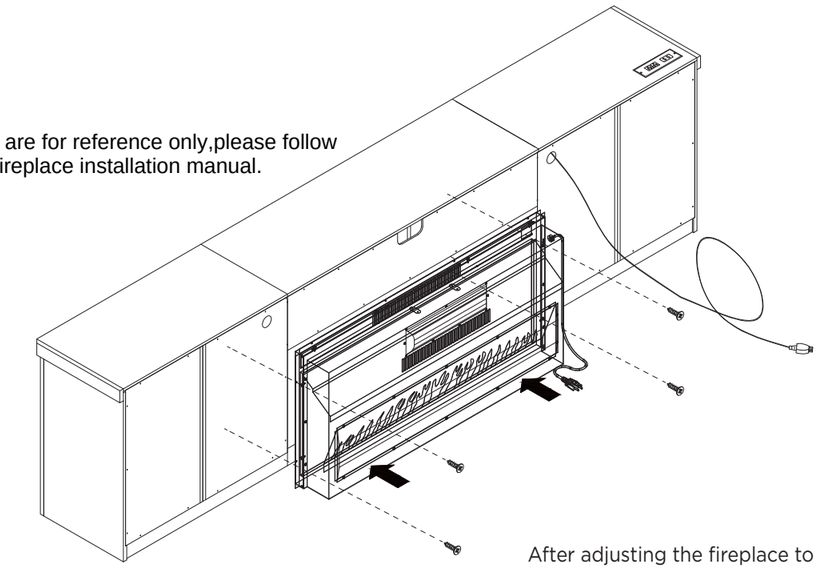

After adjusting the fireplace to the correct position, fix it with screws.

STEP 29

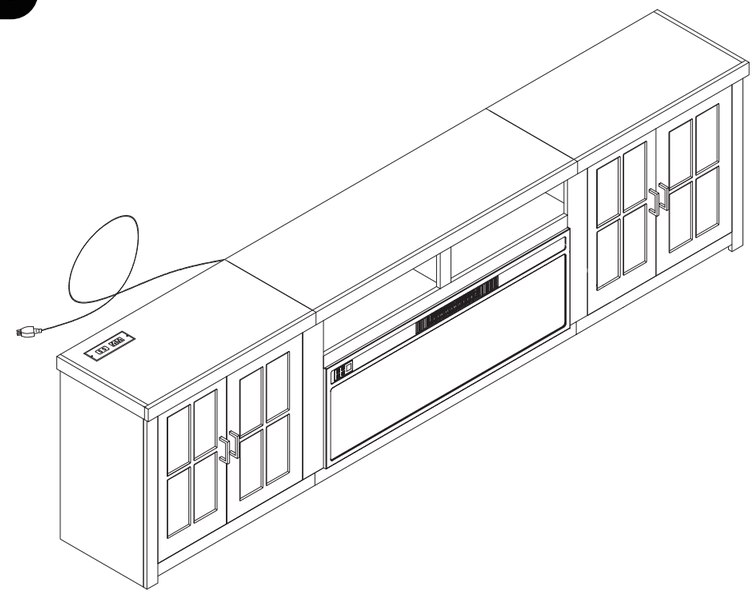

FINAL CHECK

You're almost there.

Before using your Aldercliff furniture, please take a moment to complete the following checks:

- Have all screws and bolts been fully tightened?
- Is the unit placed on a flat and stable surface?
- Are all levelers adjusted and firmly touching the ground?
- Has the anti-tip kit been properly installed (if included)?

For products with additional components:

- Have all additional components been properly installed?


When moving your furniture, always lift carefully rather than dragging, to protect both the product and your floor.

Finally, wipe the surface with a soft, damp cloth to remove dust from assembly.

You're all set.

We hope your new Aldercliff piece brings warmth, comfort, and lasting style to your home.

Note:
Minor size variations may occur due to manual measurements.

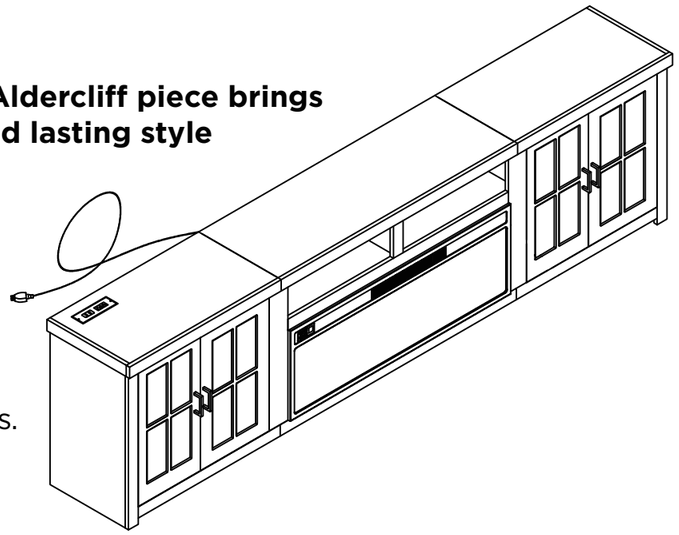

CARE INSTRUCTION

cliff furniture is designed to bring warmth and lasting style to your home.

With proper care and light maintenance, your piece will continue to look beautiful for years to come.


- Dust regularly with a soft, dry cloth. For deeper cleaning, use a slightly damp cloth and wipe dry immediately.
- Avoid abrasive cleaners, harsh chemicals, or placing rough or sharp objects on the surface.
- Keep furniture away from direct sunlight, excessive heat, and moisture to prevent discoloration or warping.
- Wipe spills immediately to prevent staining or damage to the finish.
- Use coasters, placemats, or protective pads where possible to help preserve the surface.
- When moving your furniture, always lift carefully. Do not drag, as this may damage the legs or loosen joints.
- Periodically check that all hardware and connections remain securely tightened.

With thoughtful care, your Aldercliff furniture will continue to enhance your living space for years to come.

CUSTOMER SUPPORT & WARRANTY

Thank you for choosing Aldercliff. We are committed to providing thoughtfully designed furniture and reliable customer support.

If you have any questions or require assistance, our team is here to help.

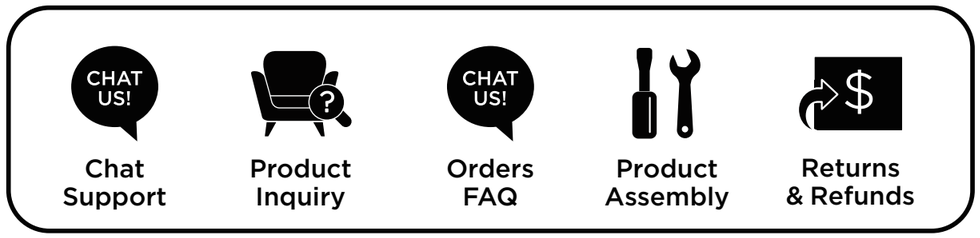

Your Aldercliff furniture is covered by a limited warranty from the date of purchase under normal residential use.

This warranty applies to manufacturing defects in materials and workmanship.

WARRANTY COVERAGE

This limited warranty includes:

Structural Components — 2 Years

Frames, panels, shelves, and structural elements are covered against manufacturing defects.

Hardware & Accessories — 1 Year

Includes screws, hinges, drawer slides, handles, and other hardware components.

Aldercliff

WARRANTY EXCLUSIONS

This warranty does not cover:

- Damage caused by improper assembly
- Normal wear and tear
- Misuse or abuse of the product
- Improper maintenance or cleaning
- Damage caused by water, heat, or environmental conditions
- Commercial or non-residential use
- Modifications or alterations to the product
- Damage resulting from improper handling or moving of the product

Proof of purchase may be required for warranty claims.

ADDITIONAL COMPONENTS

Some Aldercliff products may include additional components such as electric fireplace inserts, lighting features, or other integrated accessories.

These components may be covered under separate warranty terms.

Please refer to the instruction manual provided with those components for detailed warranty information.

Aldercliff

MISSING OR DAMAGED PARTS

If any parts are missing or damaged during transit, please contact our customer support team.

We will gladly provide replacement parts free of charge.

To help us assist you quickly, please include:

- Product name or model
- Description of the issue
- Photos of the affected area (if applicable)

CONTACT US

E-mail: **support@aldercliff.com**

Phone: **(USA) +1 213-466-1241**

Our customer support team will respond as soon as possible to assist you.