ASSEMBLY INSTRUCTIONS

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.


CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST (FOR 2 NOS. OF CHAIR)

NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	LEFT FRONT LEGS	2
P4	RIGHT FRONT LEGS	2
P5	FRONT STRETCHER	2
P6	LEFT STRETCHER	2
P7	RIGHT STRETCHER	2

HARDWARE LIST (FOR 2 NOS. OF CHAIR)

NO.	DESCRIPTION	QTY.
H1	JCBC SCREW M6 X 35MM	4
H2	JCBC SCREW M6 X 80MM	16
H3	SPRING WASHER	20
H4	FLAT WASHER	20
H5	SCREW M4 X 38MM	12
H6	ALLEN KEY	1

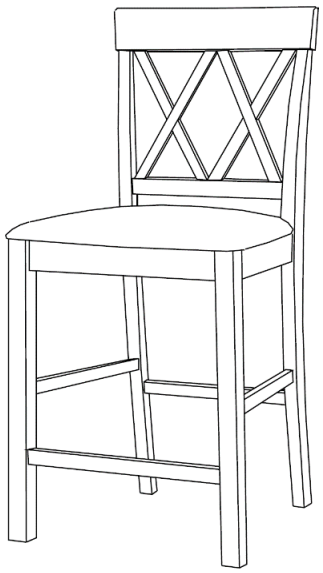


COMPLETE ASSEMBLY

STEP 1

H1 X 2 PCS
H3 X 2 PCS
H4 X 2 PCS

Align seat (P2) to the holes of the Chair Back (P1). Secure middle two holes of the Seat (P2) to Chair Back (P1) by using Bolts (H1) with Spring Washer (H3) & Flat Washer (H4)

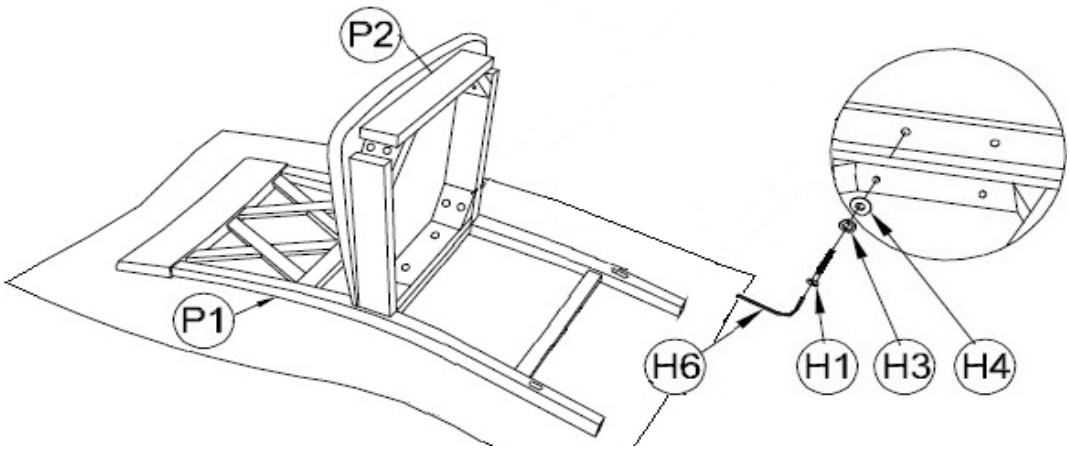

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

ASSEMBLY INSTRUCTIONS

Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

STEP 2

H2 X 4 PCS
H3 X 4 PCS
H4 X 4 PCS

Secure corner holes of the seat (P2) to Chair back (P1) by using bolts (H2) with Spring Washer (H3) & Flat Washer (H4) .

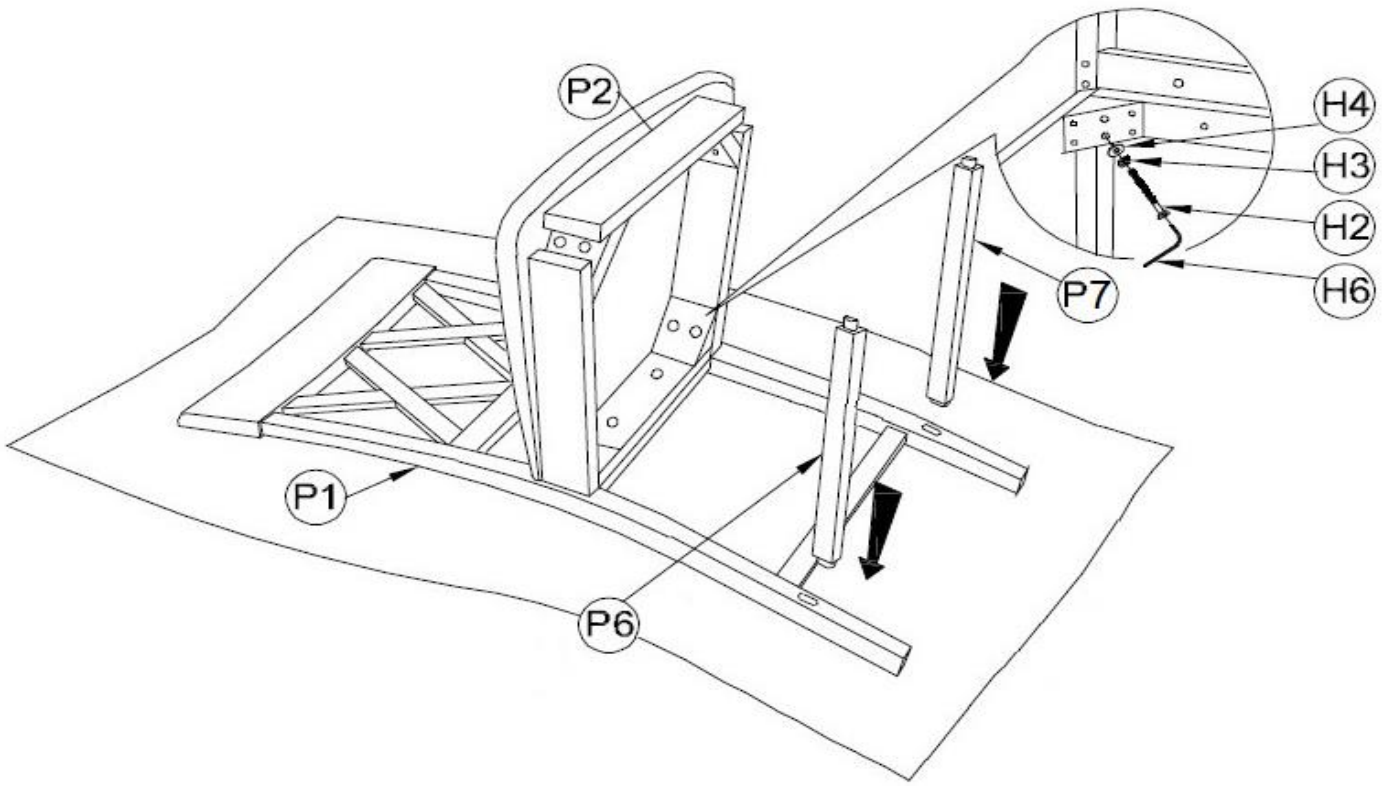

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

ASSEMBLY INSTRUCTIONS

Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

STEP 3


H2 X 4 PCS
H3 X 4 PCS
H4 X 4 PCS

Align Front Legs P3, P4 to the holes of the Seat (P2), then secure by using Bolts (H2) with Spring Washer (H3) & Flat Washer (H4). Make sure that Bolts (H2) is very loose, then align Stretchers P5, P6, P7 to the holes of the legs.Tighten bolts (H2) of the Front Legs P3, P4.

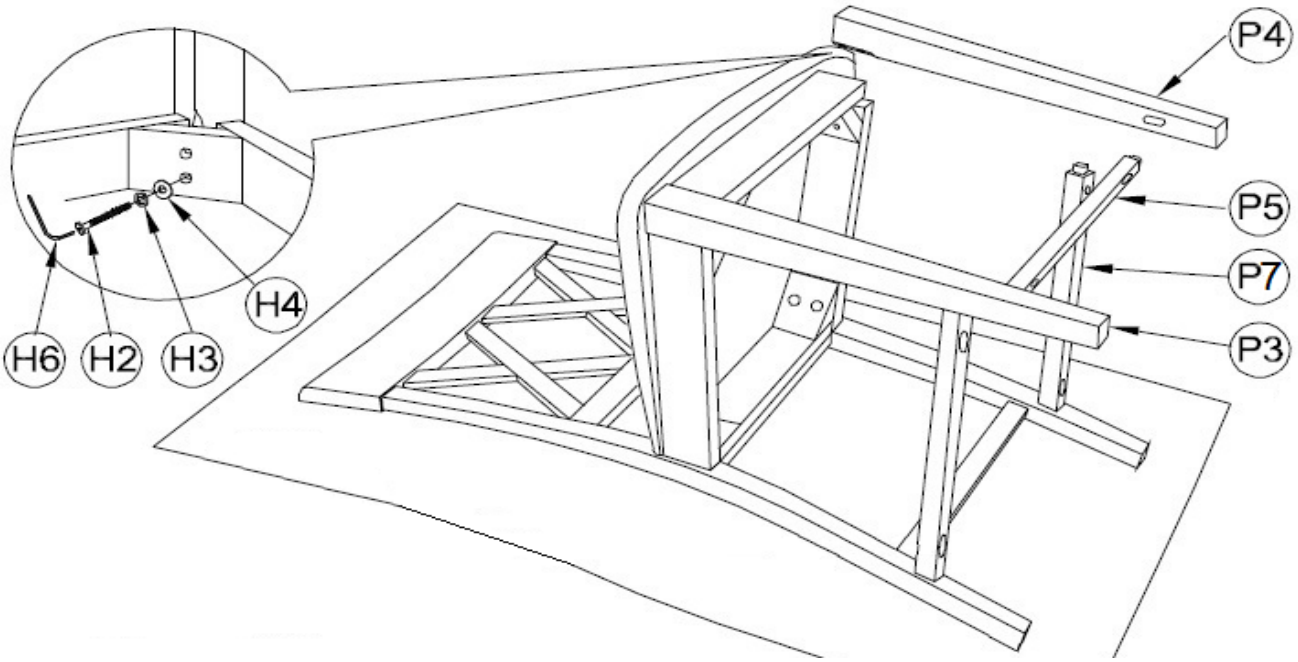

STEP 4

H5 X 6 PCS

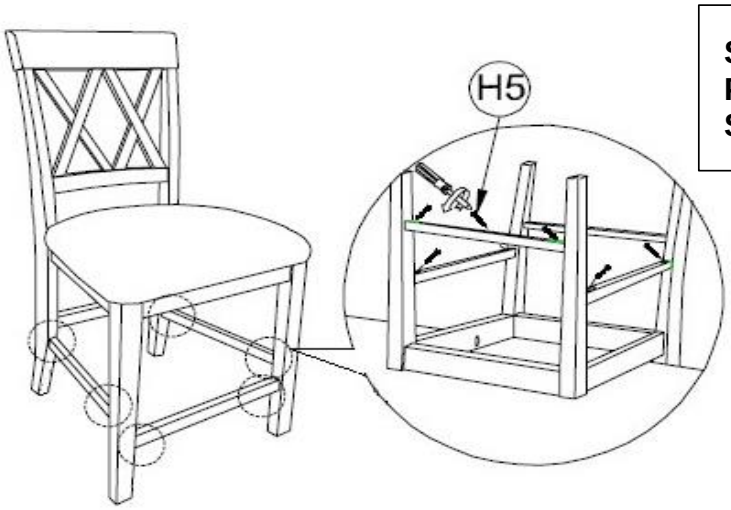

Secure Stretchers P5, P6, P7 by using Screws (H5).

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.
CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.