SKU: HYSB0003



72 HR

***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

Product User Manual
Convertible Futon Sofa Bed



PRECAUTIONS FOR USE

The foam will fully expand in 48-72 hours.
Cold weather may delay the expansion process.
If it hasn't fully expanded after 72 hours.

Please contact us:

Go to "Yours Orders" > Find your order >
Click "Order Issues" > Leave us a message.




CARE INSTRUCTION

The cover material of this product is washable,
but due to the special design, it is almost non-removable.
Therefore, we recommend cleaning it with a dry/wet cloth and using a vacuum cleaner for maintenance.
Please note memory foam NEVER goes in the washer or dryer, so always clean by hand.
Don't scrub the pillow too hard or treat it too roughly;
memory foam is delicate.
Always use gentle cleaning agents;
stay away from anything too harsh.



USE TIP

For using as sofa, lounge and futon shapes (if need), please connect the carabiner to cushion. It will provide better support.

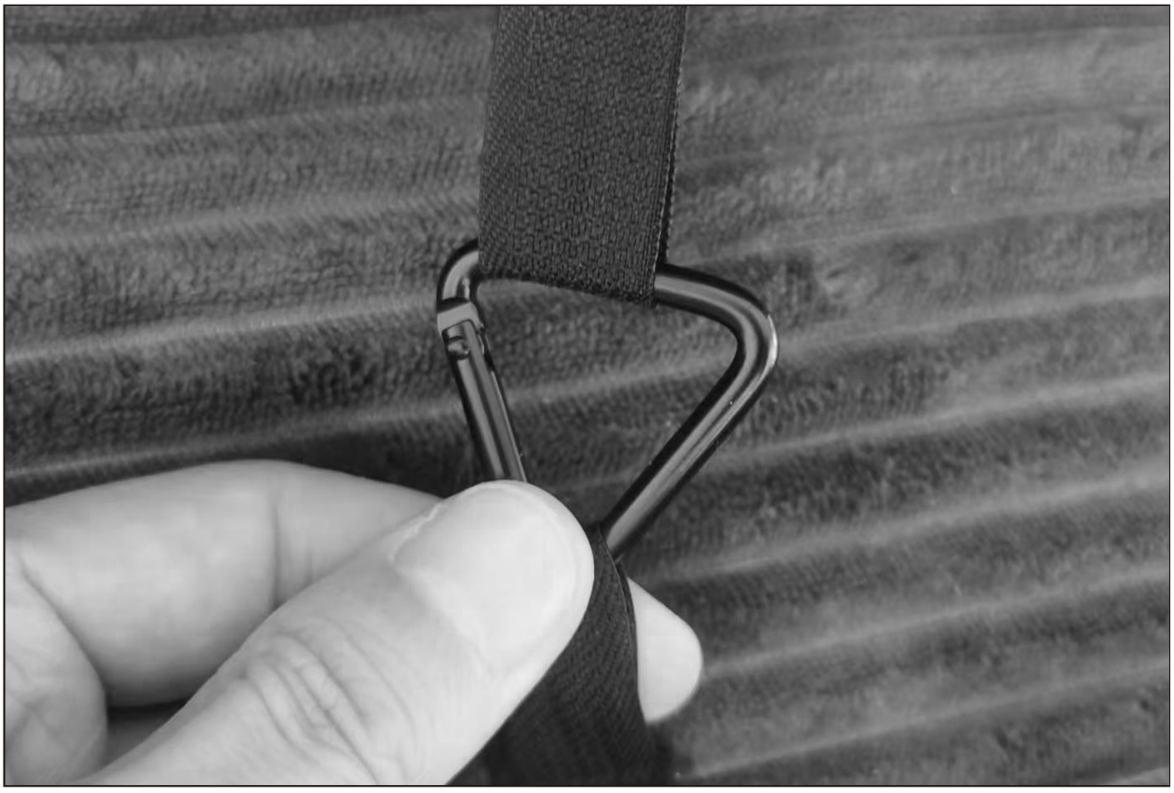

USE SHAPE



1.Sofa Shape



2.Lounge Shape



3.Bed Shape:
Based on lounge shape,
unfasten the carabiner



4.Futon Shape:
Unzipped the zipper
at the middle

PACKING BAG WARNING

The internal packaging of this sofa is a layer of dense plastic film bag. Keep away from small children.

The thin film may cling to nose and mouth and prevent breathing. This bag is not a toy.

UNBOXING NOTICE

We recommend opening the product from the side rather than cutting it open from the front to avoid damaging it.

