140*210mm
191209

OSTBA

HOUSEHOLD USE ONLY


Hong Kong TopChef Appliance Limited
Room P, 4/f, Lladro Centre, 72 Hoi Yuen Road Kwun Tong Kowloon
Website: www.ostba.cc
E-mail: support@ostba.cc

Made In China

OSTBA

Model NO.:ABS06

USER MANUAL

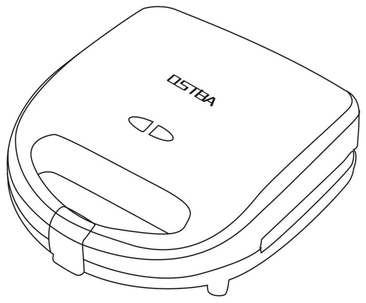

Sandwich Maker

Multi Sandwich Maker

Model: ABS06
Technical Data:
120V~ 60Hz 750W

READ INSTRUCTIONS CAREFULLY:

1. This appliance can be used by children aged from 8 years and above and not persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are being given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
2. Keep the appliance and its cord out of reach of children 8 years and under.
3. The appliance is not intended to be operated by means of an external timer or a separate remote-control system
4. The temperature of the outer surface may be high when the appliance is working. Please do not touch the outer surface with your hand.
5. Never use the appliance if the supply cord is damaged , it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

CLEANING AND MAINTENANCE INSTRUCTIONS

1. Be aware that parts of the appliance become very hot during operation. Make sure that the appliance is switched off, unplugged and wait for it to completely cool down before cleaning or storage.
2. Wipe the cooking surface with a soft damp cloth every time after use. If it is difficult to remove residues, use a little oil can soften it.
3. Do not use any spray-on metal objects as they would damage the non-stick coating
4. In case of any problem, please contact the authorized service center for help

GENERAL SAFETY INSTRUCTIONS

1. Read this instruction manual carefully before operating the appliance for the first time.
2. Keep this instruction manual, the packing and your receipt. If you give or sell the product to third parties, please make sure that you also hand out this instruction manual.
3. This appliance is household use only.
4. Don't use the appliance outdoors. Keep it away from sources of heat, direct sunlight, open fire or high humidity and never operate it with wet hands
5. Always pull the plug from the power socket when you do not use and clean it.


6. Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances. Make sure that cables are not hanging down and children do not touch the appliance. Do not immerse the appliance to water or other liquids.
7. Never use the appliance if it is damaged.
8. If the supply cord is damaged .it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
9. Do not try to repair the appliance on your own. Always contact our service agent to repaired or replaced.
10. The appliances are not to be used by children (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
11. This appliance is intended to be used in households and similar applications such as kitchen areas.
12. WARNING: This electrical appliance contains a heating function surfaces, also different than the functional surfaces can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment shall be used with CAUTION. The equipment shall be touch only at intended handles and gripping surfaces and use heat protection like gloves or similar. Surfaces other than intended gripping surfaces shall get sufficient time to the cool down before getting touched.

SAFETY INSTRUCTIONS:

1. Always operate the appliance on an even surface. Make sure that there is enough ventilation so that the hot steam can evaporate.
2. To avoid the danger of fire , never leave the appliance unattended.
3. Before connecting the power supply make sure the heating plates are in a closed position.

PARTS IDENTIFICATION

1. Always operate the appliance on an even surface. Make sure that there is enough ventilation so that the hot steam can evaporate.
2. To avoid the danger of fire , never leave the appliance unattended.
3. Before connecting the power supply make sure the heating plates are in a closed position.

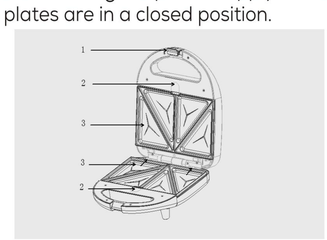

1. Lock
2. Spring latches
3. Removable cooking plates

OPERATING INSTRUCTIONS

1. Uncoil the cable completely
2. Check if the heating plates are clean and dust-free. If necessary, wipe them with a damp cloth
3. Place the appliance on a flat, level surface and make the locking hook open
4. This appliance incorporates an interchangeable cooking plate. Choose your desired cooking plate, which is depends on the task to the performed.
5. Open the appliance.
6. Insert top and bottom cooking plates into the appliance and push the backward Spring latches until they slide into place.
7. Snap cooking plates into place by pushing back the spring latches on the top and bottom cooking plates and releasing them into the slots on the cooking plates.
8. Close the appliance. Connect the plug into a rated voltage supply and the cooking surface begins pre-heating and the red and green lamp will be illuminated at the same time. Once the cooking surface has reached the preset temperature (usually it will take about 3~4 minutes) the green lamp will not be illuminated and this food is ready to be cooked.
6. Open the appliance and place your food on the lower plate. Close the appliance, at this time, the red lamp will be illuminated again.
7. After baking about 6~8 minutes, open the appliance to remove your food with a wooden or plastic spatula. Of course you can adjust the time to suit an individual taste, different food types will vary and also the thickness of one's taste.

8. After toasting, open the lock to remove your food with a wooden or plastic spatula.
9. After use please unplug the power supply and open the upper lid to get cool.

CAUTION:

1. The first heating process should take place without any foods, let it heat about ten minutes. There may be a slight smoke or smell, it is normal and harmless.
2. Before unplugging the plug, a Green lamp will be on and off during power.
3. If too much food is inserted into the appliance and the sandwich toaster cannot be closed, never close it with undue force as this could damage the lock.
4. Never use a sharp fork or knife to remove the food as this would damage the non-stick coating of the cooking surface. Use heat-resistant wood or plastic utensils only.

5. Always unplug the appliance from the power socket when not in use.

Correct Disposal of this product:

	This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.