
Foldable Mini Washer

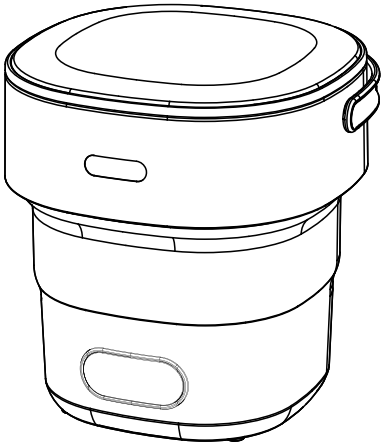

Instruction Manual

Please read this instruction manual carefully before using the product and keep it for future reference.

Notes


Thank you for choosing our products. Please read the instruction manual thoroughly before using the products.

Product Technical Parameters

Product Name	Foldable Mini Washing Machine	Rated Voltage	12V
Rated Power	22W	Capacity	13L
Waterproof Level	IPX4	Maximum Holding Weight (dry clothing)	0.4 KG

Operating Instruction

1. Rinsing / Washing Washing Mode Operating Instruction

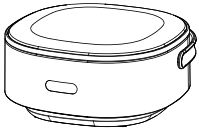

Folding Status


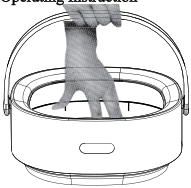


Figure 1

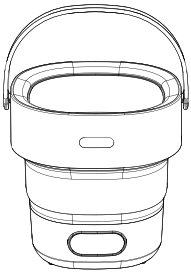

Unfolding Status

1.1 Unfold the folded washing machines: Firstly, remove the cover from the top of the machine. Pull the handle upward with one hand and press the bottom of the washer downward with the other hand to unfold the machine (Figure 1).

1.2 Take out the drain hose at the bottom of the machine. Make sure the drain valve of the drain hose is properly closed (Figure 2).

1.3 Add appropriate amount of water and laundry detergent into the machine, please make sure that the overall amount of water does not exceed the maximum water level (signaled by the max water level line).

1.4 Plug the power adapter into the power socket on the back of the machine and switch on the machine. (Figure 3).

1.5 Press the ON/OFF button on the panel and select the desired laundry mode (Figure 4).

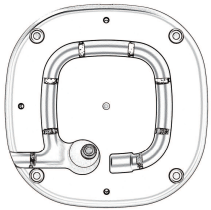


Figure 2


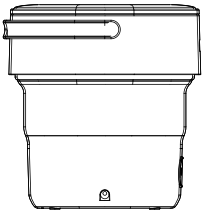


Figure 3

Operating Instruction

2. Panel Operating Instruction

Figure 4

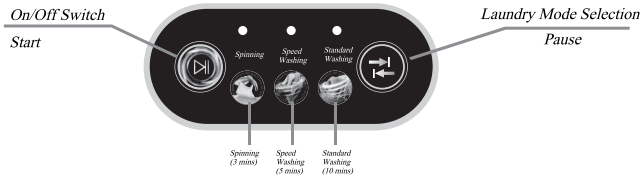

3. Spinning Mode Operating Instruction


3.1 Firstly, open the drain valve of the machine drain and connect the drain to the sewer.

3.2 Take out the drainage basket and assemble it properly as shown in the picture. (Figure 5).

3.3 Install the drainage basket inside the machine with the basket properly fit into the jacks (Figure 6).

3.4 Put the clothes to be dehydrated into the drainage basket and put the cover back.

3.5 Turn on the power, press the ON/OFF switch/start button on the panel, and select the spinning mode. Wait for 2 seconds and the machine will then automatically enter the spinning mode.

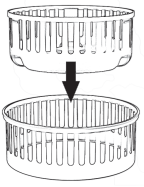

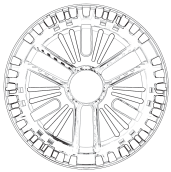


Figure 5



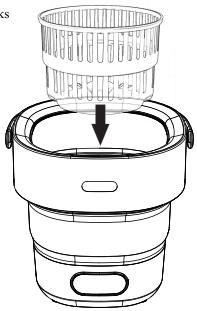


Figure 6

Folding for Storage

Slightly press both sides at the same time and squeeze the machine into fold-able status.

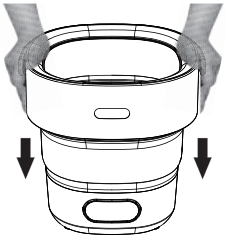

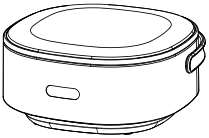

Safety Precautions

1. Do not use the portable folding washing machine to wash clothes that have been contaminated by gasoline, paint, preservatives or acid or alkali chemicals.
2. Please choose the appropriate stain removing detergent. When using stain removing detergent, please take care to prevent the detergent from splashing into the eyes. If accidents happen, please wash it with water immediately.
3. Regularly wipe the plug with a dry cloth (dust accumulation or moisture, etc., may cause poor contact); Children must be kept away from powdered detergents for washing machines.
4. Do not tilt or move the machine while it is running (water leakage may occur).
5. Do not touch the power plug with wet hands.
6. Do not pull out the socket with the cord in your hand.
7. Do not store gasoline or other flammable gases and liquids near the washing machine (to avoid fire).
8. Do not splash or pour water on the lower body of the washing machine (which may lead to the machine not working due to poor electrical performance).
9. Do not pour hot water higher than 60 degrees directly into the washing machine when washing clothes (to avoid deformation of the product due to high temperature heat, Overheating could result in malfunction).
10. In the process of use, please make sure to complete the current washing program. Only cut off the power when the program finishes. Sudden cut-off of power will cause damage to the performance of electrical accessories.

-This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
-Children shall not play with the appliance.
-Cleaning and user maintenance shall not be made by children without supervision
-the appliance is only to be used with the power supply unit(model:GKYZD0200120EU) provided with the appliance.

Warranty

Thank you for choosing our product.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. Please kindly keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. No replacement could be provided if it is lost. For products that have exceeded the warranty period or defects that are not covered by the warranty, we will inspect the product and decide whether to repair or replace the parts, and we will charge a fee for each repair and replacement service as appropriate.

Product Item No.	Customer Name
Product Serial No.	Contact Person
Date of Warranty	Address
Date of Purchase	Telephone
Repairing Record	