
ASSEMBLY INSTRUCTIONS

Corner Display Cabinet

MODEL CC-B0011

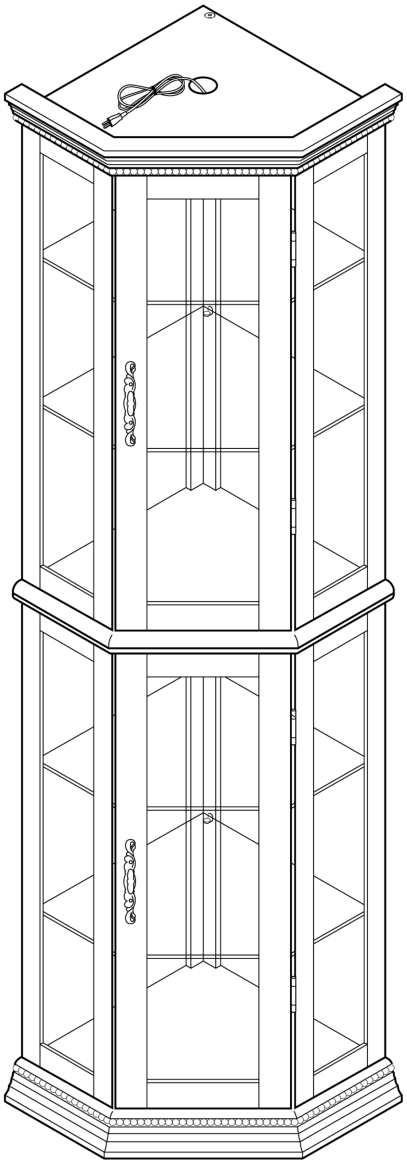

2 ADULTS
Assembly and lifting

20 STEPS
Follow in order

KEEP THIS GUIDE
For future reference

Parts: pages 3-6 | Assembly: pages 7-26 | Care: page 27

GET READY

Before You Begin

01 Work with two adults on a clean, soft, level surface. Keep children and pets away from loose hardware and packaging.

02 Check all parts and hardware before starting. Do not assemble the cabinet with missing parts or damaged glass. Keep packaging until assembly is complete.

03 Use a manual Phillips screwdriver and the included hex key D for cabinet fasteners. Use a drill only for wall fixing, with fixings suitable for your wall.


04 Keep both lights unplugged during assembly. Align the panels before tightening, and keep cords clear of edges and joints.

05 Secure both anti-tip straps to the wall before using or loading the cabinet.

PARTS & HARDWARE

Identify Your Parts

1. Match the numbered parts below to the parts list.
2. Upper support bar: 7. Lower support bar: 12. Keep these parts separate.

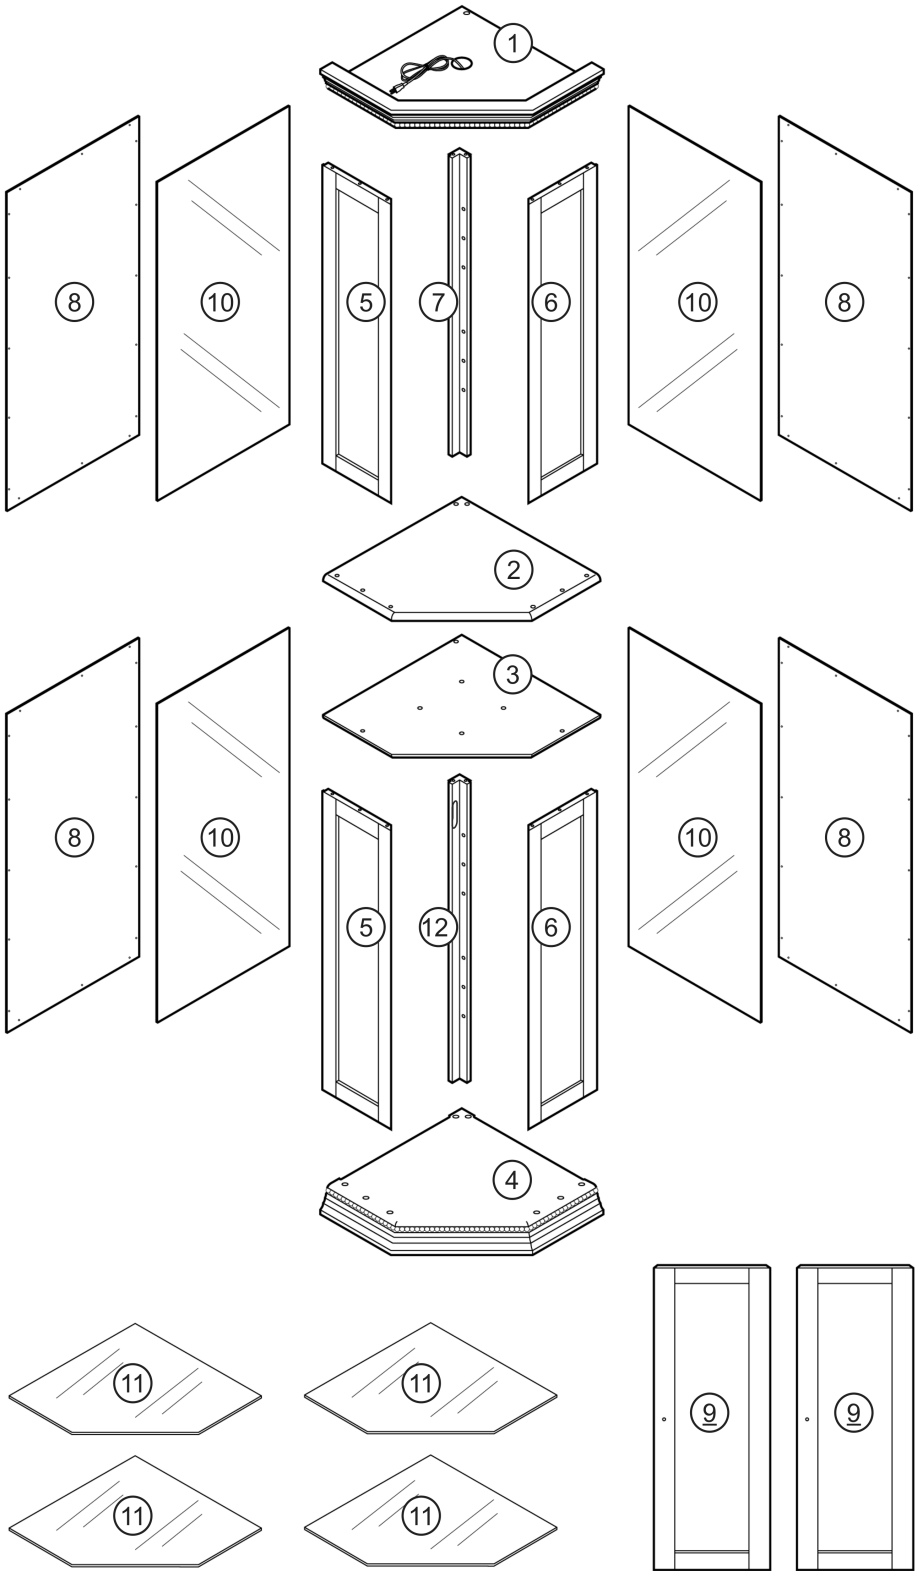

PARTS CHECKLIST

Check the Cabinet Parts

Match each part number and quantity before assembly.

PART	DESCRIPTION	QTY
1	Upper top panel	1
2	Upper bottom panel	1
3	Lower top panel	1
4	Base	1
5	Left side panel	2
6	Right side panel	2
7	Upper support bar	1
8	Back panel	4
9	Door	2
10	Mirror panel	4
11	Glass shelf	4
12	Lower support bar	1


KEEP THE SUPPORT BARS SEPARATE

Part 7 is for the upper cabinet. Part 12 is for the lower cabinet.

PARTS & HARDWARE

Hardware Checklist | A-K


1. The quantity after the plus sign is spare hardware.
2. Keep each hardware code in a separate group. Drawings are not actual size.

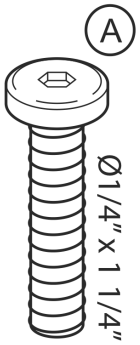

12x + 1x




2x

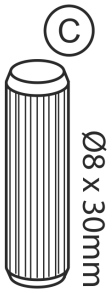


20x + 2x



1x

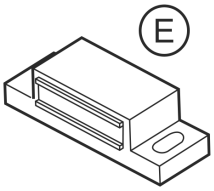

2x

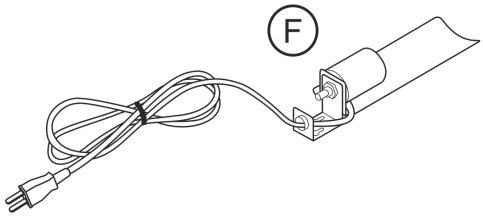


2x



2x



2x

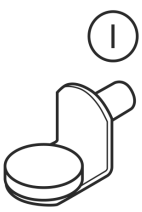

20x + 2x



20x + 2x



6x

PARTS & HARDWARE

Hardware Checklist | L-U


1. M: 64 required + 4 spare.
2. Keep dowels B and C, and bolts A and S, separate; their lengths differ.




2x




64x + 4x

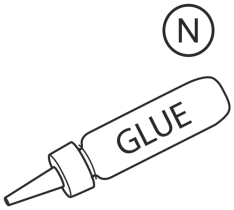

1x

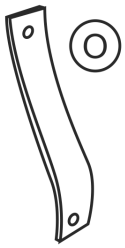


2x




2x




2x




4x

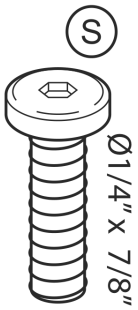

2x

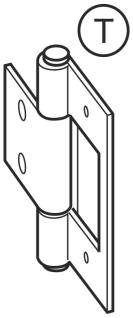

4x

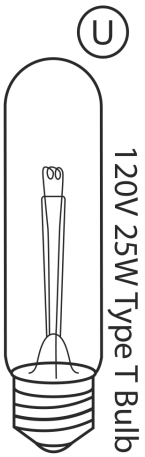


2x

STEP

01 Attach the Handles

1. Attach one handle G to each door 9 with one screw L.
2. Keep both doors supported on a soft surface.

G × 2 | L × 2

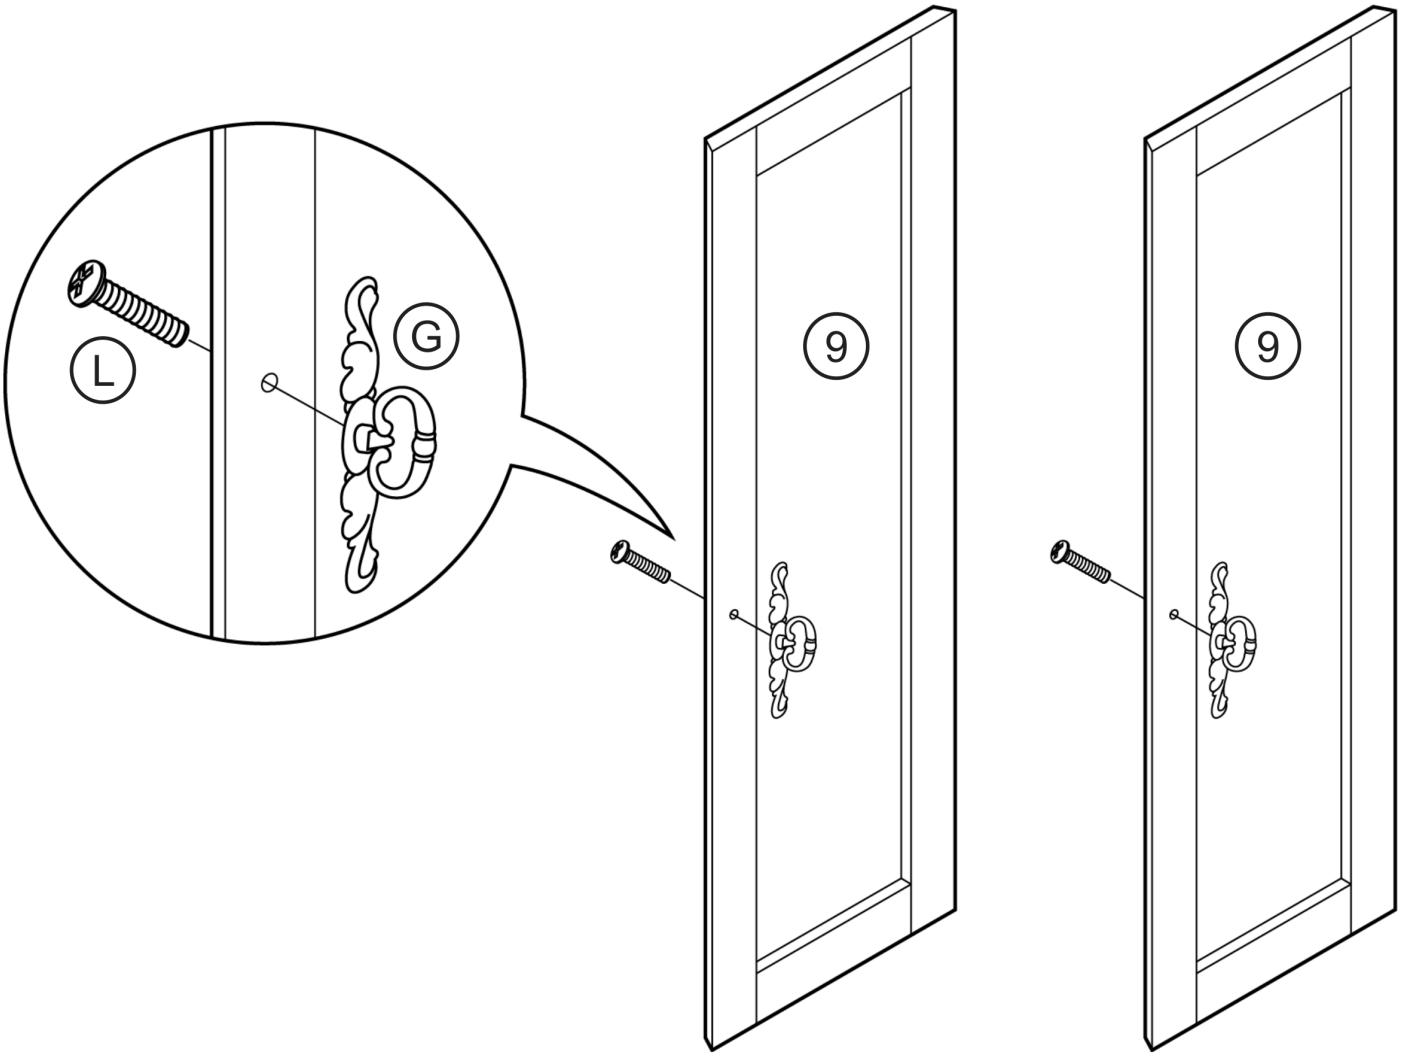

ASSEMBLY CHECK


Keep both doors flat on a soft surface while fitting the handles.

STEP 02

Attach the Catch Plates

Attach one catch plate H to each door 9 using one screw K.

H × 2 | K × 2

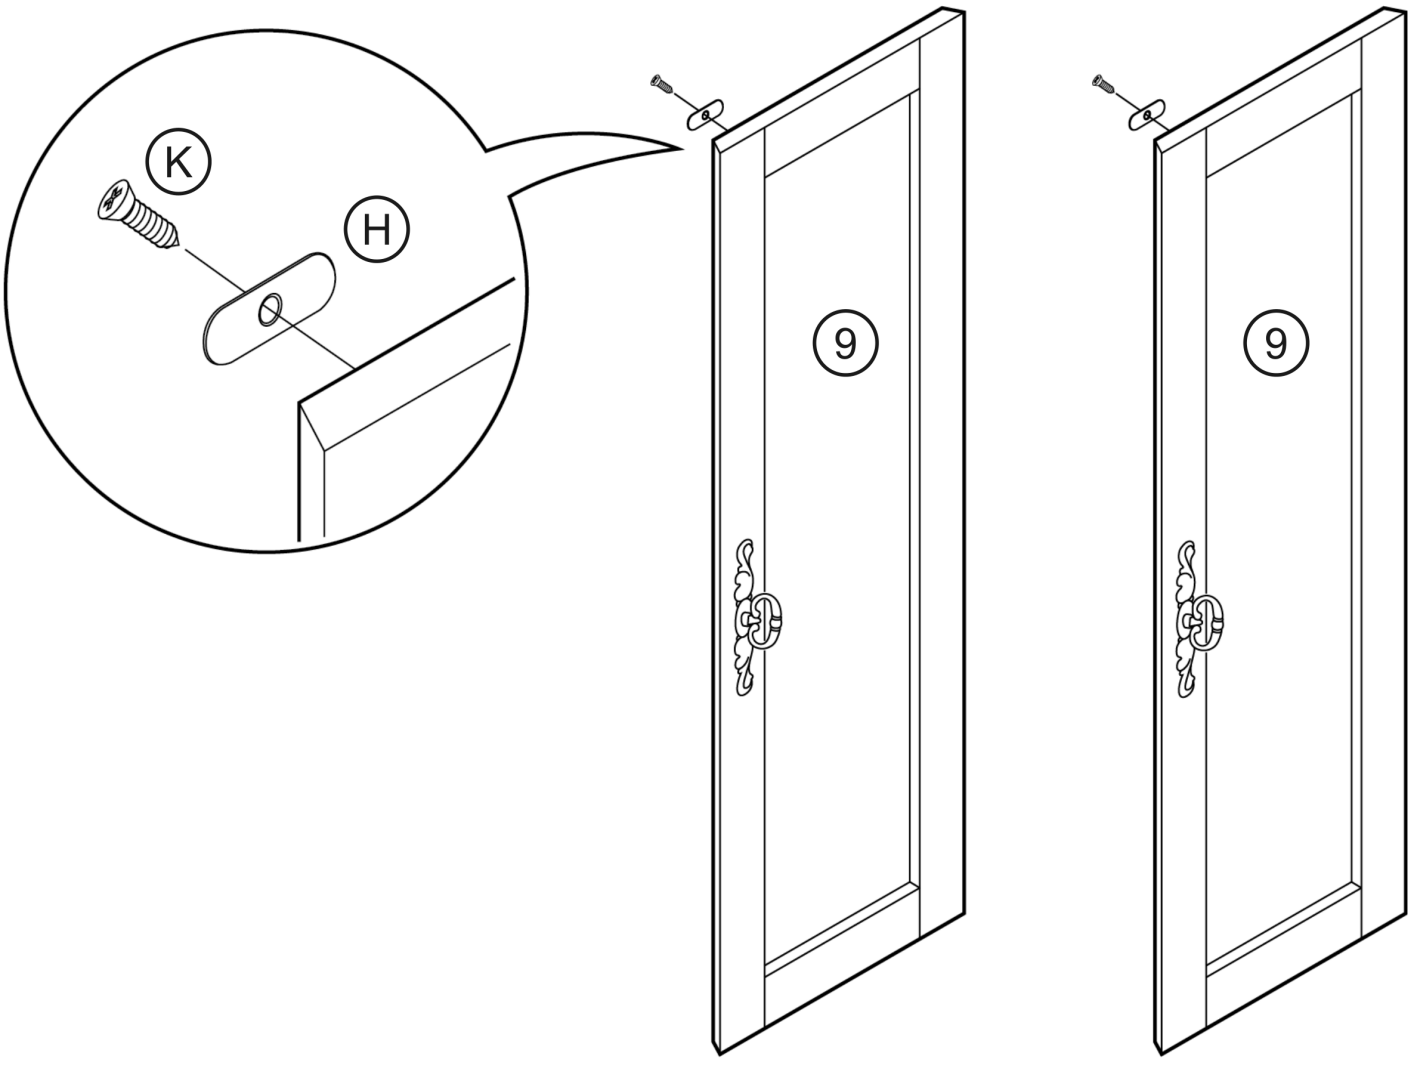

ASSEMBLY CHECK


Use one plate and one screw per door. Tighten with a manual screwdriver.

STEP

03 Attach the Upper Magnetic Catch

Attach catch E to the underside of upper top panel 1 using two screws J.

E × 1 | J × 2

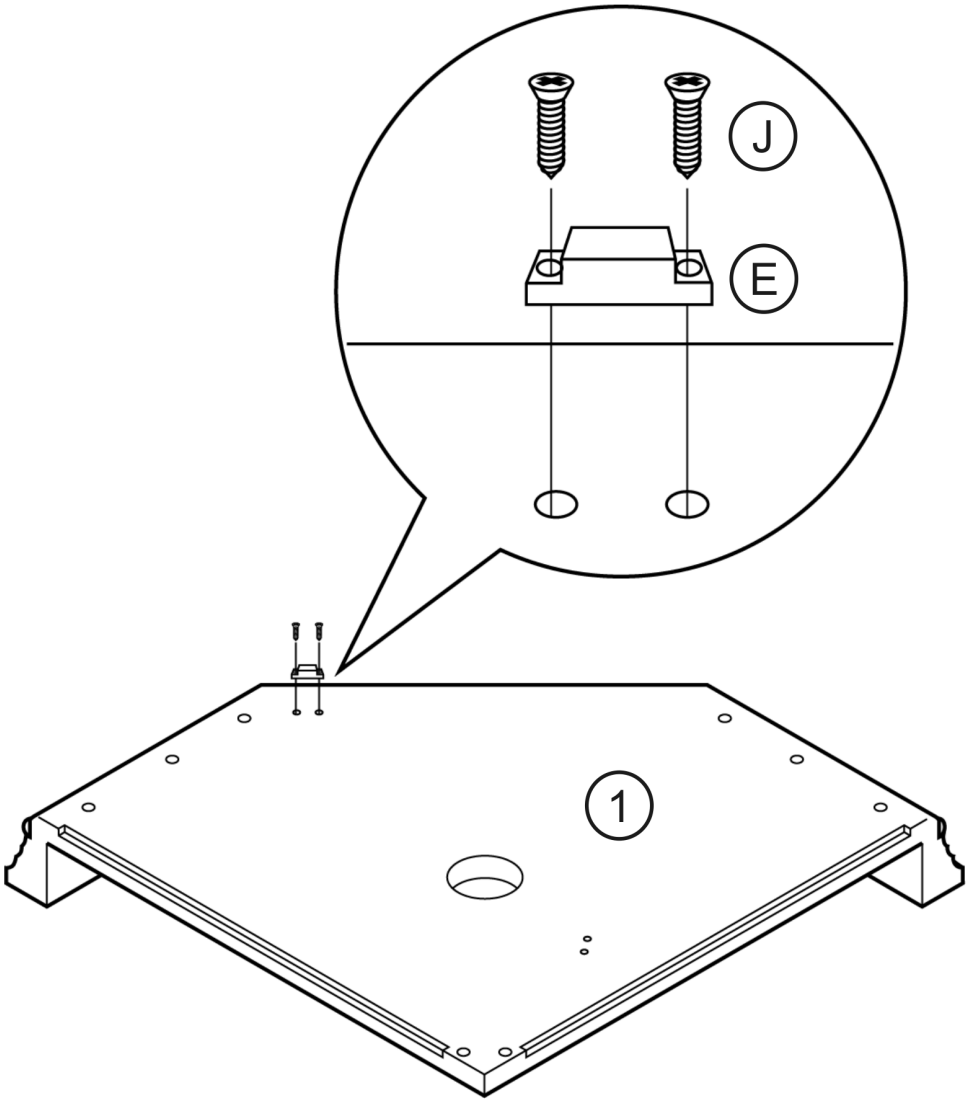

ASSEMBLY CHECK


Fit the catch to the underside of panel 1 in the orientation shown.

STEP

04 Fit the Upper Light

1. With the cord unplugged, attach light socket F to the underside of panel 1 using two screws K.
2. Install bulb U (120 V, 25 W, Type T). Follow the rating marked on the supplied socket.

F × 1 | K × 2 | U × 1

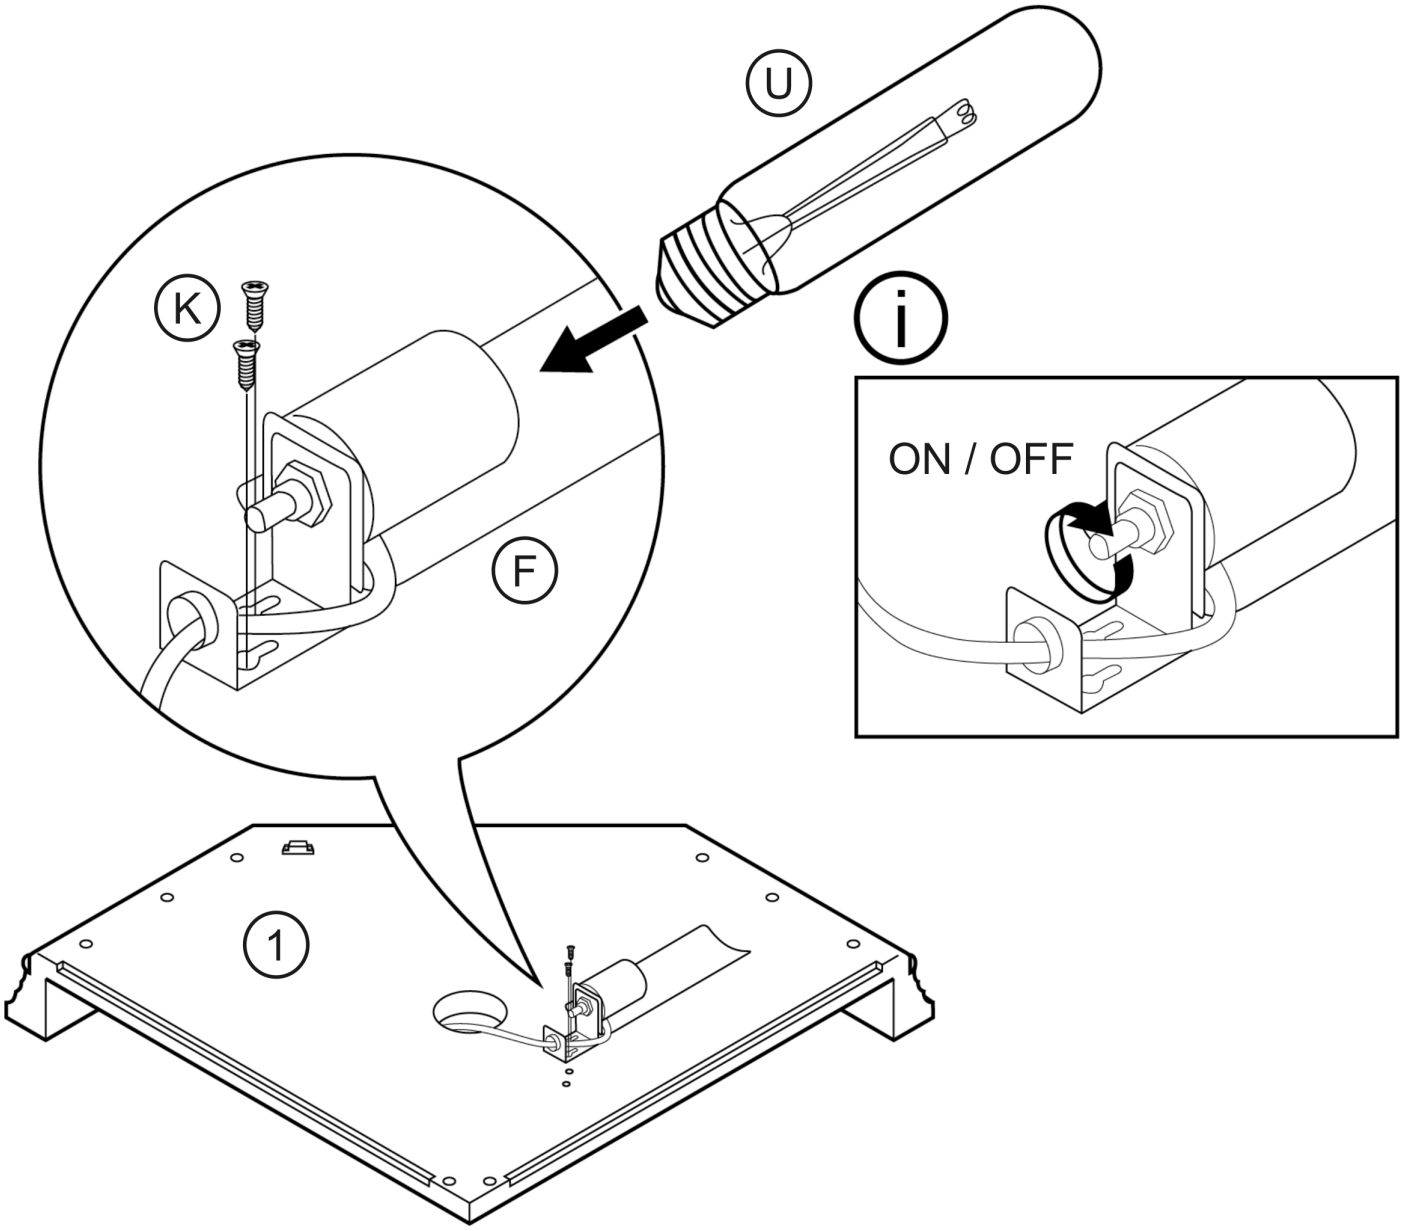

ASSEMBLY CHECK


Keep the light unplugged. Turn the bulb gently into the socket; do not force it or exceed the fixture rating.

STEP

05 Attach the Lower Magnetic Catch

Attach catch E to the underside of lower top panel 3 using two screws J.

E × 1 | J × 2

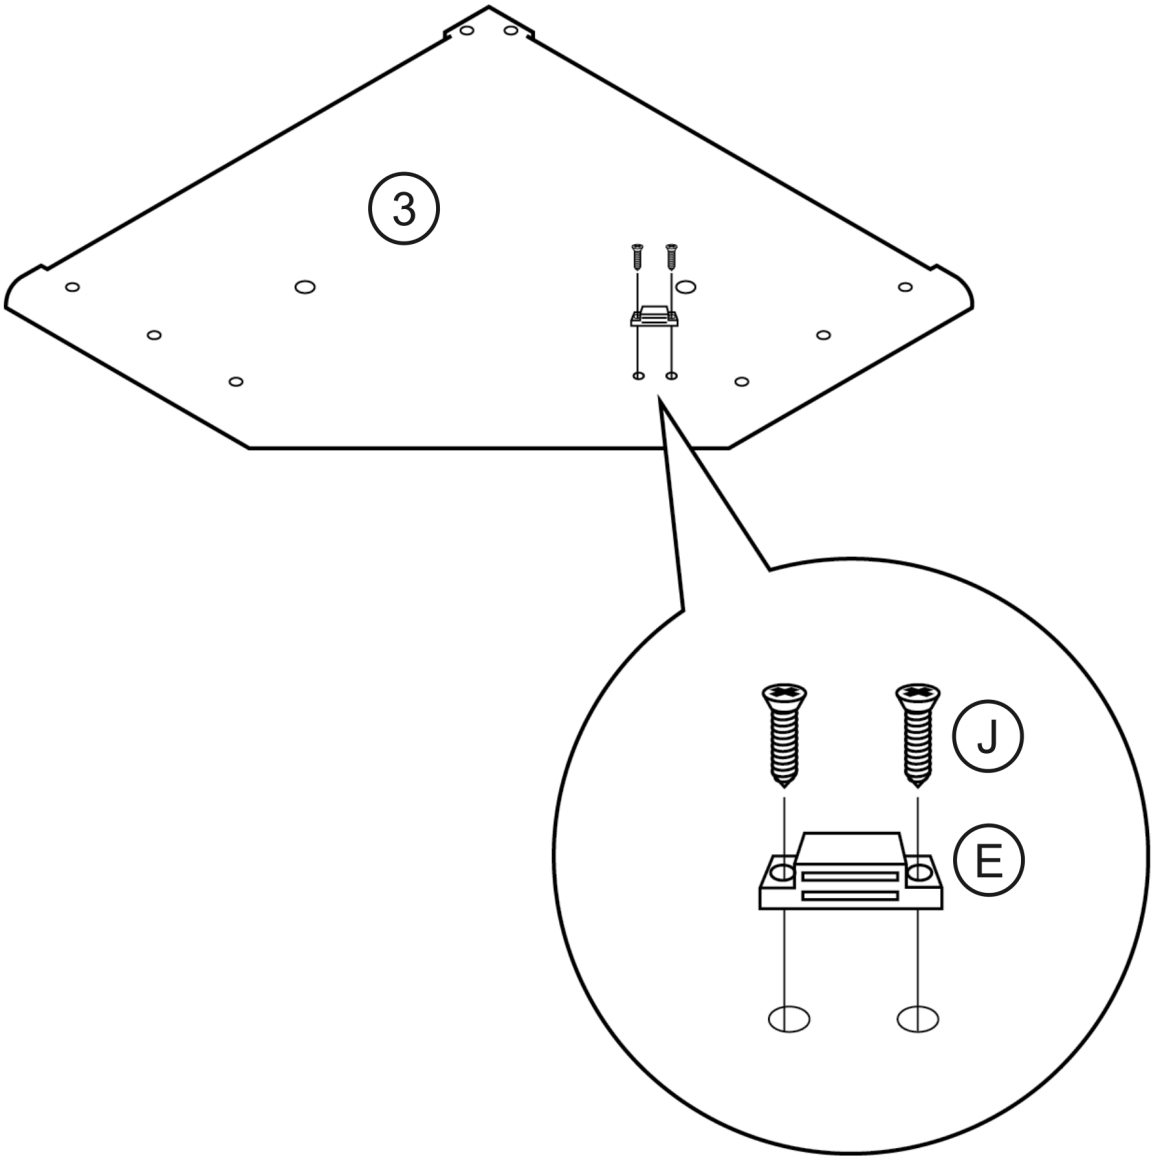

ASSEMBLY CHECK

This catch fits the underside of lower top panel 3.

STEP


06 Install the Lower Light

1. With the cord unplugged, attach socket F under panel 3 using two screws K.
2. Install bulb U without overtightening.

F × 1 | K × 2 | U × 1


PANEL 3 / UNDERSIDE

Keep the light unplugged.

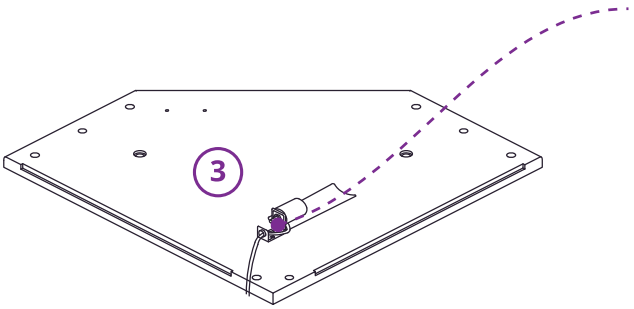

Route the cord clear of edges and joints.

LIGHT ASSEMBLY

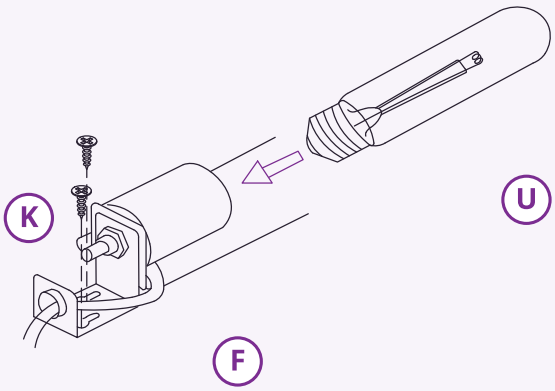

01 Fasten socket F with screws K × 2.

02 Screw bulb U into the socket.

F × 1 K × 2 U × 1

ASSEMBLY CHECK

Keep the light unplugged and route the cord clear of panel edges and joints.


07

STEP

Build the Upper Frame

1. Join panels 5 and 6 and upper support bar 7 to panel 2.
2. Use five dowels C, glue N at the dowel joints shown, and three bolts A.

A × 3 | C × 5 | Glue N | Hex key D

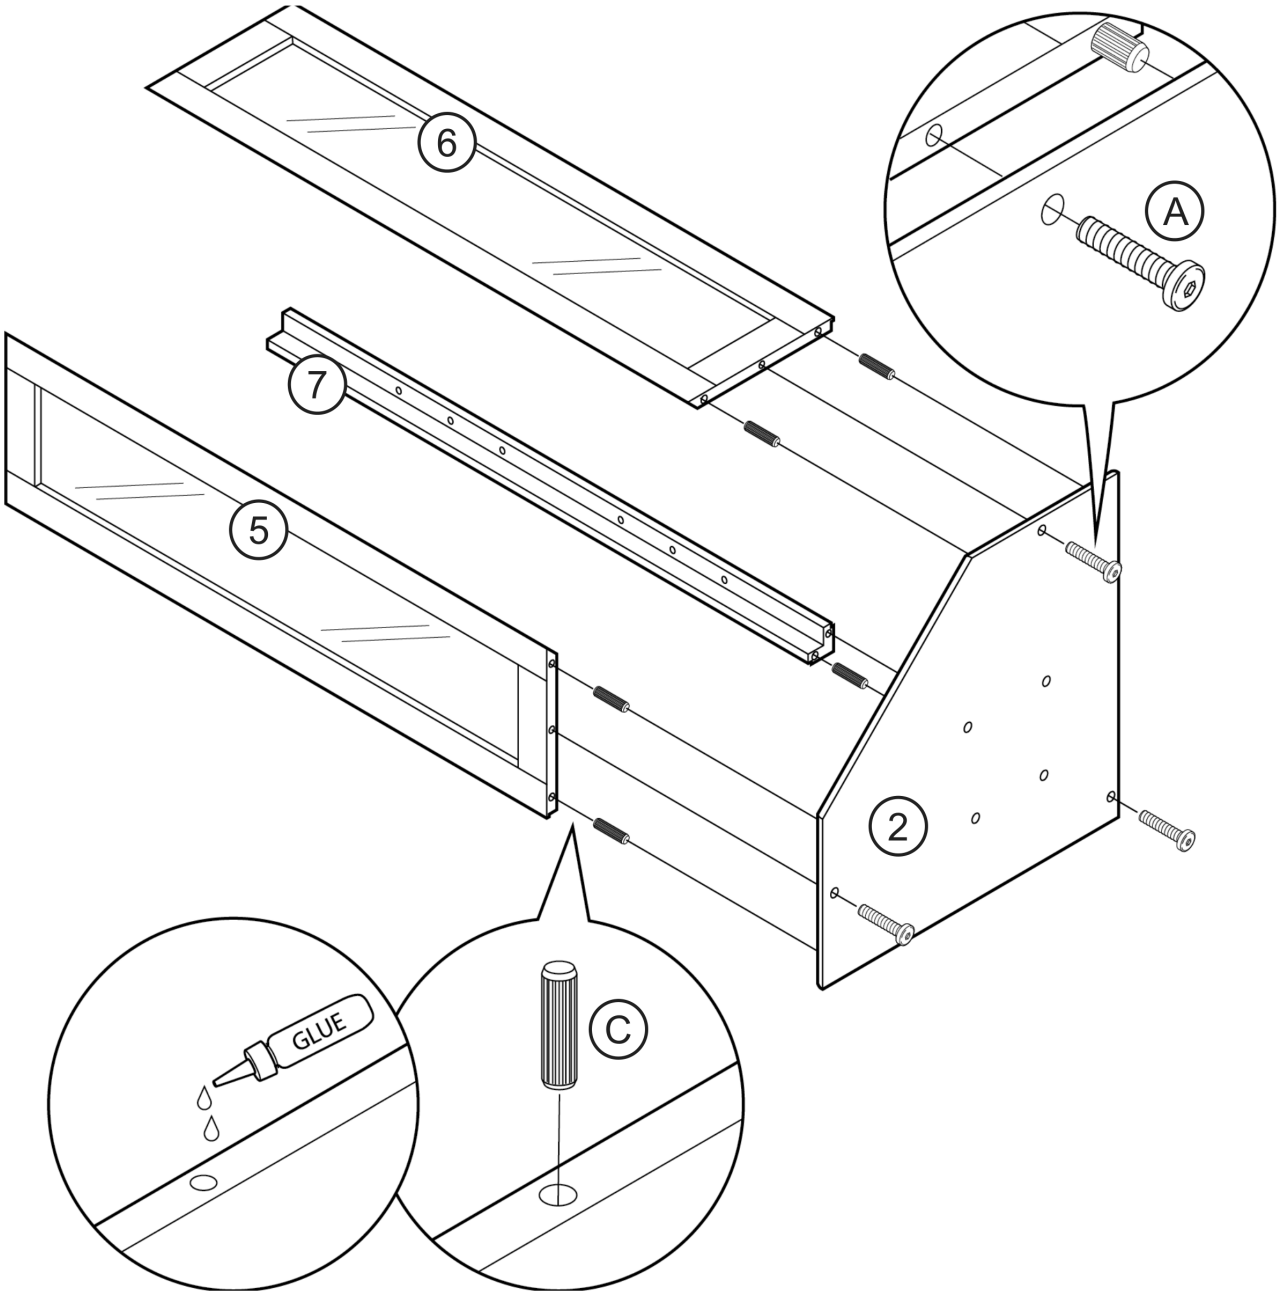

ASSEMBLY CHECK


Use upper support bar 7. Match the orientation and drilled edges shown.

STEP

08 Fit the Upper Top

1. Attach panel 1 using five dowels C, glue N at the dowel joints, and three bolts A.
2. Keep the light cord clear of the joints.

A × 3 | C × 5 | Glue N | Hex key D

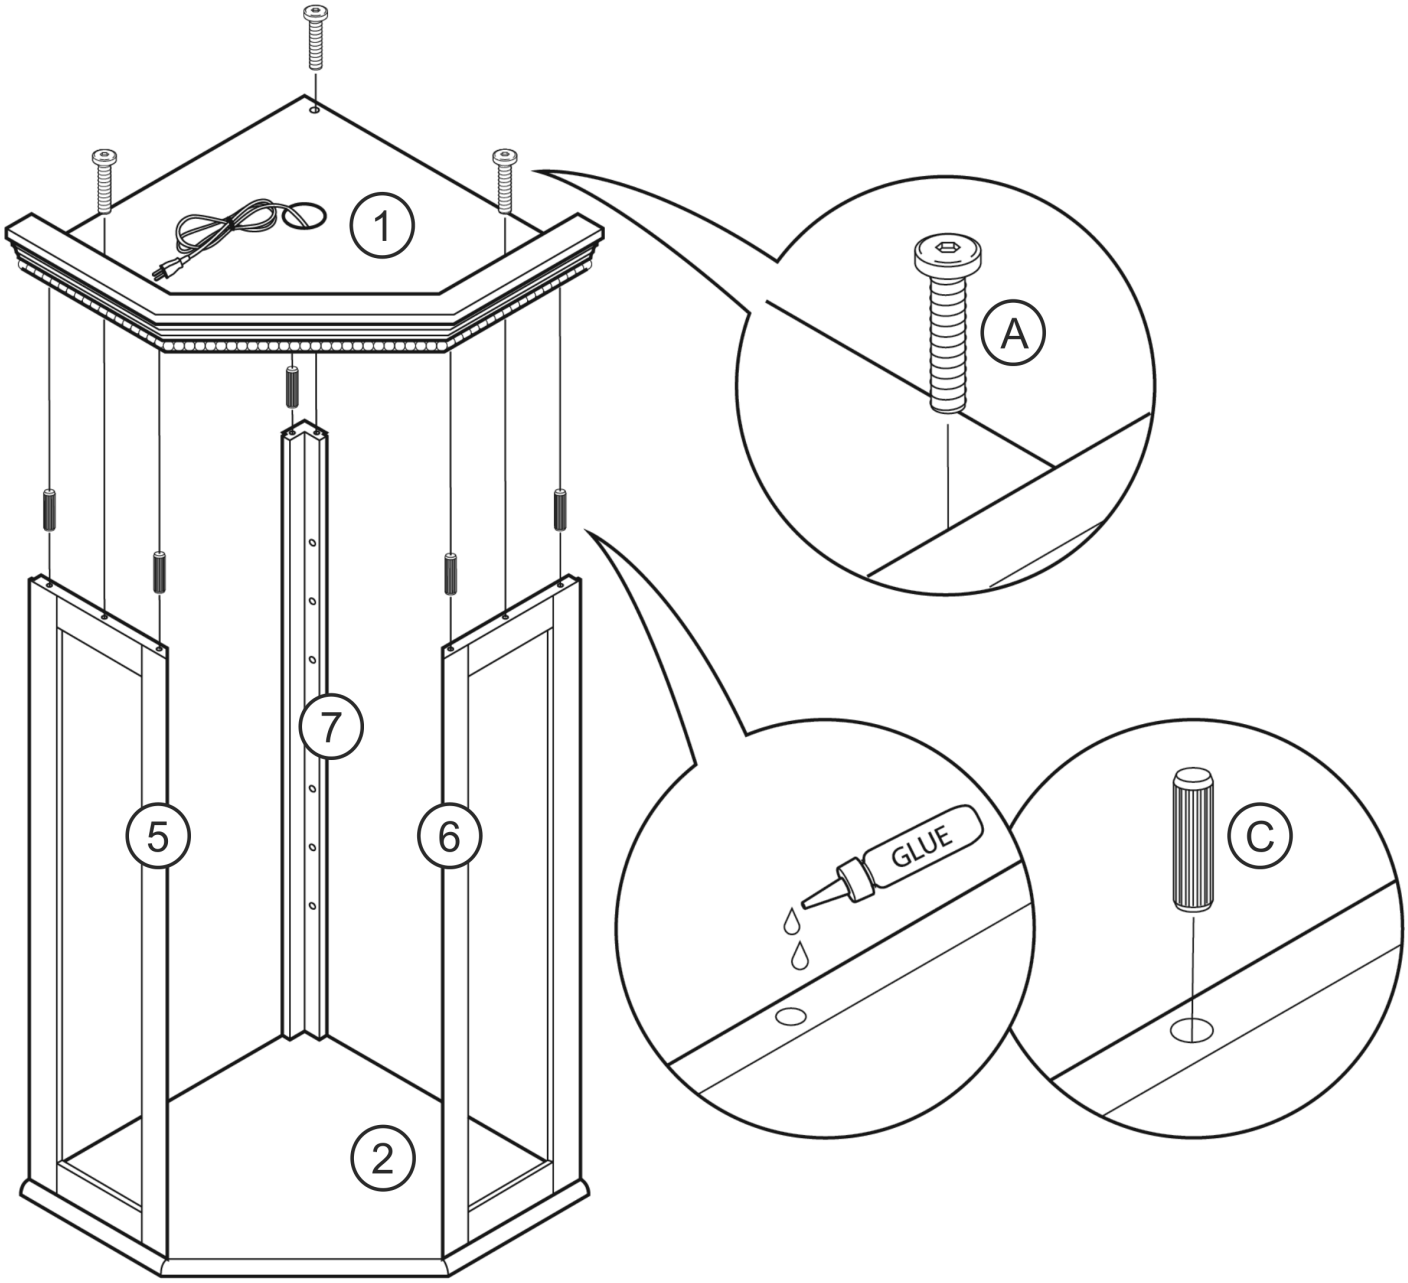

ASSEMBLY CHECK


Before tightening, check that each dowel is seated and the light cord is not trapped.

STEP 09

Fit the Upper Mirrors and Backs

1. Remove the protective film from two mirror panels 10. Fit the mirrors with the reflective sides facing the cabinet interior, then place two back panels 8 over them.
2. Secure the backs with 32 screws M in total. At the two strap positions, pass the screws through washers R and anti-tip straps O as shown.

M × 32 | O × 2 | R × 2

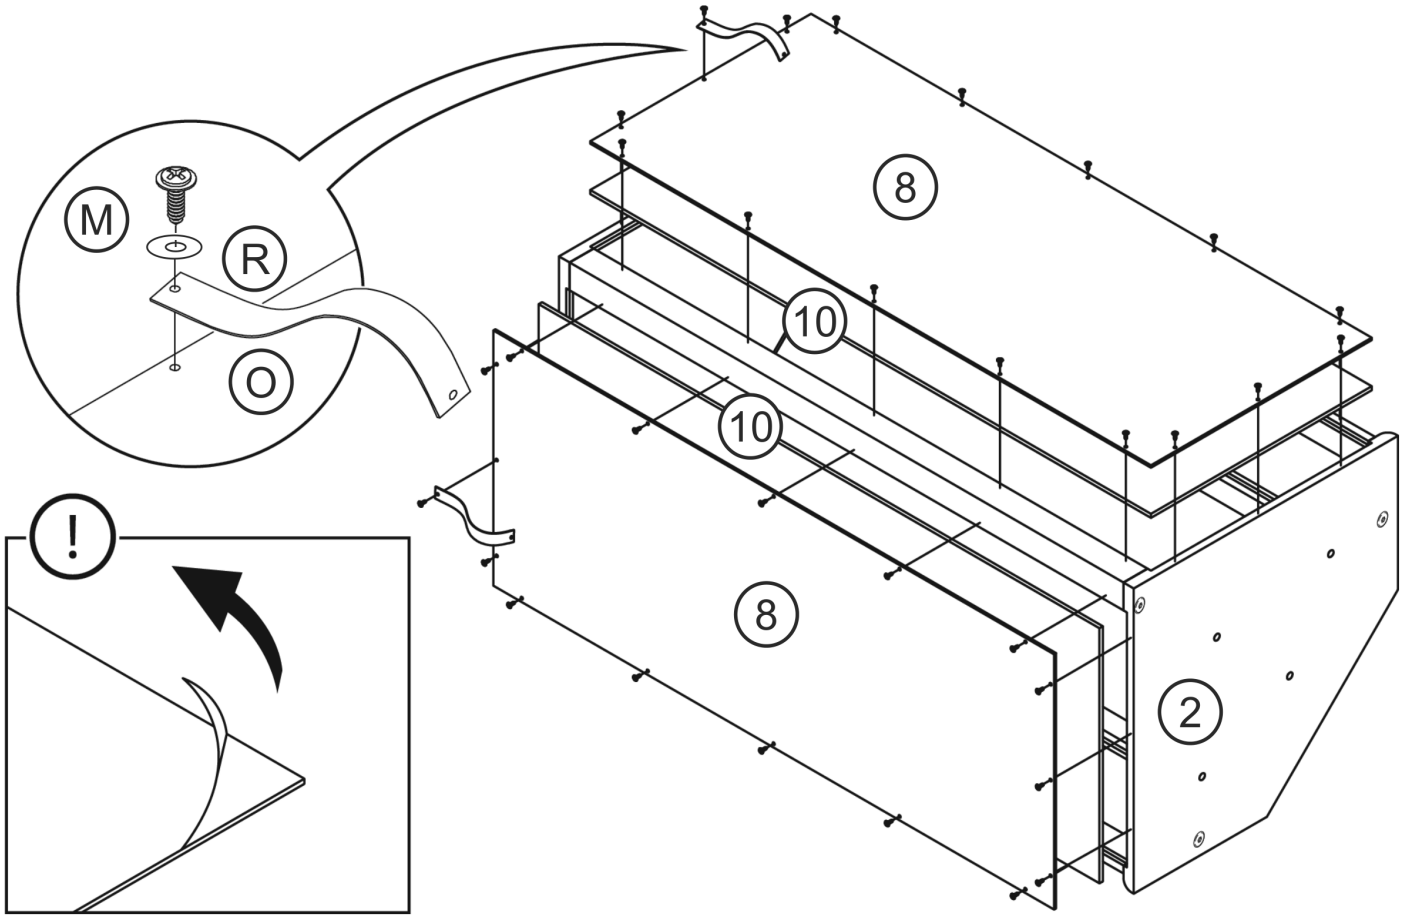

ASSEMBLY CHECK


The 32 screws include the two cabinet-side strap fixing points. Do not add two extra screws.

STEP 10

Fit Hinges to the Upper Door

Attach two hinges T to door 9 with four screws J.

J × 4 | T × 2

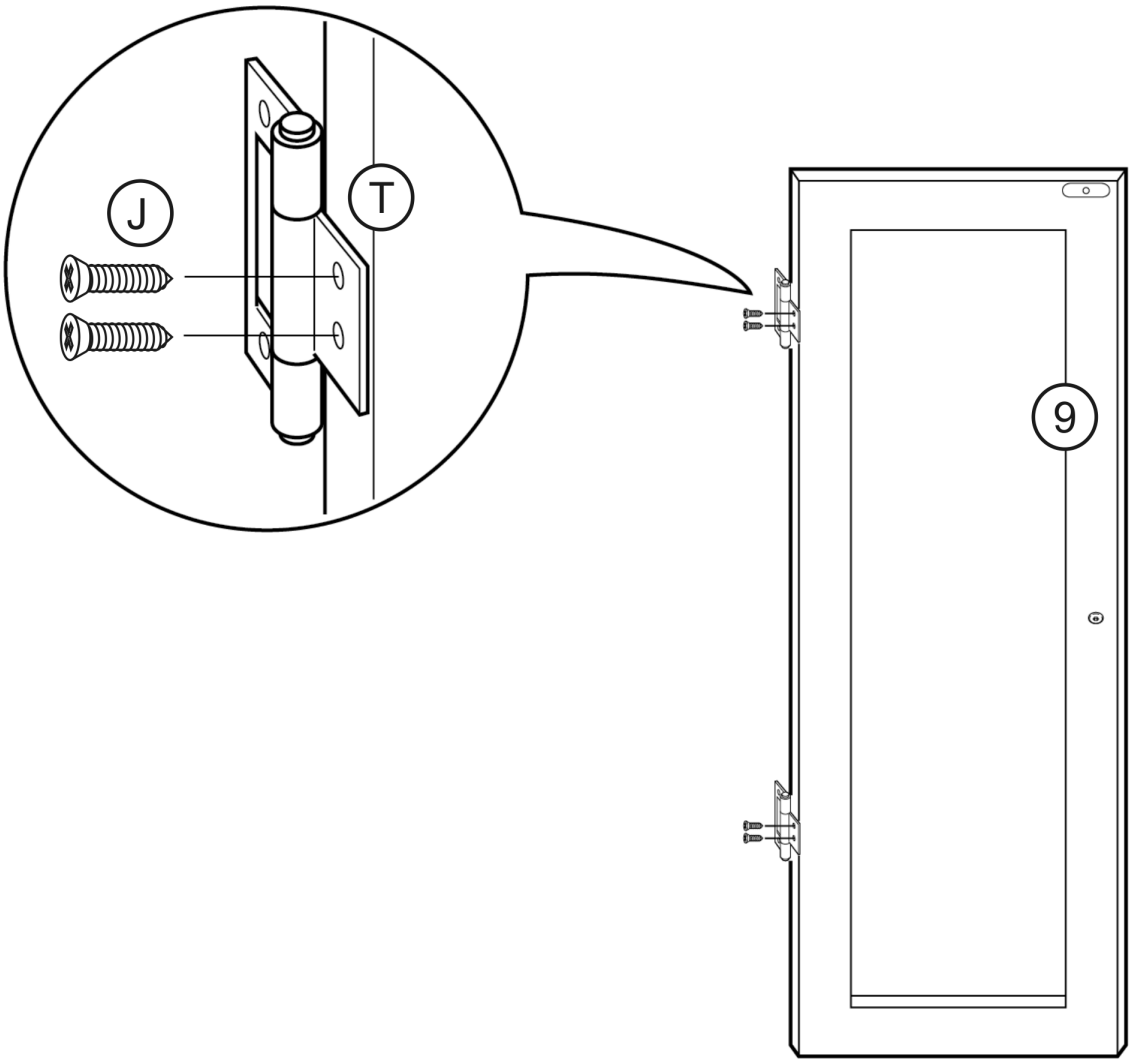

ASSEMBLY CHECK


Match the hinge orientation shown before tightening the screws.

STEP

11 Hang the Upper Door

1. Support the door while fixing the hinges to the upper cabinet with four screws J.
2. Check that the door opens and closes freely.

J × 4

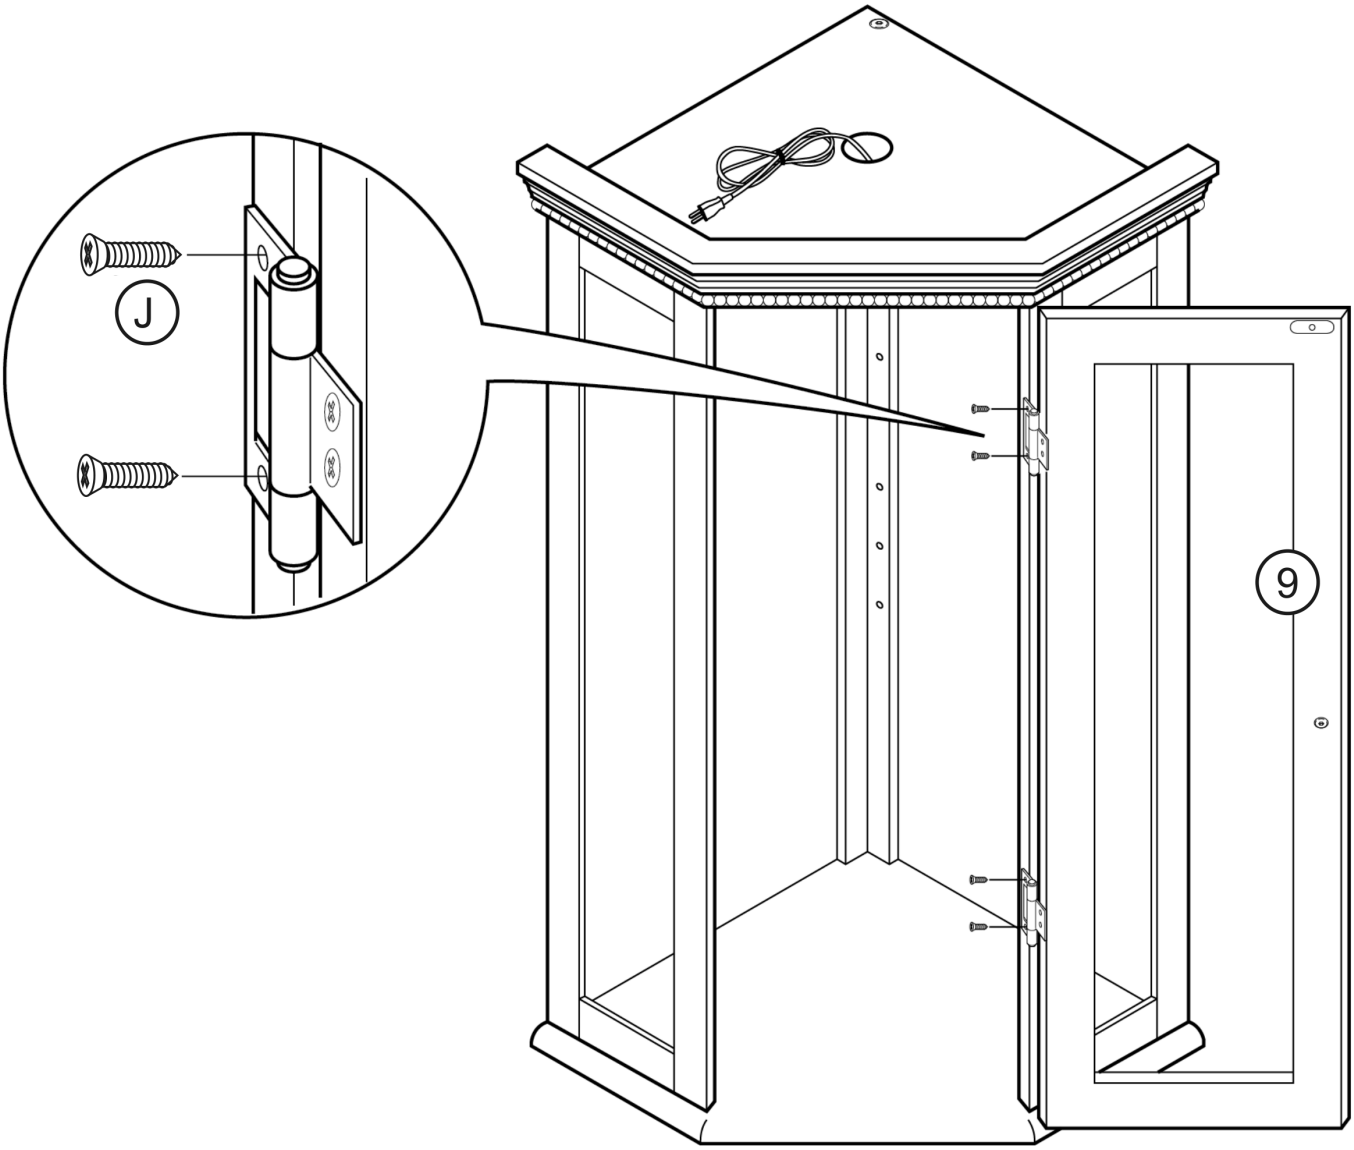

ASSEMBLY CHECK

Have one adult support the door until both hinges are secured. Check that it opens and closes freely.

STEP


12 Assemble the Lower Cabinet

1. Join panels 5 and 6 and lower support bar 12 to base 4.
2. Use five dowels C, glue N at the dowel joints, and three bolts A.

A × 3 | C × 5 | Glue N | Hex key D

LOWER CABINET FRAME

Match all drilled edges before joining.

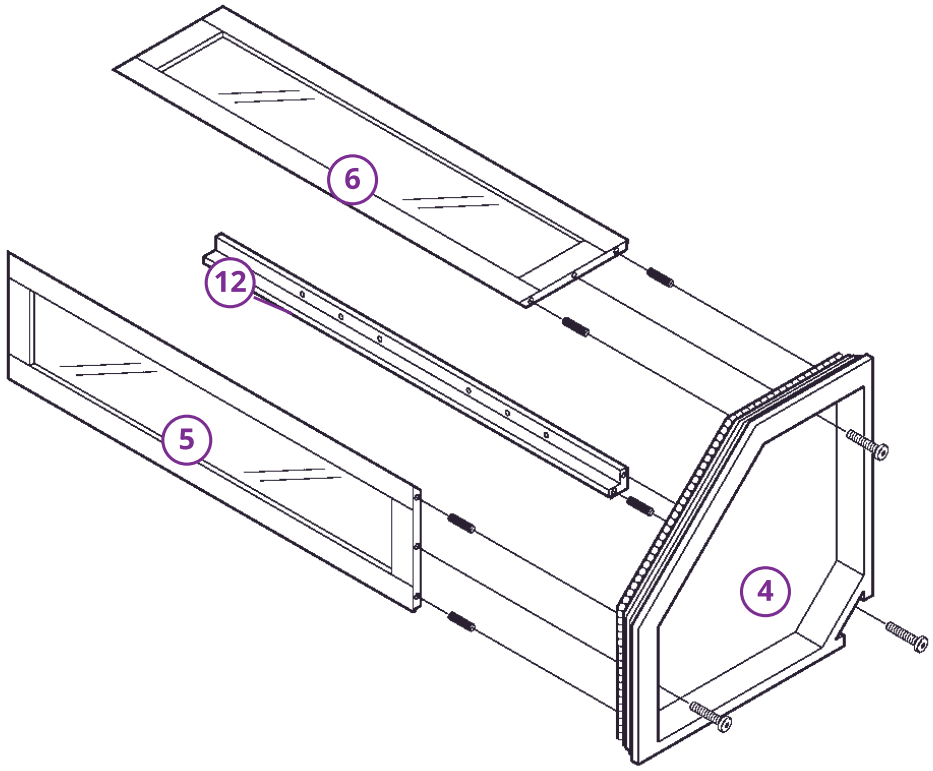

Panels 5 and 6 + support 12
join base 4.

Use support 12 for the lower cabinet.

01 / APPLY GLUE



Apply glue to the
5 dowel joints shown.

02 / INSERT DOWELS



C × 5
8 × 30 mm

Two per side panel;
one for support 12.

03 / TIGHTEN BOLTS



A × 3
1/4 × 1 1/4 in

One bolt per panel
or support.

Use Allen key D.

ASSEMBLY CHECK


Use lower support bar 12. Upper support bar 7 belongs to the upper cabinet.

STEP

13 Fit the Lower Top

1. Attach lower top panel 3 using five dowels C, glue N at the dowel joints, and three bolts A.
2. Keep the light cord clear of the joints.

A × 3 | C × 5 | Glue N | Hex key D

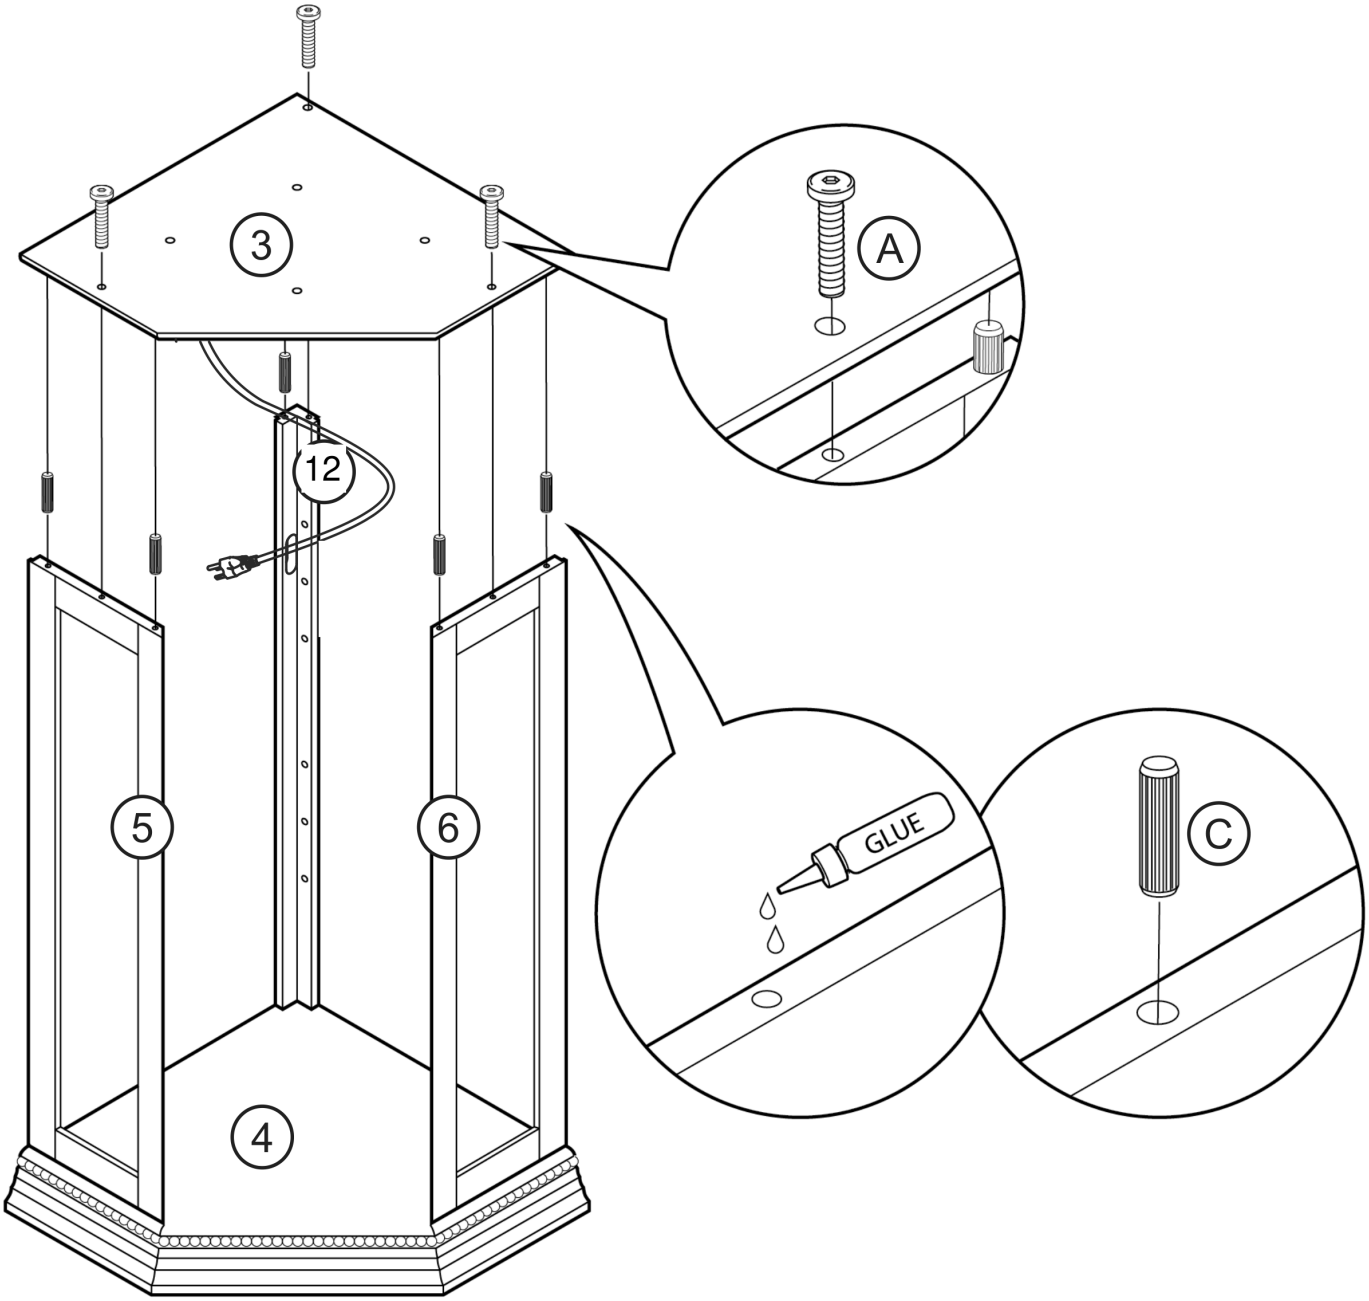

ASSEMBLY CHECK


Use lower support bar 12. Keep the light cord clear while lowering panel 3.

STEP

14 Fit the Lower Mirrors and Backs

1. Remove the protective film from the remaining two mirror panels 10. Fit the mirrors with the reflective sides facing the cabinet interior.
2. Place the remaining two back panels 8 over the mirrors and secure them with 32 screws M.

M × 32

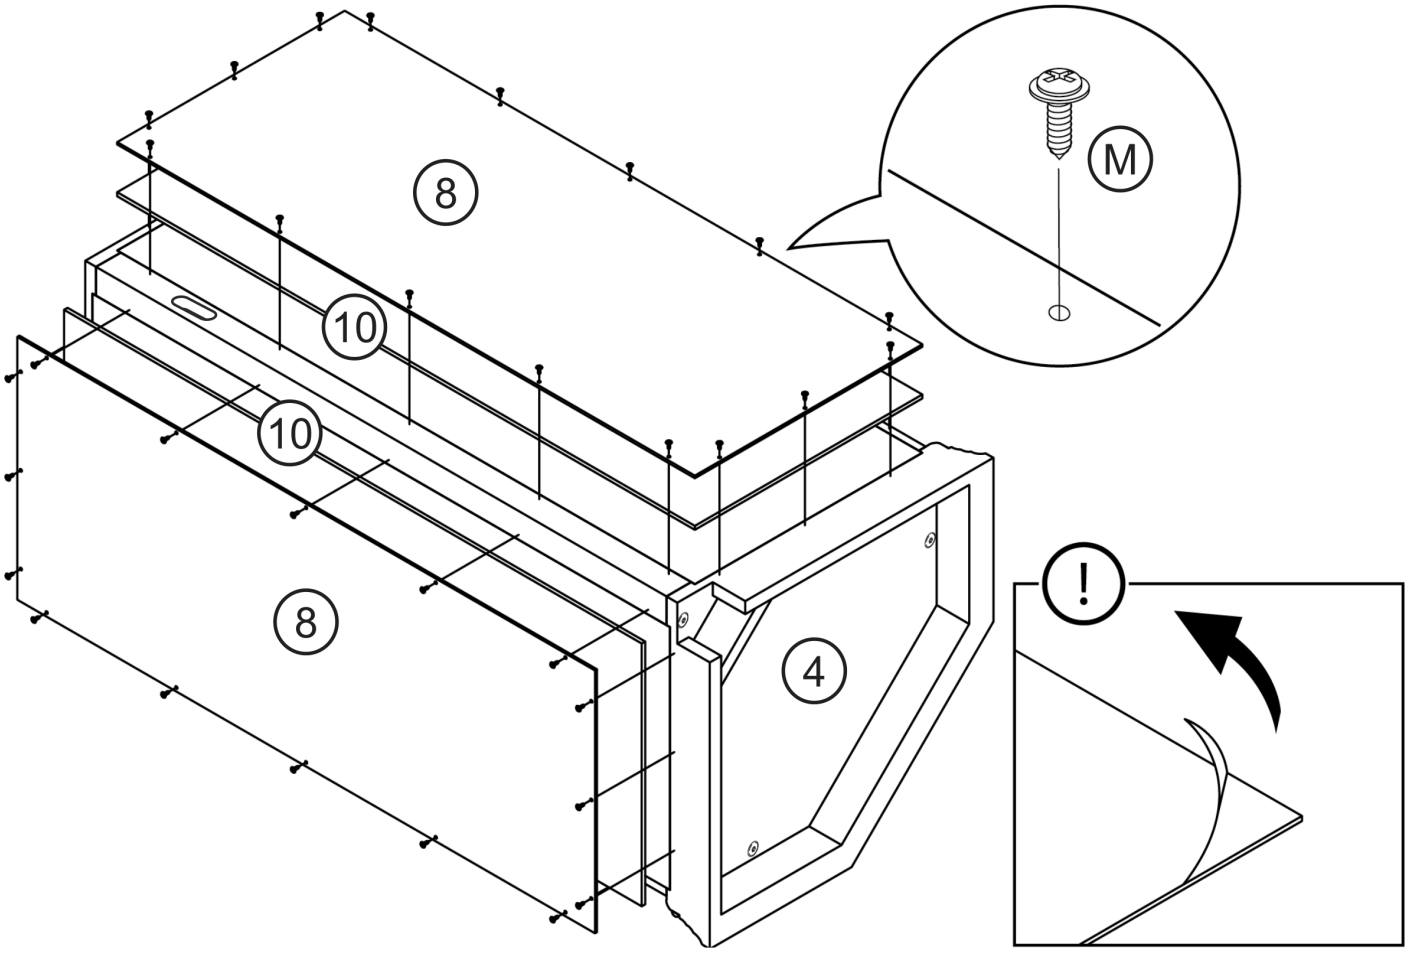

ASSEMBLY CHECK


Fit the mirror panels before the back panels. The reflective faces must face into the cabinet.

STEP

15 Fit Hinges to the Lower Door

Attach two hinges T to the remaining door 9 using four screws J.

J × 4 | T × 2

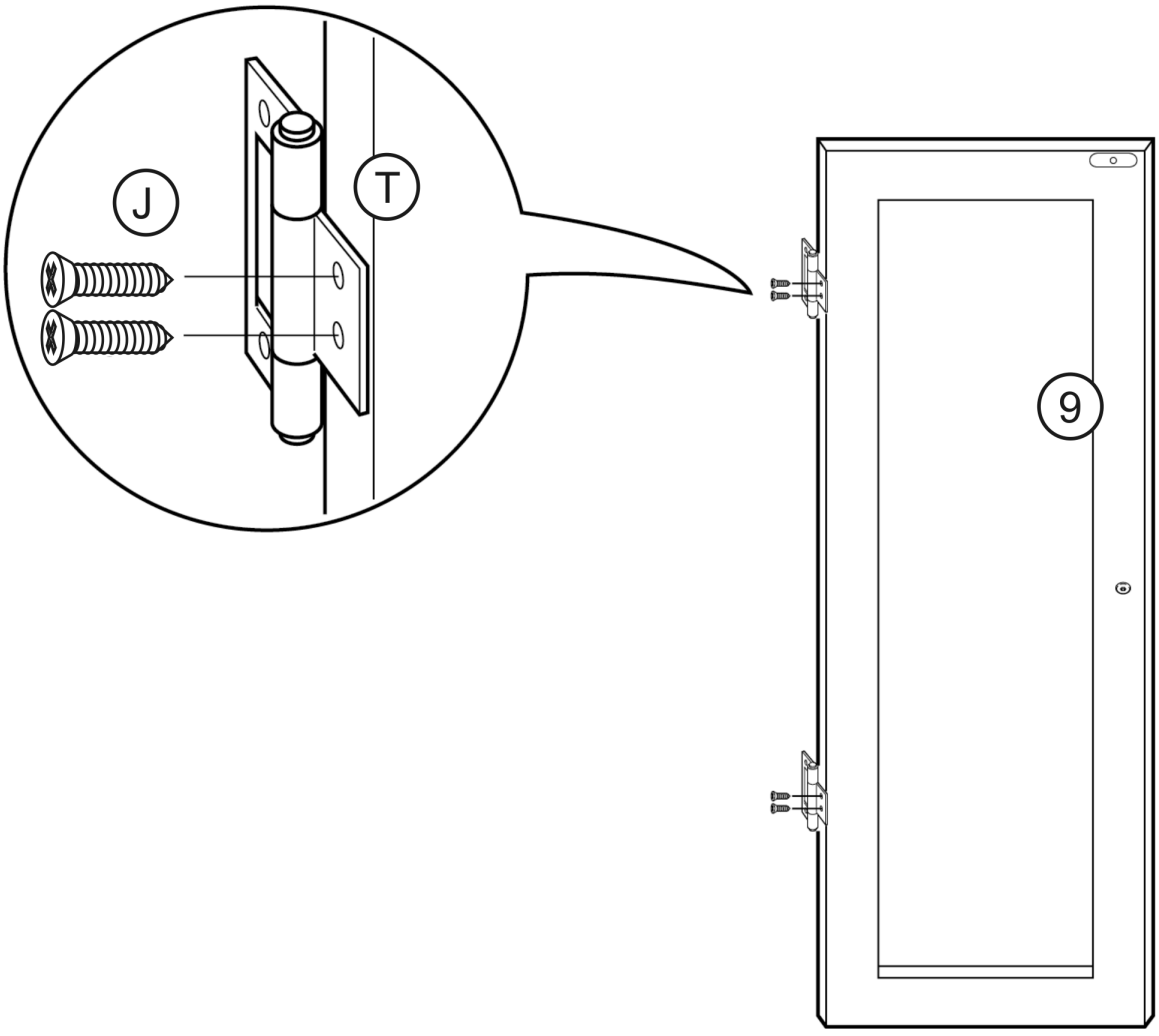

ASSEMBLY CHECK


Use the remaining door 9. Match the hinge orientation shown.

STEP

16 Hang the Lower Door

1. Support the door while attaching its hinges to the lower cabinet using four screws J.
2. Check that the door opens and closes freely.

J × 4

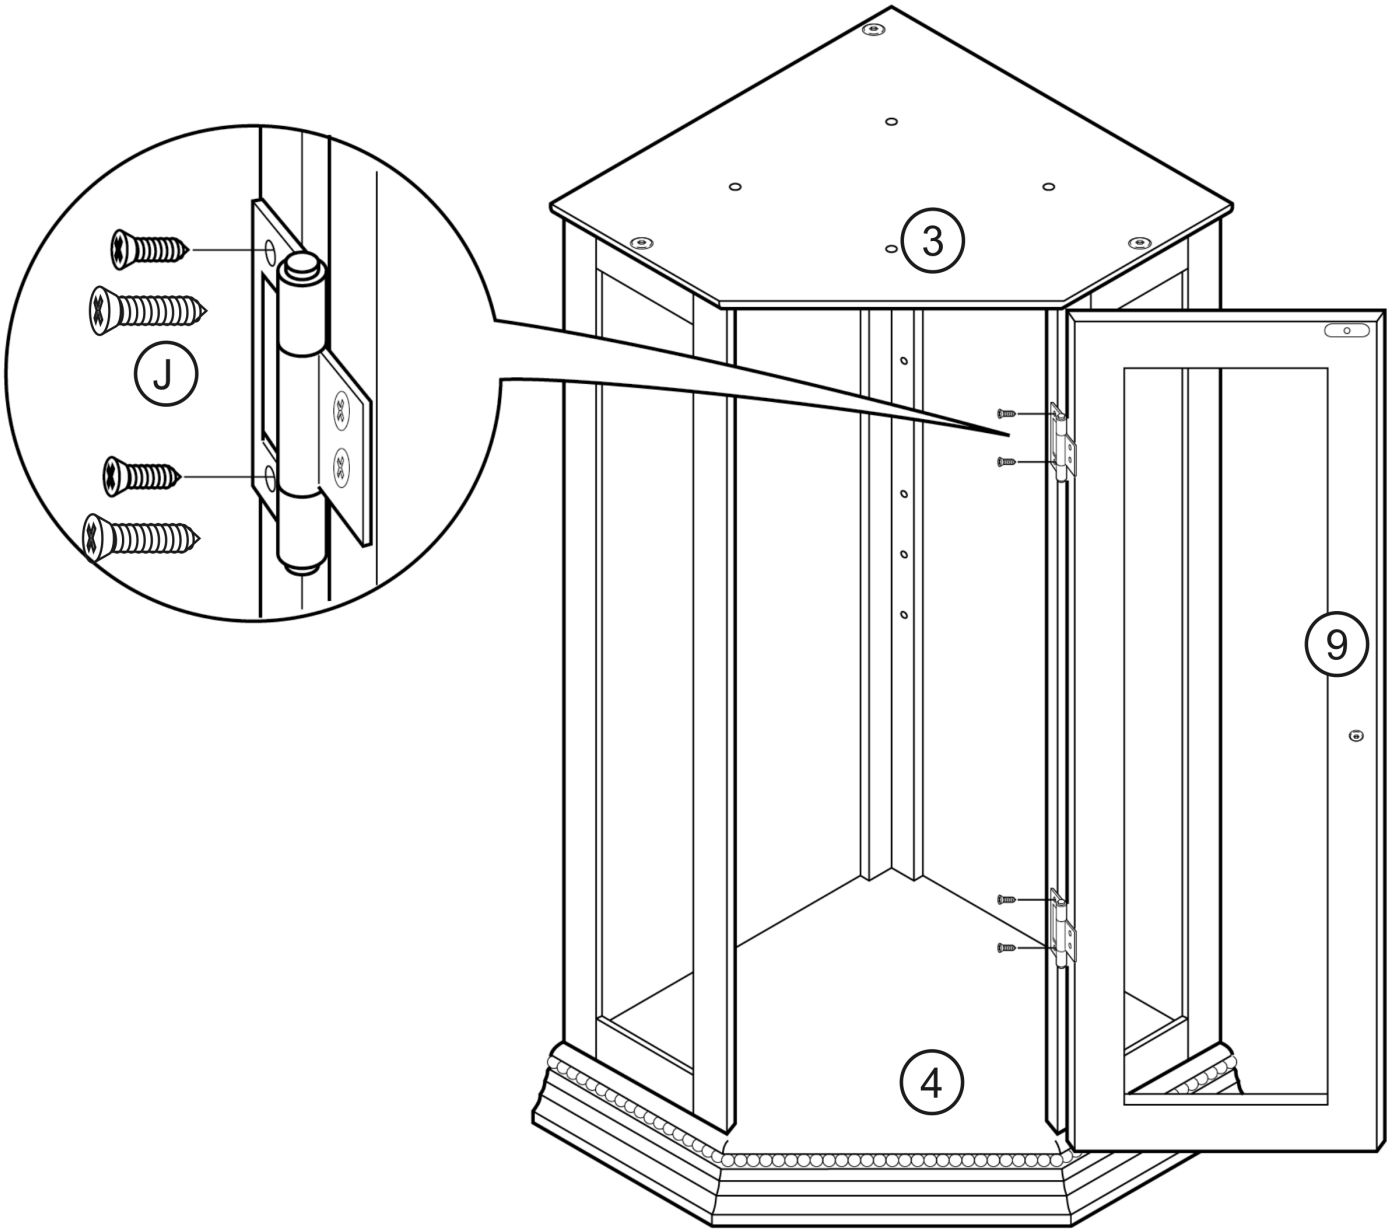

ASSEMBLY CHECK


Have one adult support the door until both hinges are secured. Check that it opens and closes freely.

STEP

17 Join the Two Cabinets

1. Insert the two SHORT dowels B into the joining holes in panel 3. With two adults, carefully lower the upper cabinet onto the lower cabinet.
2. From inside the lower cabinet, insert the two SHORT bolts S upward through panel 3. Tighten with hex key D. Keep both light cords clear of the joint.

B × 2: short dowels | S × 2: short bolts | Hex key D

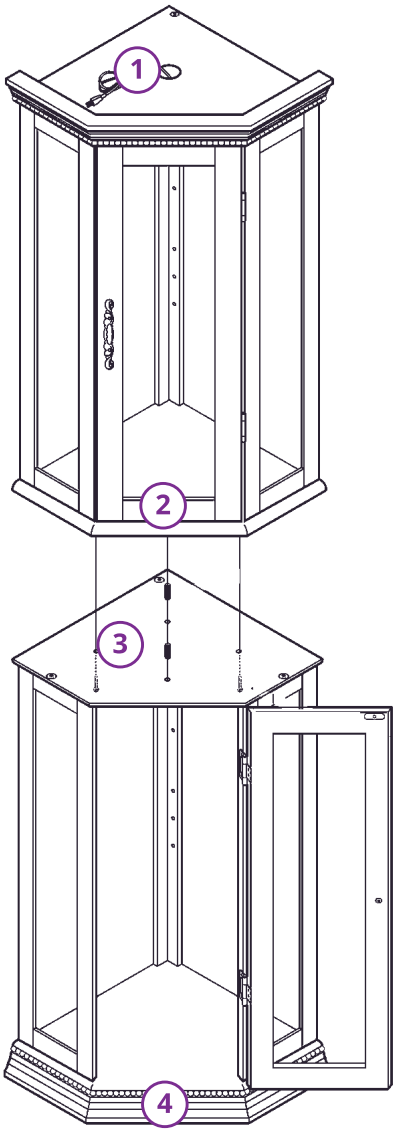


LOWER

Two adults: align and lower the upper cabinet together.

B × 2

SHORT DOWEL

8 × 20 mm

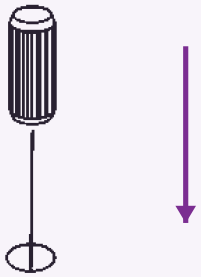


Use the two locating holes shown in the main view.

S × 2

SHORT BOLT

1/4 × 7/8 in

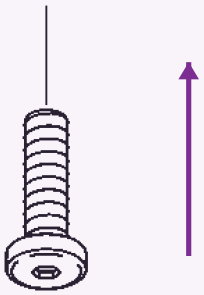

Tighten upward through panel 3.

ASSEMBLY CHECK


Use B (8 × 20 mm) and S (1/4 × 7/8 in). The longer dowels C and bolts A do not fit this connection.

STEP

18 Insert the Shelf Supports

1. Insert all 20 shelf supports I at the selected shelf levels.
2. Use five supports for each of the four shelves, with every support for a shelf at the same height.

I × 20

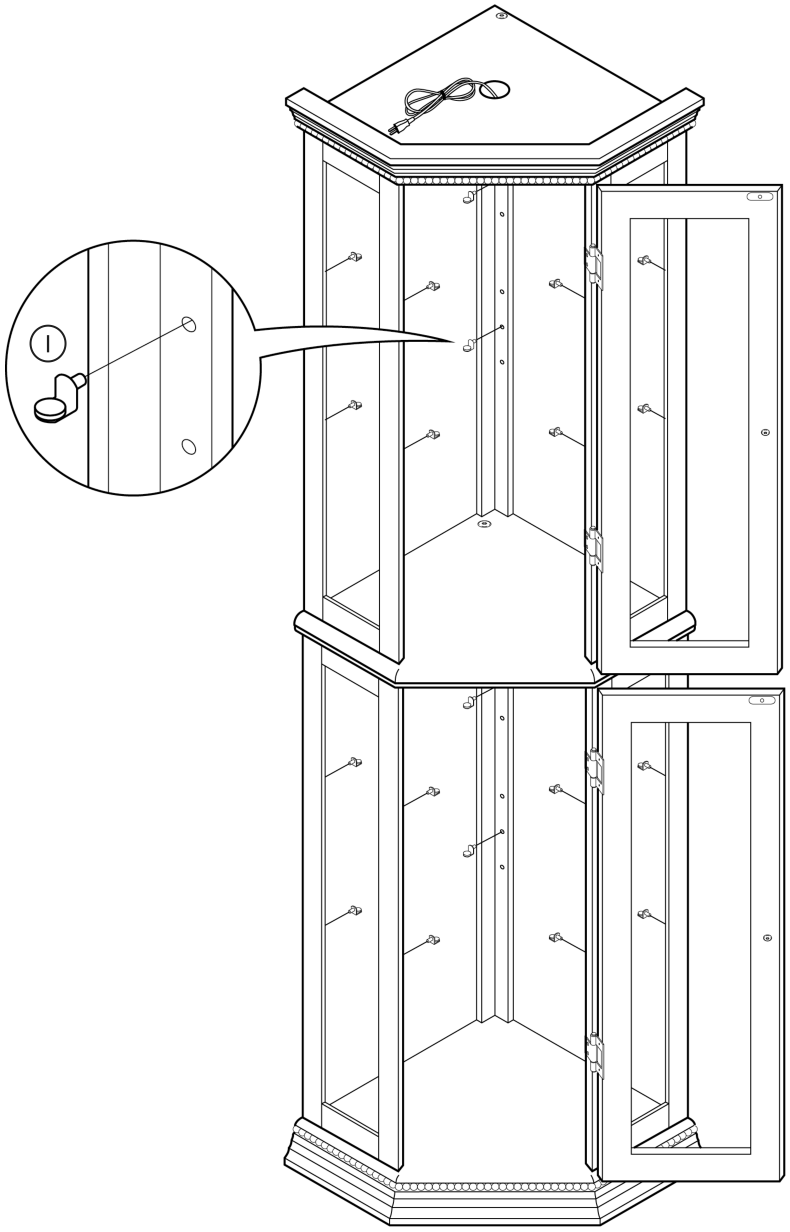

ASSEMBLY CHECK


Each shelf needs five fully seated supports at the same height.

STEP 19

Install the Glass Shelves

1. Carefully place the four glass shelves 11 onto their supports.
2. Check that each shelf rests securely on all five supports before loading.
3. Do not use chipped or cracked glass.

Part 11 × 4: glass shelves

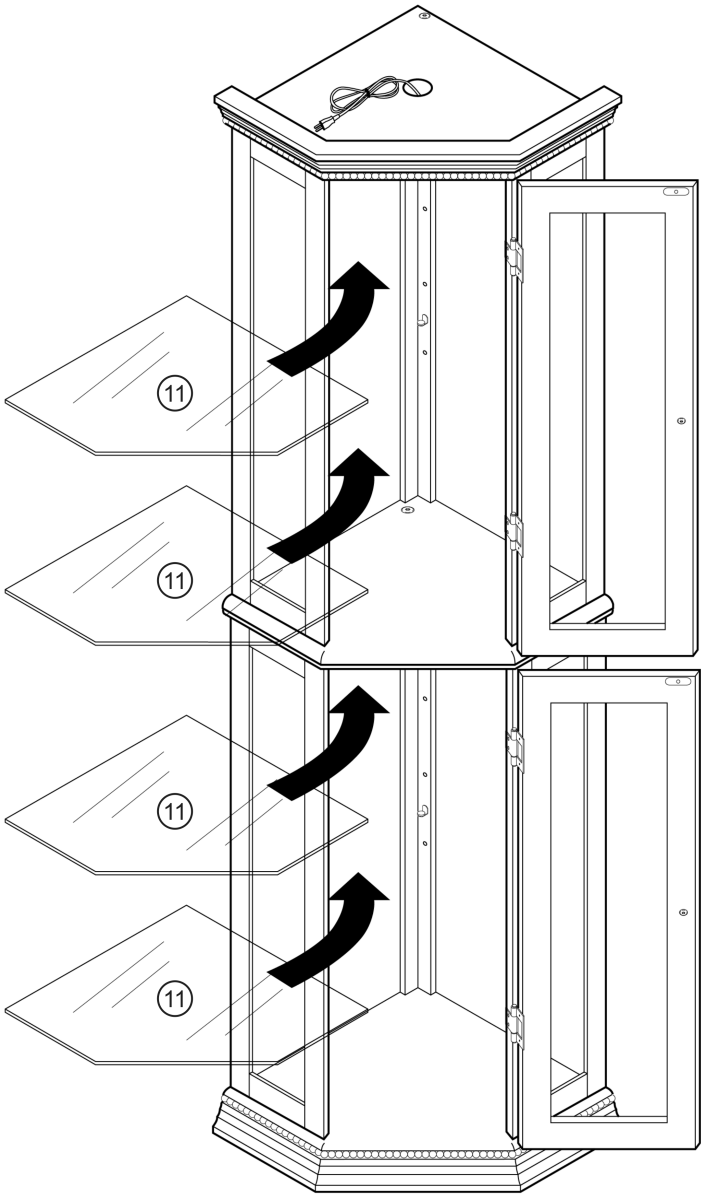

ASSEMBLY CHECK


Do not load the shelves until both anti-tip straps are secured to the wall.

STEP

20 Secure the Cabinet to the Wall

1. Use both anti-tip straps O already attached in Step 9. Secure them to suitable structural fixing points before using the cabinet.
2. Use washers R and wall screws and anchors suitable for your wall. Use the supplied screws Q and anchors P only if suitable; if unsure, ask a qualified installer.
3. Check that both straps are secure and the cabinet is stable before placing items inside.

O: straps already fitted | R × 2 | Suitable wall fixings

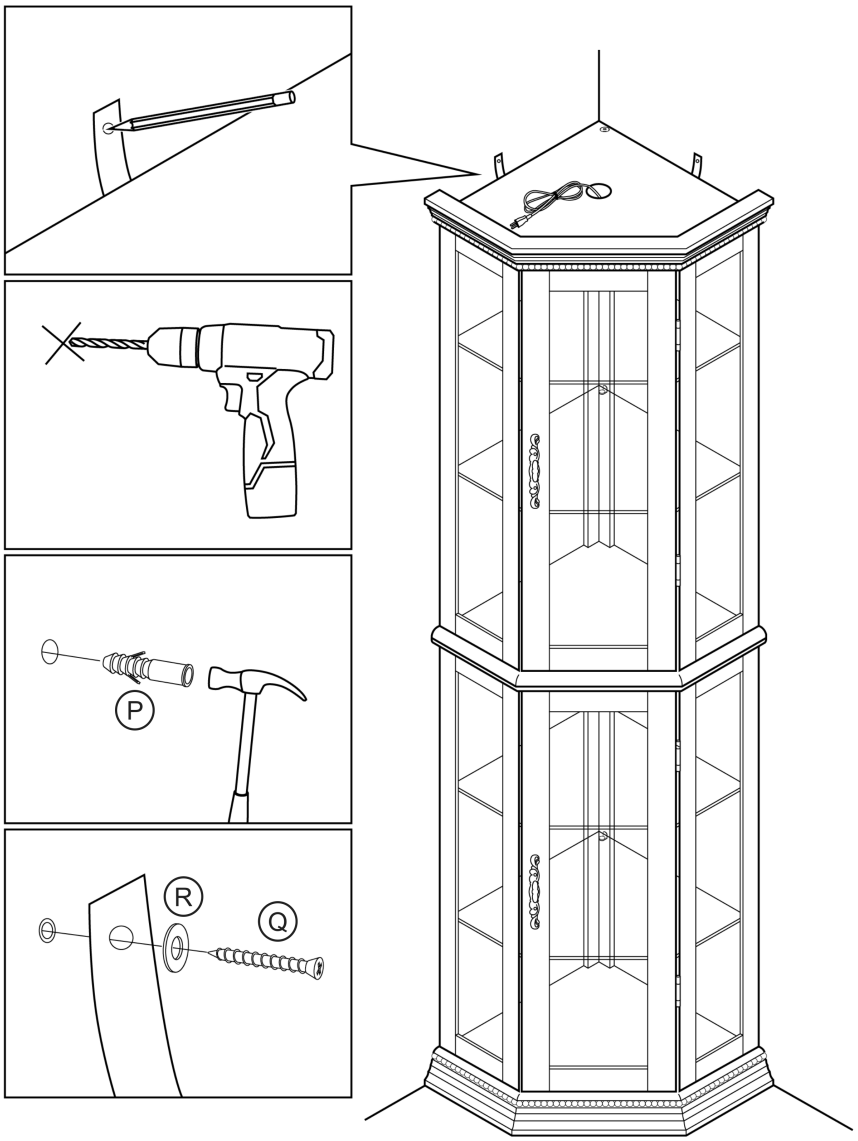

ASSEMBLY CHECK

WARNING: Furniture tip-over can cause serious or fatal crushing injuries. Secure both straps before use.

READY TO USE

Final Safety Check and Care

01 WARNING: Furniture tip-over can cause serious or fatal crushing injuries. Secure both anti-tip straps to suitable wall fixings before use.

02 Check that all screws and bolts are secure, both doors open freely, and the cabinet is stable.

03 Each glass shelf must rest on five supports at the same height. Do not use chipped or cracked glass.

04 Never climb, stand or sit on the cabinet. Keep children from pulling or hanging on the doors. Place heavier items on lower shelves, within the shelf edges.

05 Keep light cords clear of doors, joints and sharp edges. Unplug both lights before cleaning or changing bulbs. Let the bulbs cool first, and match replacements to the fixture label.

06 Clean the cabinet with a soft cloth. Avoid abrasive cleaners.

07 Need help? Email loojanehome@163.com with model CC-B0011, the part code, order details and a photo.