

ASSEMBLY INSTRUCTIONS


V-WD26-1364


PF021

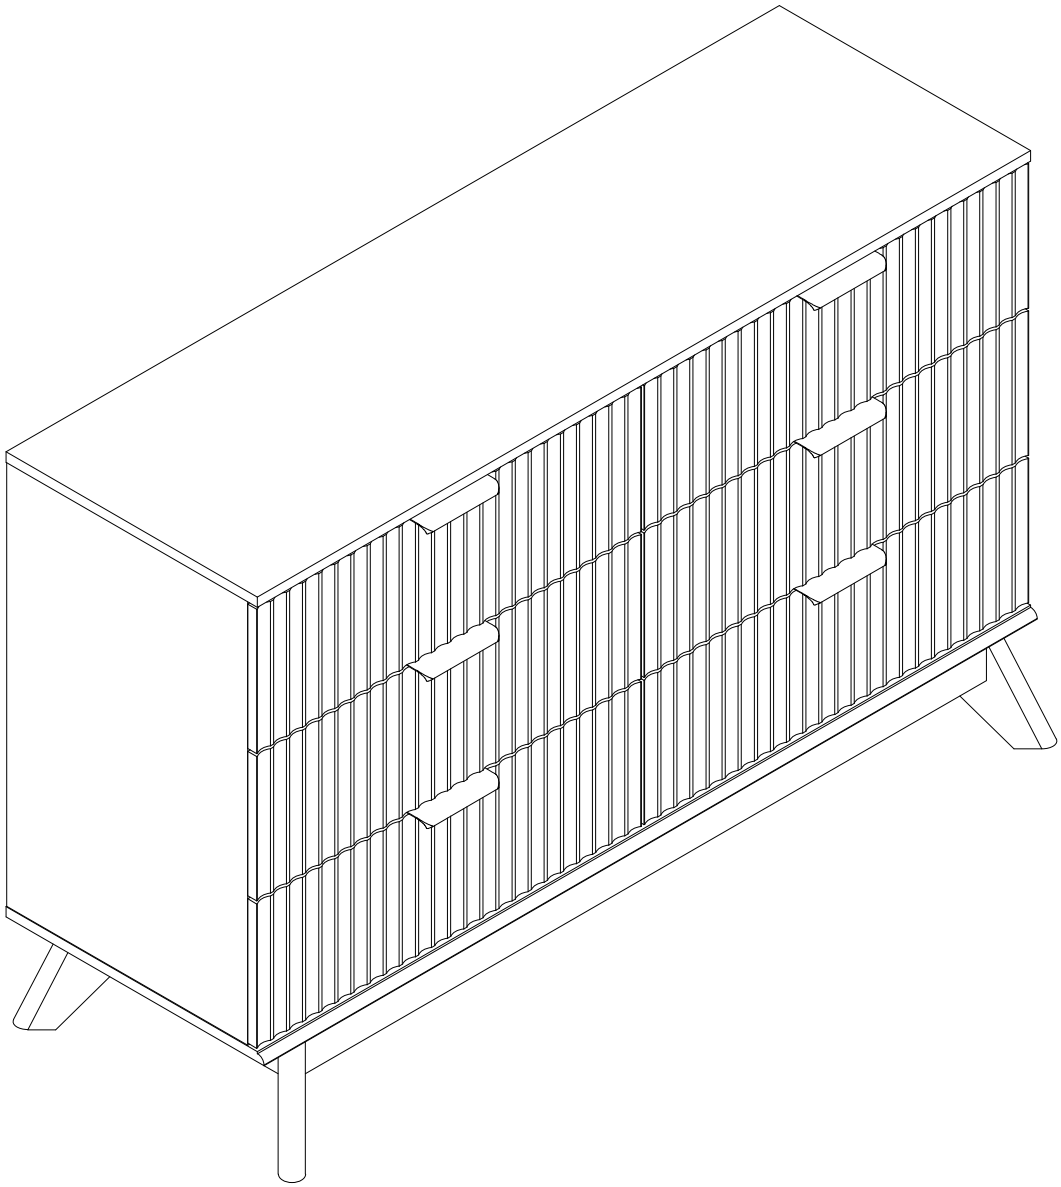


WARNING !



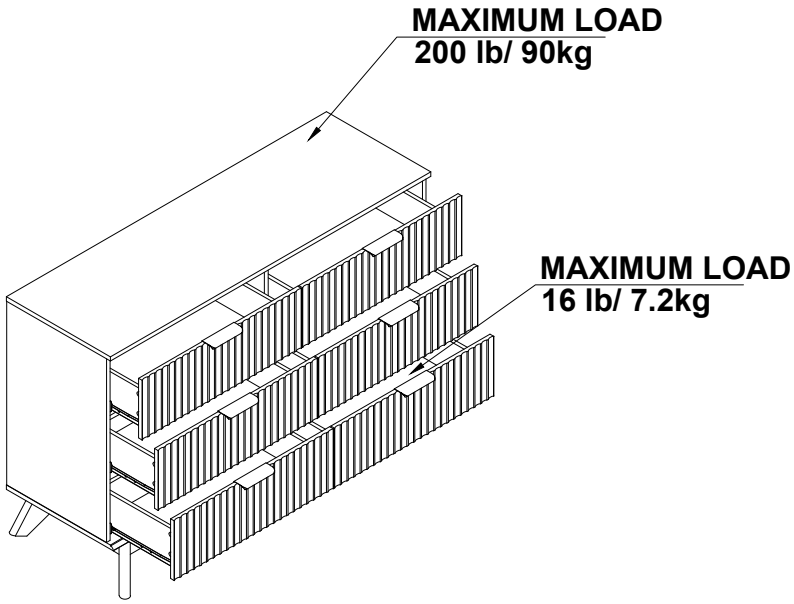

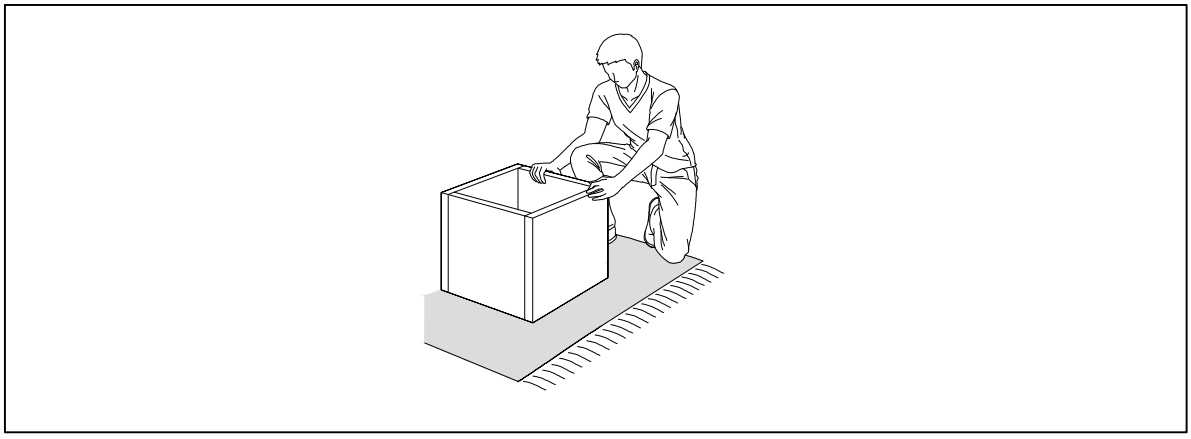

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

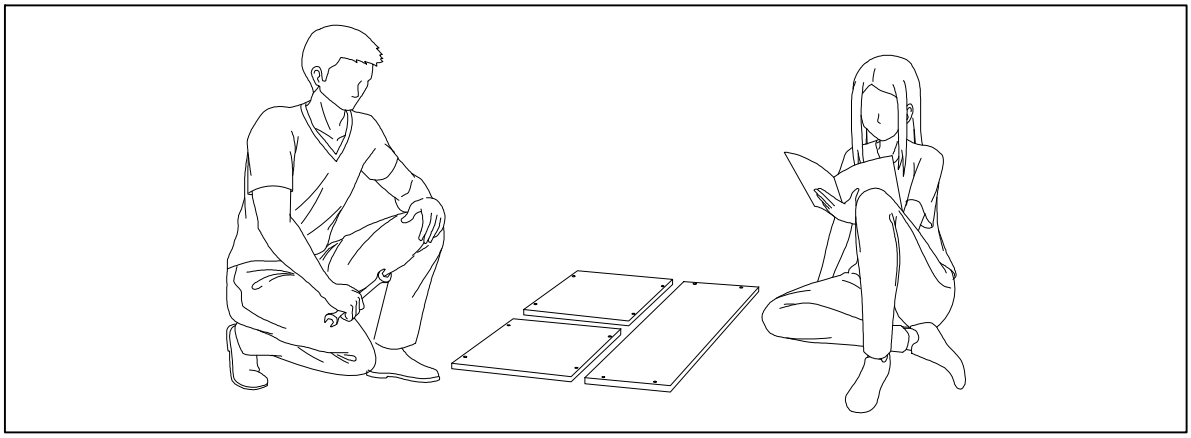


This furniture requires 2 people to assembly.


Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT

Board Identification


Not actual size

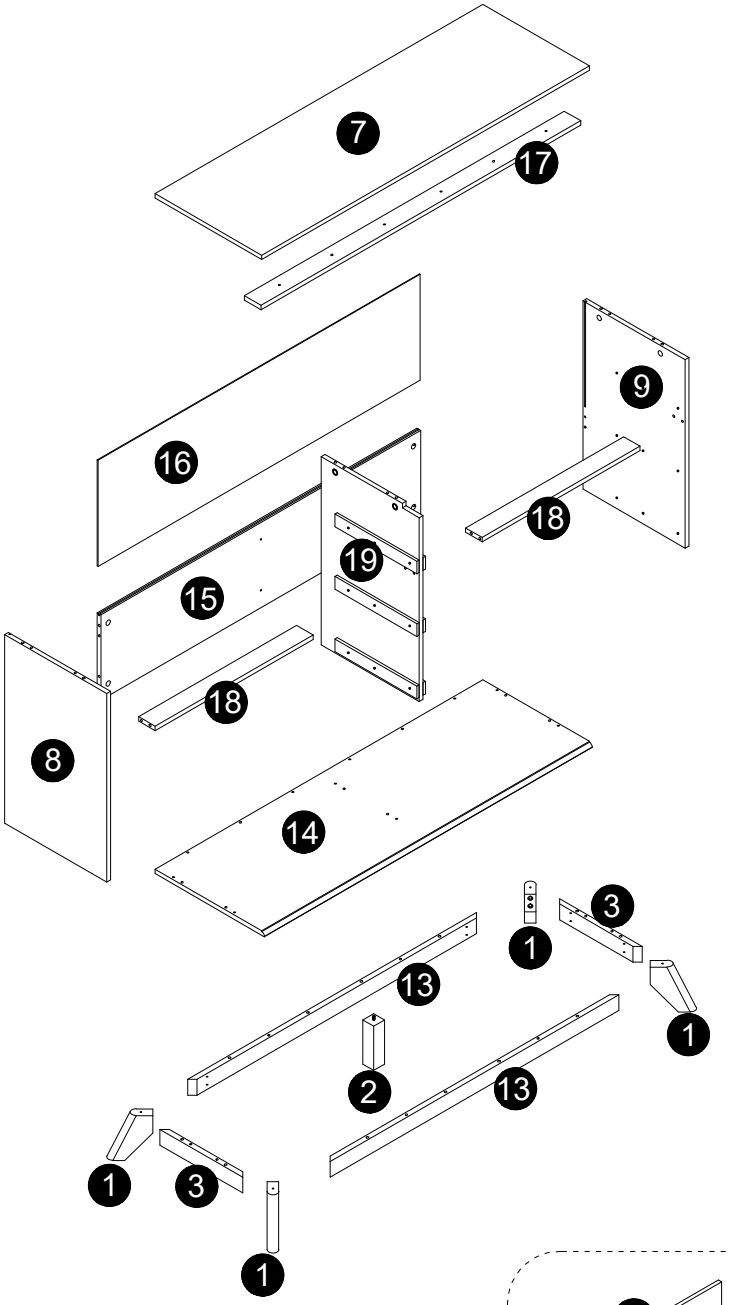

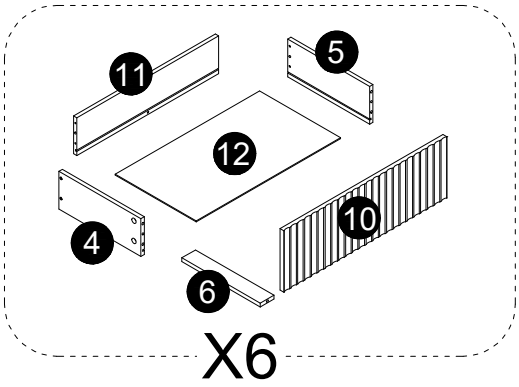


BOARD IDENTIFICATION


Not actual size

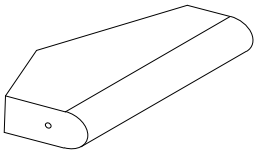


① x4

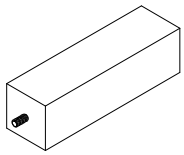


② x1

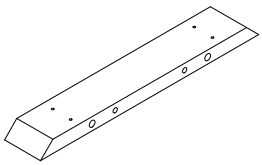


③ x2

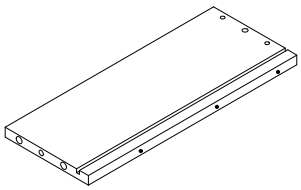


④ x6

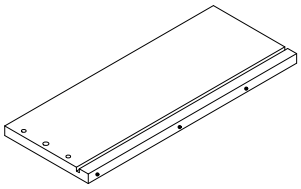


⑤ x6

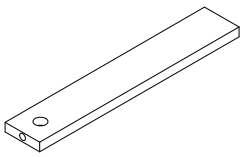


⑥ x6

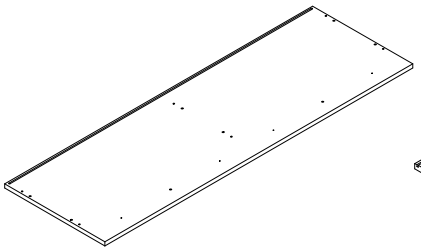


⑦ x1

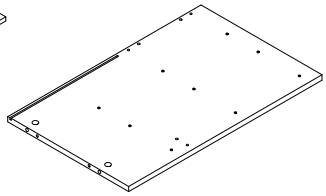


⑧ x1

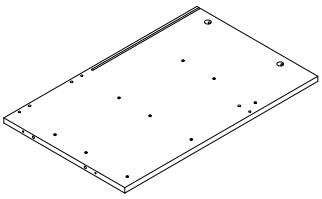


⑨ x1

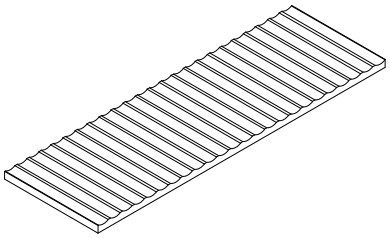


⑩ x6

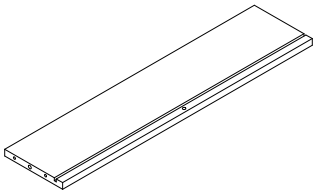


⑪ x6

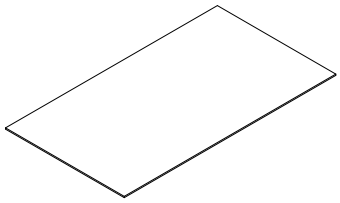


⑫ x6

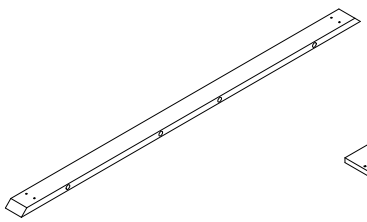


⑬ x2

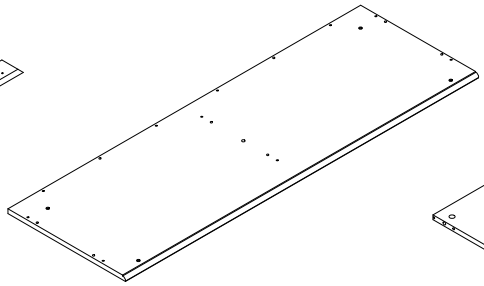

⑭ x1

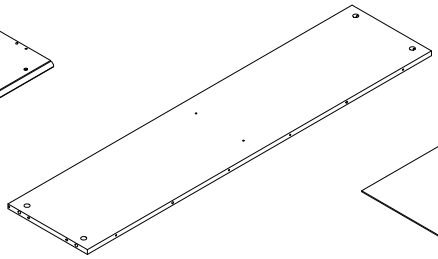


⑮ x1

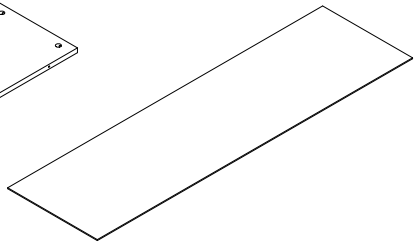


⑯ x1

BOARD IDENTIFICATION


Not actual size

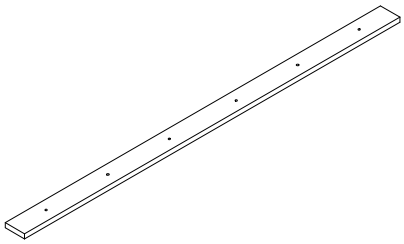

⑰ x1

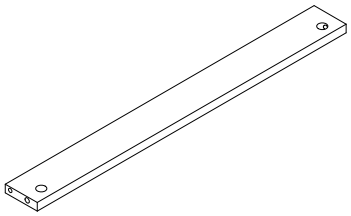


⑱ x2

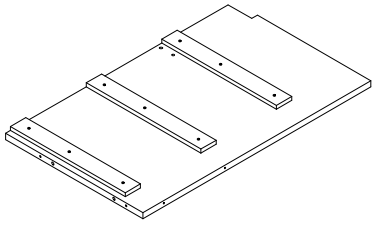


⑲ x1

HARDWARE LIST




A	x44+3




Ø15x9.5

B	x44+3




Ø6x30

C	54+3




Ø6x20

D	x2




Ø3.5x12

E	x84+3




Ø5x40

F	16+1



Ø4x16

G	x4




Ø3x17

H	x6




Ø4x35


I	x30+3




J	x6

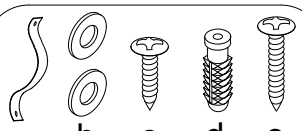

K	x2

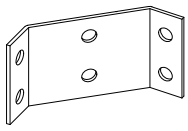


L	x4




#10*15

M	x16+1



M6x35

N	x12+1




M6x20


O	x8




P	x2+2




Q	x1




CL	x6



CR	x6




DL	x6





DR	x6


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

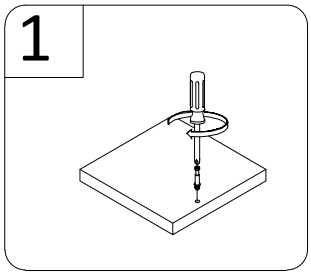

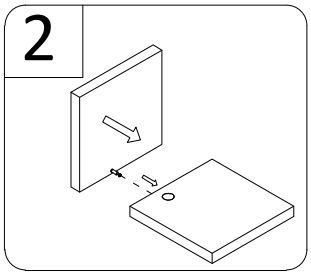


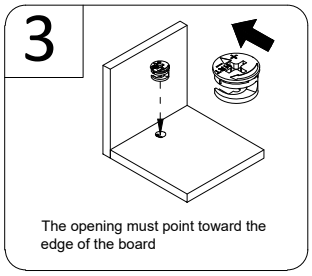


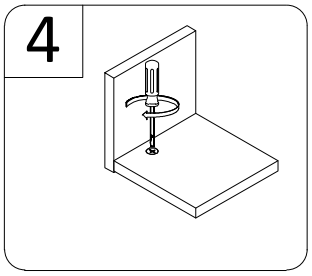

STEP 1

PF021

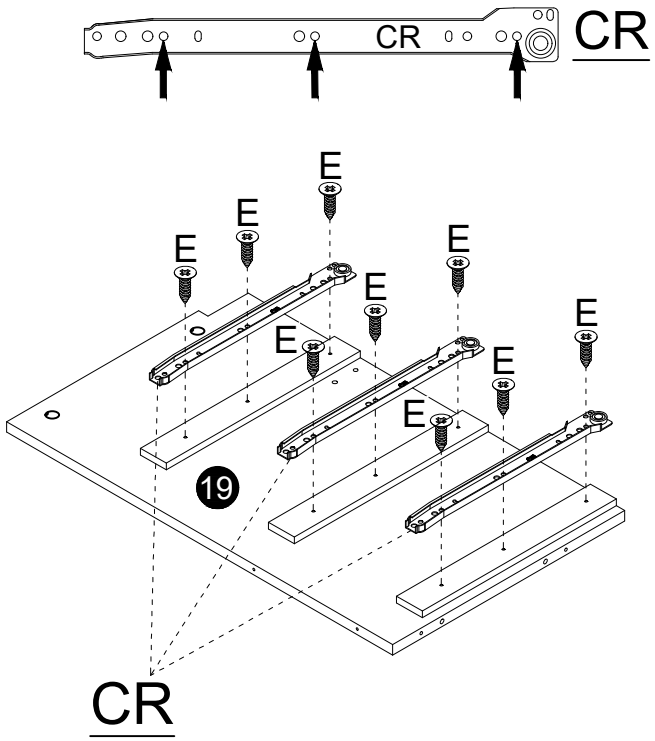

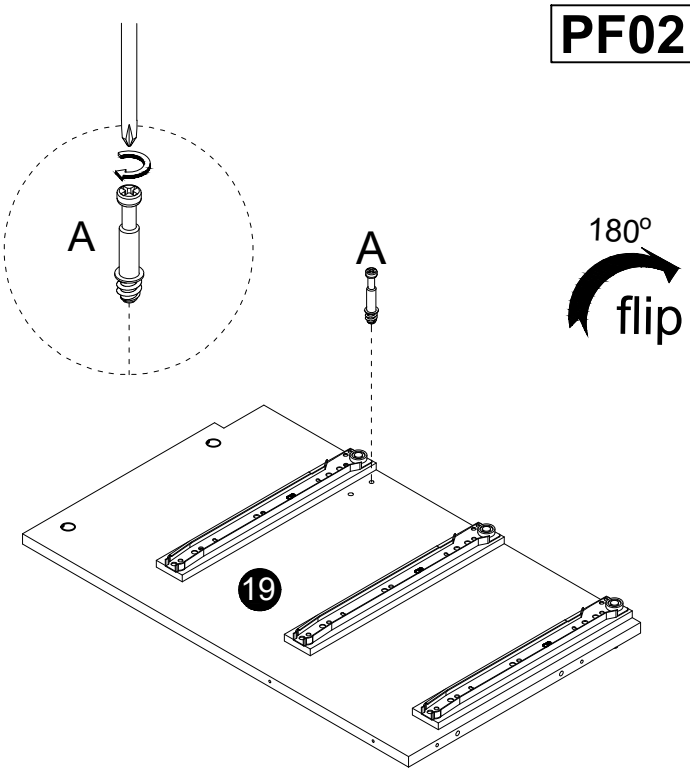



A	x 1

Ø3.5x12	
E	x 9

CR	x 3

STEP 2

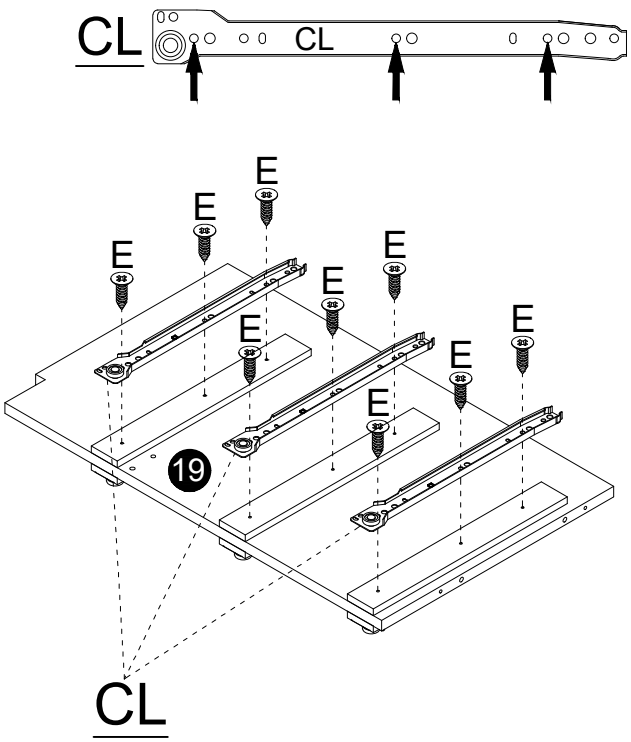

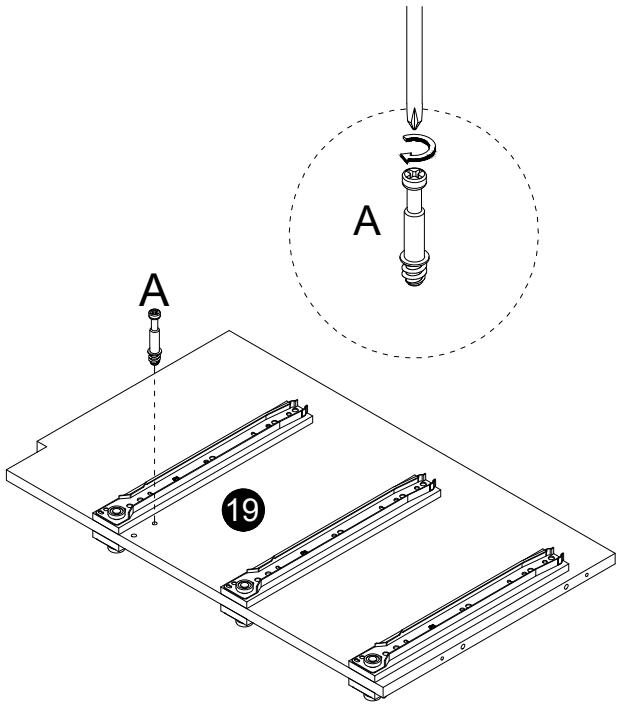


A	x 1


Ø3.5x12	
E	x 9

CL	x 3


STEP 3



PF021



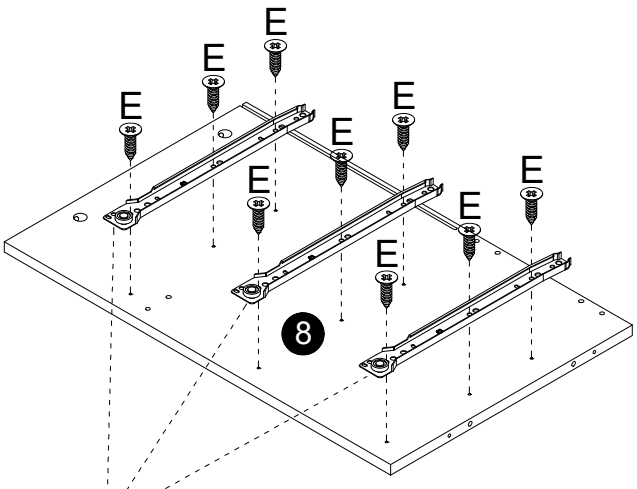



CL

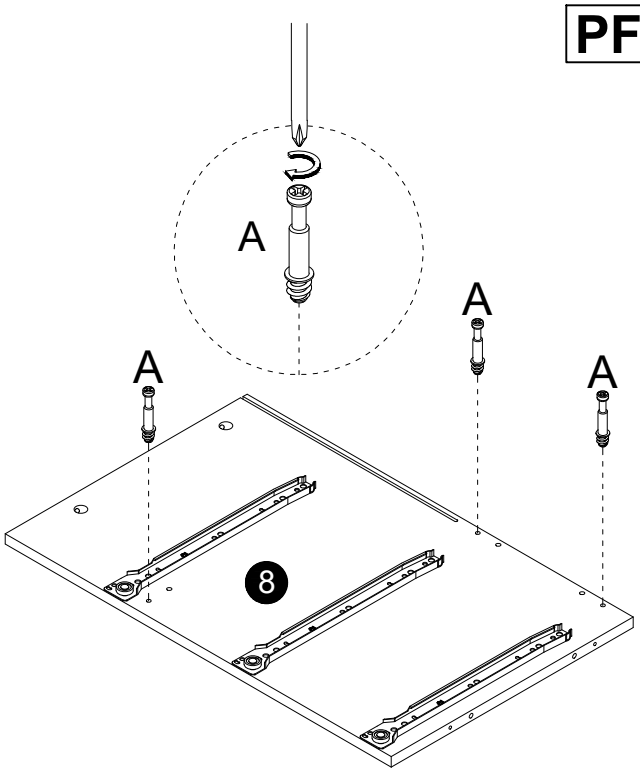


		 Ø3.5x12			
A	x 3	E	x 9	CL	x 3



STEP 4



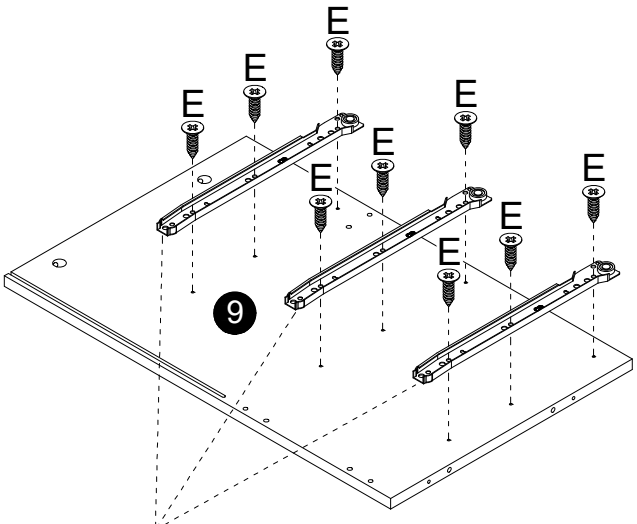


CR

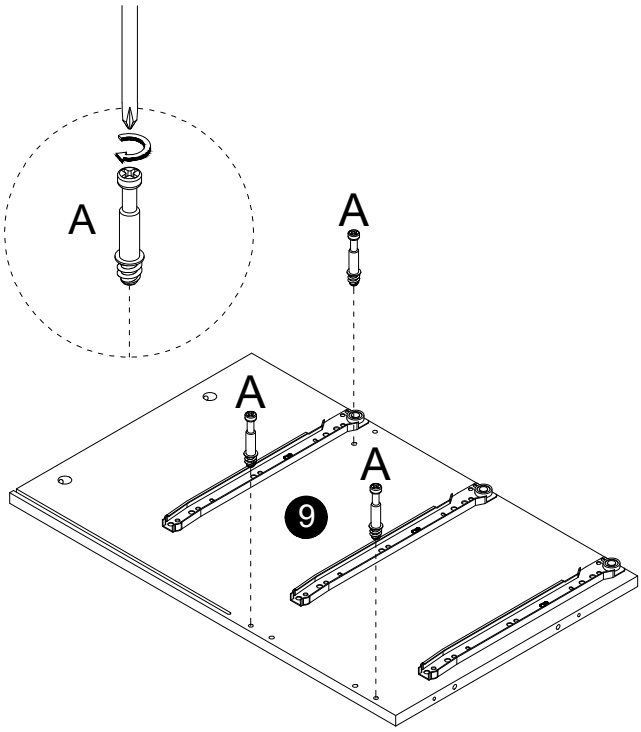


		 Ø3.5x12			
A	x 3	E	x 9	CR	x 3


STEP 5


PF021

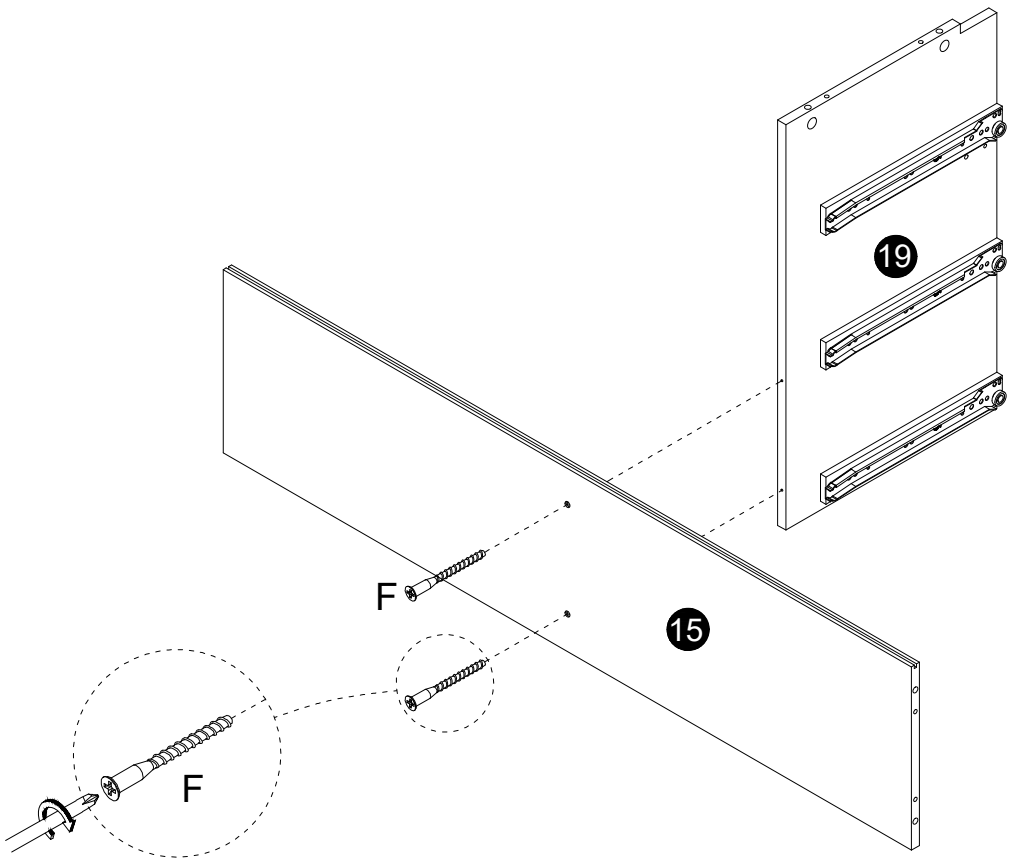


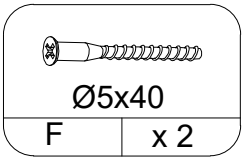

STEP 6

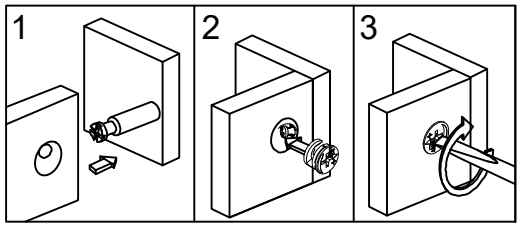


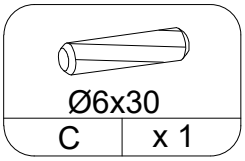

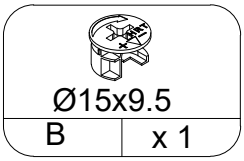

STEP 7


PF021

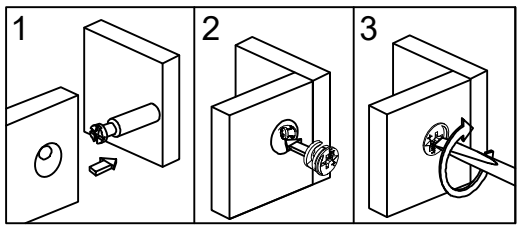


Ø6x30	
C	x 3

Ø15x9.5	
B	x 3

STEP 8

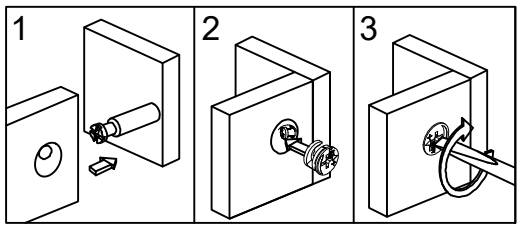

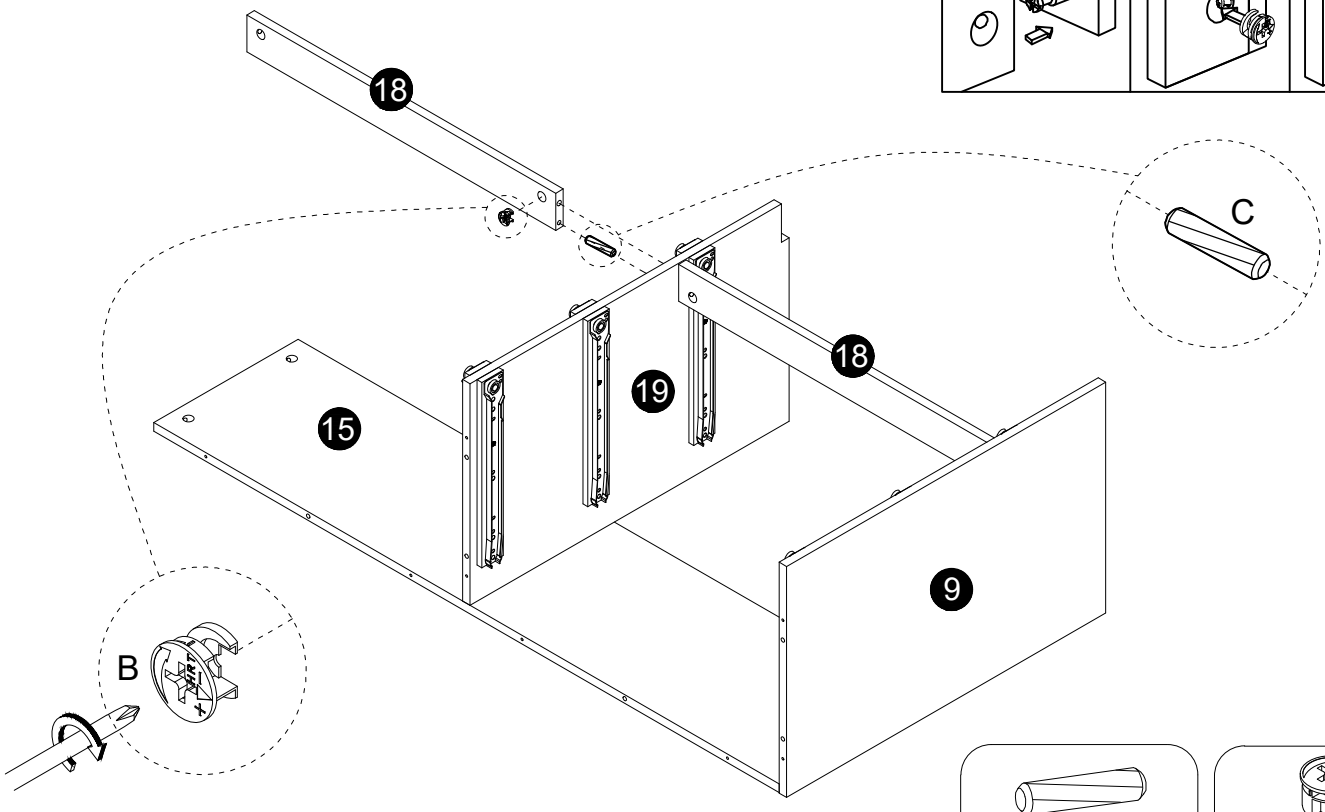



Ø6x30	
C	x 1


Ø15x9.5	
B	x 1

STEP 9

PF021

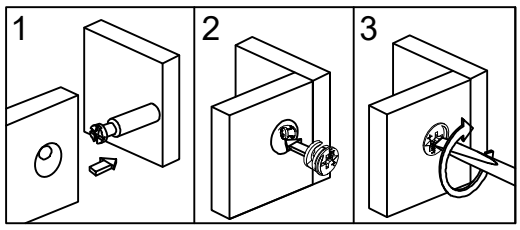

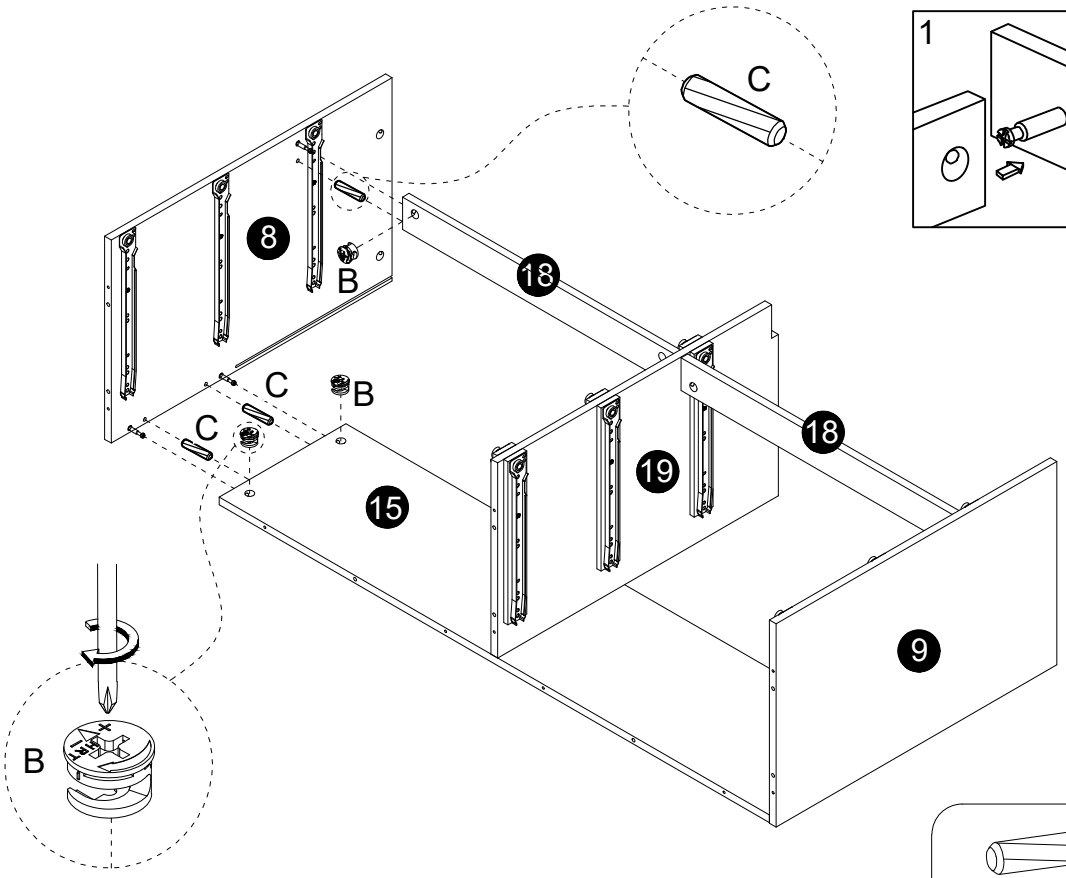


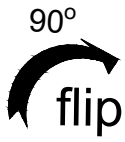

Ø6x30	
C	x 3

Ø15x9.5	
B	x 3

STEP 10

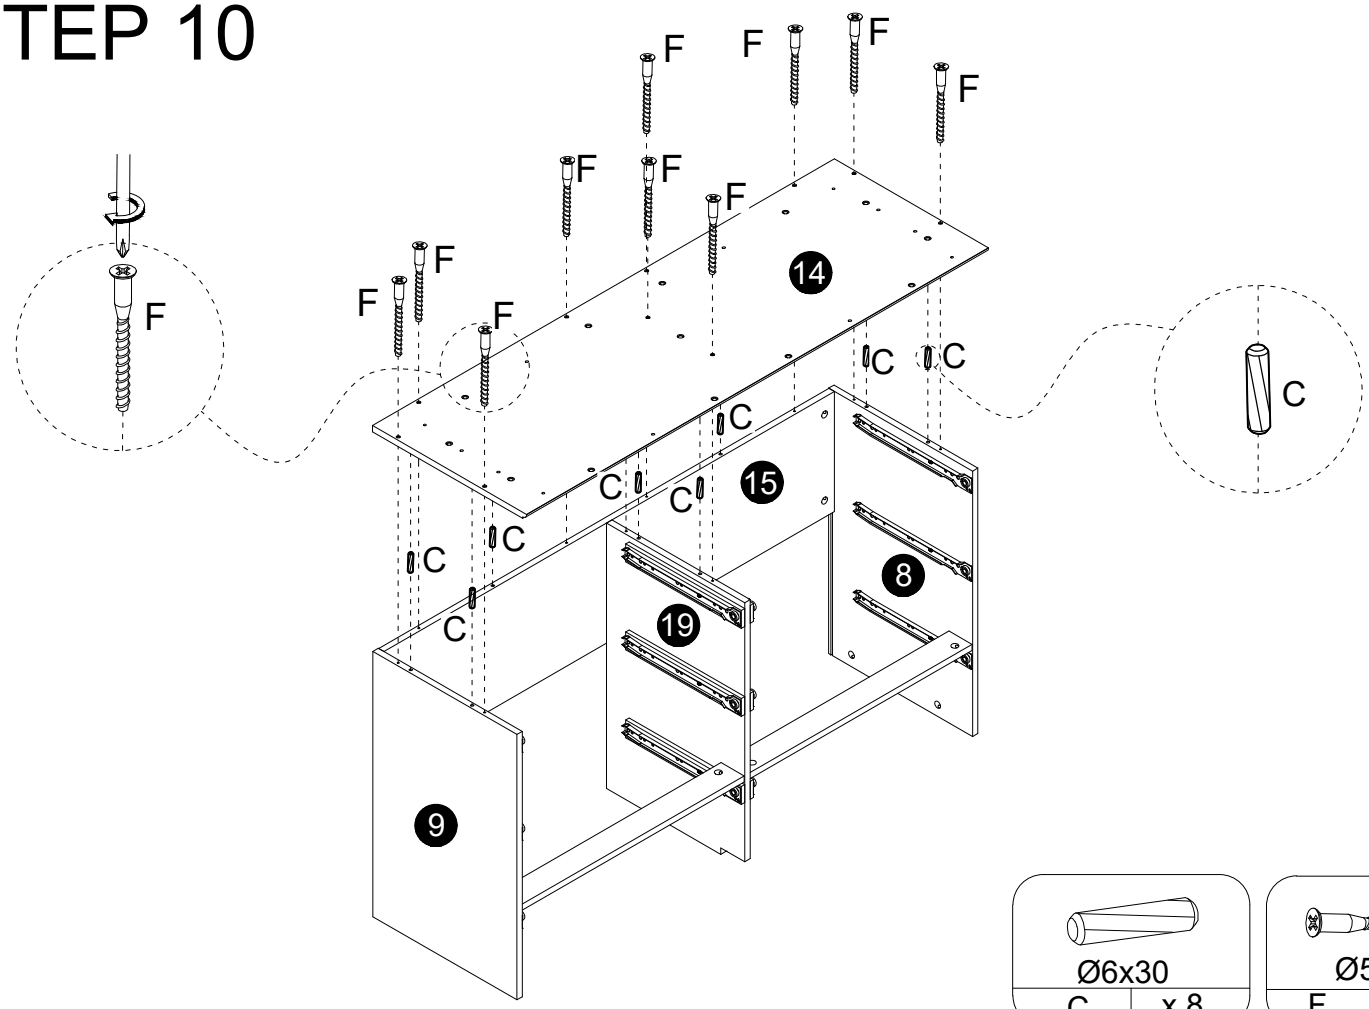


Ø6x30	
C	x 8

Ø5x40	
F	x 10

STEP 11


PF021

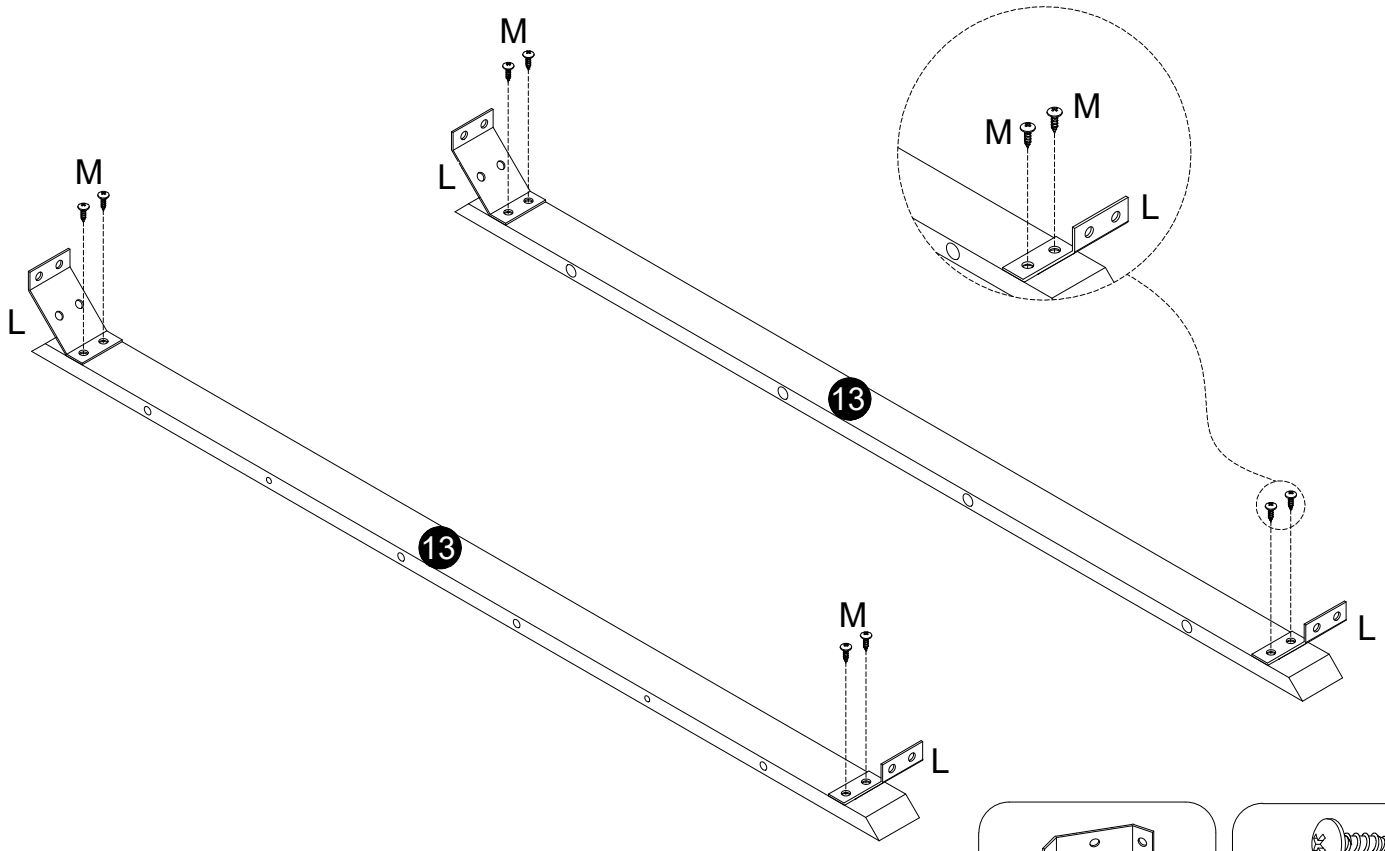

L	x 4

#10*15	
M	x 8

STEP 12 Note: Do not tighten the screws at this step.

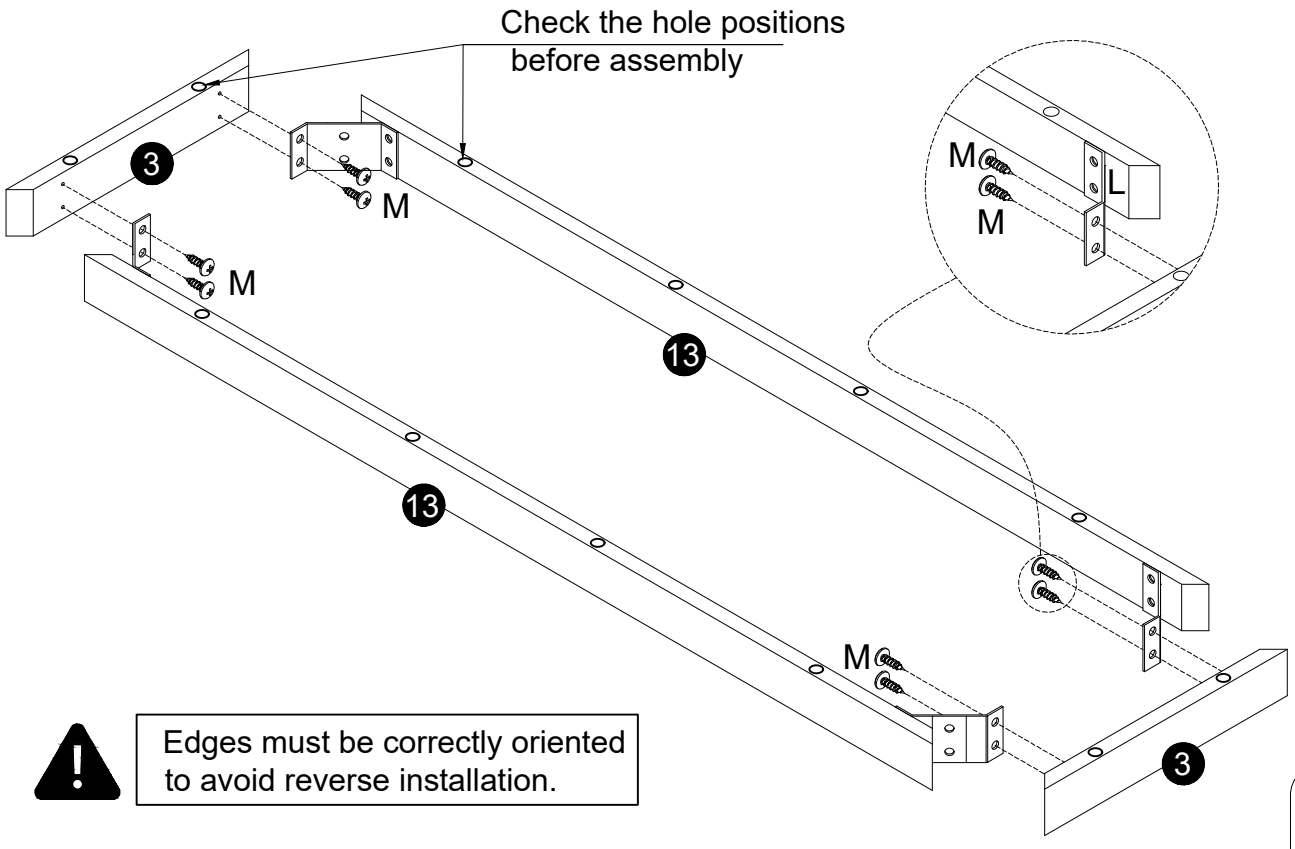



Edges must be correctly oriented to avoid reverse installation.

#10*15	
M	x 8


STEP 13 Tighten all screws and bolts.

PF021

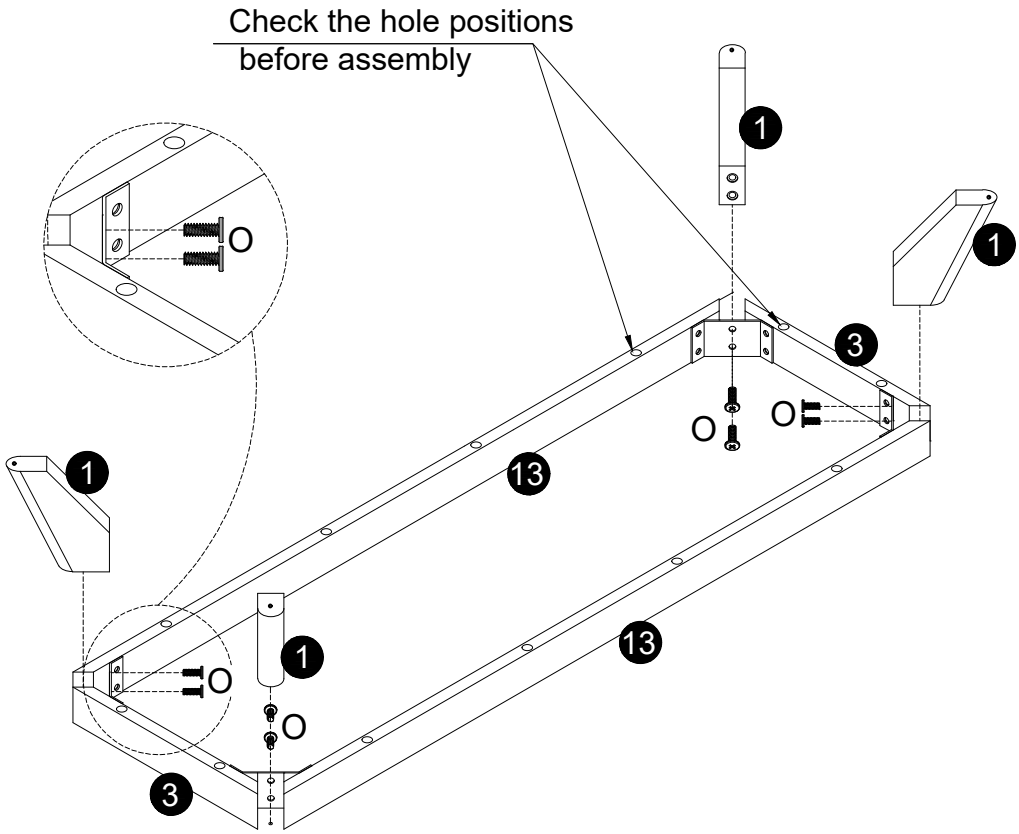

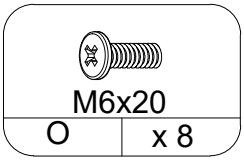



STEP 14

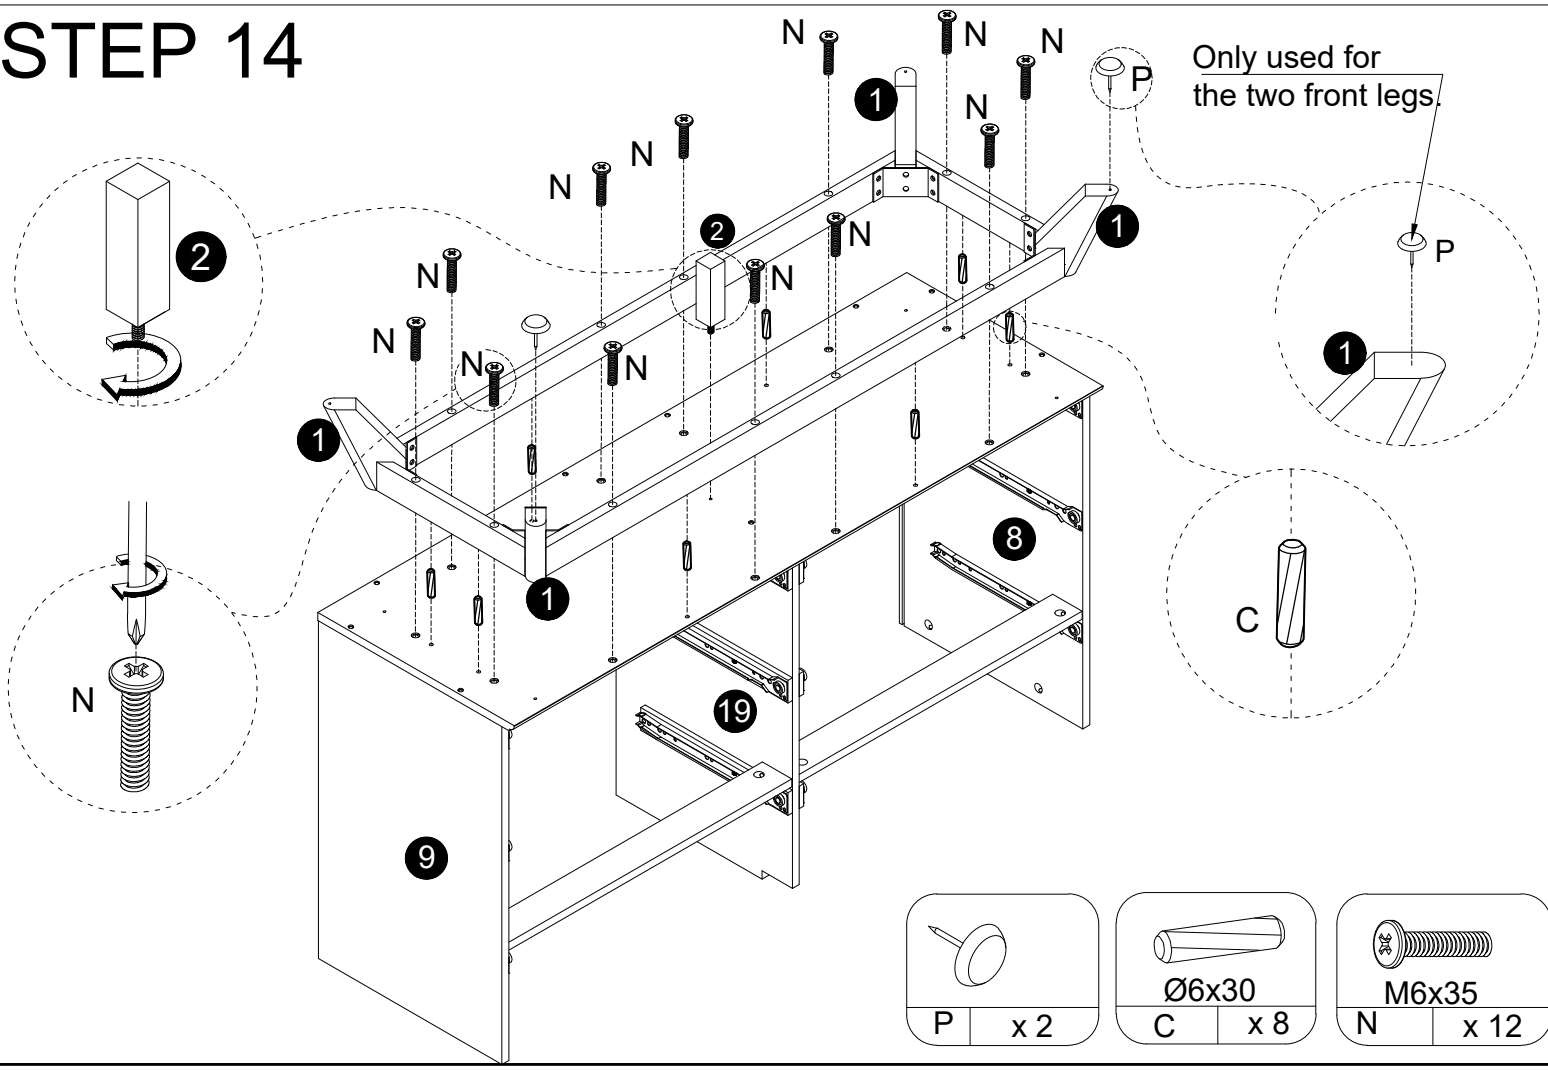


STEP 15

PF021

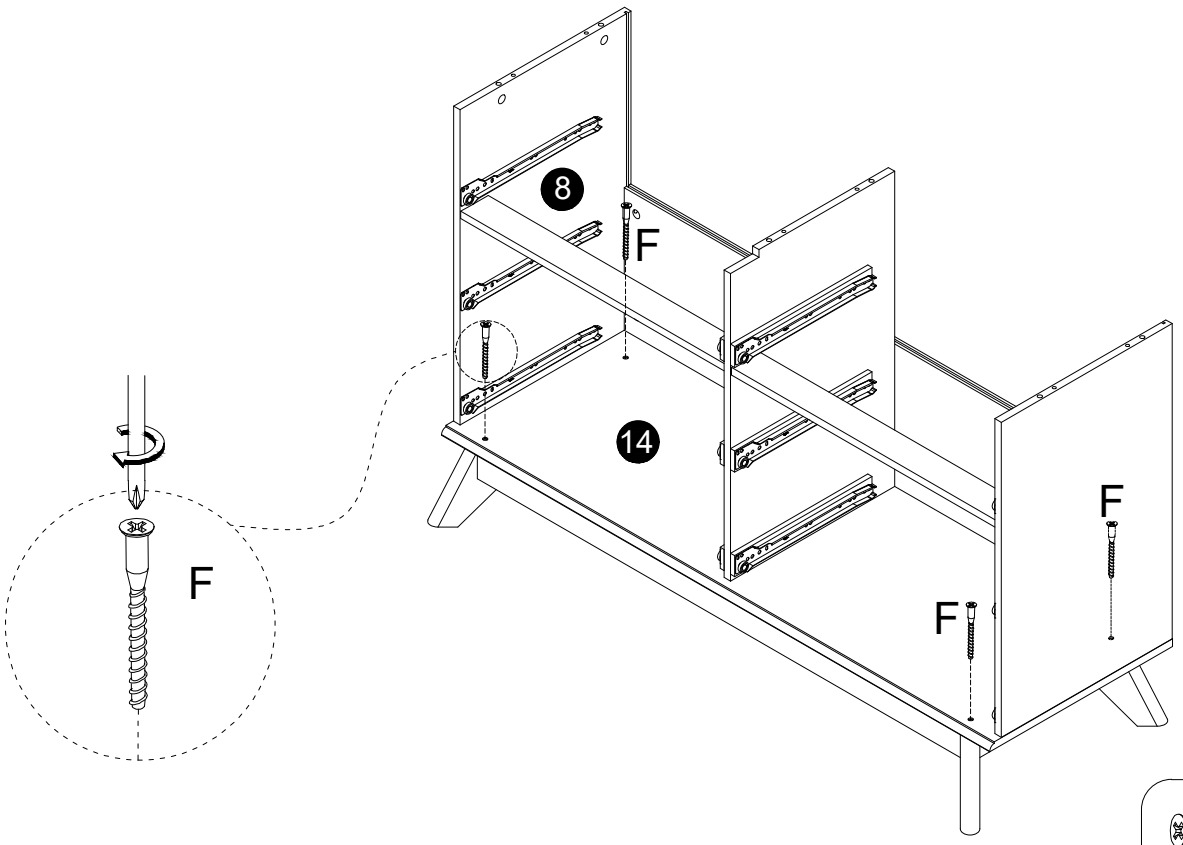

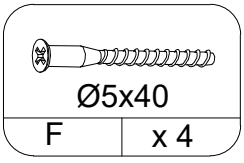



STEP 16

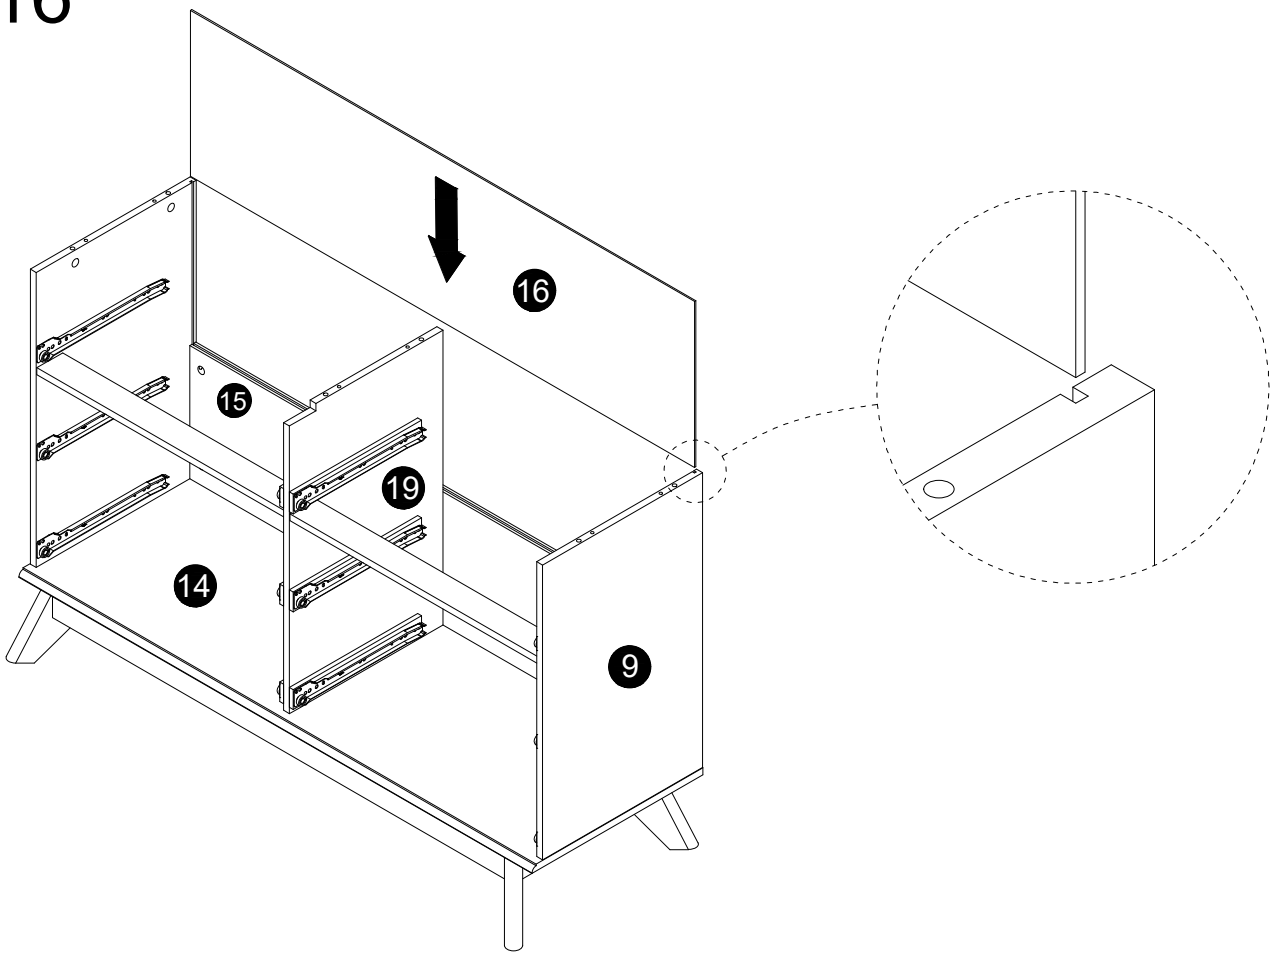


STEP 17


PF021

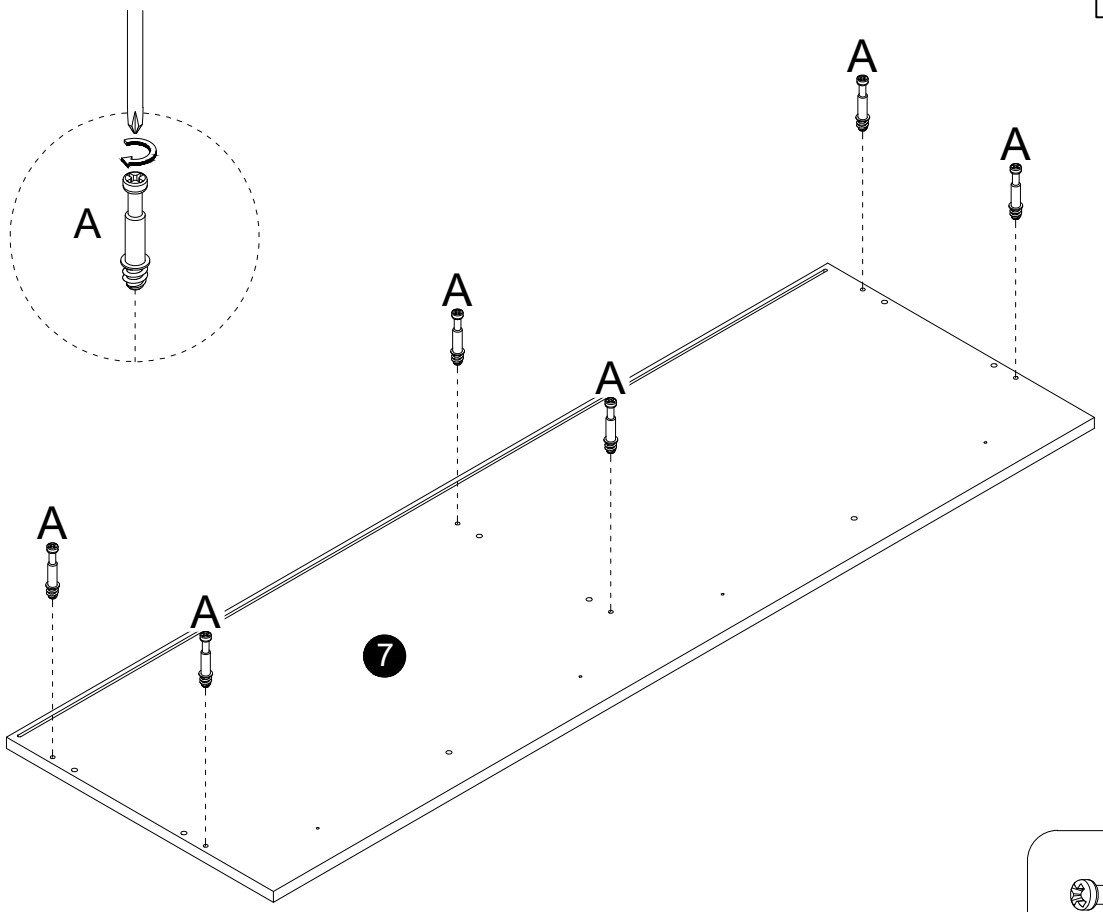


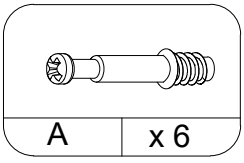

STEP 18

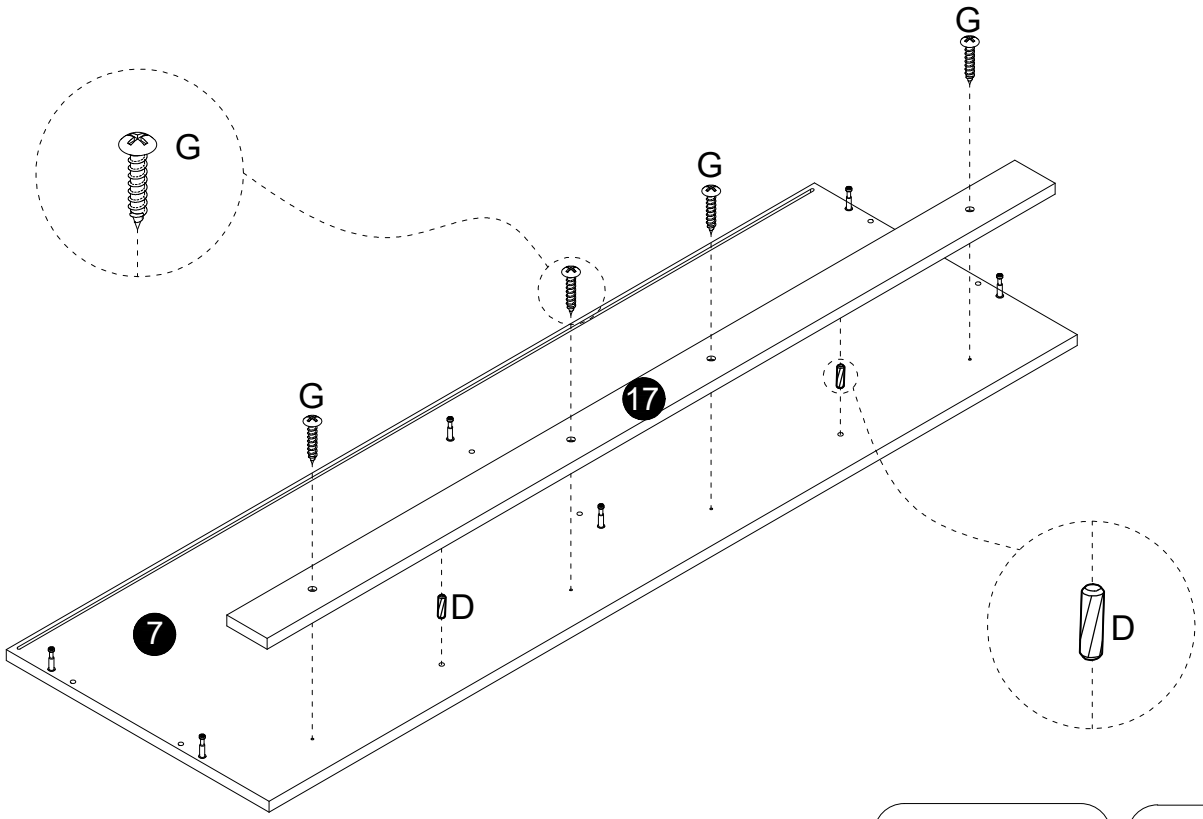


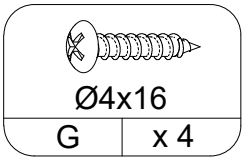

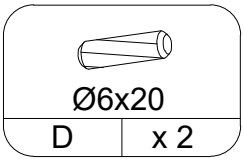

STEP 19


PF021

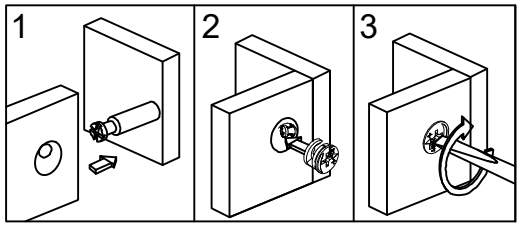

Ø6x30	
C	x 6

Ø15x9.5	
B	x 6


STEP 20

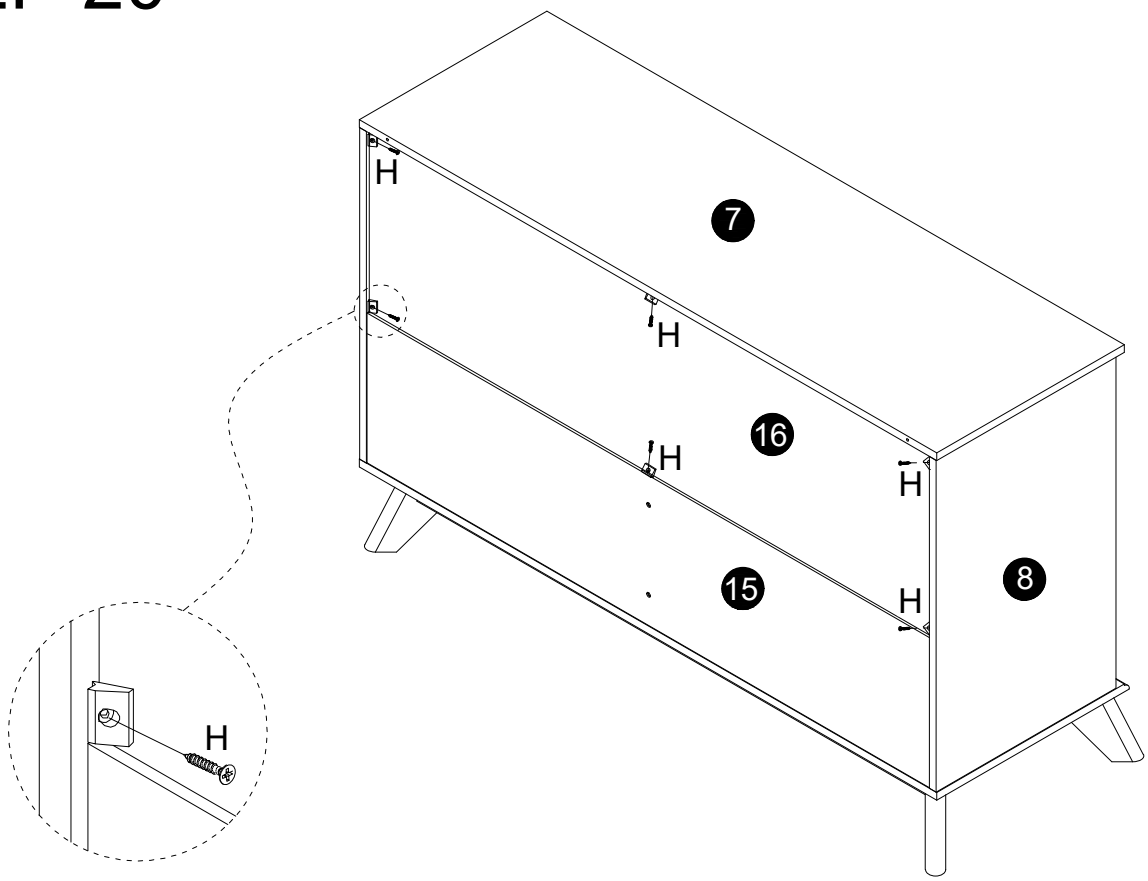


Ø3x17	
H	x 6


STEP 21


PF021

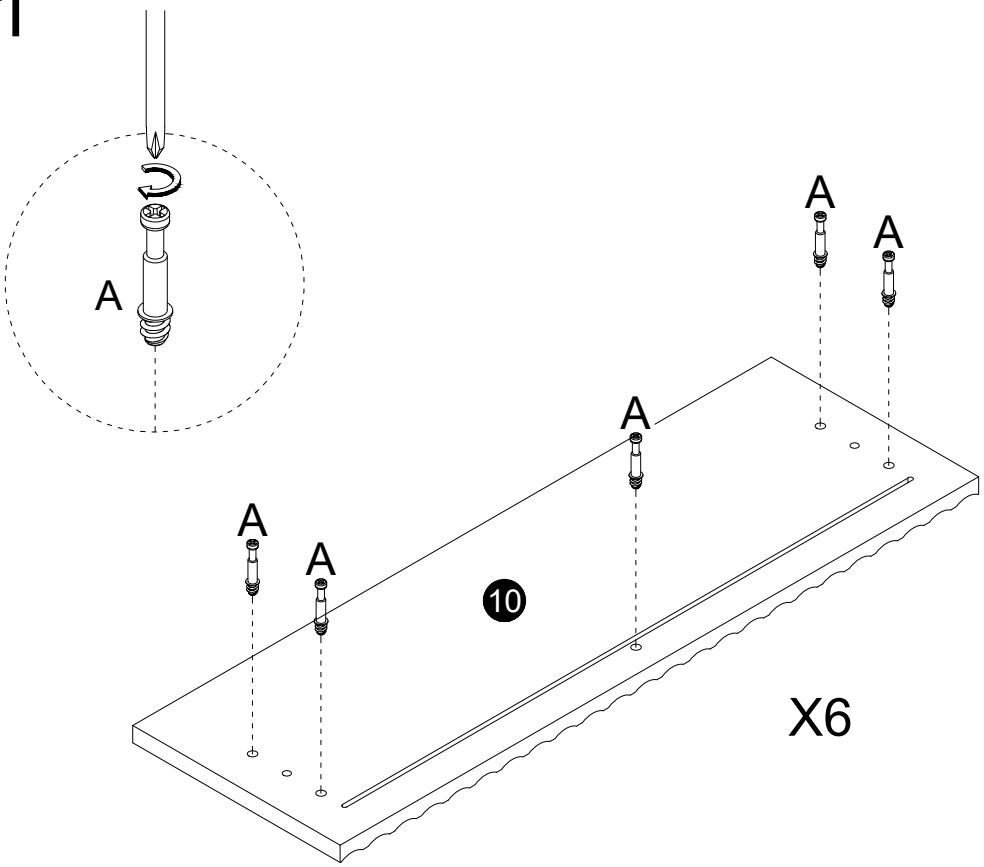

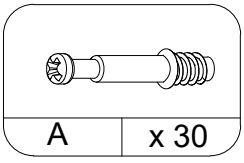


STEP 22

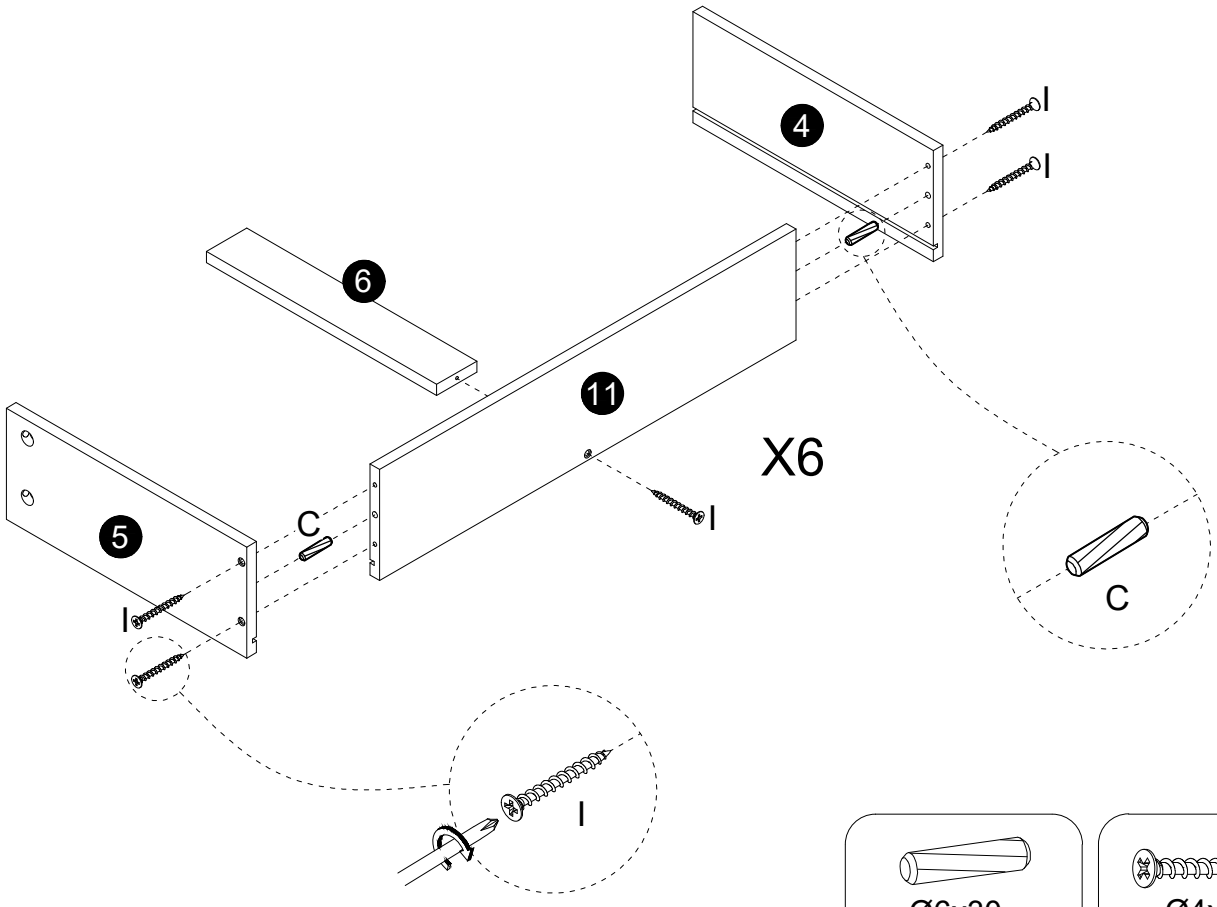

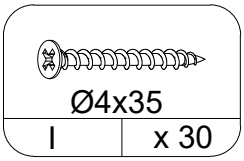


STEP 23

PF021

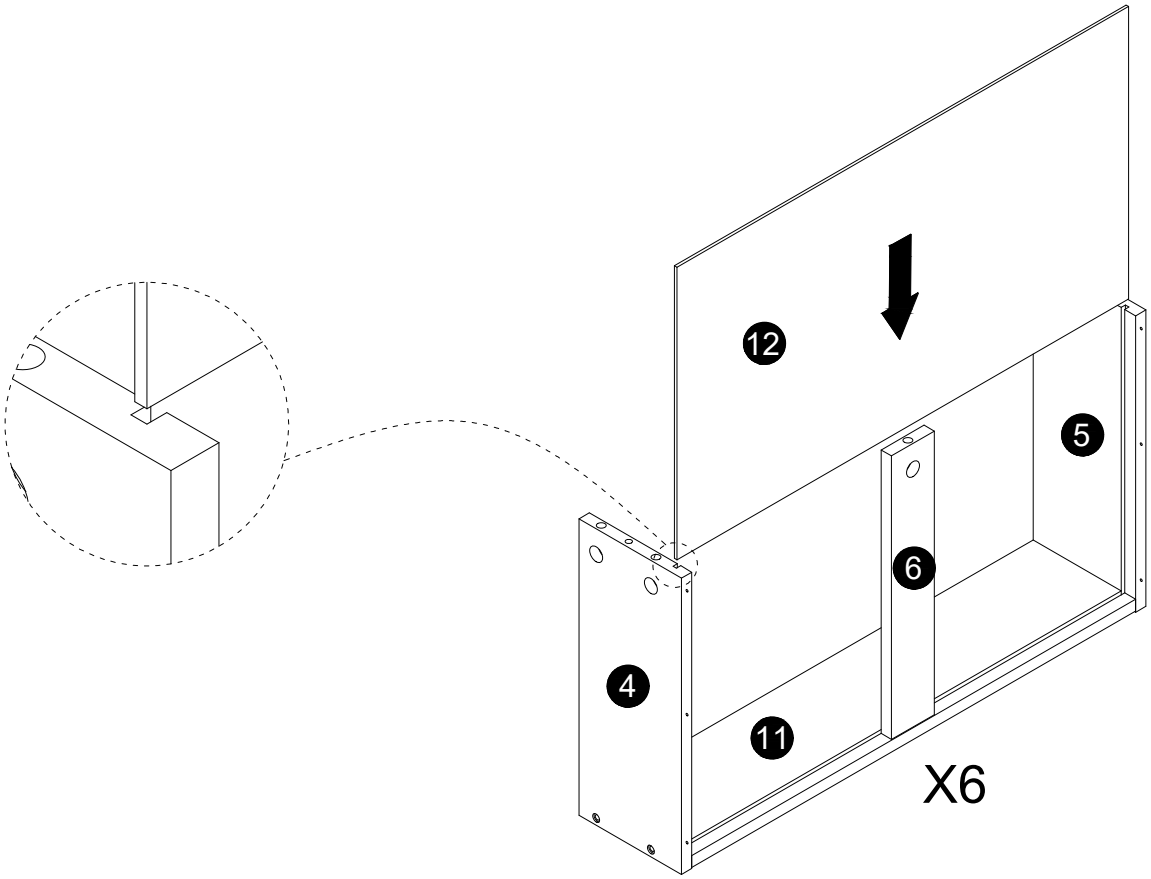

STEP 24

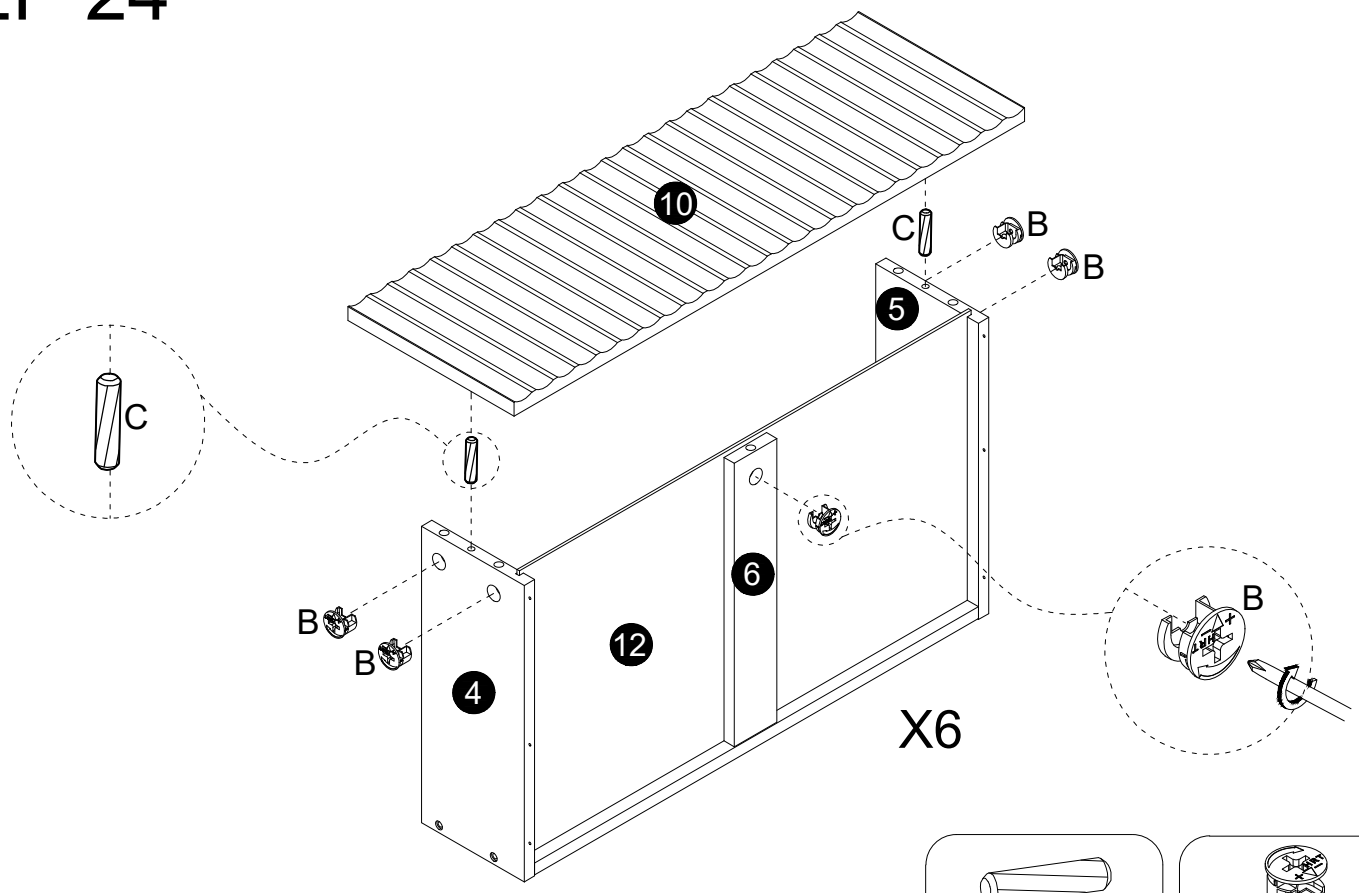


Ø6x30	
C	x 12

Ø15x9.5	
B	x 30

STEP 25

PF021

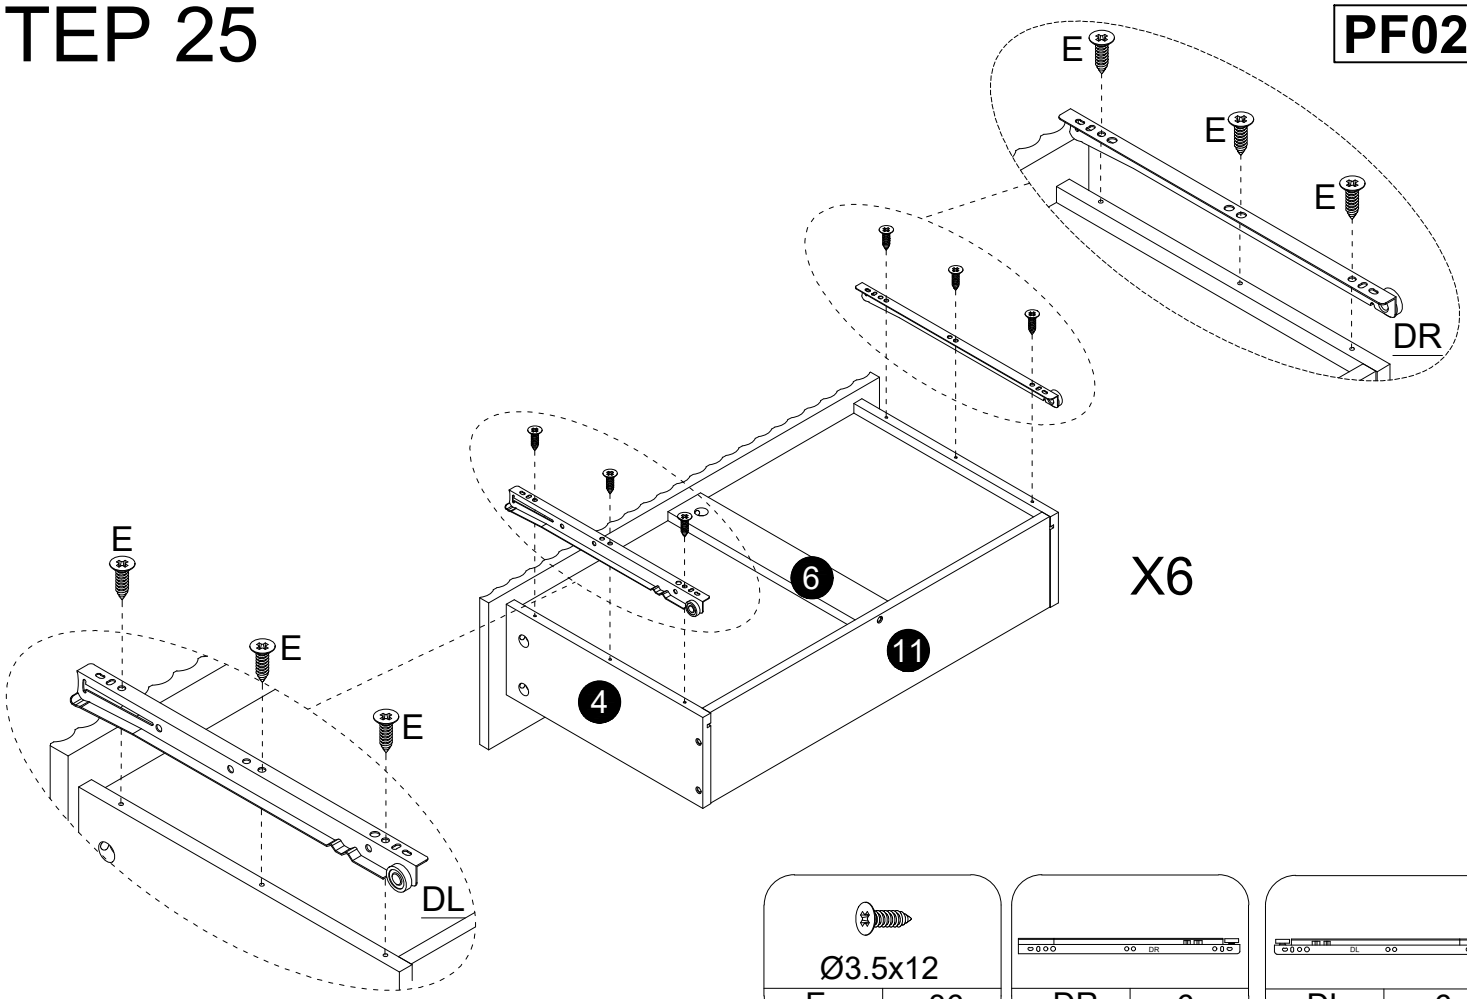


Ø3.5x12	
E	x 36

DR	x 6

DL	x 6

STEP 26

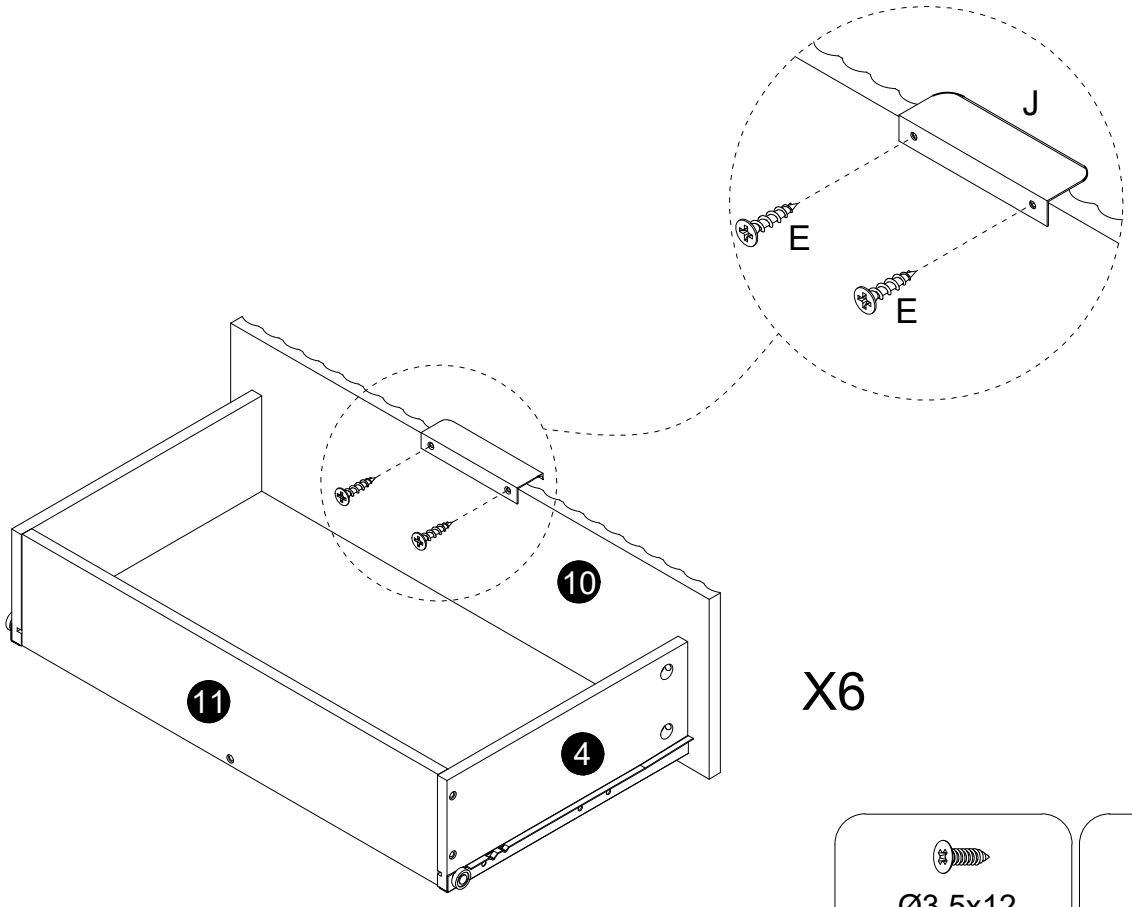



Ø3.5x12	
E	x12

J	x 6

STEP 27


PF021

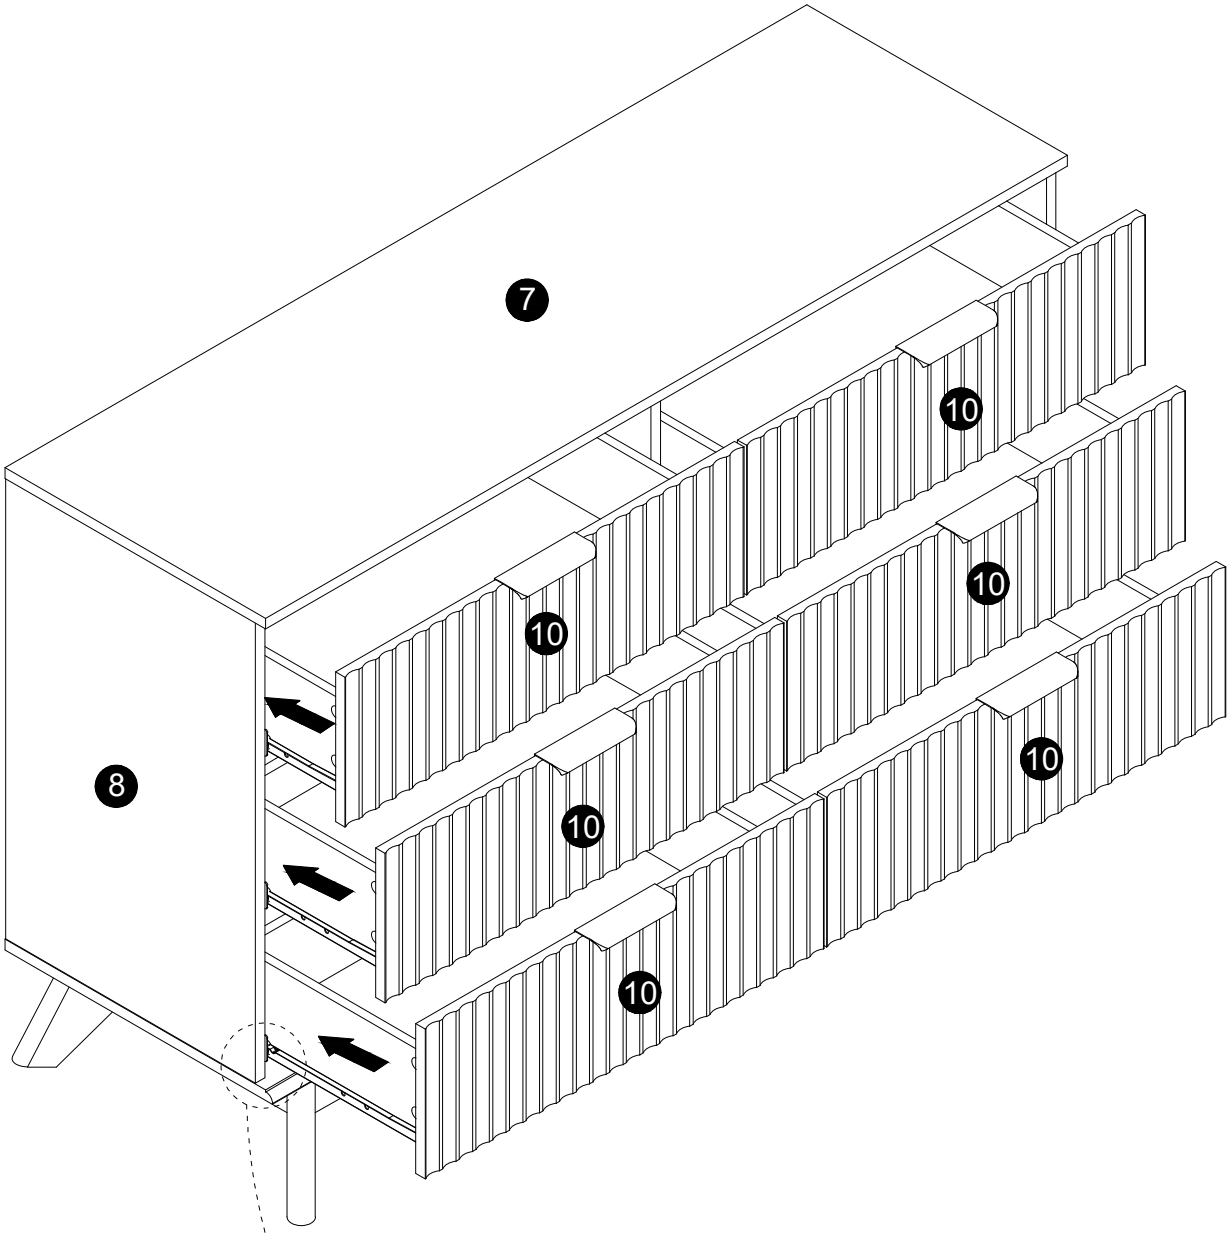

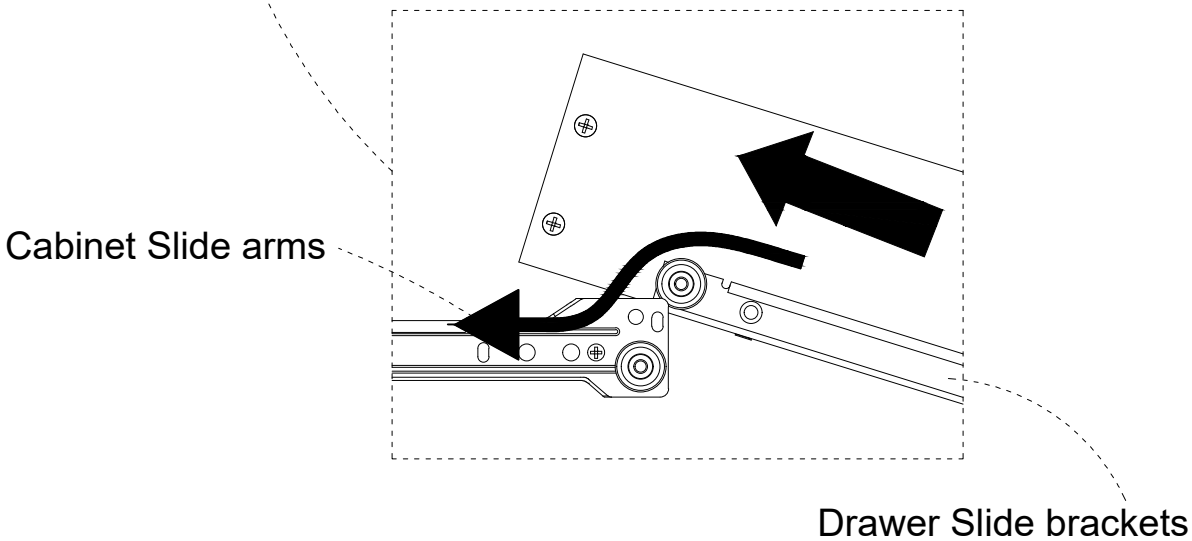



STEP 28

PF021

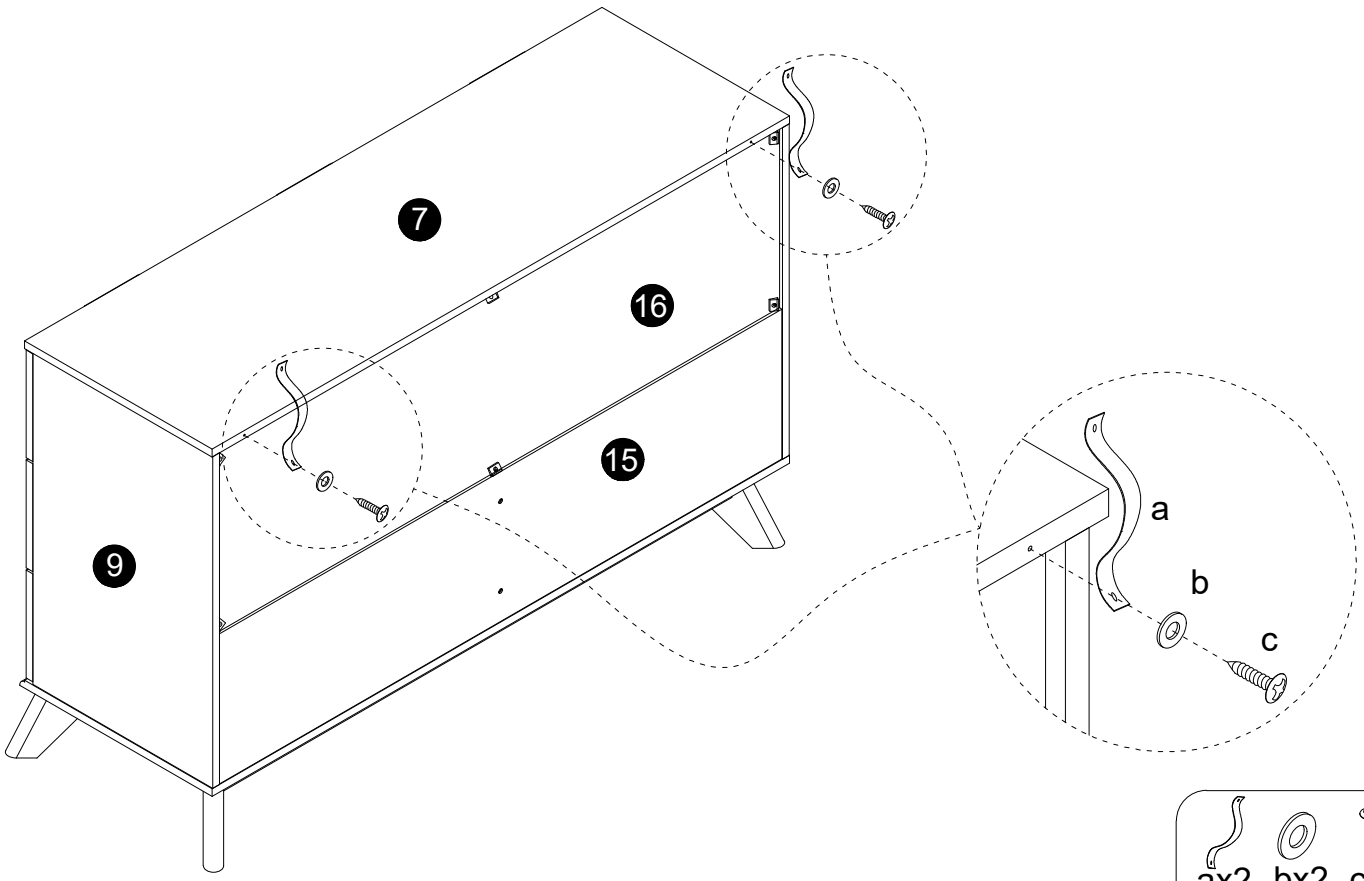


STEP 29

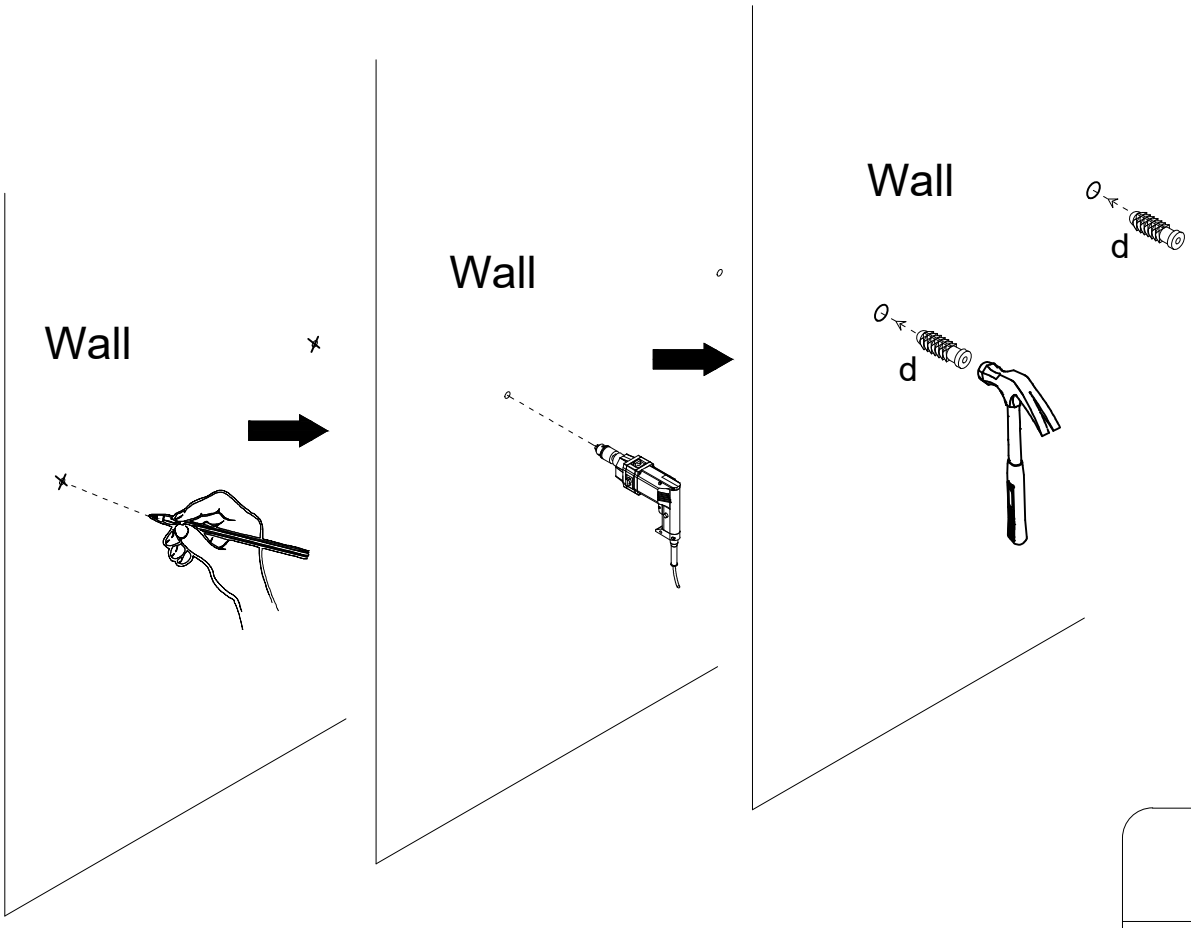


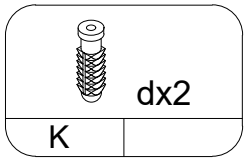

STEP 30

PF021

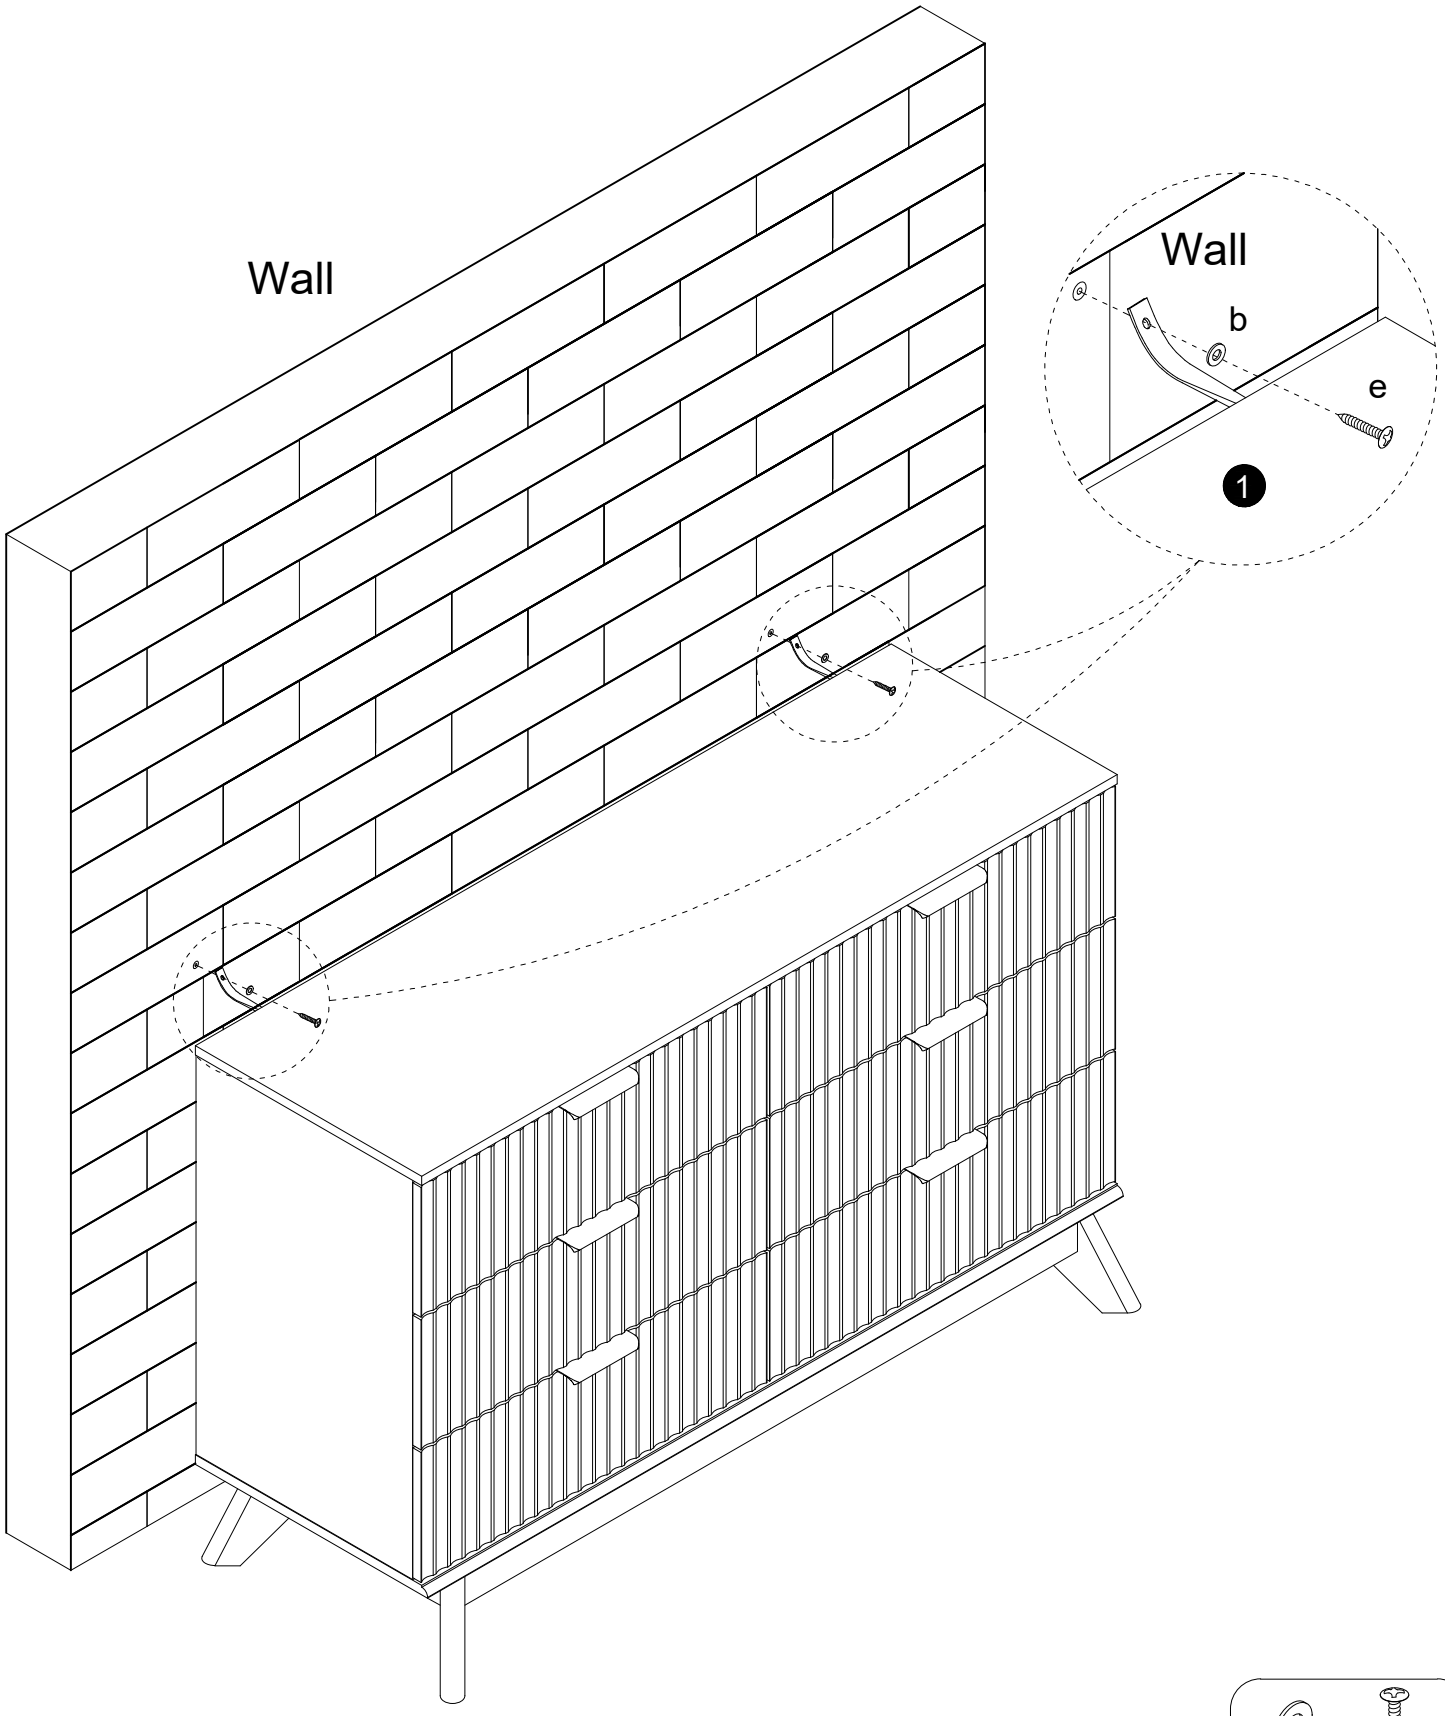

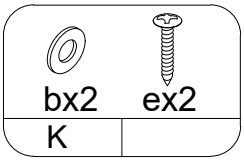

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning