
Portable Evaporative Air Cooler

Product ID. 7ALYG

Scan for Support
support@garvee.com

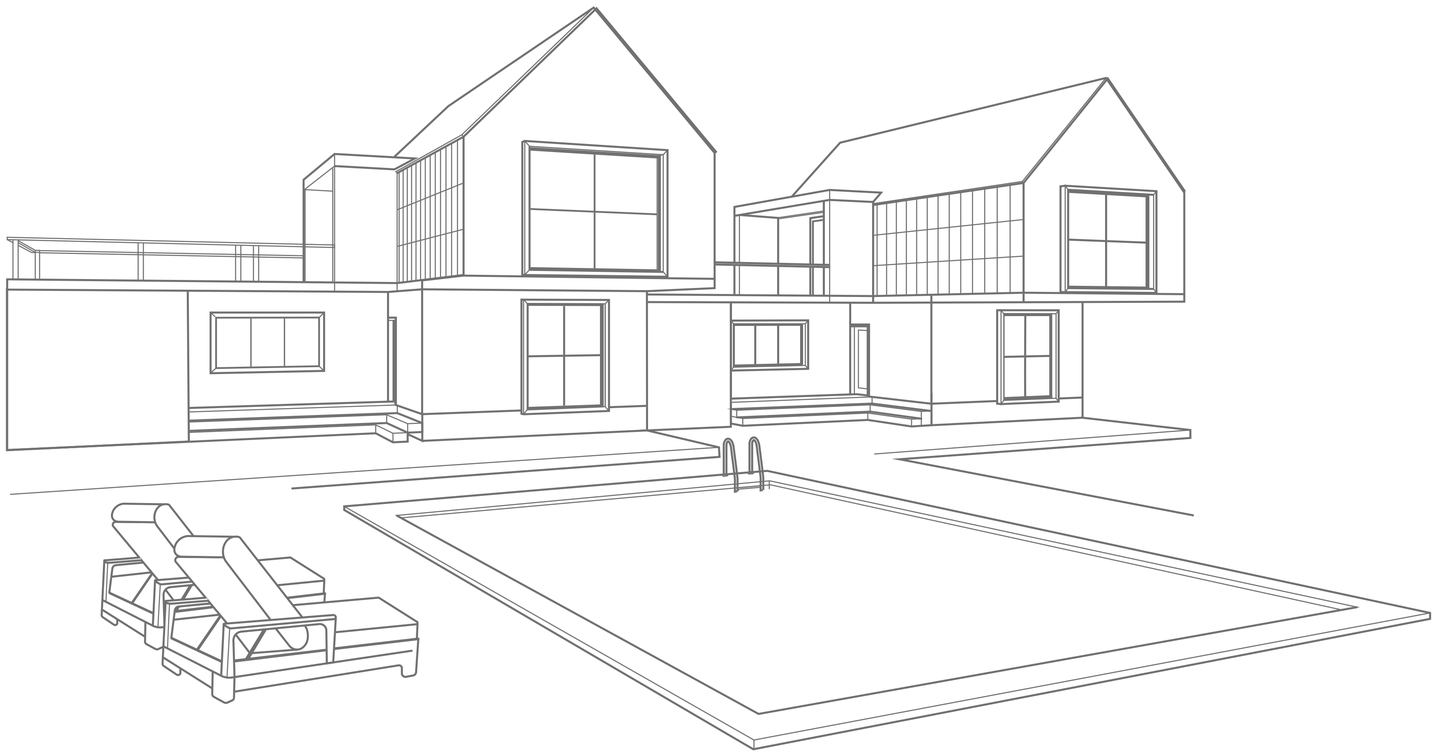


GARVEE.com

143X210MM飞宝

Air Cooler User Manual


Portable Evaporative Air Cooler

Read and save these instructions before use

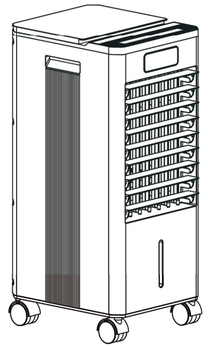


Model: FK2306Y

PRODUCT DESCRIPTION

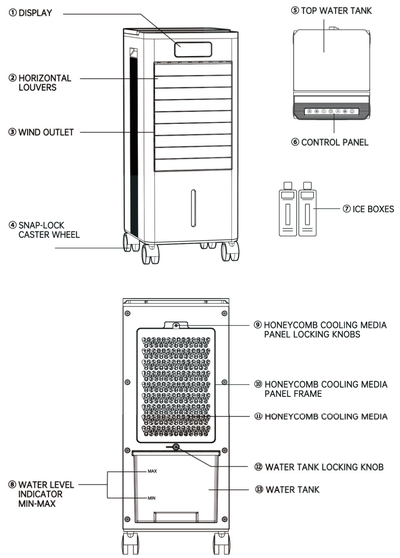

CONTROL PANELINSTRUCTIONS

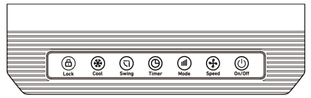

Plug into a power outlet, you will hear the buzzer "beeps" once, and the machine enters the standby state.

On/Off:
Press the "On/Off" button to turn it on, the wind is low-speed and the wind type is "normal".Press this button again to turn the machine off.

Mode:
When the product is in working, touch "Mode" one time or more times, the correspondine icon will be light up and the mode is cycled as follows:

NORMAL → NATURAL → SLEEP

Speed:
Touch "Speed" one time or more times, the wind speed is cycled as follows:

F1(LOW) → F2(MED) → F3(HIGH)

Swing:
Touch "Swing" one time or more times, automatic horizontal swing will be start or stop , corresponding indicator light will be on or off.

Cool:
Touch "Cool", cool function start work and indicator light will be light up..

Timer:
When the unit is working, touch "Timer"one time or more times, timer will be cycled as follows:

1h → 2h → ... → 12h → on

Child lock button:
The first time you press "🔒"keys, except"🔒"All keys except the key will be locked and cannot be controlled: only press again "🔒"key to unlock and restore control.

Note:
The machine comes with a screen-off function. If the machine is not operated within 3 minutes, the display will automatically turn off.

REMOTE CONTROL INSTRUCTIONS


The remote control of the cooling fan and the buttons on the control panel all use touch switches, which can be operated with a light touch, and the functions of the buttons are the same as those on the control panel.



- Cooling Mode: Evaporative Cooling On / Off
- Mode Setting Button: Normal / Natural / Sleep
- Timer: Extended 12-hour timer function.
- Swing Setting Button: Oscillates the unit to spread airflow over a larger area.
- On/Off Button: Turns the device on or off.
- Child Safety Lock: Locks controls to prevent accidental changes by children.
- Speed: Three-speed mode control

Precautions for Using the Remote Control:

① The remote control of this product is equipped with batteries. Please remove the insulating card before use and store it properly.
② The remote control should be pointed towards the front of the air cooler. The effective range is approximately 16 ft. If there is an obstacle in between or if the remote control is not facing the air cooler directly, the effective range will be reduced or may not work.
③ Please handle the remote control with care to avoid impact or drops.
④ If the remote control will not be used for an extended period, please reinsert the insulating card to preserve battery life.

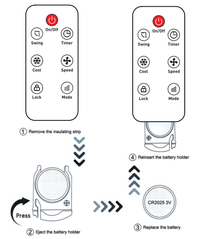

1. It is necessary to unplug the insulating plastic piece at the bottom of the remote control before the remote control can be powered on and used normally.
2. Press the locking button to pop out the battery holder.
3. Replace with the same battery (CR2025 3V) type with the (+) side facing up.
4. Push in the holder until securely locked into place.


WARNING:

Remove the power adapter and cord from the unit and the electrical outlet before emptying or refilling the water tank.Wait for 2 minutes before removing the water tank to allow any excess water in the Honeycomb Cooling Media Cooling Media to drip into the tank.Note: After removing the tank, water from the Honeycomb Cooling Media may continue to drip and collect in the tank compartment. Simply wipe it dry with a clean, dry cloth.

HOW TO USE THE ICE CRYSTALS:


①When adding water to the ice crystal box, do not exceed the MAX water level line and tighten securely
② Put the ice crystal box filled with water into the refrigerator to freeze, and wait for it to harden.
After freezing, place the ice crystal box into the upper water tank and turn on the "COOL" mode.

Note:
① Do not eat the ice product in the box!
② For best results, freeze for about 6 hours before the first use.

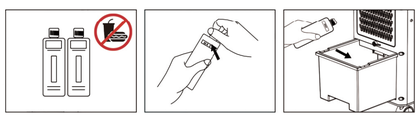

OPERATION METHODS

① When using the appliance, make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline. If you need cooler more, add ice block into upper water slot, see following image:

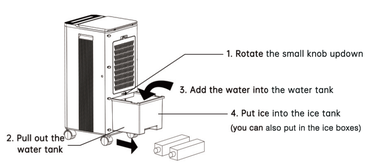


Note: the ice box should be far way from children to avoid eating

② Insert the plug directly into a standard AC socket-outlet. Be sure plug fits tightly into outlet.

③ **"COOLING" Touch**

Note:
Do not use this button without water to avoid damaging the parts. Press the button to start the water pump. The wind will become cooler and more humid.
3-1 Before operating the unit in Cool mode, make sure the water tank's escape valve is properly fixed. Then, proceed to add clean water into the water tank. While adding water, keep an eye on the water level indicator to ensure you do not overfill or underfill the unit. After adding water, press the Cool button to begin blowing cooler air. Press the Cool button again to stop the operation.
3-2 If you find that the air is still not cool enough after Step 1, you can add additional ice blocks directly into the water tank by opening the water tank cover. Be sure not to exceed the ice box capacity, as this may cause damage to the unit or risk electric shock.
3-3 If you prefer to use an ice box instead of ice blocks, simply place it directly into the tank by opening the water door. For best cooling efficiency, place the ice pack in your refrigerator and let it freeze for 1 to 2 hours before use.

④ **How to knock down the dust-proof bracket and Honeycomb Cooling Media filter.**

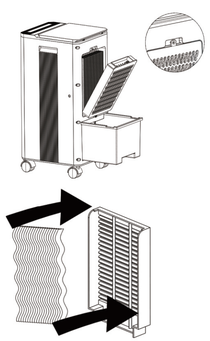

1. Unscrew the screws (see fig), then gently pull out the rear grille until it is fully removed
2. Pull out the frame cover.
3. Take out the Honeycomb Cooling Media panel frame.

PRODUCT PAPAMETERS

Model	FK2306Y
Rated Voltage	120V
Rated Frequency	60Hz
Rated Power	65W
Water Tank Capacity	7L
Rated Evaporation Capacity	0.5-0.6L/H
Wind Speed	Low Speed, Medium Speed, High Speed
Mode	Normal/SleepMode
Swing Angle	Left-Right 60°(Automatic).Up-Down 120°(Manual)
Timing Function	1-12 Hours
Remote Control Distance	16ft

CLEANING & MAINTENANCE

WARNING

- Before cleaning the unit, switch it to the off position and remove the plug from the power socket.
- To clean the outside, use a damp cloth to remove dirt and dust.
- Never use detergents, corrosive elements or any chemicals to clean this product.
- When the product is not in use, store the unit in a dry place out of direct sunlight.

CLEANING & DRAINING THE WATER TANK


- Turn the power "off" and disconnect the unit from power supply.
- Move the unit to a location where it can be drained and remove the drainage tube/cap (see parts description on page 7).
- Once the tank is empty, refill with clean water and drain it again. This should be repeated weekly to maintain the integrity of the unit and to remove particles filtered from the air.

CLEANING & MAINTENANCE


1. **Turn off the unit** and unplug it.
2. **Unscrew the screws** (see fig), then gently pull out the rear grille until it is fully removed
3. **Clean the Honeycomb Cooling Media cooling media** at least twice a year, or more often if needed.
4. **Drain and refill the water tank** weekly to prevent mineral buildup and extend the life of the cooling media.
5. **Avoid using stale water** in COOL mode. If water has been in the tank for a long time, empty and refill it with fresh water.
6. **Clean frequency** depends on local air and water quality. In areas with hard water, clean the cooling media every 2 months.
7. **Dry the cooling media** by turning off the cool function 15 minutes before powering off the unit for best results.



Filter removal on the back

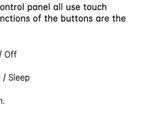

Remove wet curtain paper

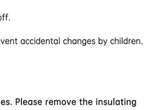

cleanse

TROUBLESHOOTING GUIDE

The following troubleshooting guide addresses the most common problems.
Unplug and disconnect the appliance from the power source before attempting to troubleshoot.

PROBLEM	POSSIBLE CAUSE	SOLUTION
No discharge of air.	Cord is not plugged in.	Make sure power cord is plugged in and the switch is ON.
	Power is not ON.	Turn the unit ON by pressing the power button on the control panel / remote control knob.
Not Cooling/ Unitis making noise.	Pump is not turned ON.	Turn on COOL function from remote or control panel.
	Low or no water in tank, when COOL is selected.	Refill water tank.
Excessive humidity in the room.	In cooling mode, the Air Cooler produces moisture as a result of evaporative cooling. This is normal.	The Air Cooler cools best in dry climates. If the ambient humidity level is high (approx. 60% or above), refrain from using the Air Cooler until ambient humidity is reduced.
		Make sure the window/doors are open and there is adequate cross-ventilation in the room so that the moisturized air can circulate better. Do not use the evaporative cooling function on days with high ambient humidity.
Odors	When the Cooler is new.	When the unit is used for the first time, the Honeycomb Cooling Media Cooling Media will have an odor, which will dissipate within a few hours of initial use.
	Algae or mold due to moist parts. In very damp conditions, algae may form.	Check the Honeycomb Cooling Media Cooling Media. If you see mold spots on the media or suspect an algae issue,remove and replace the Honeycomb Cooling Media Cooling Media.
Remote control does not work	Remote control batteries are old & used orinserted incomectly in the battery Compartmen	Replace with new batteries. Follow the polarity guide inside the battery compartment; Make sure the channel between the remote control and the machine sensor is not blocked by furniture or other objects.

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

(a) misuse, abuse, neglect, or improper installation;

(b) failure to follow instructions or safety precautions;

(c) use of unauthorized parts/accessories;

(d) unauthorized modifications/repairs;

(e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

(a) uso indebido, abuso, negligencia o instalación incorrecta;

(b) incumplimiento de las instrucciones o precauciones de seguridad;

(c) uso de piezas o accesorios no autorizados;

(d) modificaciones o reparaciones no autorizadas;

(e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.

GARVEE

support@garvee.com