ERIDANUS®
Kitchen & Bath Connoisseur

User Manual

SMART BIDET TOILET

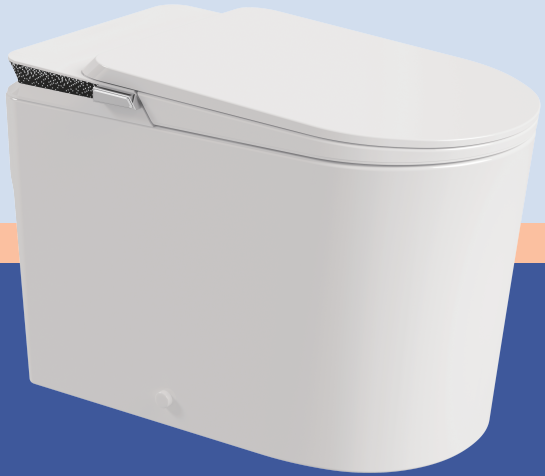


Table Of Contents

Safeguards & Precautions 01

Getting Started 03

Specifications 03

Features 05

Display 06

Operations 07

- Remote Control 07
- Control Buttons 09

Installation 13

Maintenance 15

Troubleshooting 16

Frequently Asked Questions 19

Contact Us 20

Safeguards & Precautions

When using electrical products, especially when children or invalids are present, basic safety precautions should always be followed, including the following:

⚠ DANGER

Risk of Electric Shock

- This appliance MUST be grounded. Connect only to a circuit protected by a Ground-Fault Circuit-Interrupter(GFCI) or Residual Current Device(RCD).
- Do not install or store this appliance where it will be exposed to the weather or temperature below freezing.
- Use this appliance only for its intended purpose.
- Disconnect the power before servicing.

⚠ WARNING

Risk of Personal Injury

- Set the heated seat temperature to low or off to prevent low-temperature burns in children and individuals with limited mobility.
- Do not stand on the toilet or the lid.

Risk of Product Damage

- Keep flammable materials, such as drapes, or any open flame, such as lighted candles or cigarettes, away from this appliance.

⚠ CAUTION

Water Hazards

- Do not pour water or liquid cleaners into any part of this appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.

• Do not install this appliance in a location exposed to excessive moisture. Ensure adequate ventilation to prevent damage to the electronic components caused by high humidity levels.

Structural Integrity

• Avoid excessive force when opening or closing the lid.

• Do not apply excessive force to the nozzle.

• Do not modify or attempt to repair the appliance yourself, unless as specifically instructed in the user manual.

GENERAL USE

• Unplug the product if it will not be used for an extended period of time.

• Avoid dropping any non-flushable items into the bowl.

• Avoid harsh cleaning agents and abrasives that could damage plastic components or the toilet surface. Use gentle, non-abrasive cleaners recommended for electronics or bathroom fixtures.

SAVE THESE INSTRUCTIONS

Getting Started

Thank you for choosing ERIDANUS

To ensure proper operation, it is highly recommended to follow these instructions to inspect whether the received unit is in good condition before installation.

Basic Connections

- Plug the power cord into a grounded AC 110V outlet.
- Check if the indicator lights up to confirm power is connected.
- Connect supply lines to water supply using an angle valve.
- Open the valve.

Pre-Use Checks

NOTE Place your hand on the sensor area to activate the seat sensor for testing functions that require such.


Keep your hand in front of the nozzle during washing test to prevent splashing.


- Inspect the nozzle and supply lines for any leaks.
- Test the washing, drying, flushing functions* to ensure they function properly.
- Ensure that the soft-closing mechanism for the toilet seat and lid functions properly.

* Actual functions may vary from models.

Specifications

Parts Diagram :

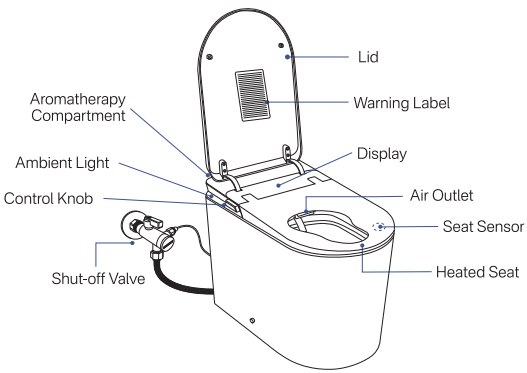

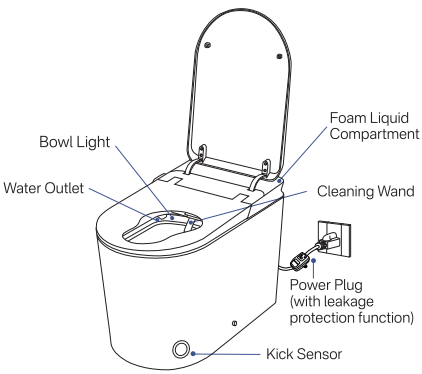



Flange & Wax



Manuals



Remote Control



Mounting Bolts




Battery Box



L-Brackets



Fragrance Stick



Footprint Template



Foam Tablets (4 pcs)



Foam Bottle



Water Filter (Pre-Installed)



1/2" NPT x 3/8" Adapter



Bidet Supply Connector



PVC Bidet Supply Tube




Shut-off Valve
1/2" NPT x G 1/2" x G 1/2"




Braided Supply Hose
G 1/2" x G 1/2"


Technical Data :

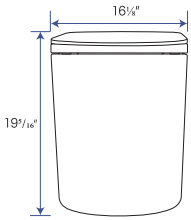

Front View

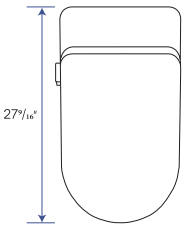

Top View

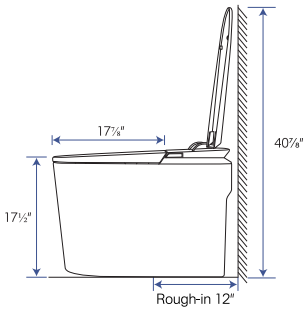

Side View

Parameter			Specifications			
Rated Voltage			AC 110V-120V, 60 Hz			
Rated Power			1380W			
Washing Function	Flow Rate	Feminine Wash	Max 0.22 GPM			
		Rear Wash	Max 0.20 GPM			
	Water Temp(±2°F)		Room temp	93°F	99°F	104°F
	Heating Mode		Instant Heat			
	Heating Power		1600W (Max)			
Seat Heating	Seat Temp(±3°F)		Room temp	93°F	99°F	104°F
	Heating Power		45W			

Air Drying	Air Temp(±9°F)	F1(Room Temp+18°F)	F2(Room Temp+36°F)	F3(Room Temp+54°F)
Water Pressure Requirement		22 - 109 psi (static), Approx. 1.32 Gal in 15 seconds		
Nozzle Position		Adjustable front and back		
Toilet	Overall Dimensions	27 9/16" x 16 1/8" x 19 5/16"		
	Net Weight	94.8 lbs		
	Seat Height	16 15/16"		
	Rough-in	12"		
Power Cord Length		51.2 in./1300 mm		
Remote Control	Power Requirement	Two AAA Batteries		
Blackout Battery Box	Power Requirement	Ten AA Batteries		

FEATURES

WASH FEATURES

Rear Wash	Oscillating Rear Wash
Feminine Wash	Oscillating Feminine Wash
Pulse Massage	Adjustable Nozzle Position
Adjustable Water Pressure	Adjustable Water Temperature
Optimized Rear & Feminine Spray	

DRYING FEATURES

Warm Air Dryer	Dryer Motor Protection
Adjustable Air Temperature	

FLUSH FEATURES

Jet Siphon Flush	Dual Flush(1.24/0.98 GPF)
Automatic Flush	Kick Flush
Manual Flush	Adjustable Flush Volume
Blackout Flush	Built-In Water Tank & Booster Pump

LID & SEAT FEATURES	
Soft-Close Lid & Seat	Kick-to-Open/Close Lid & Seat
Motion Sensor Range Adjustment	Lid & Seat Opening Speed Adjustment
Extra-Wide Support Seat	Heated Seat
Adjustable Seat Temperature	Seasonal Smart Seat Heating
ECO Mode	Thermal Protection
Automatic Lid & Seat Opening/Closing	

CLEANING & HYGIENE FEATURES	
Automatic & Manual Foam Shield	Bowl Pre-Wetting
Automatic Nozzle UV Sterilization	Automatic Nozzle Self-Cleaning
Manual Nozzle Extension Cleaning	Bidet Water Filtration

LIGHTING FEATURES		
Digital Display	Night Light	Ambient Light

CONVENIENCE & SMART FEATURES	
Memory Function	Wireless Remote Control
Side Knob Control	Emergency Stop
Anti-Freeze Protection	

DISPLAY



93

Seat/Water Temperature Display

Shows the current temperature setting for the Seat/Water while it is being adjusted or heated.

F1 Air Temperature Display

Shows the current air temperature level. "--" indicates the air heater is off. F1/F2/F3 represent 18°F/36°F/54°F above room temperature, respectively.

> **Notice:** Seat and air temperature indicators hide after adjustment; only the water temperature is displayed in standby.

E1 Error Code

When the seat is vacant, press the Stop button on the remote 5 times to enter Error Code mode. If no fault is detected, the display shows "--". Press Stop again to exit.

E1: Water heating failure
E2: Water temperature over 113°F
E3: Water temperature sensor error
E5: Dryer power error
E6: Seat temperature sensor error

Operations

Remote Control


Set up

- Make sure two AAA batteries are correctly installed.
- Press any button on the remote control to complete setup.

Pairing the Remote Control with the Toilet

> **NOTE** The remote control is pre-paired with the toilet at the factory. No setup is required unless replacing the remote or the toilet unit.

1. Power on the toilet and wait a few seconds for the self-check to complete.
2. Within 30 seconds after the self-check is complete, rotate and hold the side knob counterclockwise.
3. Release the knob when you hear a beep.
4. Press any button on the remote to complete pairing.



Operations



Strong Flush/Weak Flush

Press once to start a 1.24/0.98 GPF power-assisted siphon flush.



Hip

Press once to start a 150-second rear wash. If Auto Drying is enabled, a 4-minute drying cycle starts automatically afterward.

Press again to switch to the oscillating rear wash.

Press a third time to return to the rear wash.

Press and hold to enable/disable auto lid open.



Female

Press once to start a 150-second feminine wash. If Auto Drying is enabled, a 3-minute drying cycle starts automatically afterward.

Press again to switch to the oscillating feminine wash.

Press a third time to return to the feminine wash.

Press and hold to enable/disable sitting reminder.



Dryer

Press once to start a 4-minute air drying session.

Press and hold to enable/disable confirmation beep.



Child

Press twice to start a 150-second child wash with Level 2 water pressure and temperature, followed by auto drying. No seat occupancy required.

Press and hold to start nozzle self-cleaning.



Water Temp

Press to cycle the bidet water temperature through Off, Low (93°F), Medium (98°F), and High (104°F). The last setting is automatically saved.



Bubble

Press once to dispense a layer of protective foam over the water surface.

Press and hold to enable/disable auto foam dispensing.



Seat Temp

Press to cycle the seat temperature through Off, Low (93°F), Medium (98°F), and High (104°F). The last setting is automatically saved.



Massage

Press during a wash cycle to alternate the water pressure between high and low.

Press and hold during a wash cycle to alternate between warm and cool water.



Air Temp

Press to cycle the dryer temperature through Off (Room Temp), F1 (Room Temp+18°F), F2 (Room Temp+36°F), or F3 (Room Temp+54°F). The last setting is automatically saved.

Press and hold to enable/disable auto drying. When enabled, drying starts after each wash cycle.

Seasonal Temp
Press once to enable Adaptive Seat Heating. Automatically adjusts the seat temperature based on the ambient temperature for comfort and energy savings.

Cover
Press once to open/close the toilet lid.

Ring
Press once to open/close the toilet seat.

Light
Press once to turn the night light on/off.
Press and hold to enable/disable ECO Mode.
ECO Mode keeps the seat at 82°F and turns off the ambient light.

Sterilization
Press once to start a 30-second UV nozzle sterilization when the seat is unoccupied.

Stop
Press once to stop all functions immediately.
Press and hold for 2 seconds to power off the toilet.

Press to adjust the nozzle position forward or backward during rear wash and feminine wash, only when oscillating mode is not activated.

Press to increase or decrease the water pressure, ranging from gentle, medium, strong, extra strong.

Control Buttons

Power Status	Seat Occupied	Operation			
On	No	Turn Clockwise	-		
		Turn Counterclockwise	-		
		Press	Flushing Session		
		Press and Hold	Power On/Off		
	Yes	Turn Clockwise	Once Rear Wash	Twice Oscillating Wash	Again Stop Oscillating
		Turn Counterclockwise	Once Feminine Wash	Twice Oscillating Wash	Again Stop Oscillating
		Press	Stop Current Wash/Drying Cycle		
		Press and Hold	Air Drying		
Off - Connect the Backup Battery	-	Press and Hold	Flushing Session		

Feature	Operation
Turn Pre-Wet on/off	1. Press and hold ⓞ until you hear : One beep: Pre-wet function is off. Two beep: Pre-wet function is on. When disabled, the bowl will not be automatically pre-wetted upon seating.
Adjust Lid & Seat Opening Speed	1. Press and hold for 5 seconds until the display shows -5 to 5. 2. Use the "∧ ∨" buttons to adjust the lid opening speed, from -5 (Softest) to 5 (Strongest). 3. Use the "＋ —" buttons to adjust the seat opening speed, from -5 (Softest) to 5 (Strongest). 4. Press ⓞ to save.
Adjust Auto Lid Sensor Range	1. Press and hold for 5 seconds until the display shows 0. 2.Press and hold again until the display shows 01–05. 3. Use "∧ ∨" to select the sensor range: 01: Nearest (4 in / 0.1 m) 05: Farthest (47 in / 1.2 m) 4. Press ⓞ to save.
Enable/Disable ECO Mode	1. Press and hold the button until you hear: One long beep: ECO Mode is on. One short beep: ECO Mode is off. When enabled, the heated seat stays at 82°F and the ambient light turns off.
Enable/Disable Sitting Reminder	1. Press and hold button until you hear: One long beep: Sitting Reminder is on. One short beep: Sitting Reminder is off. When enabled, the toilet emits five short beeps after 20 minutes of continuous seating to remind you to avoid prolonged sitting.
Enable/Disable Silent Mode	1. Press and hold the button for 3 seconds until you hear: No beep: Silent Mode is on. One short beep: Silent Mode is off. When enabled, all confirmation beeps are disabled, allowing the toilet to operate quietly.


Enable/Disable Auto Foam Shield	1. Press and hold the button until you hear: One beep: Auto Foam Shield is off. Two beeps: Auto Foam Shield is on. When disabled, foam will no longer be dispensed automatically when you sit down, but manual activation via the remote remains available.
Enable/Disable Automatic Drying	1. Press and hold the button until you hear: One short beep: Automatic drying is off. One long beep: Automatic drying is on. When disabled, the dryer will not start automatically after a wash cycle.
Enable/Disable Auto Open Lid (Default: Enabled)	1. Press and hold until you hear: One beep: Auto Open lid is off. Two beeps: Auto Open lid is on. When disabled, the lid will no longer open automatically when you approach the toilet.
Enable/Disable Auto Flush	1. Press and hold until the display shows 02. 2. Use" ∧ ∨ "to select: 01: Auto flush on 00: Auto flush off 3. Press to save.
Adjust Ambient Light Brightness	1. Press and hold the button to power off the toilet. 2. Press the " — " button to adjust the brightness. Level 1: Off Levels 2-4: Increasing brightness 3. Press and hold the button to power the toilet back on.
Enable/Disable Auto Lid & Seat Closing	1. Press and hold the button to power off the toilet. 2. Press and hold the button until you hear: * One long beep: Auto lid & seat closing is on. * One short beep: Auto lid & seat closing is off. 3. Press and hold the button to power the toilet back on. When disabled, the lid and seat will no longer close automatically after you leave.

Enable/Disable Auto Flush During Automatic Lid & Seat Closing	1. Press and hold the button to power off the toilet. 2. Press and hold the button until you hear: * One long beep: Auto flush is on. * One short beep: Auto flush is off. 3. Press and hold the button to power the toilet back on. When disabled, the toilet will not flush automatically during automatic lid and seat closing.
Enable/Disable Automatic Nozzle UV Sterilization	1. Press and hold the button to power off the toilet. 2. Press the button until you hear: * One beep: Automatic UV sterilization is off. * Two beeps: Automatic UV sterilization is on. 3. Press and hold the button to power the toilet back on. When disabled, the nozzle will no longer extend for UV sterilization when the lid is closed.
Enable/Disable Foot Kick Control	1. Press and hold the button until you hear: One long beep: Foot Kick Control is on. One short beep: Foot Kick Control is off. When disabled, the toilet will no longer respond to foot kick activation.
Remote Pairing	1. Within 30 seconds after the toilet is powered on and completes its startup self-check, rotate and hold the side knob counterclockwise until you hear a beep. 2. Press any button on the remote control to complete the pairing.
Factory Reset	1. Press the button five times consecutively until you hear one long beep and the display shows "--". 2. Press the button until you hear five short beeps. 3. Press the button to save and exit.

Installation

Toilet

- Please refer to Eridanus installation guide for toilet installation.

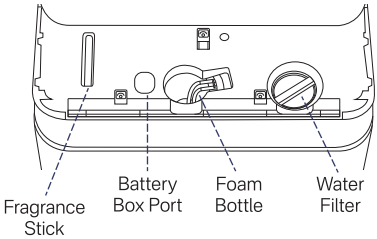

Remote Control

- The shelf can be wall-mounted using either peel-and-stick adhesive or screws. It's highly recommended that the remote be installed within reach when seated.

NOTICE The following procedures require removing the rear cover of the toilet first.


Backup Battery

Use the following steps to enable blackout flush during a power outage.

Ten AA batteries (not included) are required to support power-assisted flushing during a power outage.

1. Insert ten new AA batteries into the battery box, ensuring the correct polarity.

2. Refer to the illustration and plug the battery box connector into the corresponding power port.

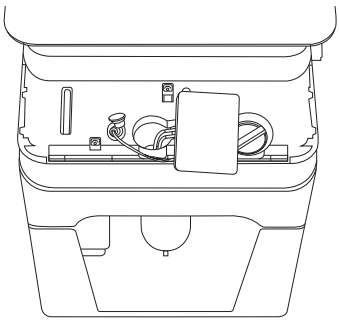


NOTE: Connect the battery box and press the side knob to flush during a power outage; Other functions are unavailable.

Foam Shield

1. Place one foam tablet into the foam bottle, then fill with water and shake well until fully dissolved.

2. Screw the foam bottle onto the foam bottle port until securely tightened.

3. Place the foam bottle back into its compartment.

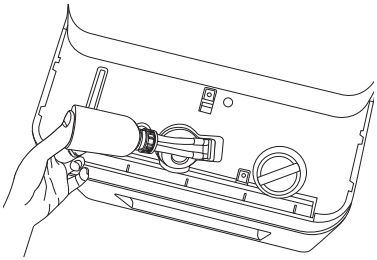


⚠ **NOTE:** Foam tablets are consumable items and should be purchased separately. You may choose any preferred scent or brand. Foam shield liquid can also be used as an alternative.

Water Filter

1. Turn the old water filter counterclockwise to remove it, and dispose of it in accordance with local regulations.

2. Unpack the new water filter and turn it clockwise into the original position until securely tightened.

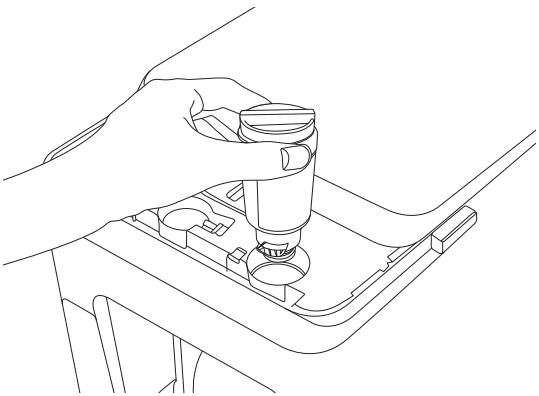

⚠ **NOTE:** The water filter is pre-installed inside the toilet. If you need a replacement, please scan the QR code on the last page to purchase our replacement internal filter, or contact our support team.
Alternatively, you may purchase a third-party external filter from other retailers. An external filter should be installed between the shut-off valve and the bidet supply line.

Maintenance

Eridanus smart toilets are meticulously crafted and have undergone strict quality inspection to ensure each unit lasts for years to come. As a combination of plumbing fixtures and appliances, Eridanus toilets would require regular care as to maintain their hygiene and functionality. Proper maintenance guarantees longevity and optimal performance.

General Maintenance

Disconnect Power Before Maintenance/Servicing

- Always disconnect the power supply before performing any maintenance tasks to prevent personal injury or property damage.

Avoid Water Exposure

- Do not allow water to enter the control panel or electrical components.

Avoid Excessive Moisture

- Ensure adequate ventilation to prevent damage to the electronic components caused by high humidity levels.

Regular Inspections

- Perform regular inspections of all components to ensure the toilet in good working order and address any issues promptly.

Regular Maintenance

Cleaning the Toilet Bowl

- Use a non-abrasive toilet cleaner.
- Apply the cleaner to the bowl, let it sit for a few minutes, then scrub with a toilet brush.
- Avoid using harsh chemicals or abrasive pads.

Cleaning the Nozzle

- Activate the nozzle cleaning mode via the control panel or remote.
- Use a soft brush or cloth to gently clean the nozzle.

Cleaning the Seat and lid

- Wipe the seat and lid with a damp cloth and mild detergent.
- Avoid using abrasive cleaners or scrubbing pads that could damage the surface.

- Dry with a soft cloth to prevent water spots.

Replacing the Fragrance Stick

- Remove the rear cover.
- Remove the used fragrance stick and insert a new one.
- Reinstall the rear decorative cover.

⚠ **NOTE:** Fragrance sticks do not need to be replaced. Simply refresh them with your preferred essential oil when the scent fades.

Troubleshooting

Power Troubleshooting

Problems	Possible Causes	Recommended Actions
Unit fails to operate	a) Power plug is loose or not connected. b) GFCI has tripped. c) Power outage or circuit breaker tripped. d)The power cord is damaged or defective.	a) Ensure the plug is securely inserted into a grounded outlet. b) Press the "Reset" button on the power plug. c) Check the main circuit breaker in your home. d) Discontinue use immediately. Contact customer service to arrange a replacement power cord.
Remote control is unresponsive	a) Remote control is unpaired. b) User is not seated. c) Batteries are low or dead. d) Batteries are installed incorrectly. e)Remote control is defective.	a) Re-pair the remote control. b) Sit on the toilet: Washing and drying functions will only work when someone is seated. c) Replace with two new AAA alkaline batteries. d) Reinstall batteries according to the (+/-) polarity. e) Contact Customer Service: Email support@eridanus.net for a replacement.

Wash & Spray Functions

Problems	Possible Causes	Recommended Actions
No water from nozzle	a) Water supply is cut off. b) Angle Valve is closed. c) Supply hose is kinked or bent.	a) Wait for water supply to be restored. b) Fully open the angle valve. c) Straighten the inlet hose to ensure smooth flow.
Nozzle fails to extend	a) Nozzle is jammed or stuck. b) Nozzle motor is defective.	a) Gently pull out the nozzle manually, then restart the unit to check. b) Contact Customer Service: Email support@eridanus.net for a replacement.
Weak water pressure	a) Pressure is set to the lowest level. b) Filter screen is partially blocked.	a) Increase pressure via the remote control. b) Clean the filter screen.
Erratic or irregular spray	a) Nozzle head is dirty or clogged.	a) Clean the nozzle with a soft brush.

Temperature & Heating

Problems	Possible Causes	Recommended Actions
Water/Seat/Dryer is not warm	a) Temperature is set to "Off" or "Low". b) Heating element is defective.	a) Adjust to a higher temperature setting. b) Contact Customer Service: Email support@eridanus.net for a replacement.
Water is not warm	a) Pulse/Massage mode is on.	a) Turn off the massage function if consistent heat is preferred.
Seat is not warm	a) Energy-saving (ECO) mode is active.	a) Deactivate ECO mode for immediate heating.
Air dryer blows no air	a) User is not seated. b) Dryer motor is defective.	a) Sit on the toilet: The dryer will only activate when the seat sensor detects a user. b) Contact Customer Service: Email support@eridanus.net for a replacement.

Mechanical & Others

Problems	Possible Causes	Recommended Actions
Seat/lid falls too fast	a) Hinge is broken or cracked. b) Lid motor is defective.	a) Contact Customer Service: Email support@eridanus.net for a replacement. b) Contact Customer Service: Email support@eridanus.net for a replacement.
Seat/lid opens too slowly	a) Lid opening force is set too low.	a) Adjust setting: Increase the lid opening force on the remote.
Auto-open lid does not work	a) Auto-open feature is disabled. b) Sensor detection range is set too short.	a) Turn on Auto-open: Press and hold [Rear] until you hear two beeps. b) Adjust sensor range: Increase the radar sensing distance via the remote.
Foot sensor is unresponsive	a) Infrared sensor is less sensitive to dark-colored surfaces. b) Foot sensor cable is loose or disconnected. c) Foot sensor is defective.	a) Reposition foot: Move your foot or change your footwear/angle to try again. b) Check cable connection: Inspect the foot sensor wiring and reconnect it securely. c) Contact Customer Service: Email support@eridanus.net for a replacement.

Flushing Issues

Problems	Possible Causes	Recommended Actions
Poor flushing performance	a) Angle valve is not fully open. b) Supply hose is kinked or bent. c) Pulse valve is defective. d) Toilet bowl or trapway is clogged.	a) Fully open the angle valve. b) Straighten the hose to ensure smooth flow. c) Contact Customer Service: Email support@eridanus.net for a replacement. d) Clear the clog using a plunger or toilet auger.
Water splashes during flush	a) Water pressure is too high. b) Rim jet nozzle is misaligned.	a) Partially close the angle valve to reduce pressure. b) Adjust the rim jet position toward the inner bowl wall.

Toilet is leaking	a) Loose connection at angle valve or hose.	a) Contact Customer Service: Email support@eridanus.net a video of the leak for assistance.

Frequently Asked Questions

Question	Answer
Water pressure is insufficient, resulting in poor flushing performance. What should I do?	Install a booster pump at the toilet's supply to ensure adequate water pressure.
How to flush during a power outage?	Ensure that the backup battery is installed. Press the side knob to enable blackout flush.
Is the hot water continuous, or is there a wait time for heating?	There is no need to wait for heating. The hot water is supplied instantly, as the heater quickly raises the water temperature, providing a continuous flow of hot water.
How can I tell if the nozzle is undergoing an auto cleaning session?	The nozzle automatically performs self-cleaning before and after each cleaning session, just before water sprays out.
Can I turn off flushing before the drying session?	No, the model requires flushing before the drying session begins.
Can I manually close the toilet lid and seat?	For model with Auto Open, it's recommended to use the remote control or foot kick to operate the lid and seat.
Will lid automatically close after leaving the seat?	On models with auto lid, the lid closes automatically 6 seconds after you leave the seat. If the seat is raised for urination, the seat and lid close automatically after 120 seconds.
I cannot find some functions on my remote. Where are they?	Some functions are accessed using button combinations. Please refer to the Operation section for details.

How do I restore the toilet to its default factory settings?	Press the "Stop" button five times consecutively until you hear one long beep and the lid display shows "--". Press the "Dry" button until you hear five short beeps, then press the "Stop" button once to save the setting and exit.
Is the toilet waterproof?	The toilet has an IPX4 water resistance rating.
The included shut-off valve is not compatible with existing plumbing. What should I do?	Option A: If your shut-off valve has a 3/8" outlet, please refer to the installation manual included with your package. A 3/8" × 1/2" adapter is included and can be installed onto the supplied shut-off valve for compatibility. If you have any questions during installation, please contact our customer support team by email. Option B: For a quicker solution, you can check local plumbing codes and purchase a compatible adapter locally.
What is the Default factory setting?	• Automatic open: On (sensor range: 8 in. / 20 cm) • Seat temperature: 104°F • Water temperature: 104°F • Air temperature: F3 (54°F above room temp) • Bowl pre-wetting: On • Auto flush: On • Auto Foam Shield: Off
The flush is too powerful and water splashes out of the bowl. What should I do?	You can reduce the water flow by partially closing the shut-off valve or adjust the angle of the flush nozzle to help minimize splashing.

Contact Information

Email	support@eridanus.net

For any product-related questions or concerns, feel free to reach out to us via the email above. Our support team will respond within 24 business hours.

User Manual

© COPYRIGHT 2026 ERIDANUS