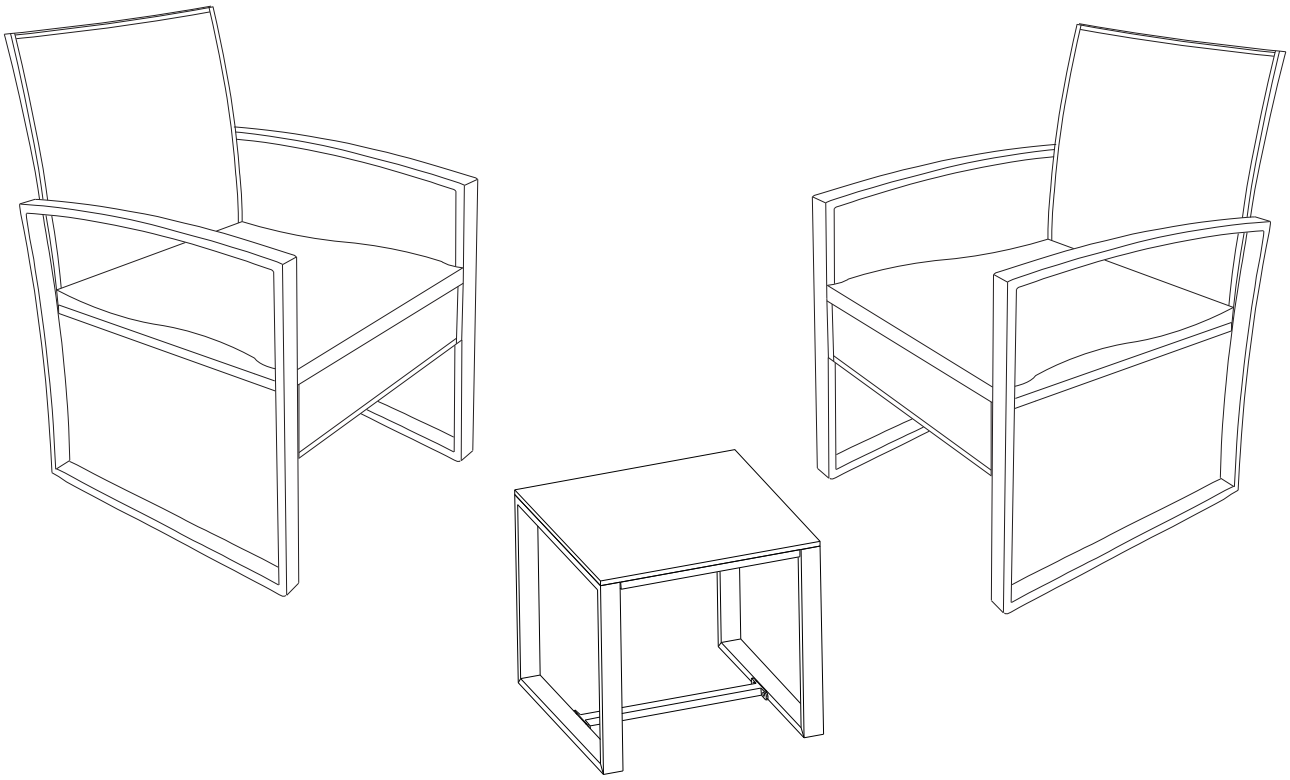
BSOT-001



ATTENTION:

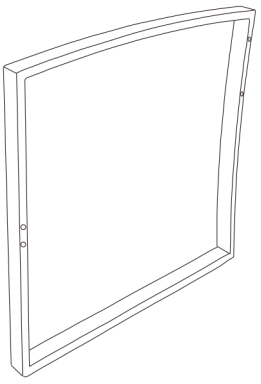
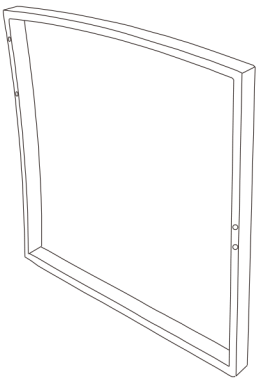
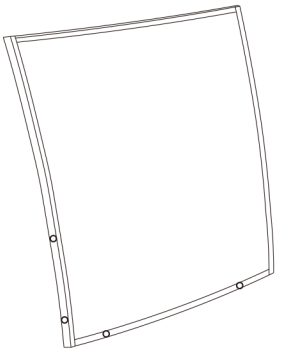
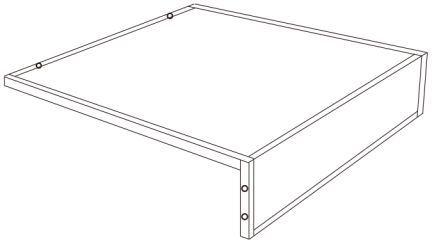

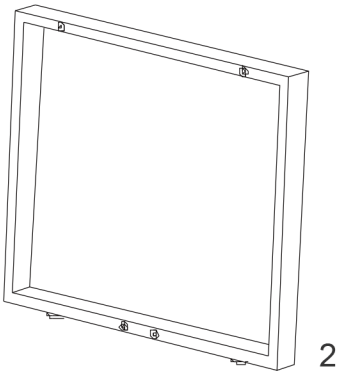
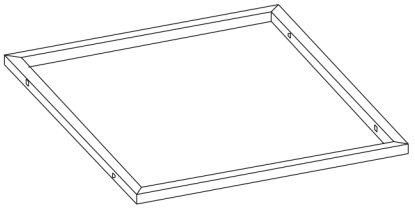
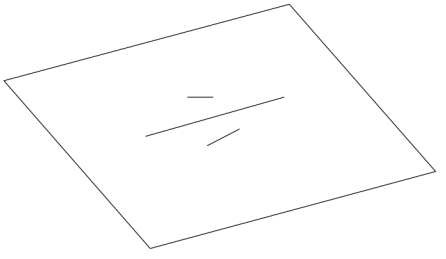
1.Please fix all the screws first,do not lock off,after assemblling is fully completed,lock all at once finally.






2.Please check the manual carefully and make sure you have received all the parts.

3.If there is any missing,please let us know the letter of the parts you need.

4.If there is any damage,please send clear photos to us,we will check and offer you best solution soon.


PARTS LIST

A  2pcs	B  2pcs	C  2pcs
D  2pcs	E  1pc	F  2pcs
G  1pc	H  410x410x5mm 1pc	I  M6 24pcs

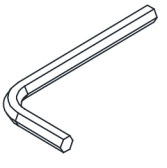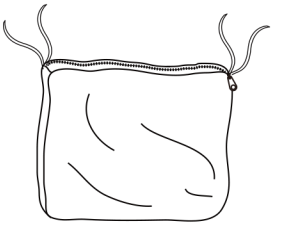J1  M6x15 8pcs	J3  M6x35 20pcs	K  1pc
J2  M6x25 4pcs		L  2pcs


ASSEMBLY

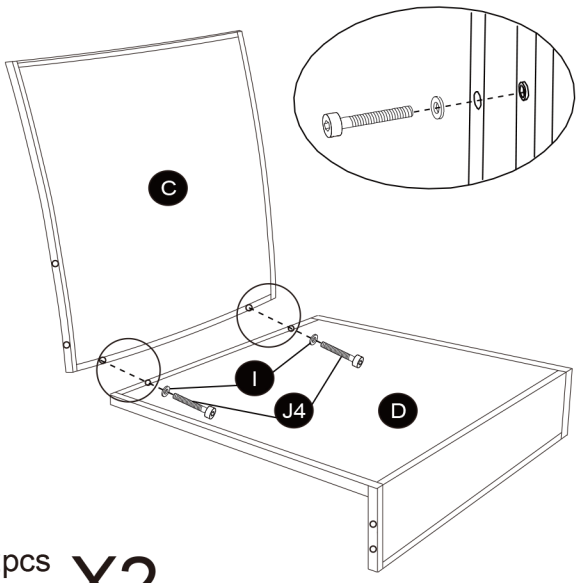1




I:2pcs
J3:2pcs X2

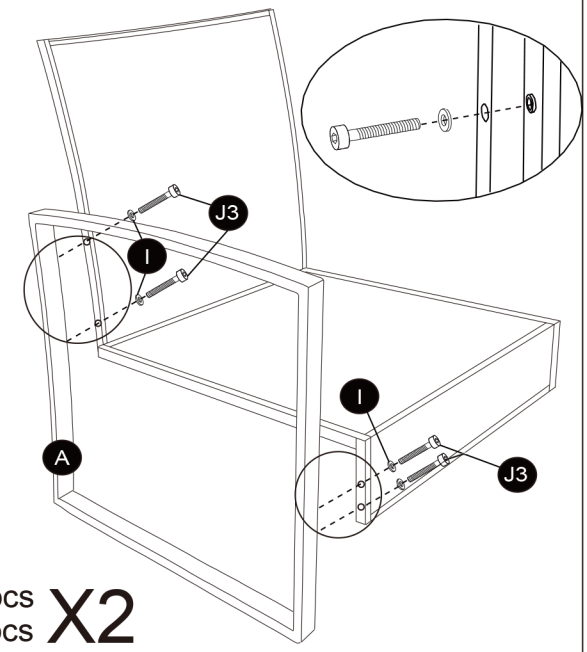2




I:4pcs
J3:4pcs X2

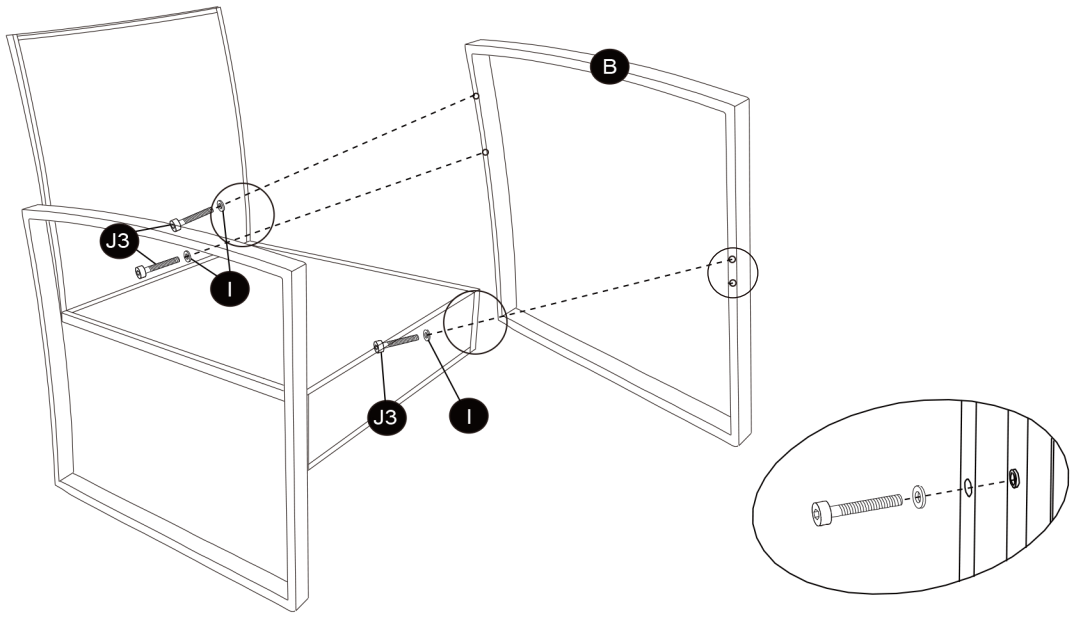3




I:4pcs
J3:4pcs X2

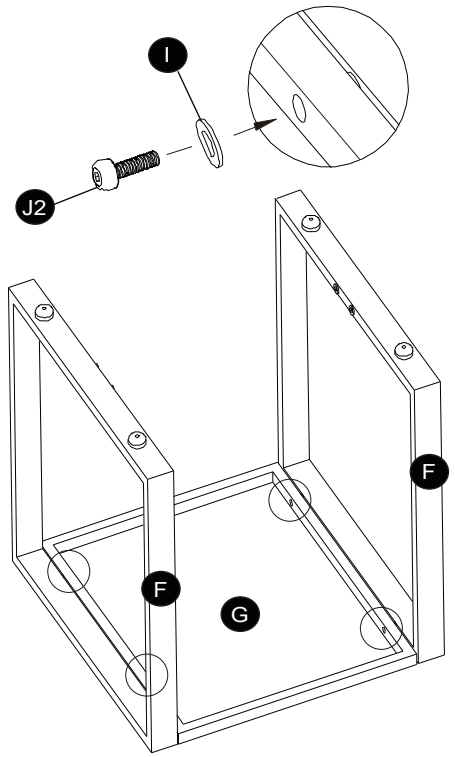4



I:4pcs
J2:4pcs

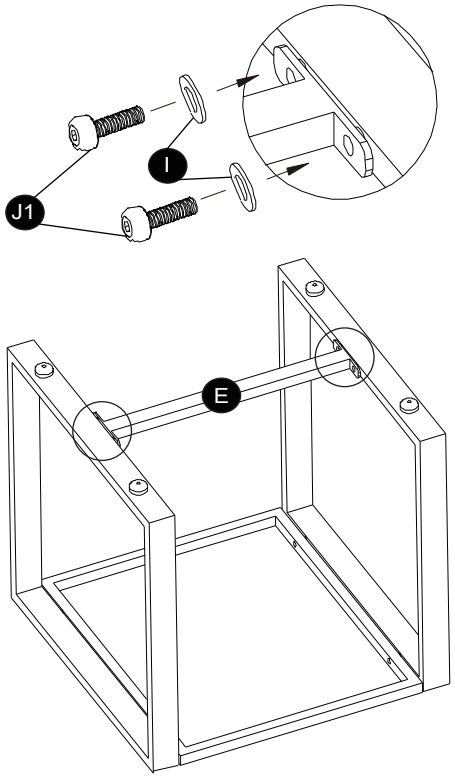5



I:4pcs
J1:4pcs

6

