Mosbrisa®

Instruction Manual

Porch Swing Bed



1. Please find the assembly guidelines on Page 3-4.


2. You can scan the QR code of our official website and leave a message to register for the 2-year warranty.

3. There may be cracks or scratches due to violent impacts during the shipping process. If you find any defective parts, please feel free to contact us through Amazon messages or any of the contact methods below.
   We will respond within 8 hours and provide free replacement parts or other services you need.


Fortunecandy Inc.

✉ customerservice@fortune-candy.com

Connect with us on fortune-candy.com



A x 1

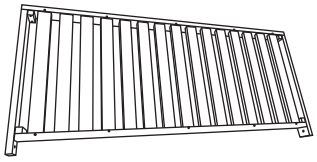


B x 1




C x 1




D x 1

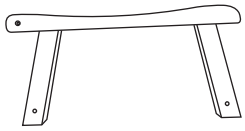


E x 1

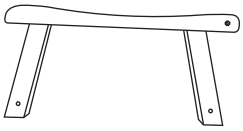

F x 1

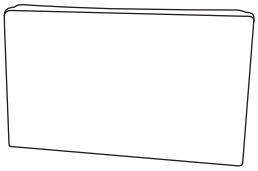

G x 1

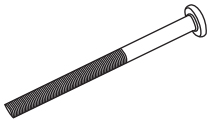


8x80mm

1 x 2



10x130mm

2 x 2

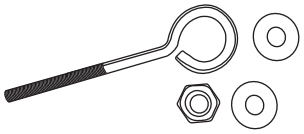


10x90mm

3 x 2




8x120mm


4 x 4

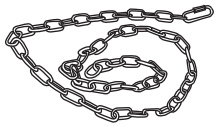

5 x 4

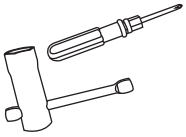

Tools

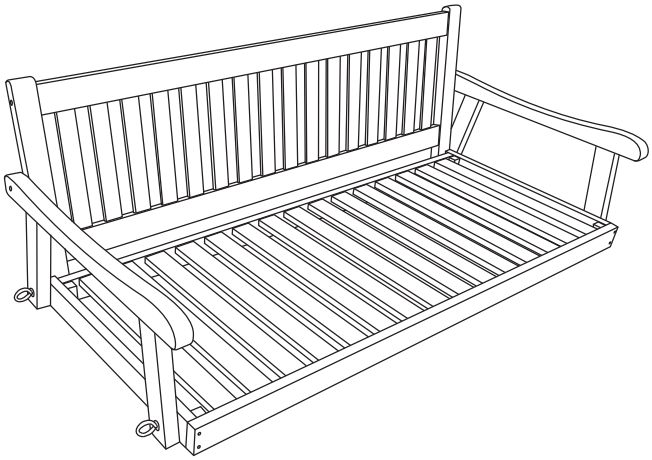

Precautions before Assembly

1. If any parts are scratched or damaged in transit (very low probability), please contact the seller or Fortune Candy customer service for partial refund and replacement parts.


2. Do not tighten all screws and nuts until last step. Fixing a single part too early may make other parts difficult to assemble. Do not overtighten it to avoid damaging the wood.

* If you encounter any problems during the installation process, please feel free to contact us. We will be happy to help you solve the problem.

* We provide excellent after-sales service, which is appreciated by many buyers. Your satisfaction is our main goal.

1

4 = 4 PCS

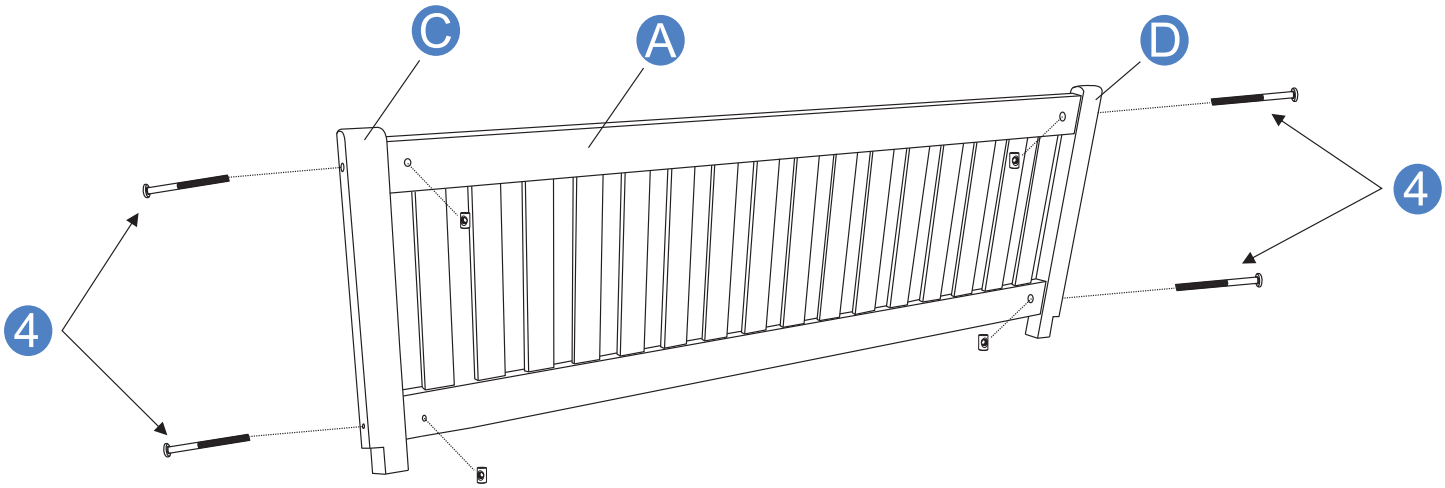


1. Please identify the back and front sides of Part A. Now you're facing the back side of Part A with nut holes. Part C is on the left and Part D is on the right. You can tighten the bolts in this step.

2

1 = 2 PCS


2 = 2 PCS

3 = 2 PCS

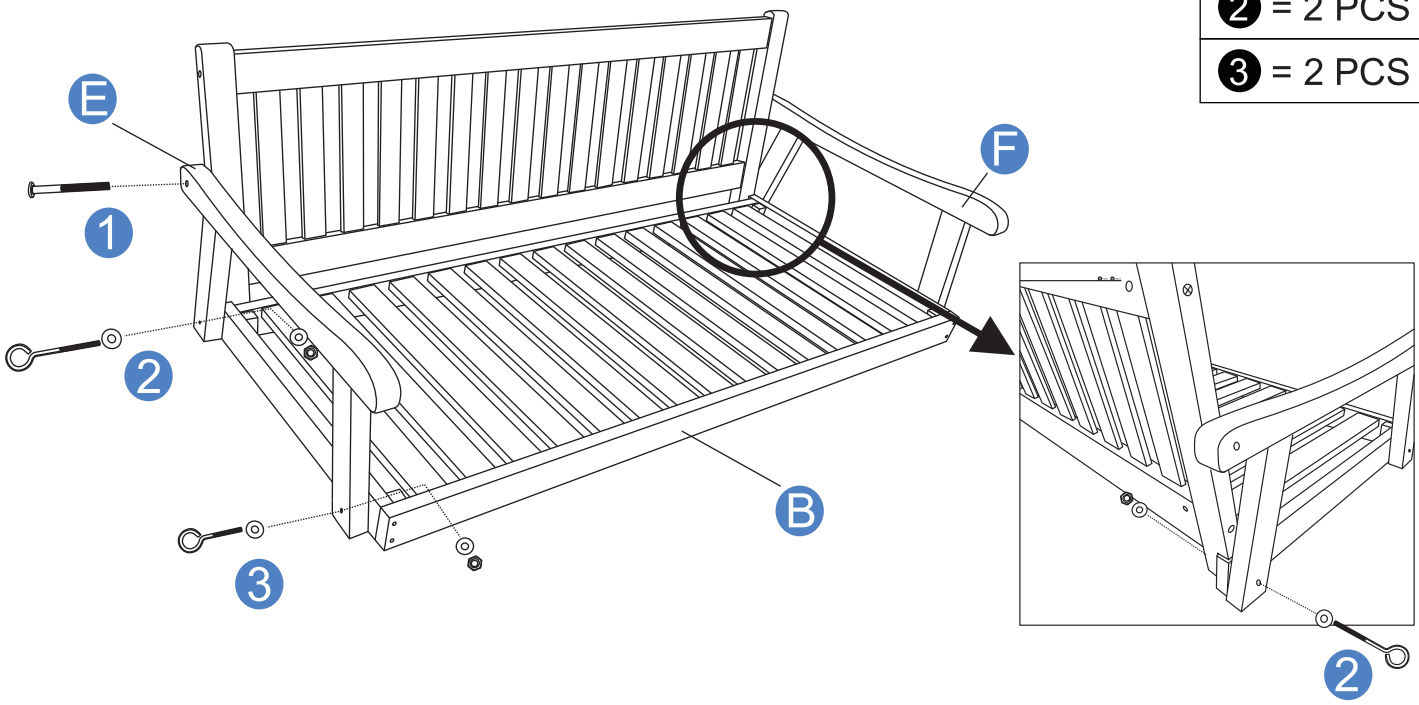

2. Please pay attention to the placement of the washers and do NOT tighten all the nuts and screws until you confirm all the wooden parts have been installed correctly. In the last step, tighten all the nuts and screws to the tightest setting to maximize the weight capacity.

❺ = 4 PCS

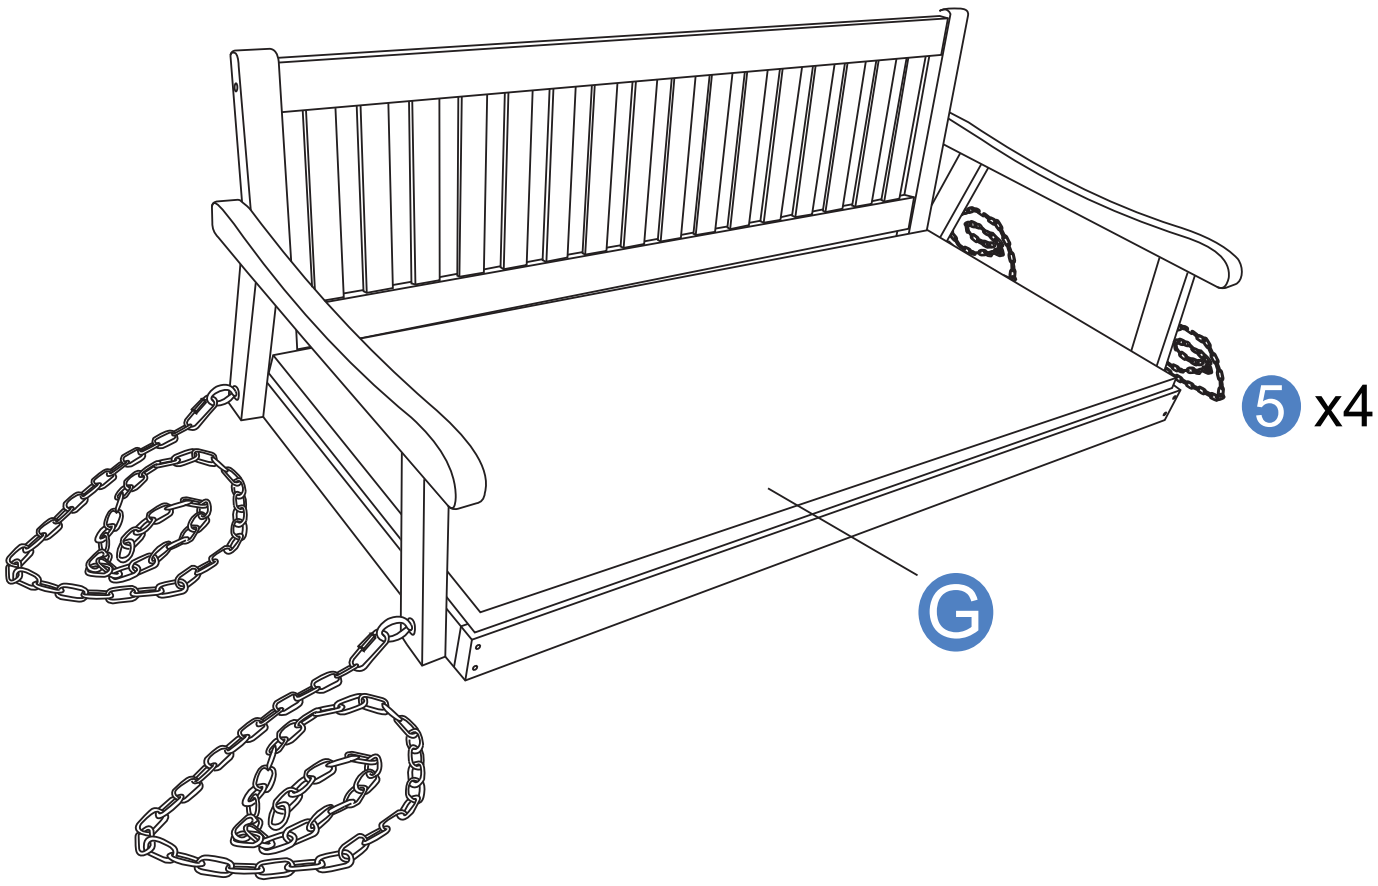

Fasten all the bolts before use.

3. Install the chains and the porch swing bed cushion.

FAQs for This Product :

Q: Can I hang this swing outside instead of the porch?

A: Yes, many buyers do so. This swing bed performs best in covered outdoor areas. If used in an open yard exposed to direct sunlight and high temperatures, we recommend applying an additional protective coating annually to prevent damage from weather and UV rays. And we suggest keeping it dry after rain, to make it last longer.

Q: How to maintain the swing?

A: Please check the nuts regularly for looseness and tighten them.

Q: How to register for the warranty?

A: Please scan the QR code on the first page to go to our official website https://fortune-candy.com, and use the online chat tool to send your order number, then we will register your item for the warranty. You can also send an email to customerservice@fortune-candy.com.

Q: How to contact us to send replacement parts?

A: If you found any defects or scratches or missing parts, the easiest way is to tell us which part you need using Amazon messages. In this way we can find out which product you purchased and your address. Or you can send an email to customerservice@fortune-candy.com. Please tell us your order number, shipping address, and which part is needed. No matter which way you contact us, we will reply within 8 hours and give you a satisfactory solution.