

TV Stand

Assembly Instruction - Please keep properly for future reference.


If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

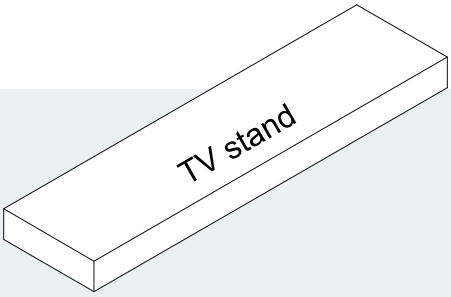

Box 1 of 2

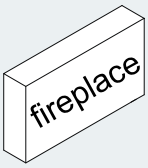

Box 2 of 2

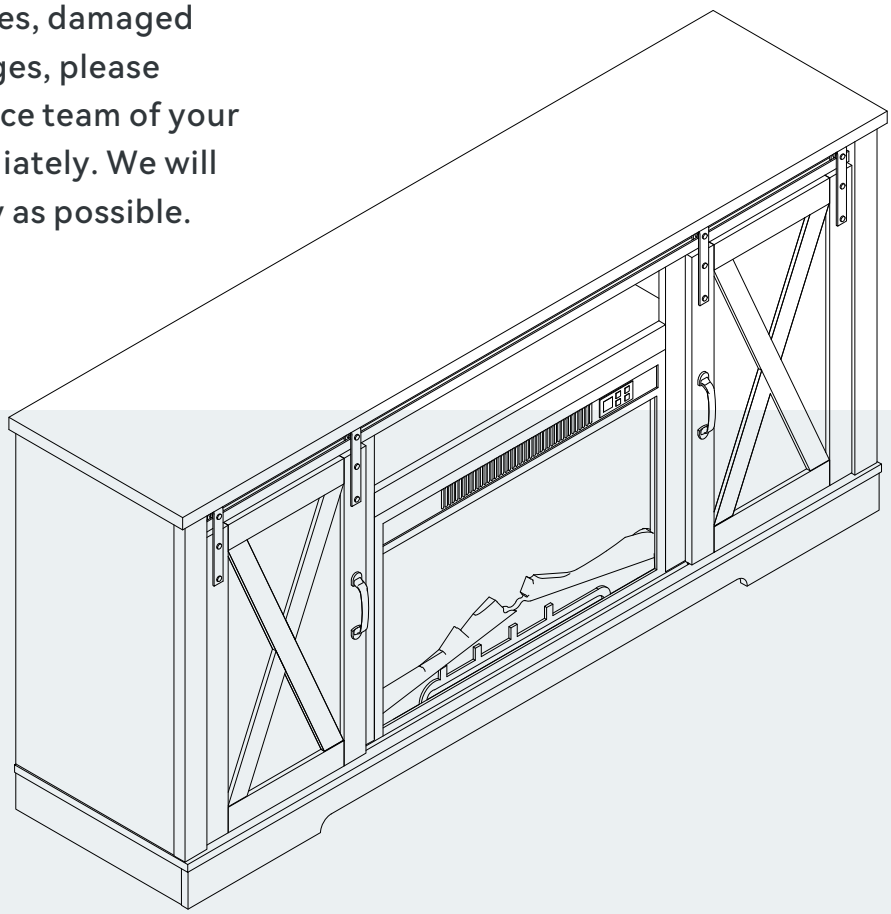

NOTE: Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.

Dimensions

Width - 63 inch
Depth - 15.5 inch
Height - 28 inch

CONTACT US

- **Email: service@grandtunnel.com**
  In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

· By Email:
Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:
· A description of the missing parts and a photo of the parts list.
· Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

· Customer Service Email: service@grandtunnel.com

Helpful Tips


To process your issue efficiently, please prepare the following information:
· Order details (order number, purchase platform, purchase date).
· Clear photos or videos.
· We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
Thank you for your trust and support! We hope you enjoy using our product!

Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.

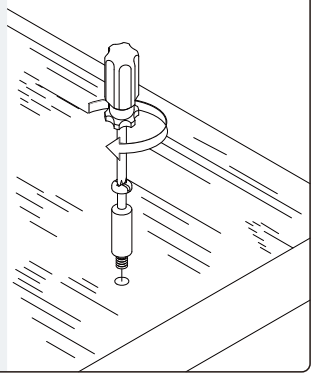

Step 2


Push the male camlock into the entry hole.

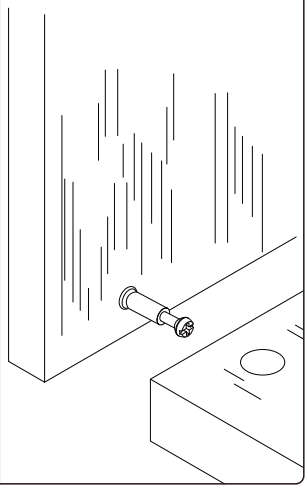

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

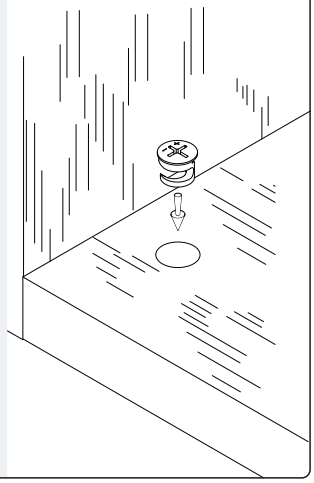


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.






















The joint is now secure.

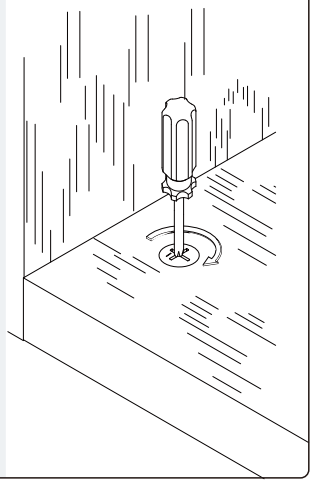











PART LIST

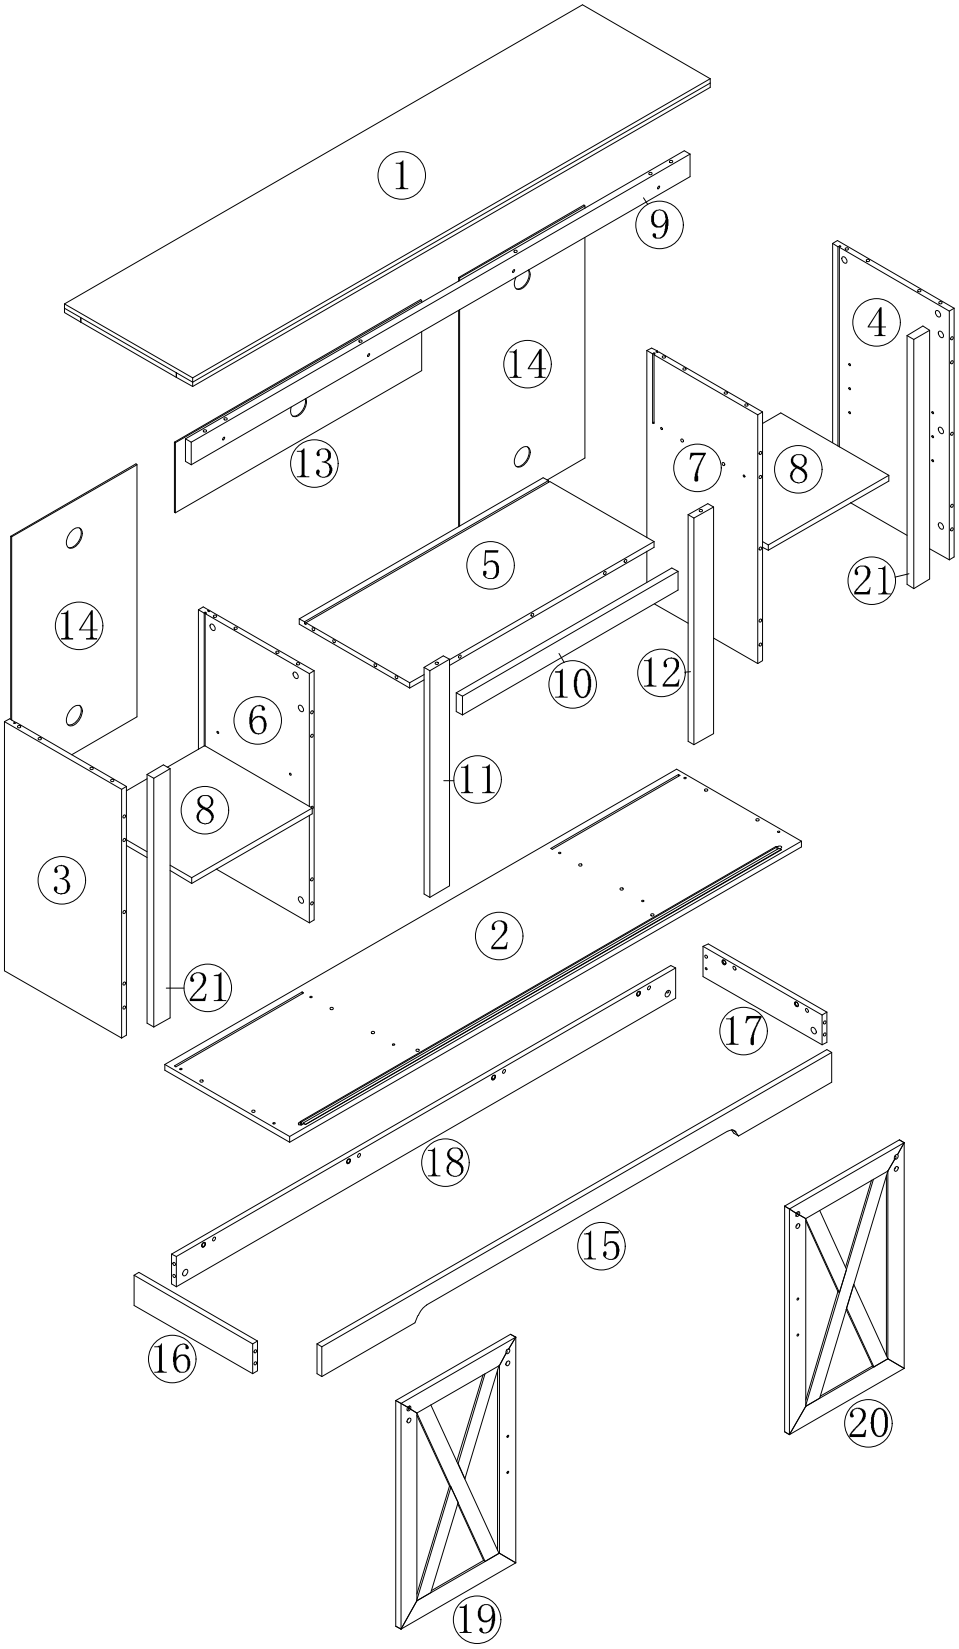


PART LIST

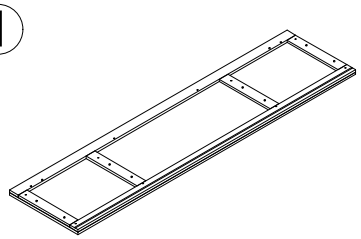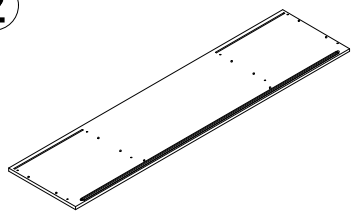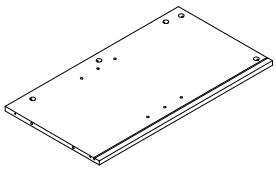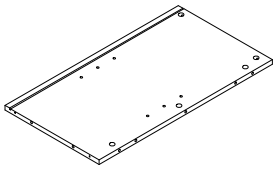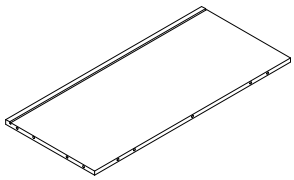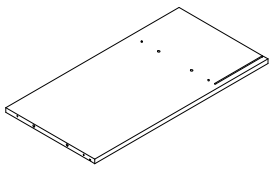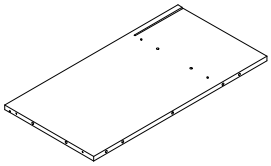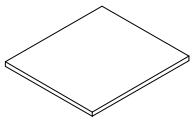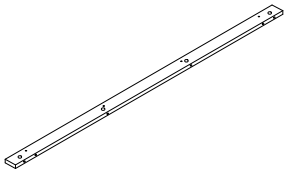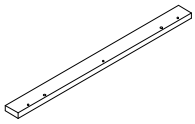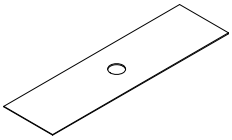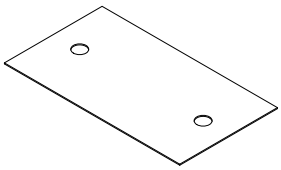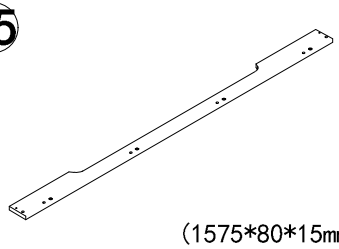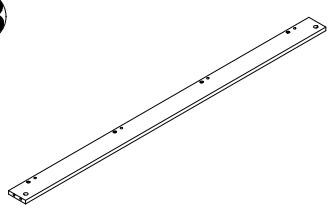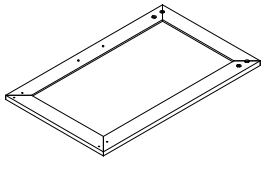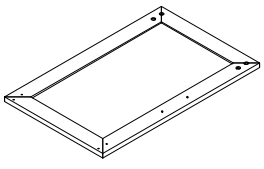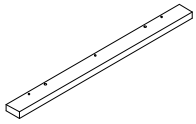1  (1600*395*24mm) X1	2  (1581*385.5*12mm) X1	3  (666*361*15mm) X1
4  (666*382*15mm) X1	5  (754*341.5*15mm) X1	6  (666*342.5*15mm) X1
7  (666*342.5*15mm) X1	8  (372*333*15mm) X2	9  (1541*60*18mm) X1
10  (666*50*18mm) X1	11  (606*60*18mm) X1	12  (606*60*18mm) X1
13  (761*188*3mm) X1	14  (675*387.5*3mm) X2	15  (1575*80*15mm) X1
16  (366.5*80*15mm) X1	17  (366.5*80*15mm) X1	18  (1544*80*15mm) X1
19  (603*354.5*15mm) X1	20  (603*354.5*15mm) X1	21  (666*50*21mm) X2


HARDWARE LIST

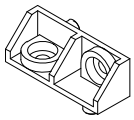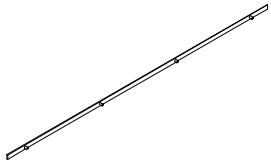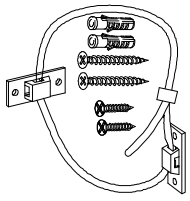A  ϕ6X35 35+2	**B**  ϕ15X9.5 35+2	**C**  ϕ8X30 40+3
D  ϕ5X40 8+1	**E**  12	**F**  ϕ6X12 32+2
G  8+1	**H**  ϕ3X15 12+1	**I**  12+1
J  4	**K**  1	**L**  ϕ1/4X25 4
M  ϕ4X14 8+1	**N**  4	**P**  2
Q  2	**R**  ϕ4X20 4	 1

STEP 1

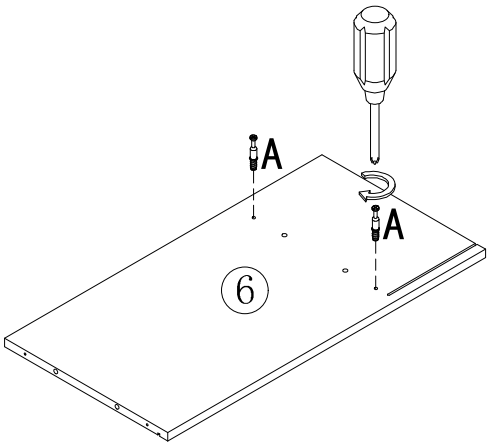


Use a screwdriver to fasten part A into Panels 6 and 7.

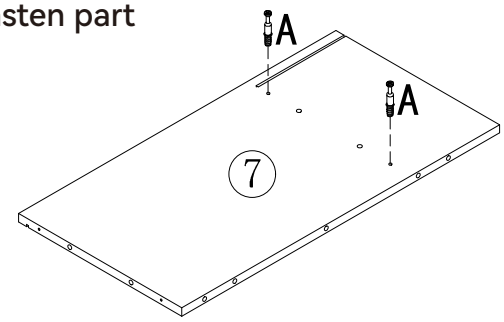

	A	X 4

STEP 2

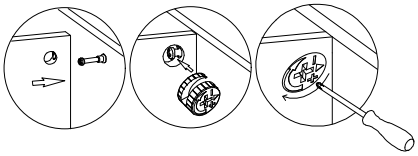


Note: Pay attention to the direction of the grooves on Panels 6 and 7.

Insert part C into Panel 5 first. Then connect Panels 6 and 7 to Panel 5, and tighten part B.

	B	X 4
	C	X 4


STEP 3

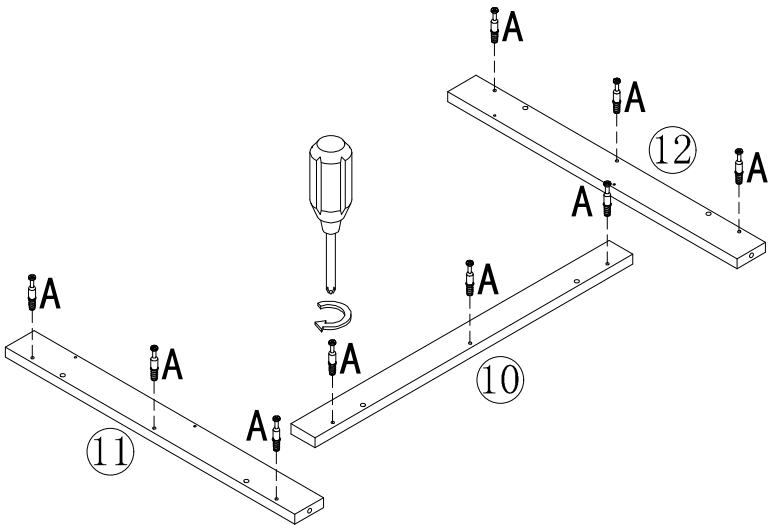

Use a screwdriver to fasten part A into Panels 10, 11, and 12.

	A	X 9

STEP 4

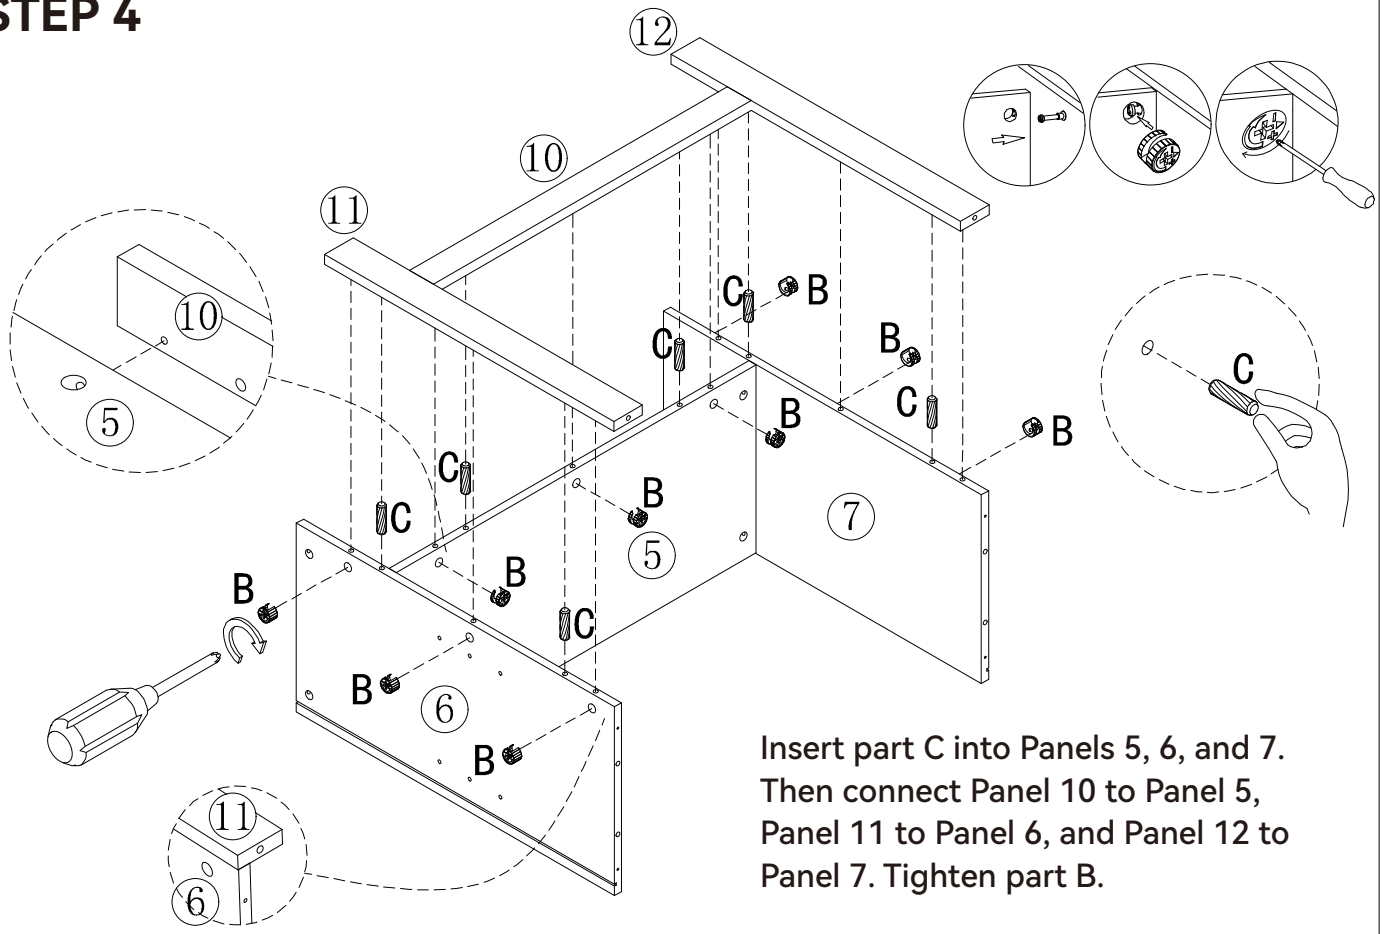


Insert part C into Panels 5, 6, and 7. Then connect Panel 10 to Panel 5, Panel 11 to Panel 6, and Panel 12 to Panel 7. Tighten part B.

Note: Pay attention to the orientation of Panels 10, 11, and 12.

	B	X 9
	C	X 6


STEP 5

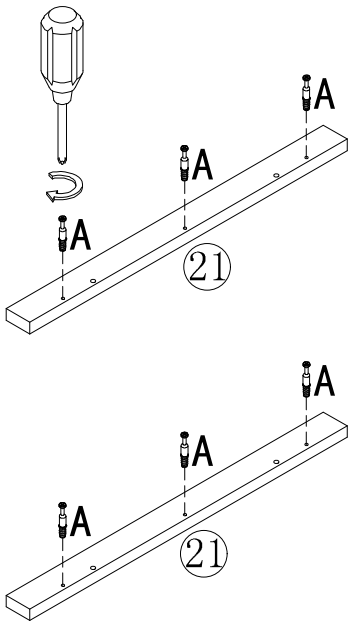



Use a screwdriver to fasten part A into Panel 21.


	A	X 6

STEP 6

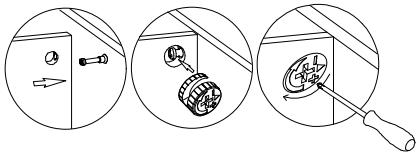

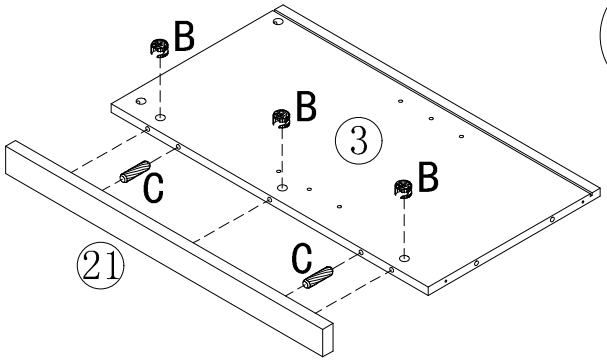

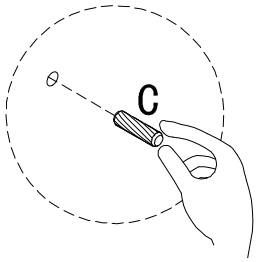


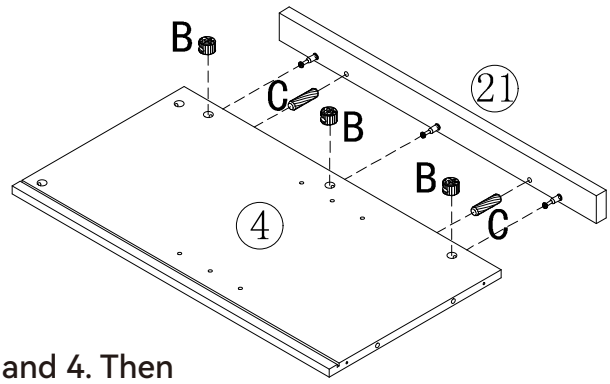

Insert part C into Panels 3 and 4. Then connect Panel 21 to Panels 3 and 4, and tighten part B.

	B	X 6
	C	X 4


STEP 7

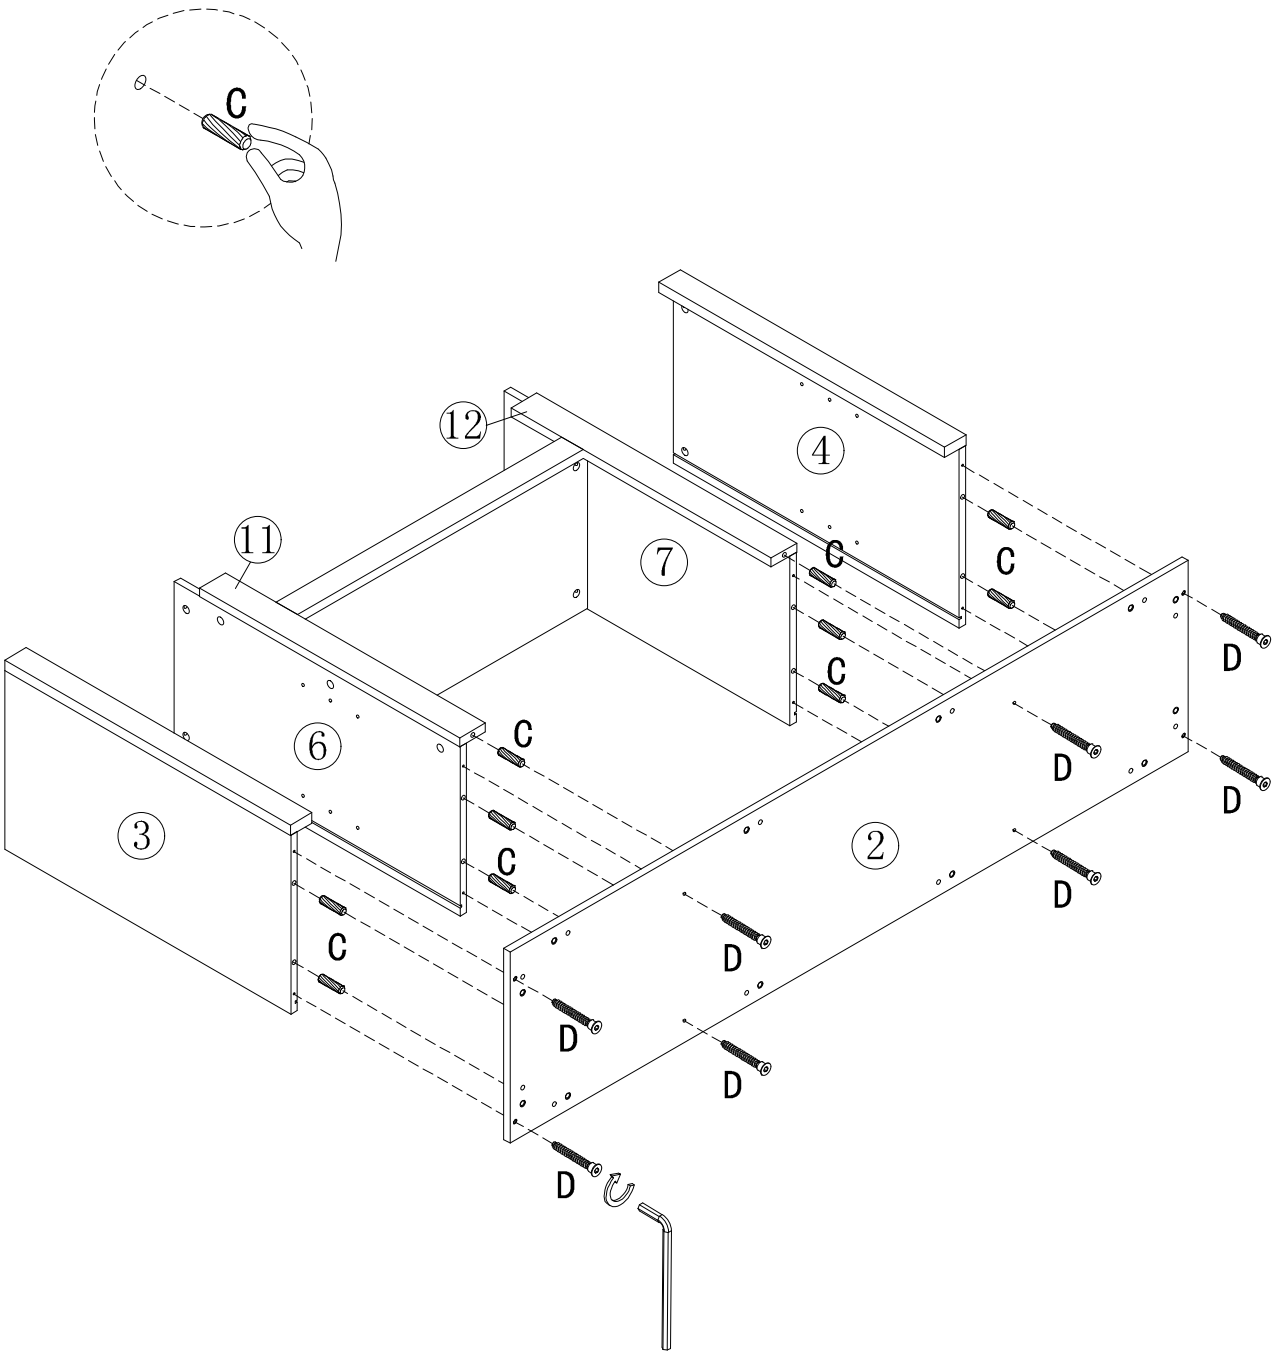

Insert part C into Panels 3, 4, 6, 7, 11, and 12. Then connect Panel 2 to Panels 3, 4, 6, and 7, and tighten part D using an L-shaped wrench.

	C	X 10
	D	X 8


STEP 8

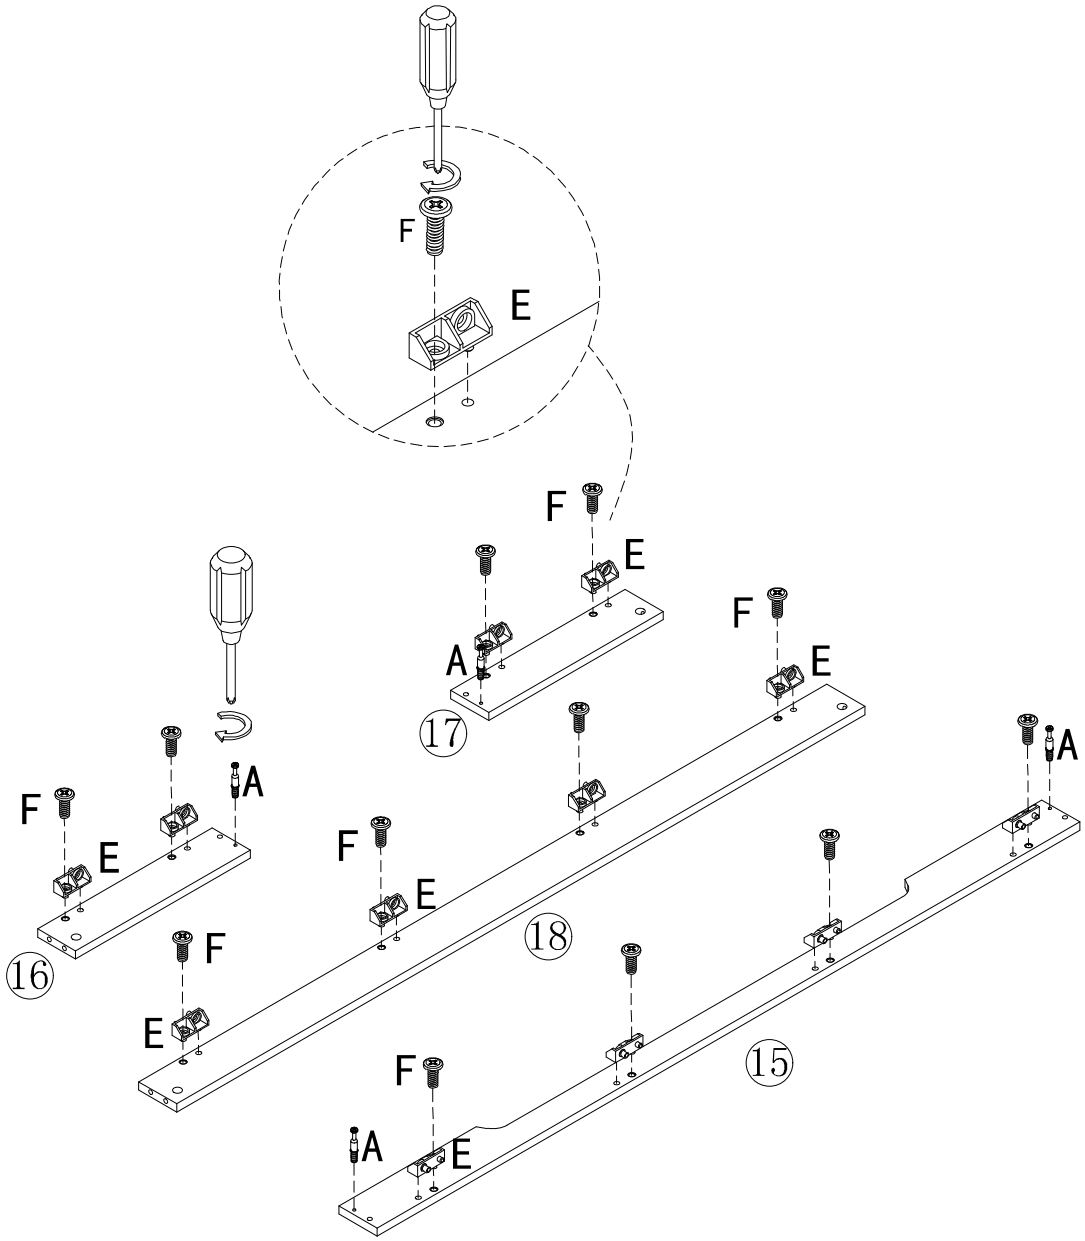

Use a screwdriver to fasten part A into Panels 15, 16, and 17. Insert part E into Panels 15, 16, 17, and 18, then secure with part F.

	A	X 4
	E	X 12
	F	X 12


STEP 9

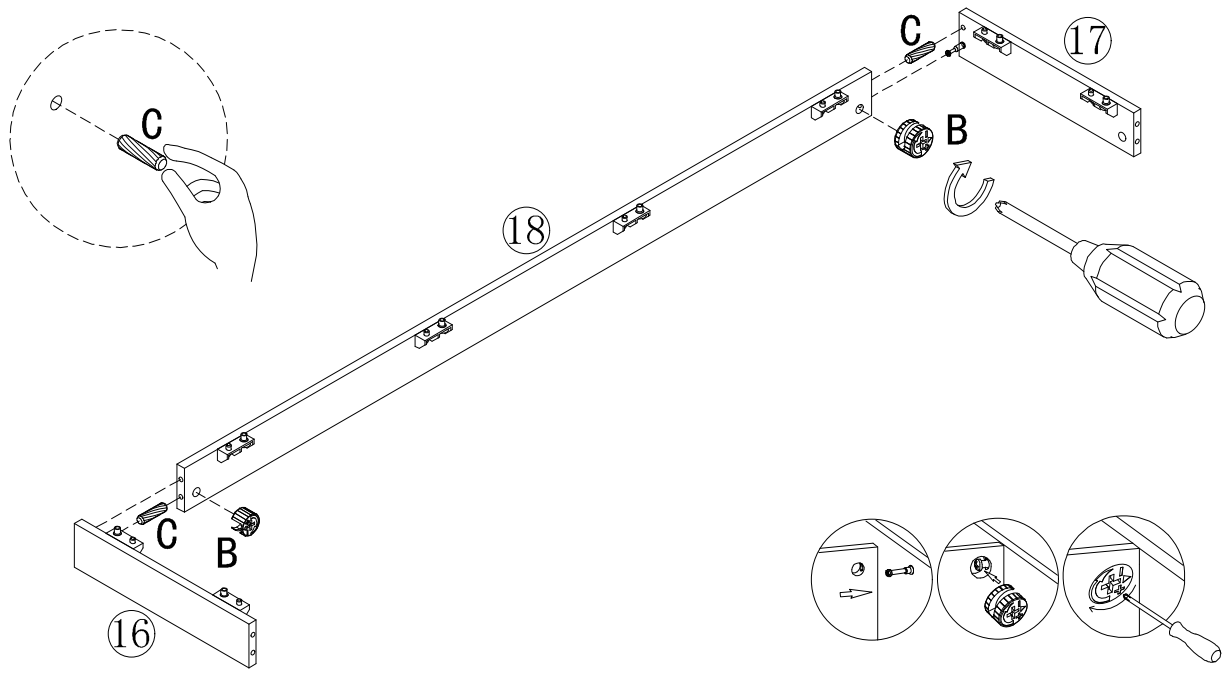

Insert part C into Panel 18. Then connect Panels 16 and 17 to Panel 18, and tighten part B.

	B	X 2
	C	X 2


STEP 10

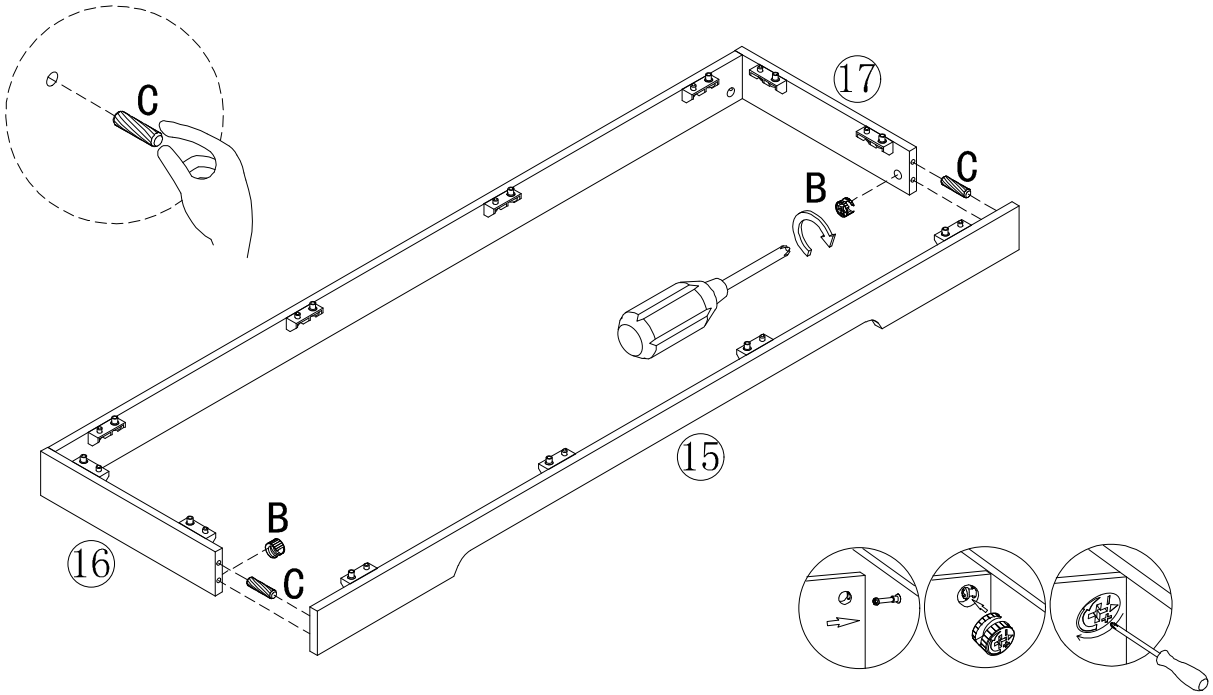

Insert part C into Panels 16 and 17. Then connect Panel 15 to Panels 16 and 17, and tighten part B.

	B	X 2
	C	X 2


STEP 11

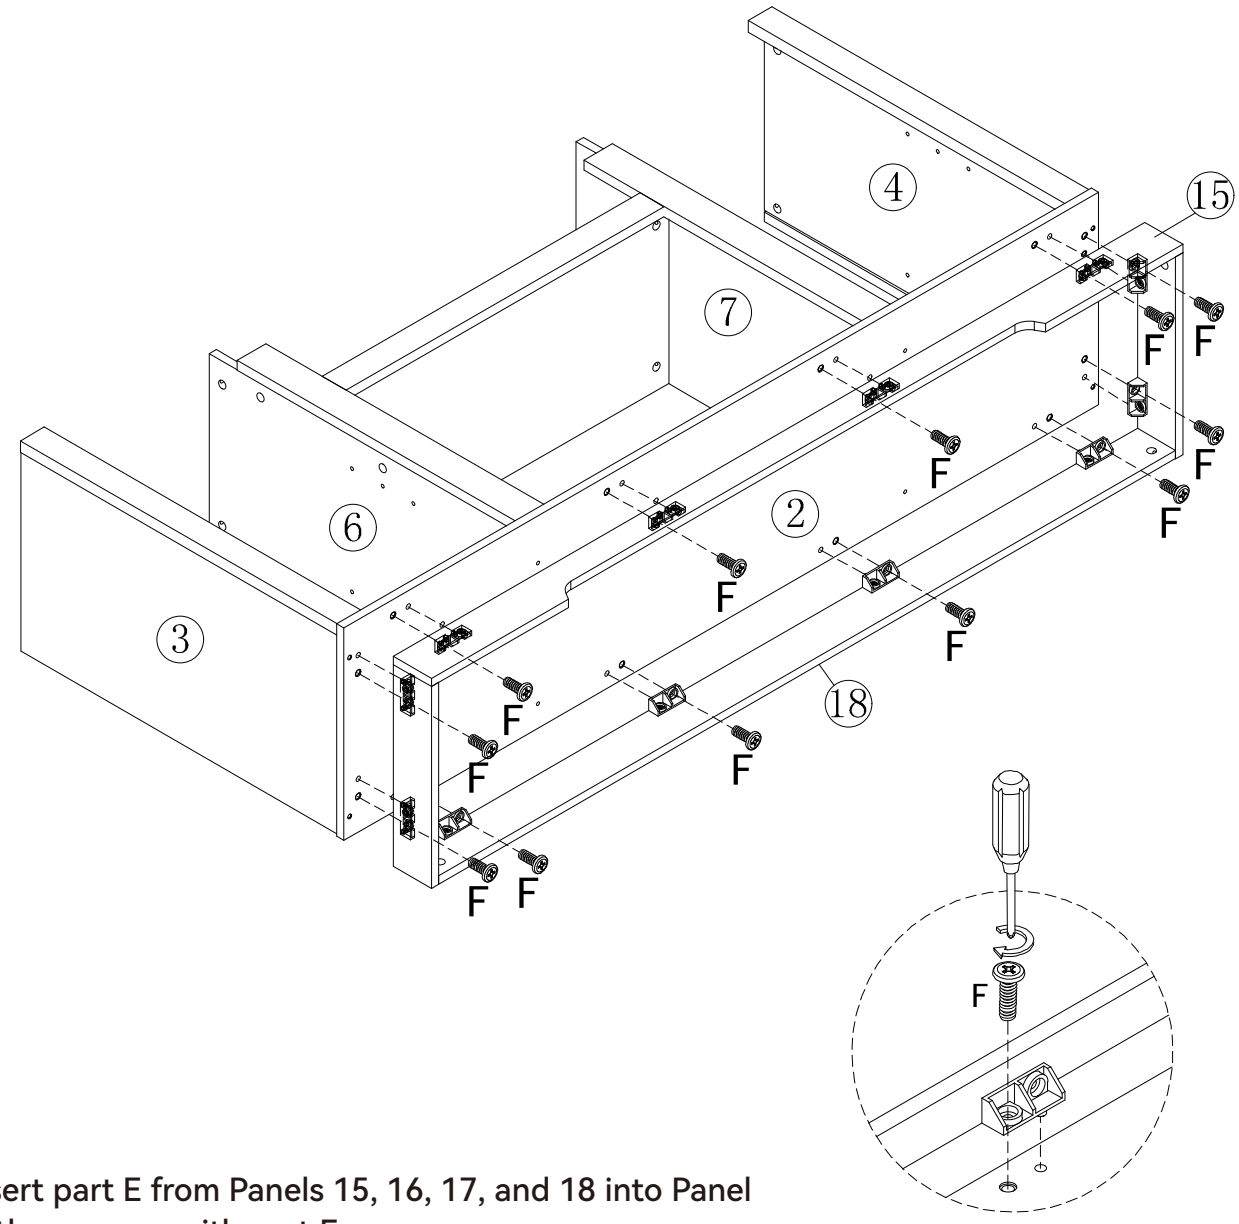

Insert part E from Panels 15, 16, 17, and 18 into Panel 2, then secure with part F.


F	X 12

STEP 12

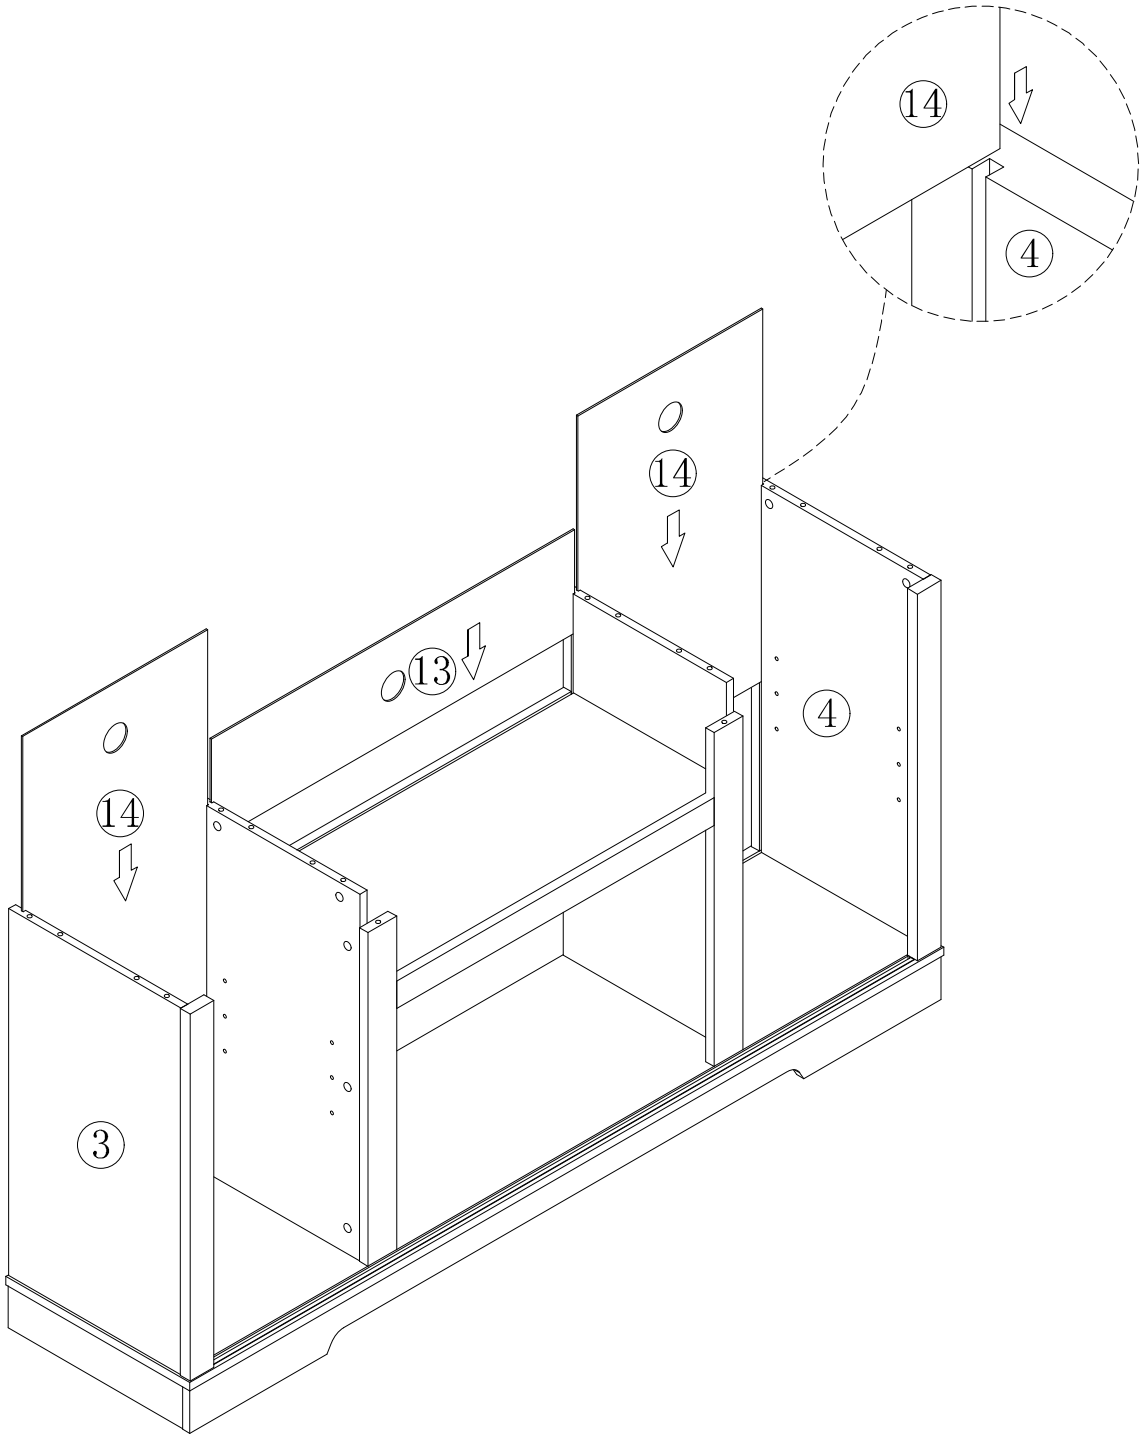

Insert Panels 13 and 14 into the grooves.


STEP 13

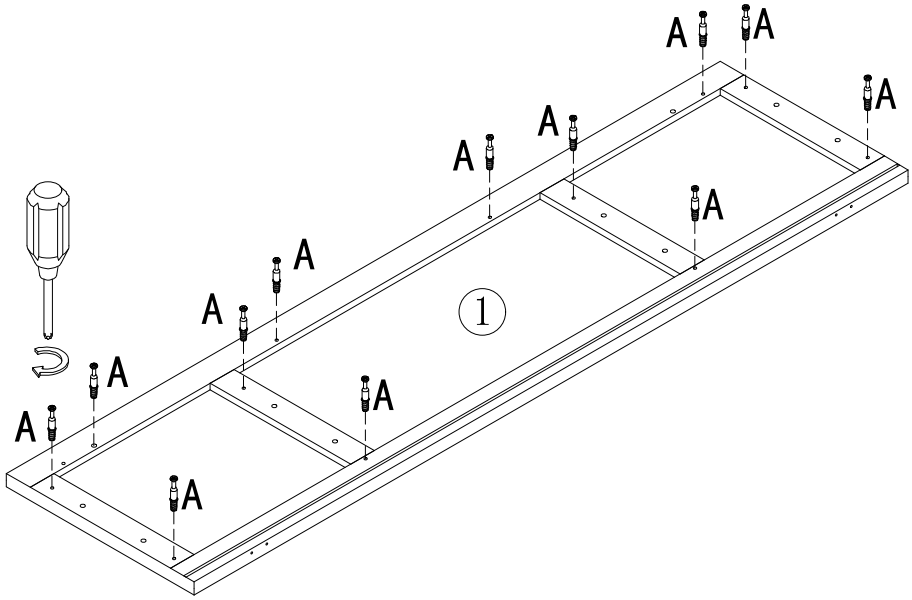

Use a screwdriver to fasten part A into Panel 1.

	A	X 12


STEP 14

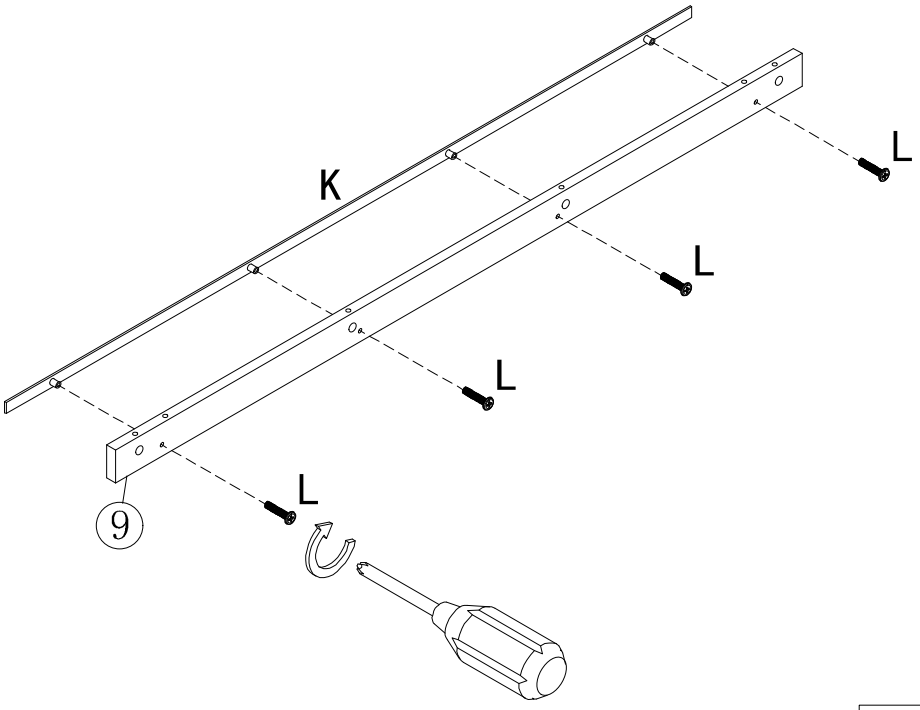


Use part L to secure part K to Panel 9.


	L	X 4
	K	X 1

STEP 15

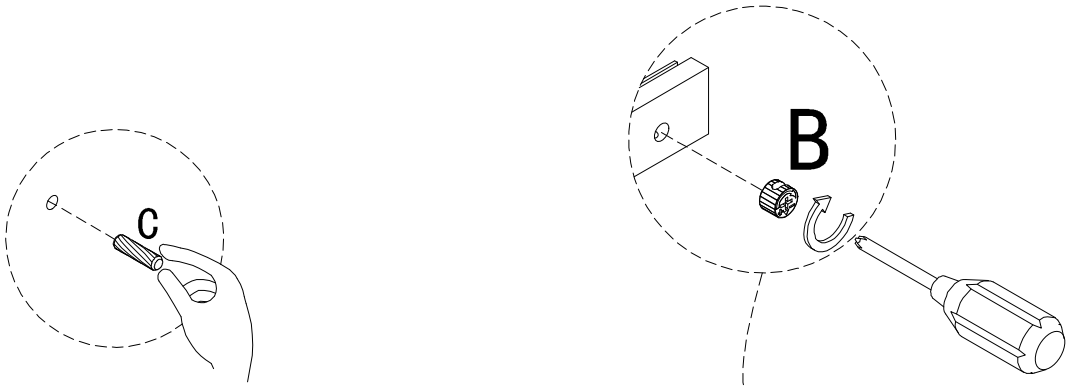


Insert part C into Panel 1. Then connect Panel 9 to Panel 1, and tighten part B.

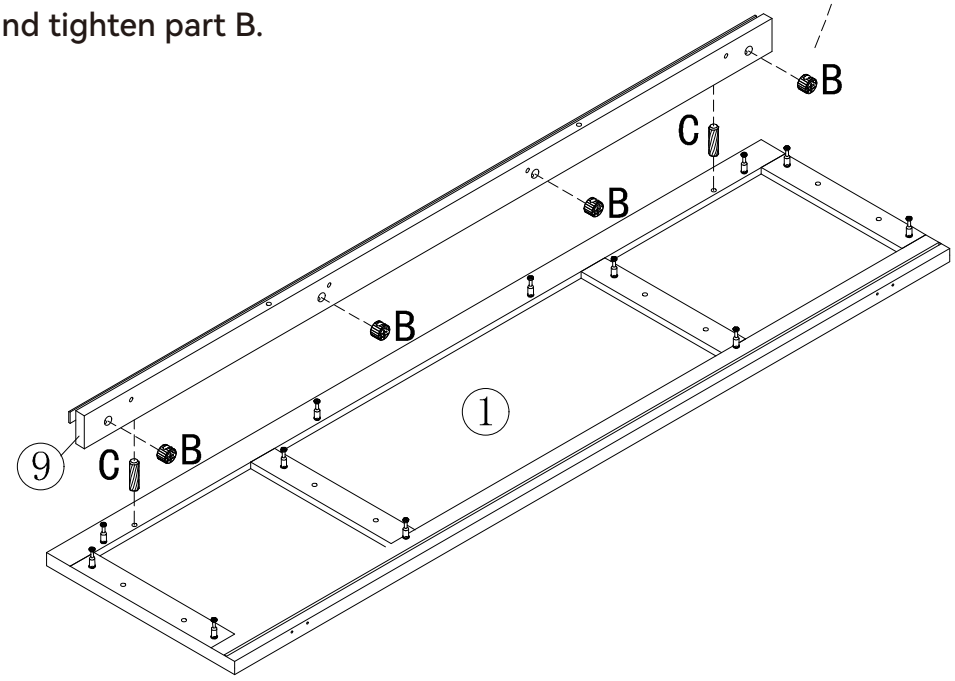

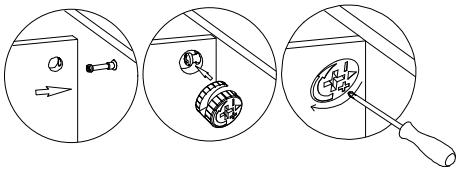



	B	X 4
	C	X 2

STEP 16

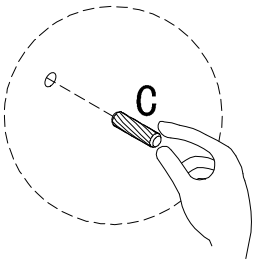

Insert part C into Panels 3, 4, 6, 7, 11, and 12. Then connect Panel 1 to Panels 3, 4, 6, and 7, and tighten part B.

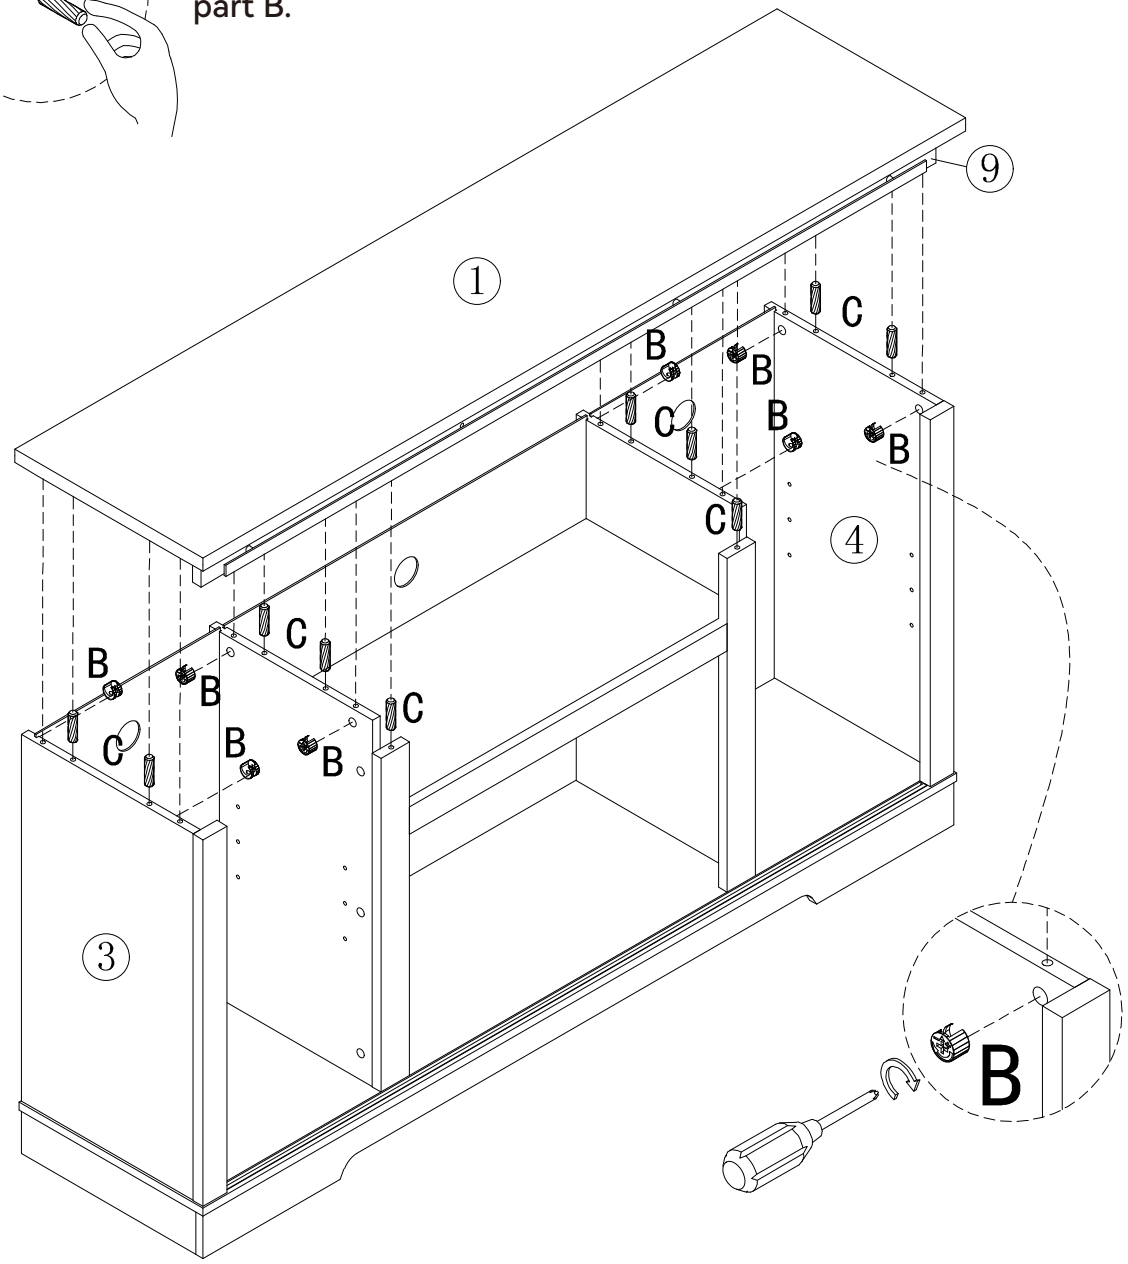

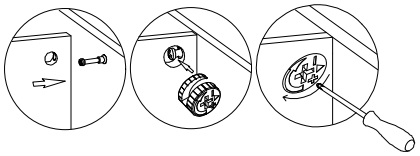


Note: If Panel 1 does not fit properly, adjust and try again. Panel 1 should remain level with no gaps.

	B	X 8
	C	X 10

STEP 17


Insert part G into the hole first. Then place Panel 8 onto G.

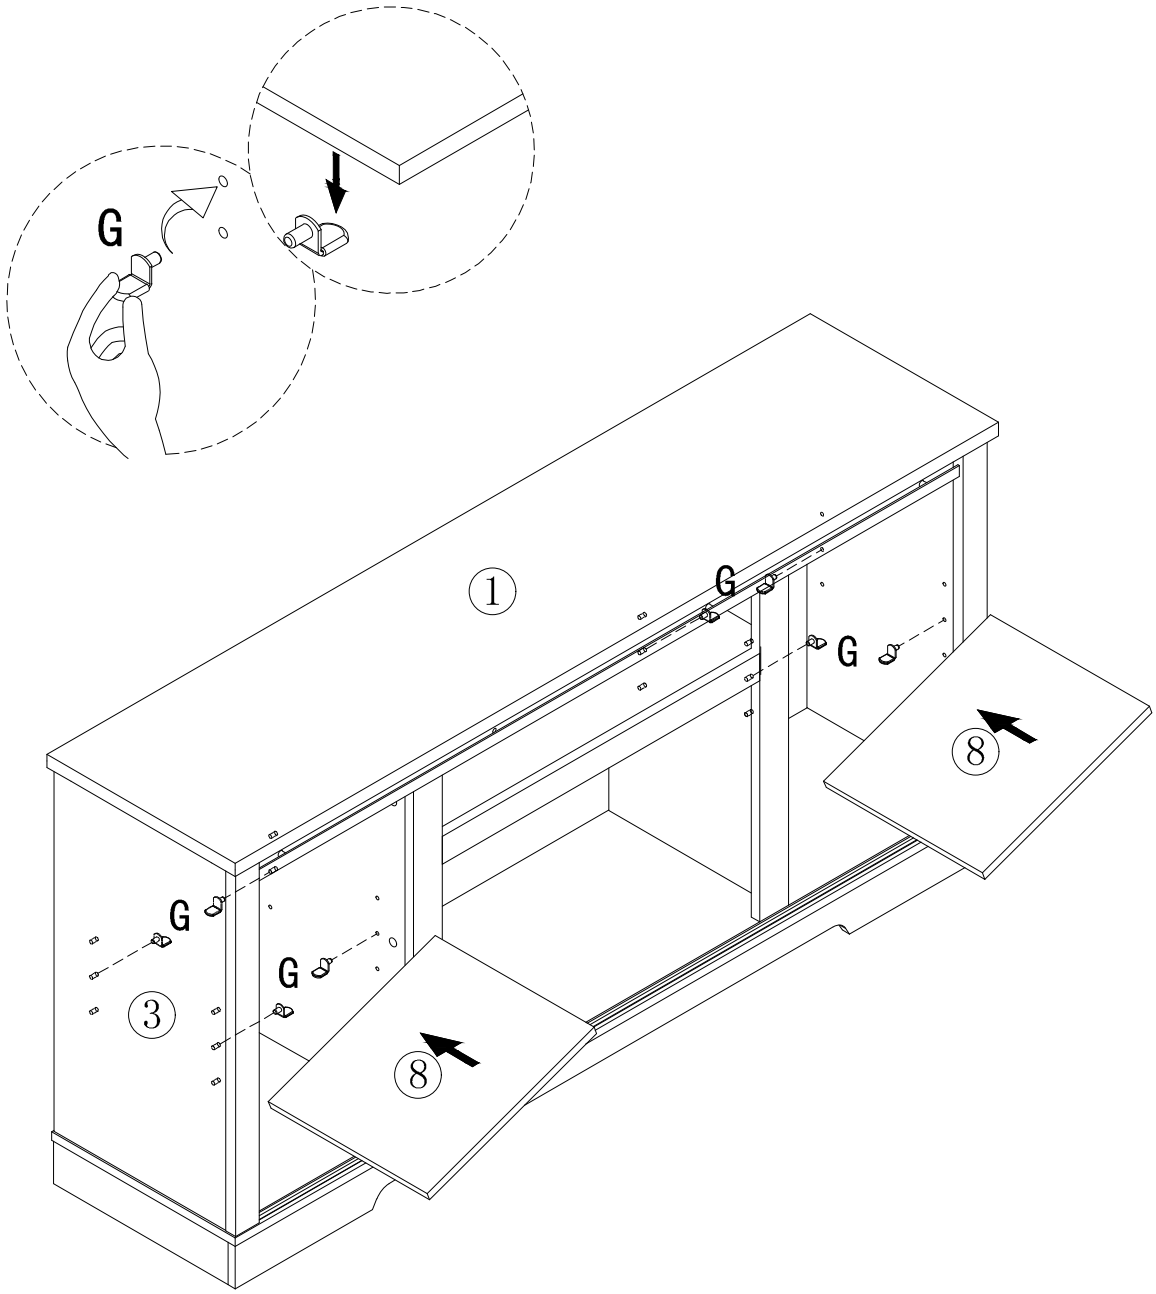


Note: Panel 8 should be inserted at an angle.

	G	X 8

STEP 18

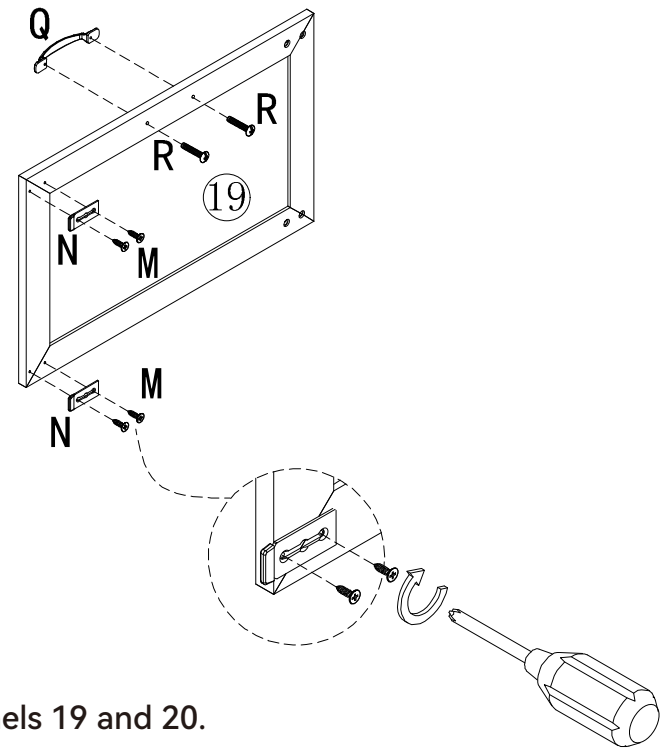


Use part R to secure part Q to Panels 19 and 20.

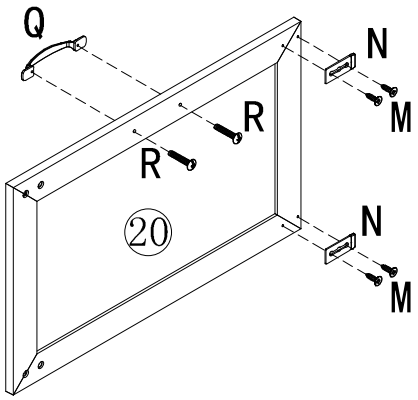


Use part M to secure part N to Panels 19 and 20.

	M	X 8
	N	X 4
	Q	X 2
	R	X 4

STEP 19

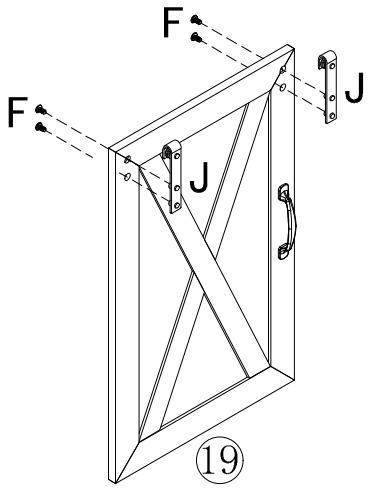

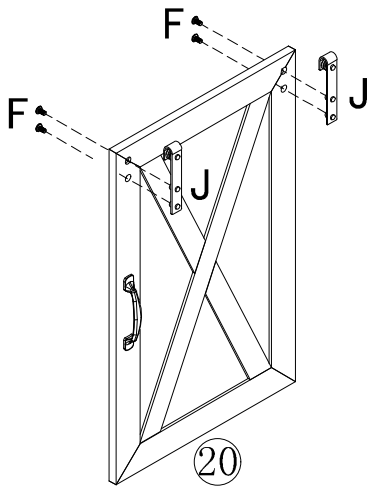



Use part F to secure part J to Panels 19 and 20.

	F	X 8
	J	X 4


STEP 20

Step 2

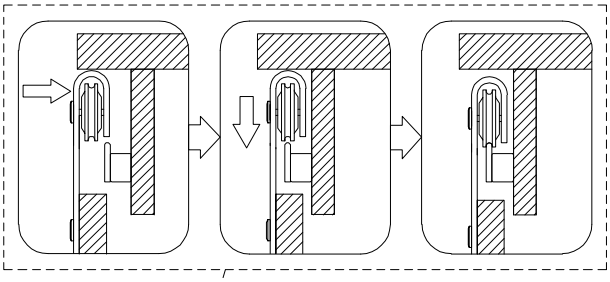

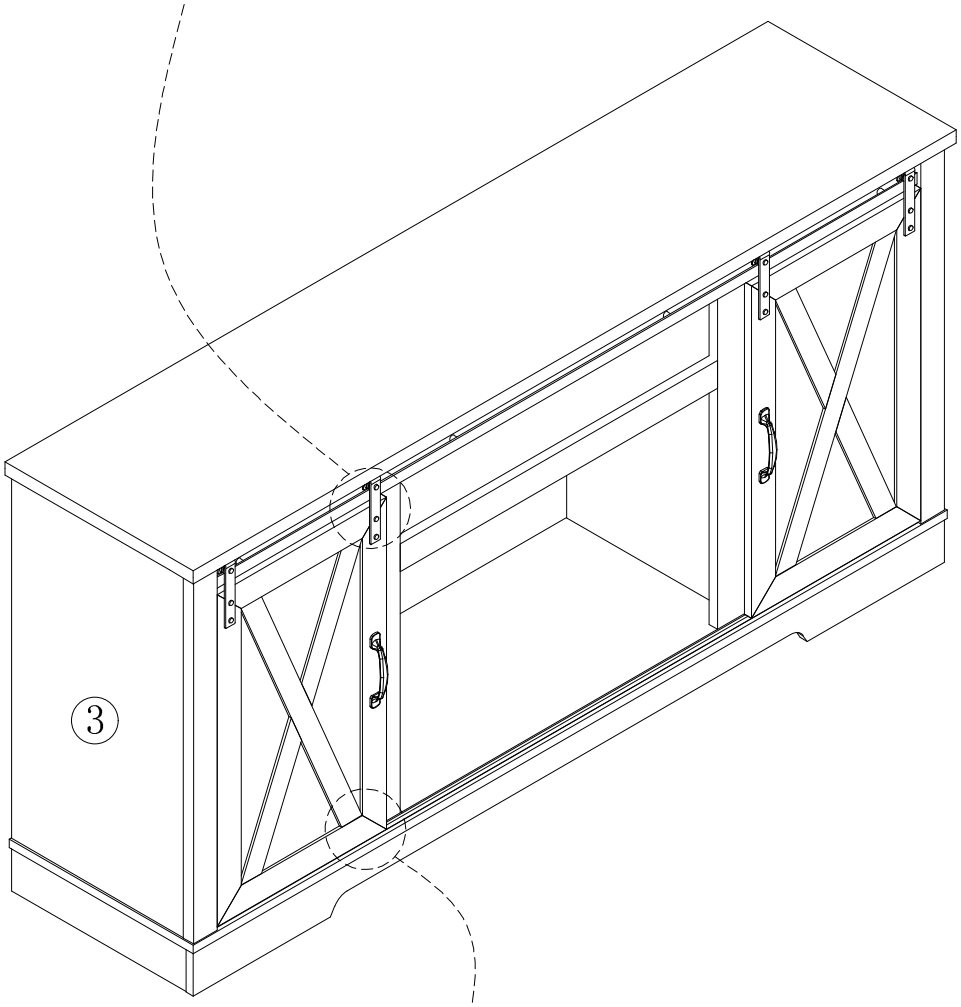


Step 1

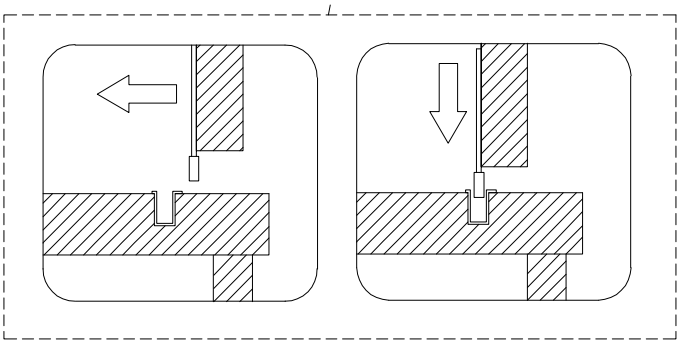


Secure the bottom of the door into the sliding groove. Close the door to align it with the track. Slightly lift the door and hook the rollers onto the rail.

STEP 21

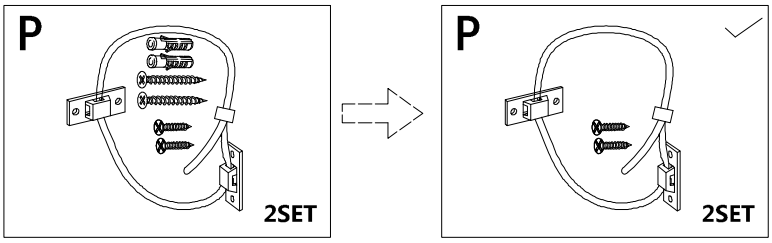


Fasten part P to Panel 1.

NOTE: To prevent the cabinet from wobbling,

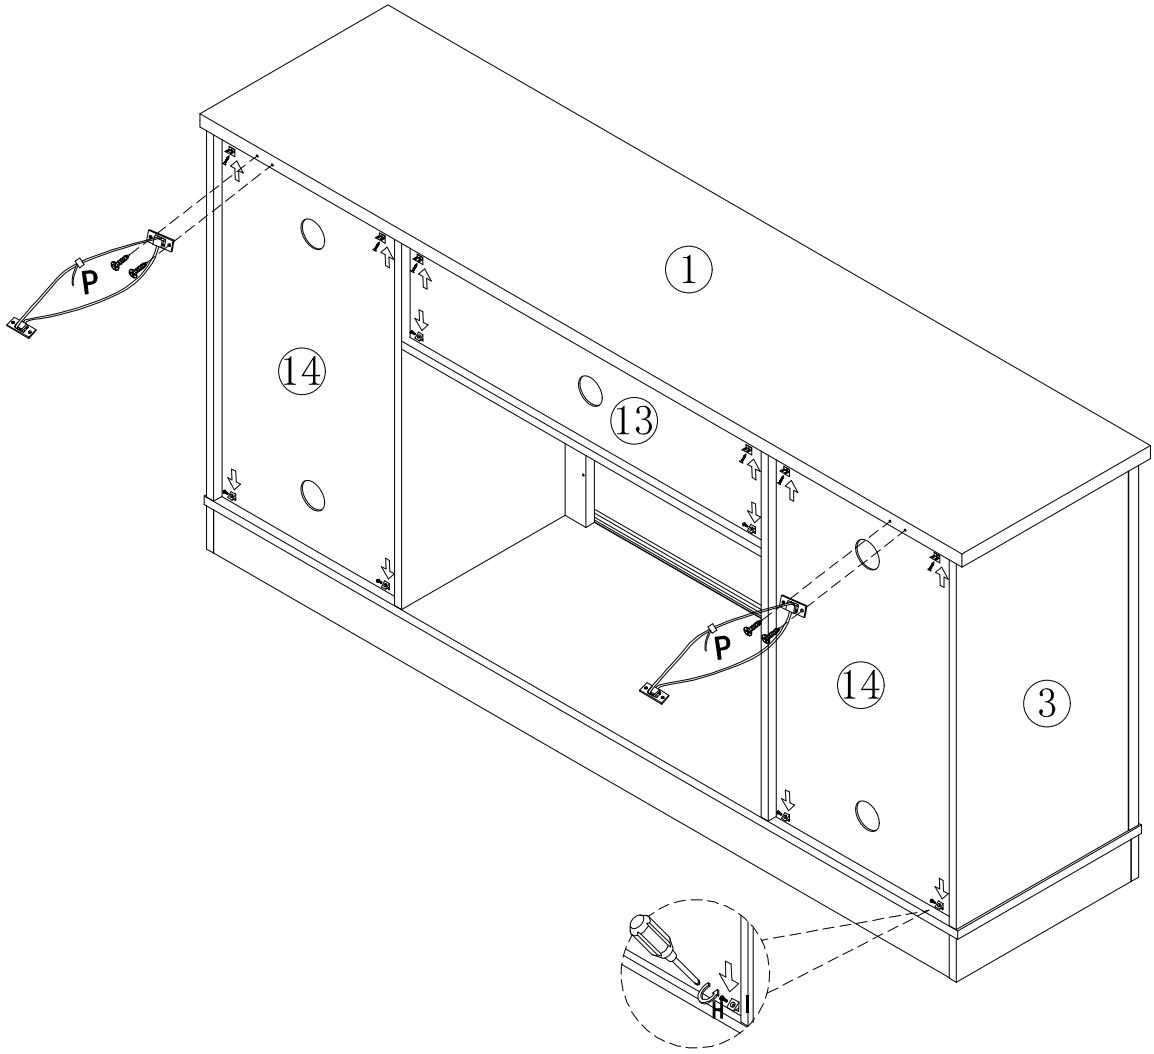


Insert part I into Panels 13 and 14, then secure it with part H.

please be sure to install the back panel fasteners.

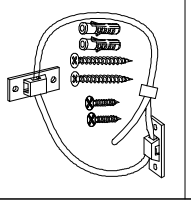	I	X 12
	H	X12
	P	X 2


STEP 22

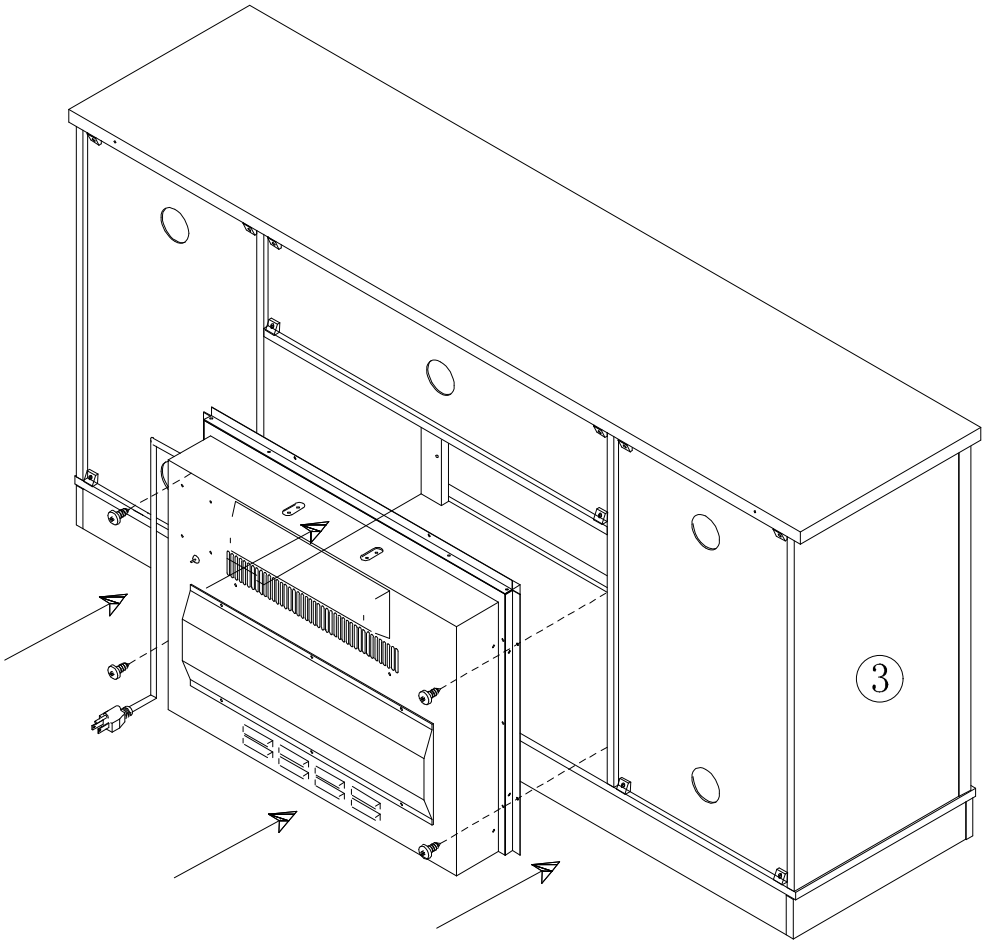



Put the fireplace in place. Then secure the fireplace.

Please note: The screws used to attach the fireplace are included in the fireplace box.

STEP 23

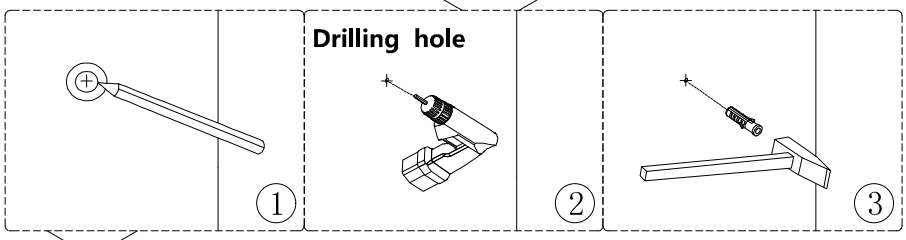

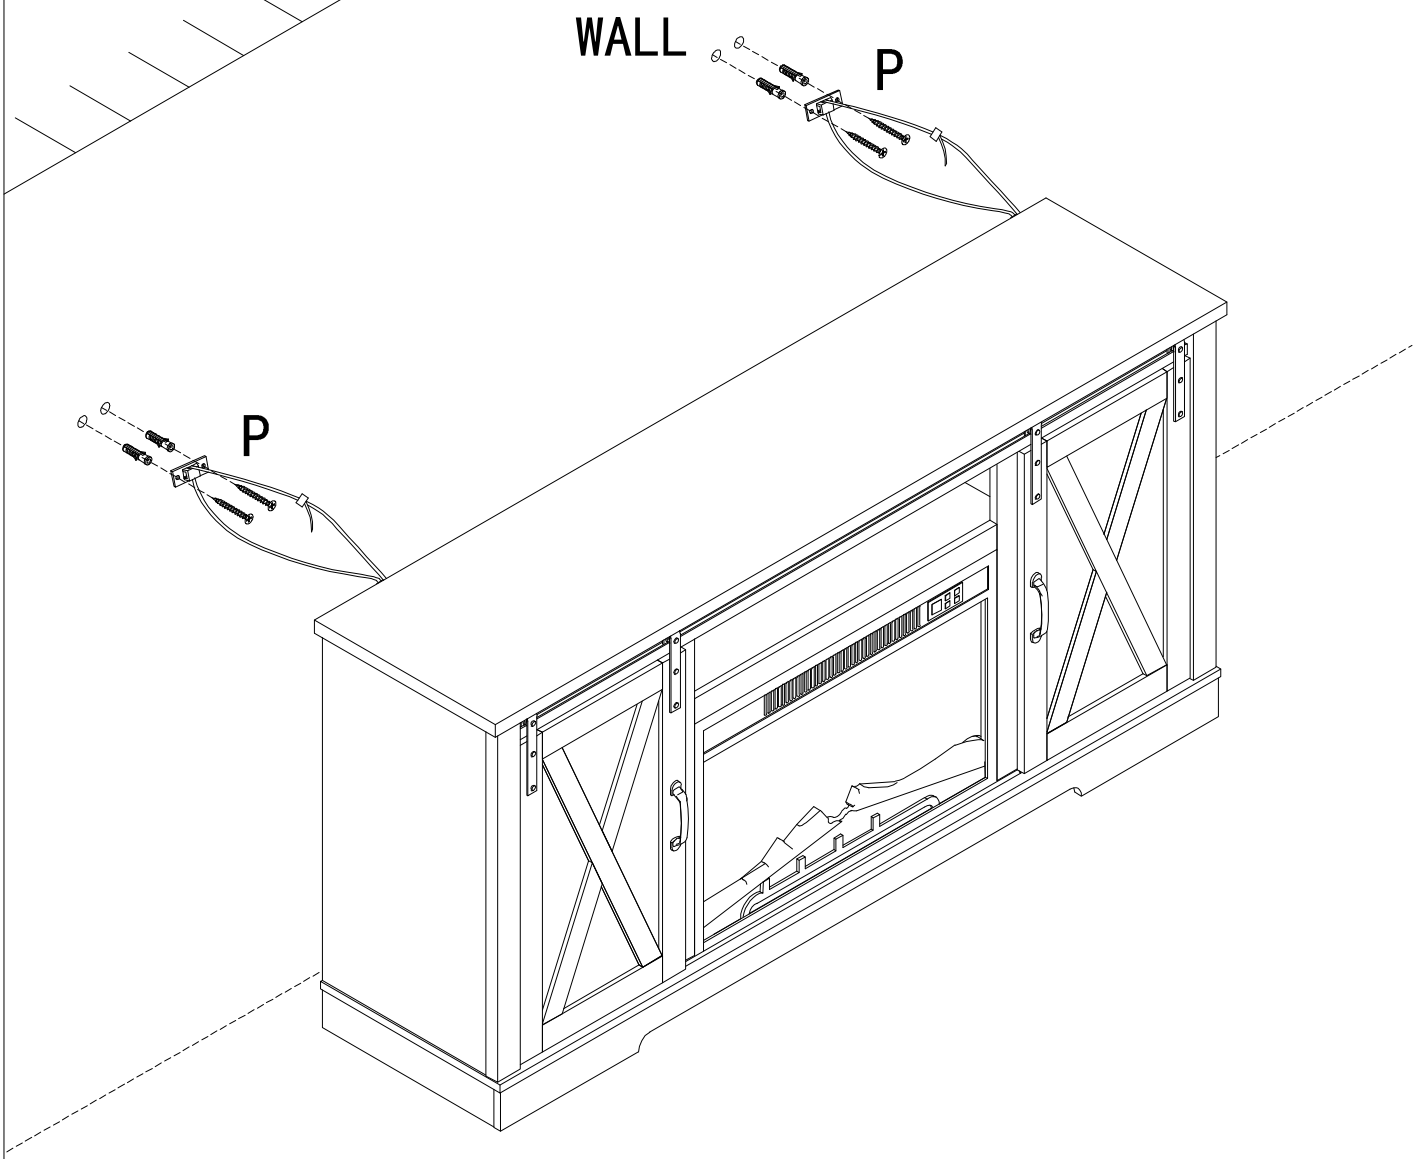

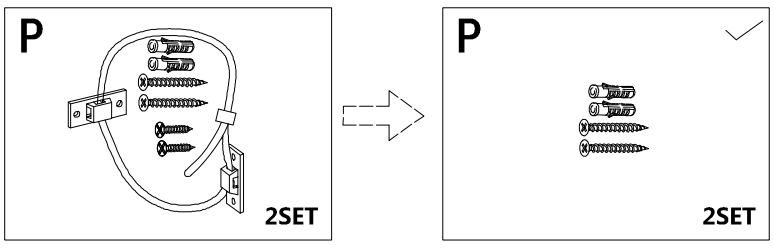

Follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware.

Attach the tip-over restraints to the unit and the wall.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.


Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

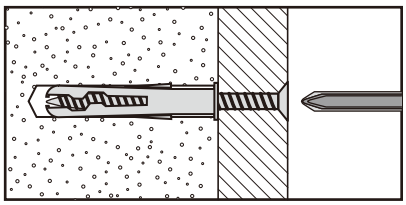


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 “Cavity Fixing” wall plug

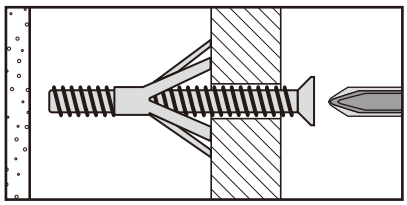


For use with plasterboard partitions or hollow wooden doors.

No.5 “Hammer Fixing” wall plug

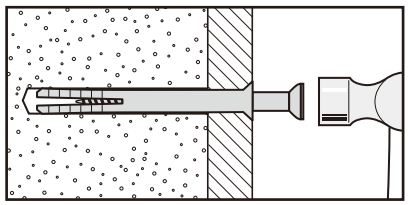


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 “ Plasterboard” wall plug

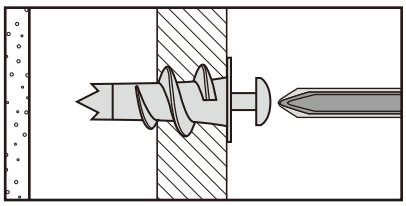


For use when attaching light loads onto plasterboard partitions.

No.4 “ Cavity Fixing – Heavy Duty” wall plug

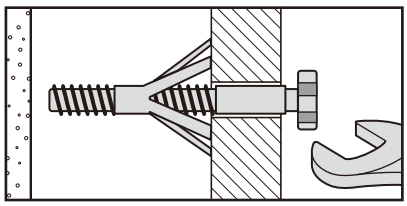

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 “ Shield Anchor” wall plug – heavy loads

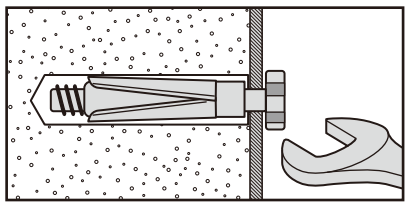

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

TV Stand

SKU:
BJ07NU-1F3B0
BJ07NU-1F3D0
BJ07NU-1F3F0

V1.0