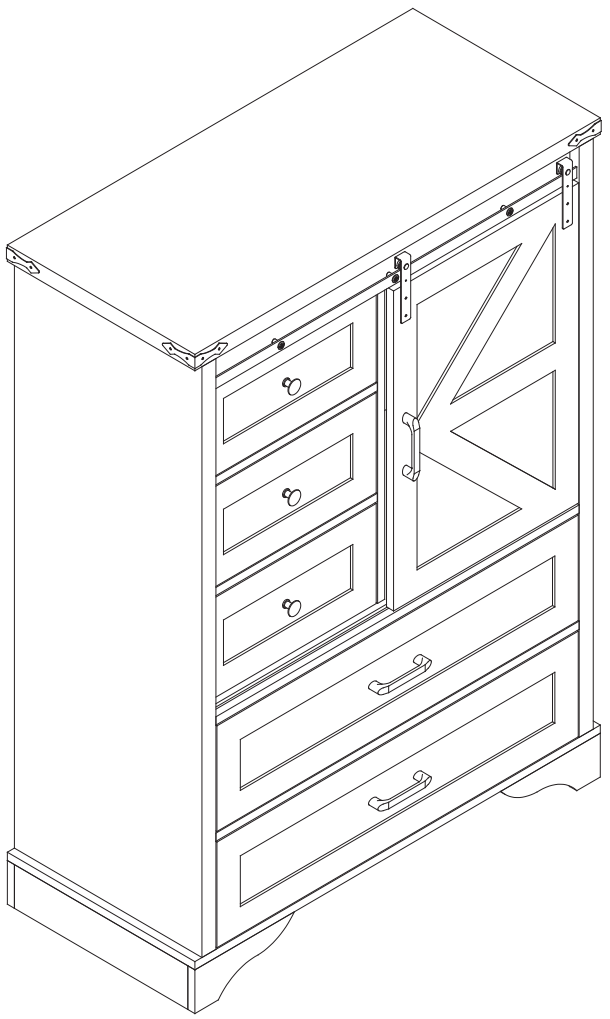
INSTRUCTION

34"W Farmhouse 5-Drawer Dresser



After-sales mailbox:
Homefurnitureserviceteam@outlook.com

NOTICE

Please keep these instructions for future reference.

Dear Customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. If any parts are missing, please contact us promptly to request replacement parts.

● Then follow the entire installation instructions to install.

● Each part is crucial, so please be careful not to lose any. It is recommended to store parts with different lettered identifiers in separate boxes or bags to avoid confusion during installation.

A . The outer box is damaged

B . The product is damaged / bent / cracked while you open the box

C . The parts / accessories / assembly tools are missing



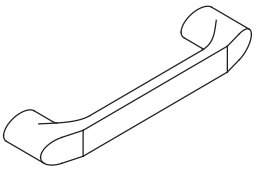

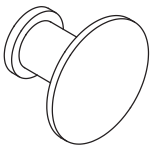




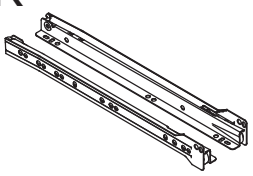
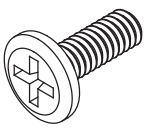
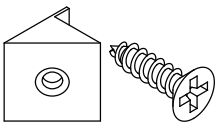

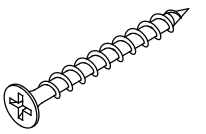

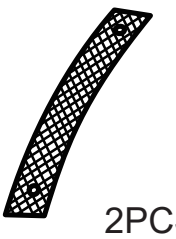
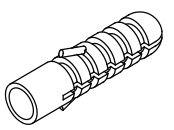
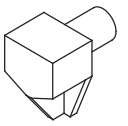
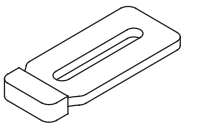
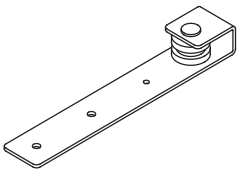

D . The instructions are not clear and can not be referred

E . The product has functional problems


F . Other aspects that you are not satisfied with

Please feel free to contact us for help. Our after-sales team service (**Homefurnitureserviceteam@outlook.com**) will reply within 24 hours and will do our best to resolve the problem for you.





















EXPLODED VIEW








A  7x40mm 80(+2)PCS	B  15x9.5mm 80(+2)PCS	C  3PCS	D  M3x15mm 40(+2)PCS	E  3PCS
F  M4x18mm 2PCS	G  M4x35mm 20(+1)PCS	H  30(+2)PCS	I  80PCS	J  M3x12mm 8PCS
K  5PCS	L  3PCS	M  14PCS	N  1PC	O  2PCS
P  6PCS	Q  2PCS	R  2PCS	S  4PCS	T  2PCS
U  2PCS	V  2PCS	W  M4x8mm 7PCS		

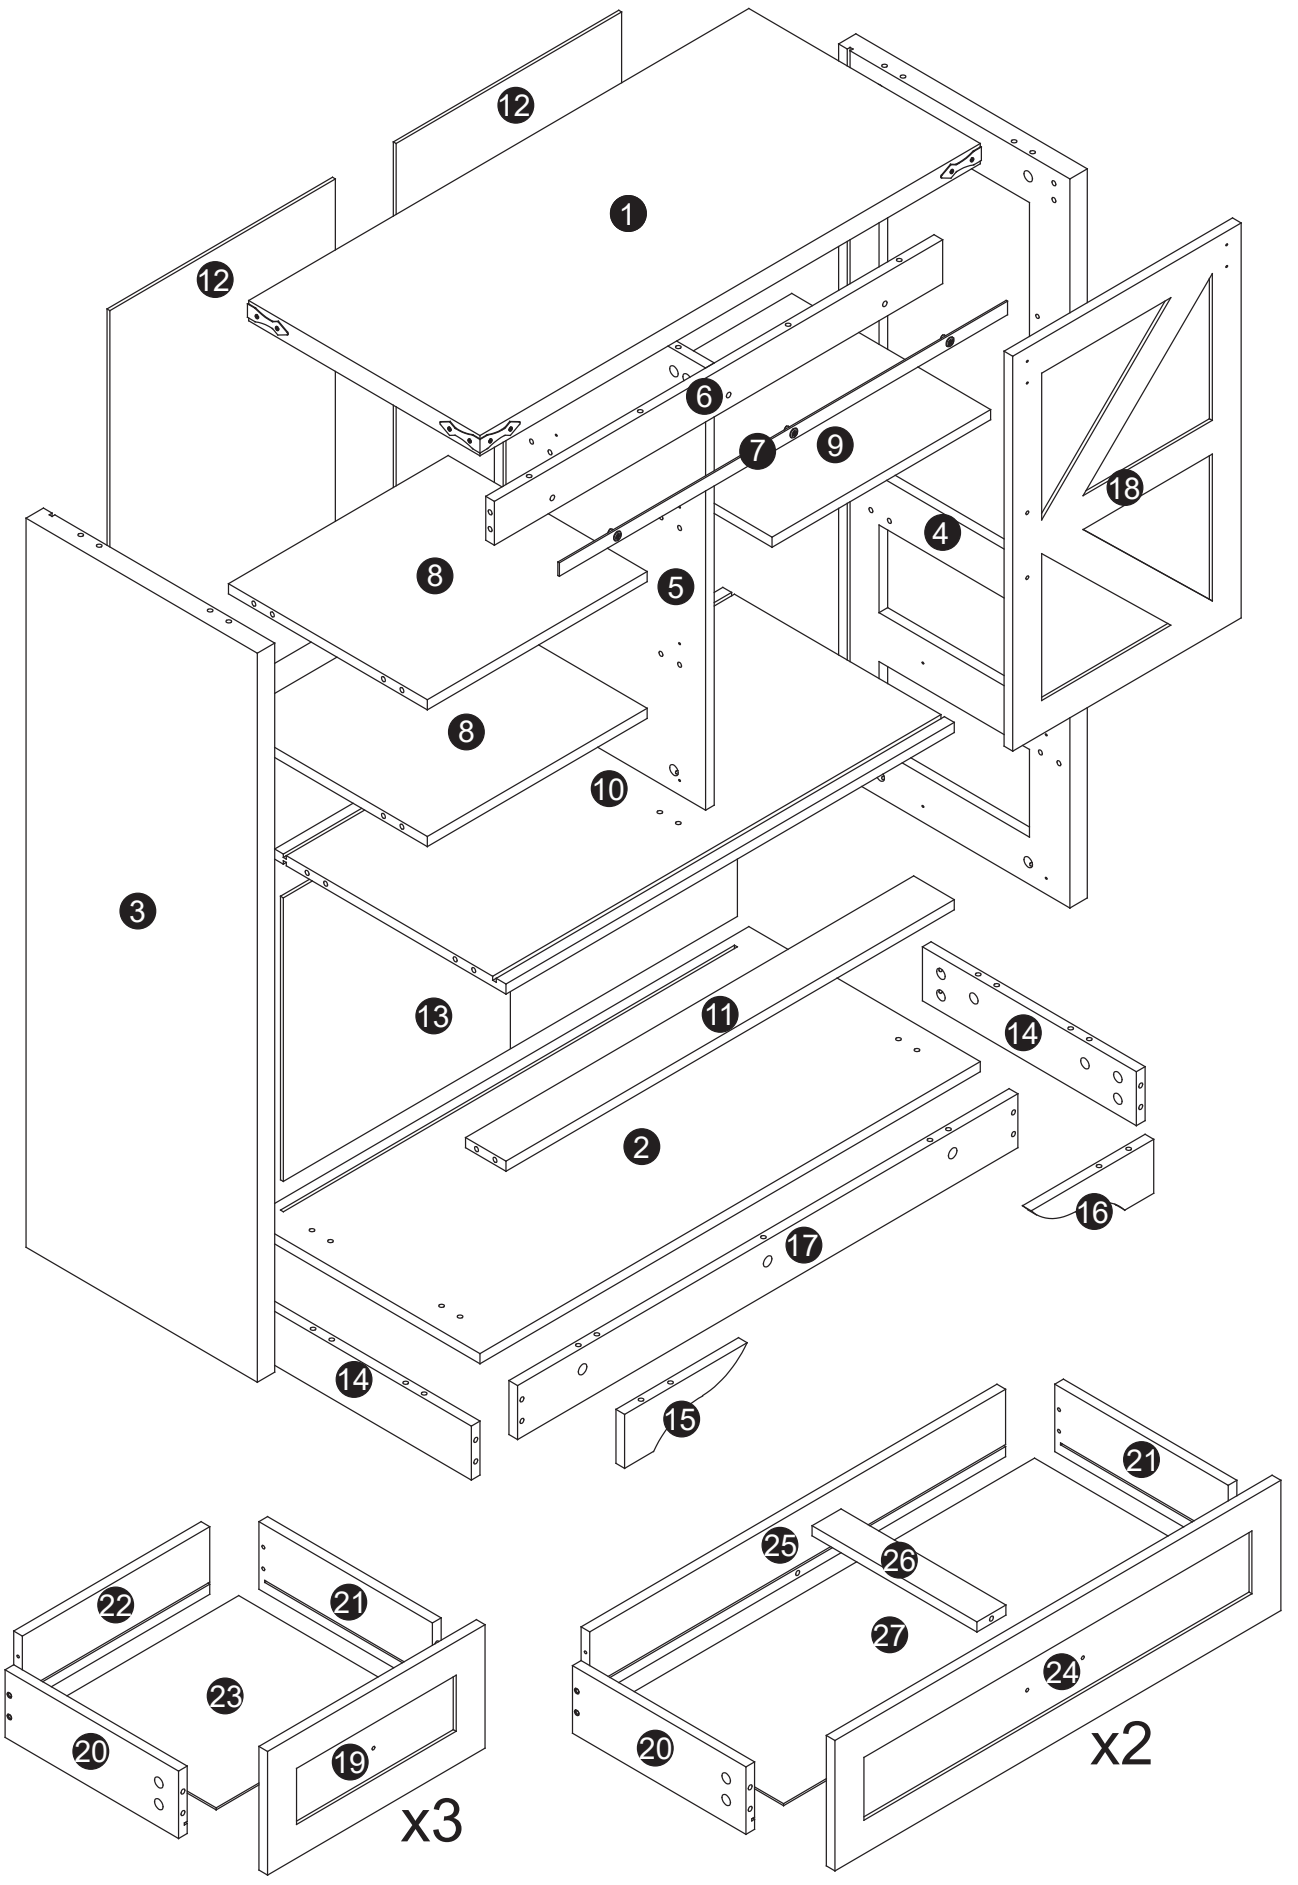
EXPLODED VIEW



STEP

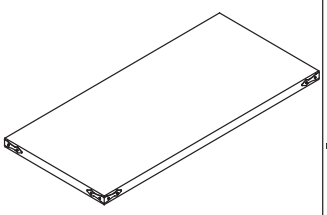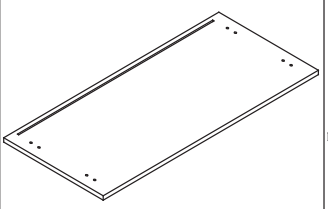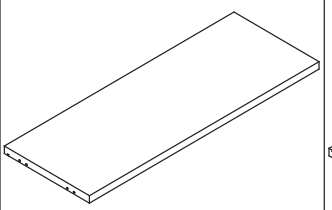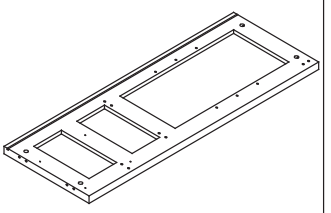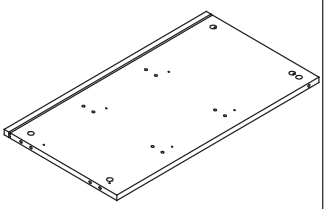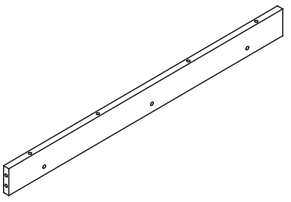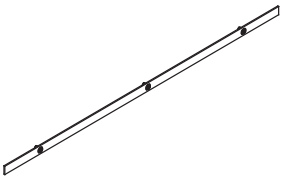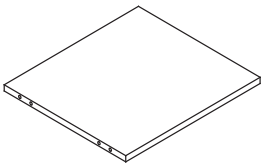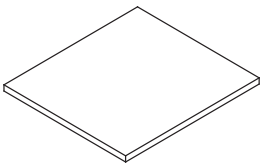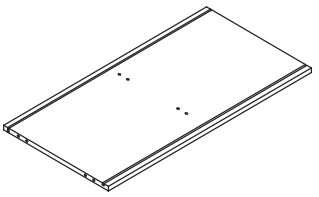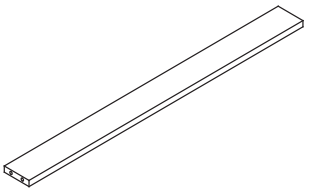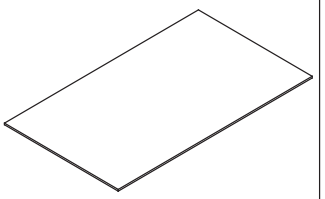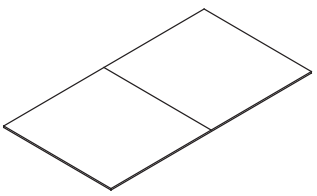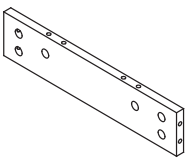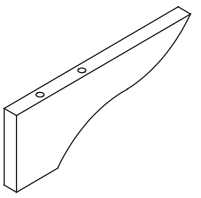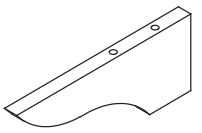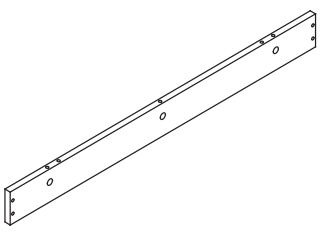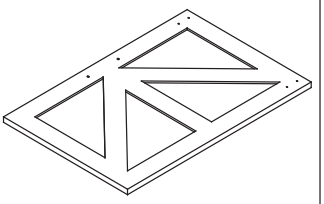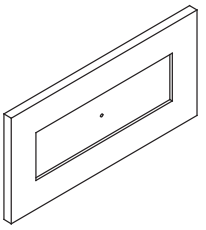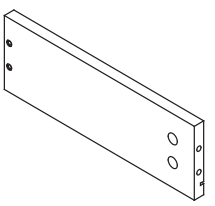1  x1PC	2  x1PC	3  x1PC	4  x1PC
5  x1PC	6  x1PC	7  x1PC	8  x2PCS
9  x1PC	10  x1PC	11  x1PC	12  x2PCS
13  x1PC	14  x2PCS	15  x1PC	16  x1PC
17  x1PC	18  x1PC	19  x3PCS	20  x5PCS

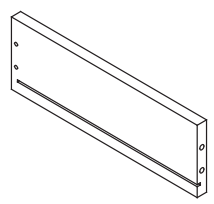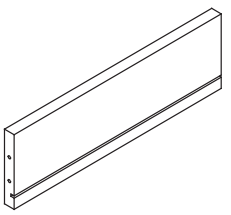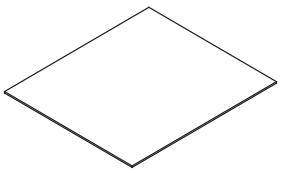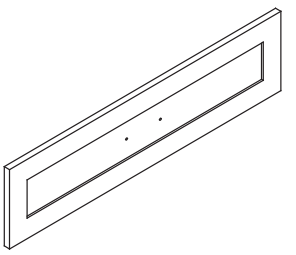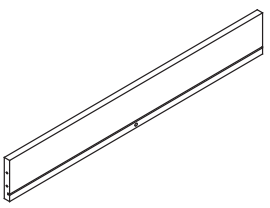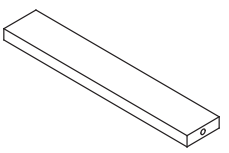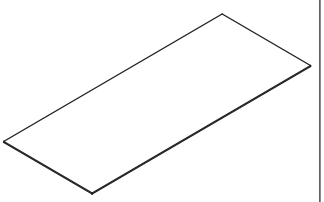
21  x5PCS	22  x3PCS	23  x3PCS	24  x2PCS
25  x2PCS	26  x2PCS	27  x2PCS	

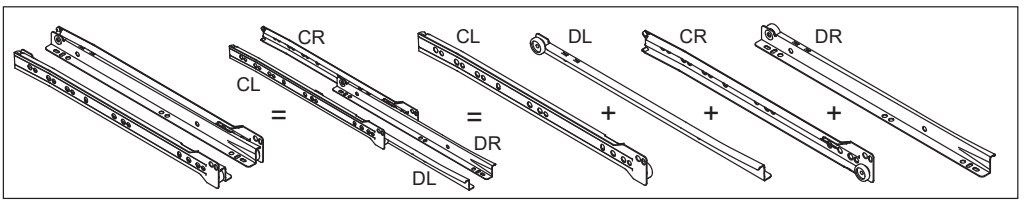


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL

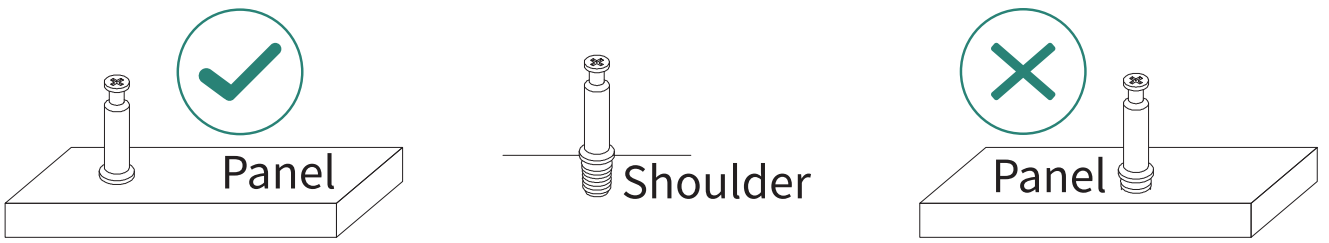
Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.



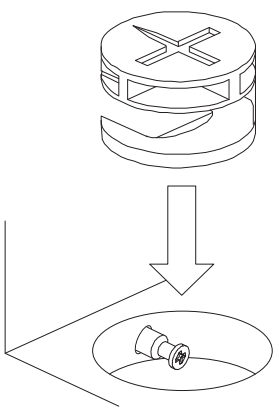The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.




Turn the cam lock clockwise to tighten.

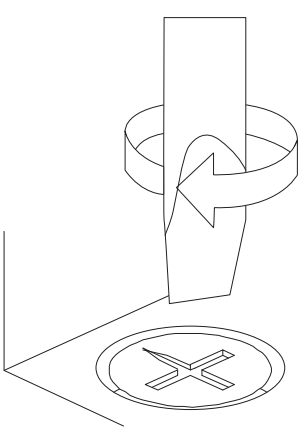


01

Ax24	
Cx2	
Ex3	
Wx7	

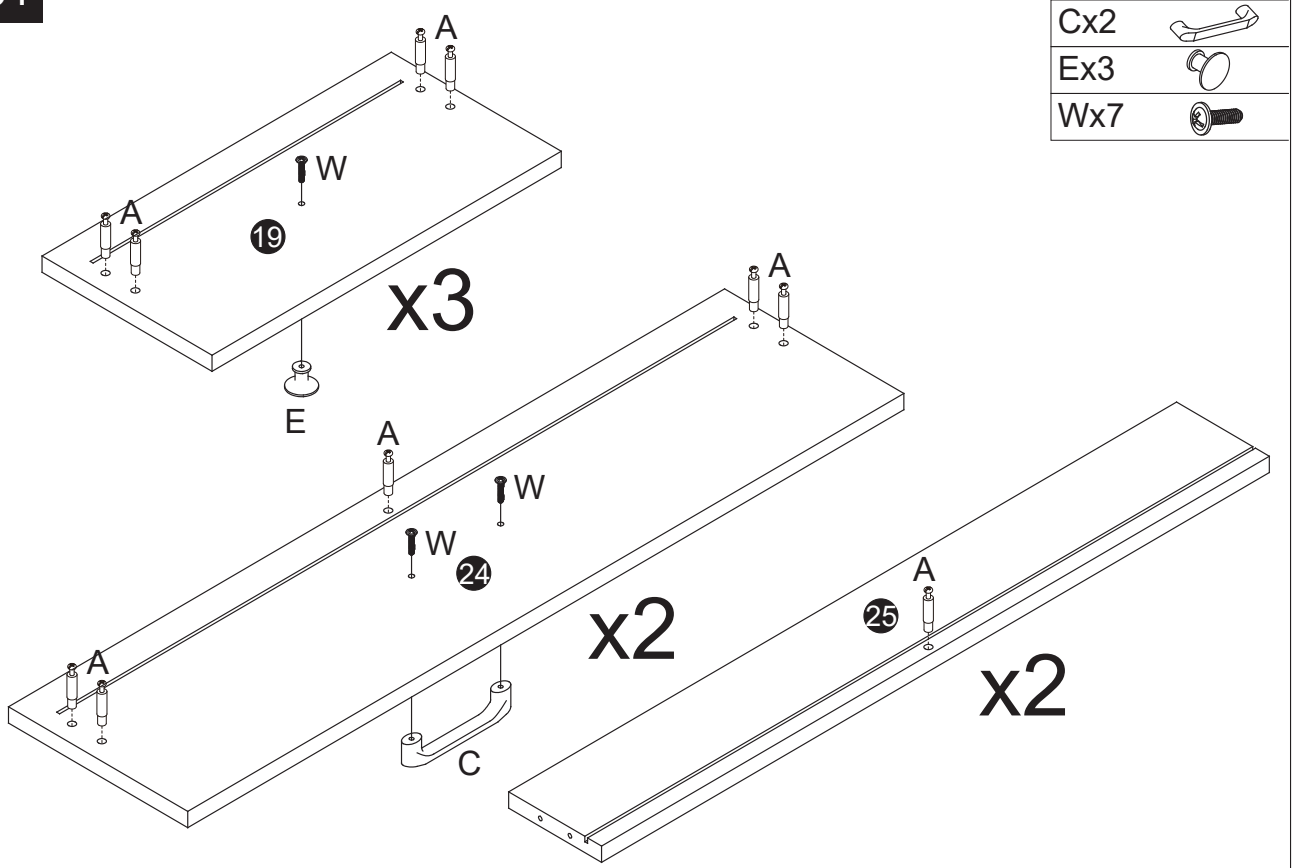


02

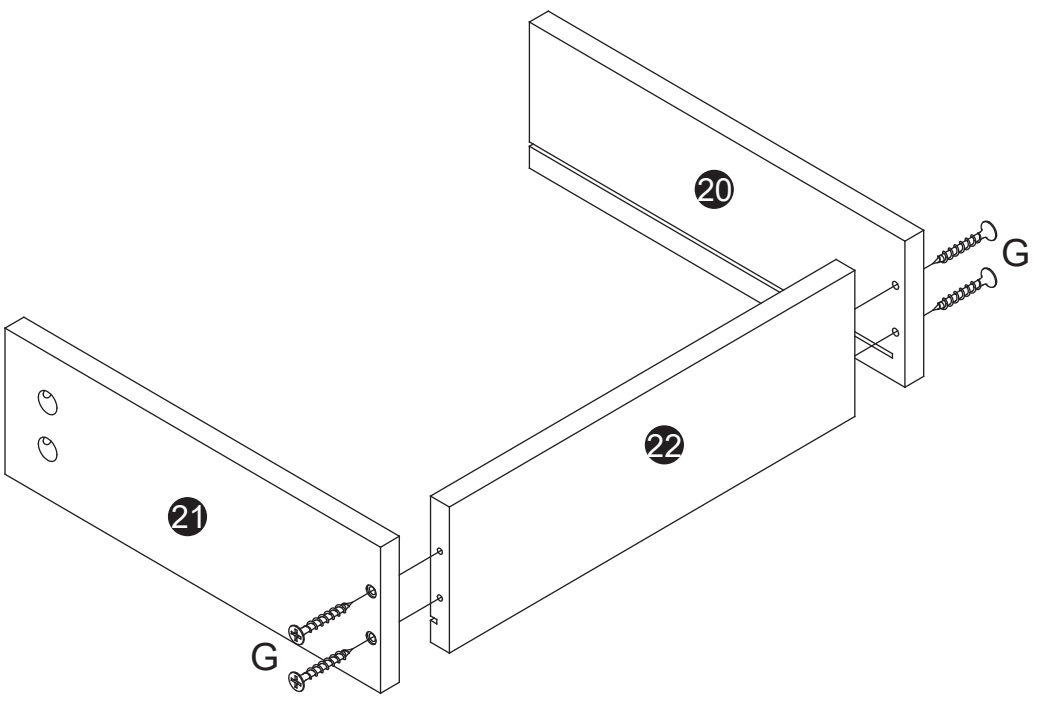Gx12



03

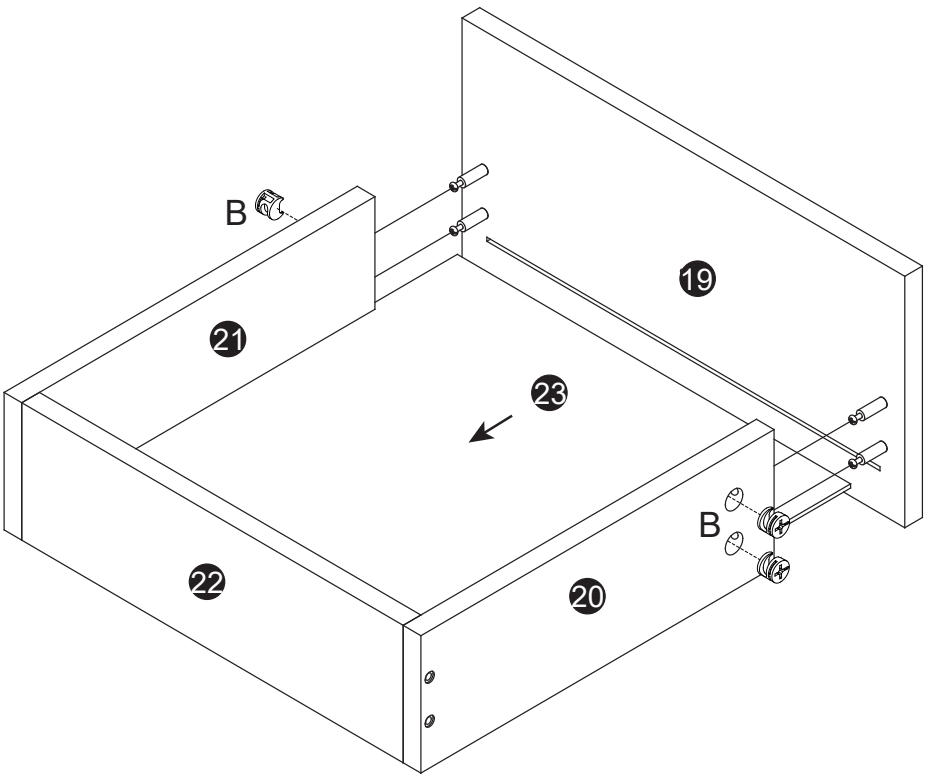Bx12




x3

04

Dx12

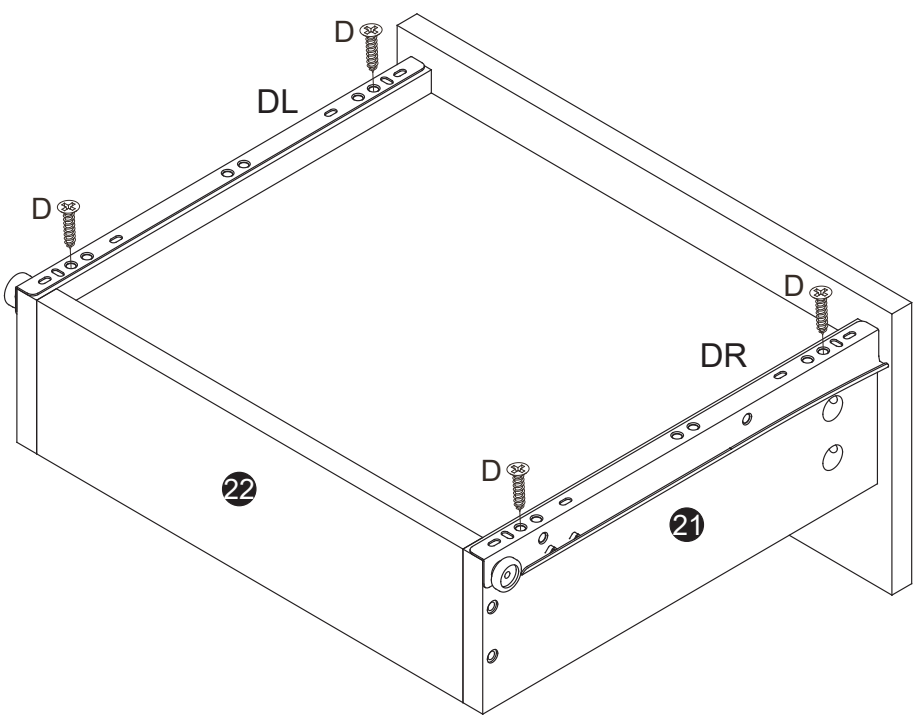
Kx3



x3

05

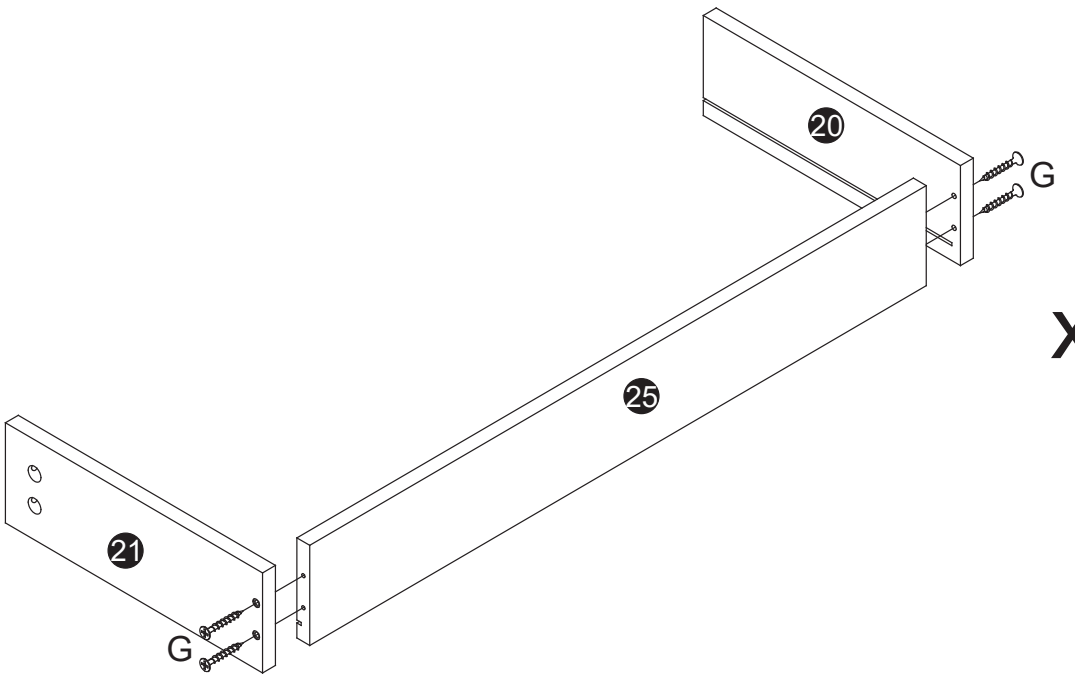
Gx8



x2

06

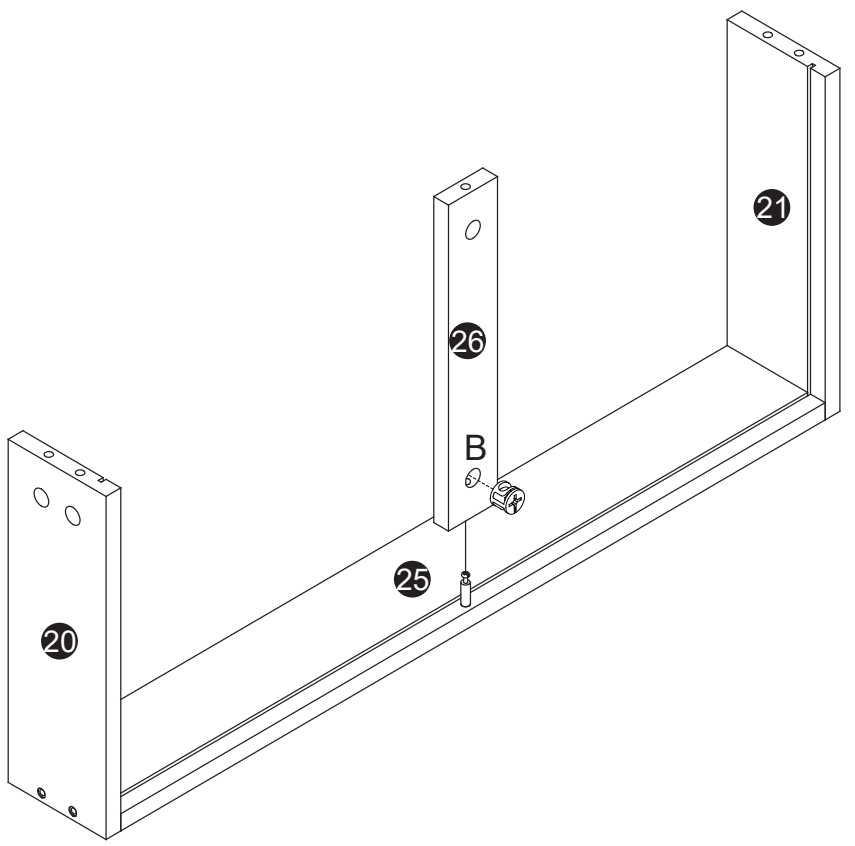
Bx2



x2

07

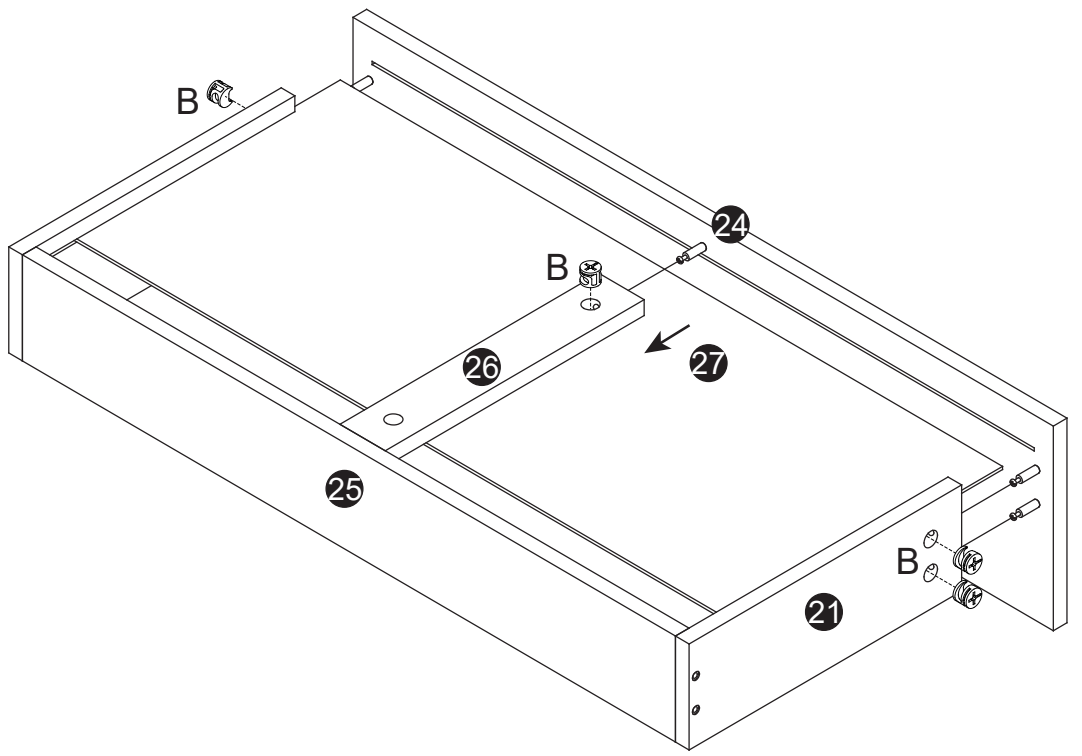Bx10




x2

08

Dx8

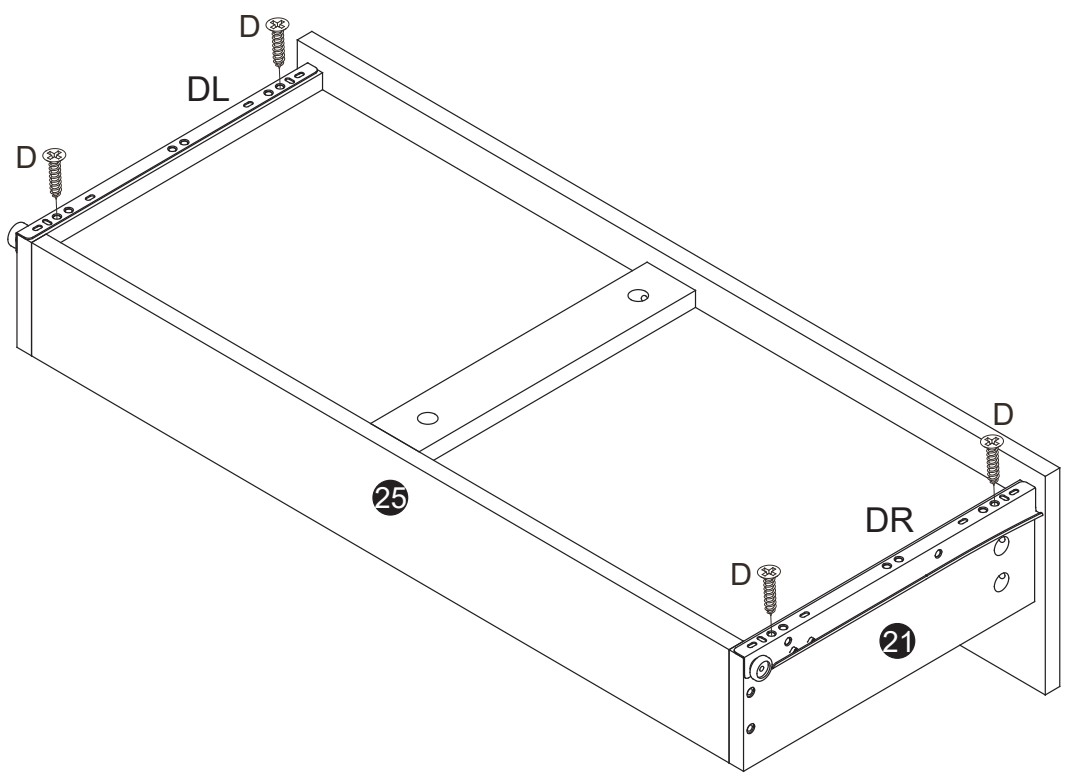Kx2




x2

09


Ax19

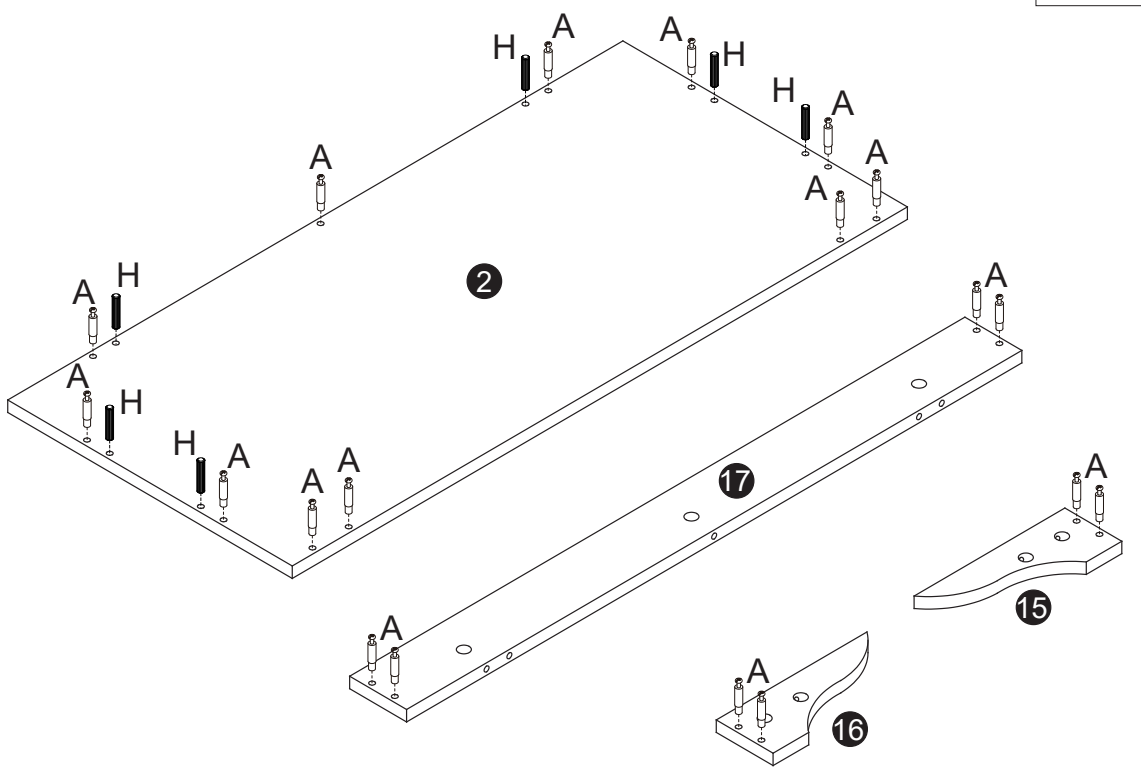Hx6




10

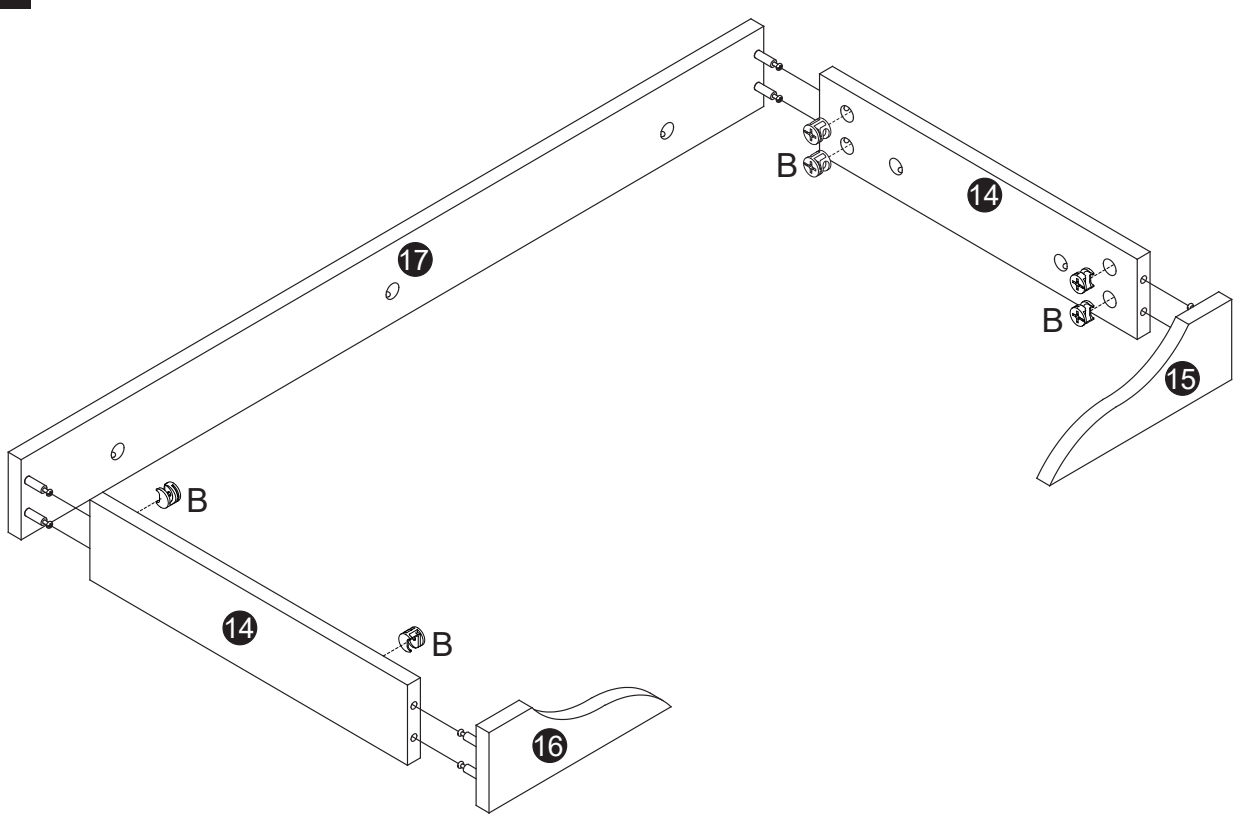Bx8



11

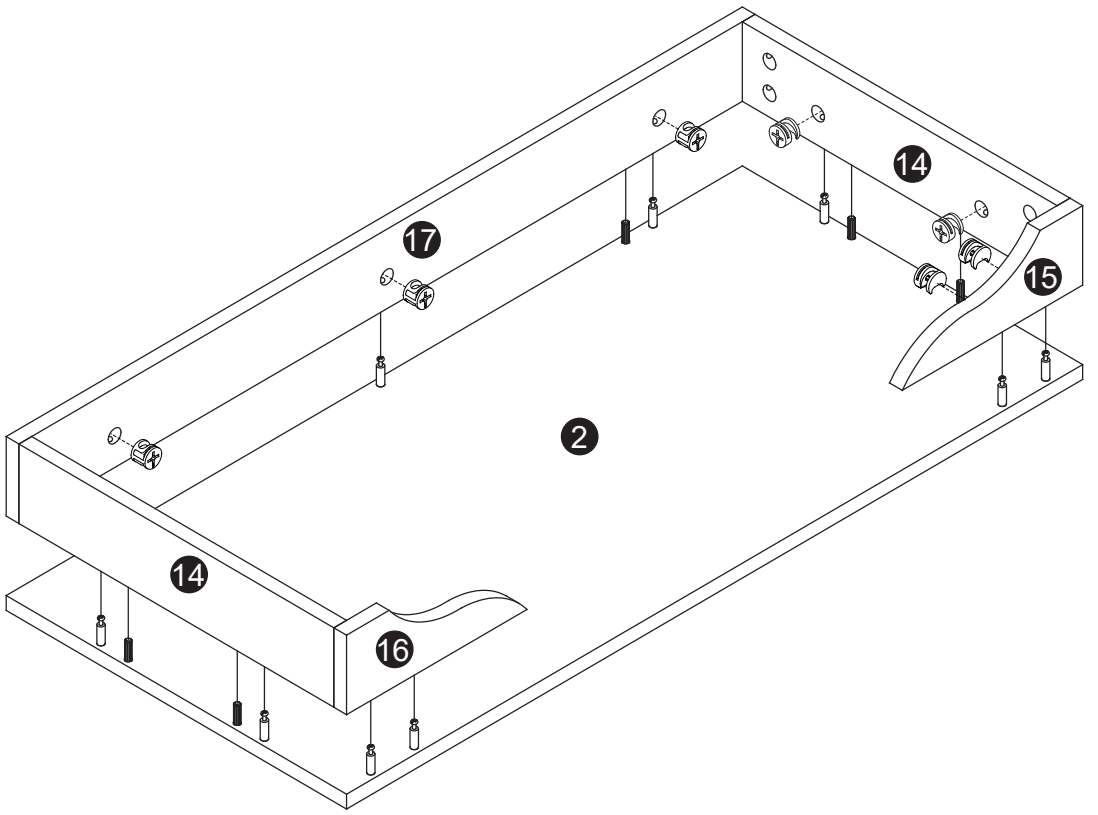
Bx11



12


Ax22

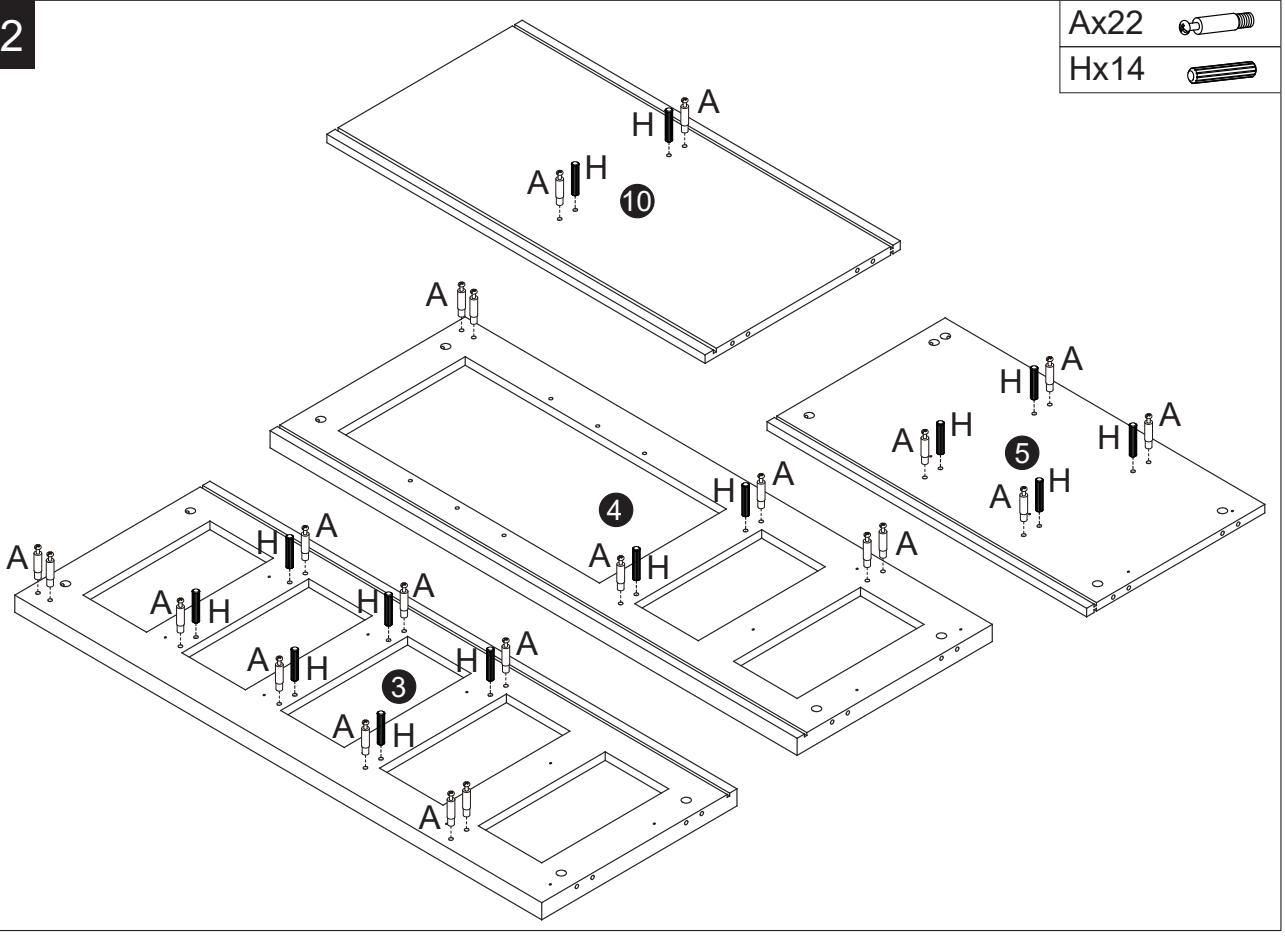Hx14




13

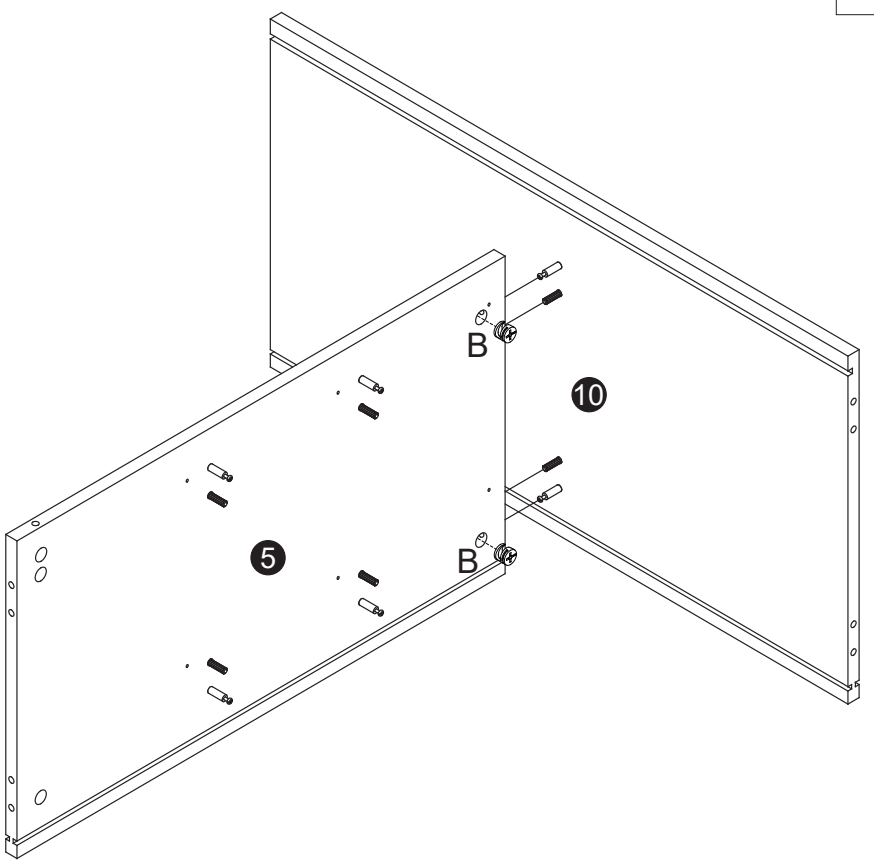Bx2




14

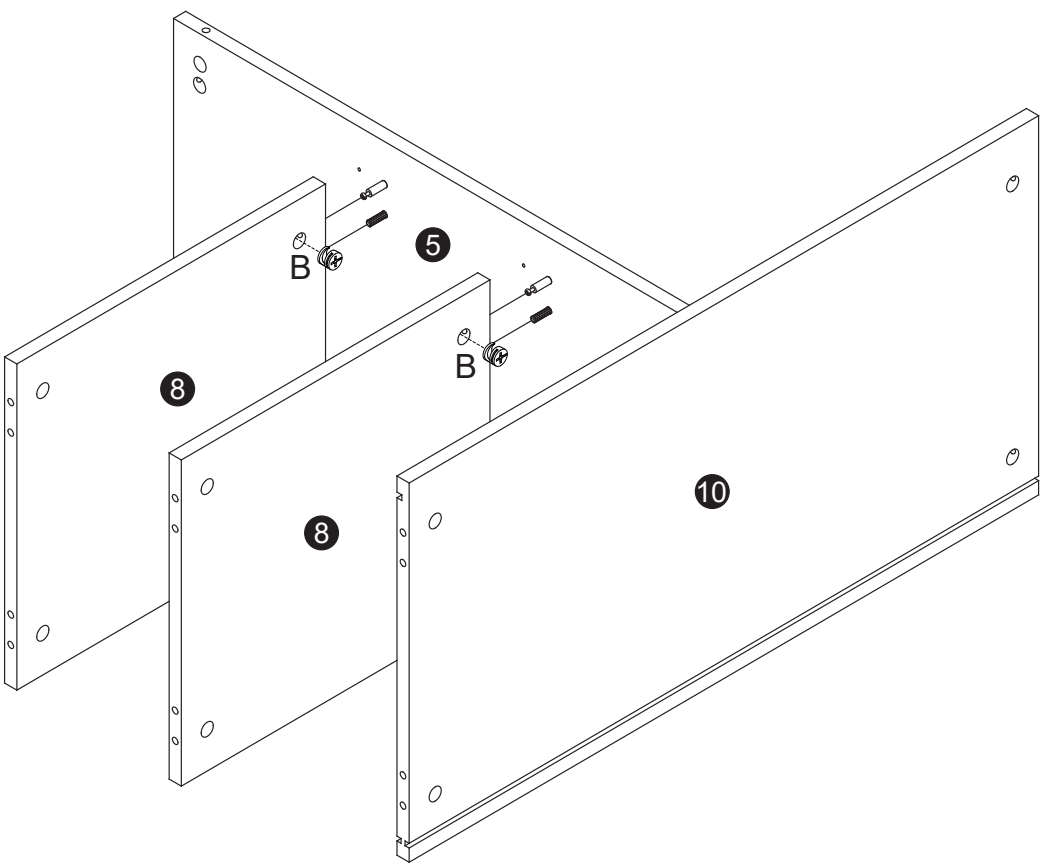Bx4



15

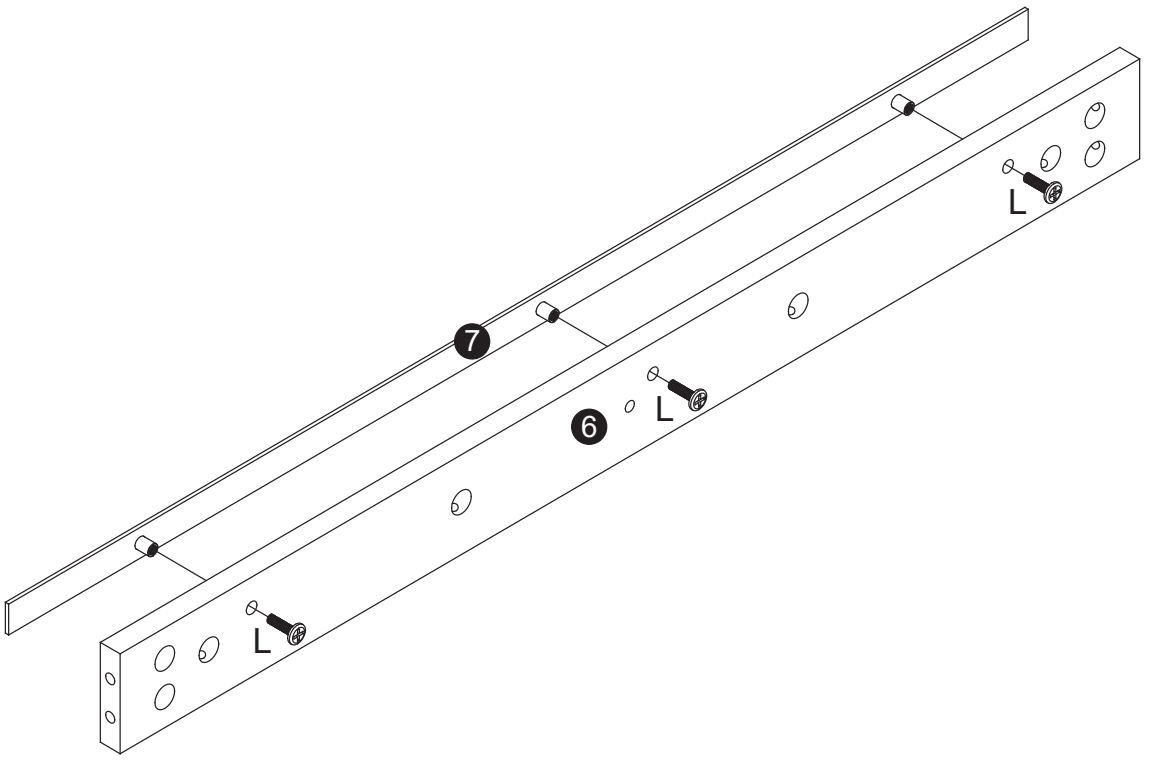
Lx3



16


Ax1

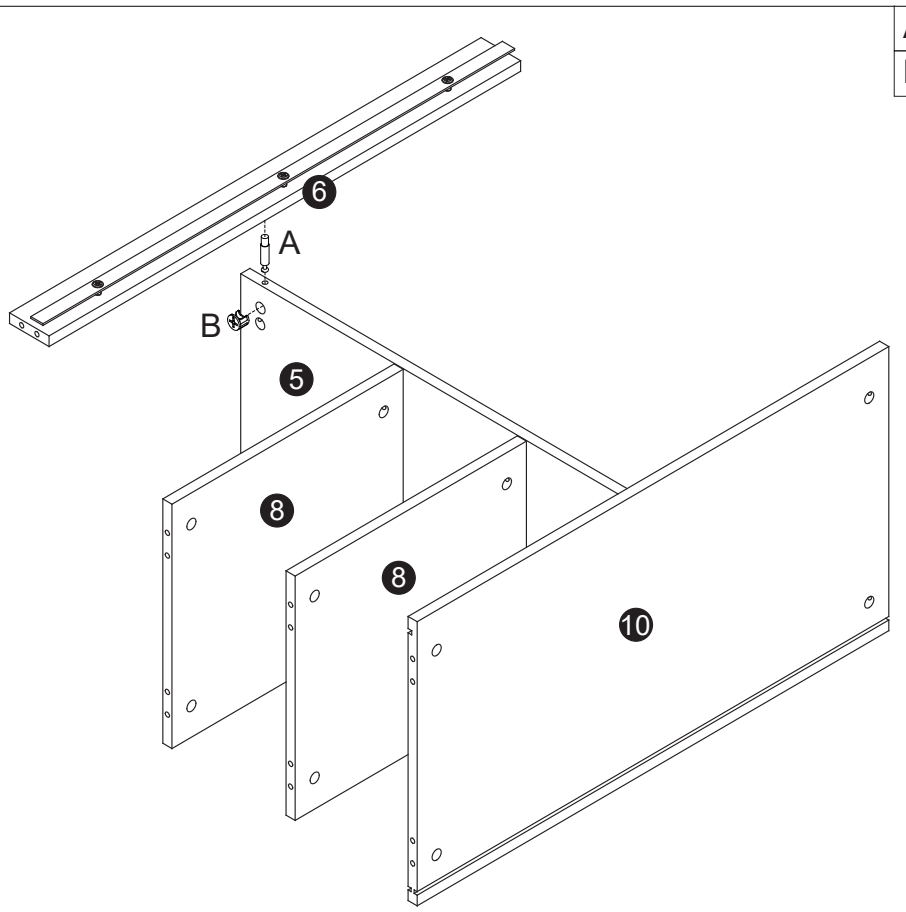Bx1




17

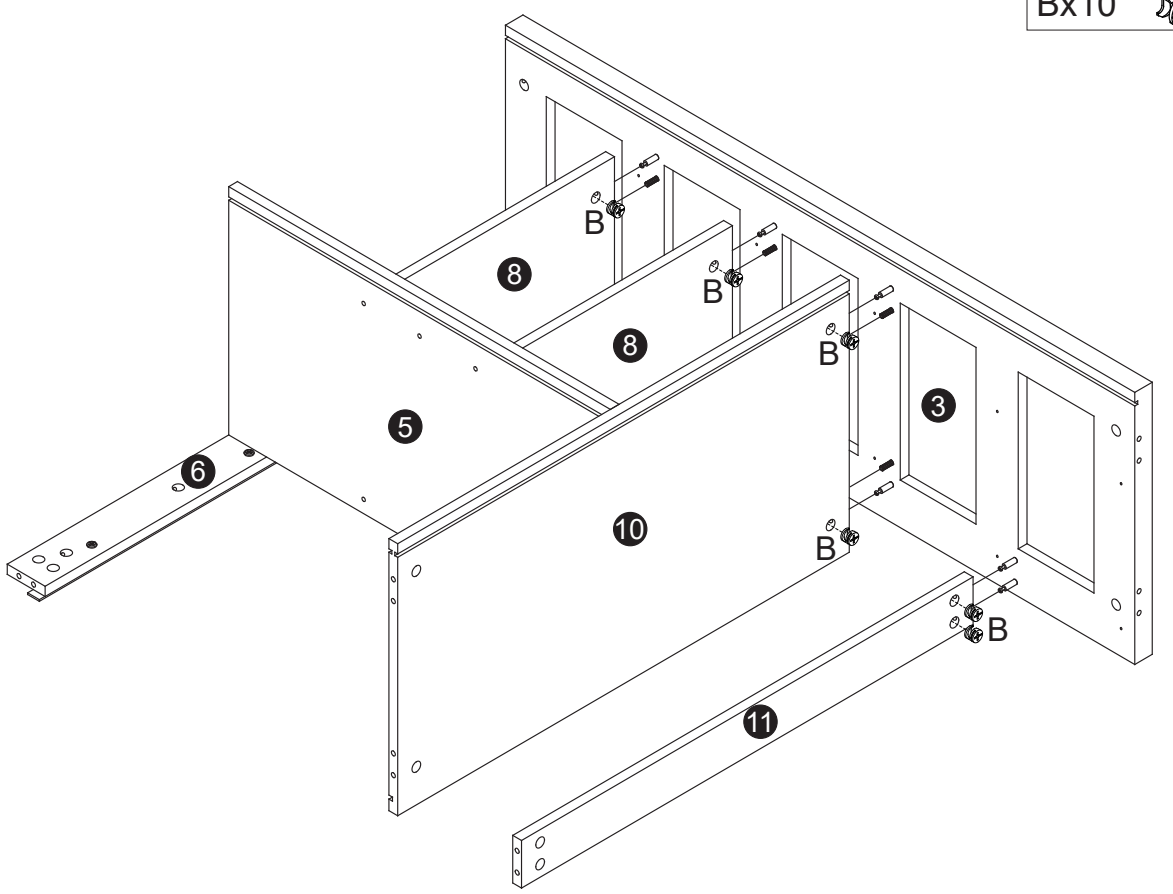Bx10




18

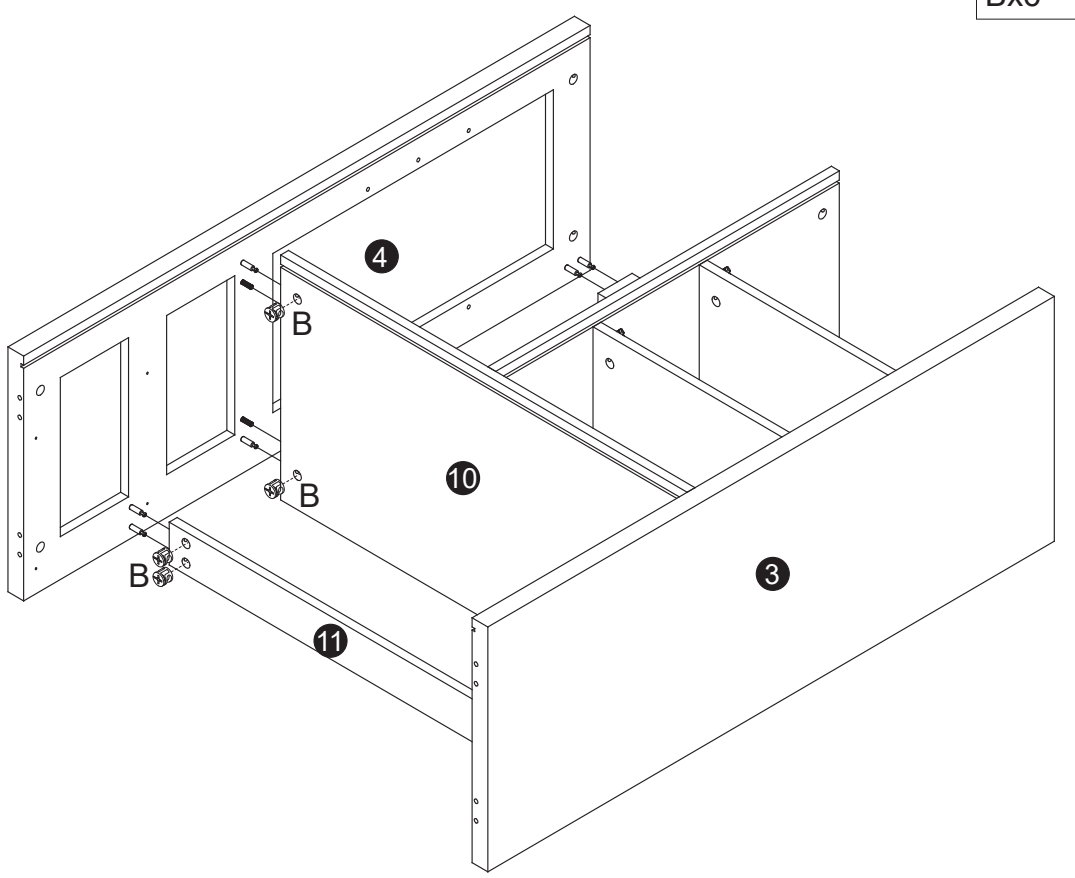Bx6




19

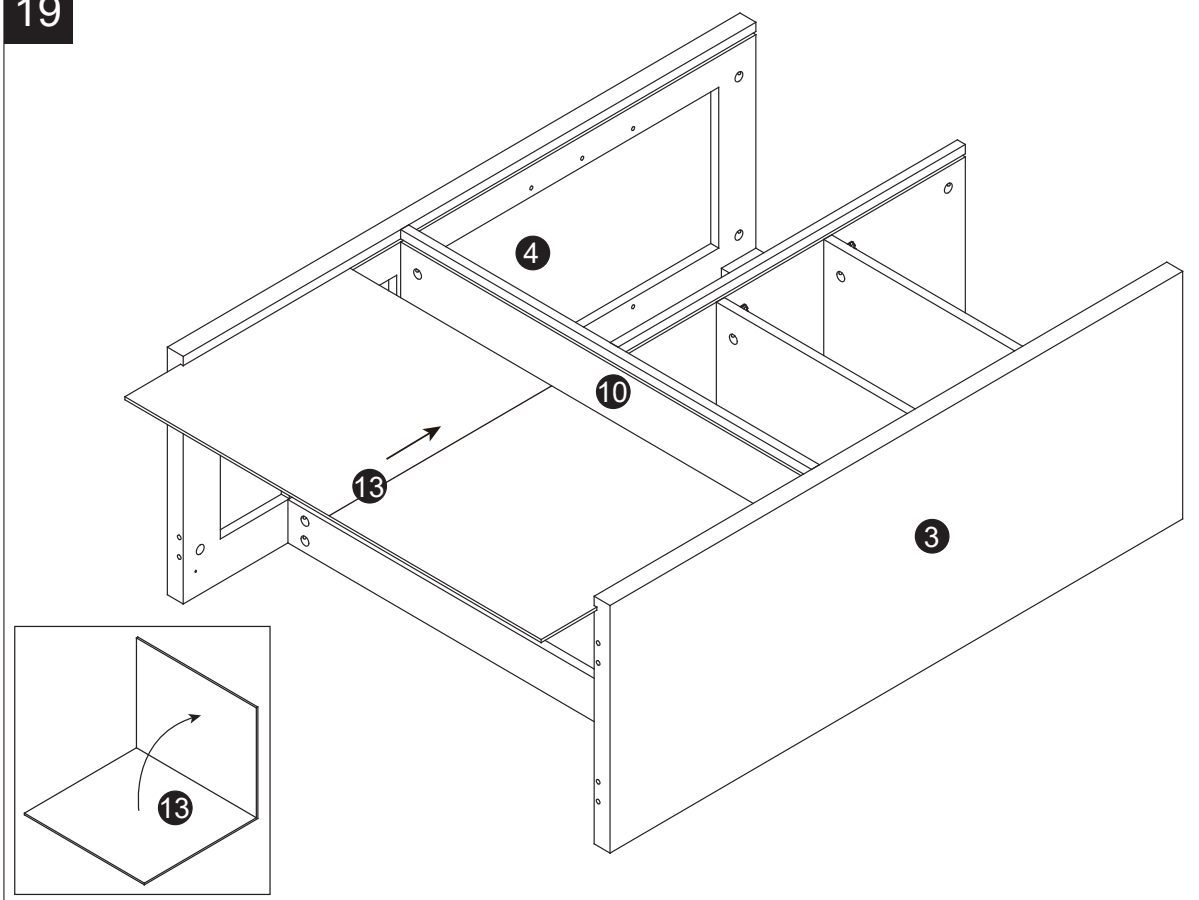


20

Ax14	
Hx10	

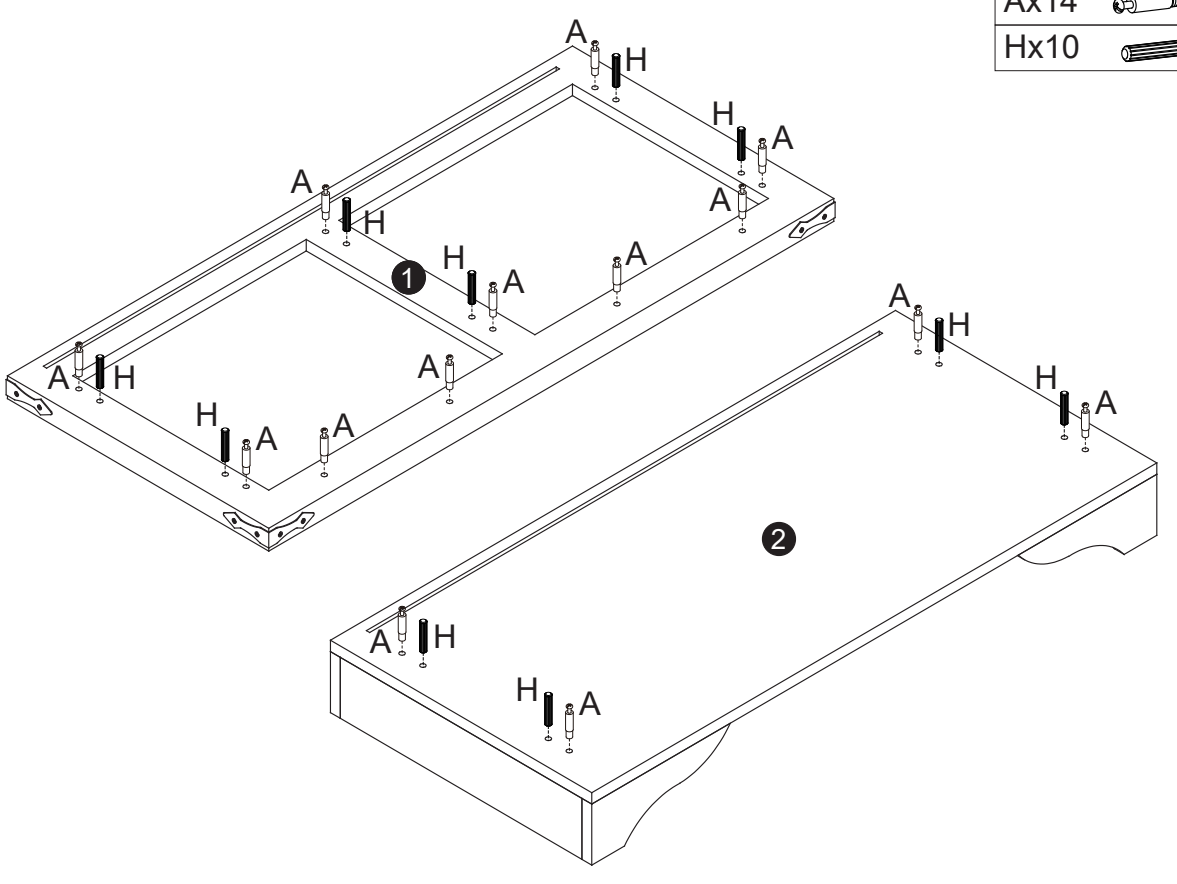


21

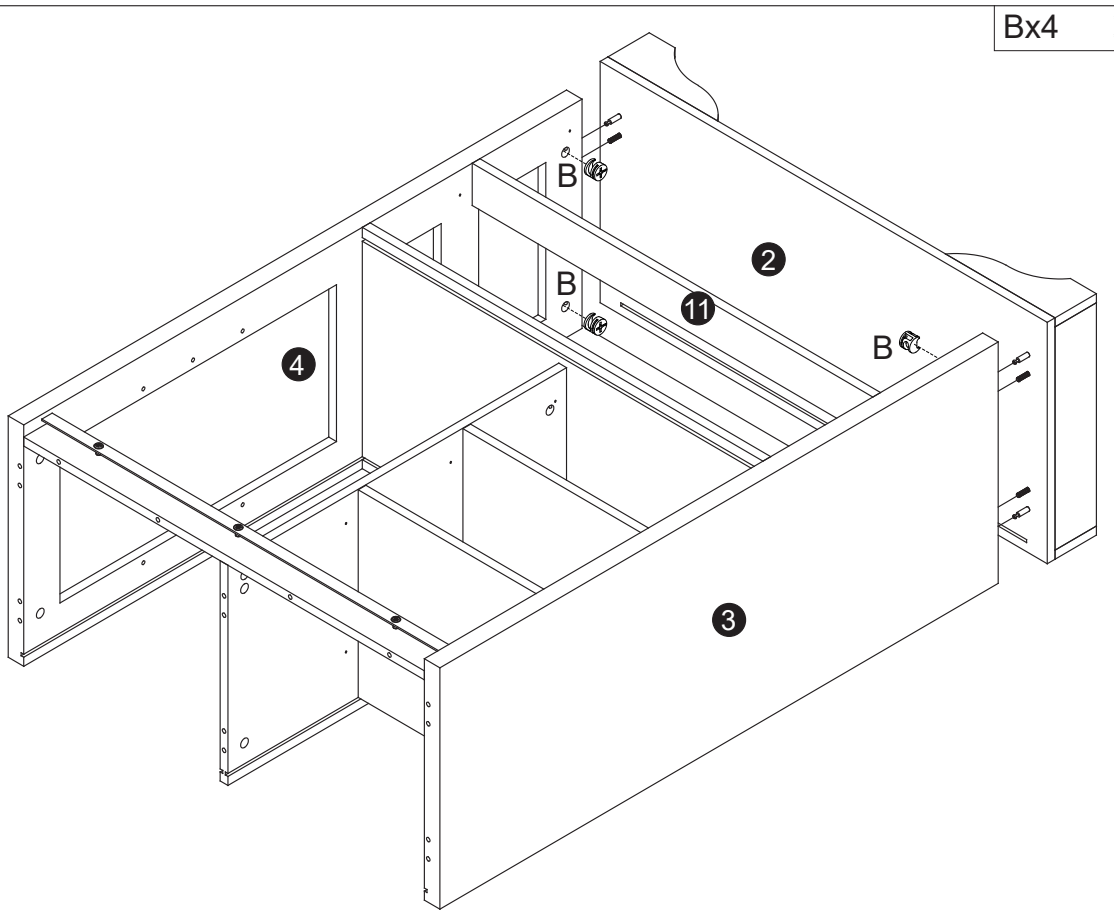Bx4




22

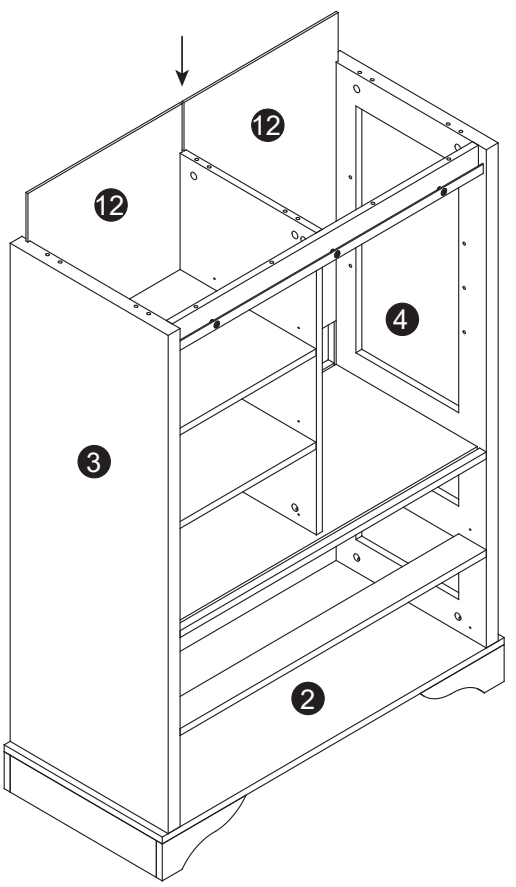


23

Bx10

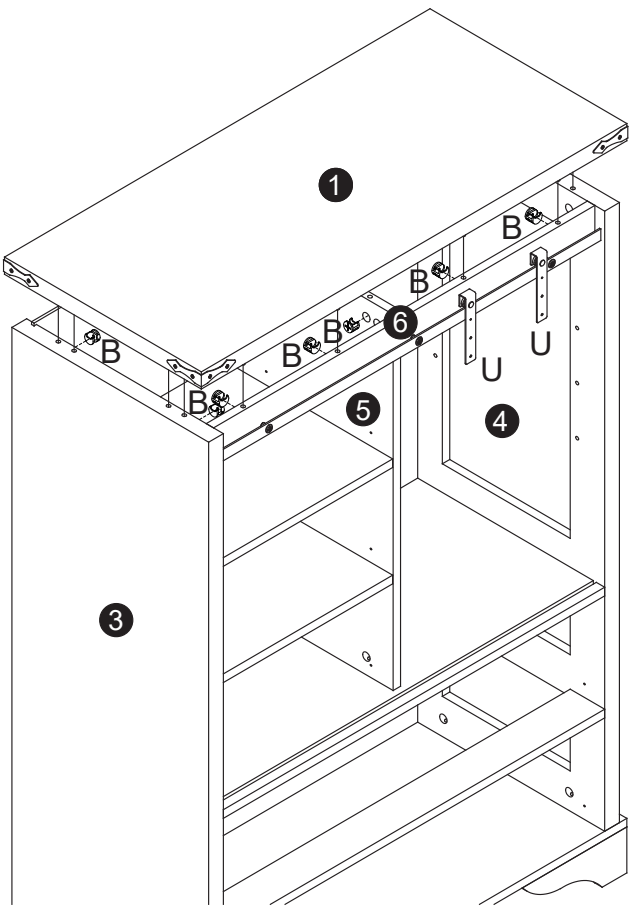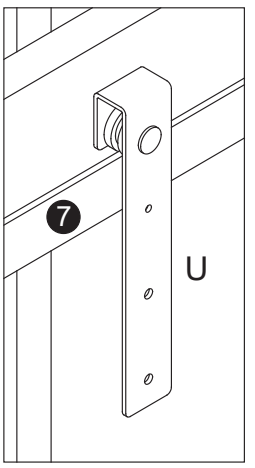Ux2







24

Mx14

Px2

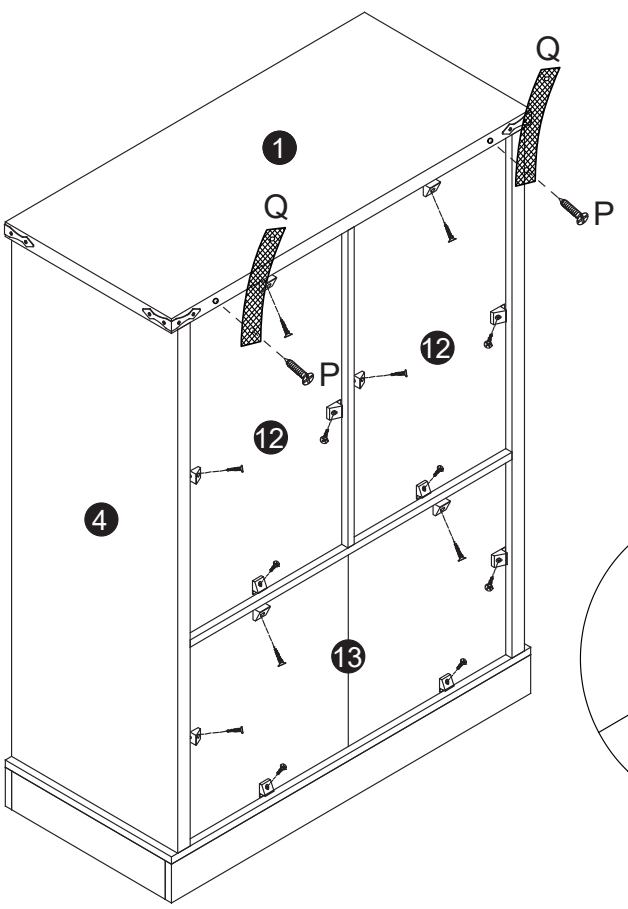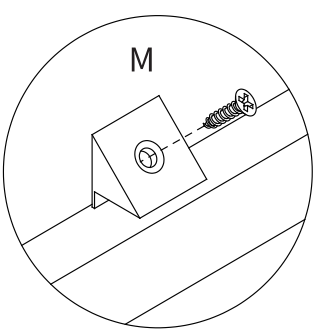Qx2






25


Dx20

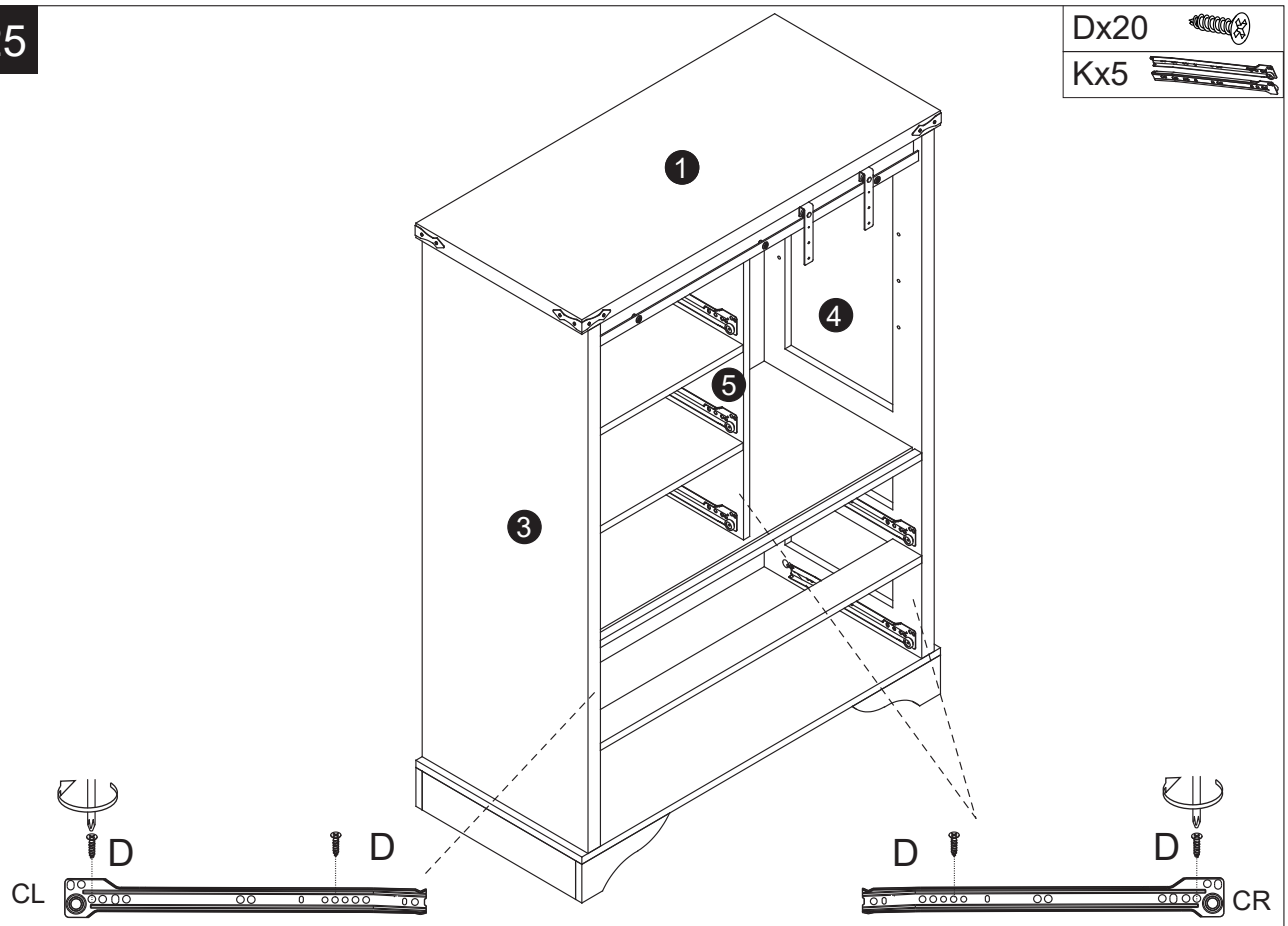Kx5




26

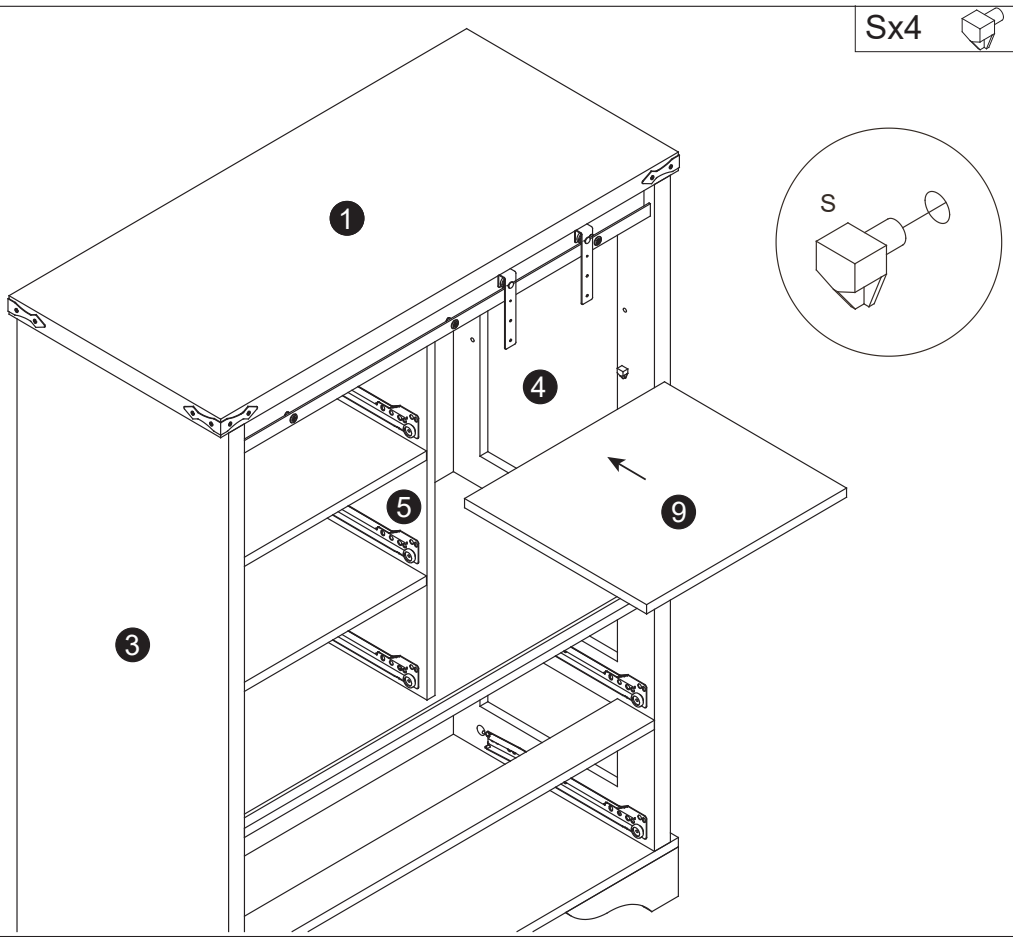Sx4




27

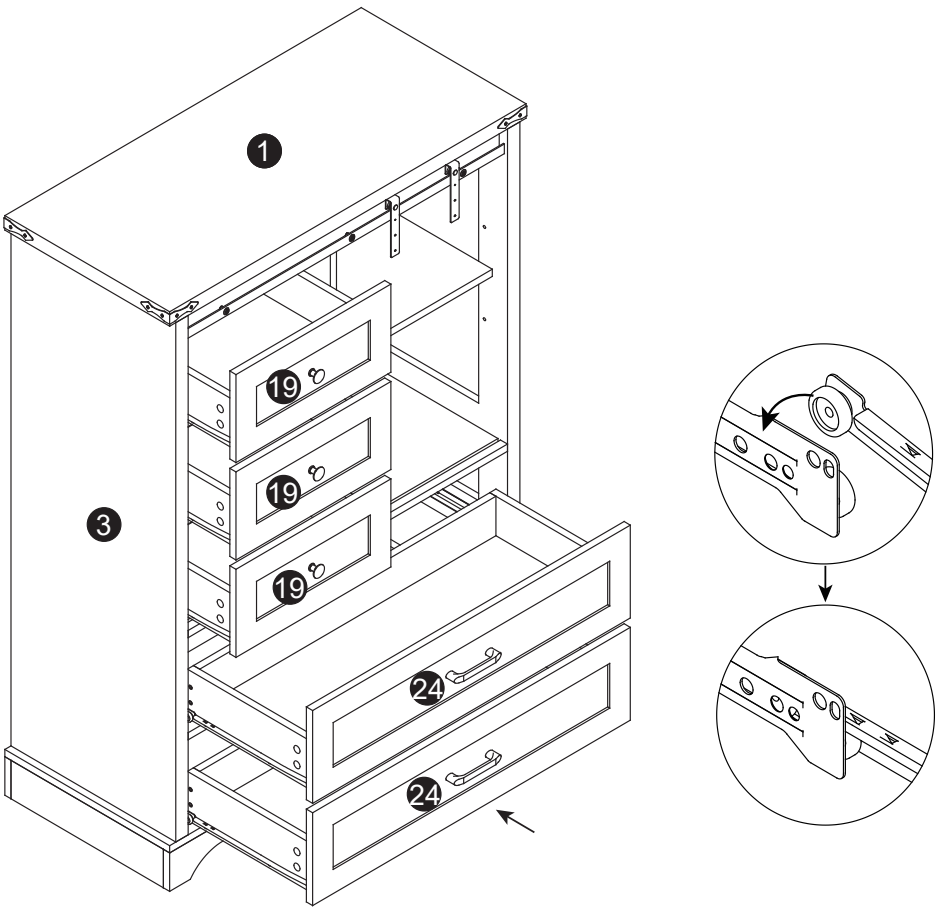

28


Cx1	
Fx2	
Jx4	
Tx2	

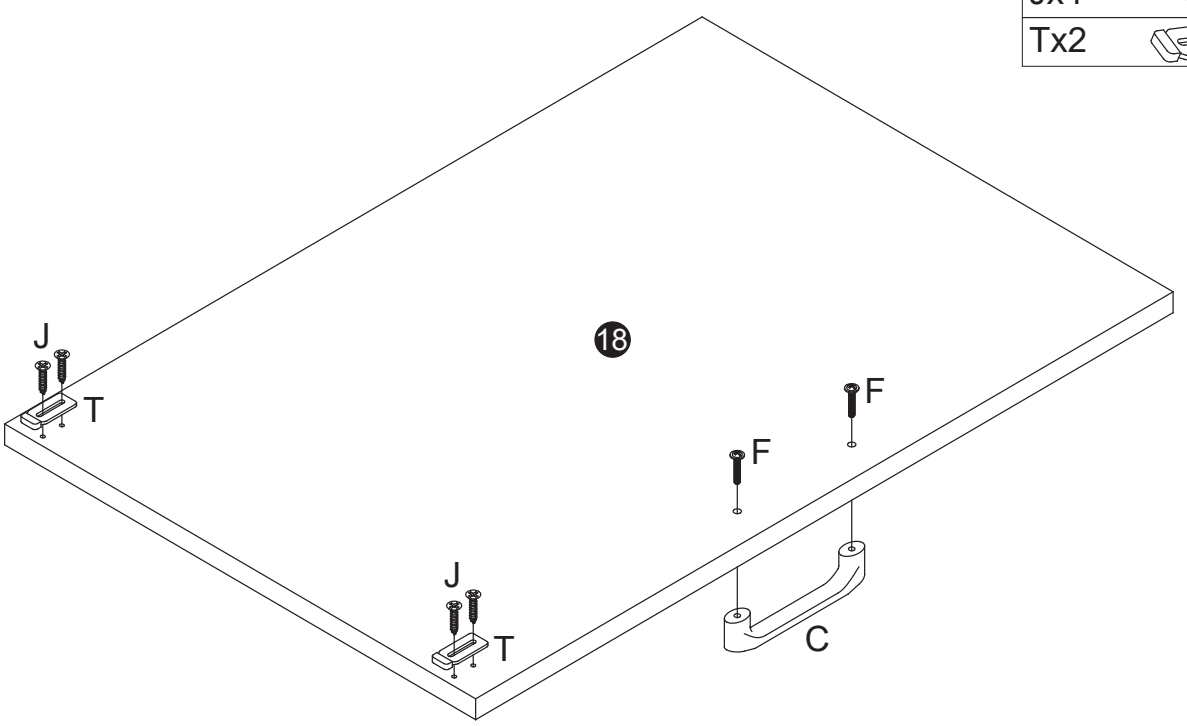

29


Jx4

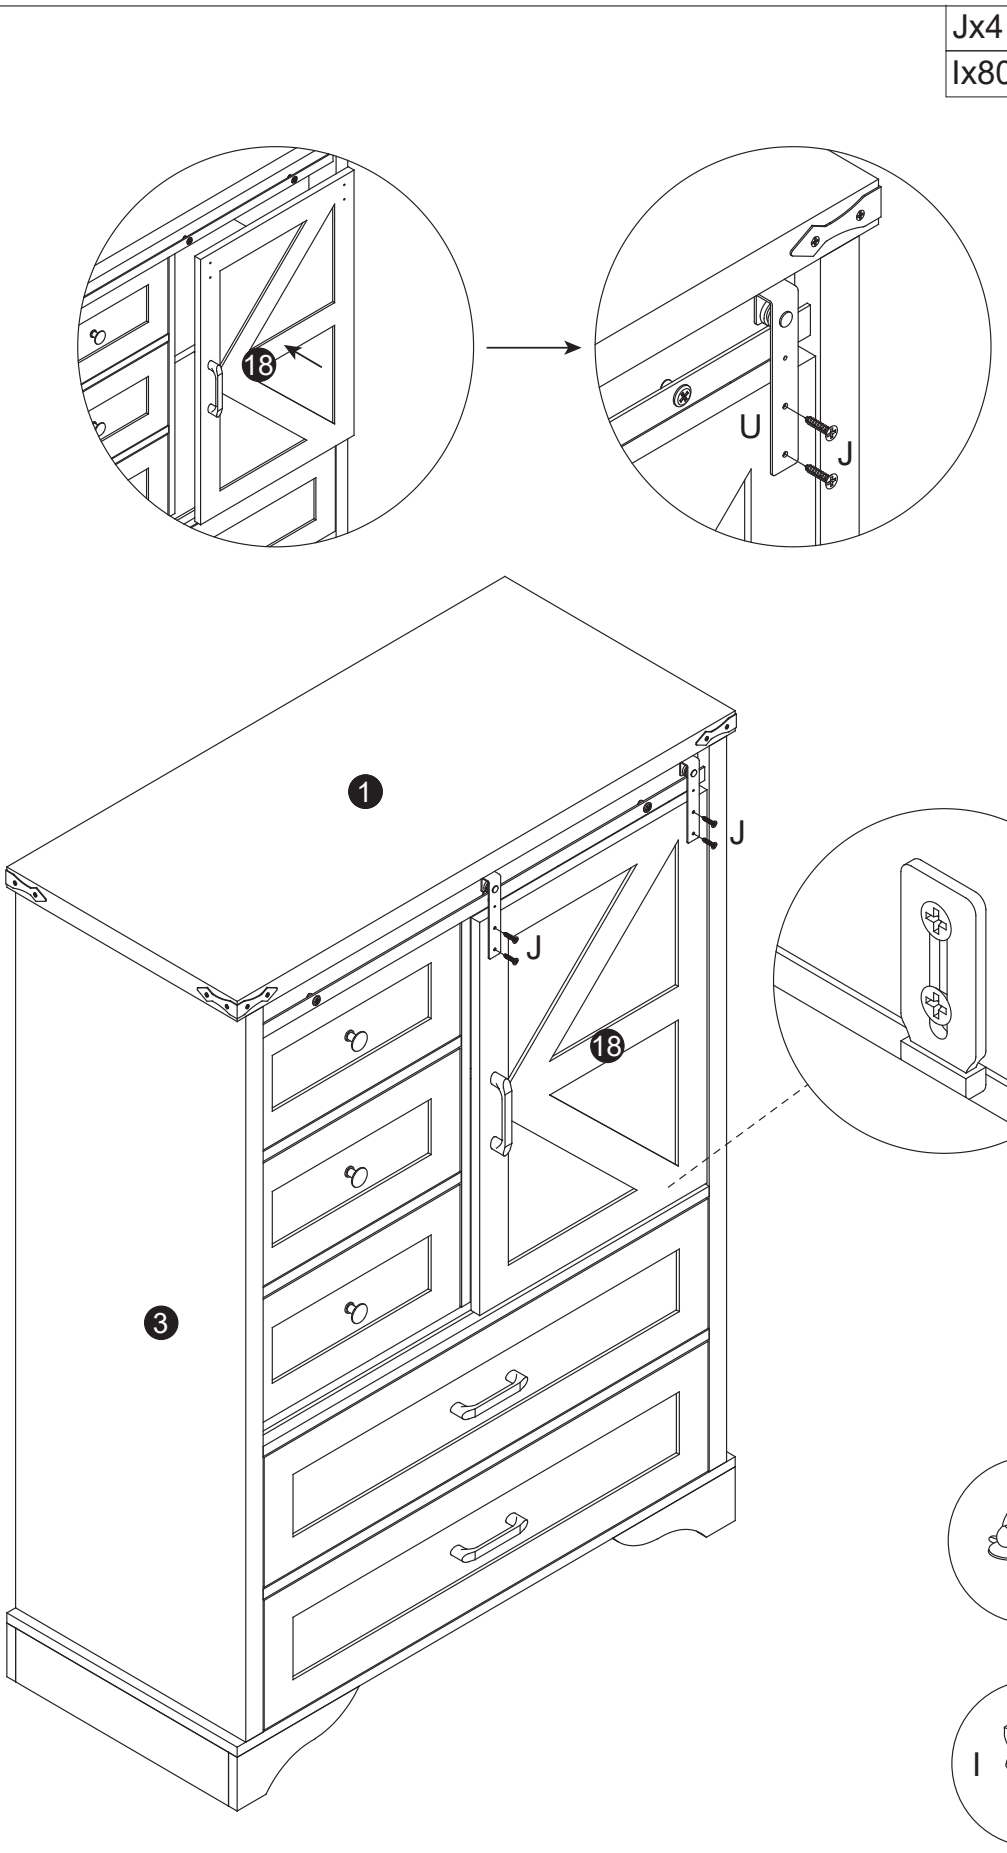Ix80



30

Ox2	
Px4	
Rx2	
Vx2	

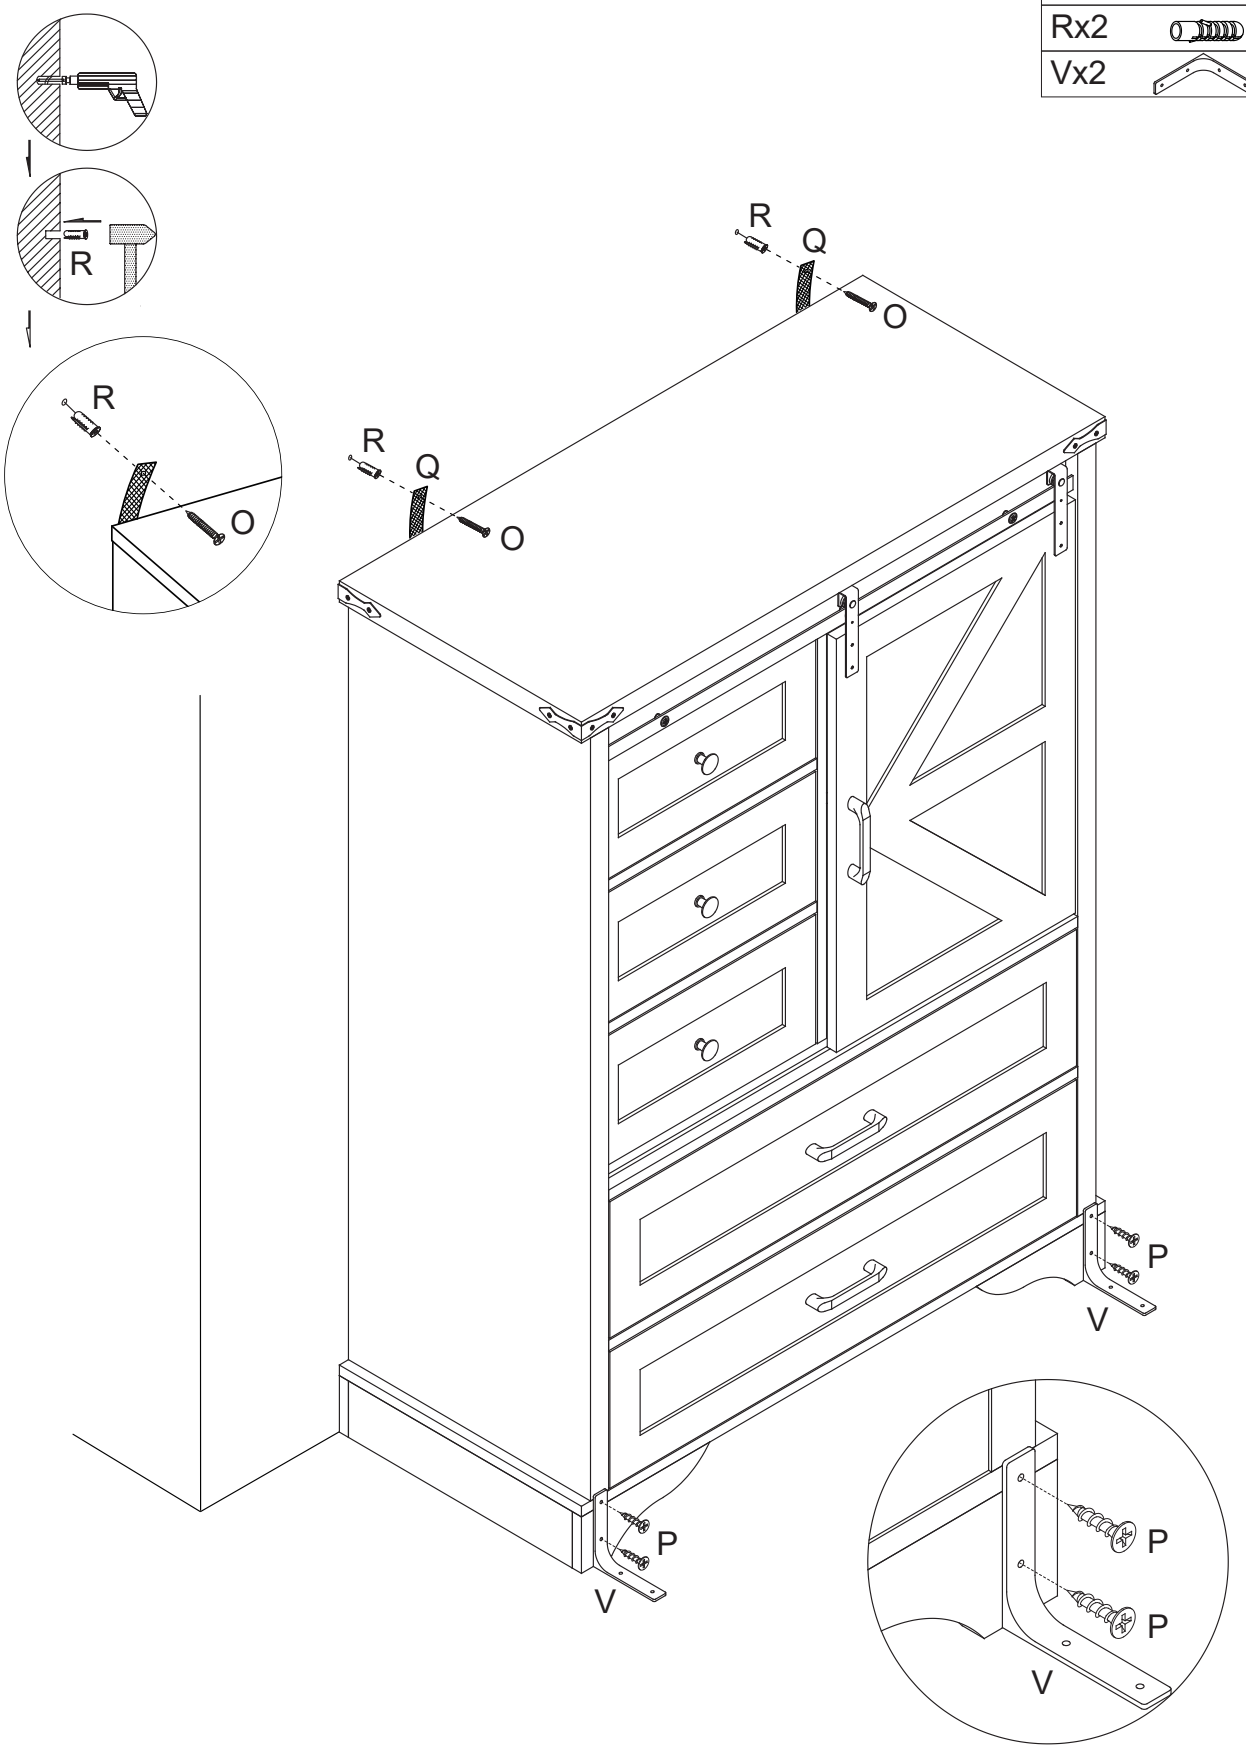

AFTER-SALE SERVICE

If you have any suggestions for our products or notice any quality issues, please contact us first. Our after-sales team will respond within 24 hours and will do everything possible to provide you with a satisfactory solution.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna Share how wonderful our smart products make your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We will check and give feedback.

Homefurnitureserviceteam@outlook.com