

TOOLS REQUIRED

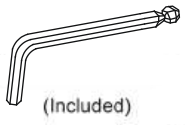

Allen Wrench

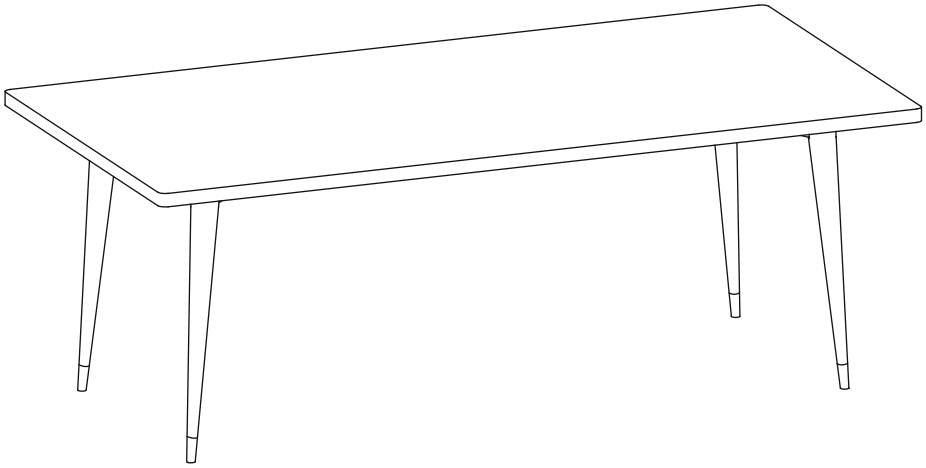

2 - People



ASSEMBLY RATING



EASY ⟶ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

- [ ] **Are you missing anything?**
  Double-check all parts, hardware and accessories listed are all acccounted for.
- [ ] **Should we send any replacements?**
  Are there any irregularities or flaws in the parts? We can send replacements!
- [ ] **Check out our Quick Tips!**
  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
- [ ] **Prep Time!**
  Please review the assembly instructions and all diagrams prior to assembling.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

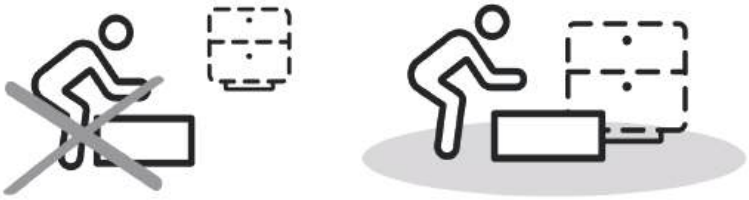

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.

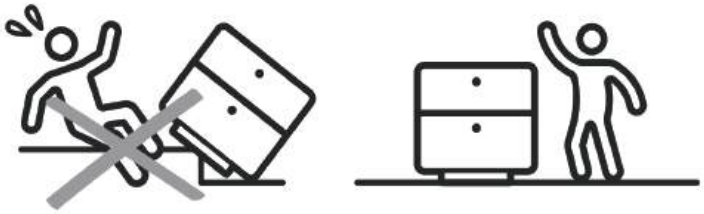

Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

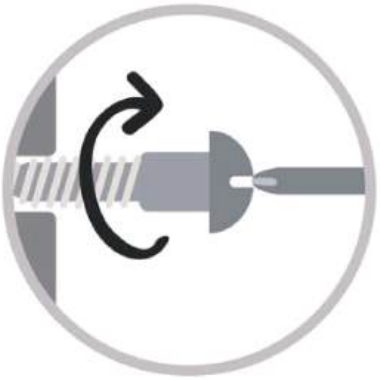

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.




Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.



IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

RECT. DINING TABLE




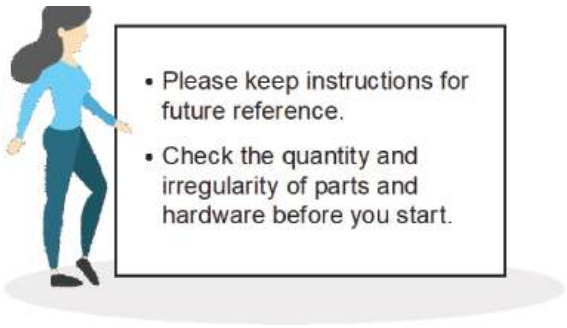


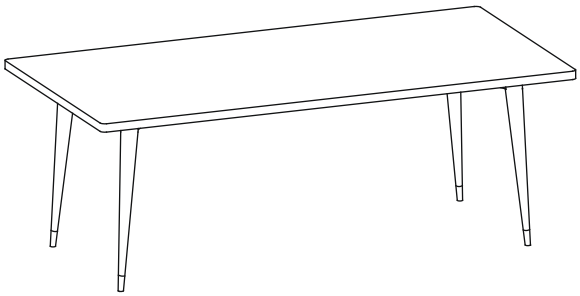

PARTS

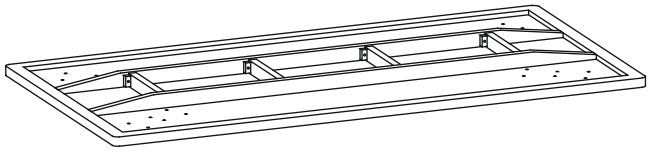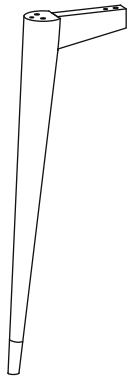1	2	3
1 pc	4 pcs	4 pcs
		
TABLE TOP	LEG SUPPORT	LEG


HARDWARE

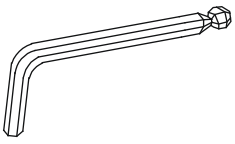
A	B	C	D	E
28 pcs	28 pcs	28 pcs	16 pcs	1 pc
				
JCBC BOLT M6 X 35MM (BK)	LOCK WASHER M6 (BK)	FLAT WASHER M6 (BK)	PVC DOWEL M8 X 30MM	ALLEN WRENCH M4

ASSEMBLY INSTRUCTIONS

1

Part ① x 1pc
Part ③ x 4pcs
Hardware Ⓓ x 16pcs

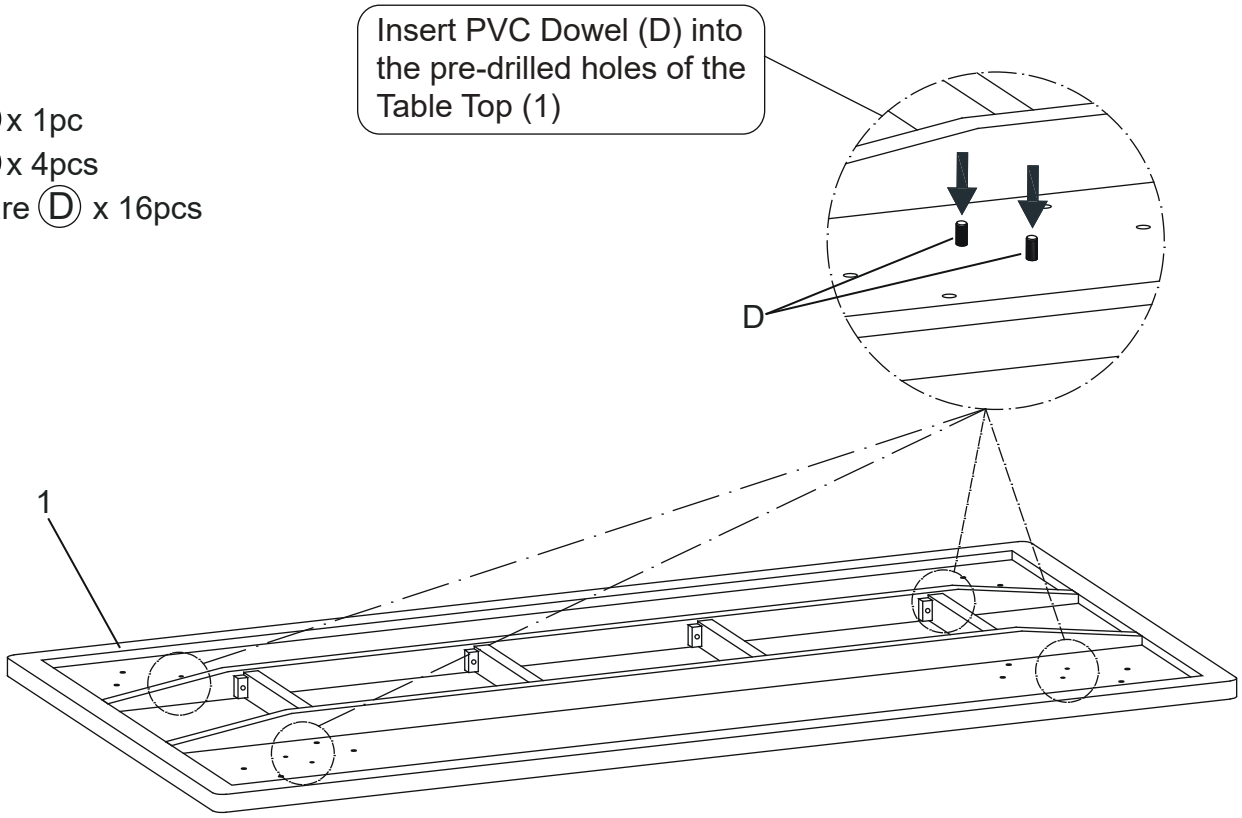


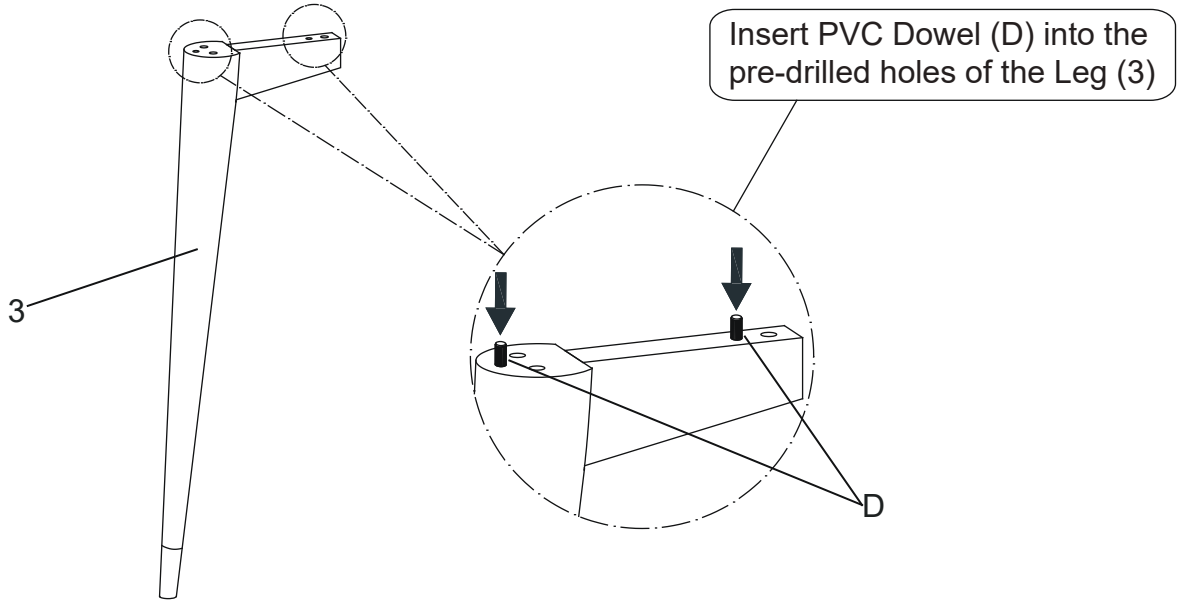

ASSEMBLY INSTRUCTIONS

2


Part (2) x 4pcs
Part (3) x 4pcs
Hardware (A) x 12pcs
Hardware (B) x 12pcs
Hardware (C) x 12pcs
Hardware (E) x 1pc

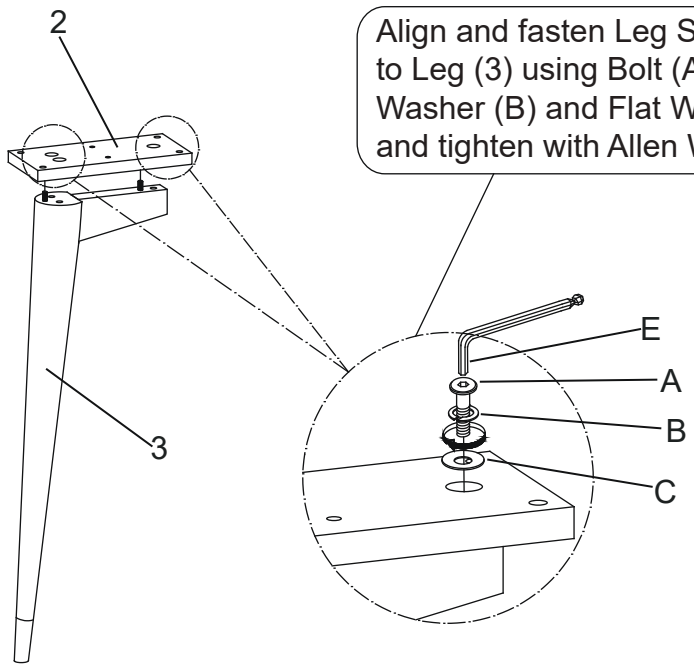

Align and fasten Leg Support (2) to Leg (3) using Bolt (A), Lock Washer (B) and Flat Washer (C) and tighten with Allen Wrench (E)

3


Part (1) x 1pc
Part (2) x 4pcs
Part (3) x 4pcs
Hardware (A) x 16pcs
Hardware (B) x 16pcs
Hardware (C) x 16pcs
Hardware (E) x 1pc

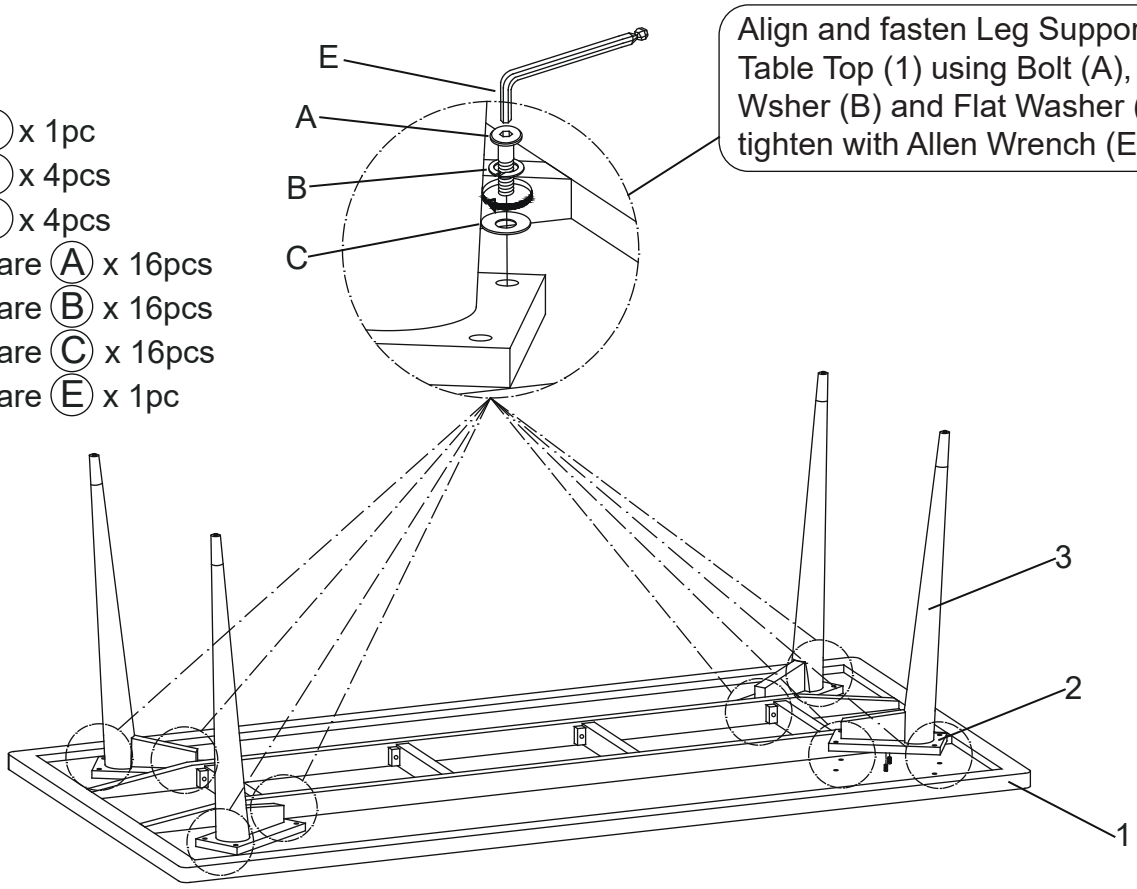

Align and fasten Leg Support (2) to Table Top (1) using Bolt (A), Lock Wsher (B) and Flat Washer (C) and tighten with Allen Wrench (E)

ASSEMBLY INSTRUCTIONS

4

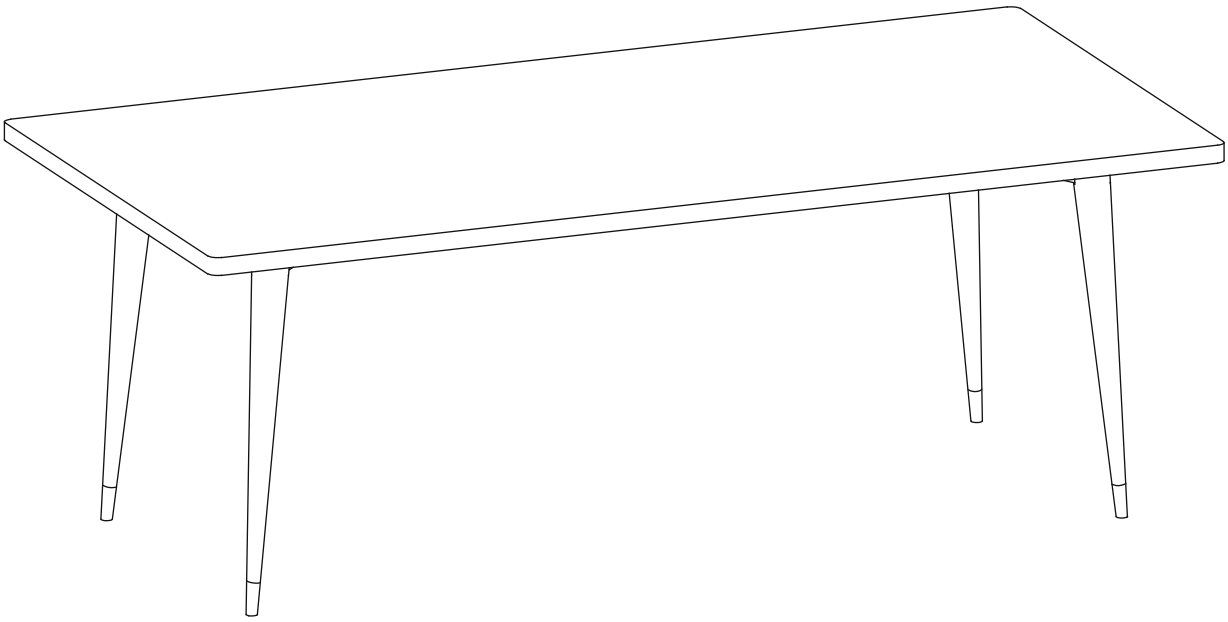

ASSEMBLY COMPLETED

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.


Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.


This product is intended for RESIDENTIAL USE ONLY and not for commercial use.

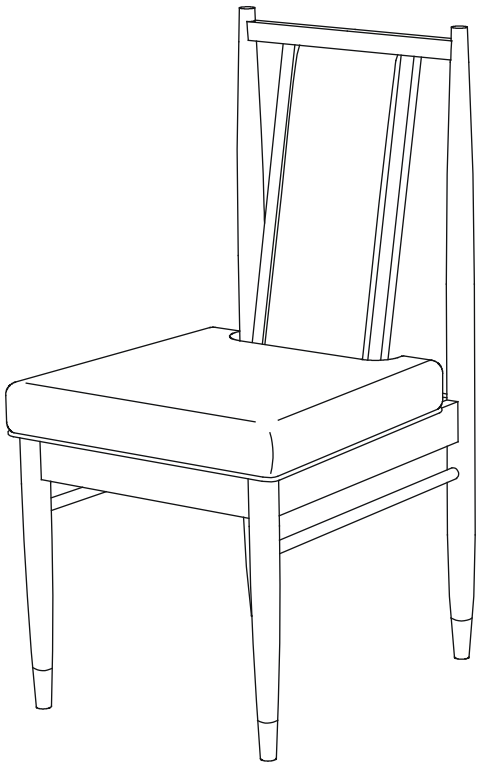

TOOLS REQUIRED



Screwdriver
(Not included)



Allen Wrench



2 - People

ASSEMBLY RATING



EASY ——→ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

- [ ] **Are you missing anything?**

  Double-check all parts, hardware and accessories listed are all acccounted for.

- [ ] **Should we send any replacements?**

  Are there any irregularities or flaws in the parts? We can send replacements!

- [ ] **Check out our Quick Tips!**

  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

- [ ] **Prep Time!**

  Please review the assembly instructions and all diagrams prior to assembling.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

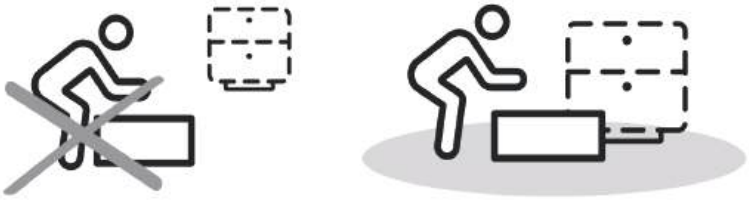

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.

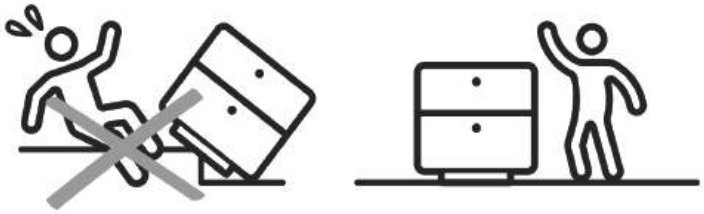

Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

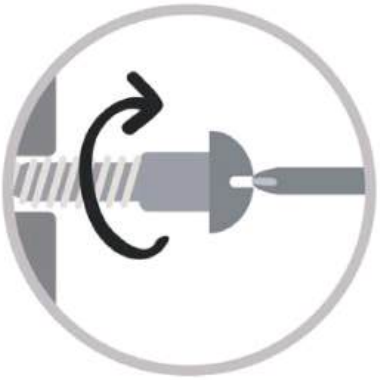

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.




Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


DINING CHAIR

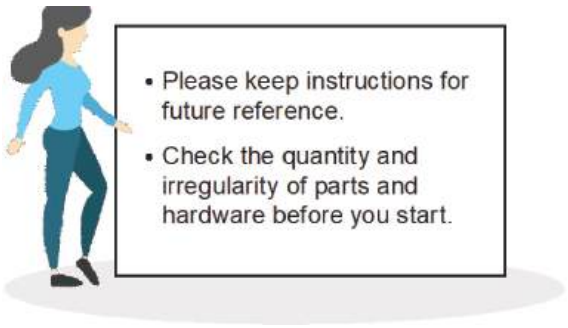

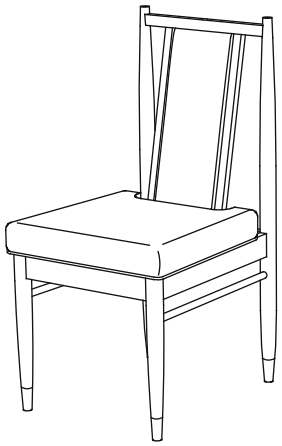


PARTS

(1) 1 pc

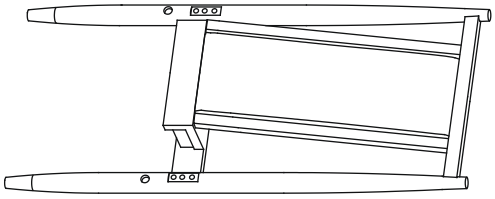


BACK REST

(2) 1 pc

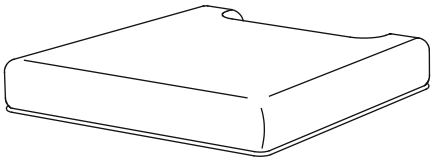


SEATER

(3) 1 pc




LEFT SIDE RAIL

(4) 1 pc




RIGHT SIDE RAIL

(5) 1 pc

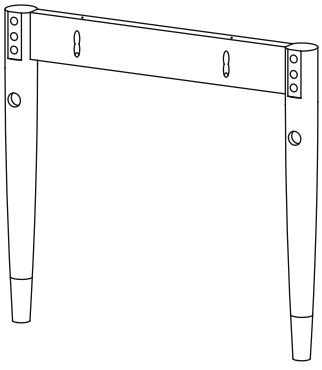

FRONT LEG FRAME


(6) 2 pcs

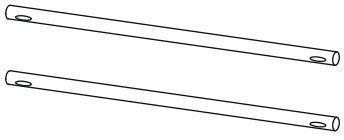

STRETCHER


HARDWARE

A 2 pcs

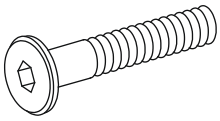


JCBC BOLT
M6 X 60MM (BK)

B 4 pcs

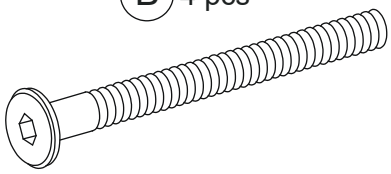

JCBC BOLT
M6 X 120MM (BK)

C 6 pcs

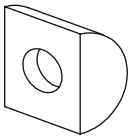

NYLON WASHER
M6

D 4 pcs




CSK SCREW
M4 X 25MM (BK)

E 4 pcs



PANHEAD SCREW
M4 X 38MM (BK)

F 1 pc

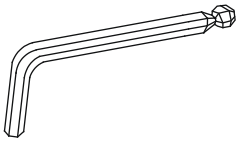


ALLEN WRENCH
M4

ASSEMBLY INSTRUCTIONS

1

Part (3) x 1pc
Part (4) x 1pc
Part (5) x 1pc
Hardware (A) x 2pcs
Hardware (C) x 2pcs
Hardware (F) x 1pc

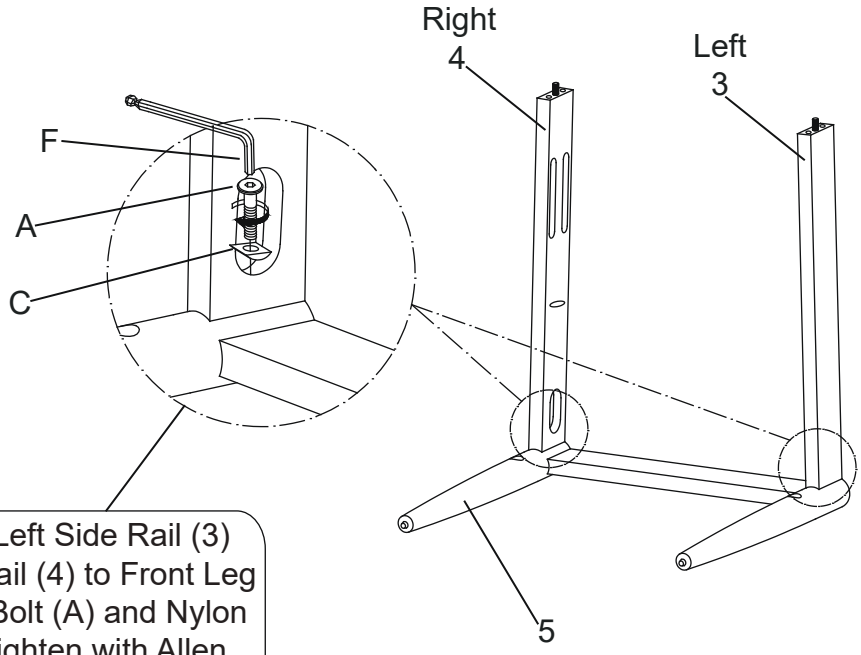


Align and fasten Left Side Rail (3) and Right Side Rail (4) to Front Leg Frame (5) using Bolt (A) and Nylon Washer (C) and tighten with Allen Wrench (F).

* Do not fully tighten the bolt.

2

Part (1) x 1pc
Hardware (B) x 4pcs
Hardware (C) x 4pcs
Hardware (F) x 1pc

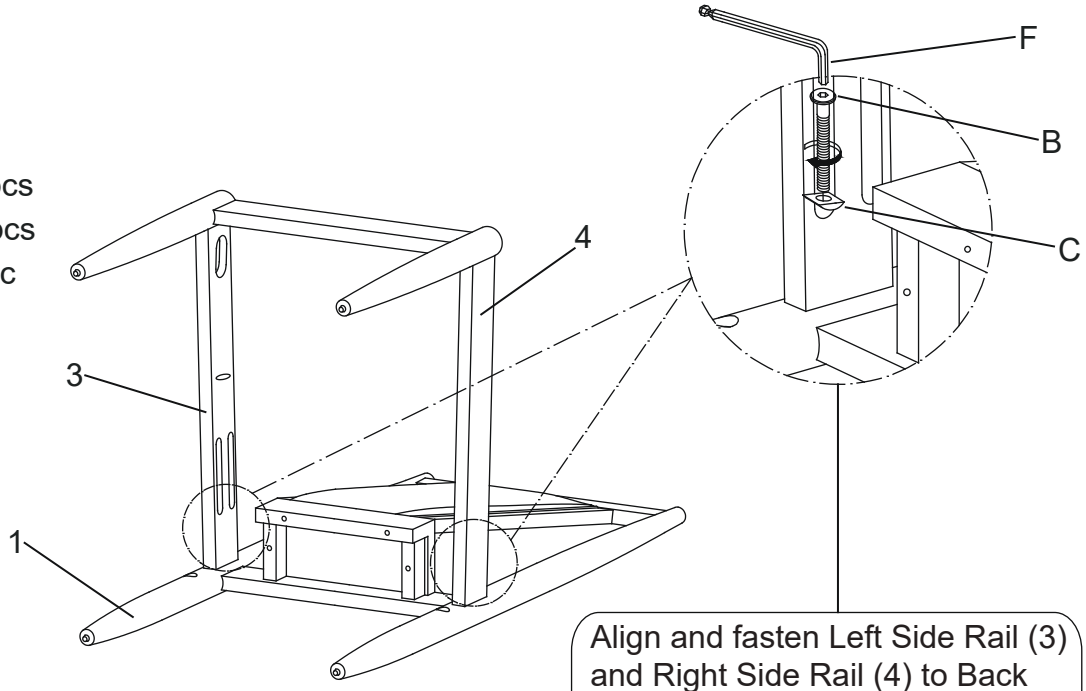


Align and fasten Left Side Rail (3) and Right Side Rail (4) to Back Rest (1) using Bolt (B) and Nylon Washer (C) and tighten with Allen Wrench (F).

* Do not fully tighten the bolt.

ASSEMBLY INSTRUCTIONS

3

Part ⑥ x 2pcs
Hardware Ⓔ x 4pcs

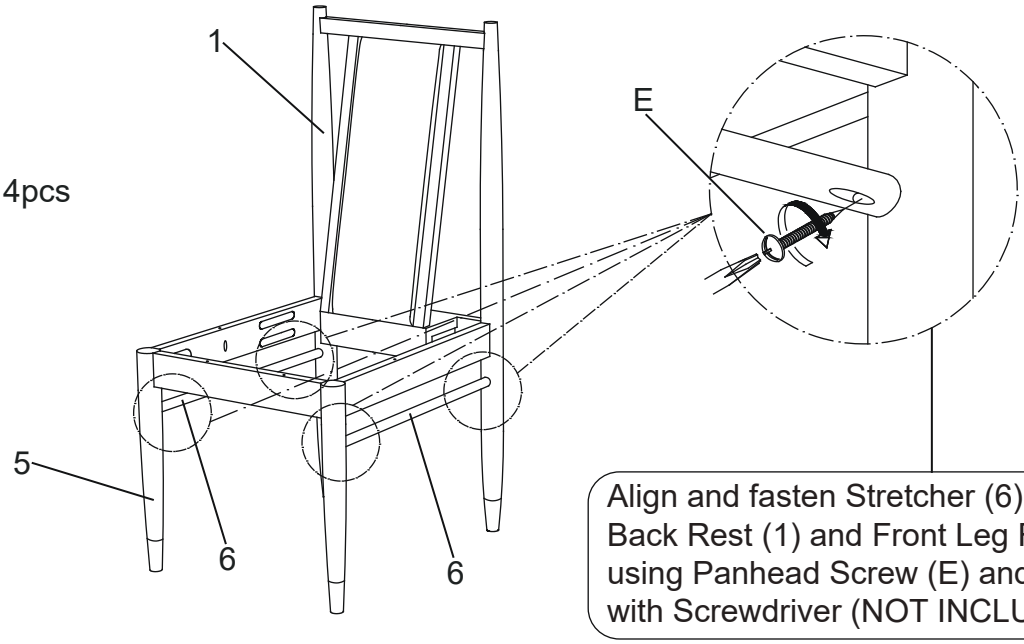


Align and fasten Stretcher (6) to Back Rest (1) and Front Leg Frame (5) using Panhead Screw (E) and tighten with Screwdriver (NOT INCLUDED).

* Fully tighten all the screws and bolts.

4


Part ② x 1pc
Hardware Ⓓ x 4pcs

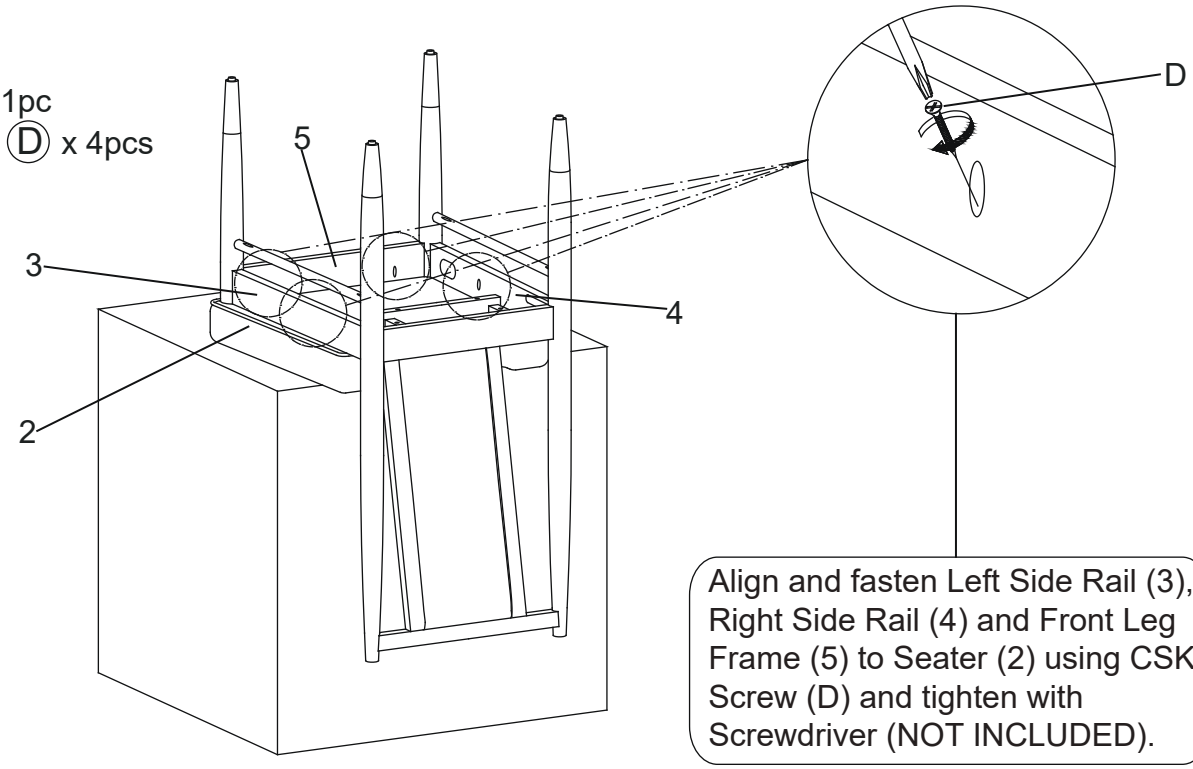

Align and fasten Left Side Rail (3), Right Side Rail (4) and Front Leg Frame (5) to Seater (2) using CSK Screw (D) and tighten with Screwdriver (NOT INCLUDED).

ASSEMBLY INSTRUCTIONS

5

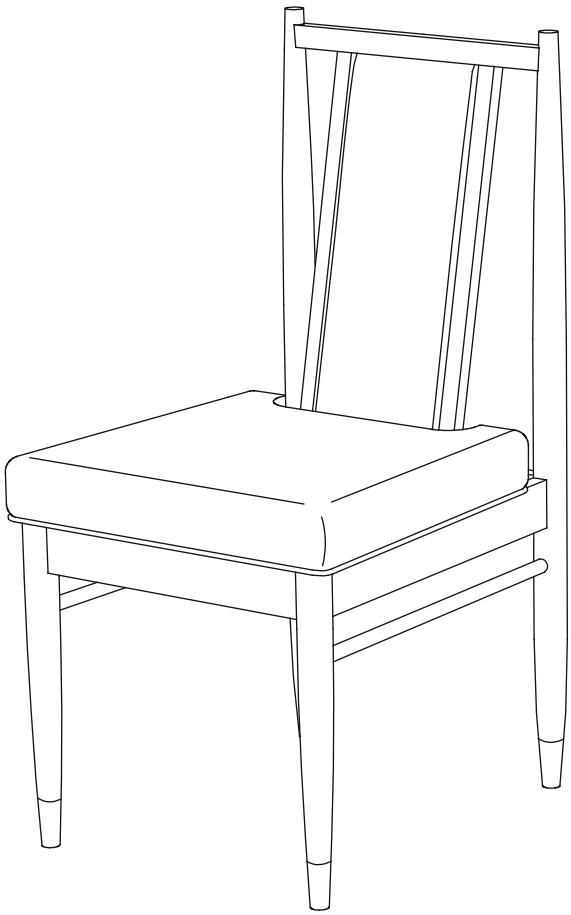

ASSEMBLY COMPLETED

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.