
INSTRUCTION MANUAL

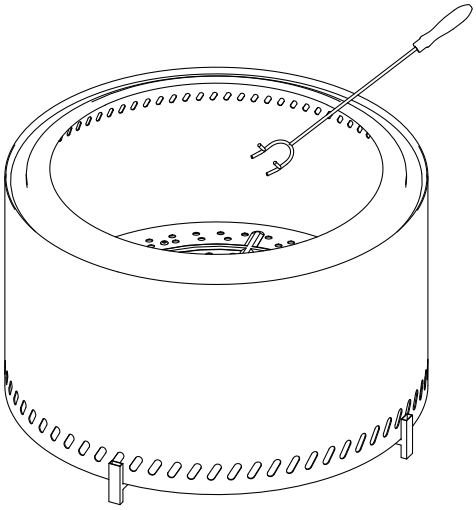

SMOKELESS FIRE PIT

Thank you for purchasing and trusting our products with your home decorating plans. This product is a piece of furniture designed and manufactured for quality and comfort.

We are committed to research, development, and innovation to create the most exquisite and diverse outdoor series.

After unpacking and before every use, check whether the item shows any damage. In addition, check that you have all parts and hardware before assembly. If there is any damage, please do not use it and contact customer service for immediate assistance. If you do not have all the parts on the list, have your dealer contact us and we will send them to you immediately.


This item of furniture is intended for indoor and outdoor use. Please take time to read and follow the instructions below, and use this item as described in this operating manual. We accept no liability for damage caused by improper use.

ASSEMBLY INSTRUCTIONS

Parts List

Part No.	A	B	C	D	E	F
Images						
Qty.	1	1	1	1	1	1


Exploded View

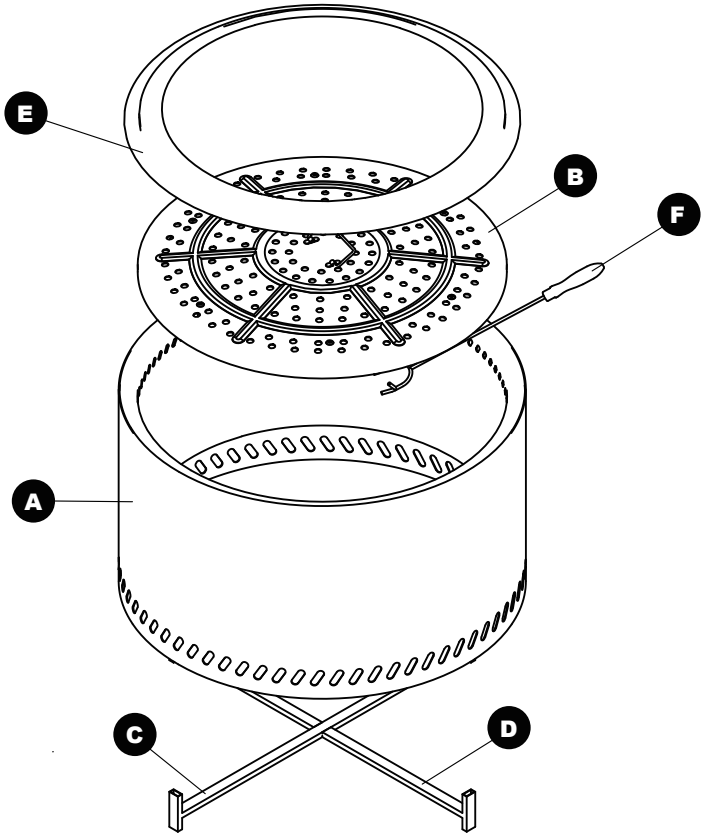


1


CAUTION


Note: Do not tighten screws before final assembly.

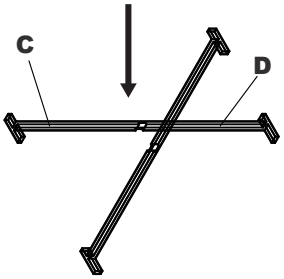

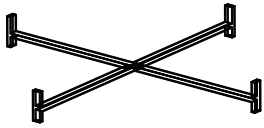



2

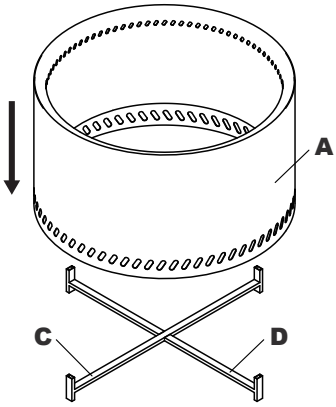

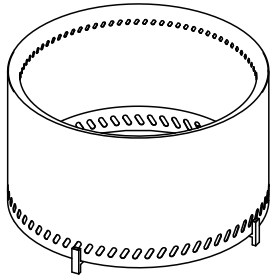



3

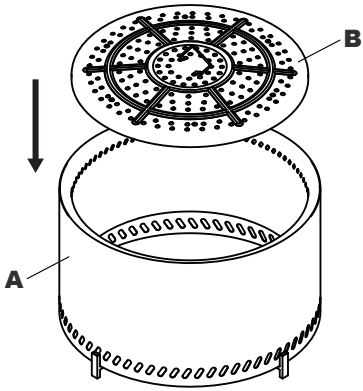

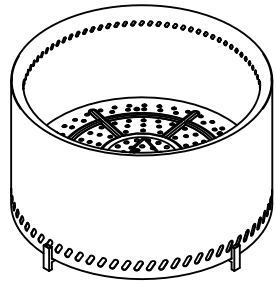


4

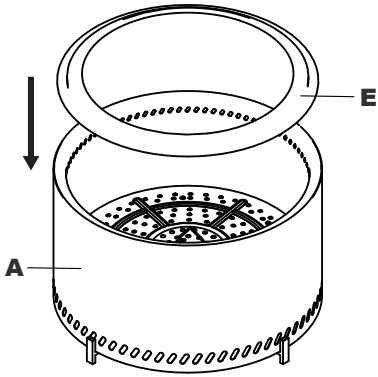

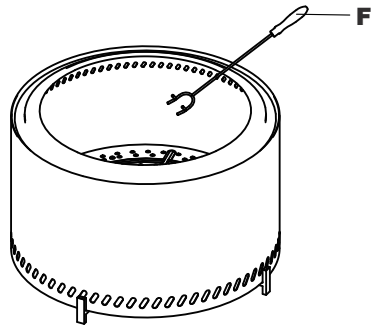

5

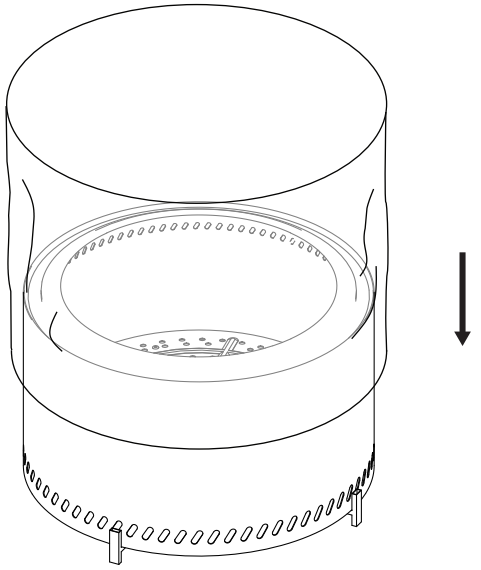

ASSEMBLY COMPLETED

- ✓ Please ensure the furniture is placed on a flat, level surface.
- ✓ If the product wobbles or feels loose, double-check that all bolts and nuts are properly tightened and secured.

CARE AND MAINTENANCE

Follow the instructions for the product's material to ensure it stays in the best shape as long as possible. The information below is a general guideline. Don't hesitate to get in touch with us to learn more.

• Only rinse it thoroughly with clean water to wash away dirt and grime. Never use abrasive cleansers on the furniture since they can attack the surface and leave behind scratch marks.

• For stubborn grime and stains, use a soft sponge and mild soapy water. Then dry it with a cloth or paper towel.

• Check the stability of the screws, nuts, and nut caps before each use. Then, tighten them up after one to two months' use whenever required.

• Avoid improper use, and be careful not to scratch or damage the surface with sharp objects.

• When you move your furniture, lift it rather than pulling or pushing it to avoid damaging the floor, legs, and mounting.