


double door five-layer rotating bookcase installation diagram-p1

Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										

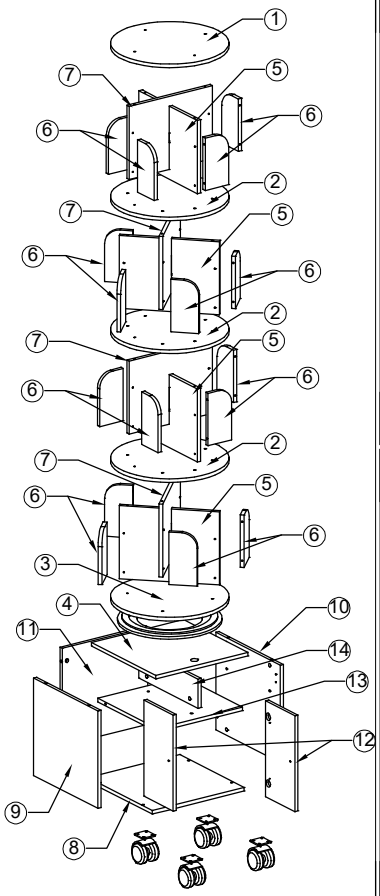


Step1:

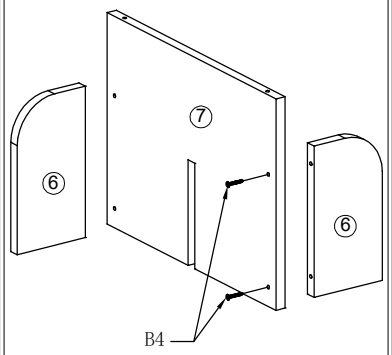


Install hardware: B4

Step2:

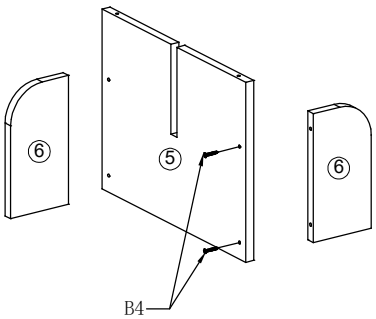


Install hardware: B4


Step3:

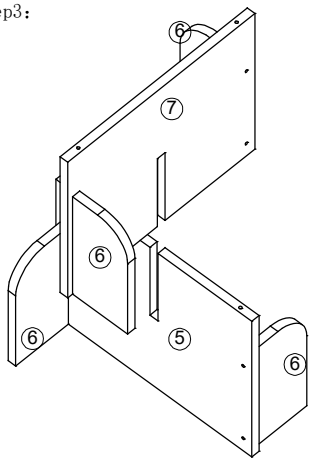

Step4:

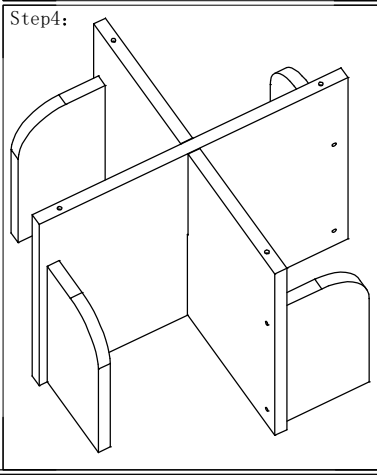


Step5:

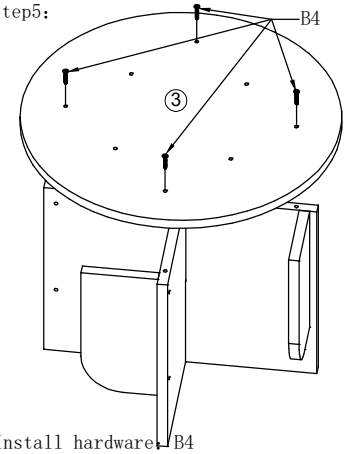


Install hardware: B4

Step6:

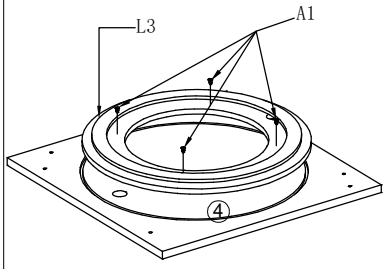


Install hardware: A1+L3

double door five-layer rotating bookcase installation diagram-p2

Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										


Step7:

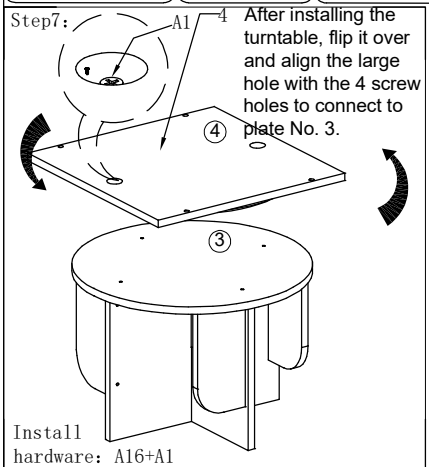

After installing the turntable, flip it over and align the large hole with the 4 screw holes to connect to plate No. 3.


Install hardware: A16+A1

Step8:

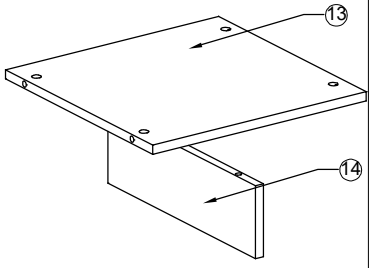


Install hardware: B1

Step9:

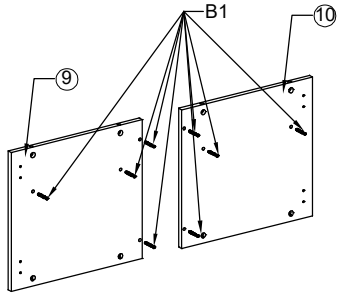


Install hardware: B1

Step10:

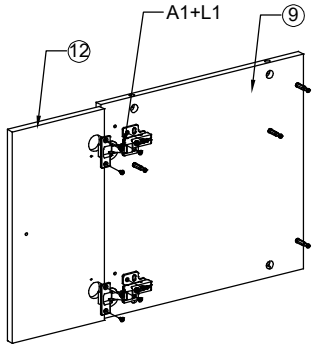


Install hardware: A1+L1

Step11:

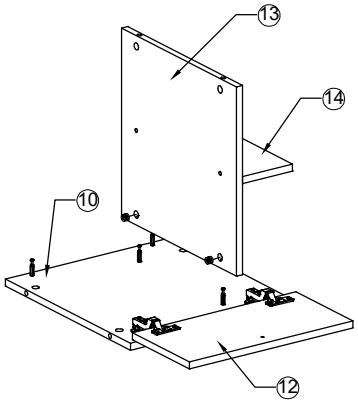


Install hardware: B1

Step12:

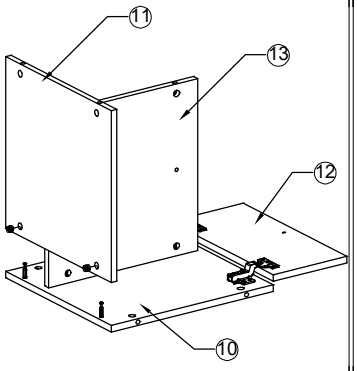


Install hardware: B1

Step13:

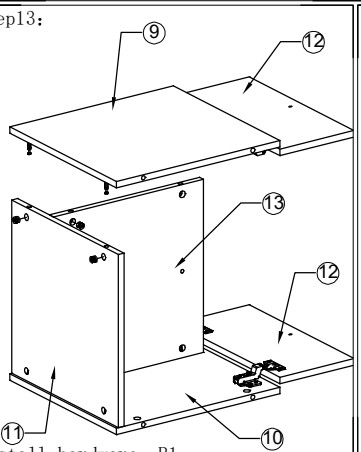


Install hardware: B1

Step14:

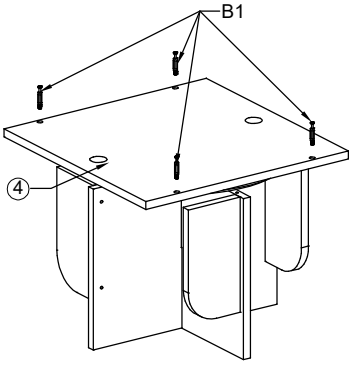


Install hardware: B1

double door five-layer rotating bookcase installation diagram-p3


Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										

Step15:

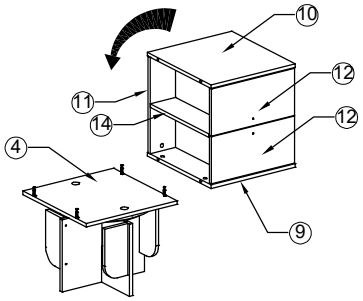


Install hardware: B1

Step16:

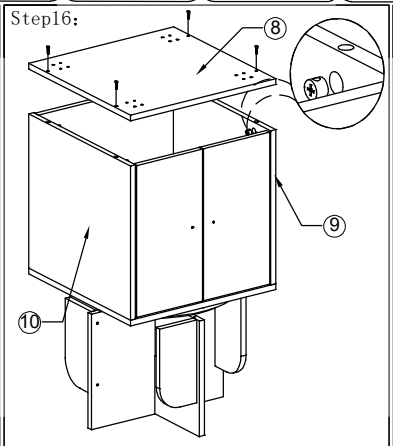


Install hardware: B2

Step17:

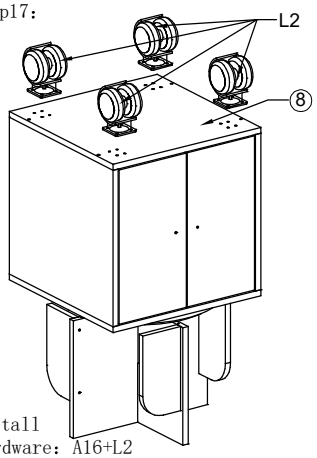


Install hardware: A16+L2

Step18:

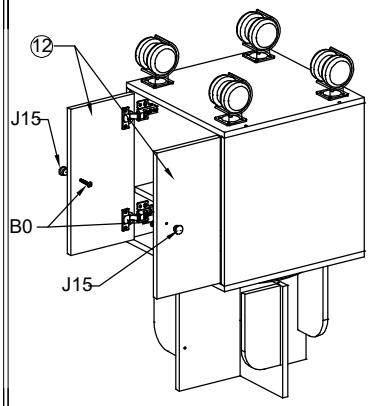

Install hardware: J15+B0

Step19:

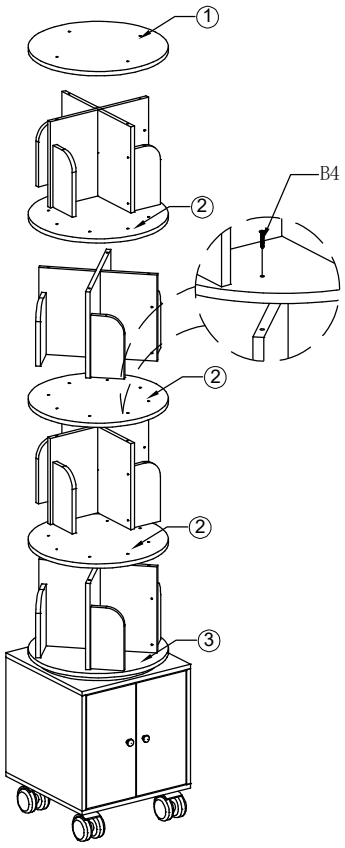

Install hardware: B4

