Soft Ice Maker

OPERATION INSTRUCTIONS



Please read all instructions before use
For your safety and continued enjoyment of this product,
Please read the instruction manual before use

⚠ Important reminder:


After receiving the machine, let it stand for 24 hours before using it again

Safety precautions

- Only use grounded triangular sockets
- Ensure that there is sufficient clearance around the machine (12inch)
- Keep hands and items away from the ice outlet
- Do not use sharp knives to open packaging
- Indoor use only
- Ensure that the machine is not in close proximity to high temperatures/sunlight
- Suggest using distilled or purified water
- Suggest at least 2 people to operate when moving the machine
- Not recommended to use extension cords

Safety Tips

- Under no circumstances should the third (ground) pin onthepower cord be changed or removed.
  For personal safety, this product must be properly grounded.
- Do not exceed the rated value of the power socket. It is suggested that you connect the ice maker to your own circuit.
  Only 110 - 120V, 60Hz standard power supply can be used, and it should be properly grounded according to national electrical specifications and local regulations and rules.
- Due to potential safety hazards under certain conditions, we strongly recommend not using adapters or extension cords.
- Under no circumstances should the third grounding pin on the power cord be disconnected or removed.



- Do not unplug electrical appliances by pulling on the power cord. To properly disconnect the power, hold the plug tightly and unplug it directly from the wall socket.
- To prevent electric shock, do not immerse electrical plugs or wires in water or other liquids.
- Before using this product, it is necessary to install and position it correctly according to the installation instructions. This product is for indoor use only.
- Please do not use outdoors. Do not store or use flammable vapors or liquids near this product.
- Component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

⚠ Please note that! Some types of cabinet lights may be hot enough to damage the appearance of the top of your machine.

- This machine is not a toy. When using this machine near children, caution and supervision should be exercised.
- Do not allow children to operate this device.
- When operating, keep your hands clean to maintain hygiene.
- It is recommended to use purified or distilled water for ice making, and avoid using other unhygienic and unsafe liquids.
- Place the power cord in an area where it will not be pulled by children or cause tripping hazards.
- Place the power cord away from hot surfaces.
- Do not operate any damaged components, including wires or plugs.
- Before cleaning and when not in use, please unplug the product plug.
- Do not immerse any part of the product in water.
- Do not insert or remove the power plug of this product with wet hands.
- Do not attempt to disassemble, repair, modify or replace any part of the product.
- This product is intended for the uses described in this user manual.
- Do not use any accessories not recommended by the manufacturer.
- The ice maker is to be installed in accordance with the Safety Standard for Refrigeration Systems, ASHRAE 15.
- The ice maker shall not be installed in corridors or hallways of public buildings.

⚠ Warning

To reduce the risk of injury while using the machine, please follow basic safety precautions:

- Do not remove any safety,warning,orproductinformation labels from the ice maker.
- Lifting hazard: It is recommended that two people move and install the ice maker to prevent injury.
- Before performing any cleaning or maintenance, please unplug the electrical appliances.
- Do not use flammable liquids or solvent based cleaning agents to clean equipment.
- Do not use abrasive cleaners on internal or external surfaces as they may damage or scratch the equipment.
- When disposing of refrigeration equipment, special treatment is required. Before disposing of this product, please check the latest relevant disposal methods.
- Do notoperate this devicewith wethandsorstanding on wet surfaces or in accumulated water.
- When cleaning the ice basket, please remove it from the ice maker and clean the inside and outside with a soft cloth.
- Do not use mechanical equipment to thaw the ice maker.
- Do not puncture the refrigerant pipe.

Danger or Warning: This device belongs to household appliances and is not suitable for children or weak individuals to use without supervision. Young children should be supervised to ensure they do not play with appliances.

Attention: The ice maker should be installed in accordance with relevant refrigeration system safety standards and should not be installed in corridors or hallways of public buildings.


⚠ Warning



There is a cutting risk inside the machine, please do not reach into the ice outlet of the running equipment

Instructions for ice maker related buttons and accessories

control panel

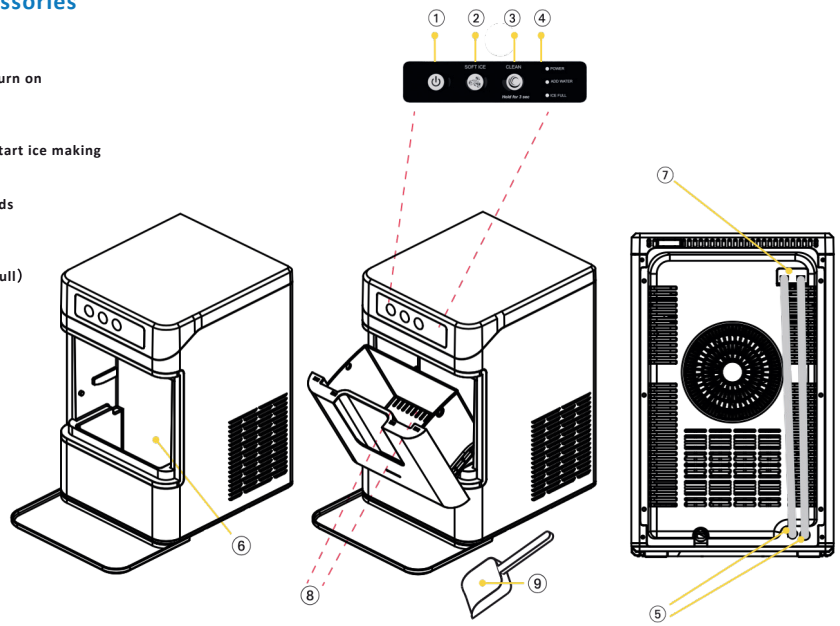

1. Power button:
   Press the button once to turn on the device
2. Ice making button:
   Press the button once to start ice making
3. Cleaning button:
   Press and hold for 3 seconds for automatic cleaning
4. Indicator light
   (Power - Add Water - Ice Full)
5. Drainage pipe
   (Located on the back of the machine)
6. Water storage tank
   (Located inside the machine)
7. Drain plug
8. Detachable ice basket
9. Ice shevel

It is recommended to clean the machine before using it for the first time

The first use — The ice maker must stand upright for 24 hours before its first use to stabilize internal components.

Step 1 Add an appropriate amount of white vinegar and distilled water solution (1 cup of white vinegar+1 cup of distilled water) to the water equipment.



Step 2 Press and hold the automatic cleaning button for 3 seconds to turn on automatic cleaning. After 3 minutes, the automatic cleaning is completed and the LED light goes off.

Step 3 Unplug the power plug of the device and locate the end of the drain pipe at the back of the device.

Step 4 After the drainage is completed, plug the drain plug back and hang the drain pipe.

Step 5 Plug in the power and repeat steps 2 - 4 two to three times with clean water. During the drainage process after each automatic cleaning, always unplug the power plug and disconnect the power to avoid electric shock.

Warm reminder: If you use the ice maker every day, we recommend that you clean the ice maker at least once a week. It is normal for the ice maker to make some small noise during ice making and automatic cleaning.

Operating instructions

Step 1 After cleaning and rinsing, place the device on a stable countertop or flat surface, leaving at least 12 inches of space around the device, including the left, right, and back sides, to ensure proper ventilation. Connect the power plug to the power socket (110-120V~60hz)

Step 2 Add an appropriate amount of clean water to the storage tank, filling it to the optimal level in the ice basket. Do not fill the water level above the bottom of the ice basket. Please do not use any liquids other than water. If using other than water, the warranty of the machine will be invalidated. Due to the varying levels of cleanliness of tap water in different regions, it is recommended to use purified or distilled water for ice making.

Step 3 Press the power button to start the ice maker.

Step 4 Press the 'SOFT ICE' button to start ice making. Ice cubes will be produced within 10 minutes and continue until the bucket is full or the machine indicates a shortage of water.
It produces 1.3 lbs of ice within the first hour. When the ice making capacity reaches 1.75 lbs, the machine will detect a full ice basket and pause ice making.


Ice making pause sensor: If the ice basket is full and the ice has not been removed for use, or if there is no activity after scooping ice from the ice bucket for more than 1 minute, the ice maker will stop making ice.
Restore ice making: After taking the ice, push the ice basket back and the machine will automatically make ice.

Water Level Indicator: When there is insufficient water, the water shortage indicator light will start flashing. After replenishing water, press the ice making button once, and the ice maker will resume making ice.

Ice Ful Indicator Light: When the ice basket is full of ice, the ice-making button flashes for 60 seconds, then the ice full indicator light comes on and the ice maker stops making ice. To restart the ice-making process, push the ice basket back and the machine will automatically make ice.

Flushing device

Ice maker drainage

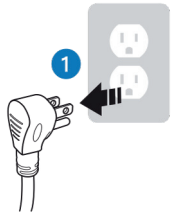


Step 1 Before flushing and draining, unplug the power plug

Step 2 Place the end of the drainage pipe(hanging above the back of the device) on the sink or a bucket.

Step 3 Open the drain plug at the end of the drainage pipe and drain the water.

Step 4 Completely drain the water. Then, reinstall the drain plug and check that it is securely plugged into the drain outlet. Hang the drain pipe back in place for future use.

Step 5 After completion, plug the power plug back in and add fresh (distilled) water for ice making.

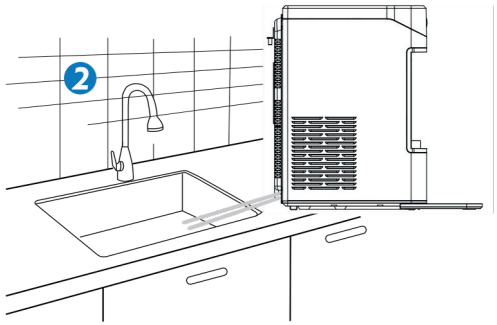

Care and Cleaning

When usingand maintainingthe device for the first time, please unplug it and follow the following cleaning instructions.

1. Wipe the outside of the ice maker and the inside of the ice bucket with a soft damp cloth, and dry to avoid any deposits. Do not use cleaning solvents or abrasive cleaners. Do not use soap in the reservoir.
2. Prepare disinfectant solution with 1 cup of white vinegar and 1 cup of distilled or purified water. Increase the dosage as needed to achieve a filling level between the minimum and maximum values. Always use a 1:1 ratio of vinegar and water. Do not let the solution stay in the ice maker for more than 12 hours. Only recommended for use during cleaning cycles.
3. When cleaning, carefully pour the disinfectant from step 2 into the water reservoir and add more disinfectant to the reservoir until it is just below the maximum liquid level. Do not overfill. Do not exceed the maximum filling height.
4. Plug in the power again and hold down the cleaning button for 3 seconds.
5. The automatic cleaning will be completed in 3 minutes; the cleaning mode will automatically stop, and the display button will no longer light up.
6. Place the end of the drainage pipe (hanging at the back of the device) on the sink or in a bucket.
7. When preparing to pour water into the sink or bucket, remove the drain plug from the end of the drain pipe.
8. Rinse with clean water 3 - 4 times, unplug and drain after each rinse.
9. After completion, plug the device back in and add clean water for ice making.
10. If the ice maker will not be used for a while, drain the water and let the interior dry before storing.

Note:
The ice making button cannot be used in cleaning mode!

The cleaning button cannot be used in ice making mode!

In order to allow you to taste fresh and clean ice every day

Suggestion:
- Drain and change water every day
- Run automatic cleaning once a week
- Clean the machine with a 1:1 solution of vinegar/water every 3-4 weeks
- Do not use tap water or any other type of liquid