



DESIGNART

CANVAS COLLECTION

Thanks!

For making DesignArt part of your new home decor.

Here's how to hang and care for your new canvas wall art.

HANGING INSTRUCTIONS

Follow these steps to hang your canvas wall art.

1. Using a screwdriver, mount the brackets onto the back of the wood frame. For multi-panel artwork insert one bracket per panel, teeth side down. For single-panel canvas insert 2 brackets.
2. Using a flat-head hammer, insert the panel pin with rubber attachment in the desired space on the wall. Tap the panel pin until it is securely in the wall.
3. Using a measuring tape, measure the distance from your first panel pin to the desired placement of the second. Mark the wall and insert the second pin. Repeat per number of panels for even spacing.

You
will
need :



Screw Driver



Measuring Tape



Tip: pre-mark wall pin spacing for cleaner installation.

CONTACT US

We're here to help with any questions, damages, or returns.

EMAIL

cs@designartusa.com

PHONE

1-888-604-2215

HOURS

Mon-Fri 10AM-4PM EST

Care & Framed Hanging.

CANVAS CARE GUIDE


How to fix common issues with your canvas.

Fixing Creases

Rub a piece of ice directly onto the crease on the back of the canvas for 30–60 seconds. Let it dry for 15–20 minutes; the crease should disappear. Avoid oversaturating, or the canvas may need extra drying time.



Fixing a Warped Frame

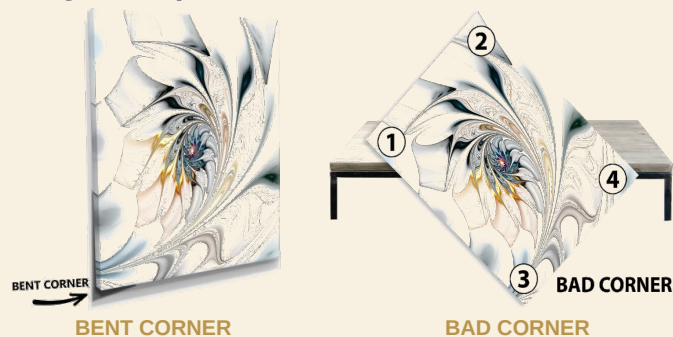

Place the art along a table's edge. Place hands on the corner that was coming away from the wall and its opposite corner. Gently push down on the corners to stretch the canvas diagonal. Hang and test; repeat if needed.

Warranty & Disclaimer: While DesignArt Inc inspects every piece prior to packaging and uses the highest-grade materials, household temperatures, humidity, and other factors may affect the hold over time. DesignArt Inc will replace any defective item; use of this artwork is at your sole risk and DesignArt Inc disclaims all warranties regarding property damage, bodily injury, or other damages.

FRAMED WALL ART

Hanging instructions for framed canvas.



1. Using a screwdriver, mount the brackets onto the back of the wooden frame. For multi-panel artwork, insert one bracket per panel; for single-panel canvas, 2 brackets depending on size.
2. Using a measuring tape, measure the distance from your first bracket to the desired placement of the second. Mark the wall and insert the second hook. Repeat for even spacing.



DESIGNART

COLLECTION TOILES

Merci !

D'avoir choisi DesignArt pour votre nouvelle décoration intérieure.

Voici comment accrocher et entretenir votre nouvelle toile murale.

INSTRUCTIONS D'ACCROCHAGE

Suivez ces étapes pour accrocher votre toile murale.

1. À l'aide d'un tournevis, fixez les supports à l'arrière du cadre en bois. Pour les œuvres multi-panneaux, insérez un support par panneau, dents vers le bas. Pour une toile à panneau unique, insérez 2 supports.
2. À l'aide d'un marteau à tête plate, insérez la pointe à embout caoutchouc à l'endroit souhaité sur le mur. Tapez sur la pointe jusqu'à ce qu'elle soit bien fixée.
3. À l'aide d'un mètre ruban, mesurez la distance entre votre première pointe et l'emplacement souhaité de la seconde. Marquez le mur et insérez la deuxième pointe. Répétez pour un espacement uniforme.

Vous
aurez
besoin :



Tournevis



Mètre ruban



Astuce : pré-marquez l'espacement pour une installation plus nette.

NOUS CONTACTER

Nous sommes là pour répondre à vos questions, dommages ou retours.

COURRIEL

cs@designartusa.com

TÉLÉPHONE

1-888-604-2215

HEURES

Lun.-Ven. 10h-16h HNE


Entretien et accrochage encadré.

GUIDE D'ENTRETIEN

Comment résoudre les problèmes courants avec votre toile.

Réparer les plis


Frottez un glaçon directement sur le pli à l'arrière de la toile pendant 30–60 secondes. Laissez sécher pendant 15–20 minutes ; le pli devrait disparaître. Évitez de trop humidifier, sinon plus de séchage est requis.

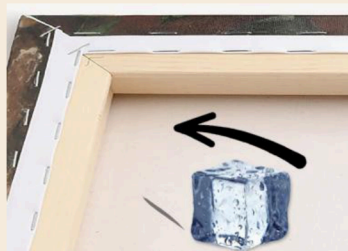


Réparer un cadre déformé



COIN PLIÉ

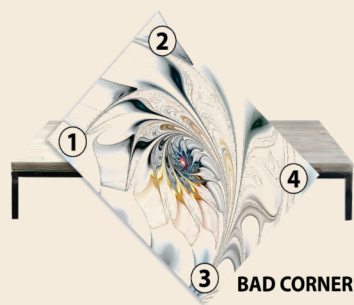

COIN ABÎMÉ

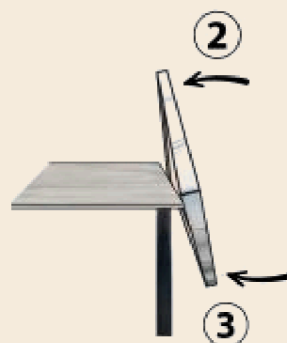

PLIER VERS L'ARRIÈRE

Placez l'œuvre le long du bord d'une table. Posez les mains sur le coin qui se détachait du mur et sur le coin opposé. Poussez doucement les coins pour étirer la diagonale de la toile. Accrochez et testez ; répétez si nécessaire.

Garantie et avis : Bien que DesignArt Inc inspecte chaque pièce avant l'emballage et utilise des matériaux de la plus haute qualité, les températures domestiques, l'humidité et d'autres facteurs peuvent affecter la tenue au fil du temps. DesignArt Inc remplacera tout article défectueux ; l'utilisation de cette œuvre est à vos risques et DesignArt Inc décline toute garantie concernant les dommages matériels, corporels ou autres.

ŒUVRE ENCADRÉE

Instructions d'accrochage pour toile encadrée.



1. À l'aide d'un tournevis, fixez les supports à l'arrière du cadre en bois. Pour les œuvres multi-panneaux, insérez un support par panneau ; pour une toile à panneau unique, 2 supports selon la taille.
2. À l'aide d'un mètre ruban, mesurez la distance entre le premier support et l'emplacement souhaité du second. Marquez le mur et insérez le second crochet. Répétez pour un espacement uniforme.