


Owner Manual

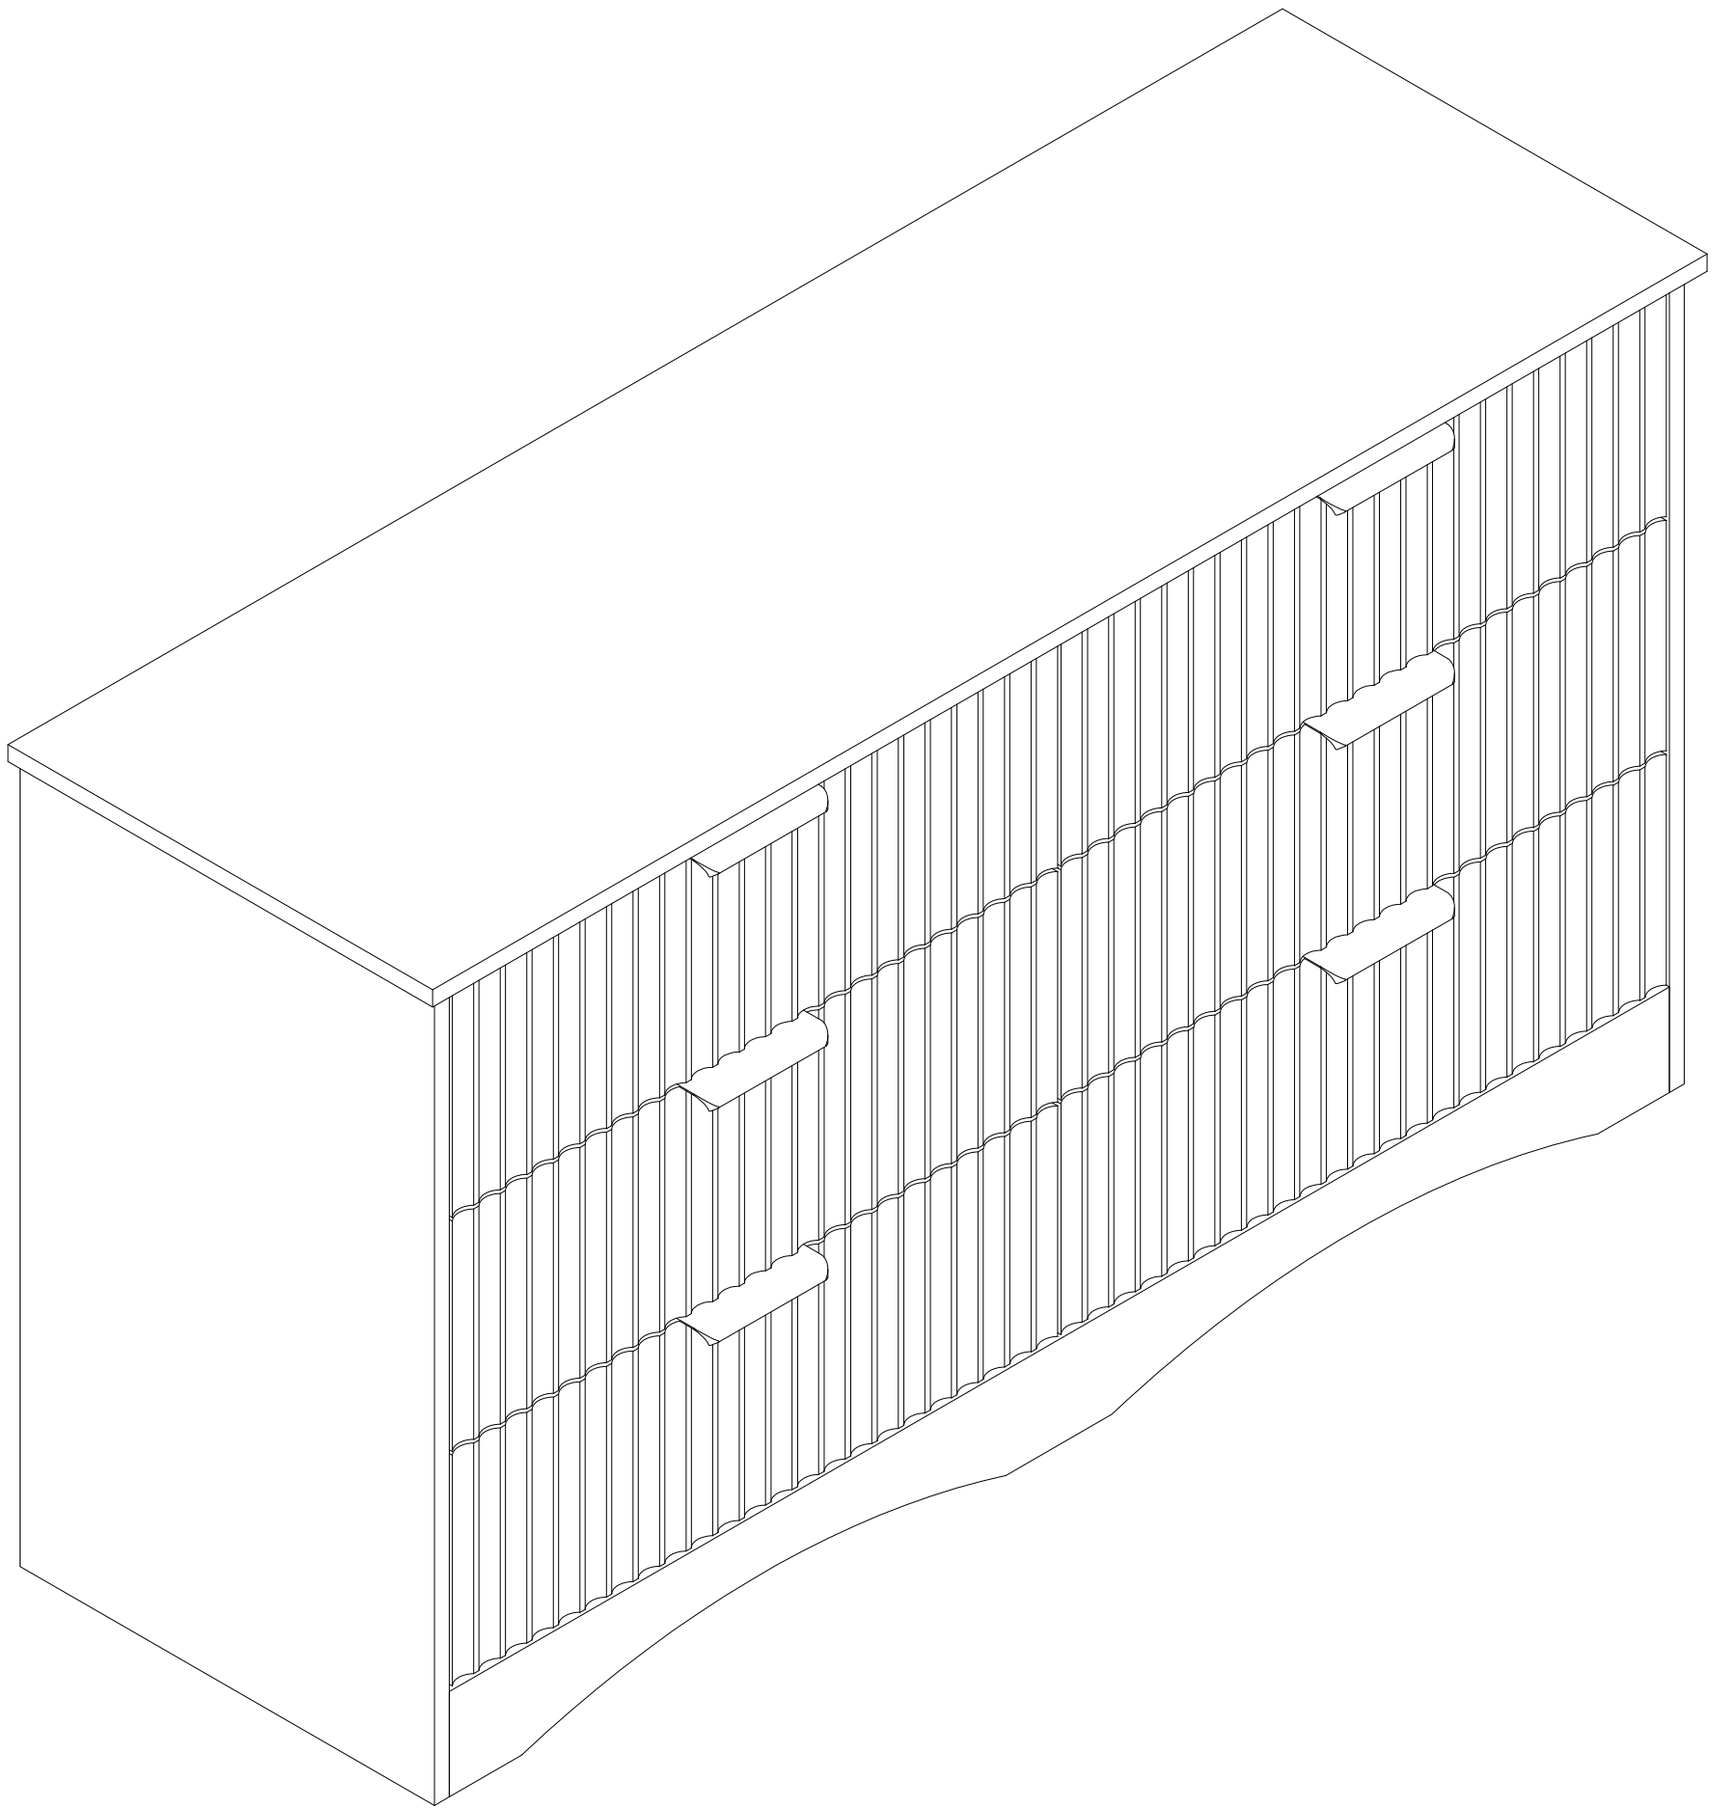


WARNING !



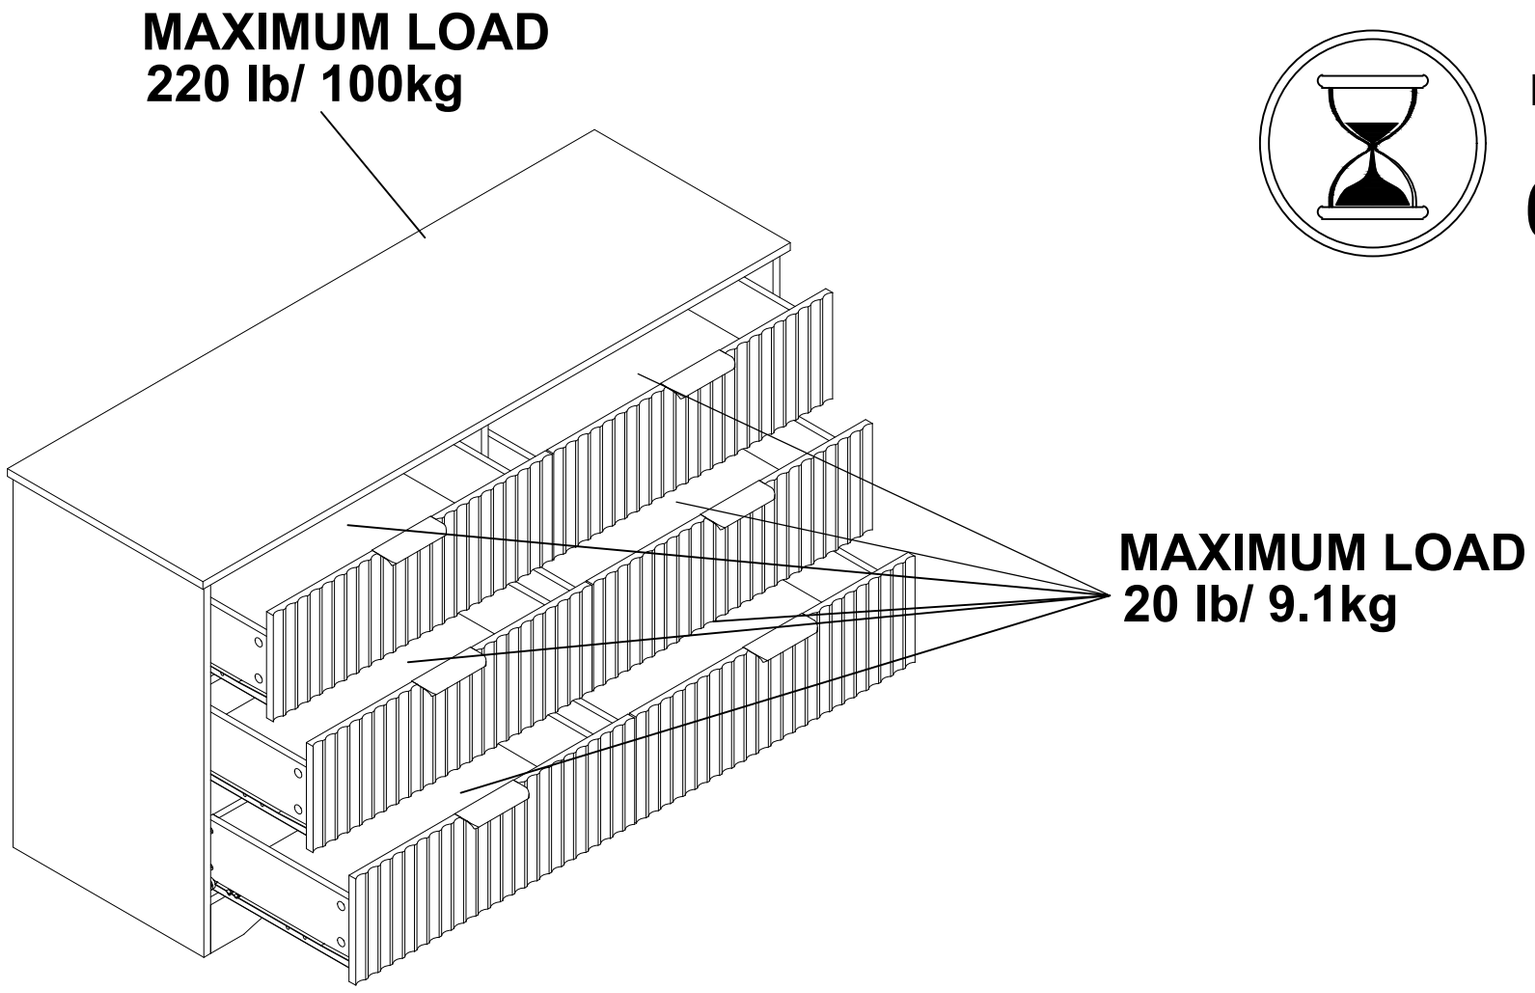


Estimated Time for Assembly

60 mins

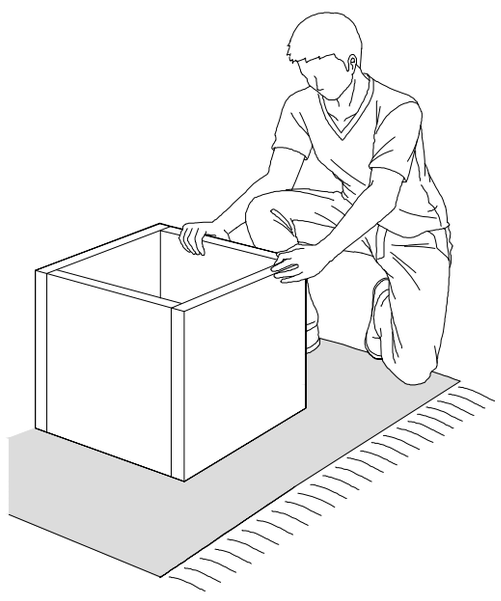

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

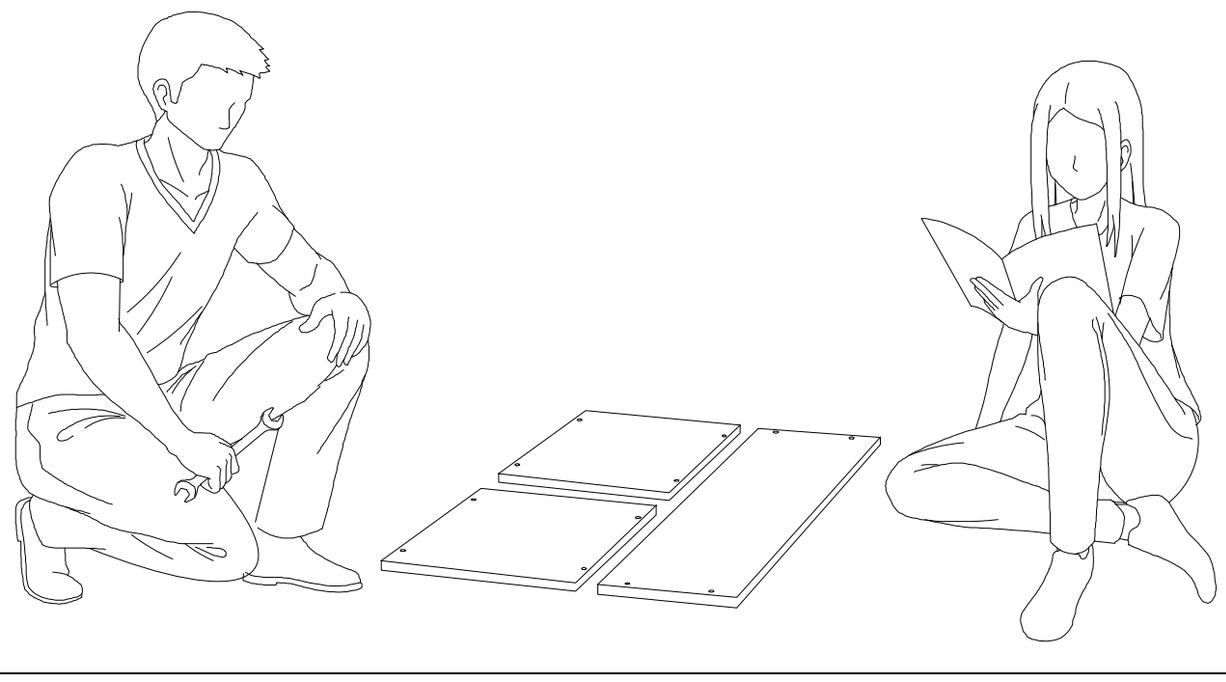


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

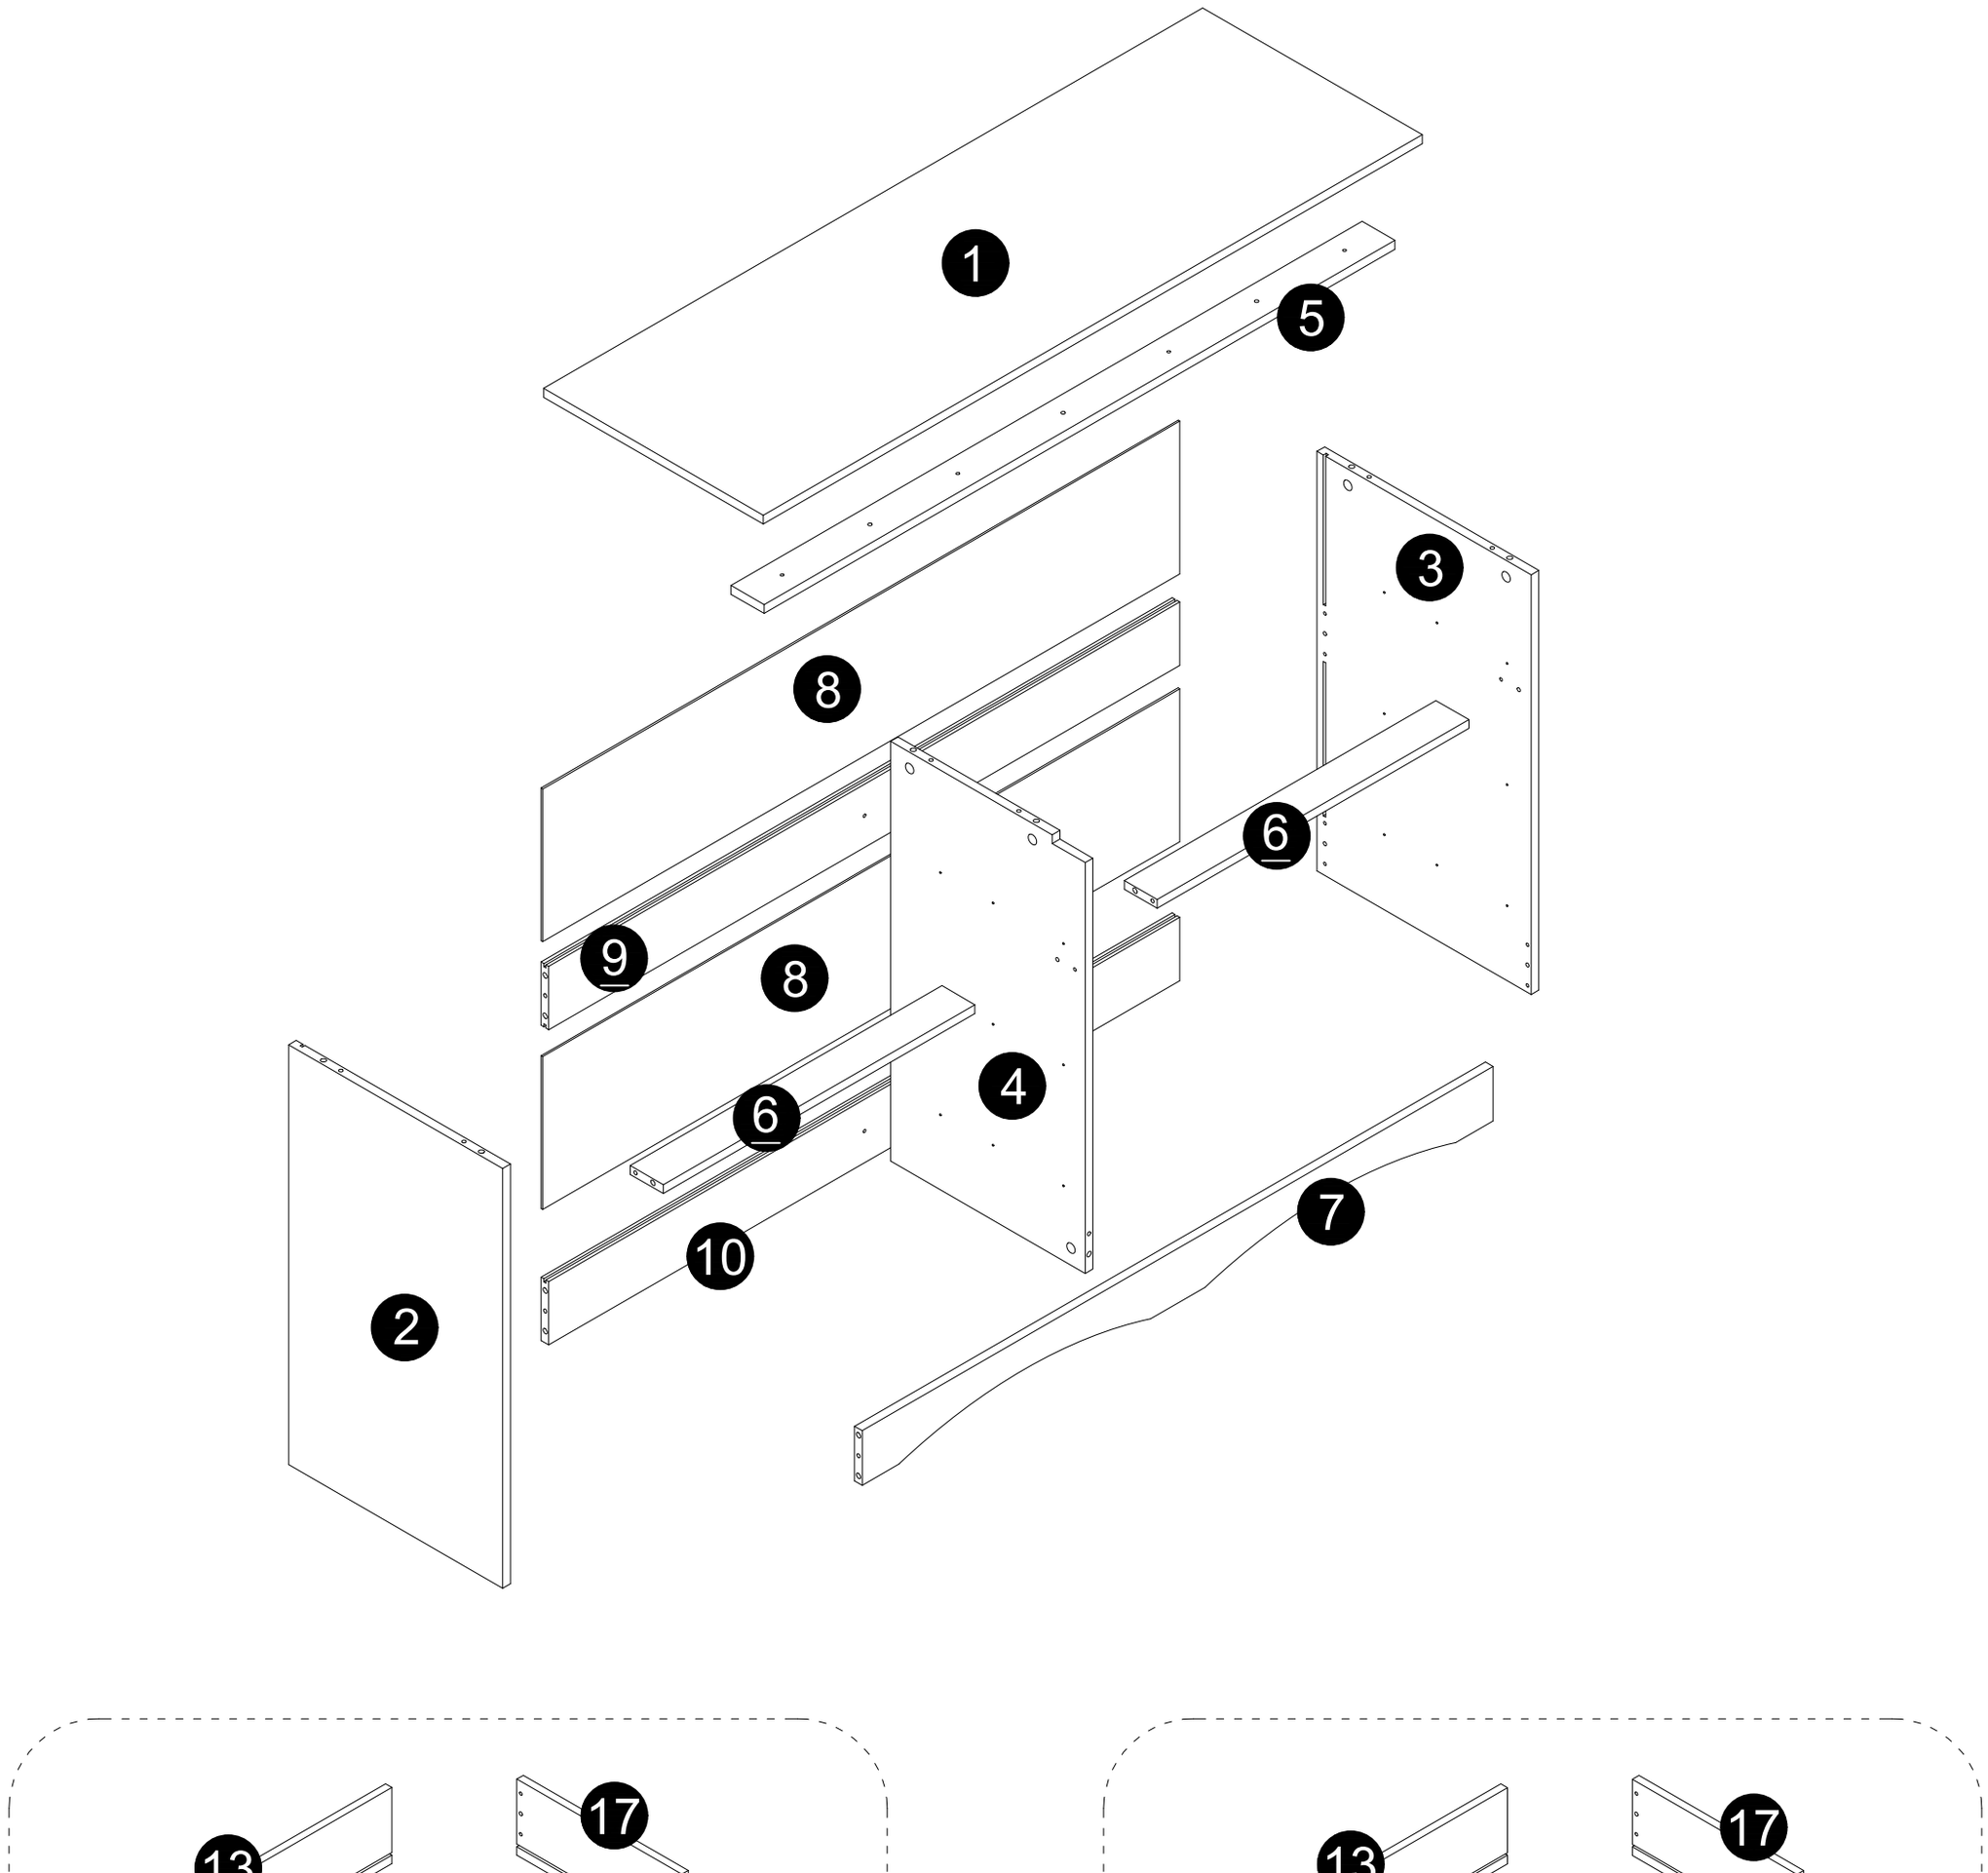


BOARD IDENTIFICATION


Not actual size

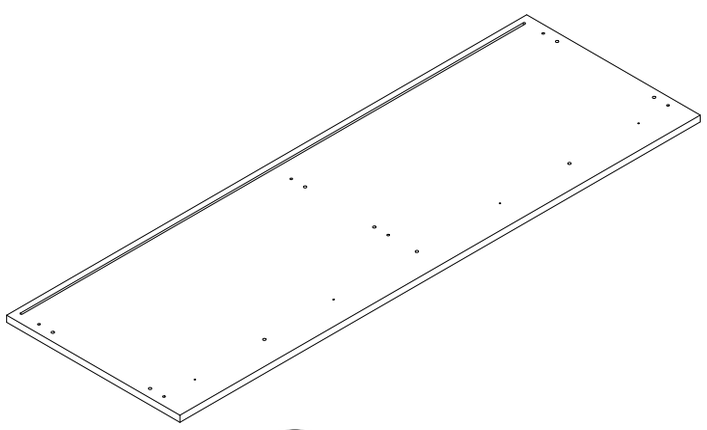


1 x1

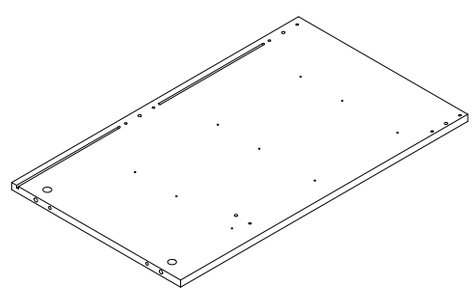


2 x1

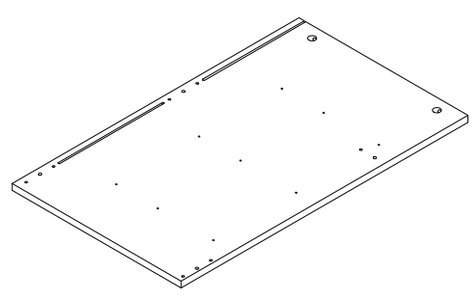


3 x1

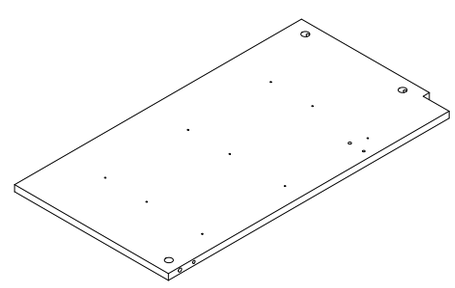


4 x1

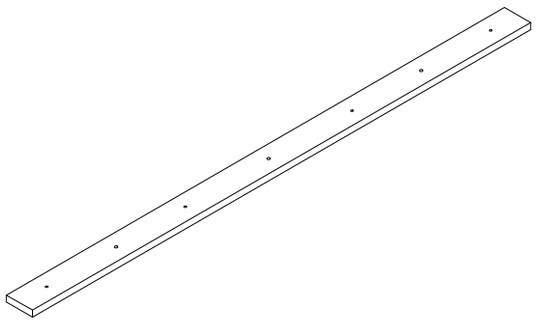


5 x1

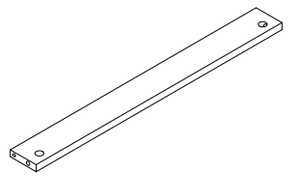


6 x2

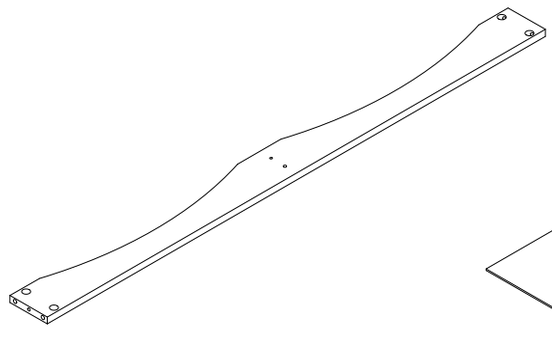


7 x1

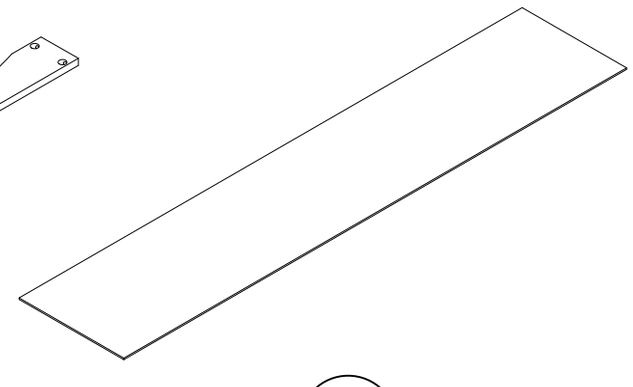


8 x2

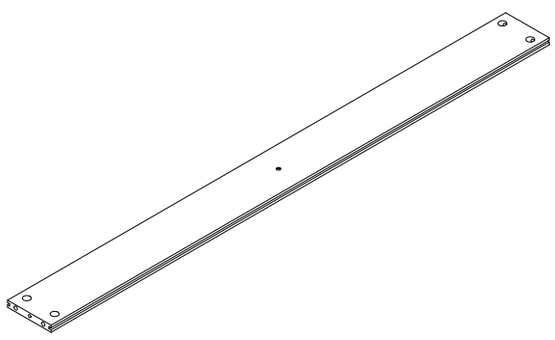


9 x1

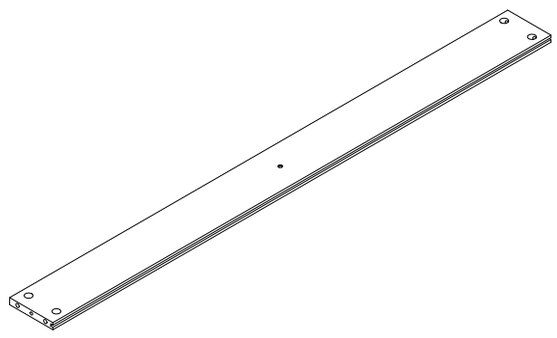


10 x1

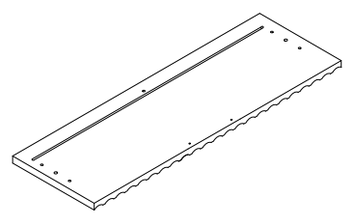


11 x3

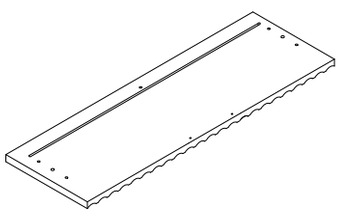


12 x3

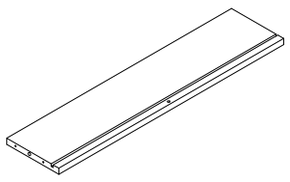


13 x6

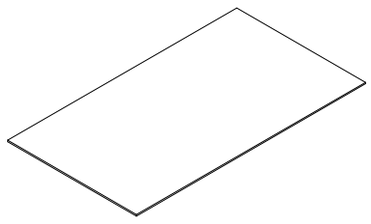

14 x6

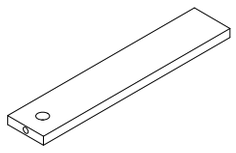


15 x6

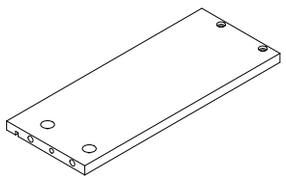

16 x6


BOARD IDENTIFICATION

Not actual size

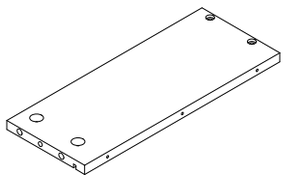


17 x6

HARDWARE LIST




A	x53+2

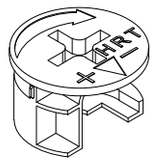


Ø15x9.5

B	x53+2




Ø6x30

C	x41+2




Ø6x20

D	x3




Ø3.5x12

E	x84+4




Ø5x40

F	x2

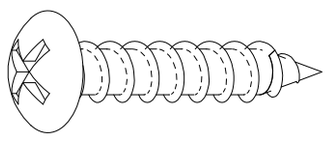


Ø4x16

G	x4

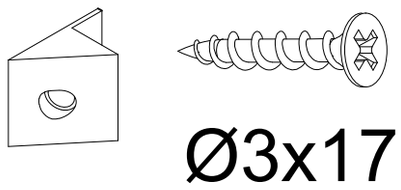


Ø3x17

H	x8




Ø4x35


I	x30+2

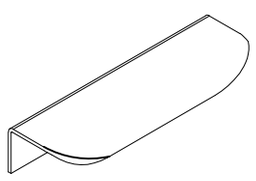


J	x6

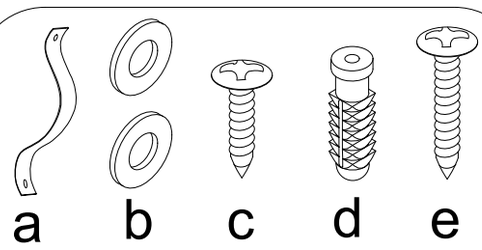


K	x2




L	x1




CL	x6



CR	x6



DL	x6




DR	x6


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

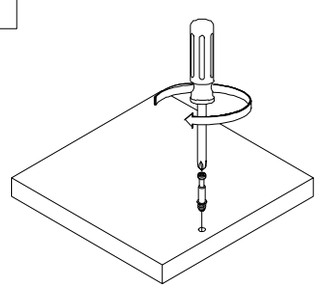

2

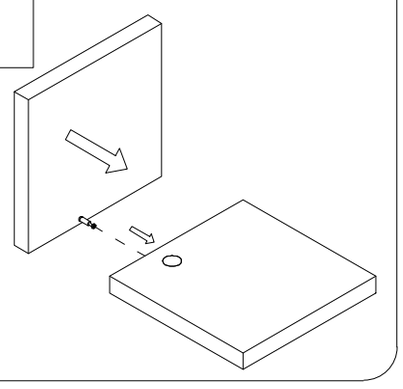


3

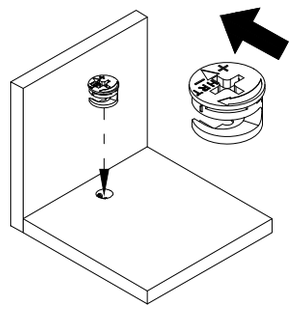



The opening must point toward the edge of the board


4

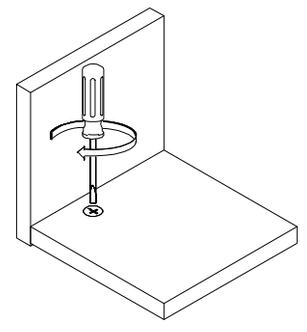



STEP 1

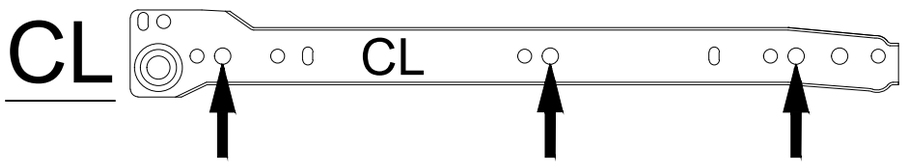

CL
CL

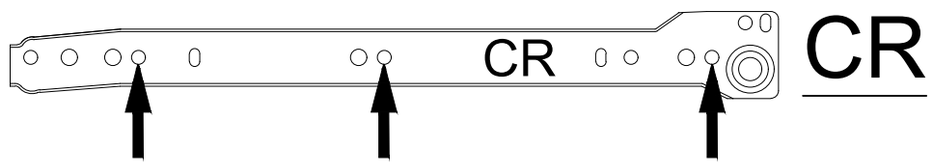
CR
CR

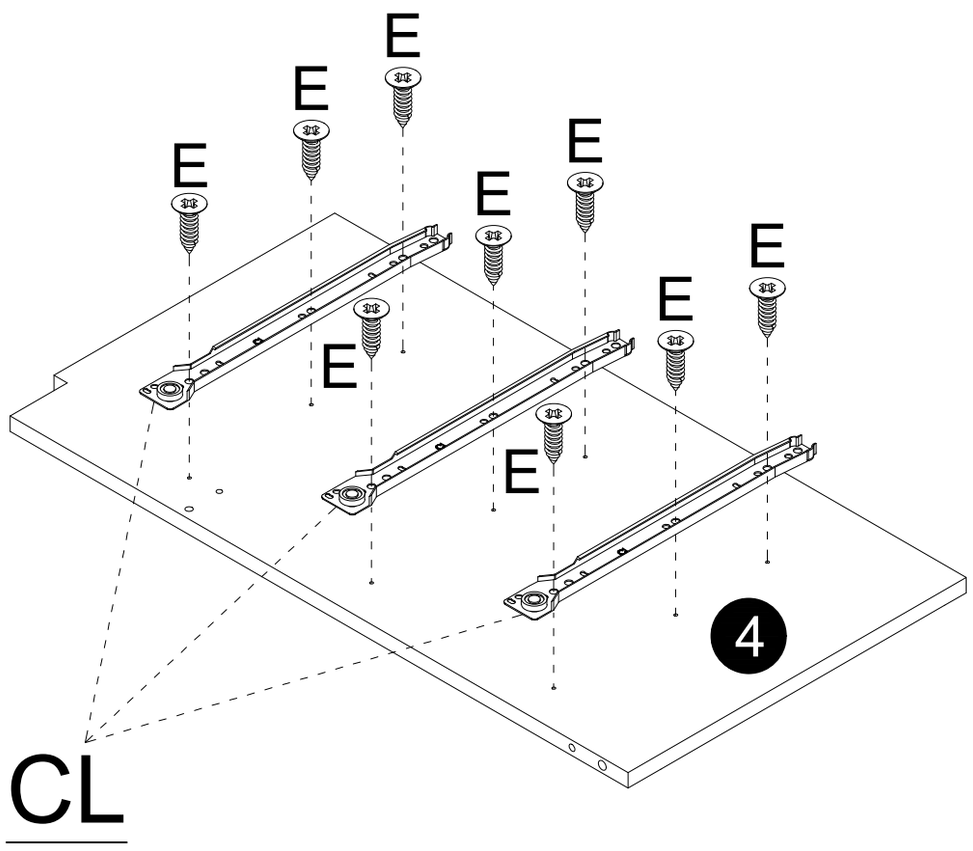

E
E
E
E
E
E
E
E
4
CL

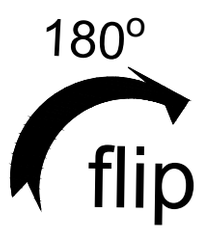
180º
flip

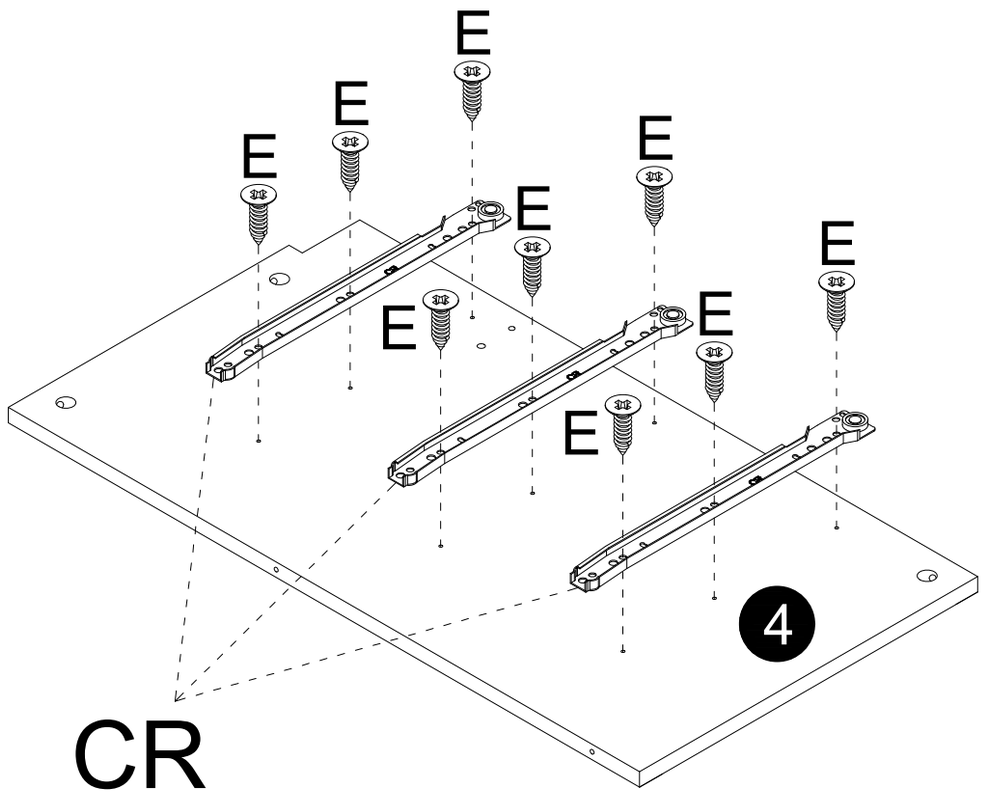

E
E
E
E
E
E
E
E
4
CR



Ø3.5x12
E
x 18



CL
CL
x 3



CR
CR
x 3

STEP 2

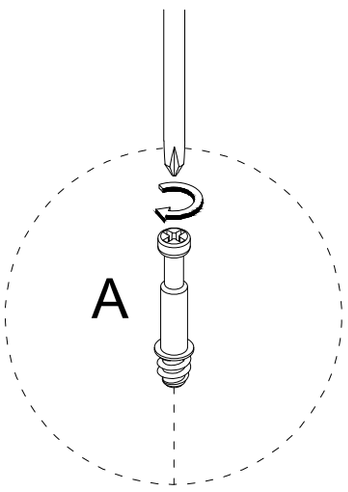

A

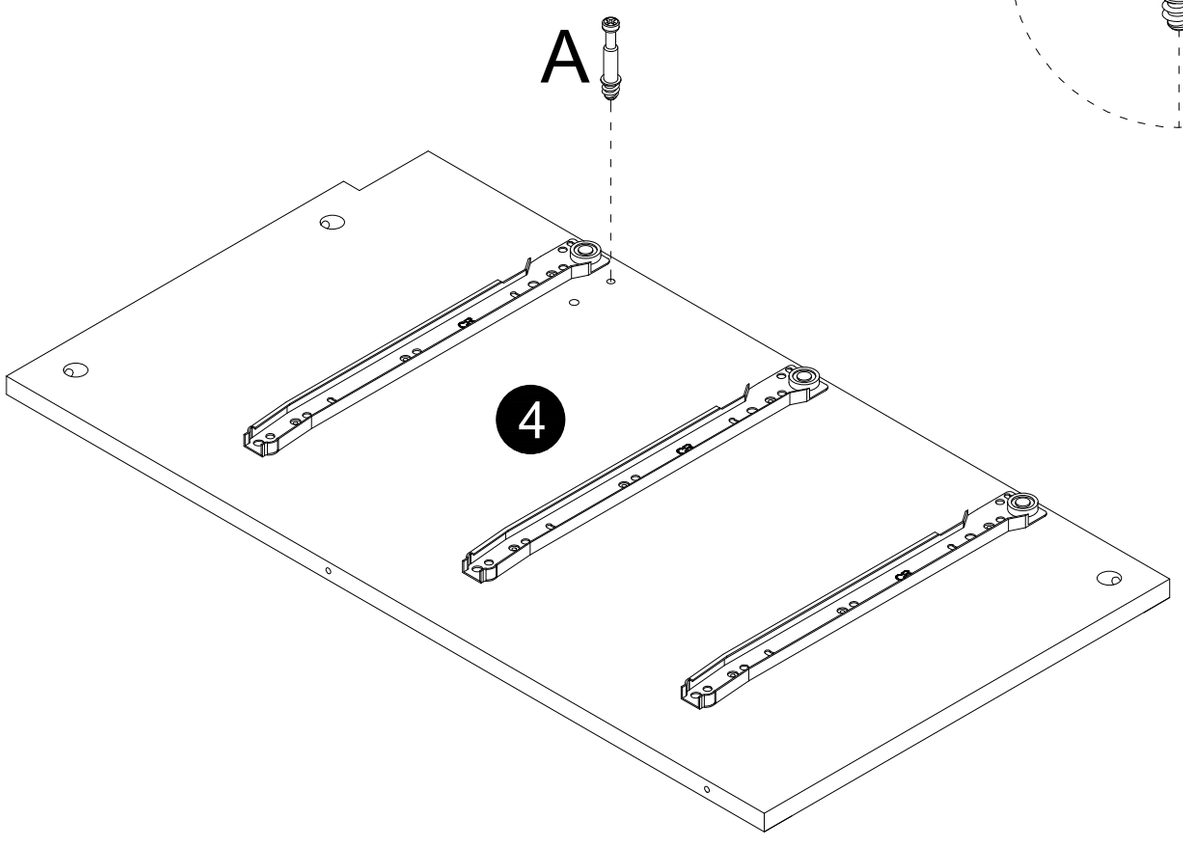

A
4

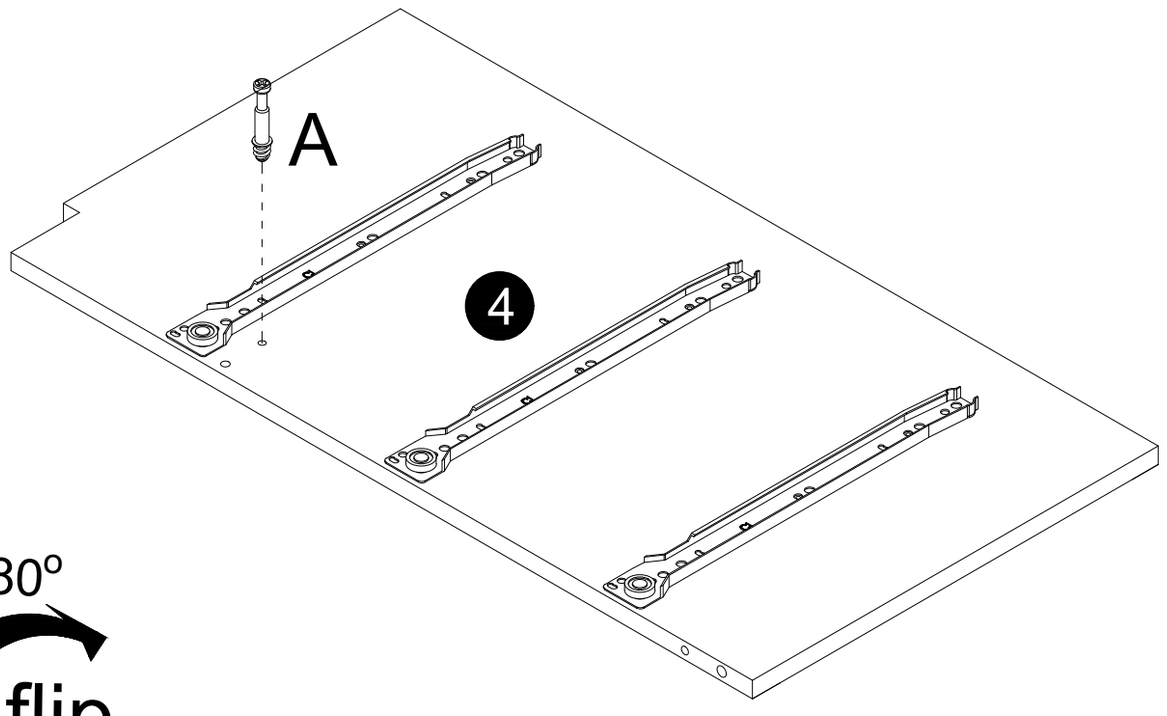

180º
flip
A
4

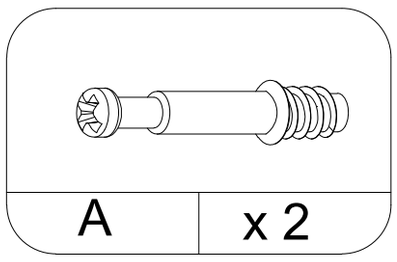

A
x 2

STEP 3

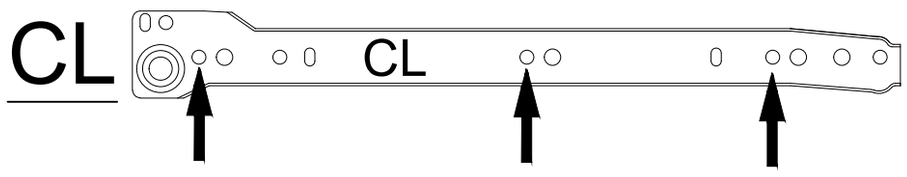

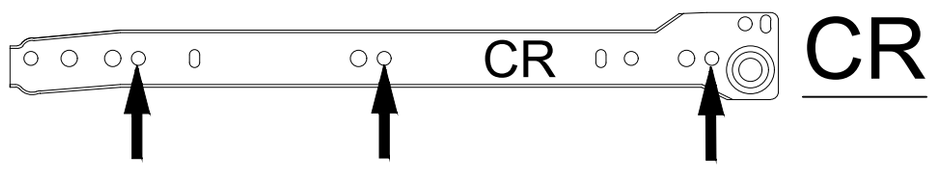

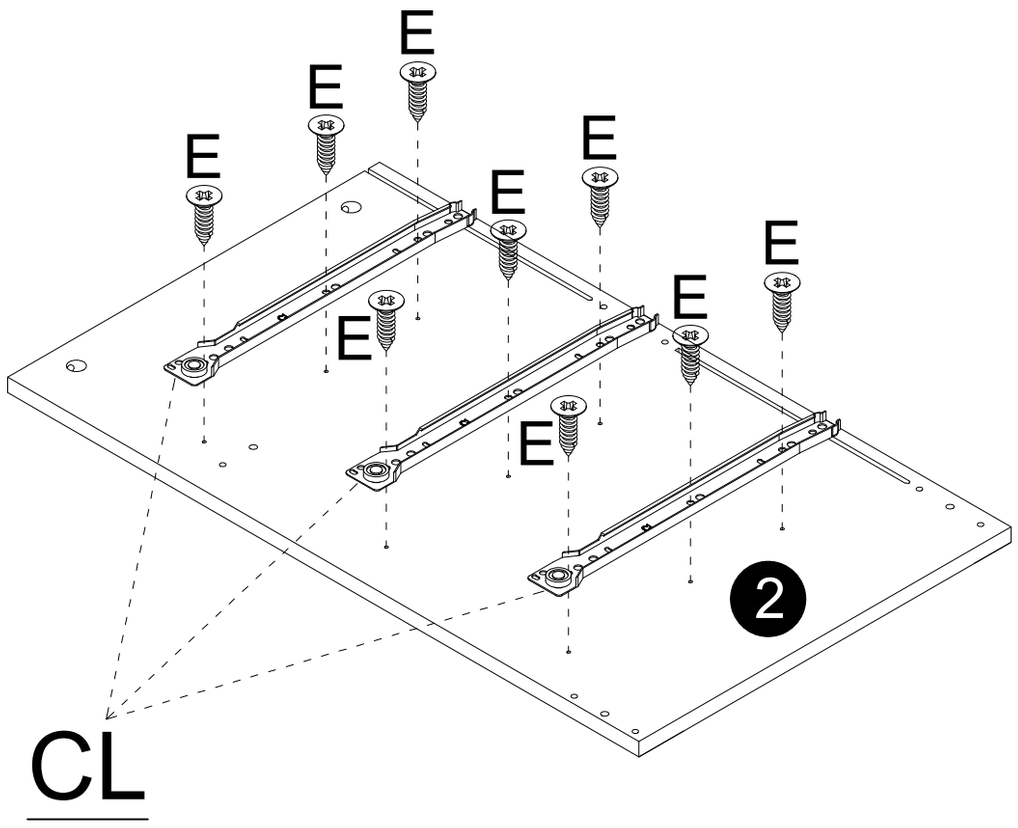

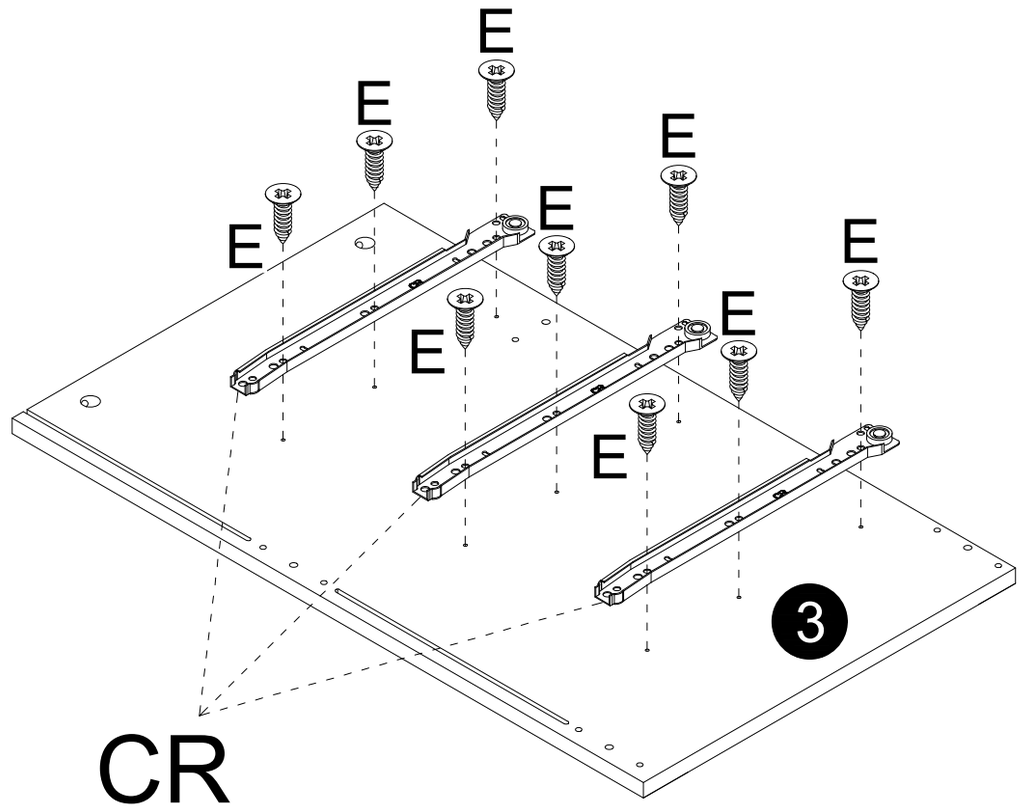



Ø3.5x12	
E	x 18


CL	
CL	x 3

CR	
CR	x 3

STEP 4

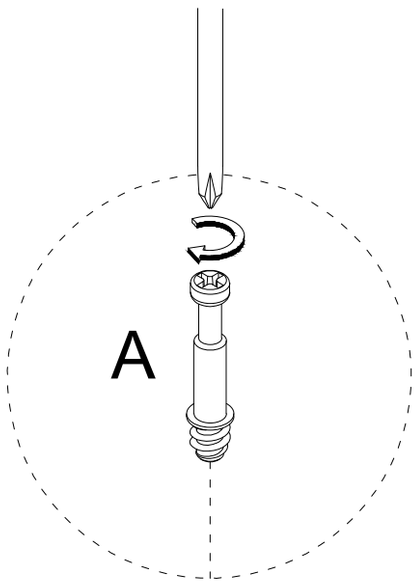


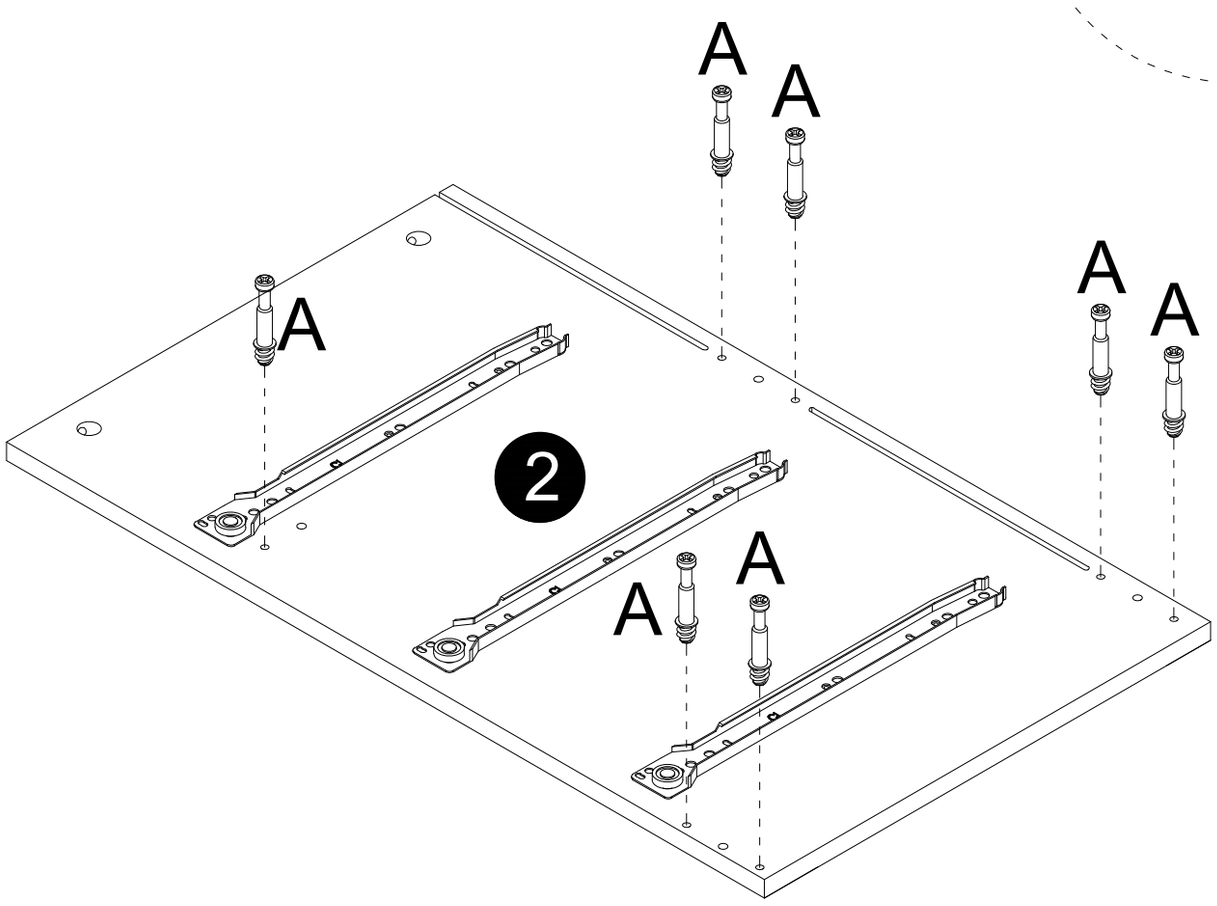


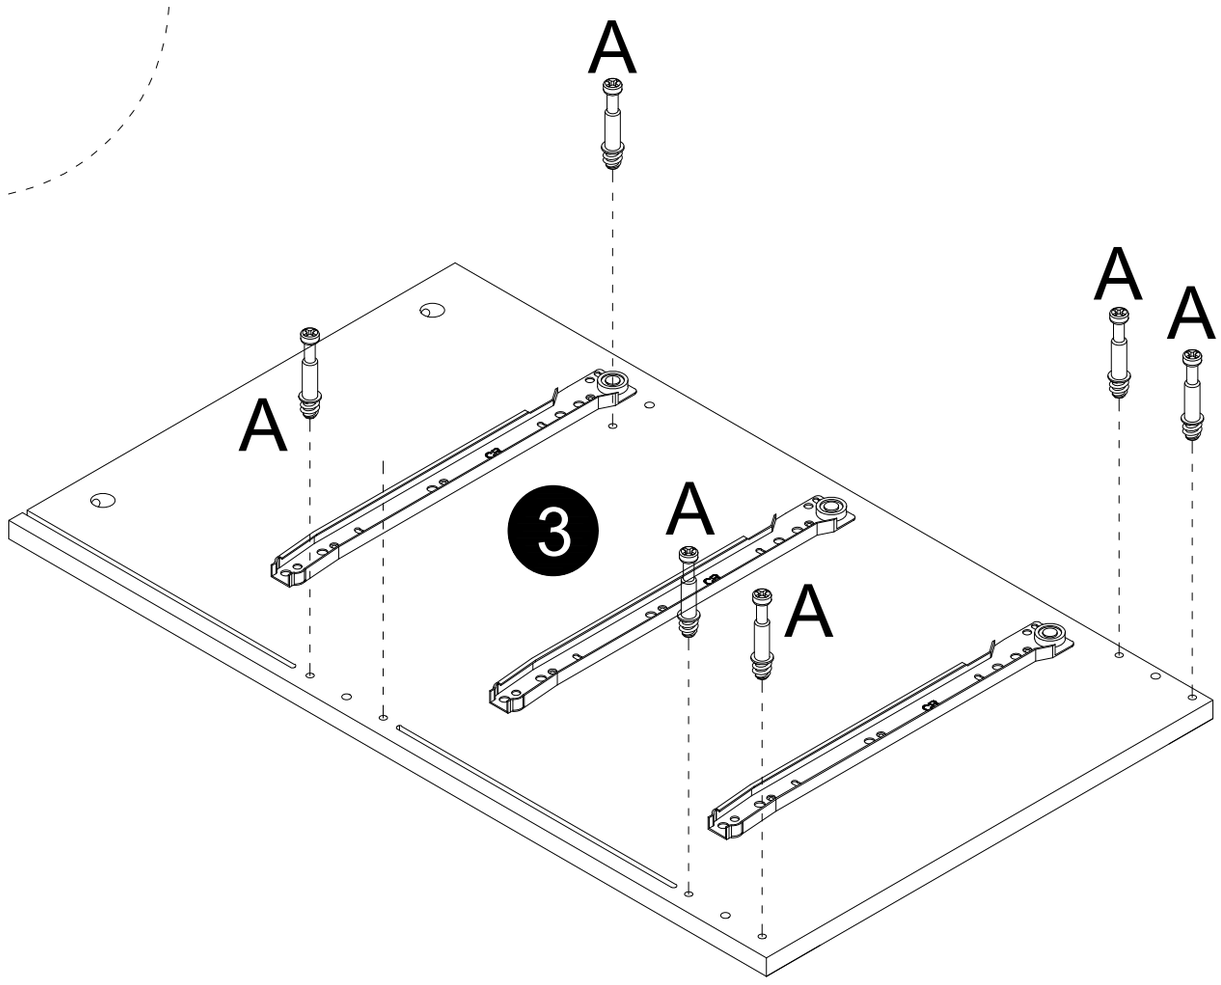


A	
A	x 14


STEP 5

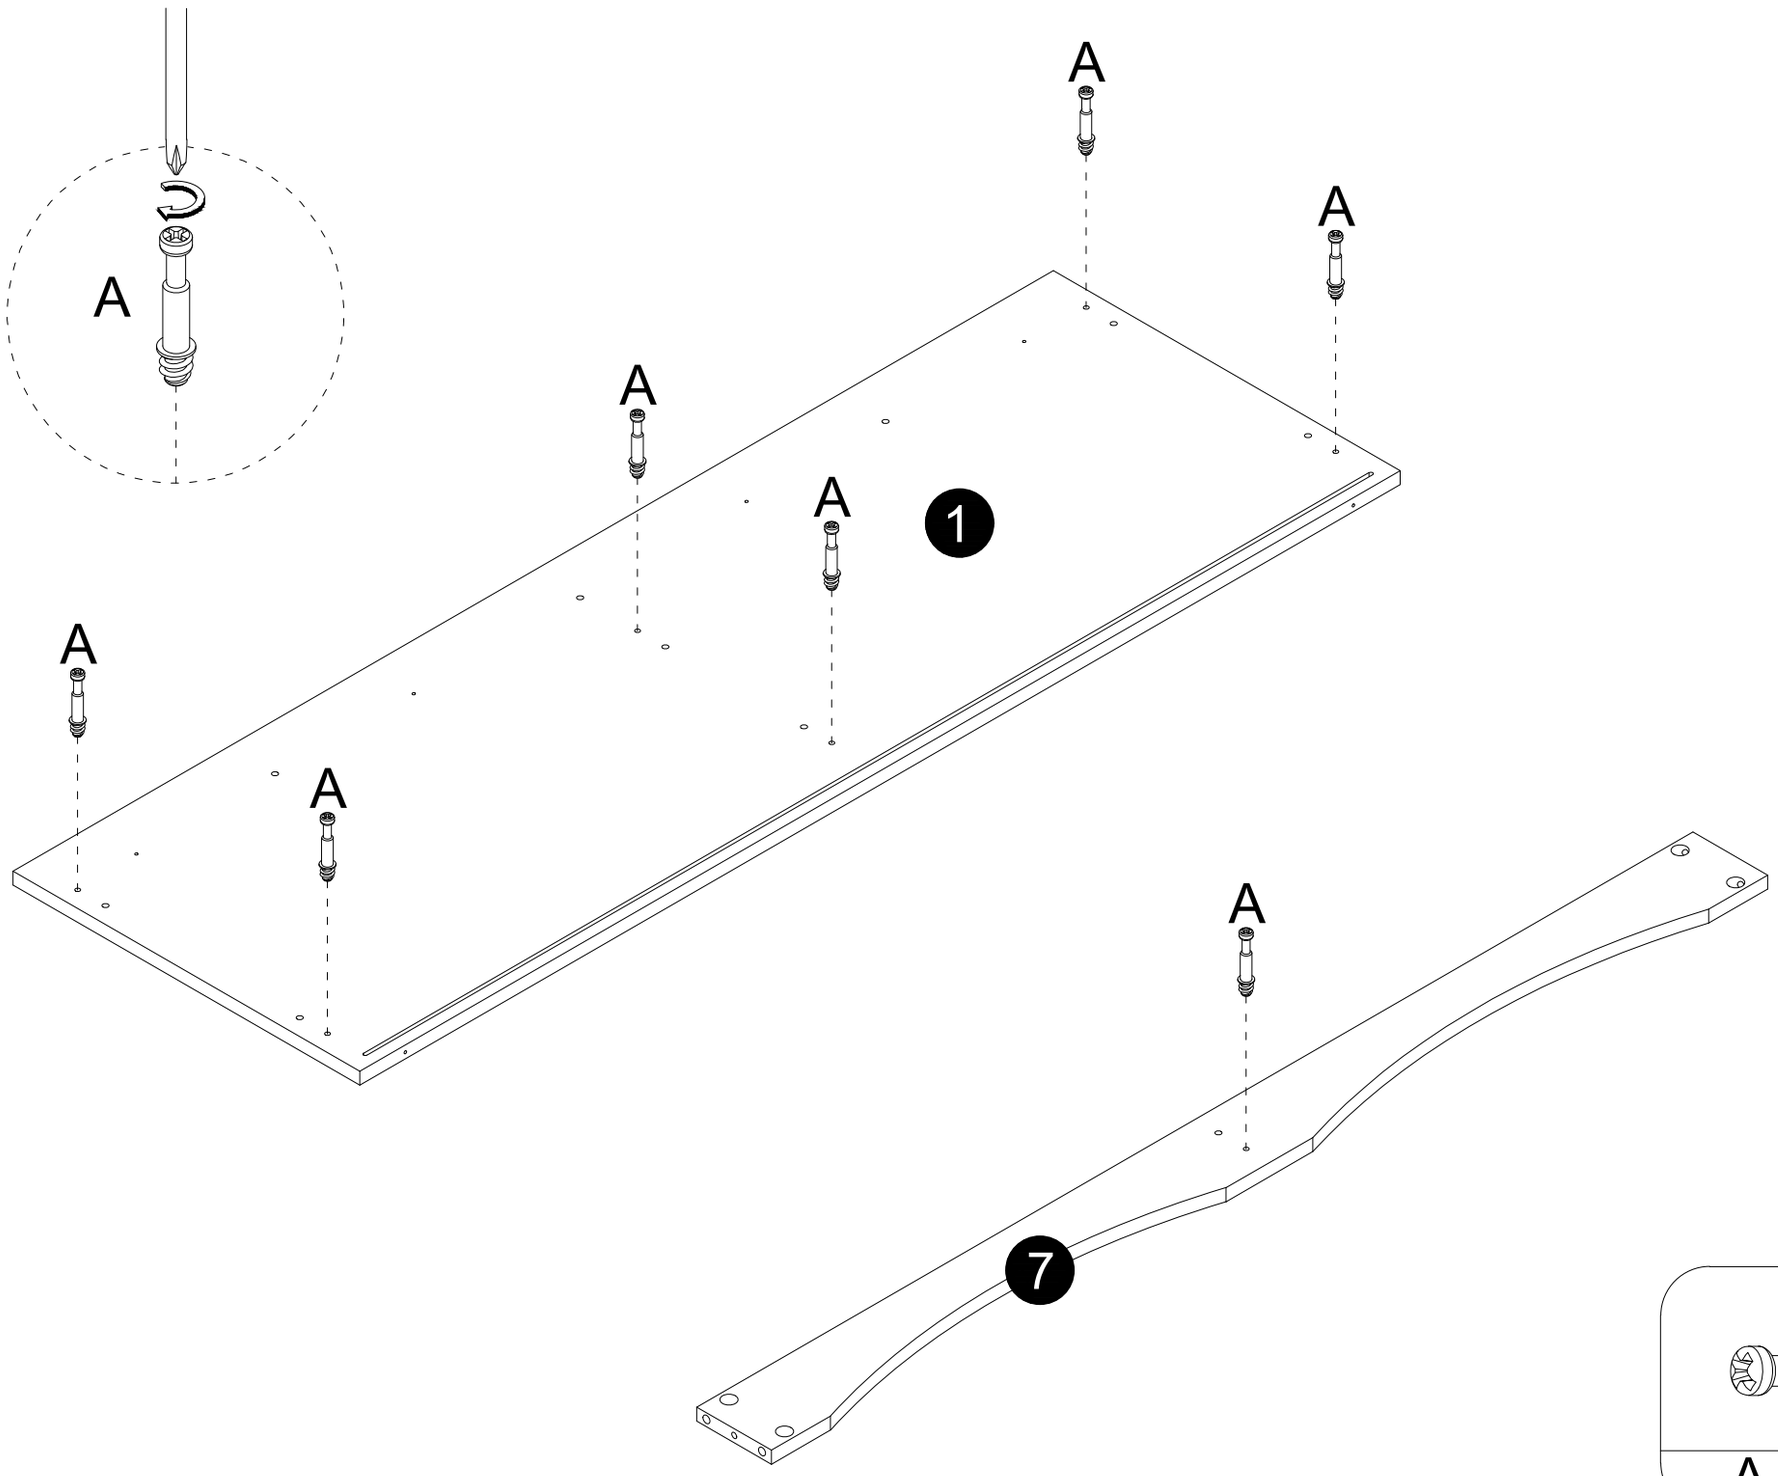


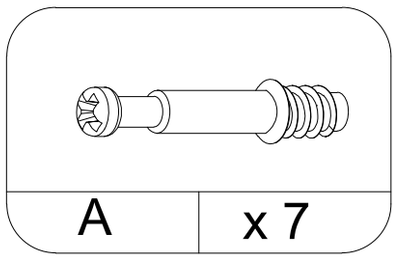


STEP 6

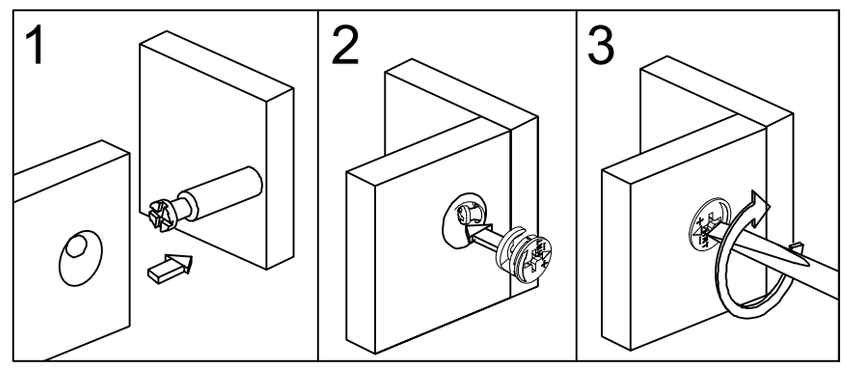


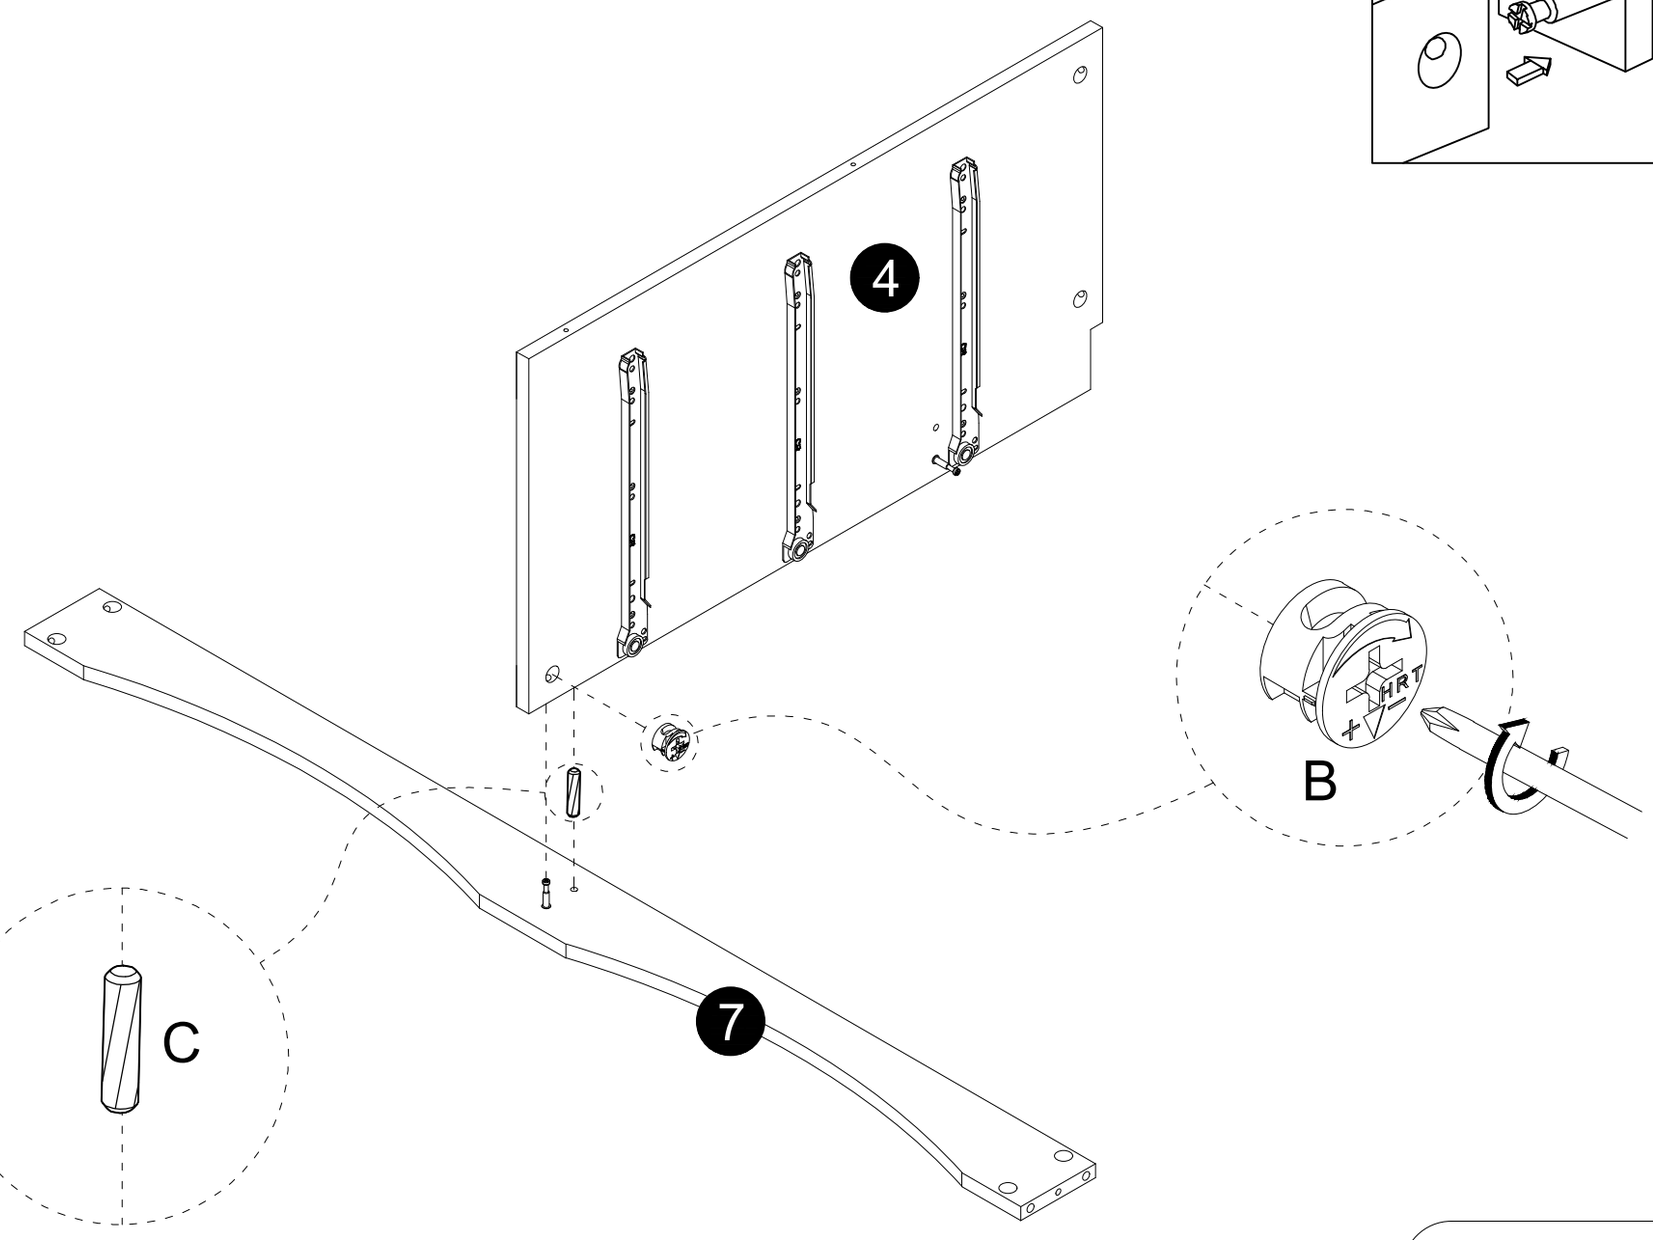


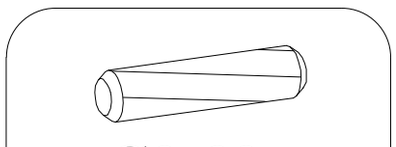


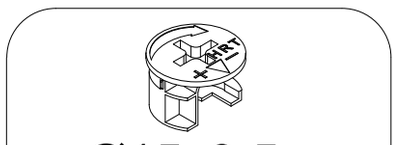


STEP 7

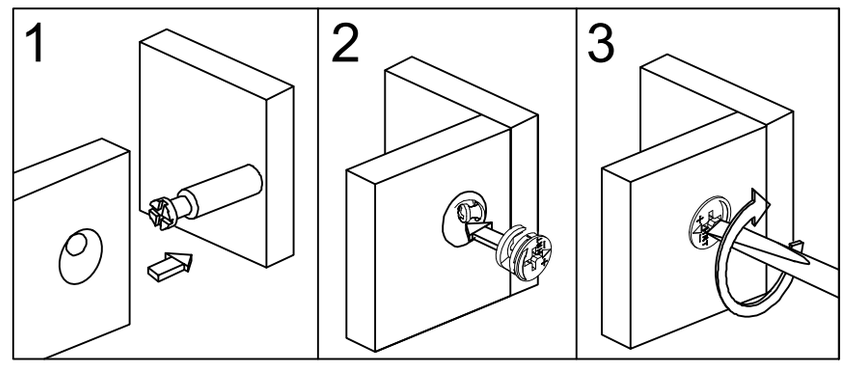

1
2
3

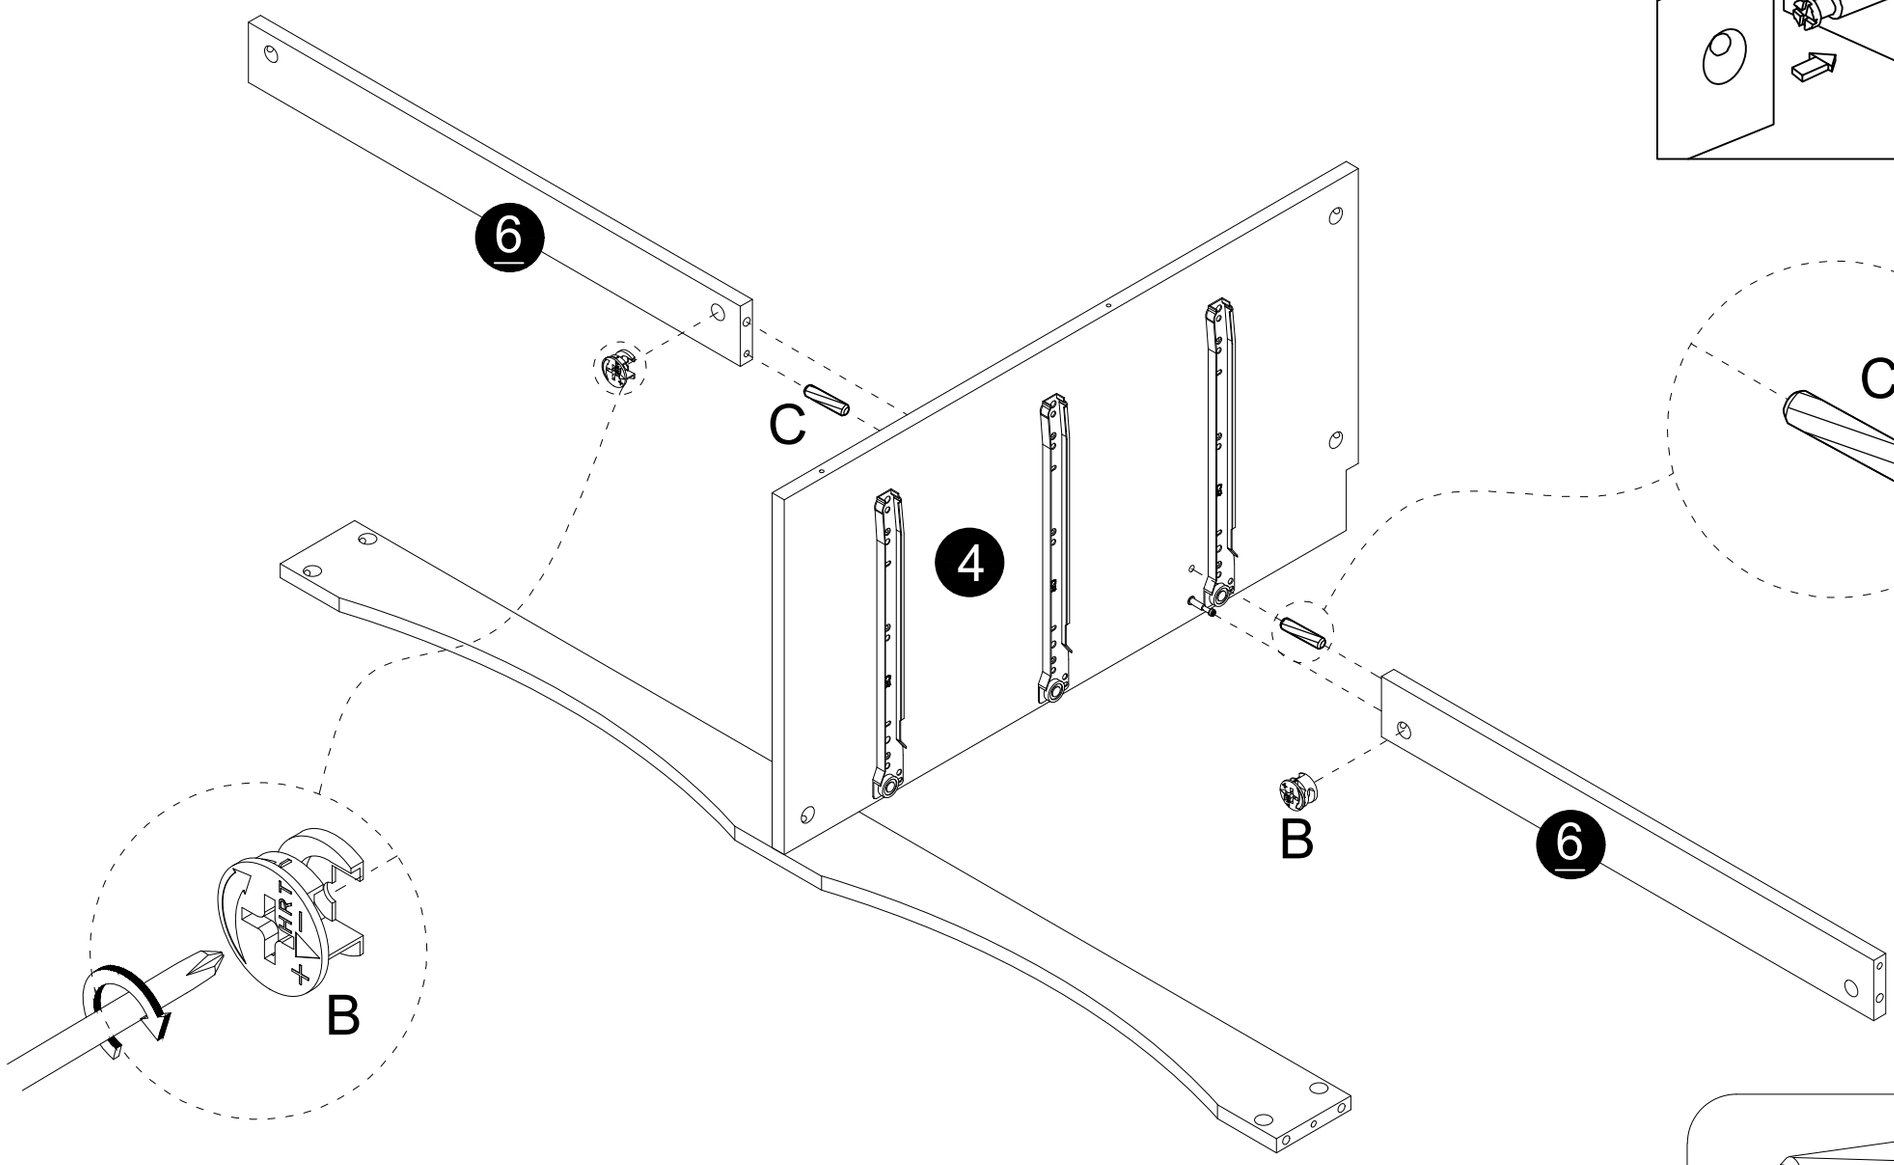

6
C
4
B
6
C
B

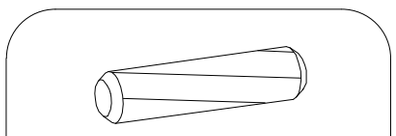

Ø6x30
C
x 2

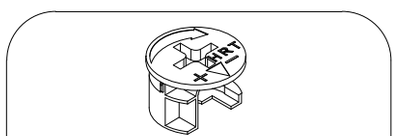
Ø15x9.5
B
x 2

STEP 8

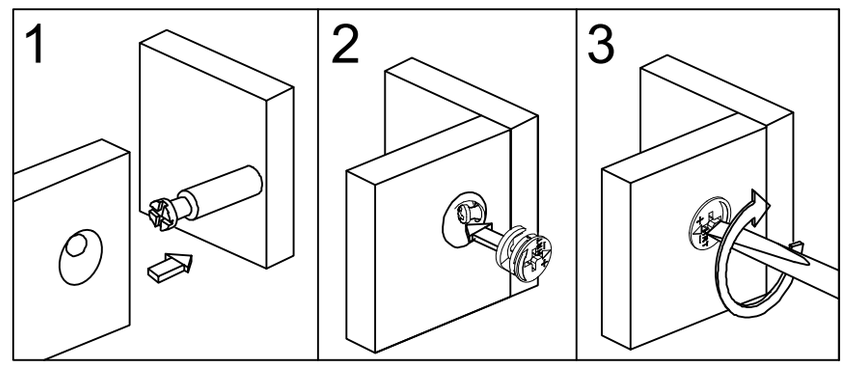

1
2
3

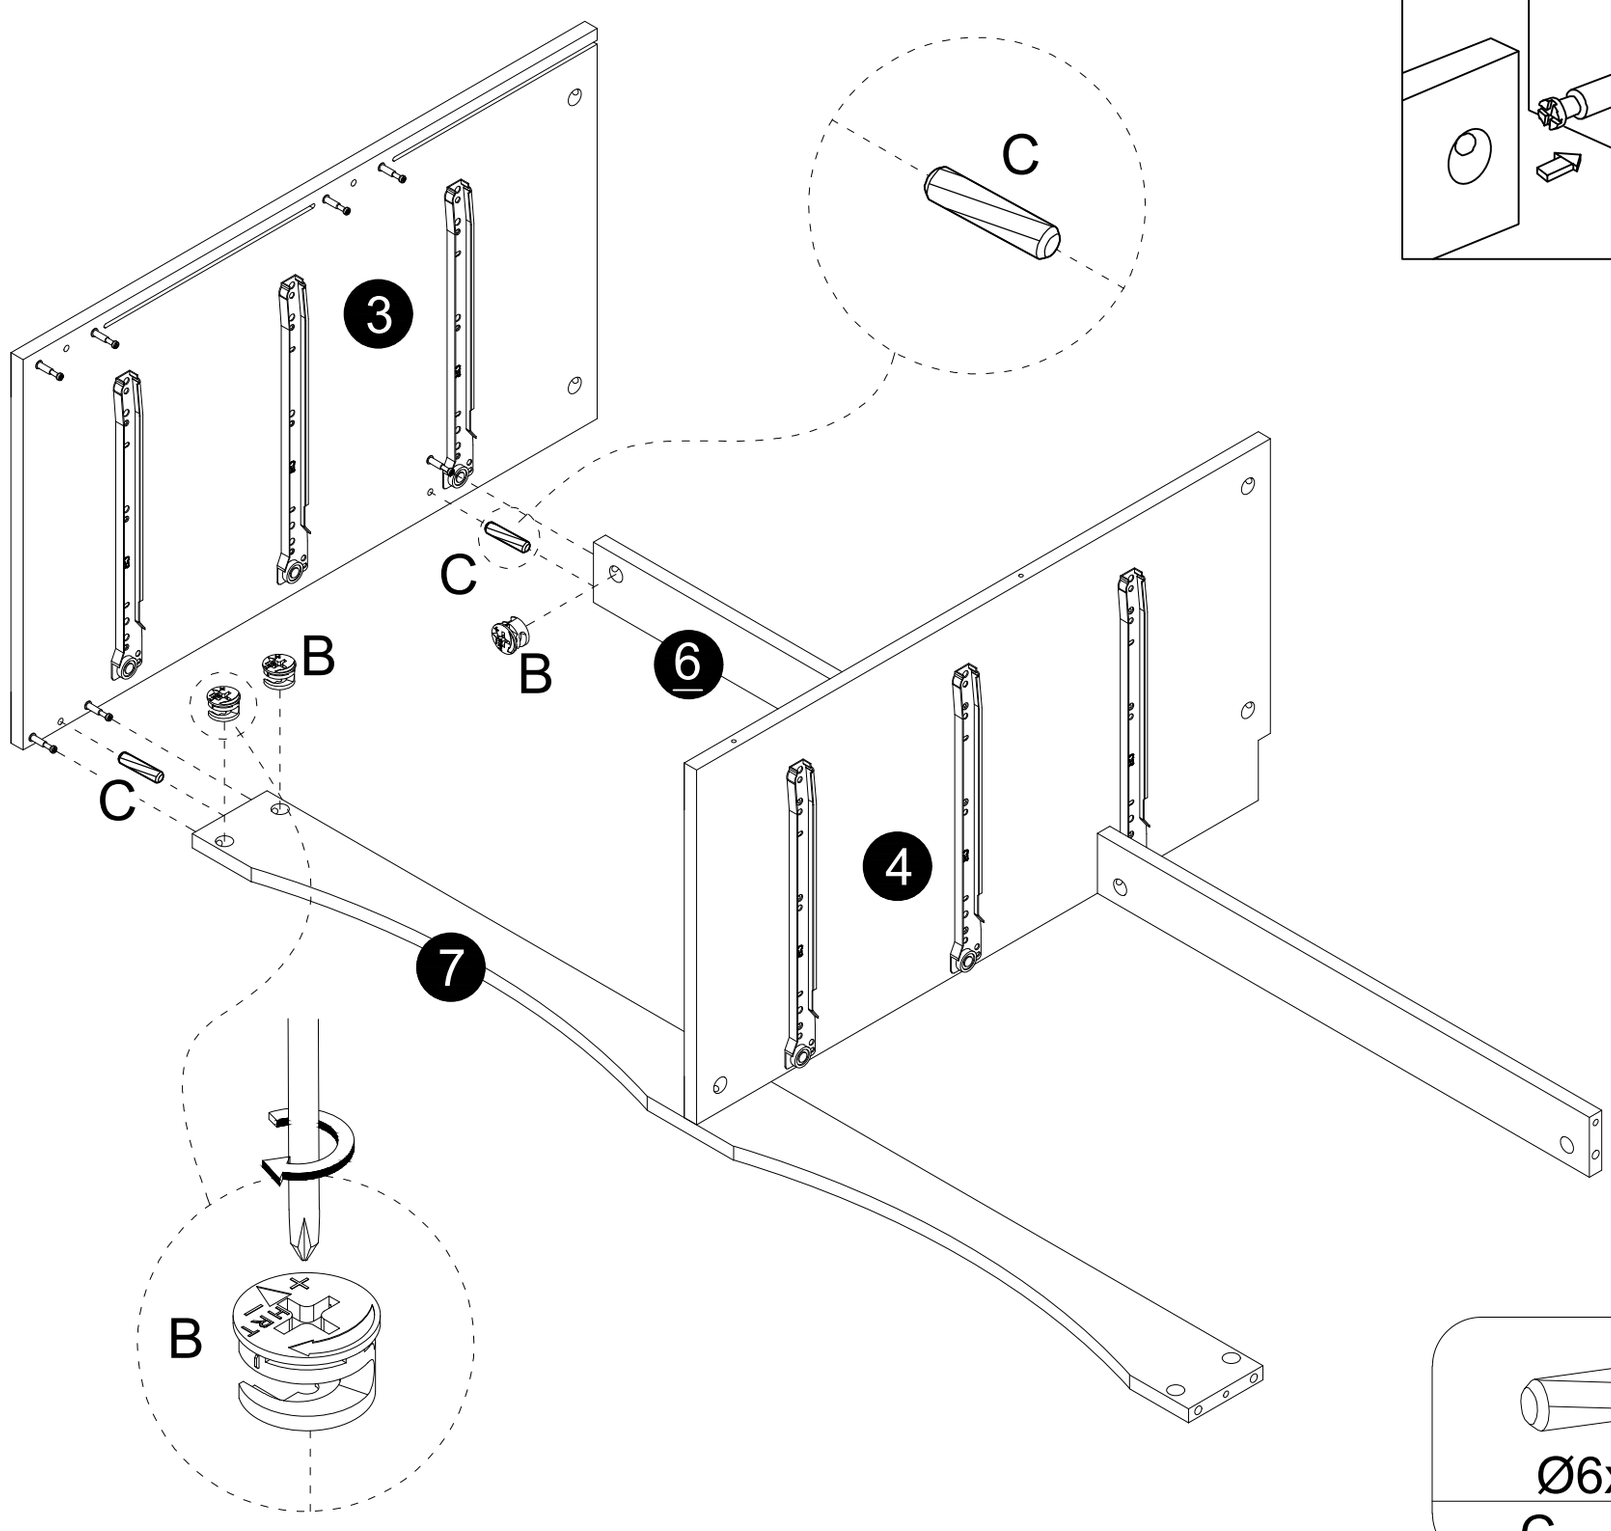

C
3
C
B
B
6
4
7
B

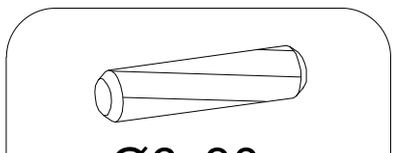

Ø6x30
C
x 2



Ø15x9.5
B
x 3

STEP 9

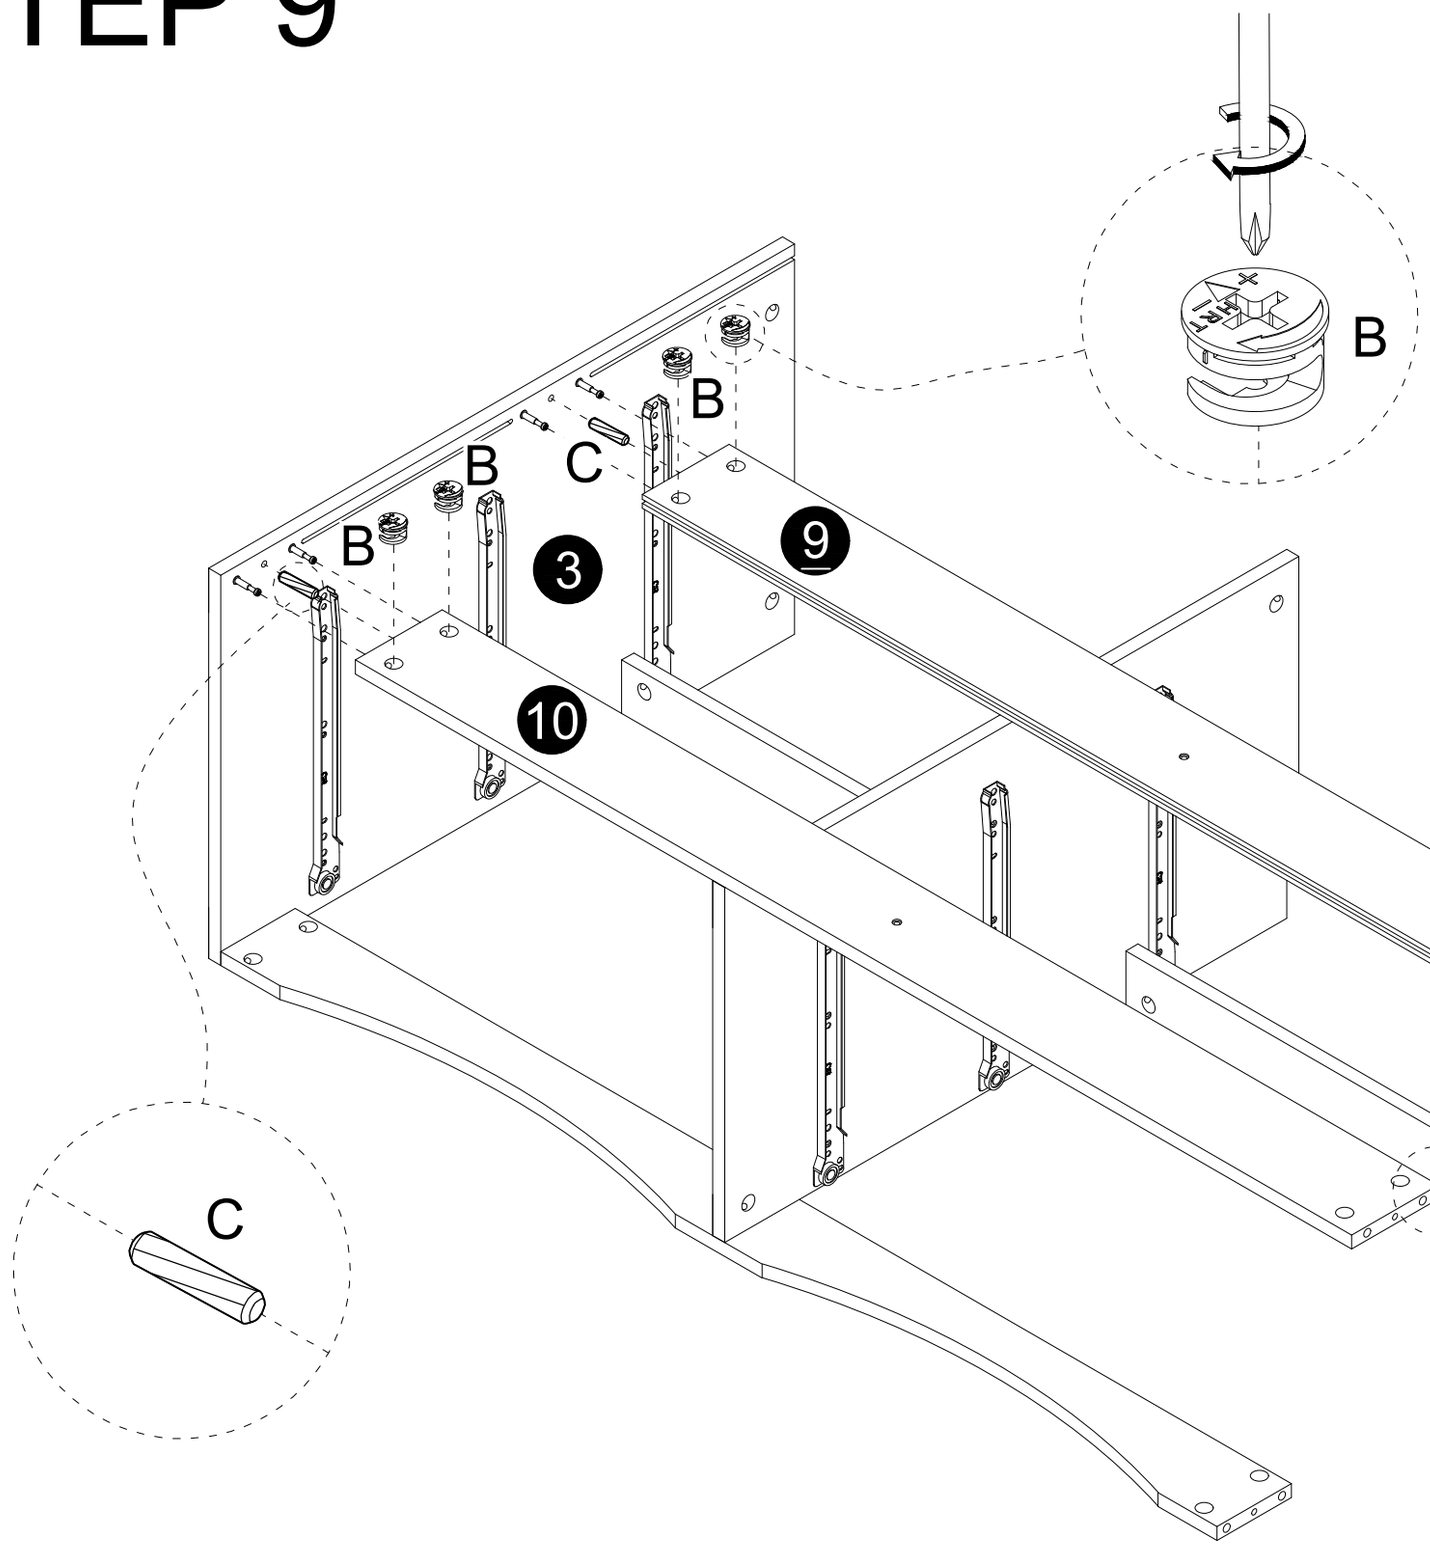

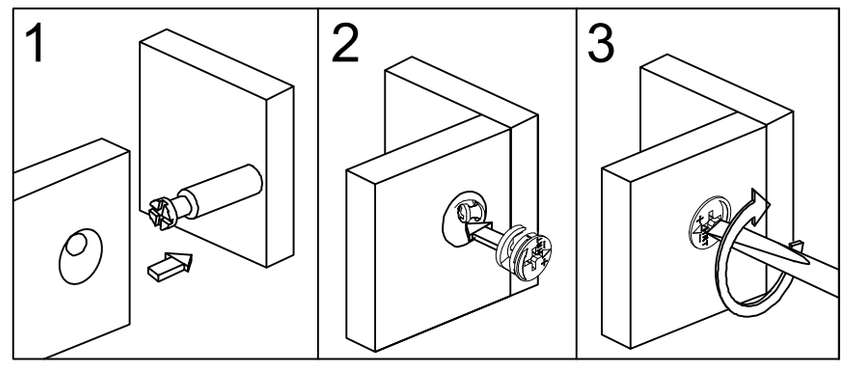


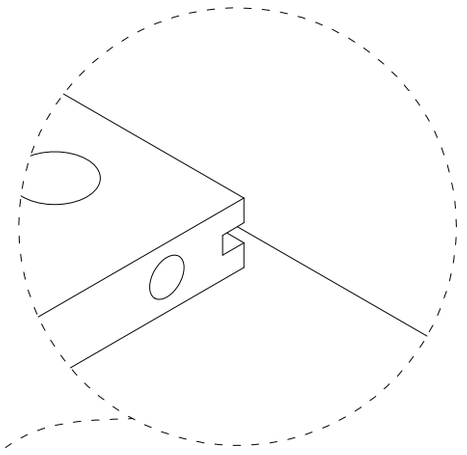



Ø6x30


C	x 2




Ø15x9.5

B	x 4

STEP 10

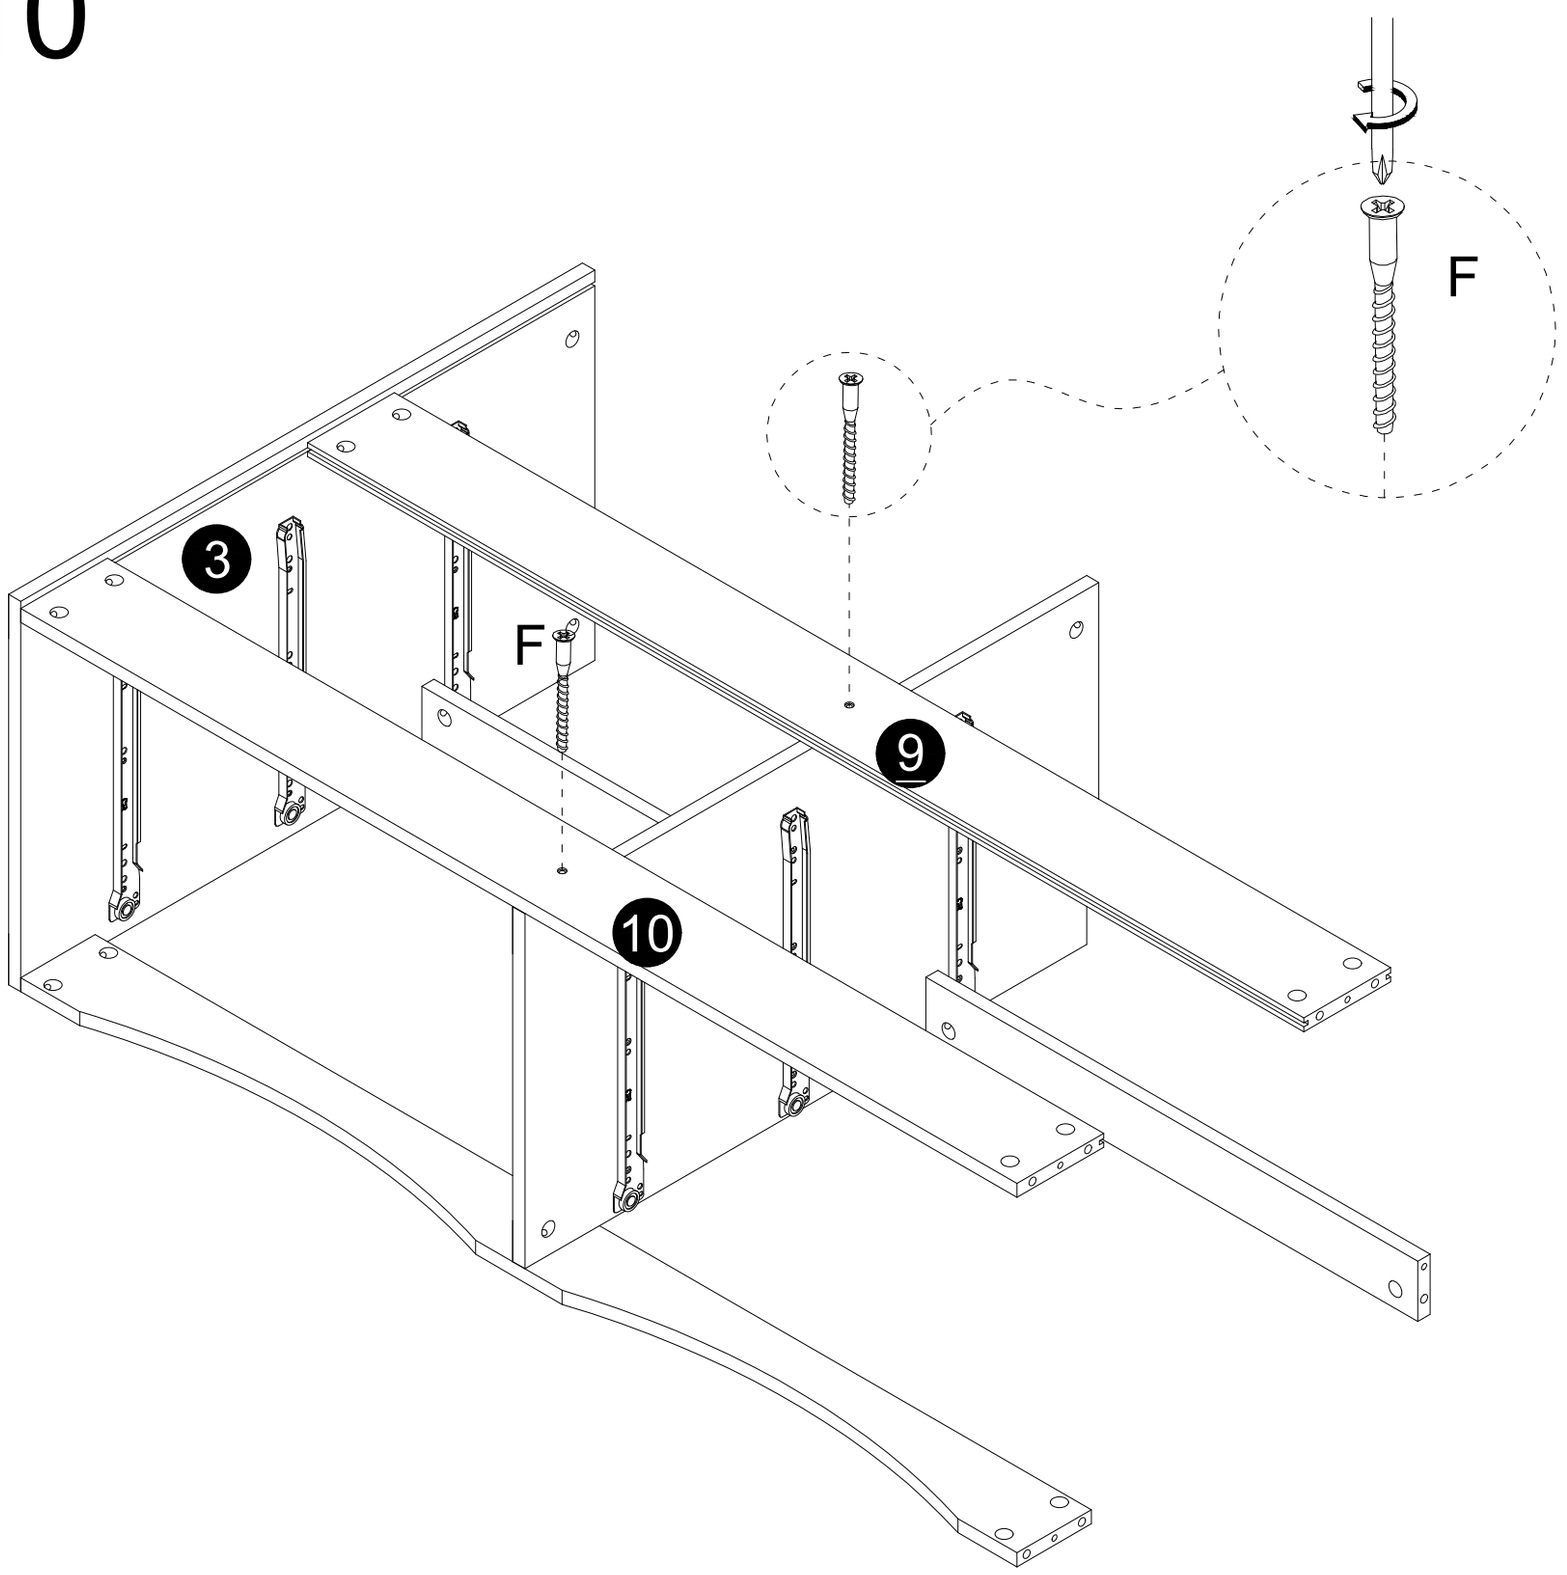





Ø5x40


F	x 2

STEP 11

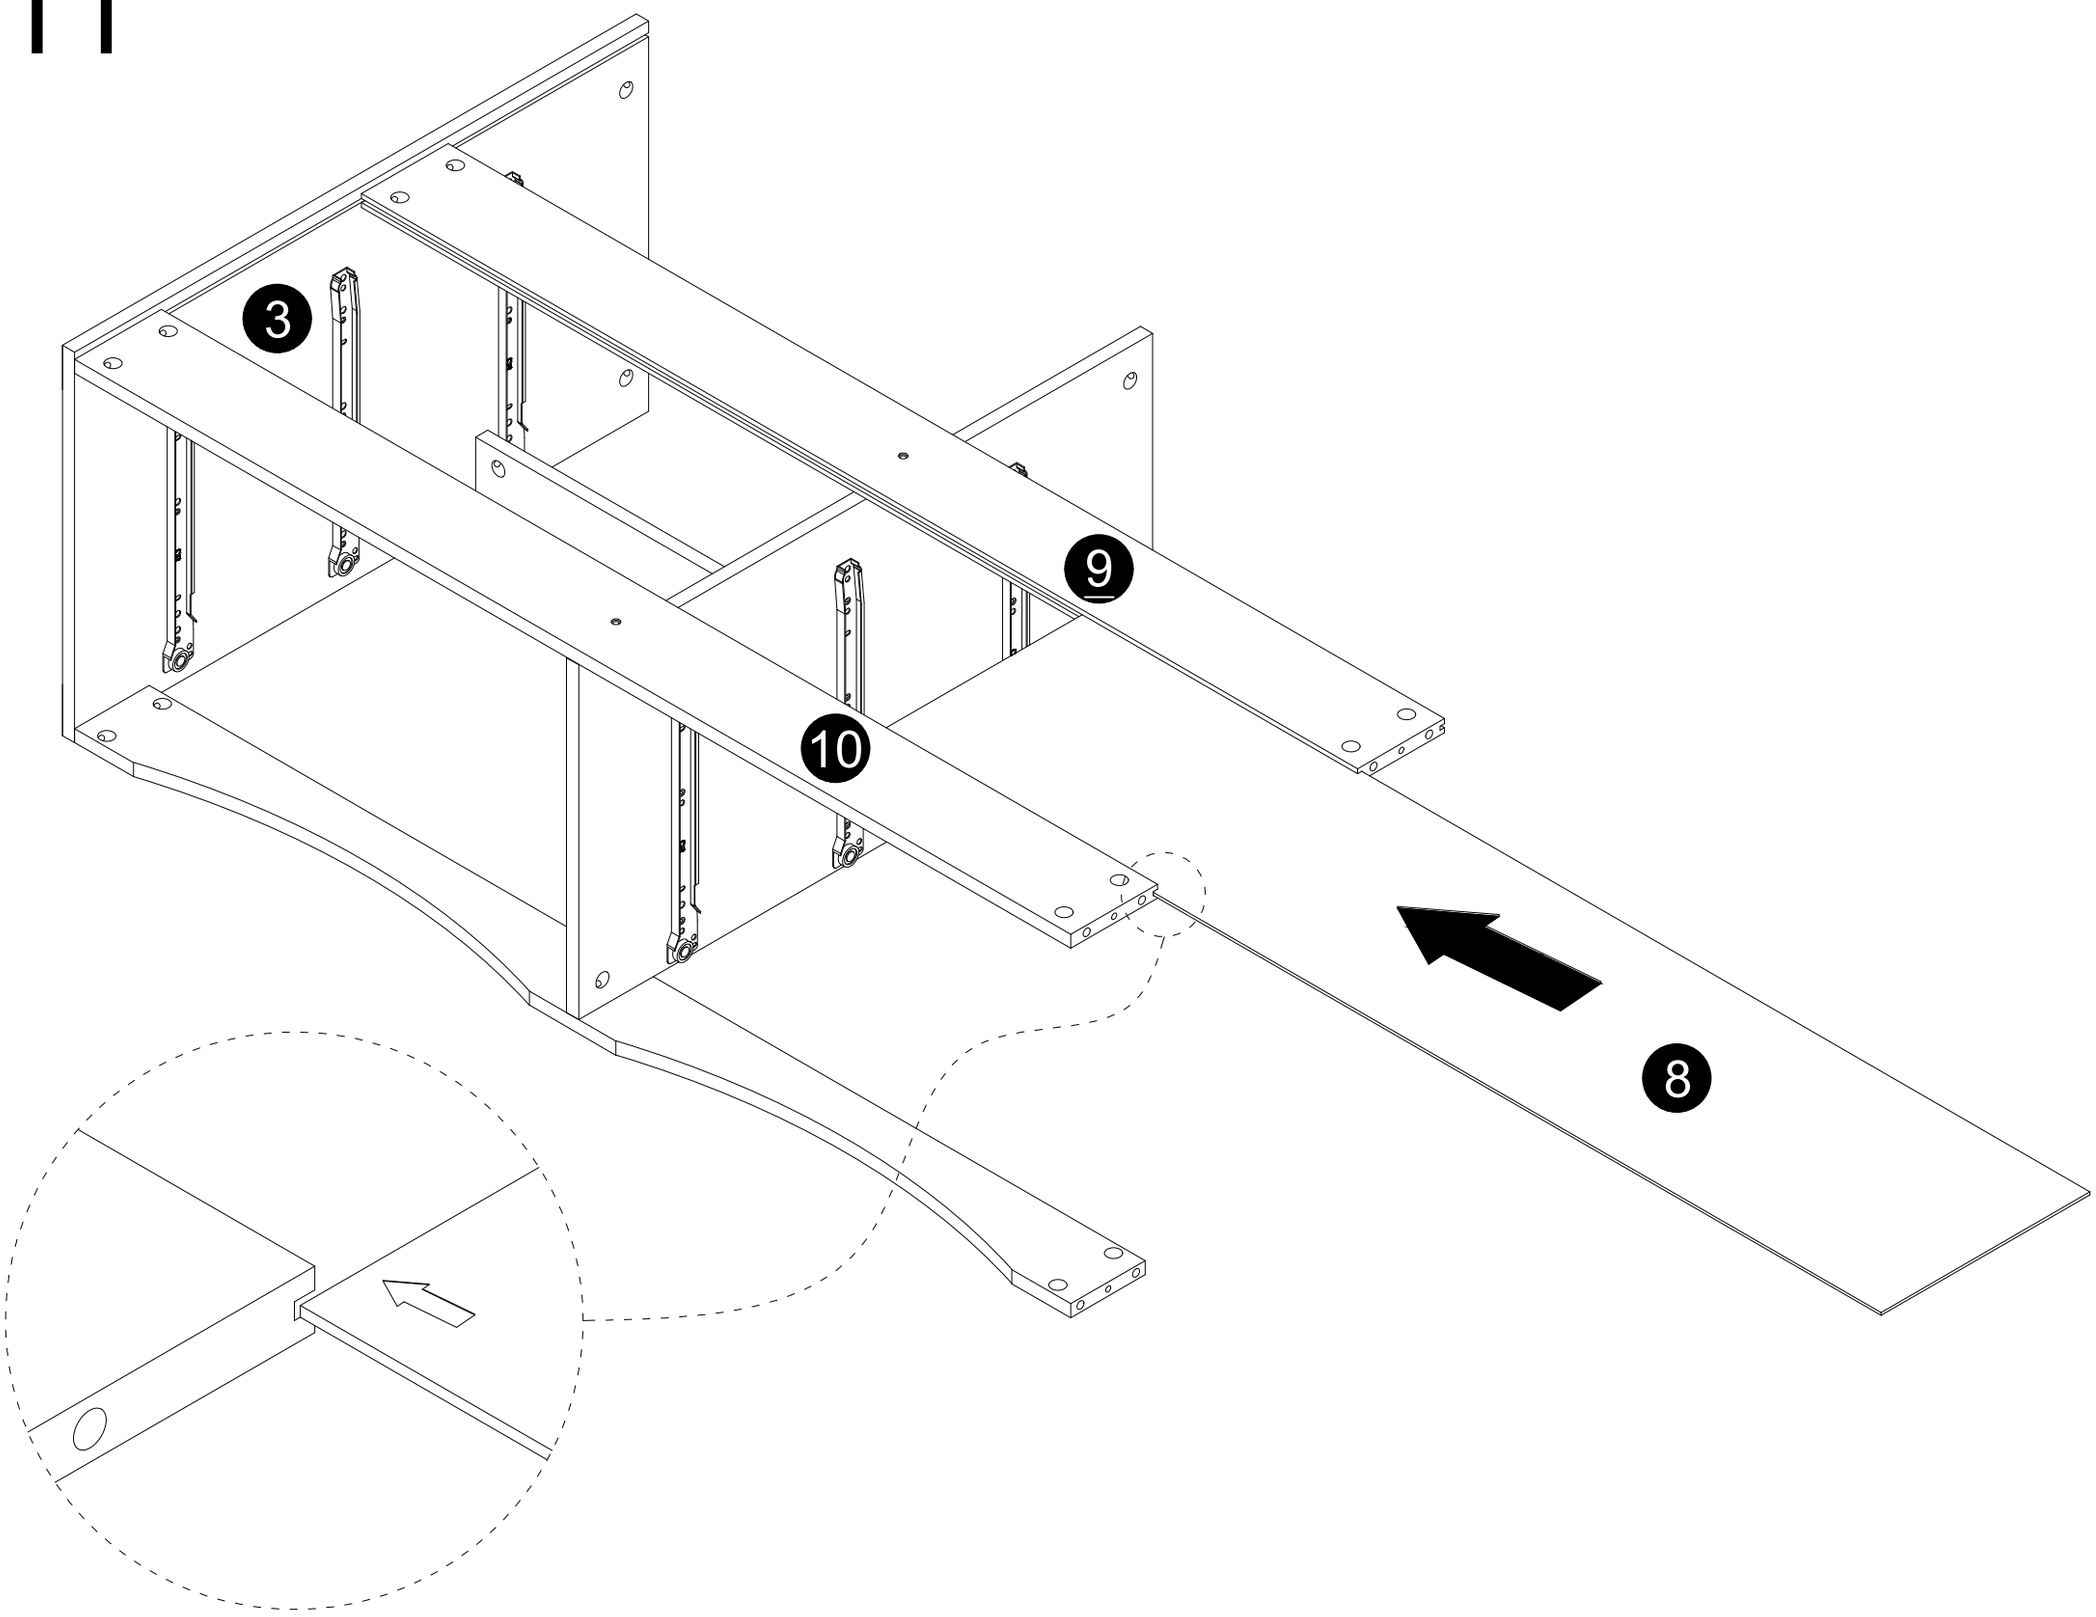

STEP 12

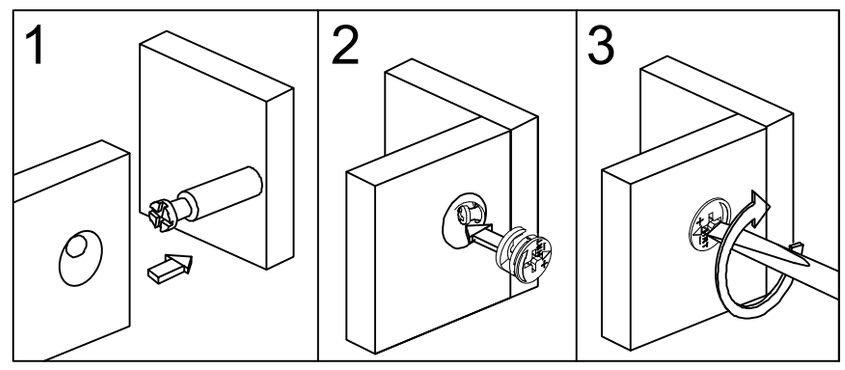


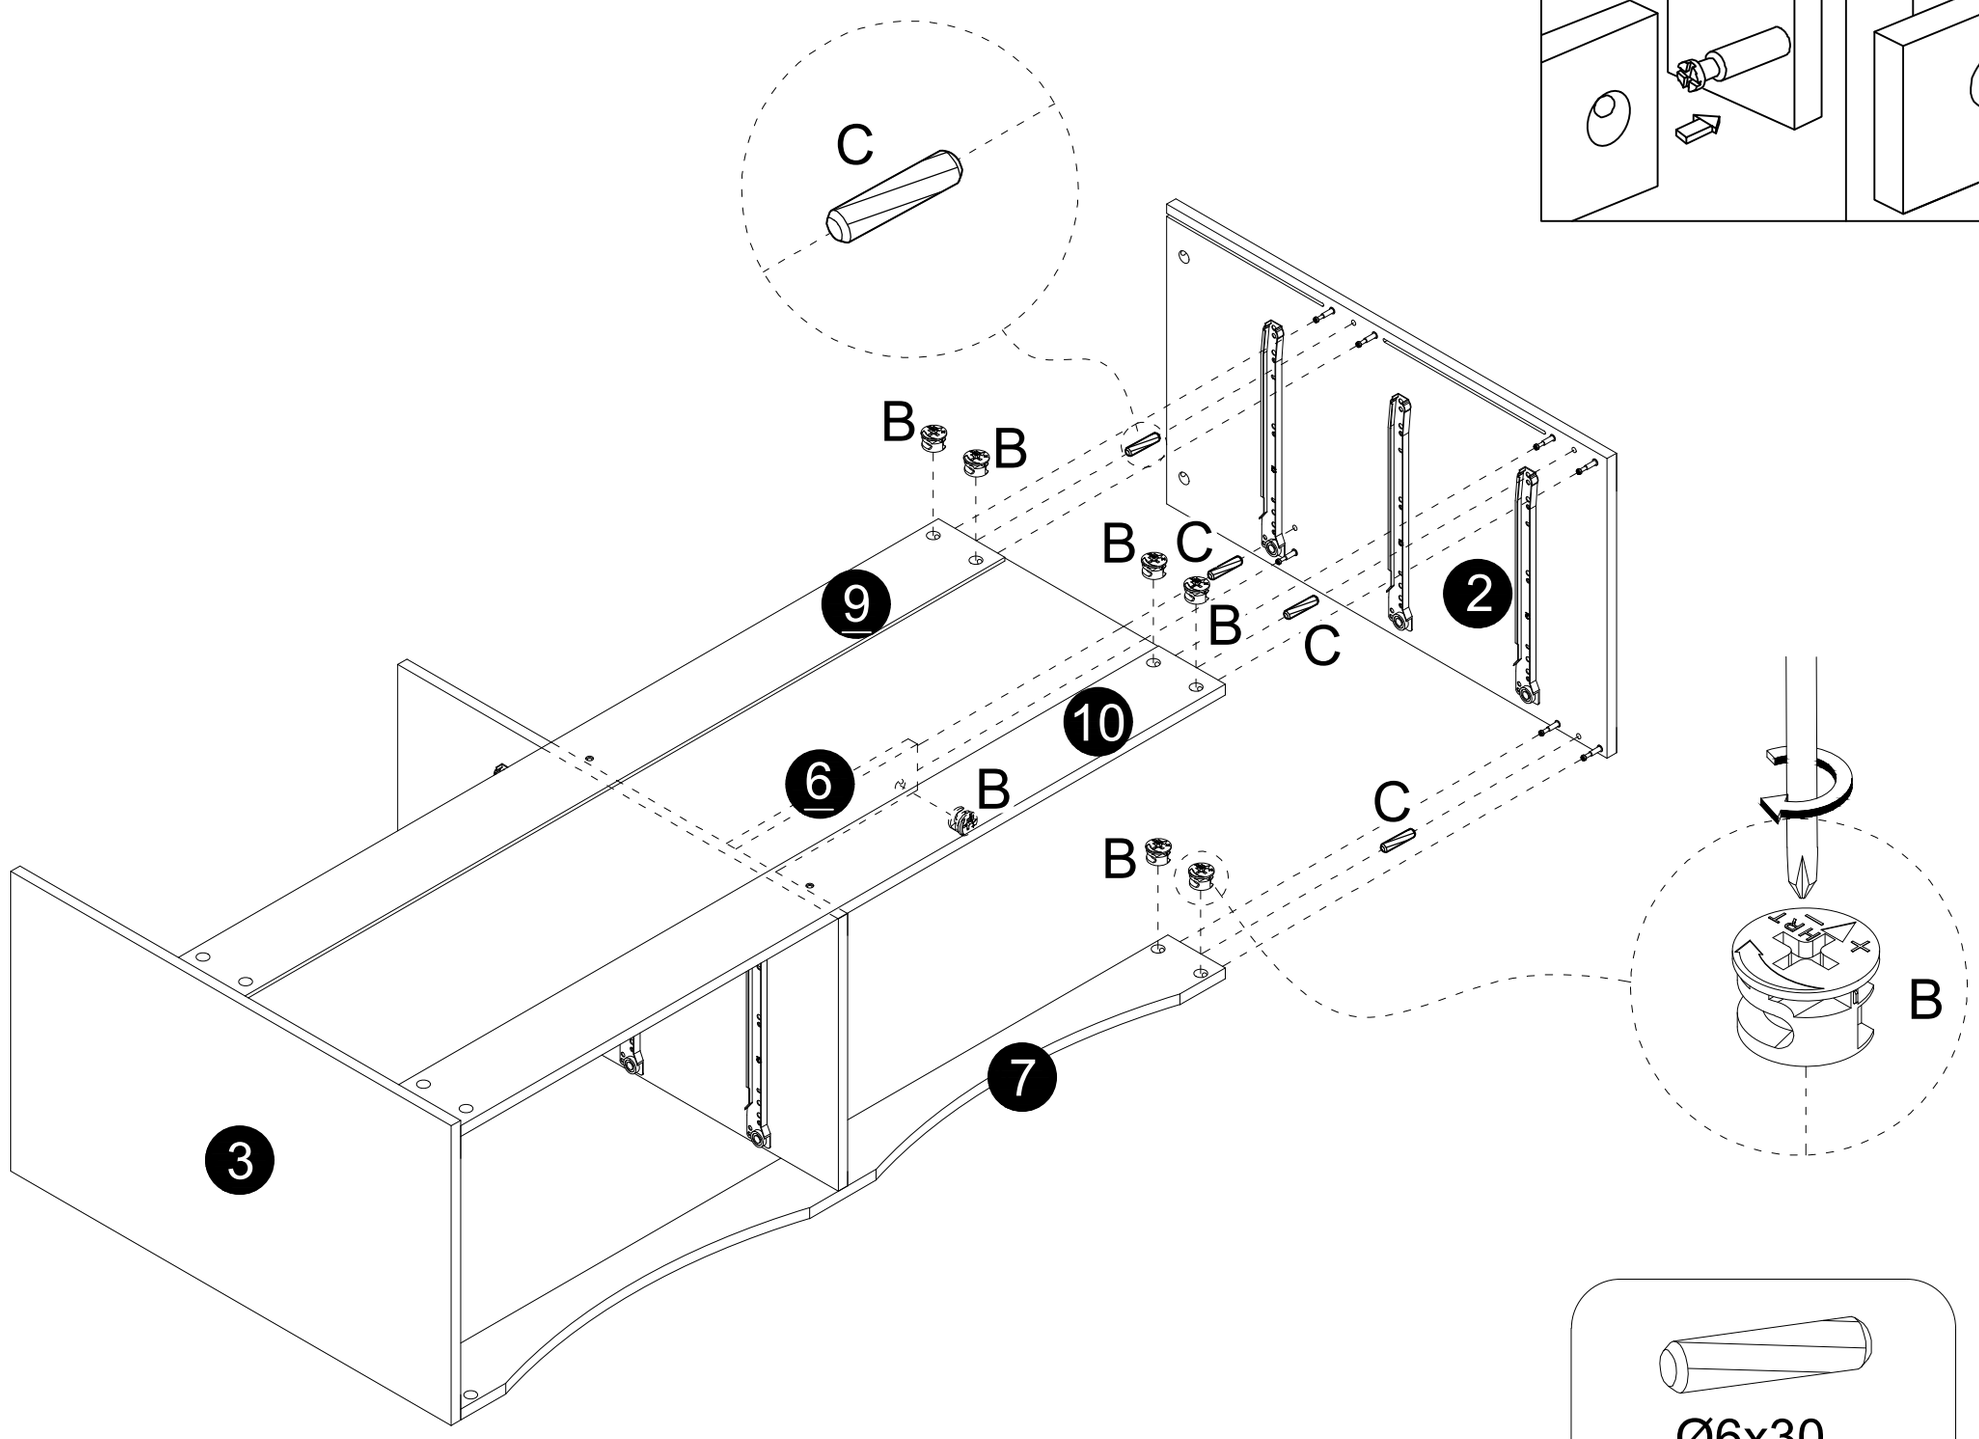


Ø6x30	
C	x 4

Ø15x9.5	
B	x 7

STEP 13

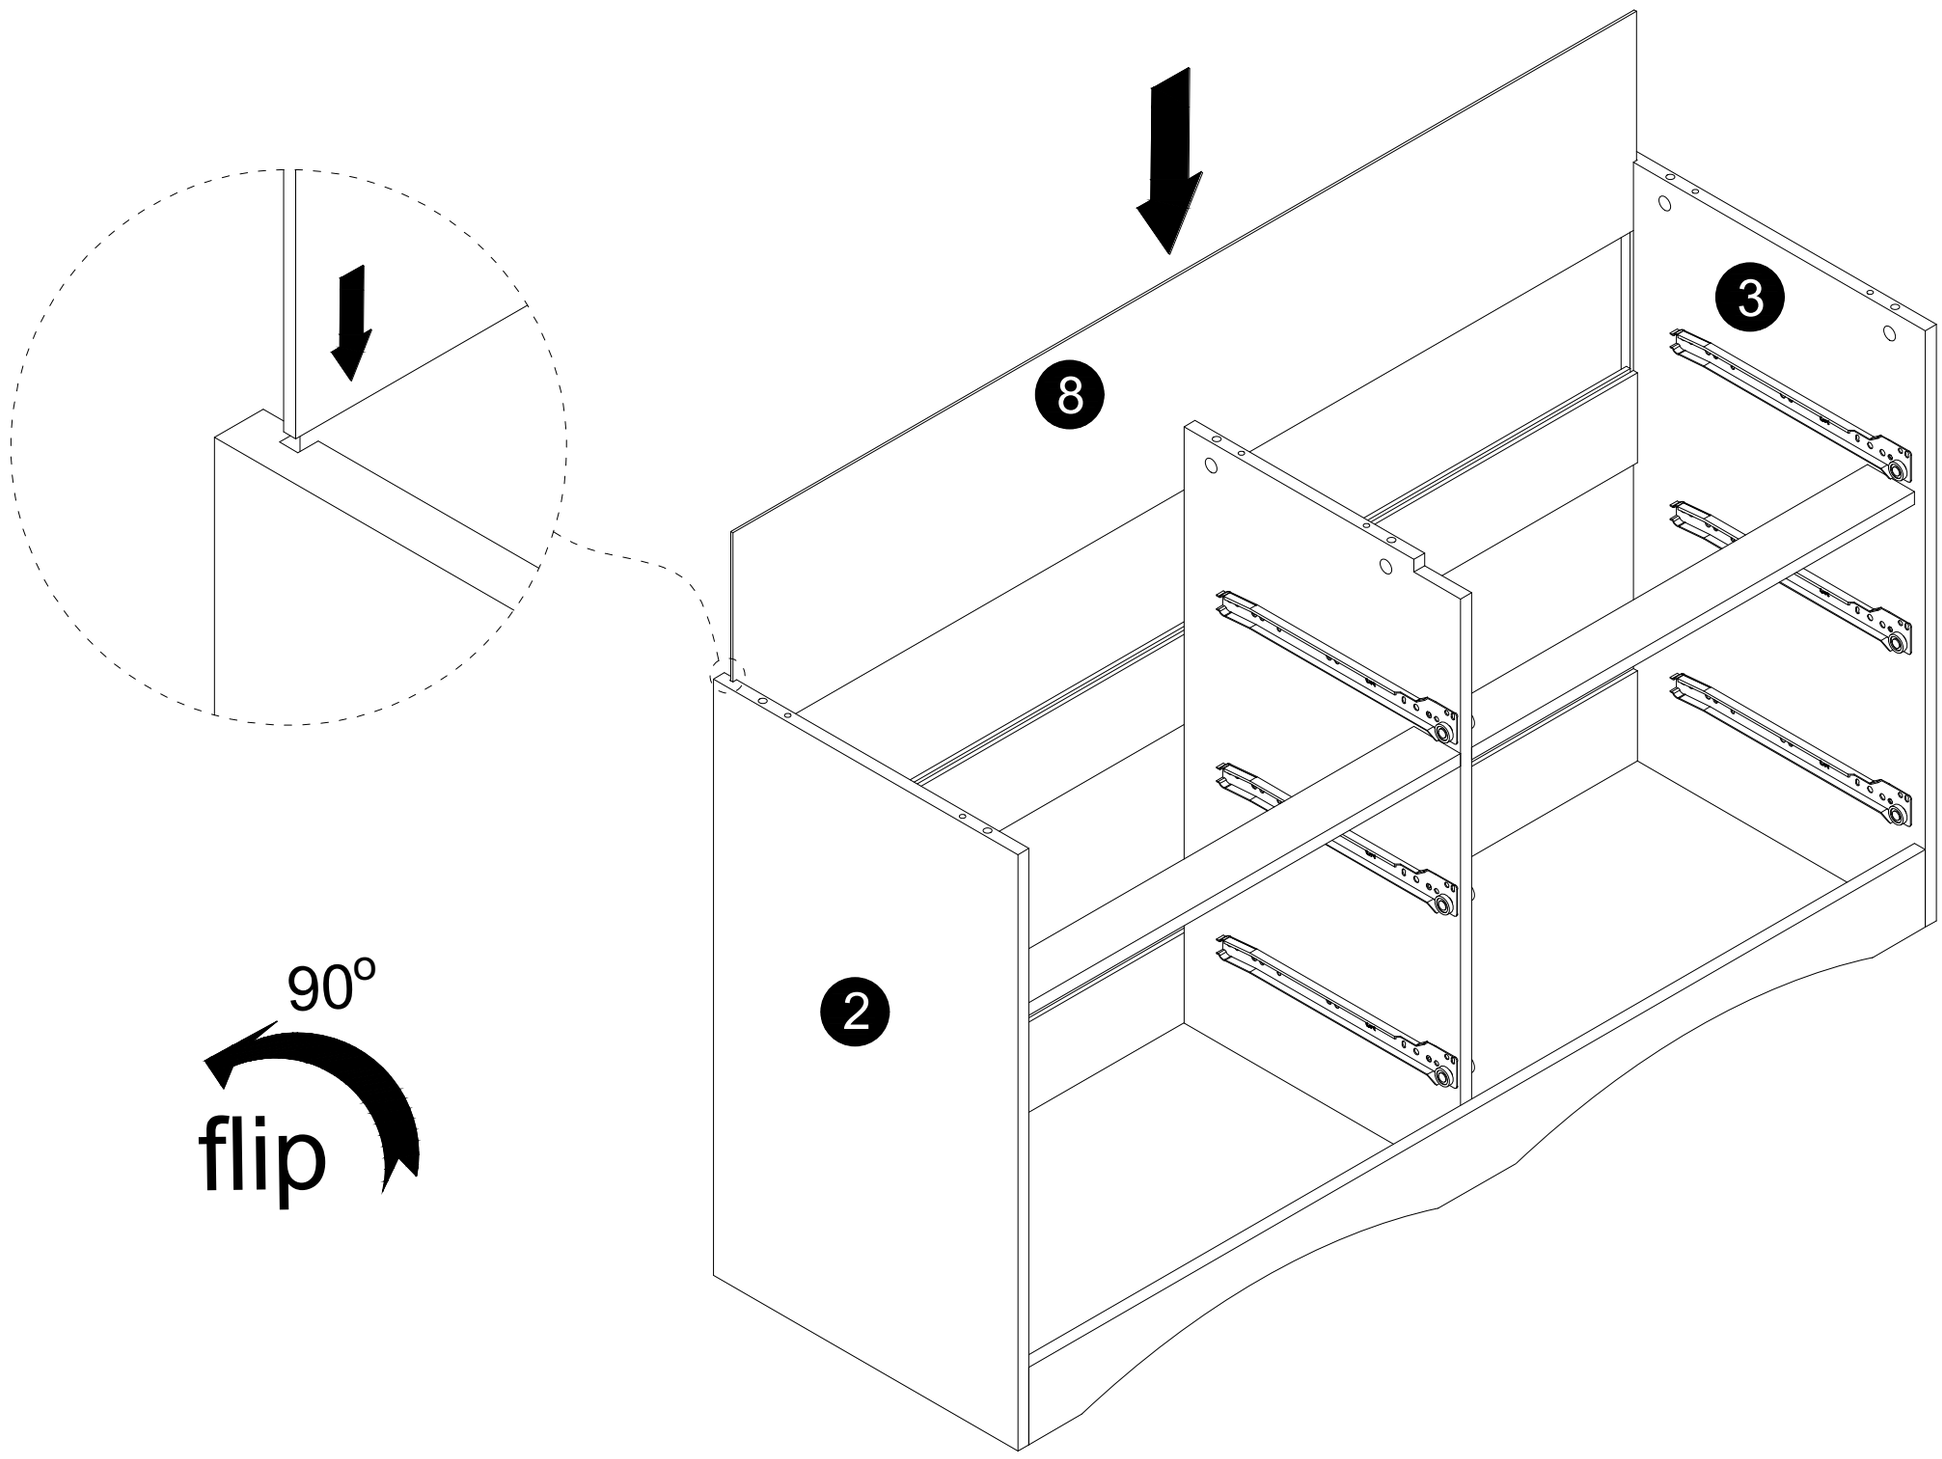


STEP 14

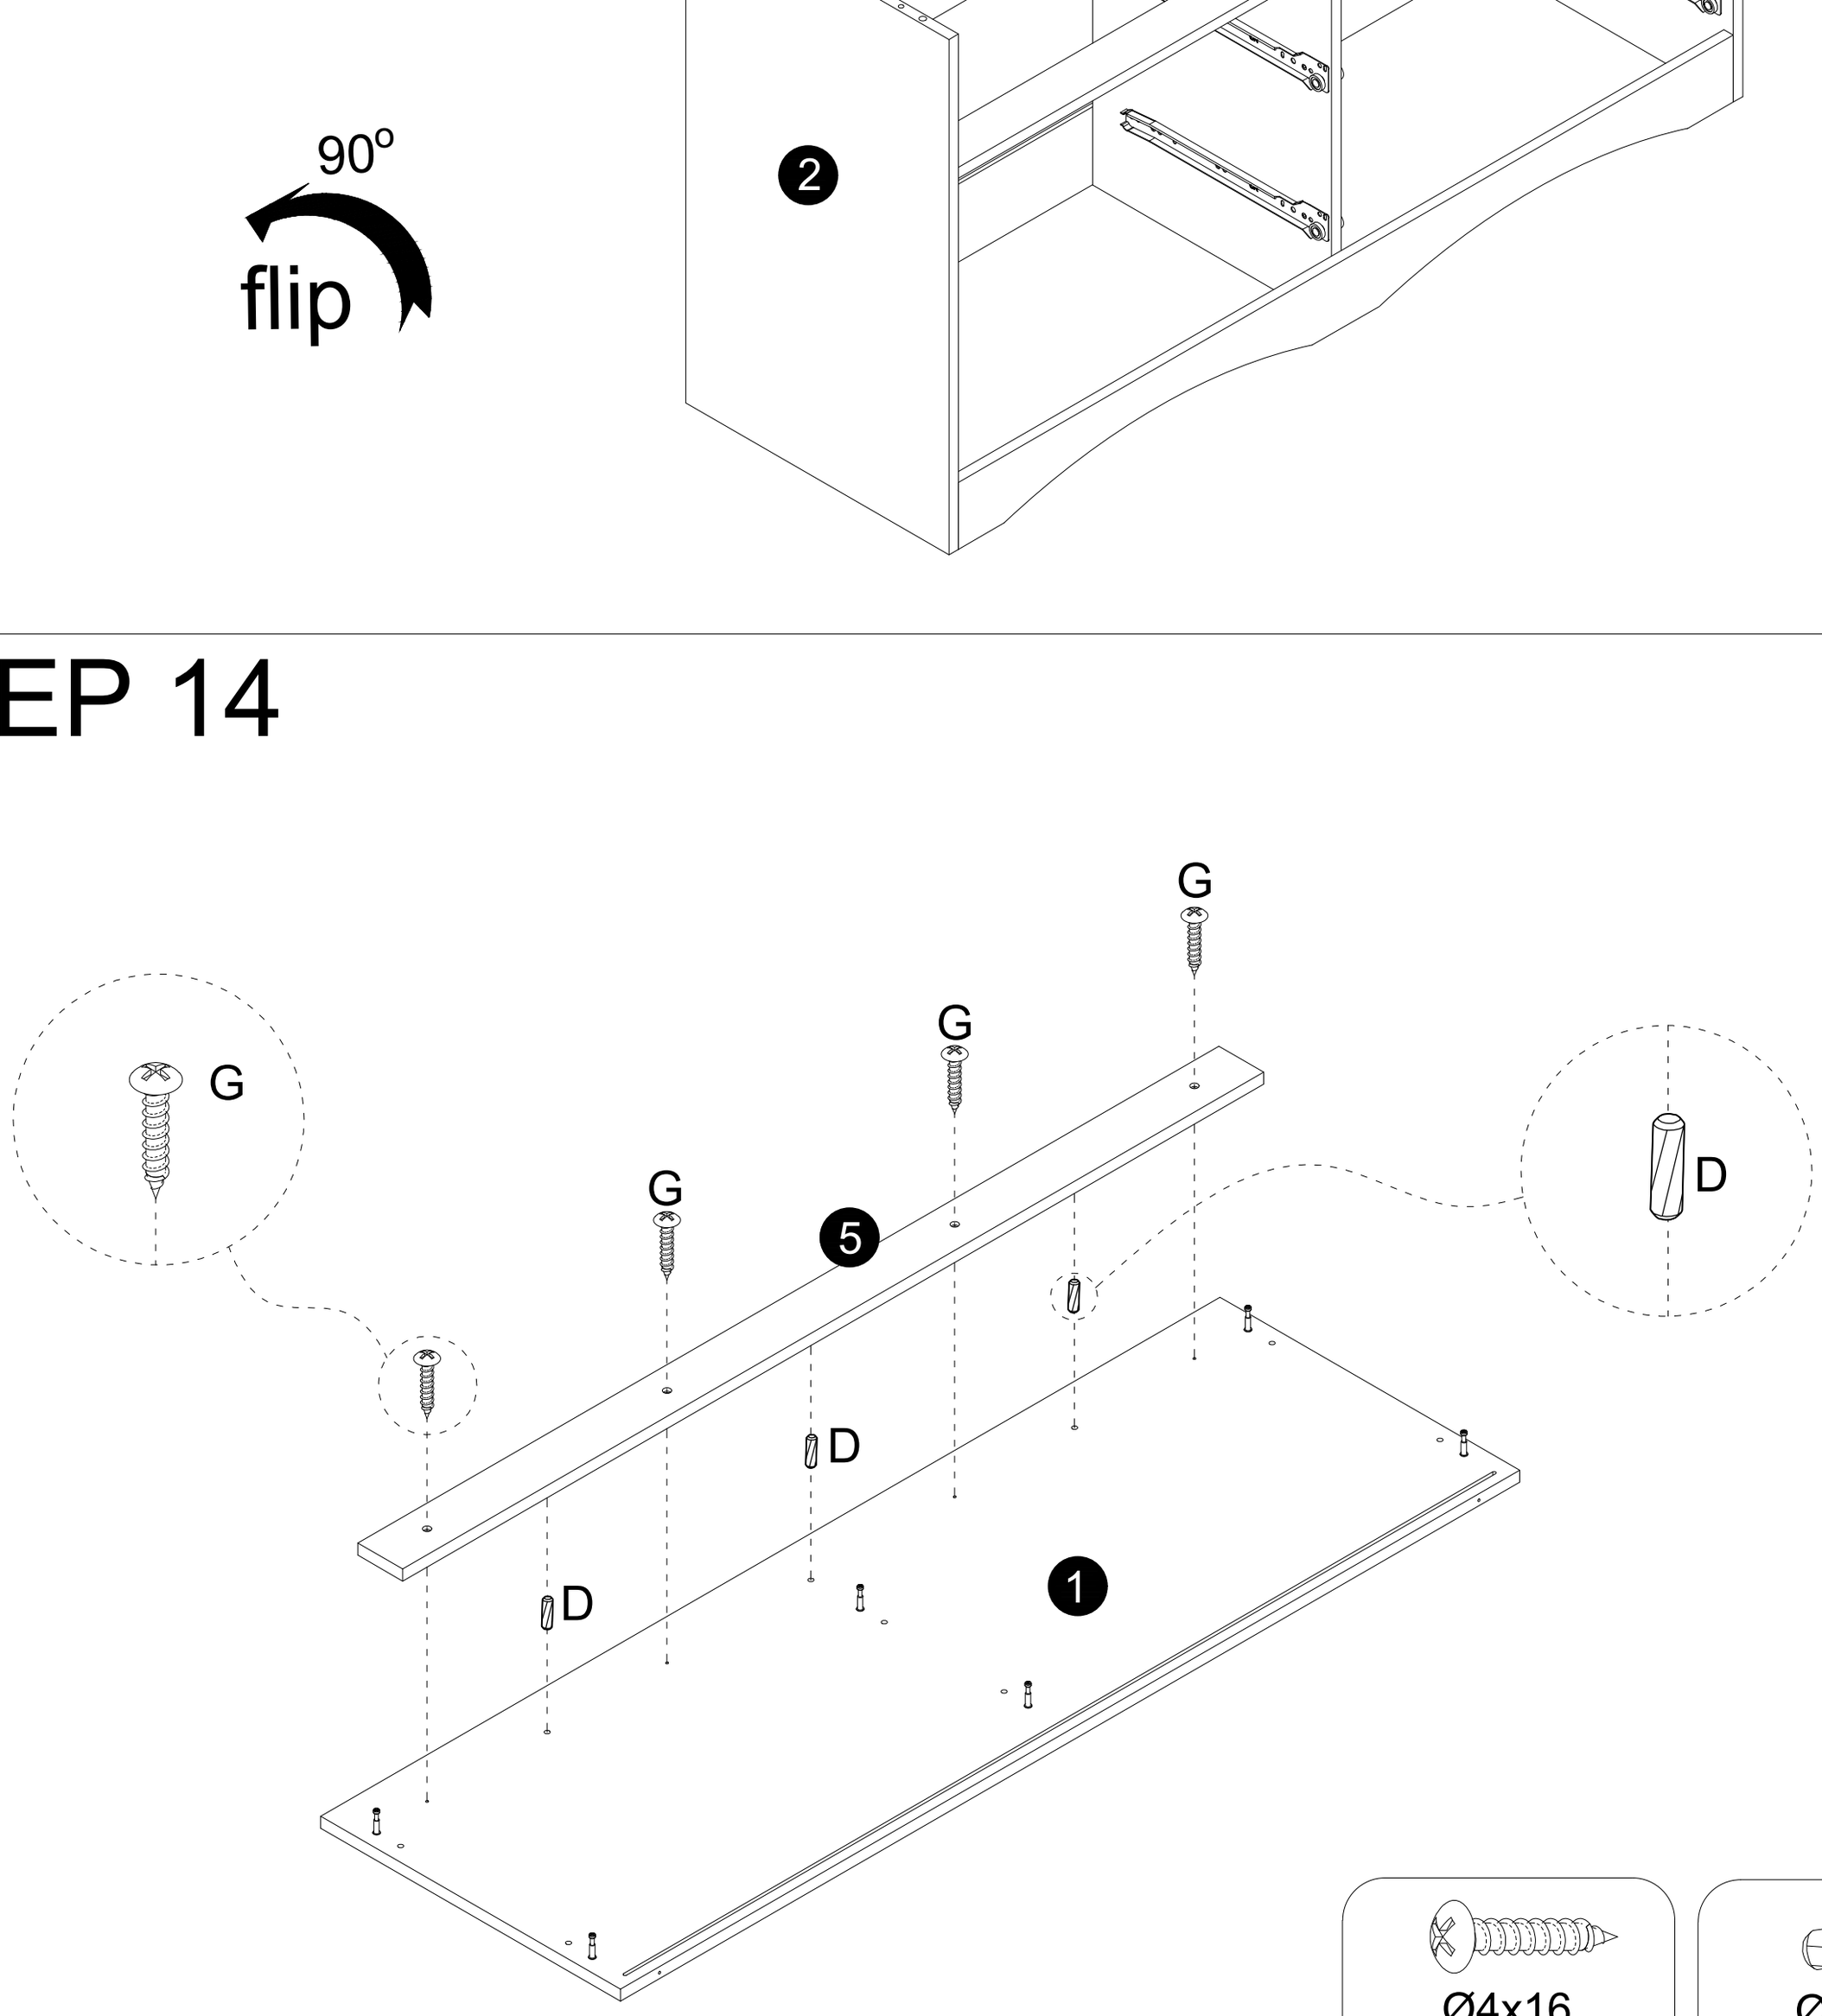

Ø4x16


G	x 4

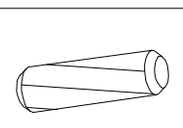



Ø6x20


D	x 3

STEP 15

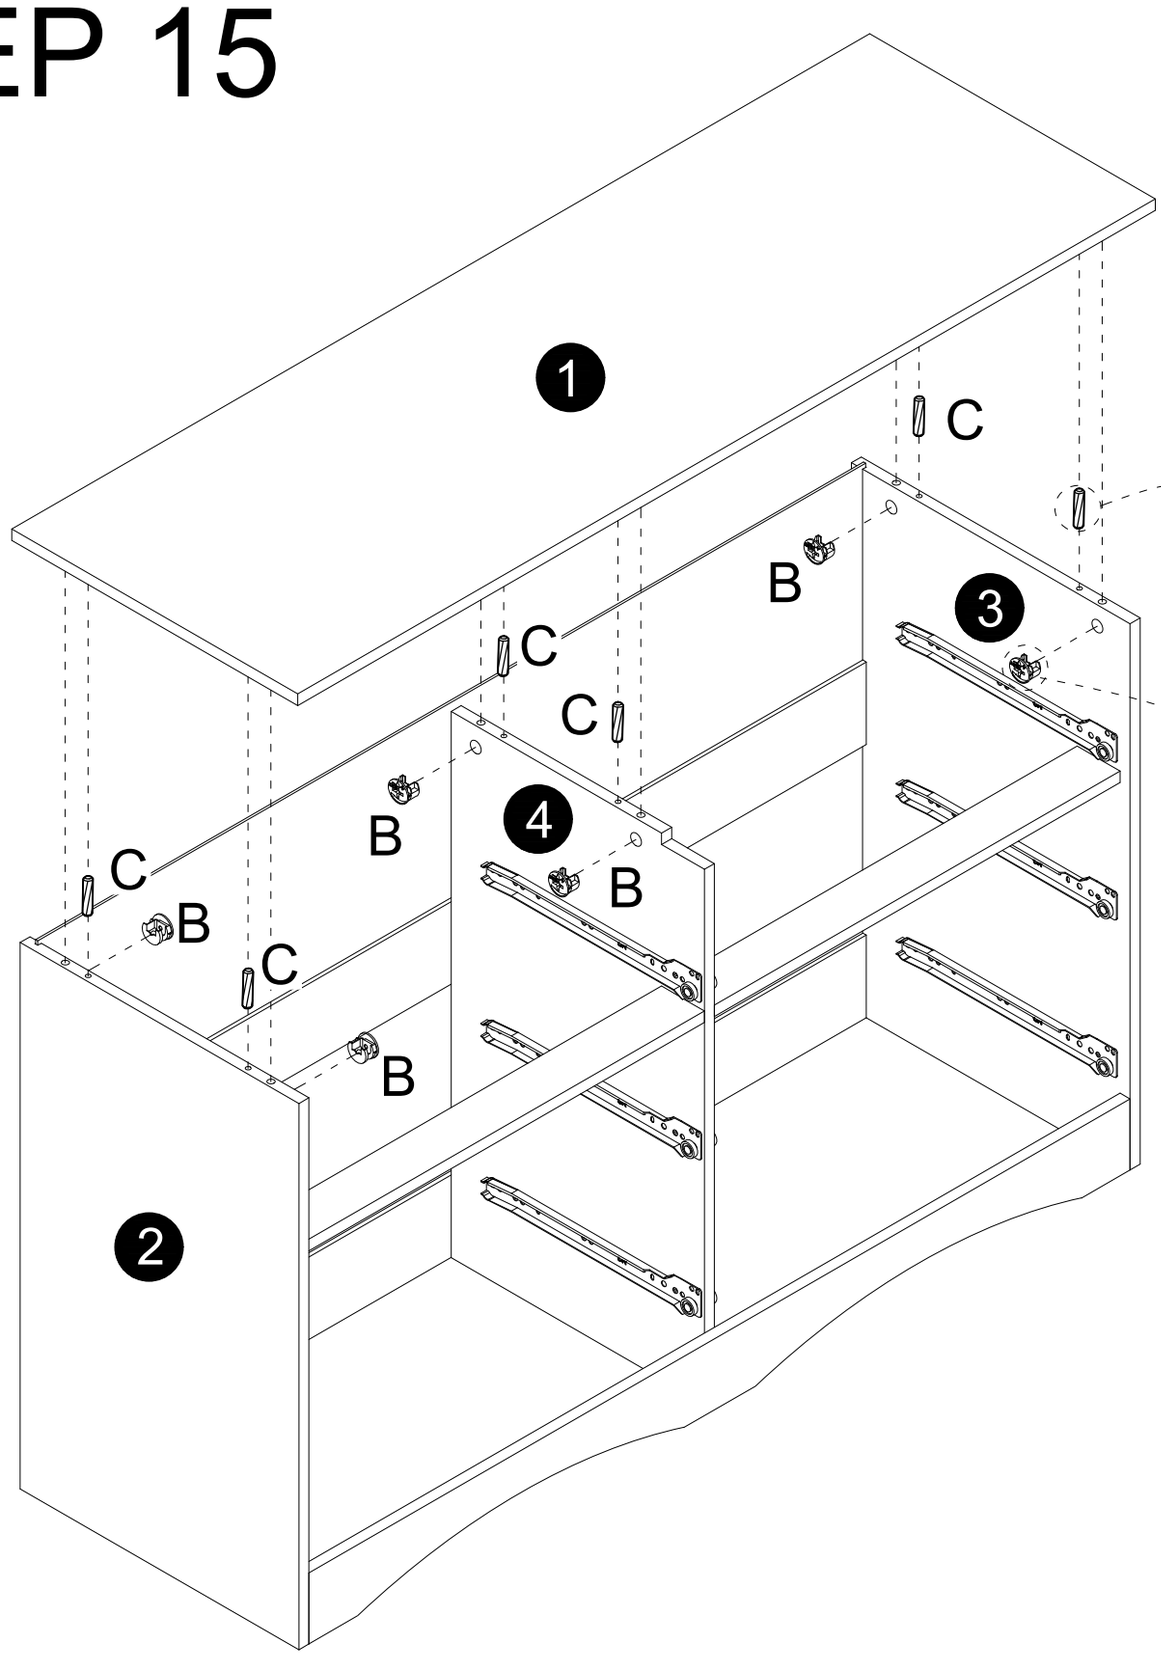

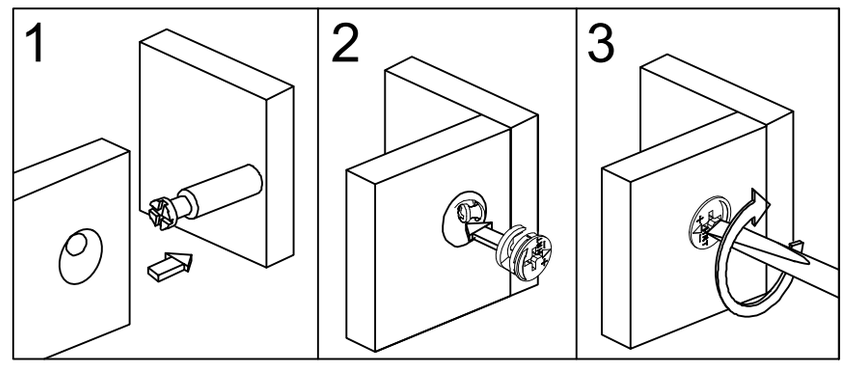


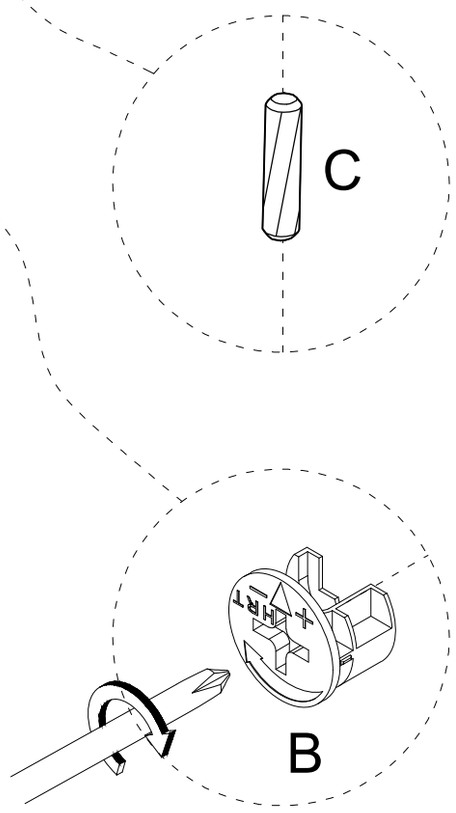

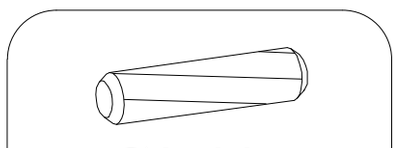

Ø6x30


C	x 6





Ø15x9.5

B	x 6

STEP 16

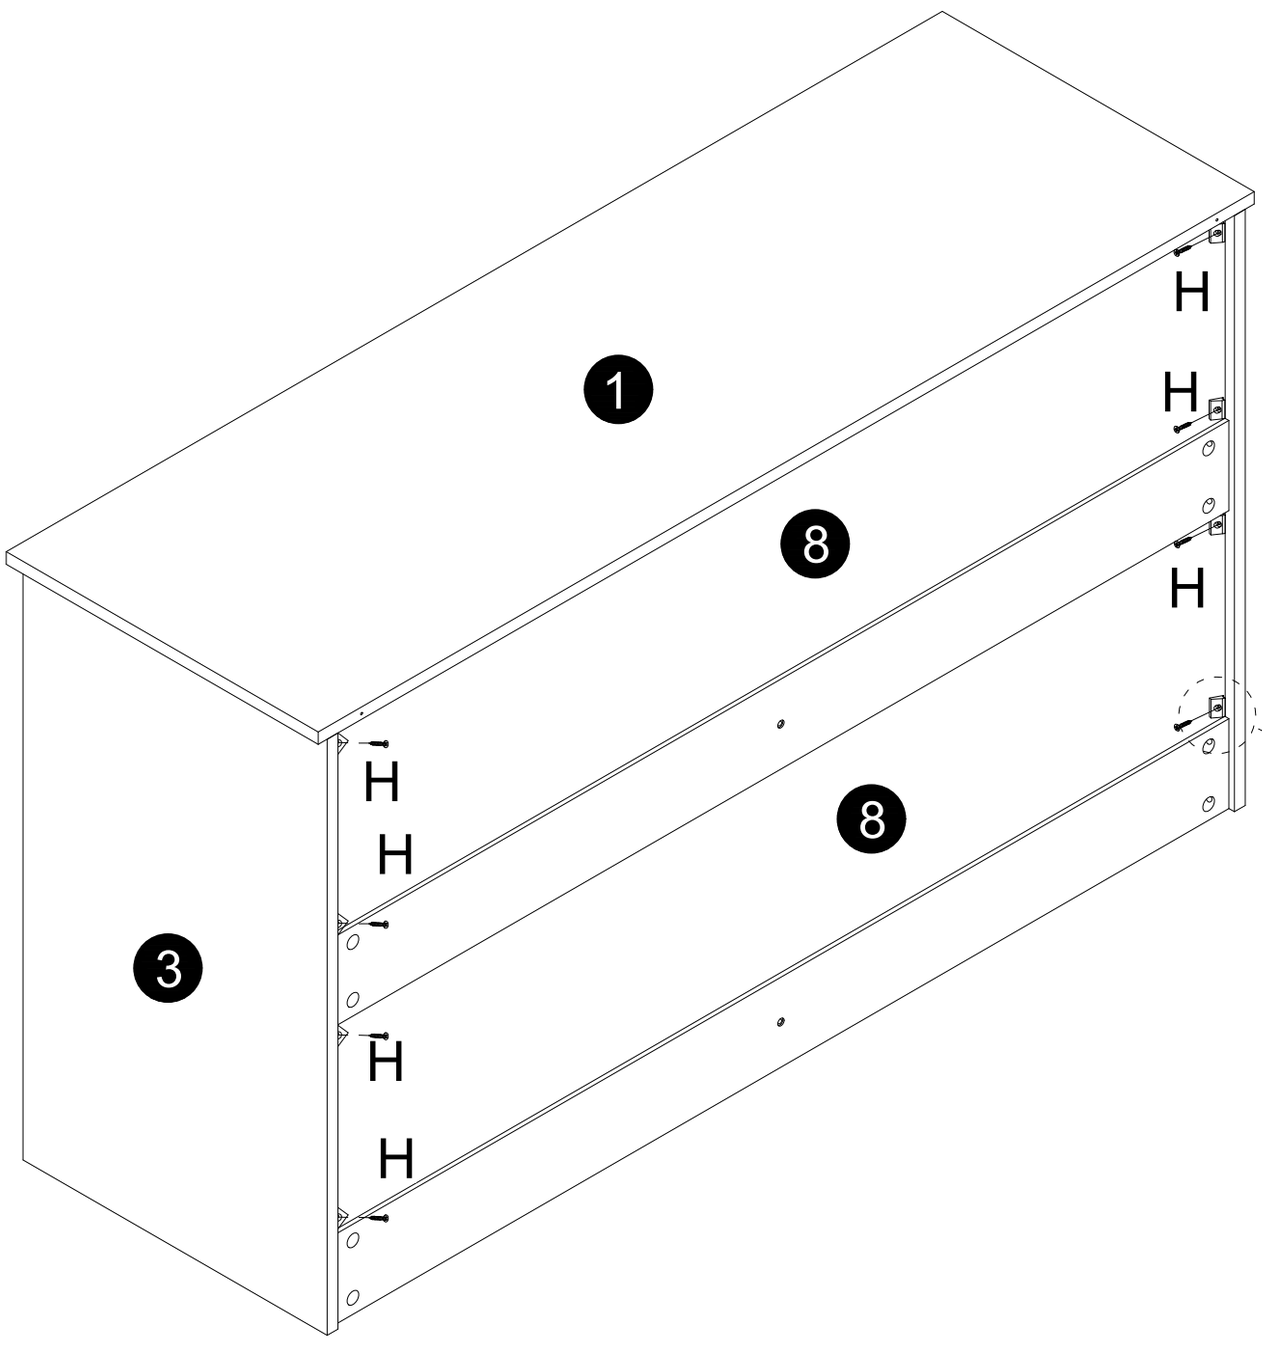

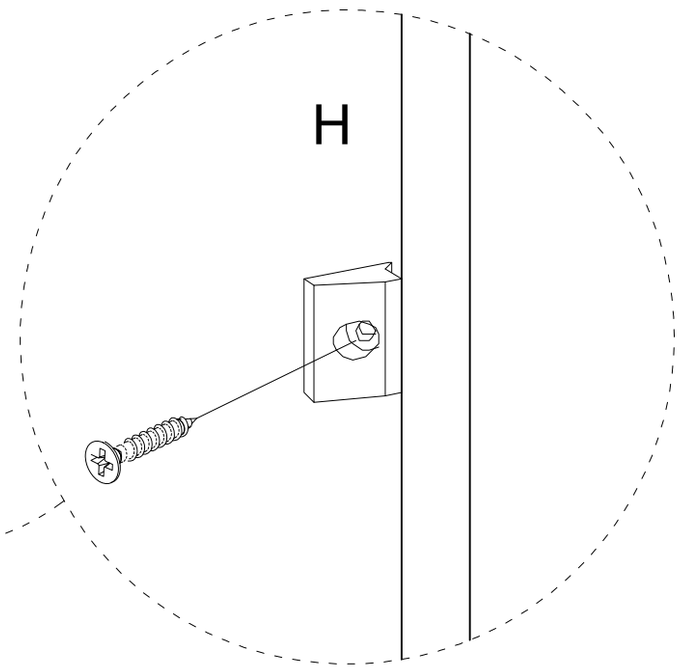


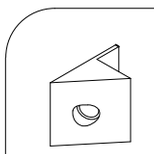

Ø3x17


H	x 8

STEP 17

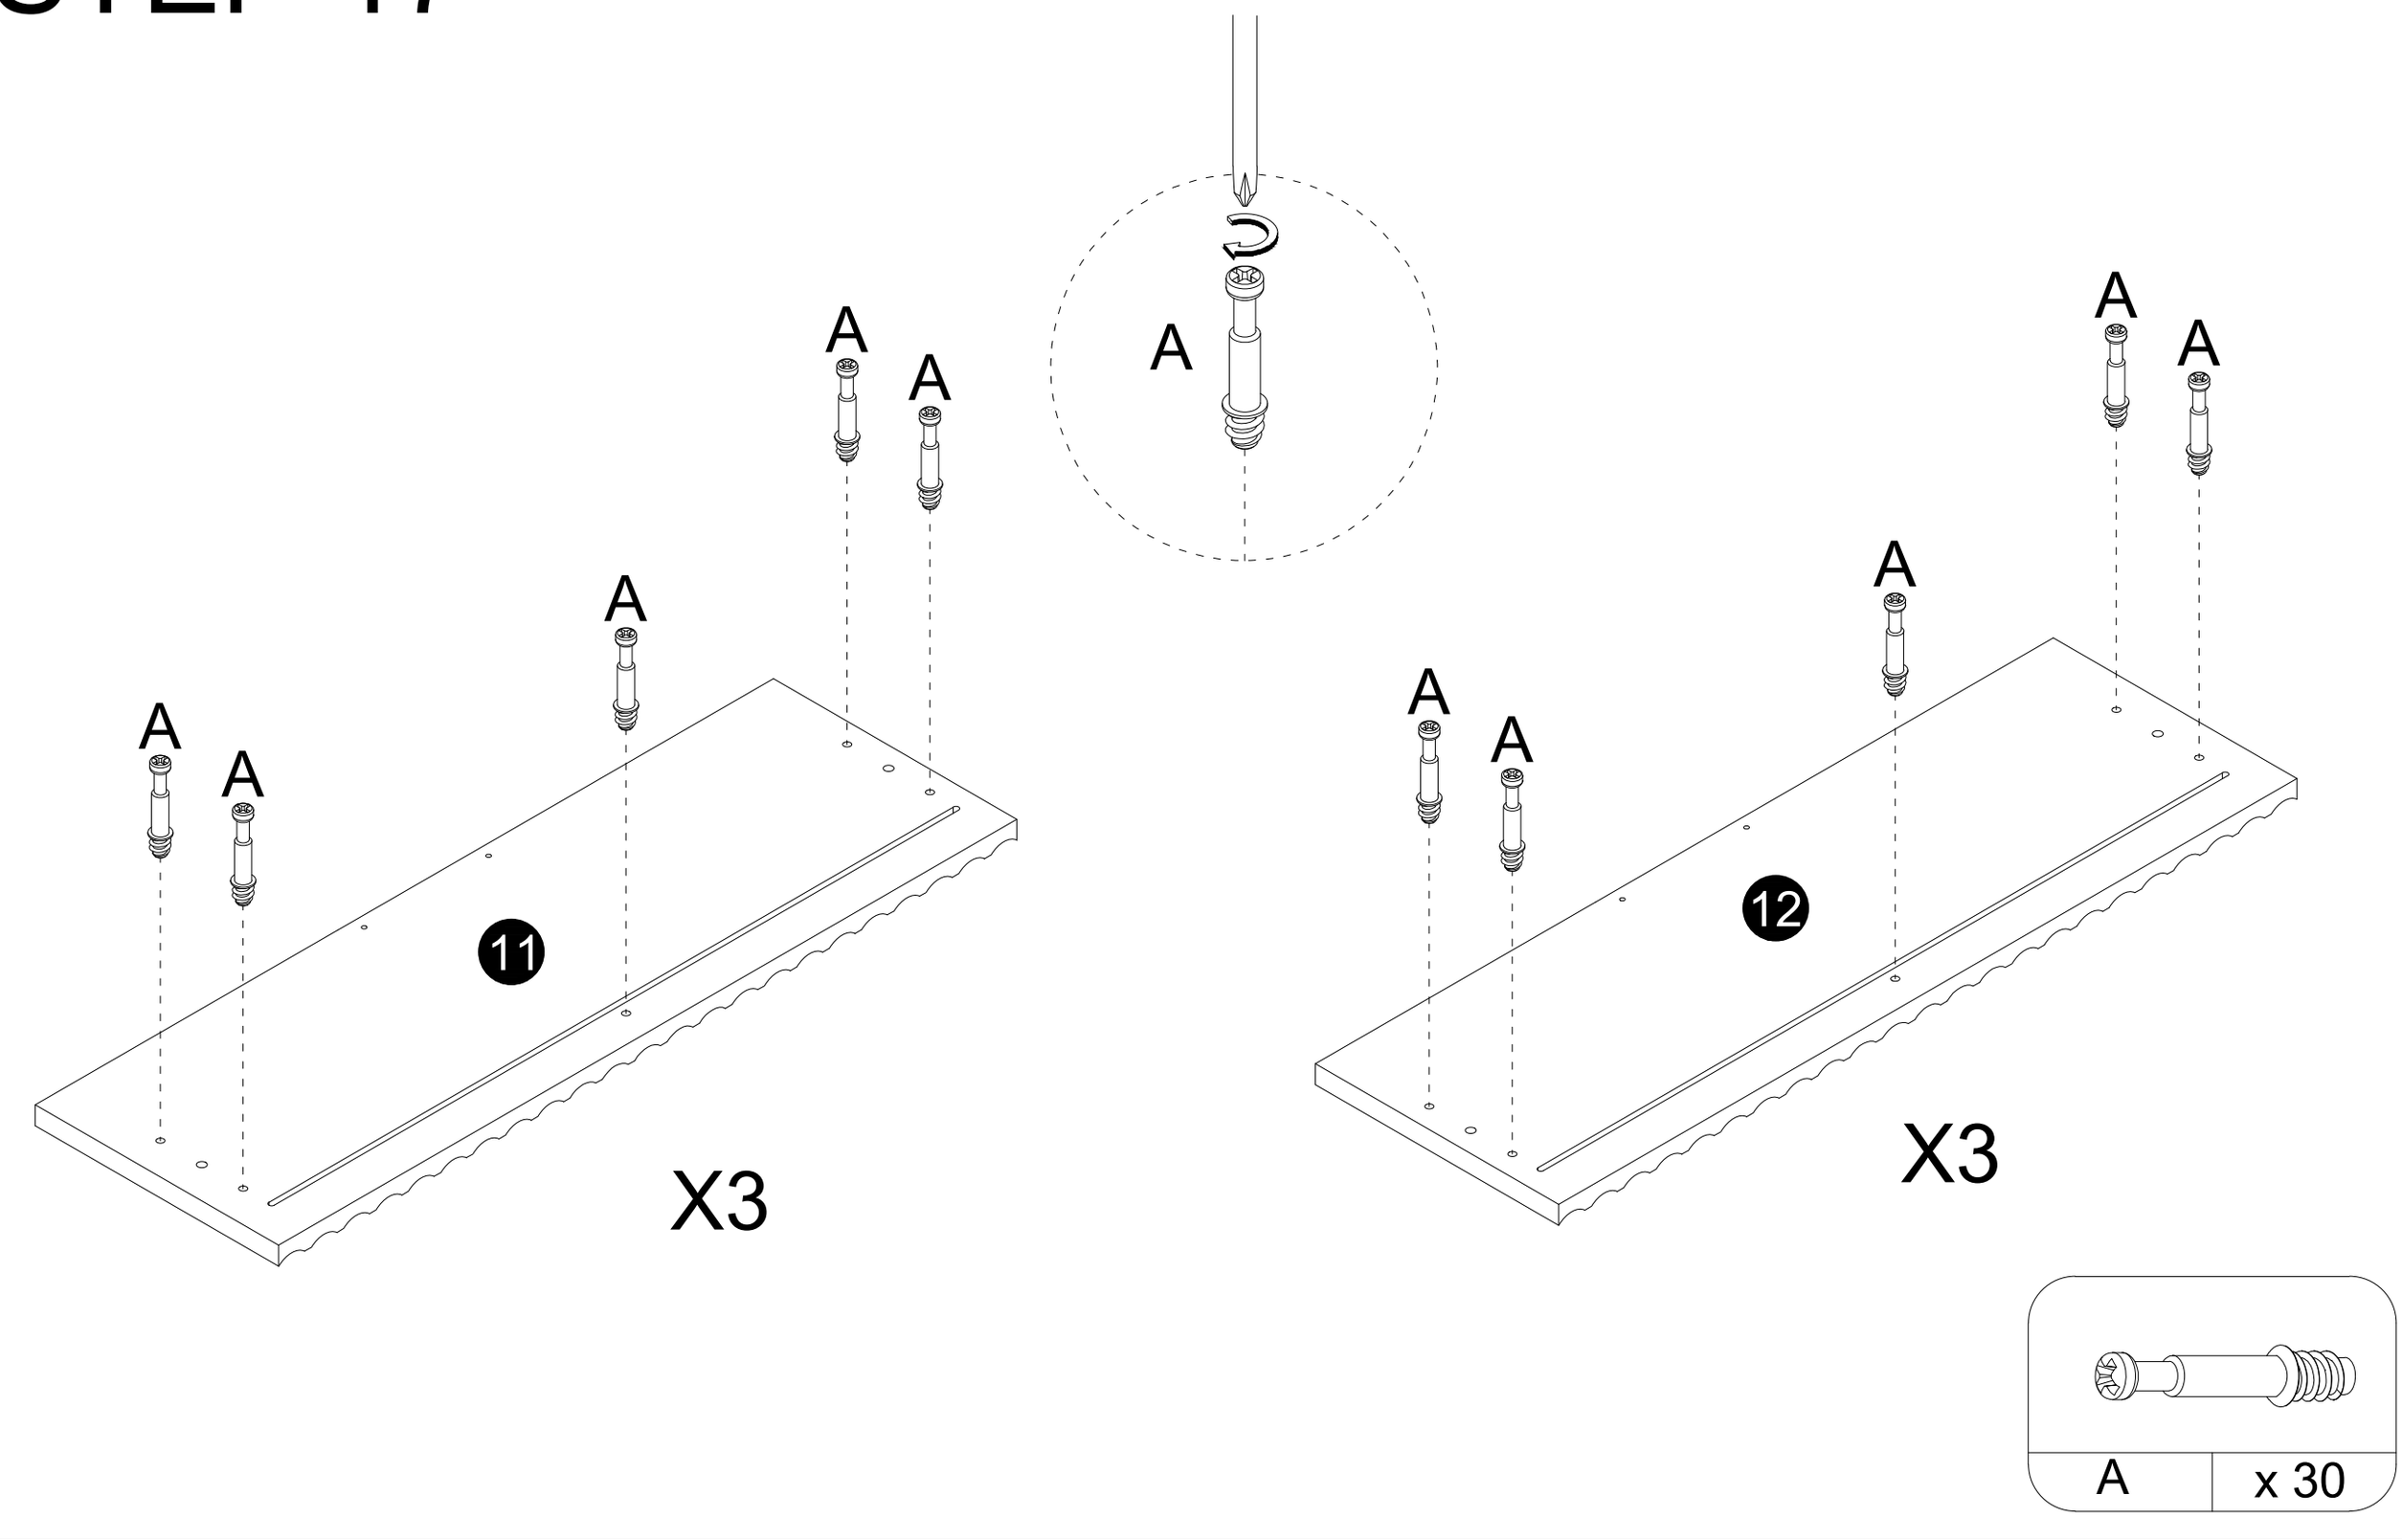

A	x 30


STEP 18

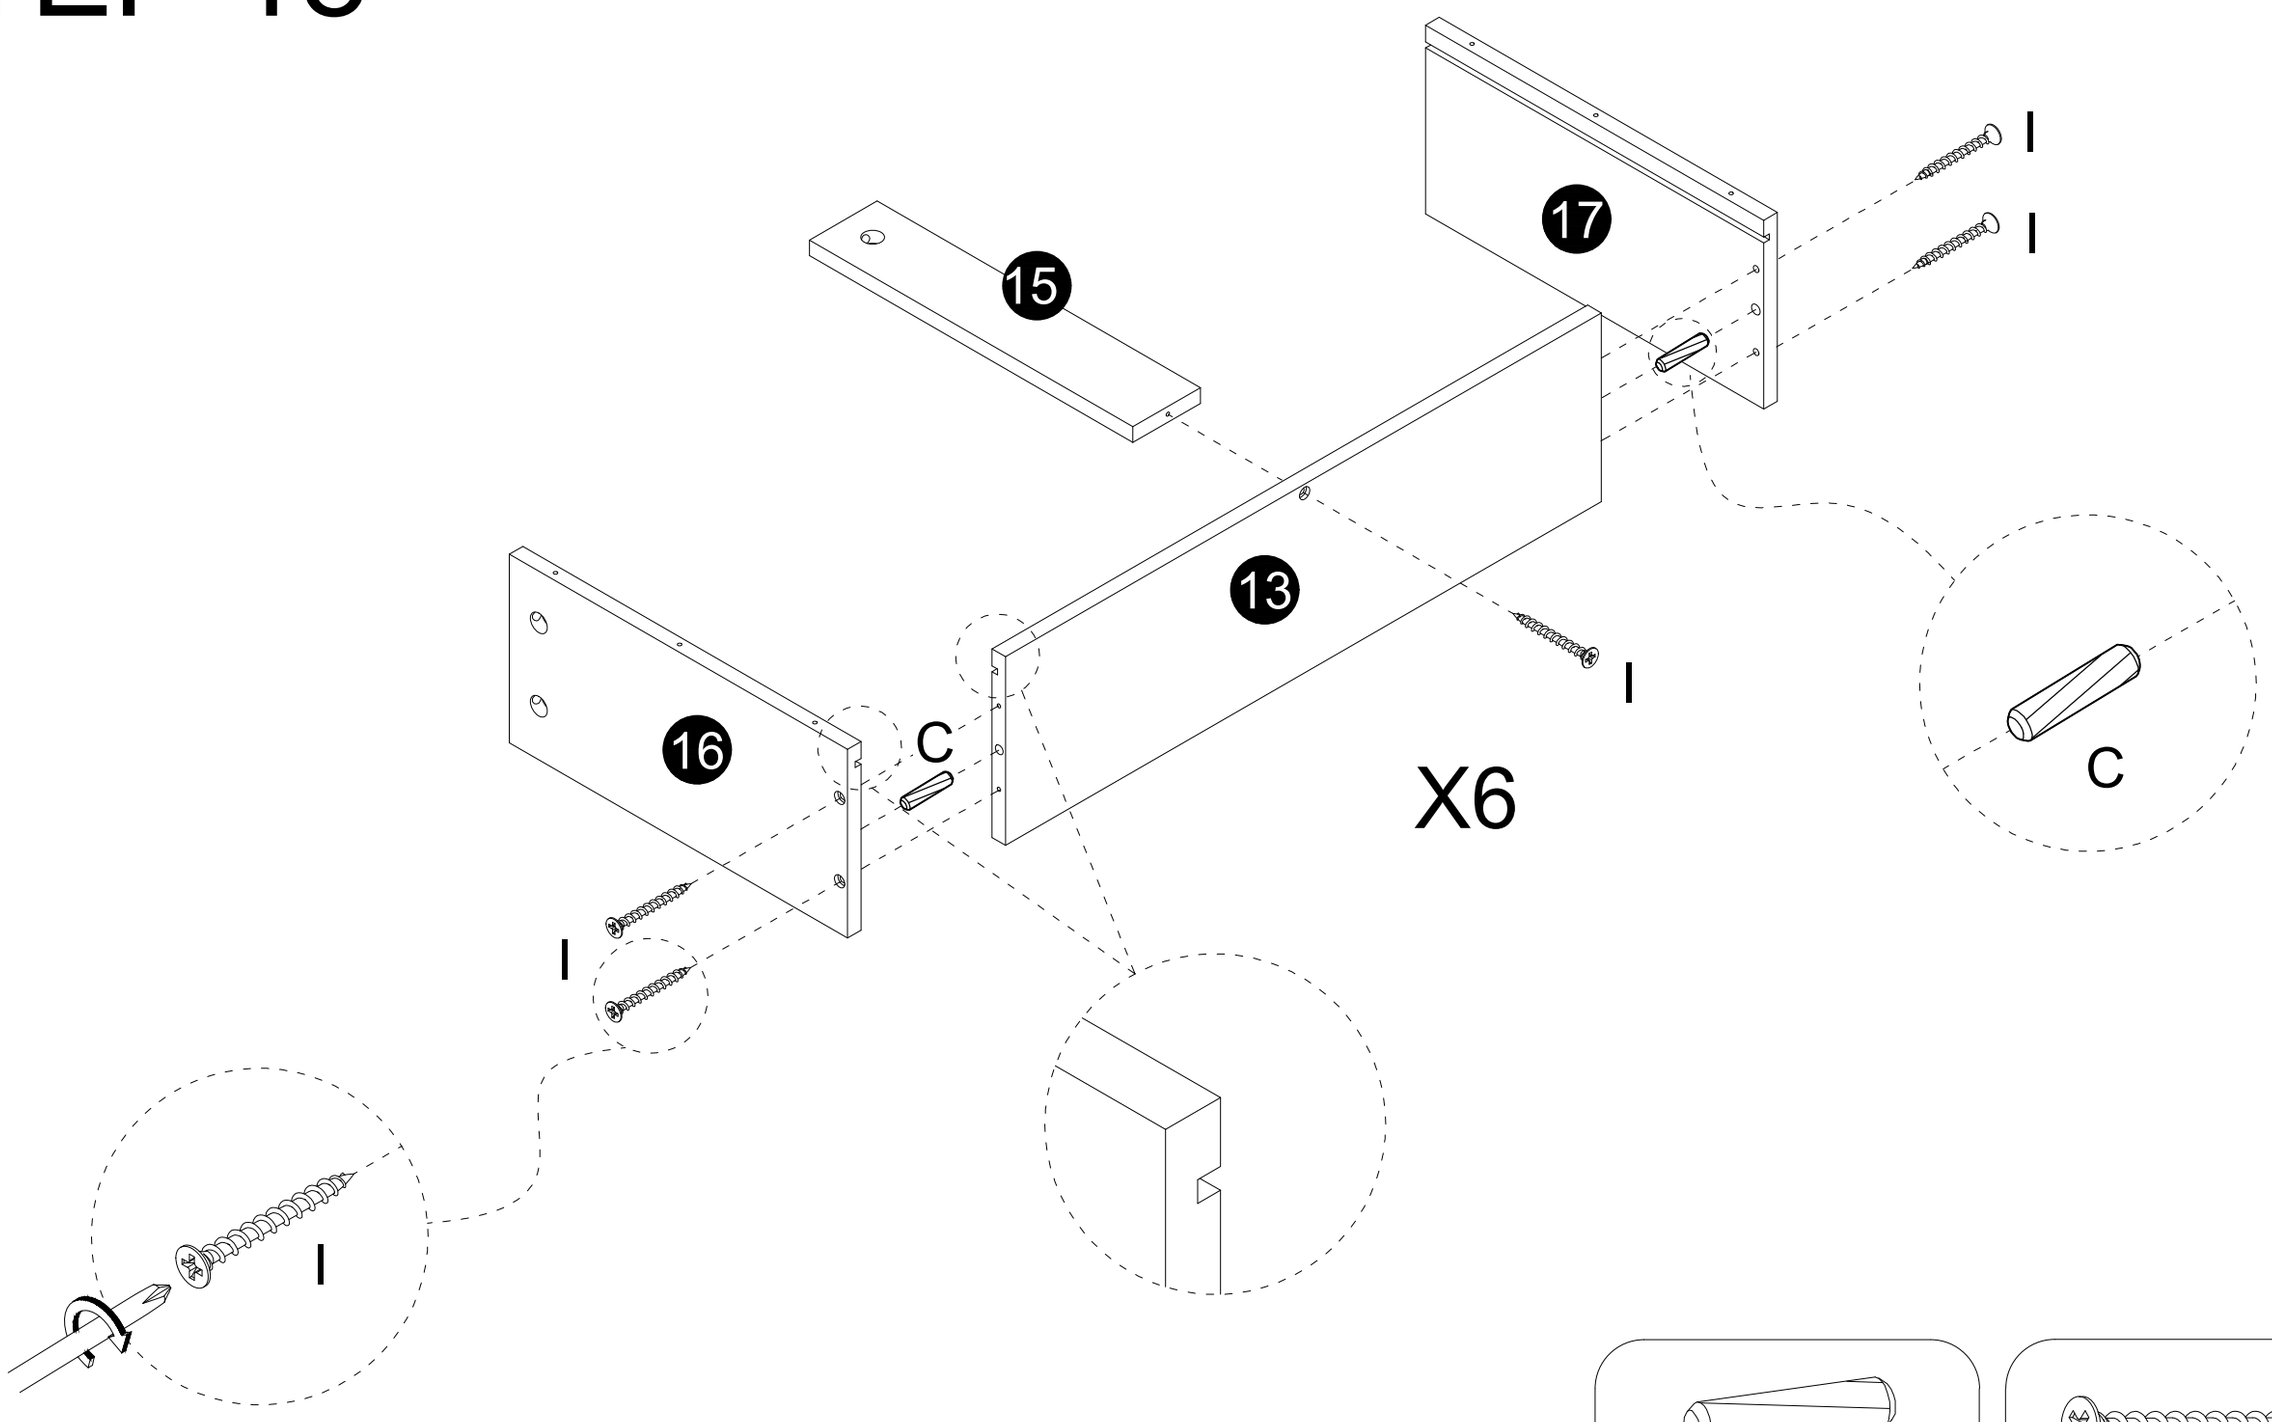

Ø6x30	
C	x12


Ø4x35	
I	x 30


STEP 19

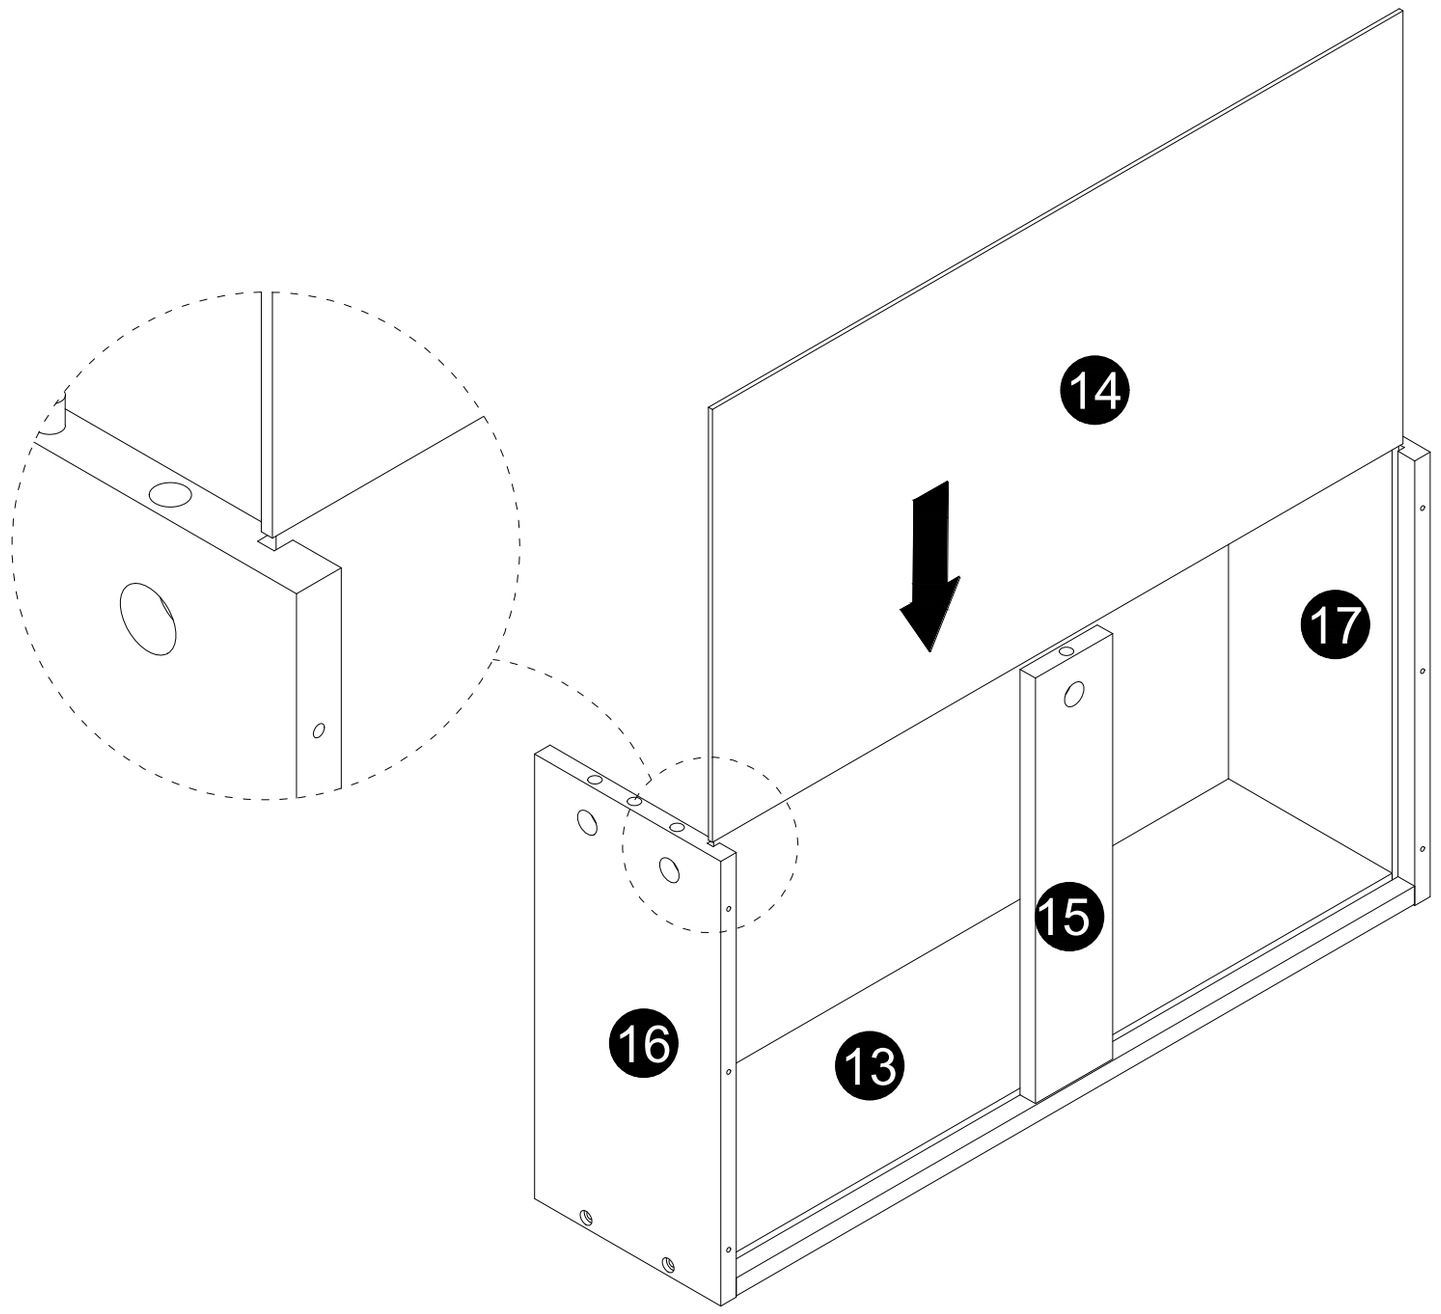


X6

STEP 20

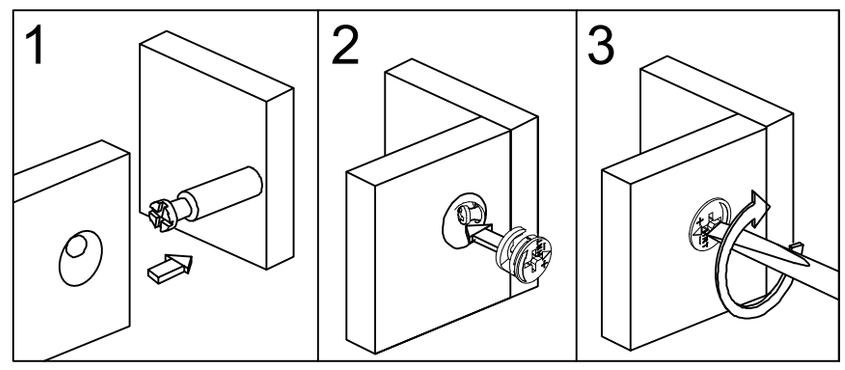


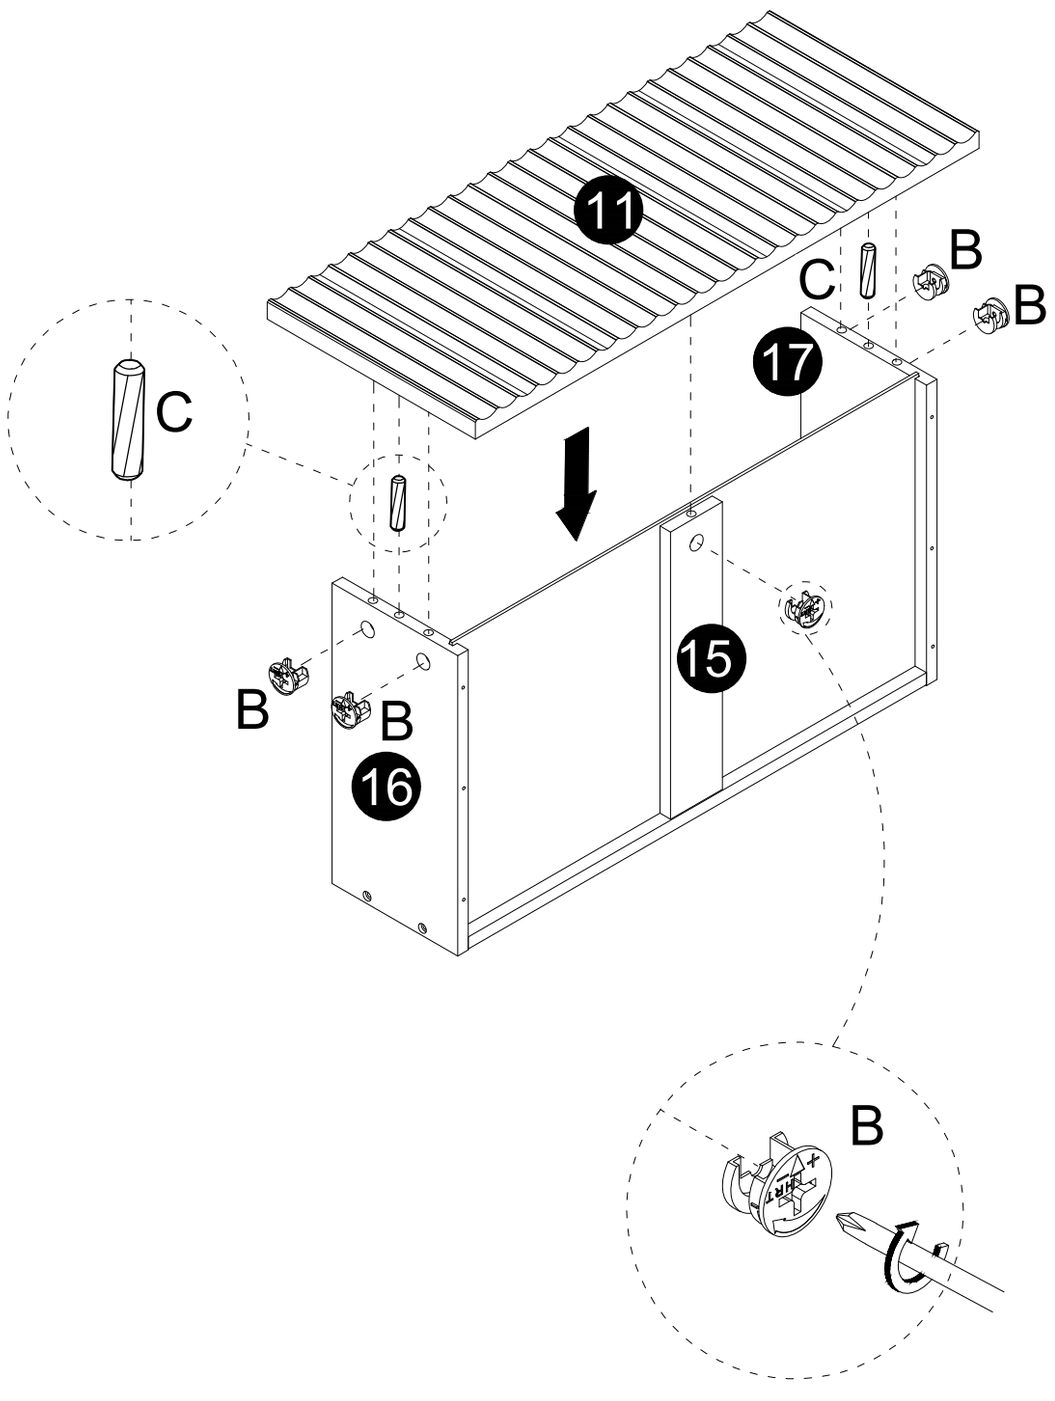

X3

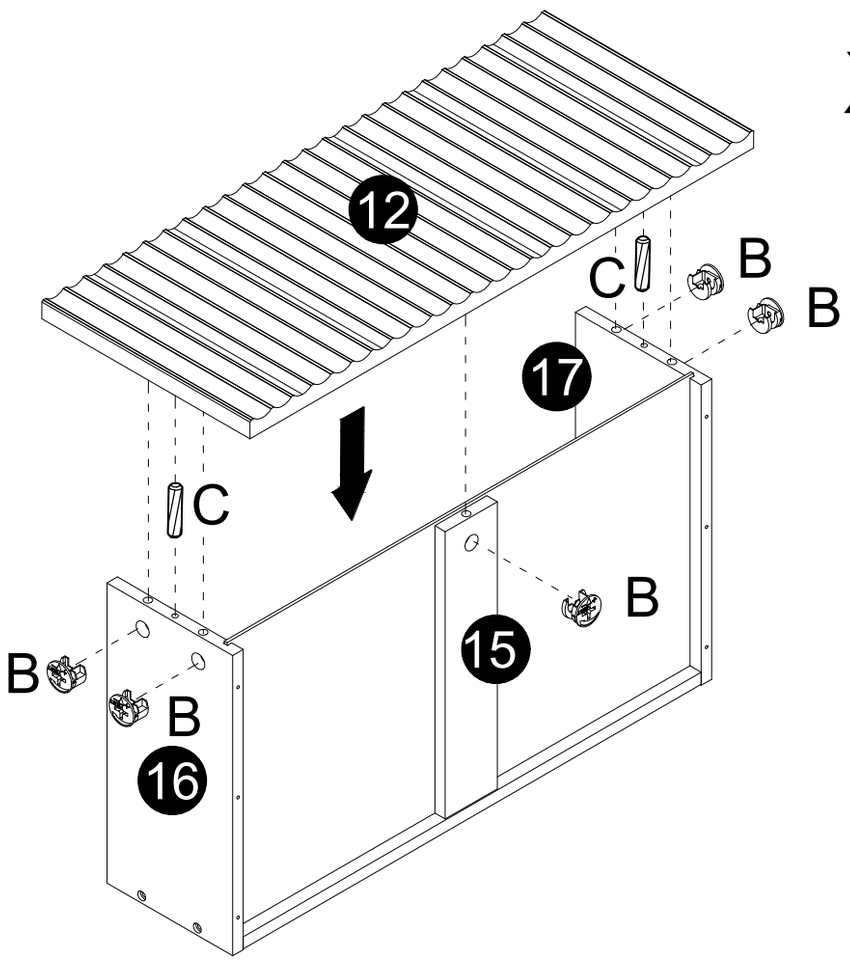

X3

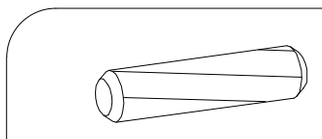


Ø6x30	
C	x 12




Ø15x9.5	
B	x 30

STEP 21

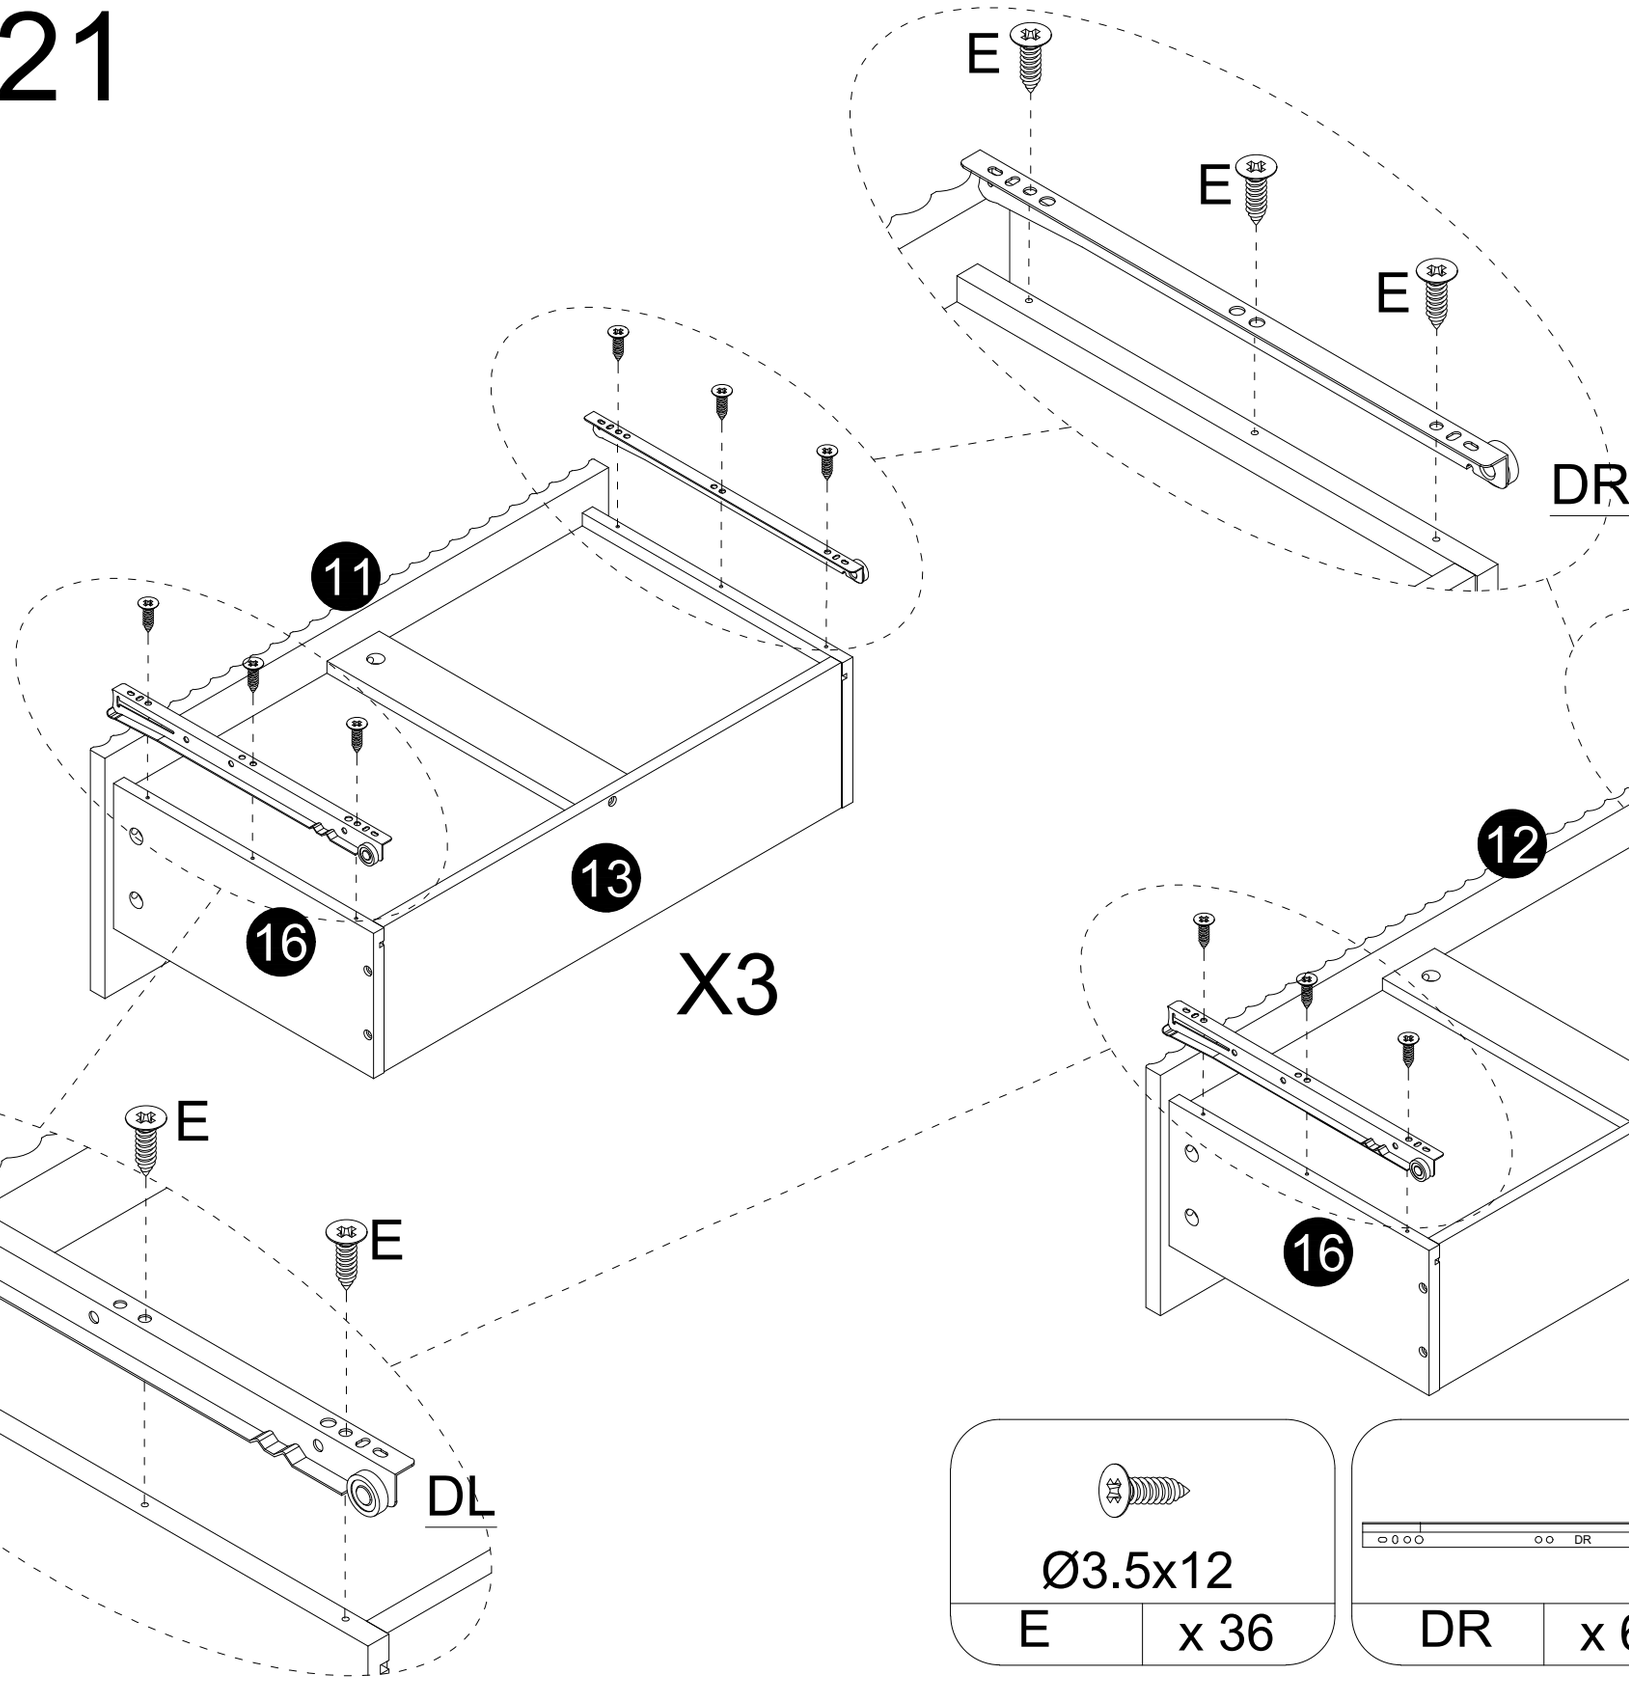


Ø3.5x12	
E	x 36
DR	x 6
DL	x 6

STEP 22

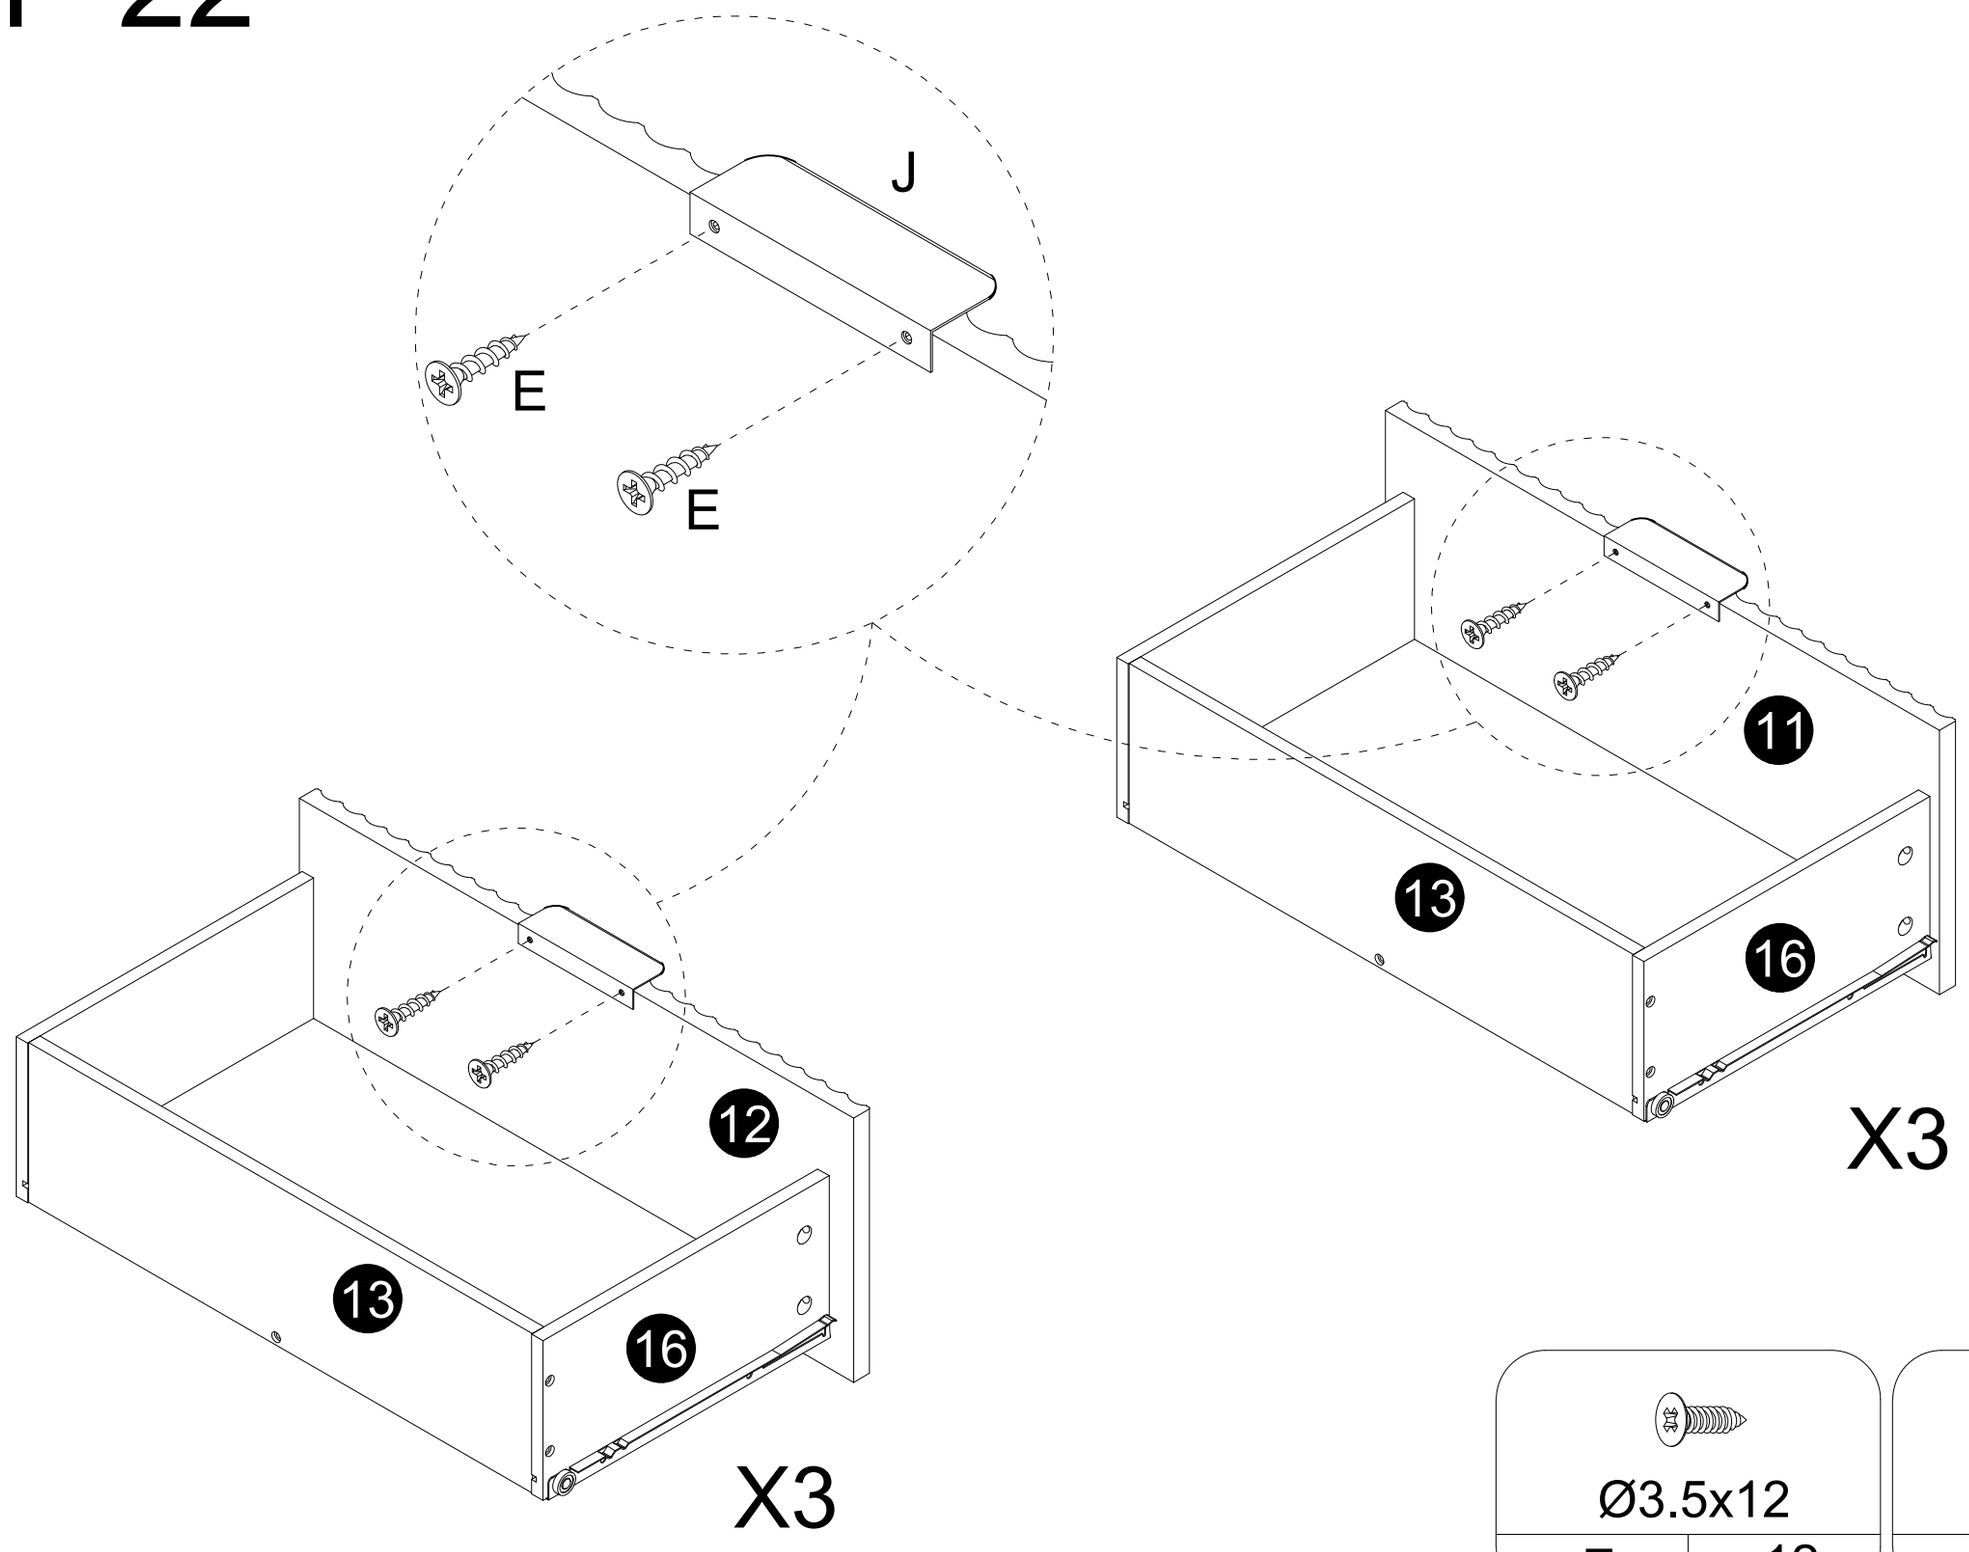



Ø3.5x12	
E	x12
J	x 6

STEP 23

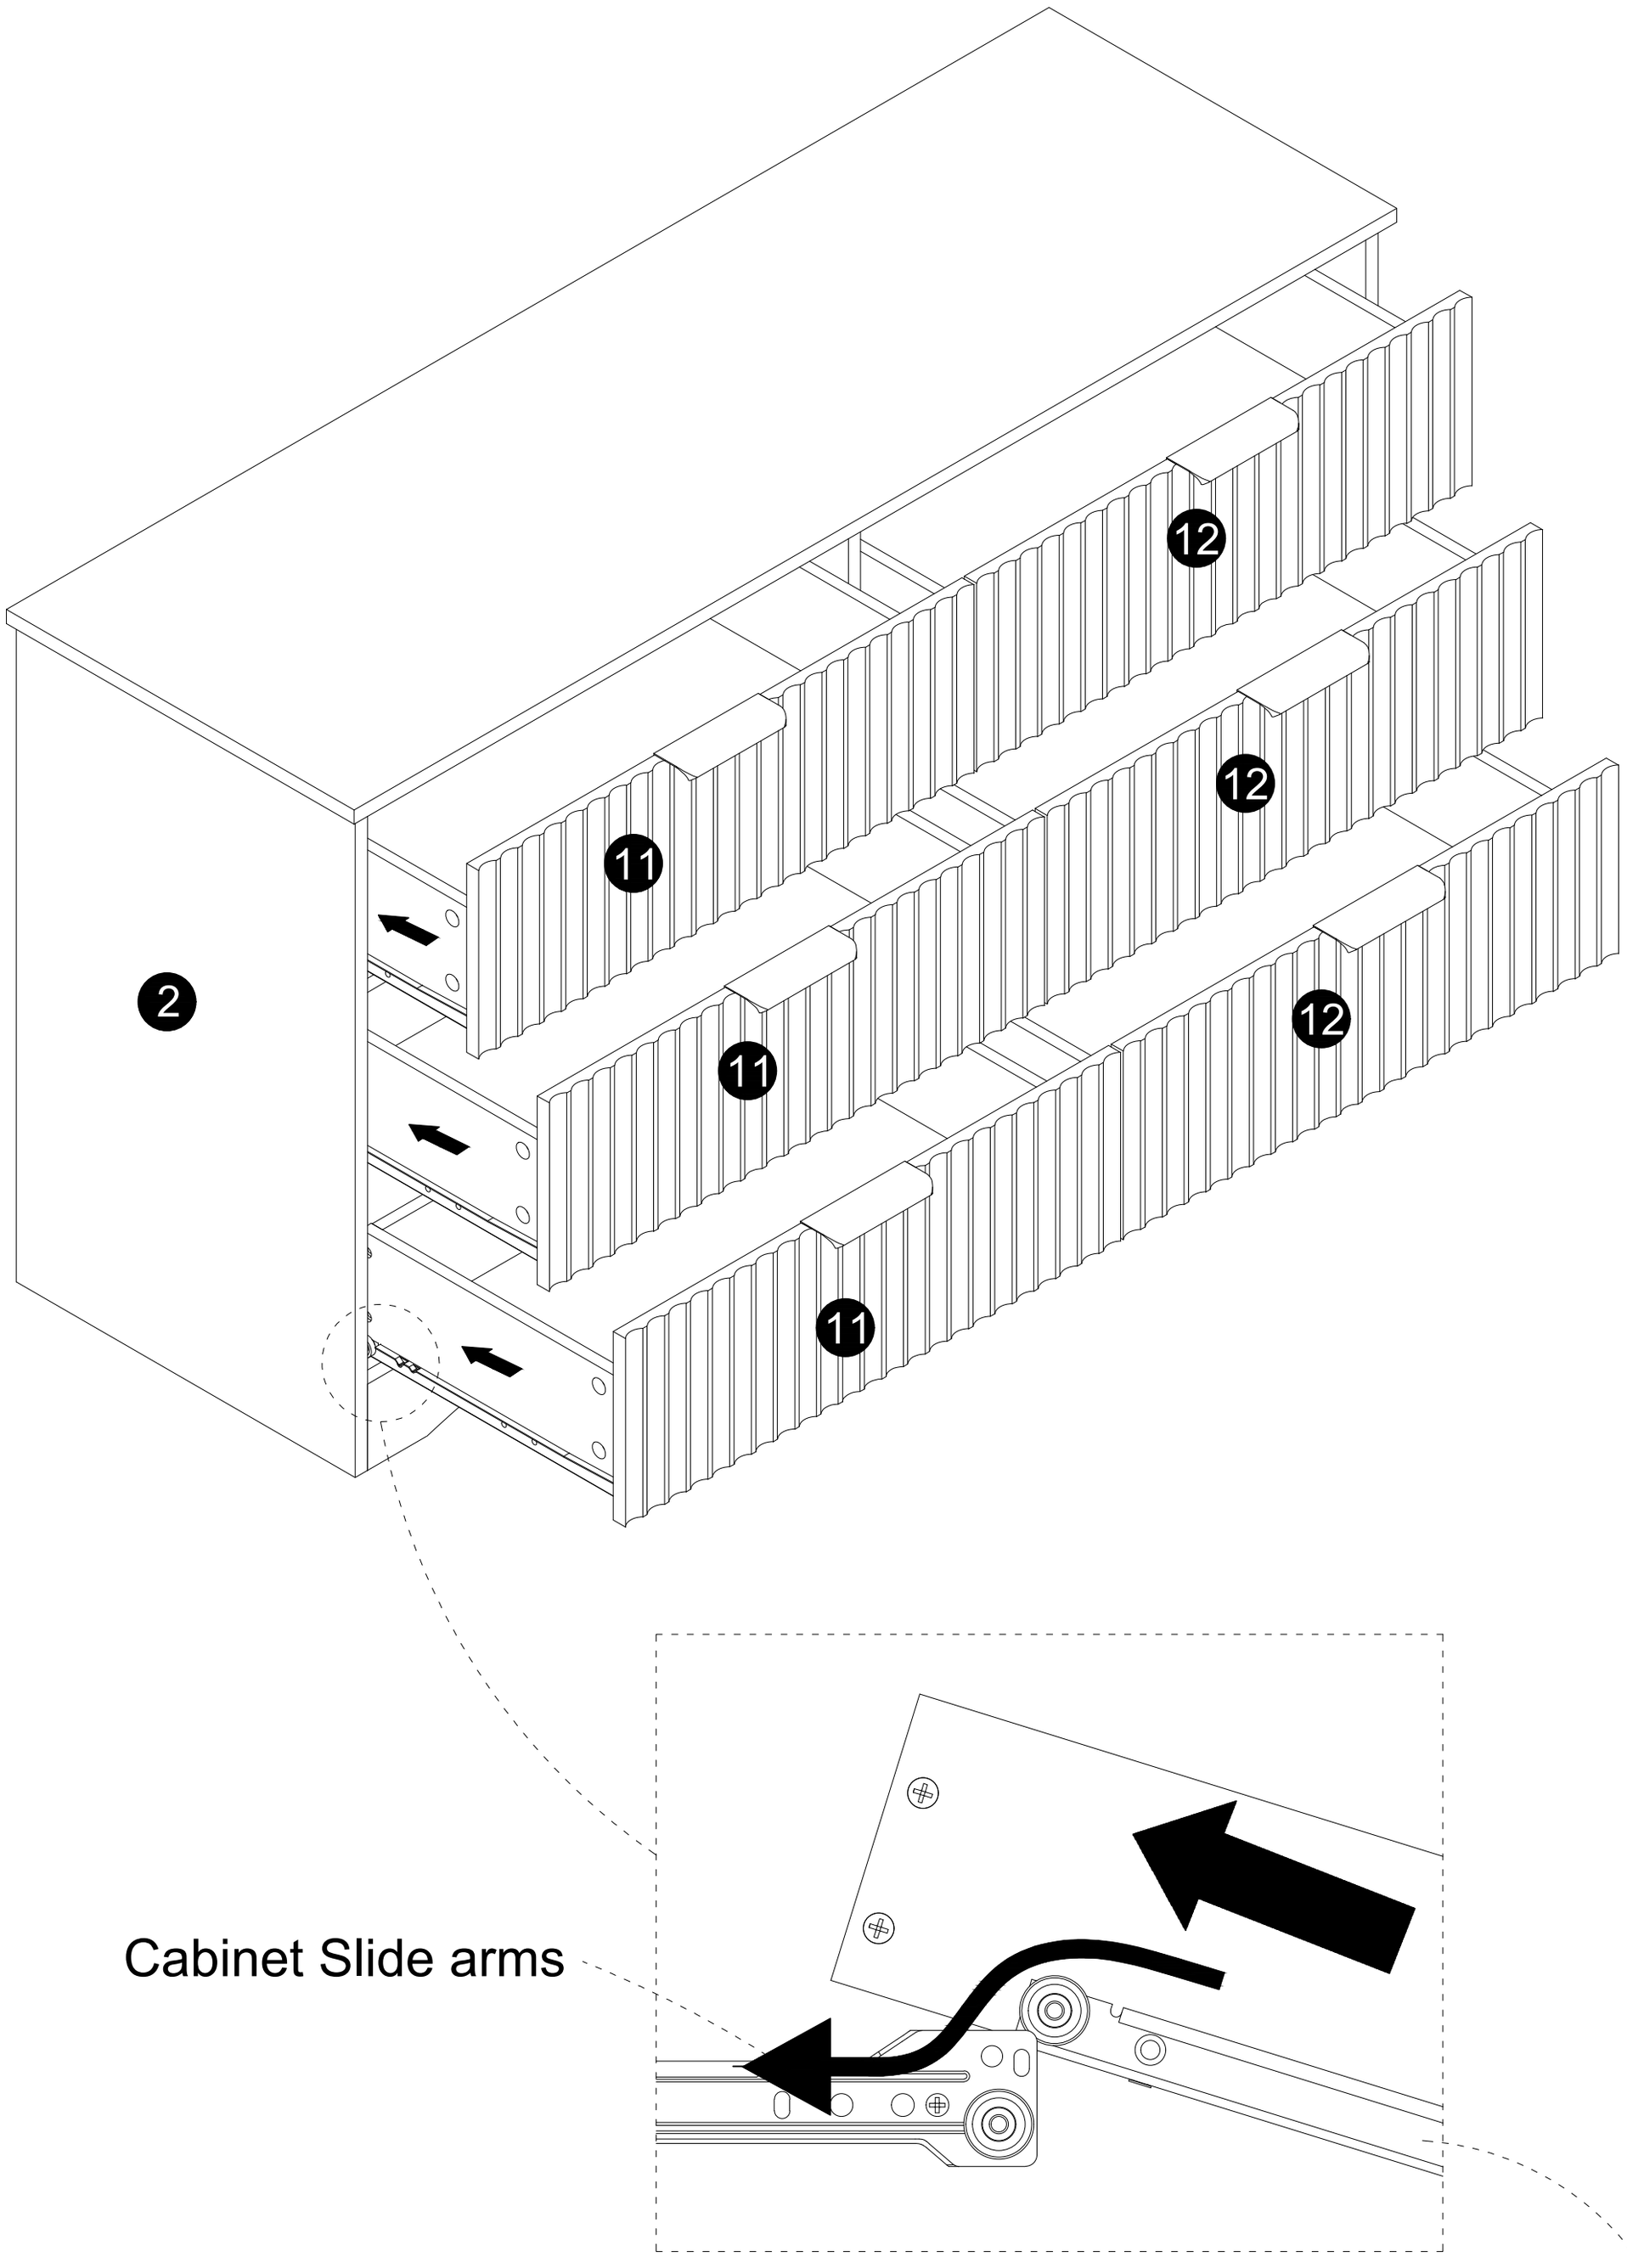



STEP 24

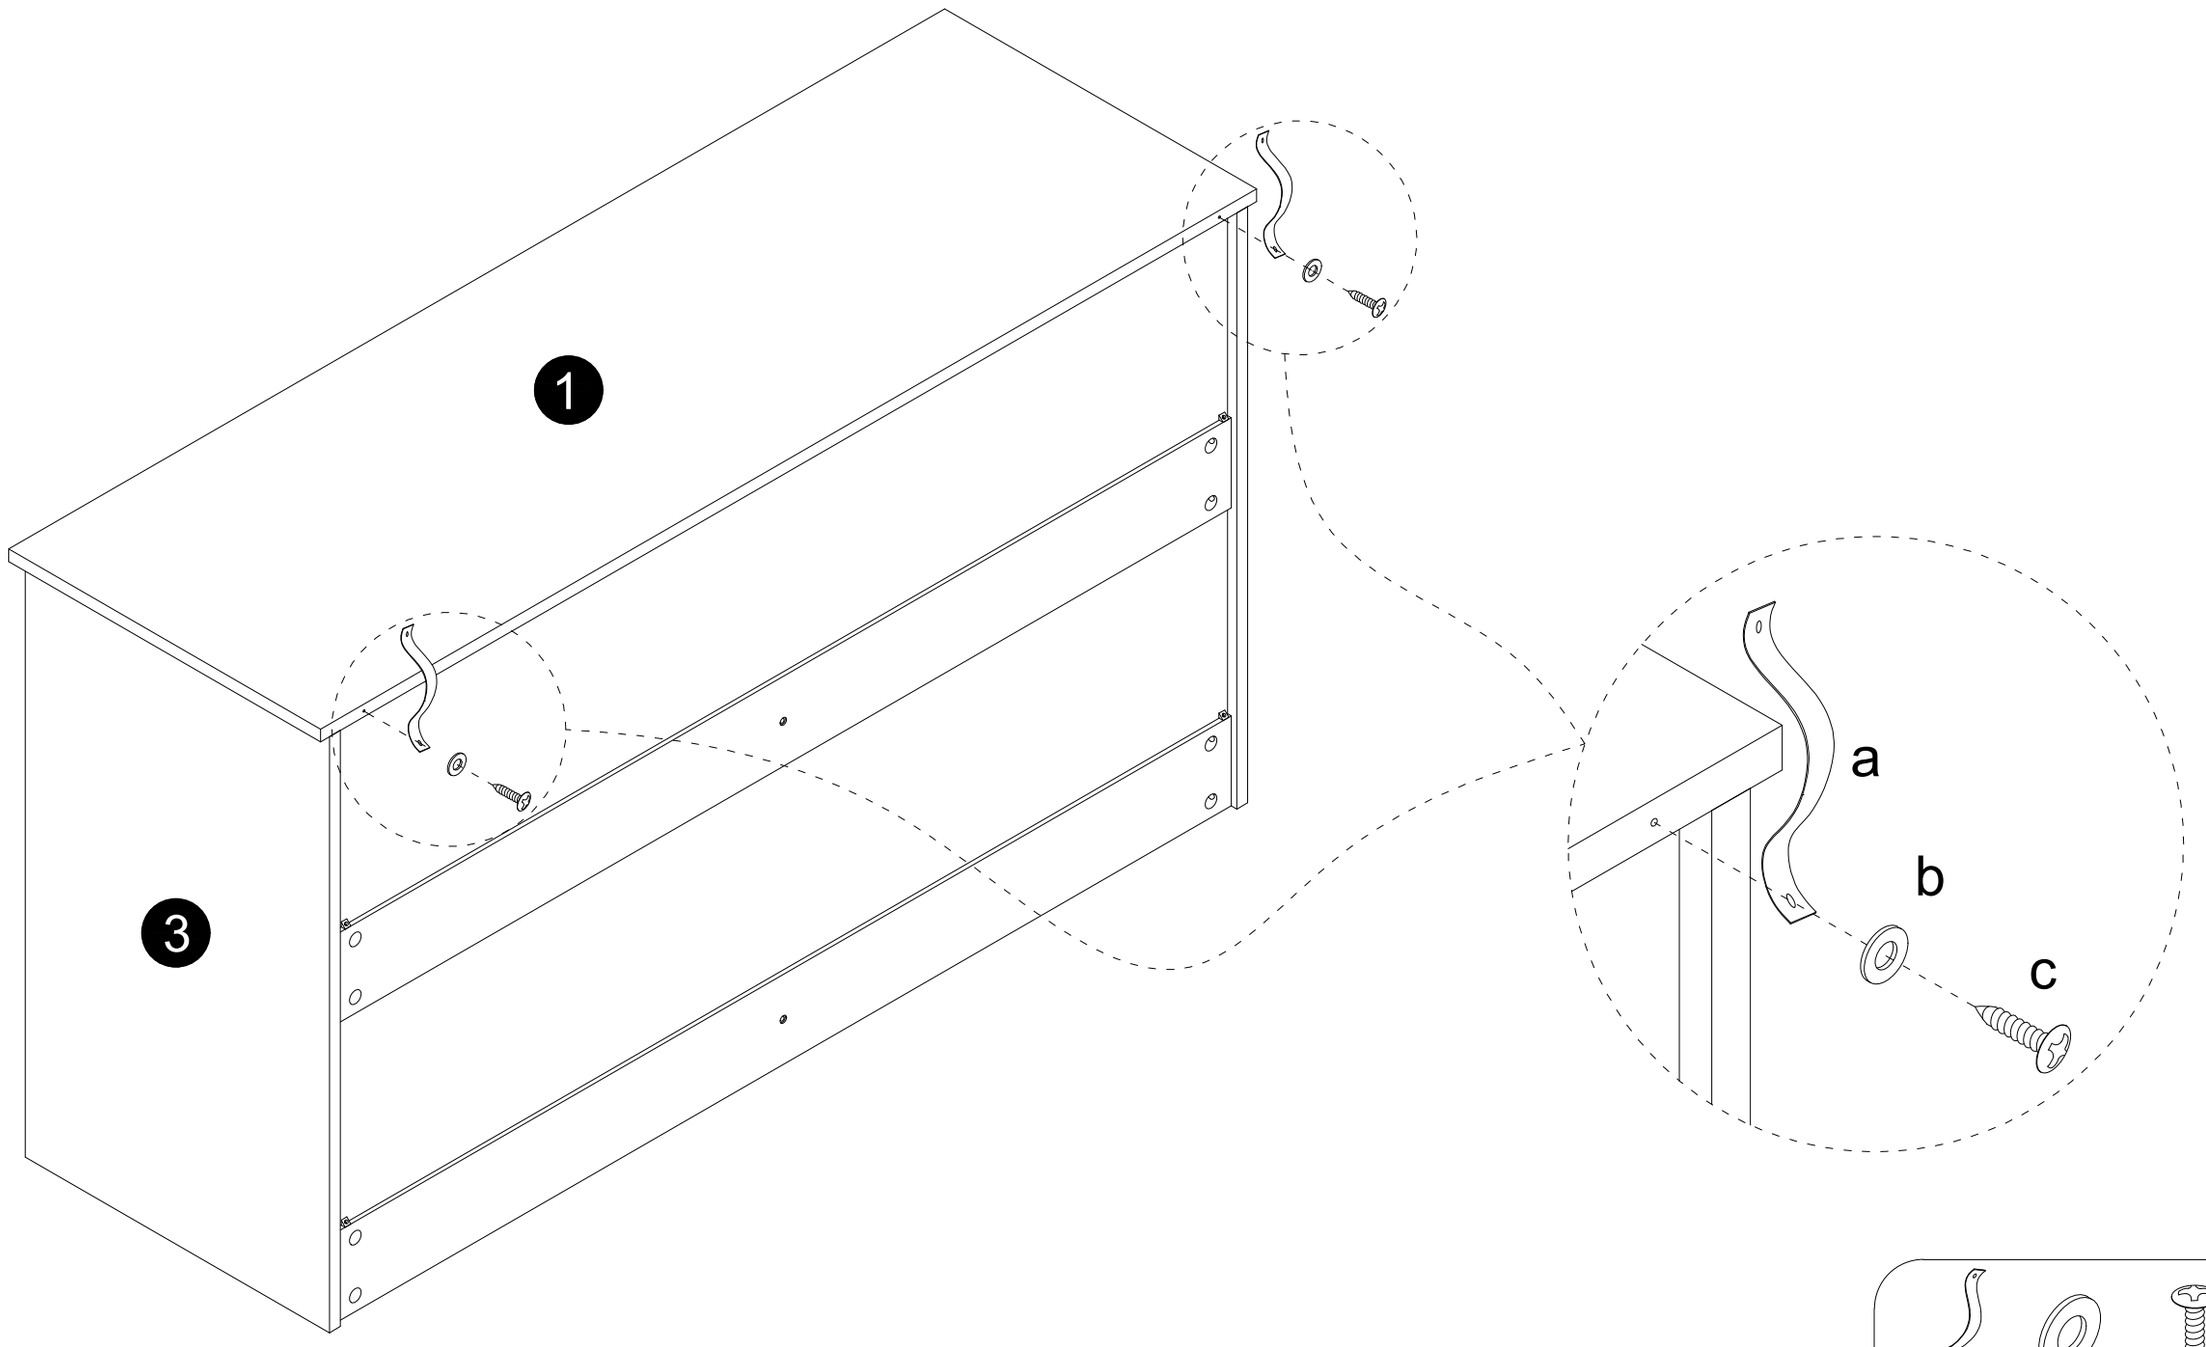


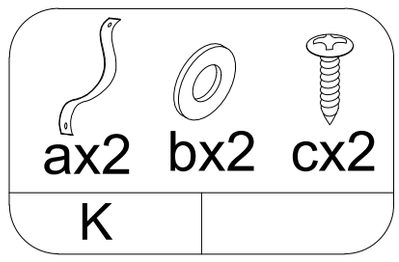


STEP 25

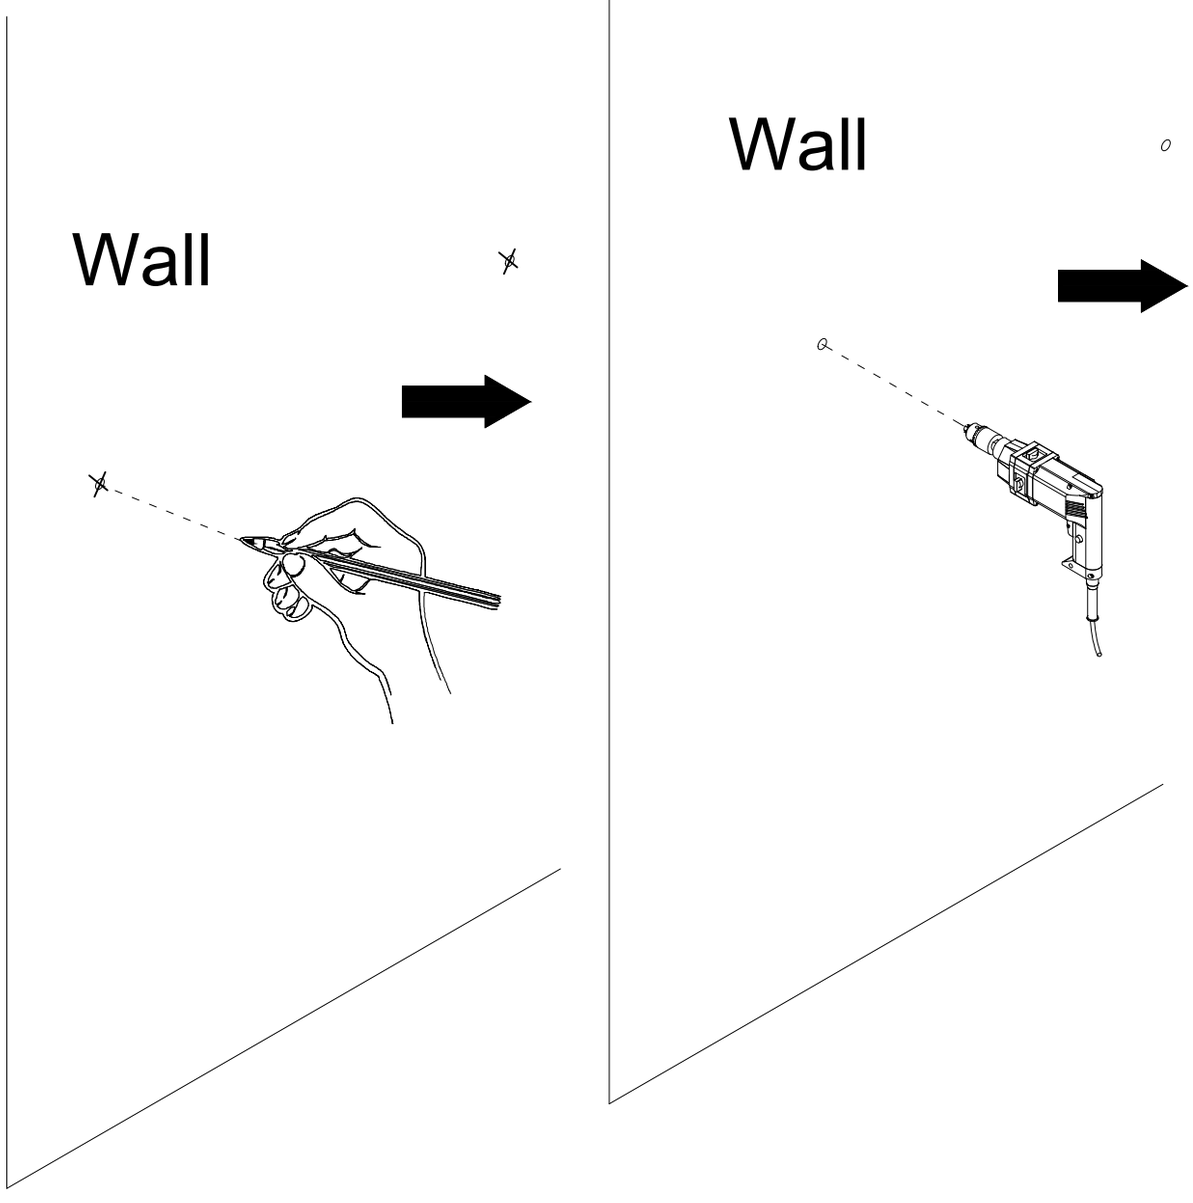


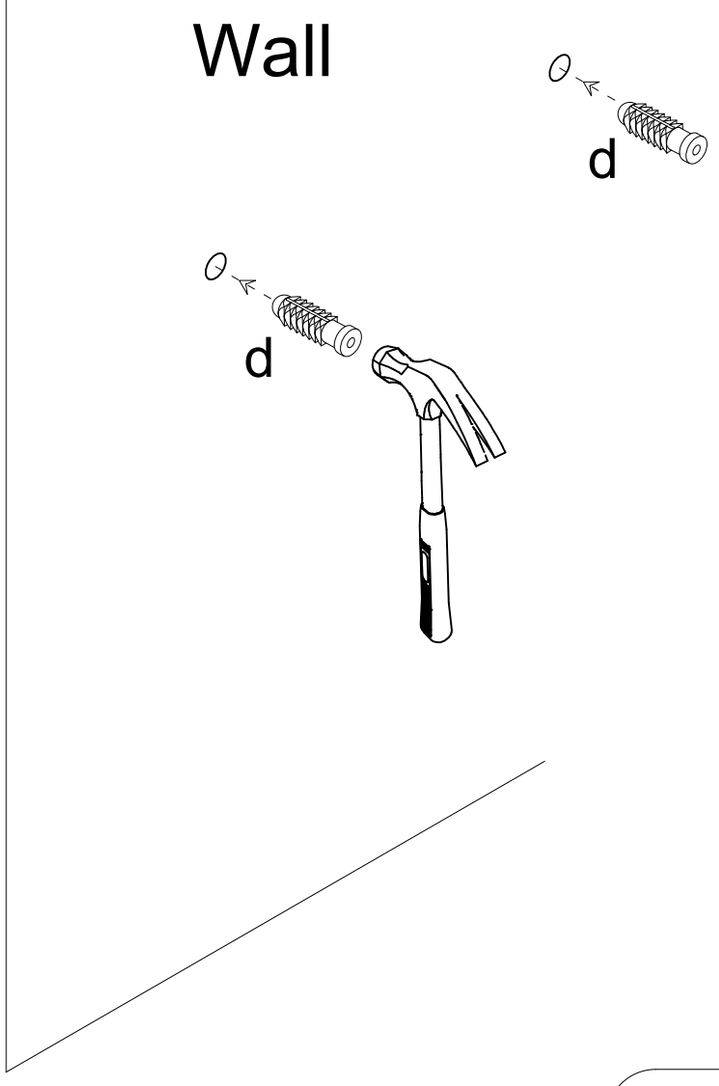

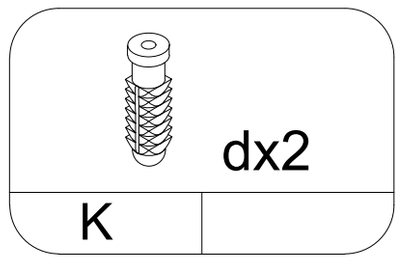

STEP 26

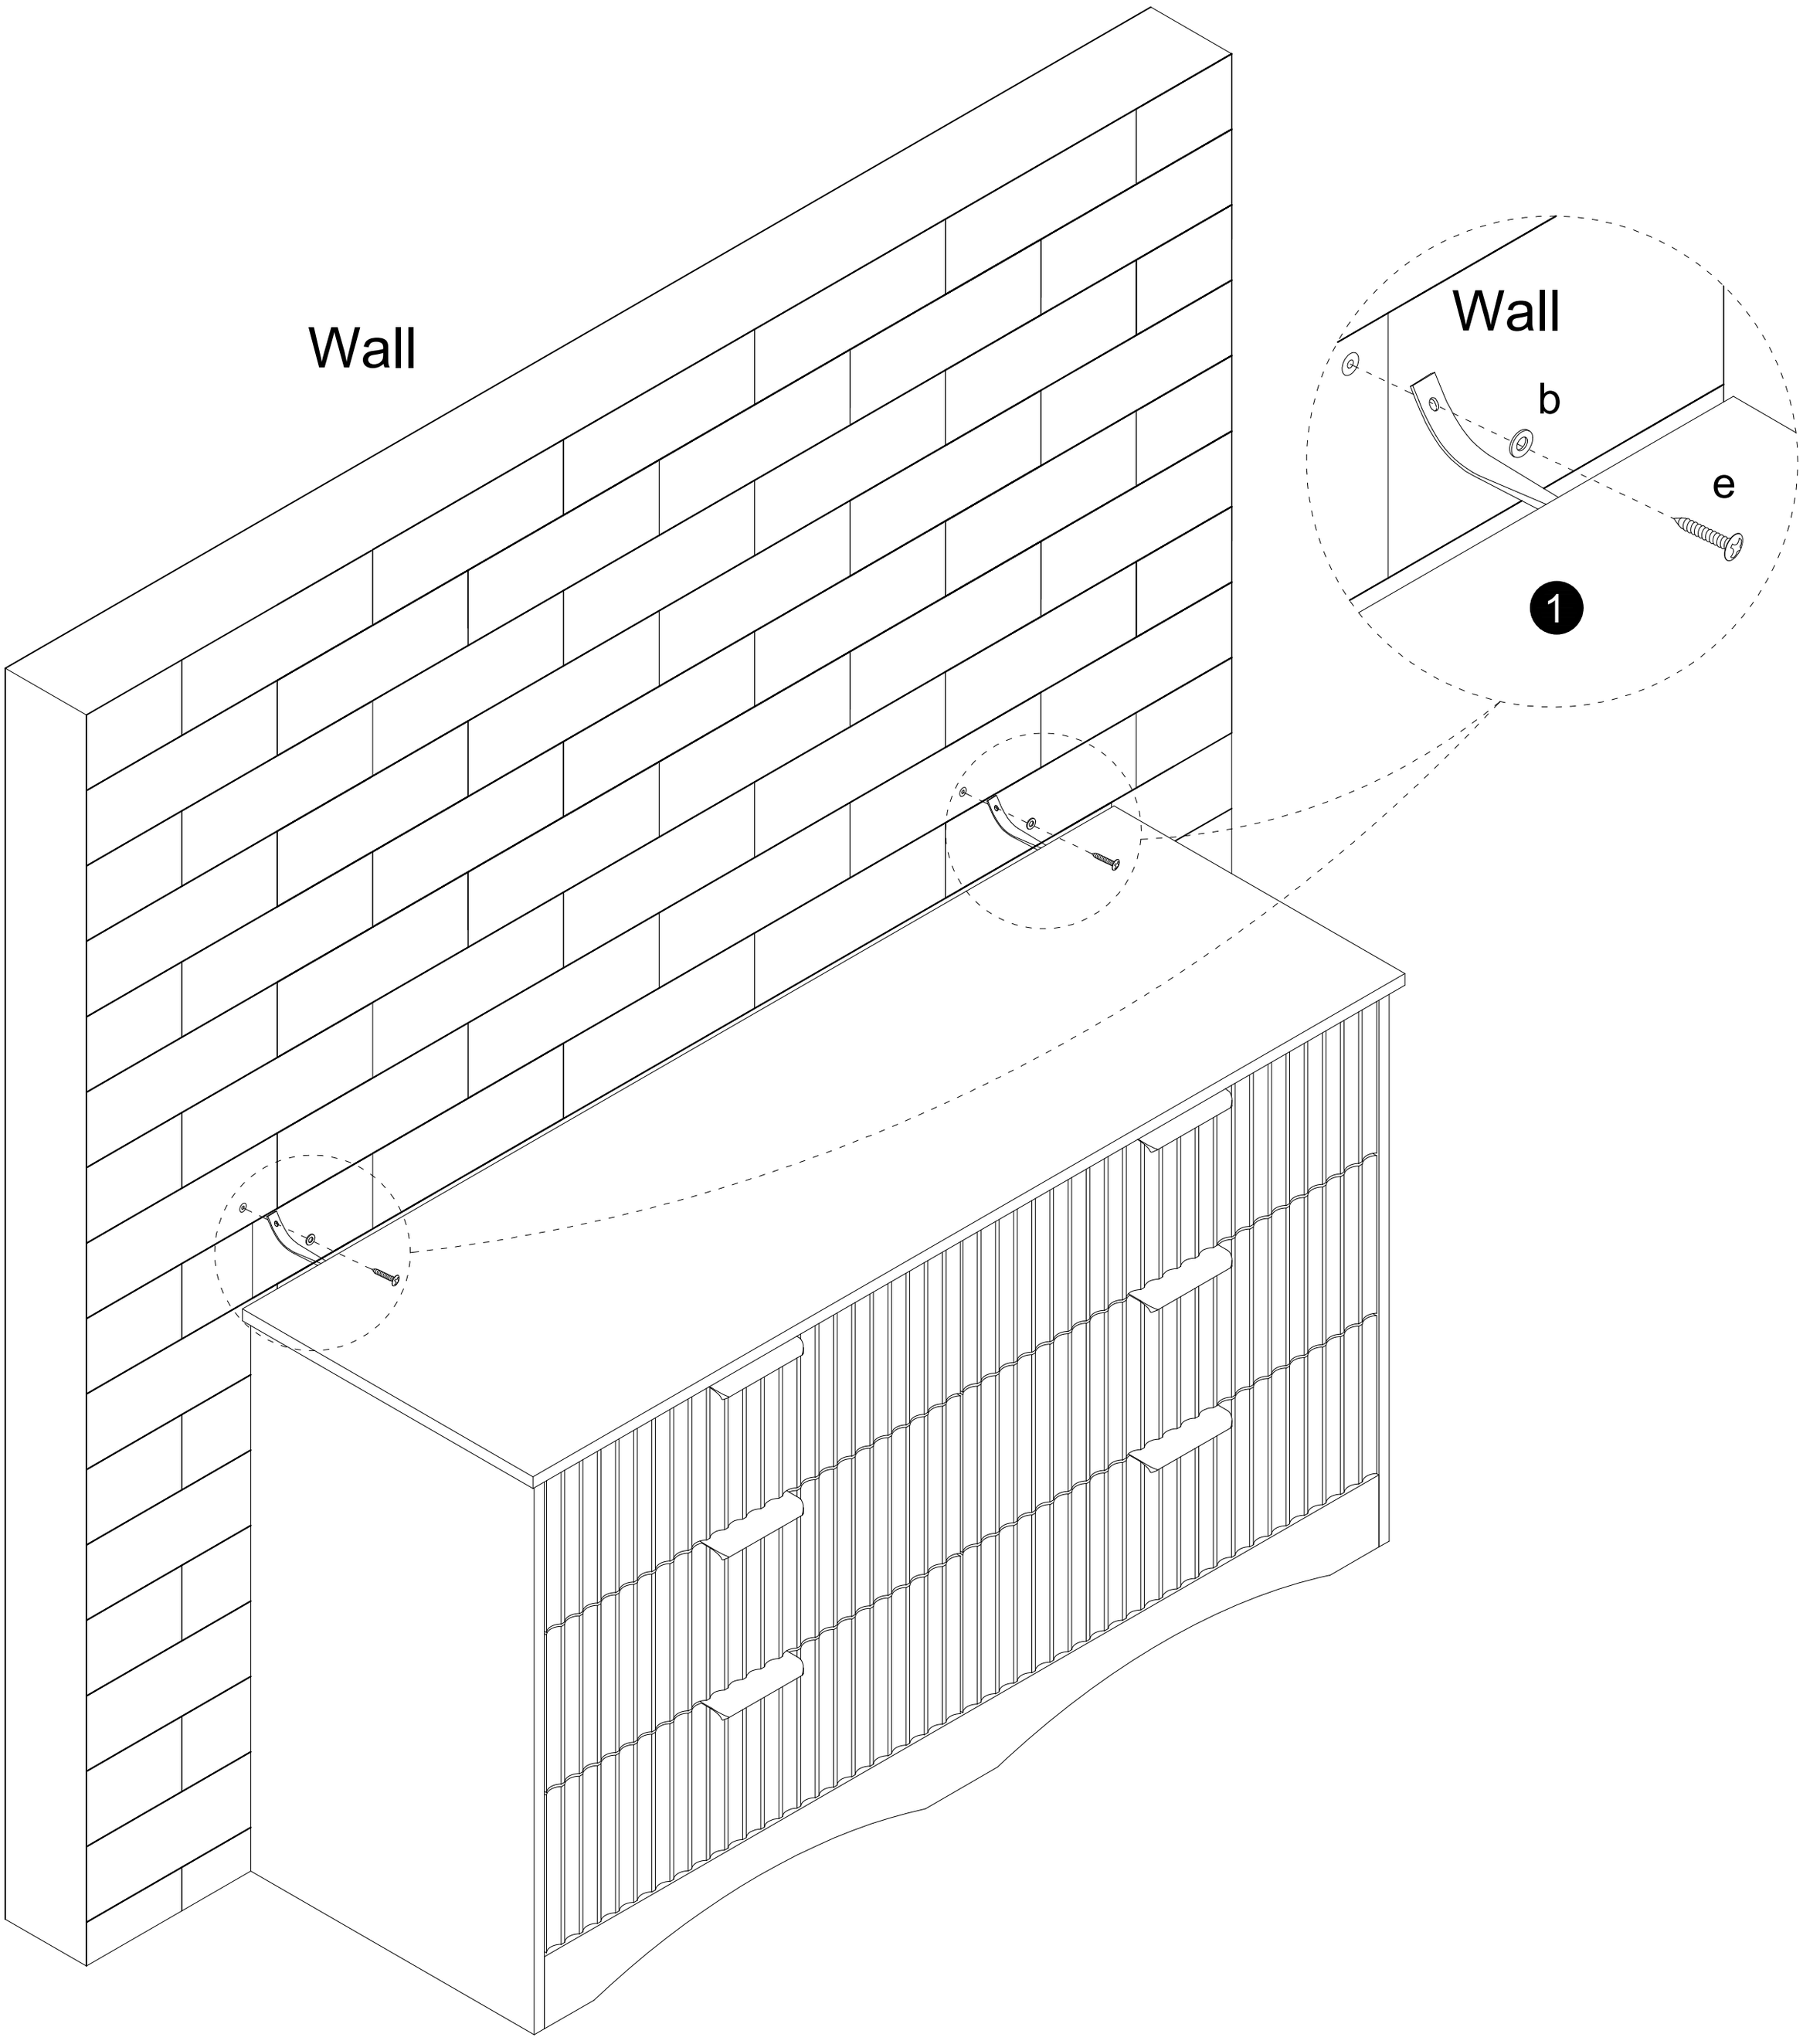

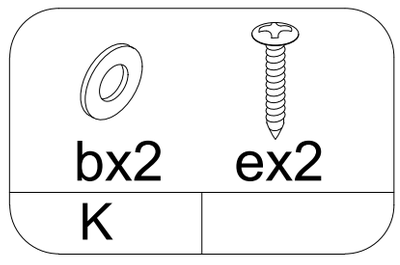

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.

· Small amount of mild soap can be used if necessary

- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning