
Assembly Instruction

Decorate your home, Brighten wonderful life

B-CA01161

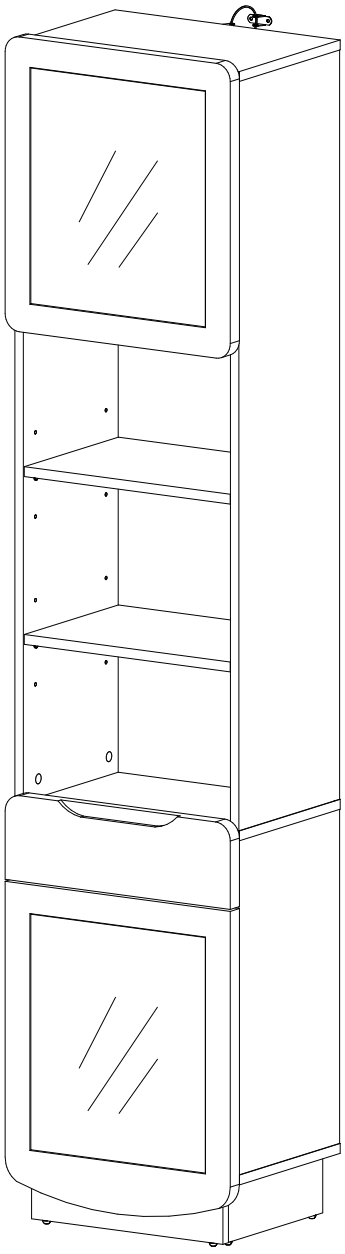

Scan with Your Camera App to Contact Our Customer Support Team for Any Product or Installation Issues !

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

1). Remove all packaging materials, staples and packing straps from the carton.
2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
4). Allow ample room for assembly and assemble the product near where the product will be placed.
5). During assembly, do not over-tighten any fittings as this may cause damage.
6). Always place the product on a flat, level surface.


2. CARE AND MAINTENANCE

1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE






















1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2). Use a protective pad when writing on the furniture surface.
3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.

Plate number

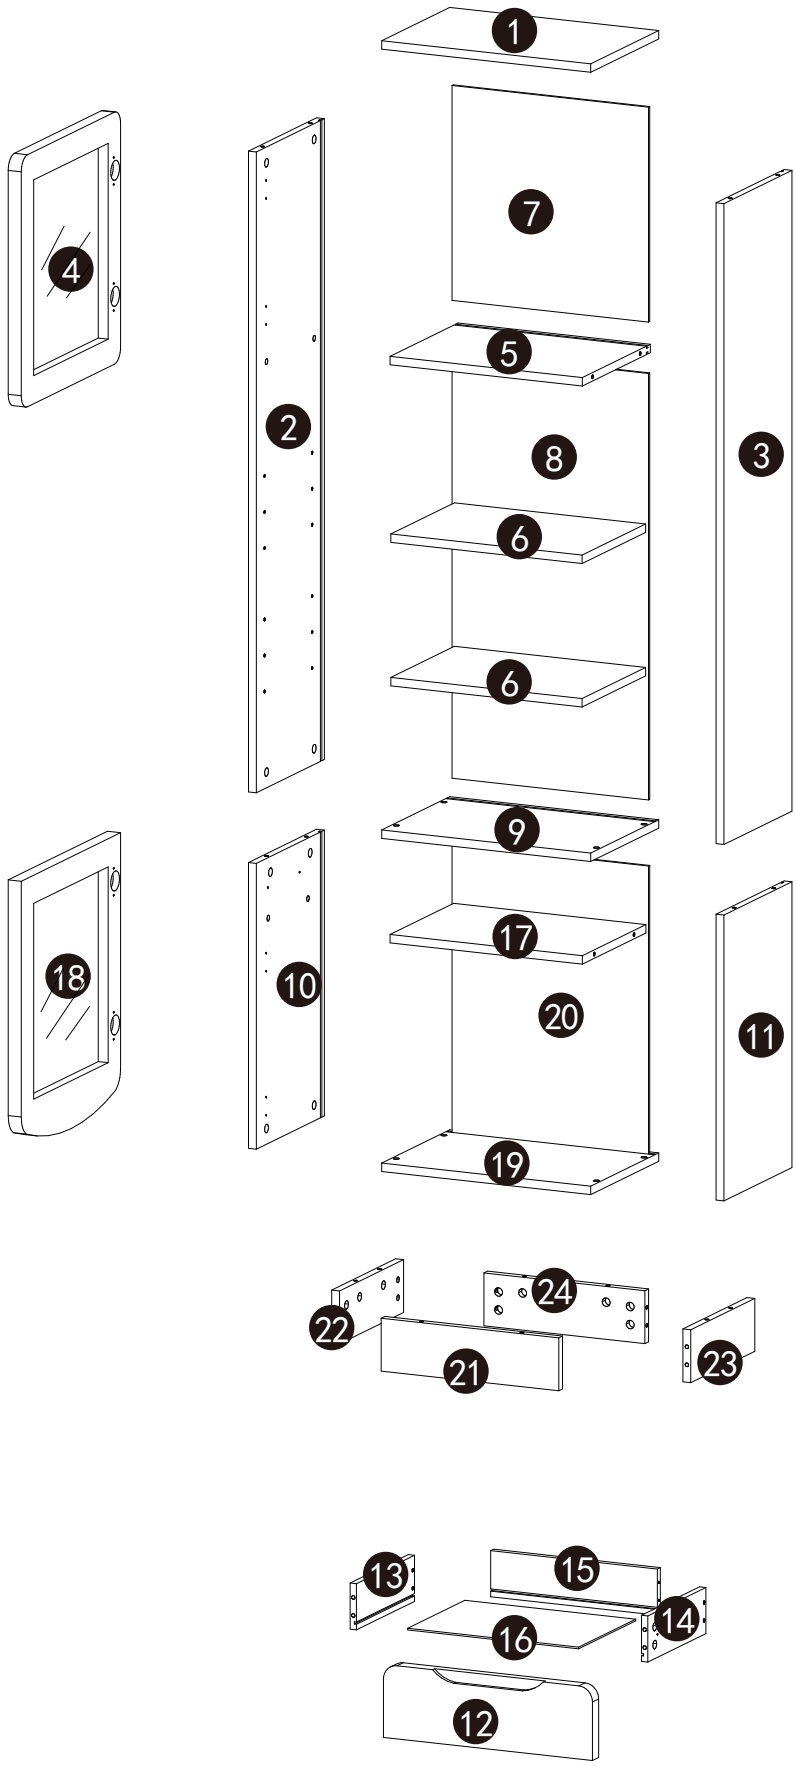











PARTS LIST

Unit: (mm)

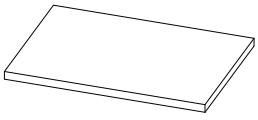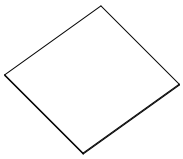1 x1 PC 	**8** x1 PC 	**15** x1 PC 	**22** x1 PC 
2 x1 PC 	**9** x1 PC 	**16** x1 PC 	**23** x1 PC 
3 x1 PC 	**10** x1 PC 	**17** x1 PC 	**24** x1 PC 
4 x1 PC 	**11** x1 PC 	**18** x1 PC 	
5 x1 PC 	**12** x1 PC 	**19** x1 PC 	
6 x2 PC 	**13** x1 PC 	**20** x1 PC 	
7 x1 PC 	**14** x1 PC 	**21** x1 PC 	

ACCESSORIES LIST

Unit: (mm)

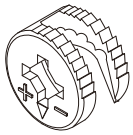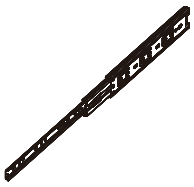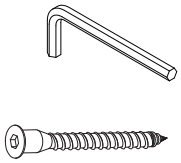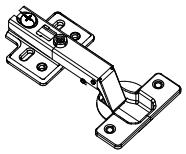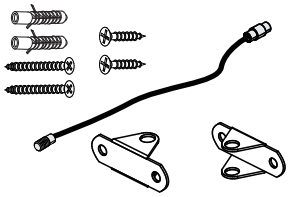A 6x35 x44 PC 	**B** 15x10 x44 PC 	**C** 10 inches x2 PC 	**D** x8 PC 
E M3.5x14 x28 PC 	**F** M5x40/#3 x4 PC 	**G** M3.5x12 x4 PC 	**H** Hinge x4 PC 
J x16 PC 	**K** x1 PC 	**L** x20 PC 	





INSTALLATION INSTRUCTION


STEP1


YOU WILL NEED	
A x2	**B** x2

Installation method of three in one rod and buckle

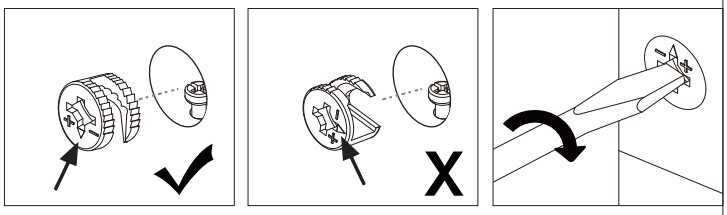


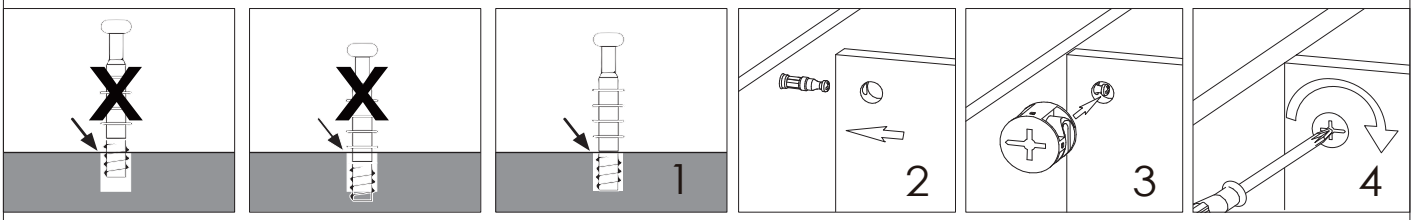

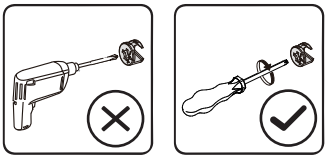

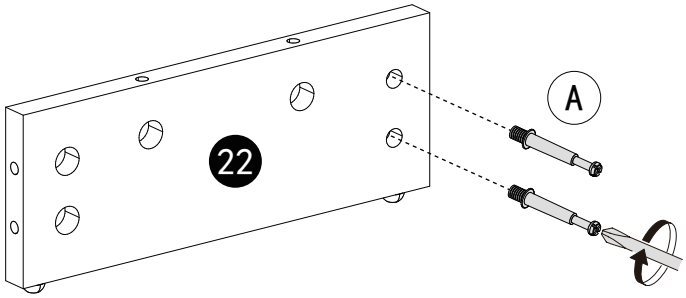





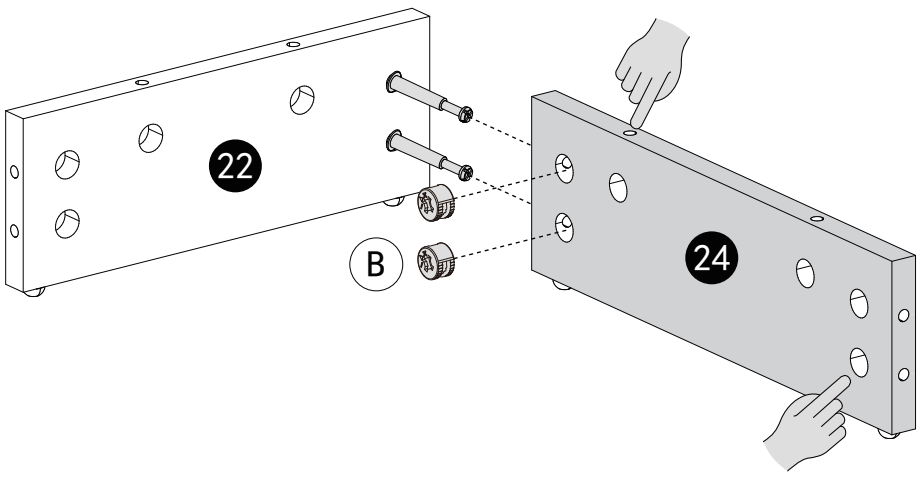

STEP2


YOU WILL NEED	
A x2	B x2

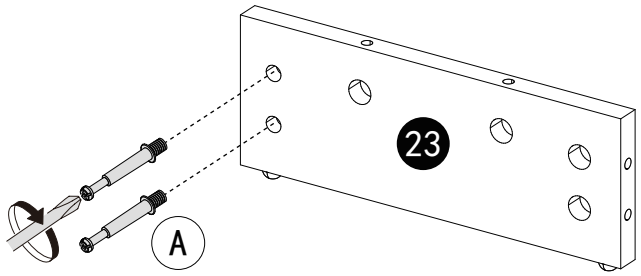


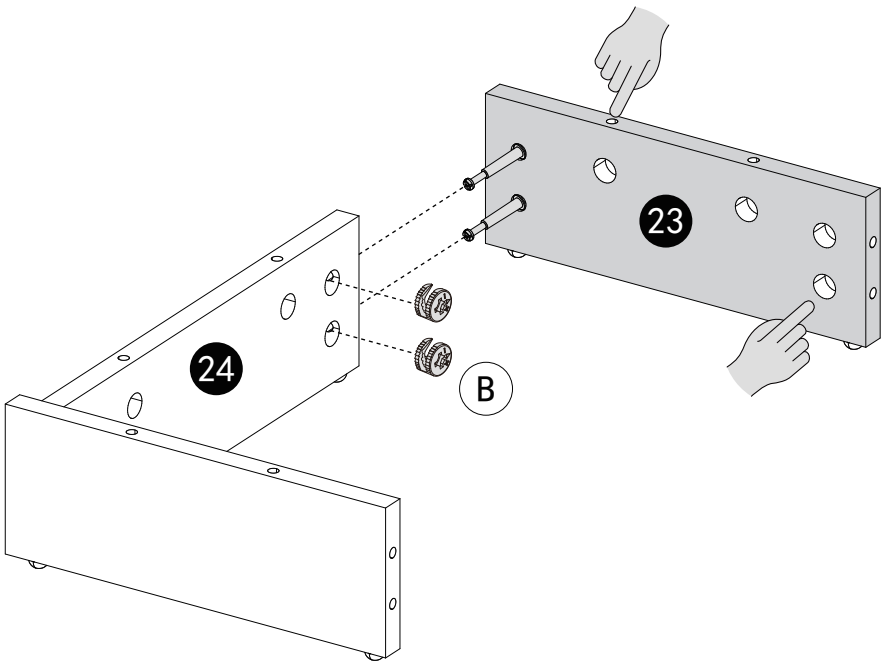

STEP3


YOU WILL NEED	
A x4	B x4

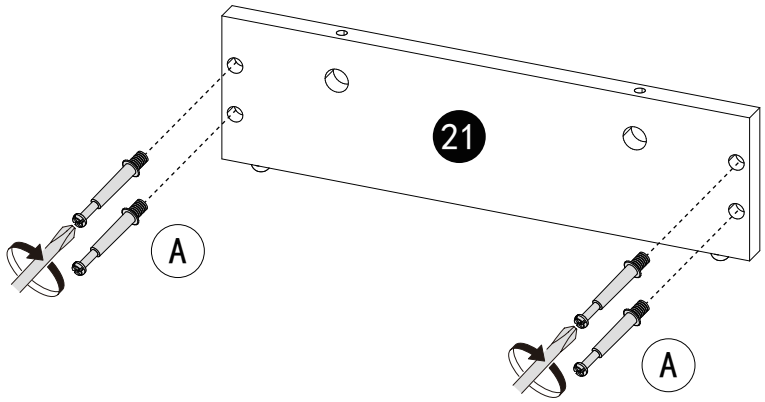

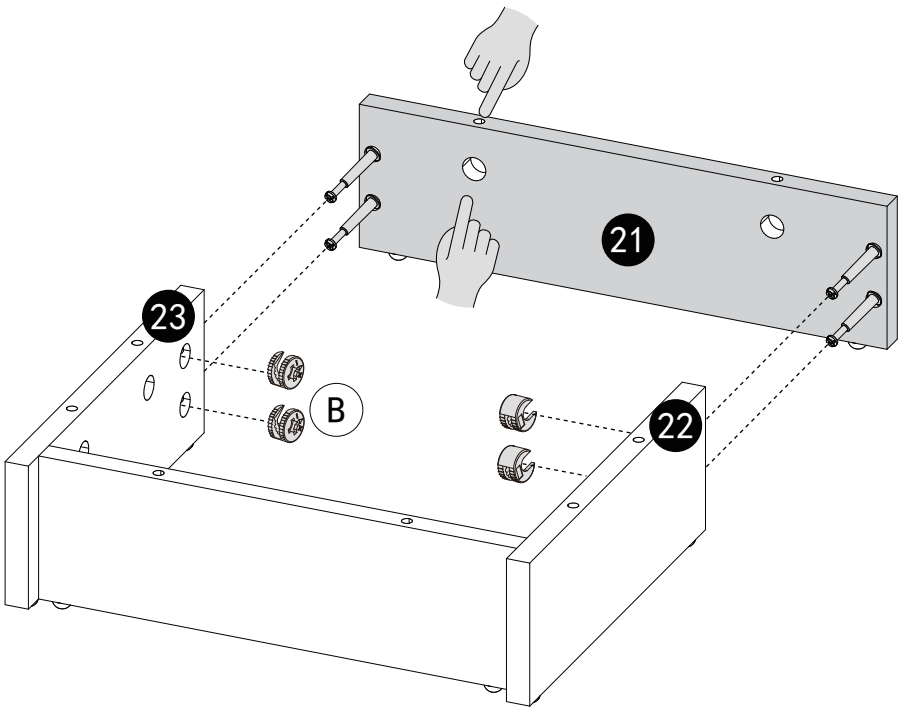


STEP4

YOU WILL NEED	
A x8	B x8

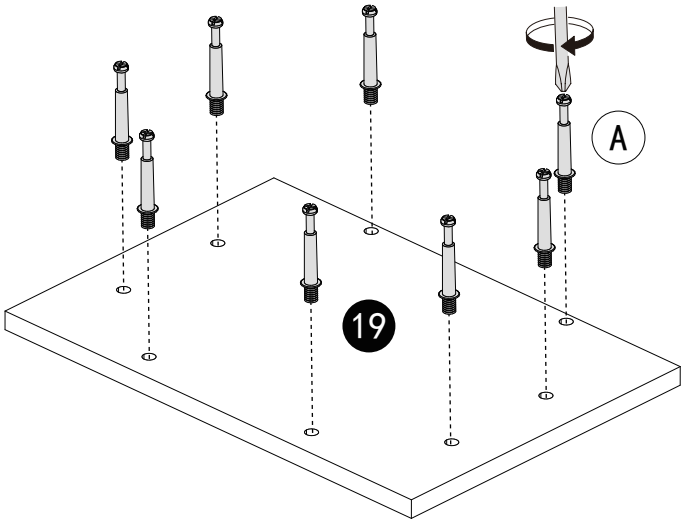




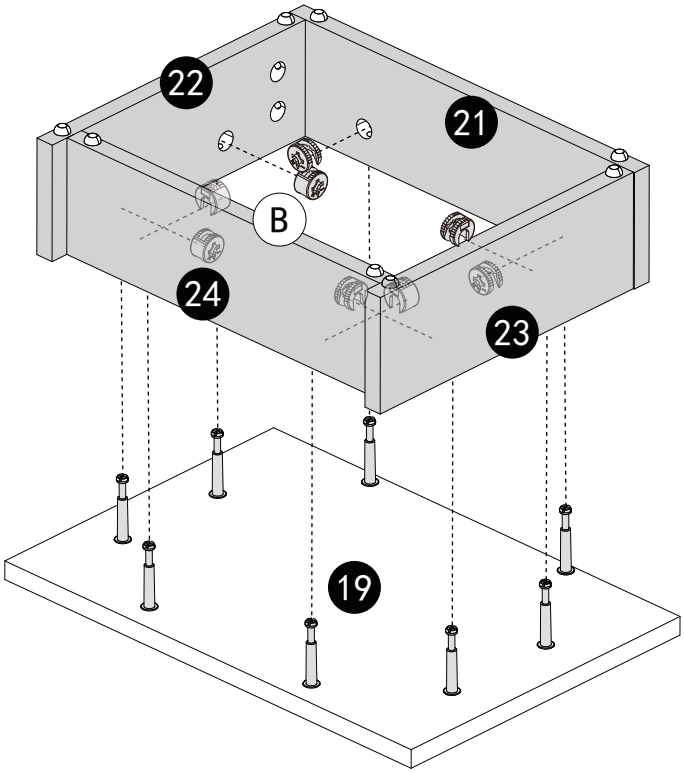


STEP5


Please follow the illustration to disassemble the three-section track into C1 and C2.

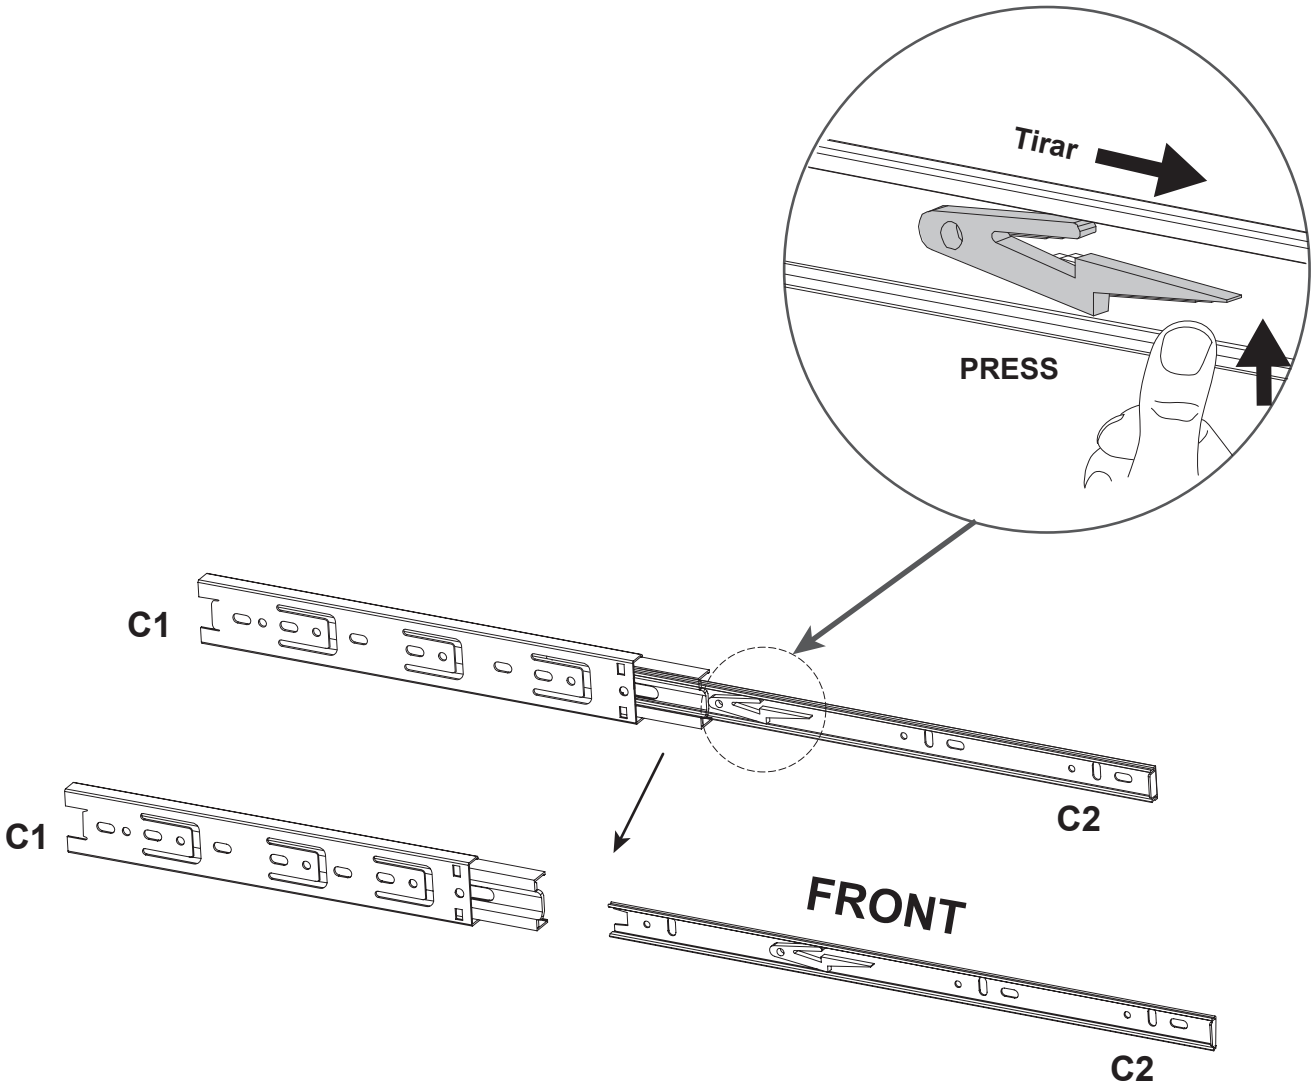


STEP6

YOU WILL NEED	
E x4	C1 x2

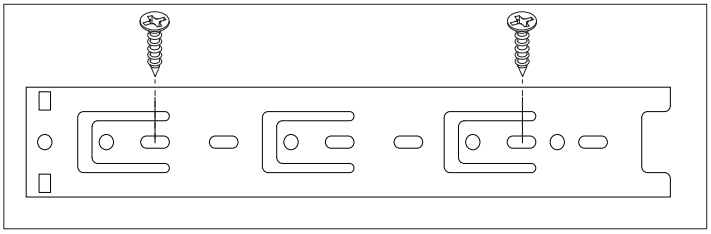


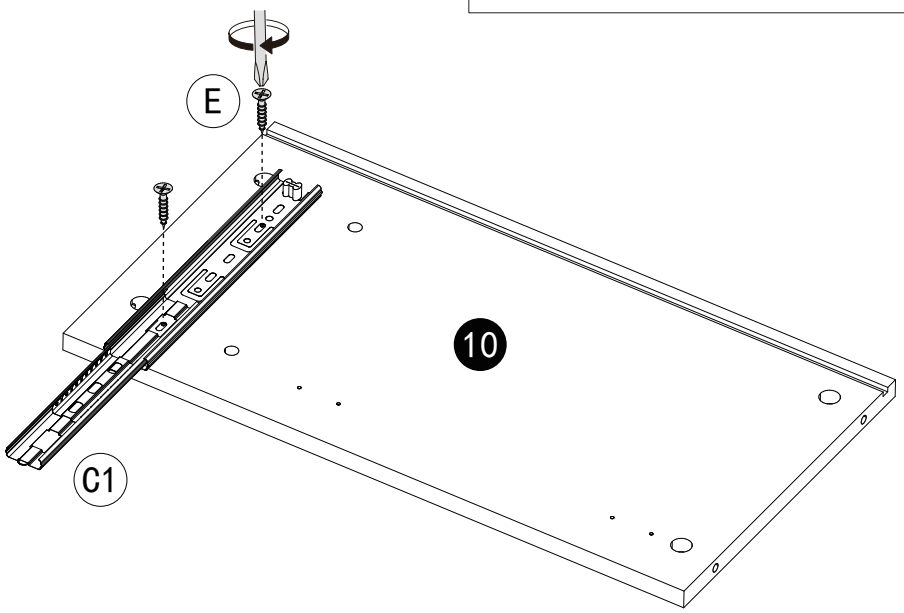


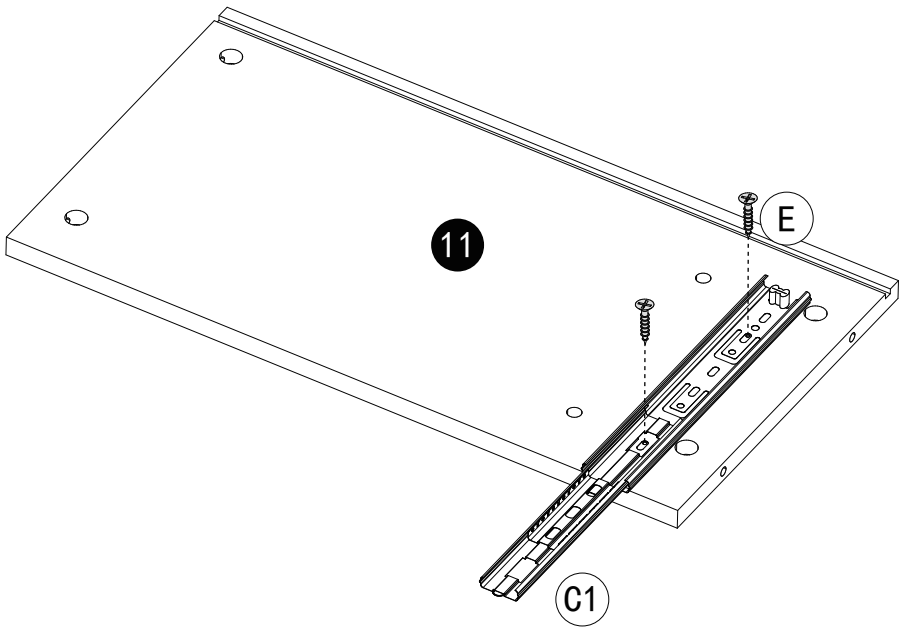

STEP7


YOU WILL NEED	
A x2	B x2

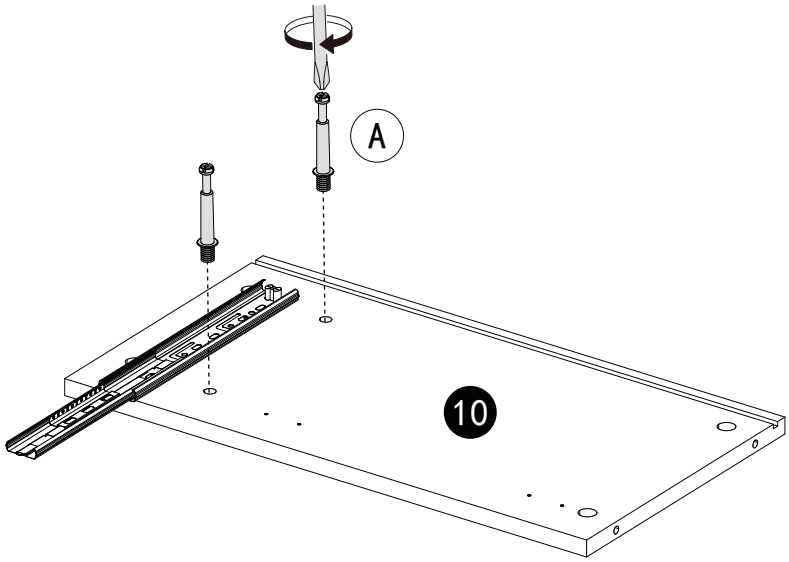


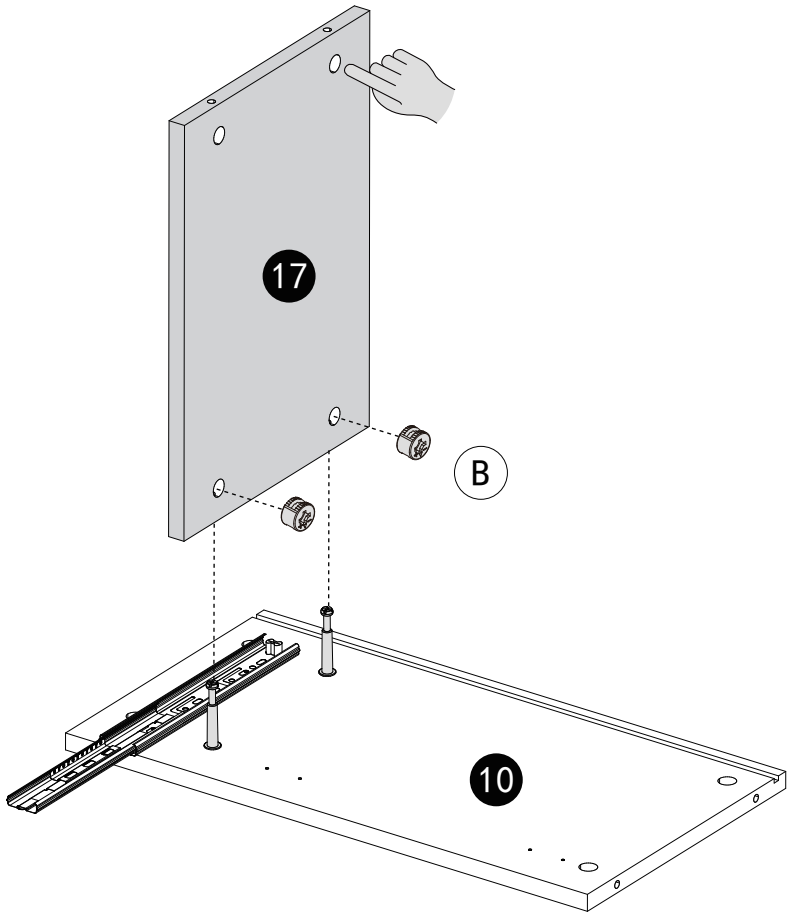

STEP8


YOU WILL NEED	
A x2	B x2

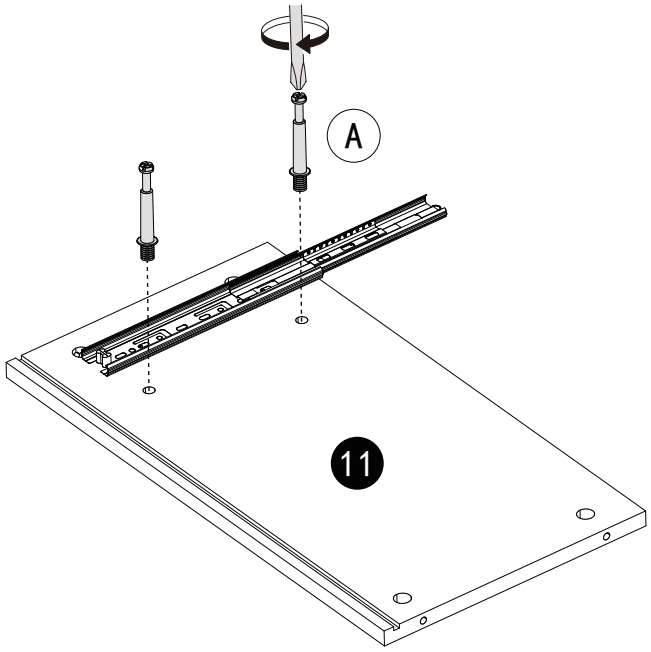


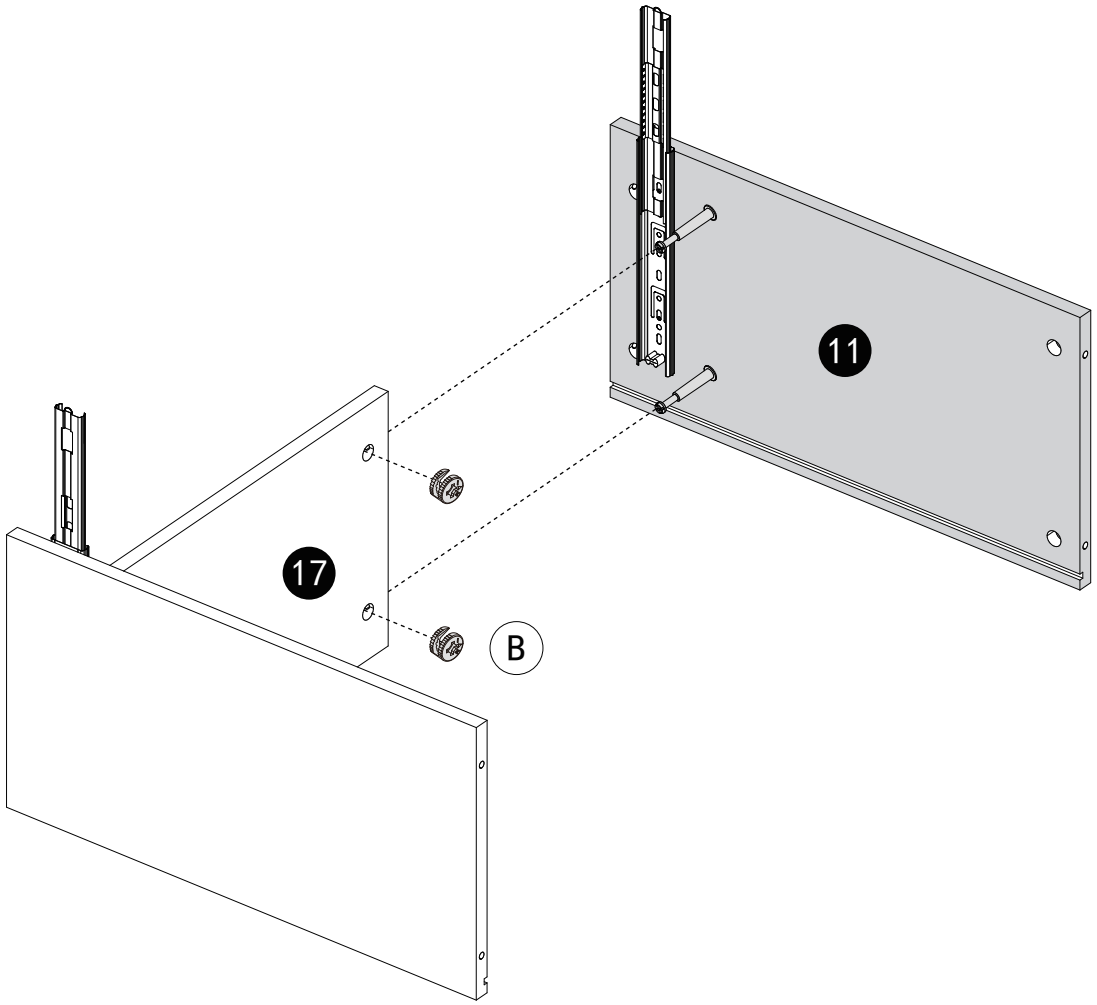


STEP9

YOU WILL NEED	
A x4	B x4

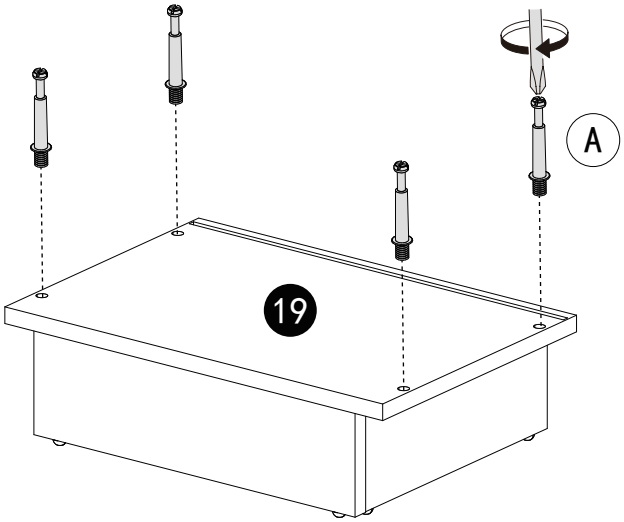

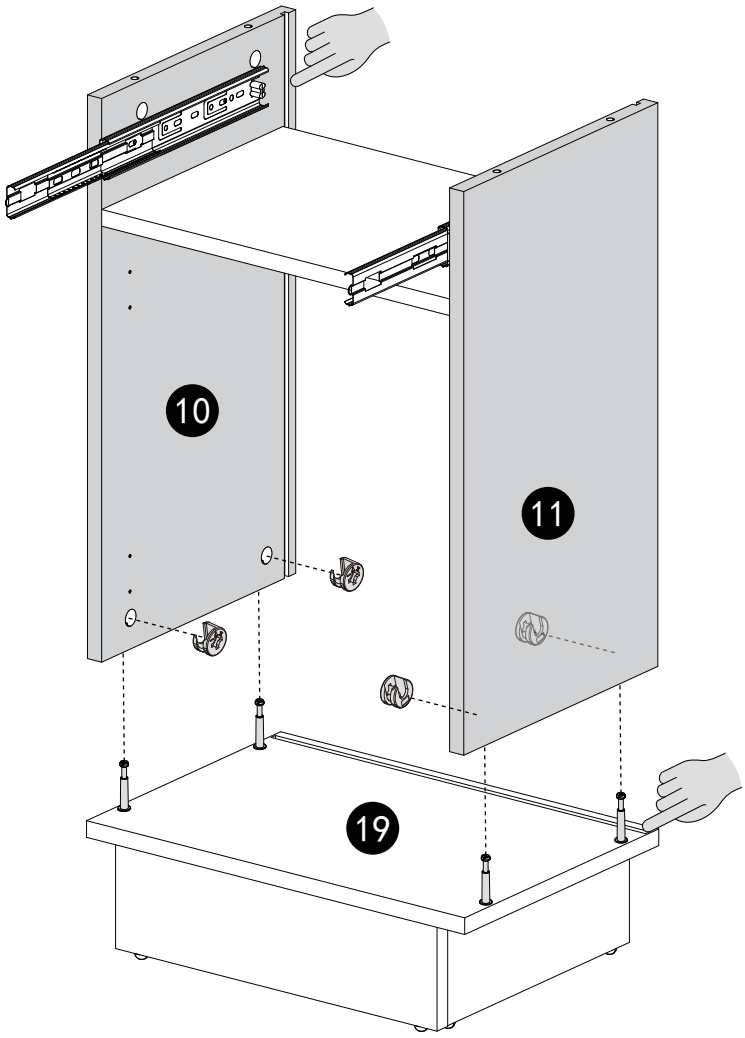



STEP10

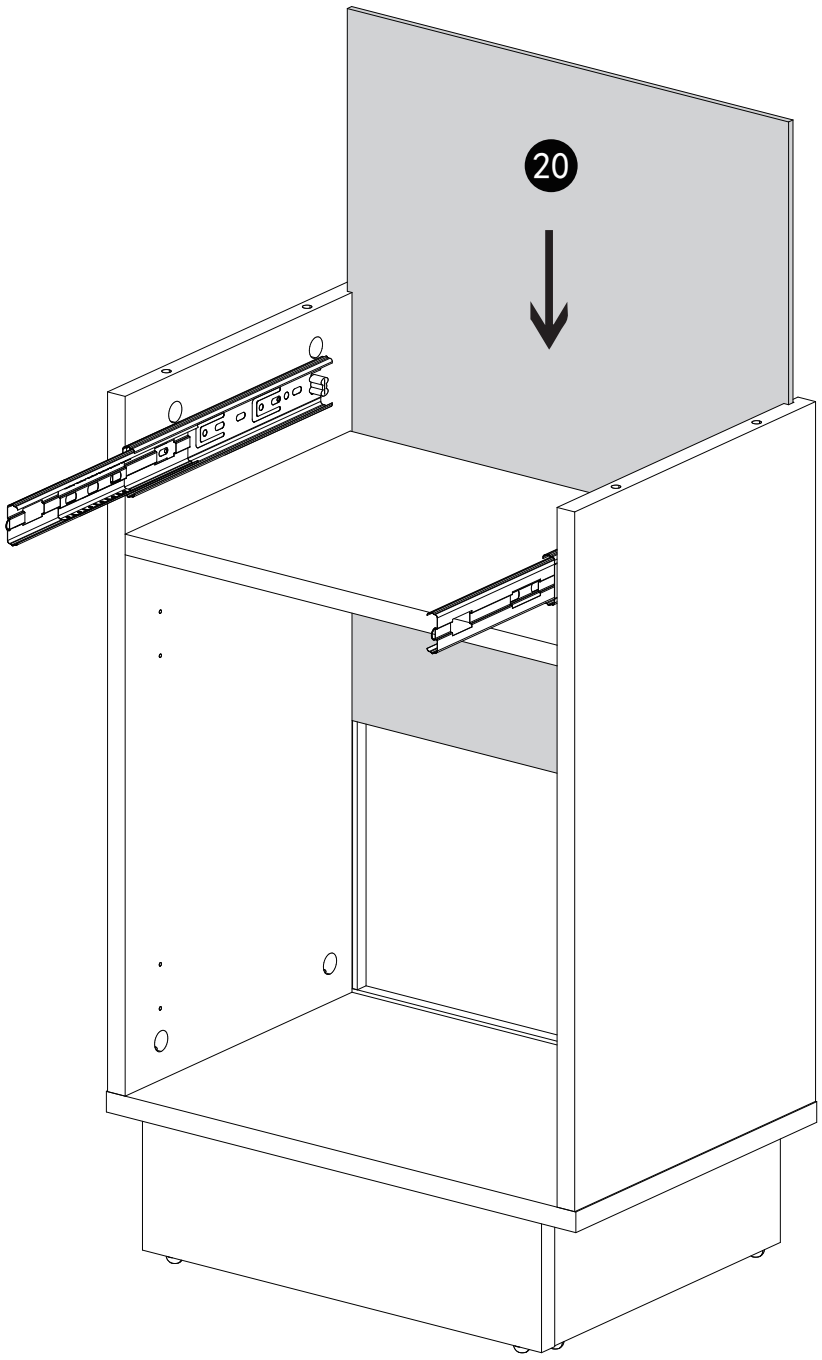

STEP11


YOU WILL NEED	
A x4	B x4

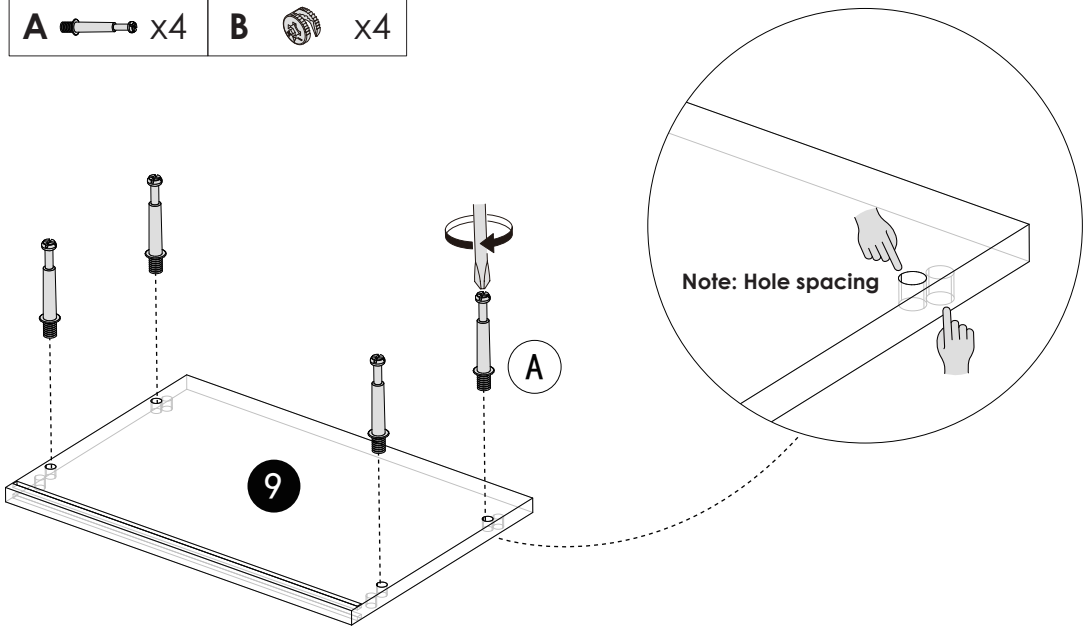

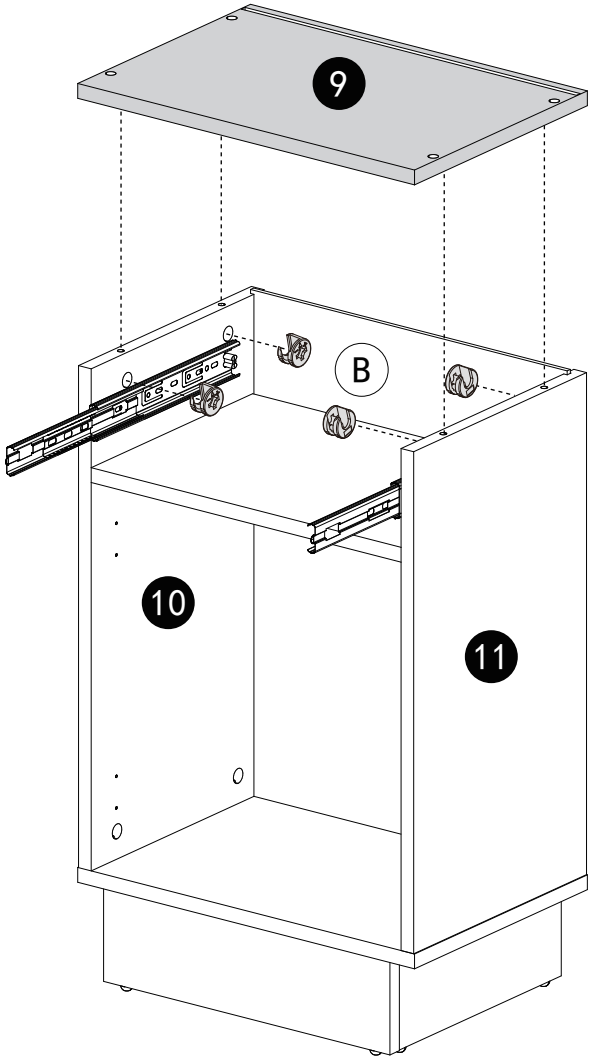


STEP12


YOU WILL NEED	
A x4	

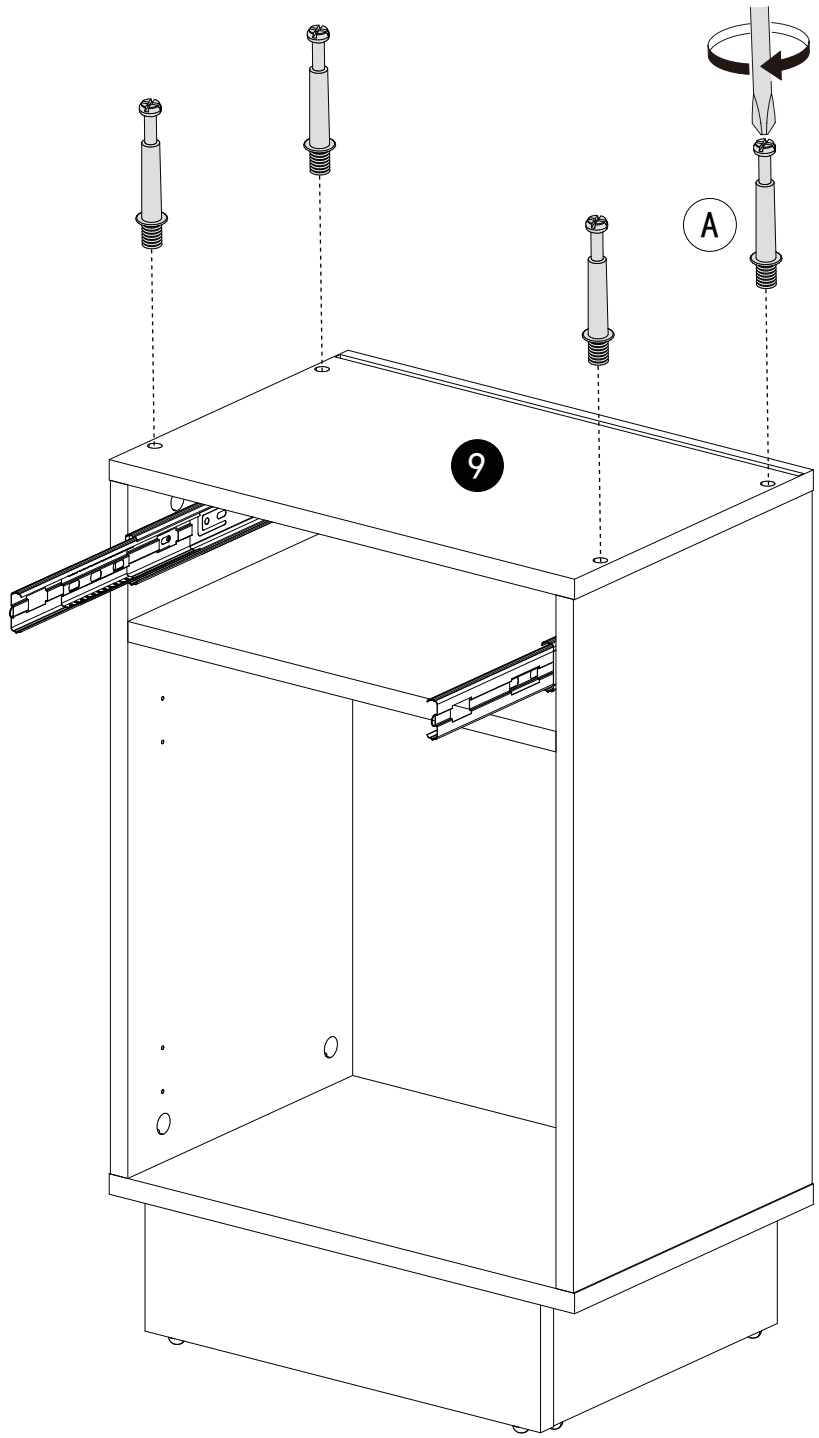

STEP13


YOU WILL NEED	
A x2	B x2

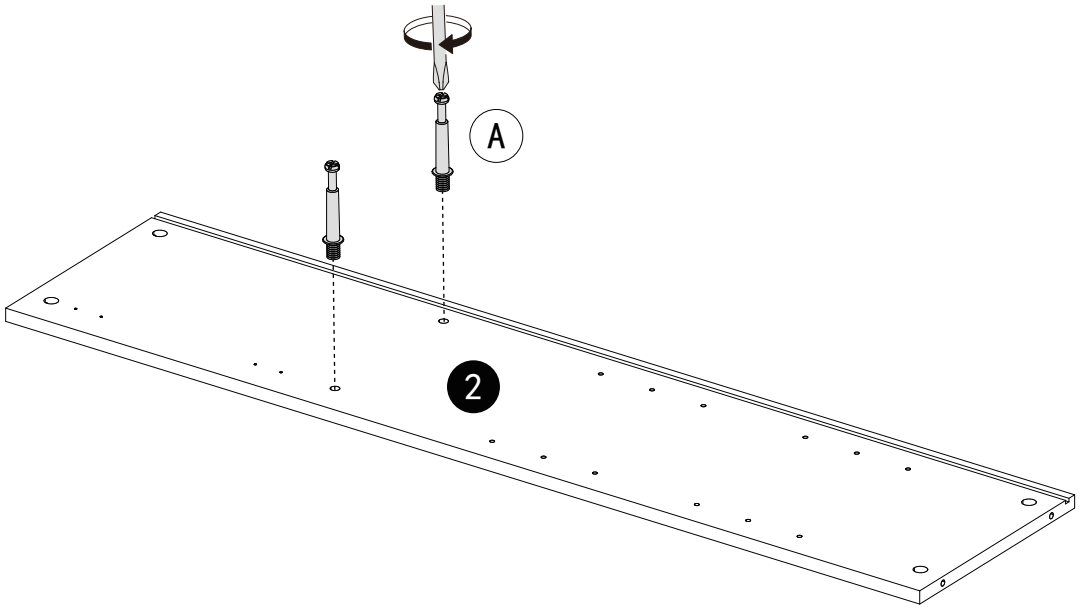


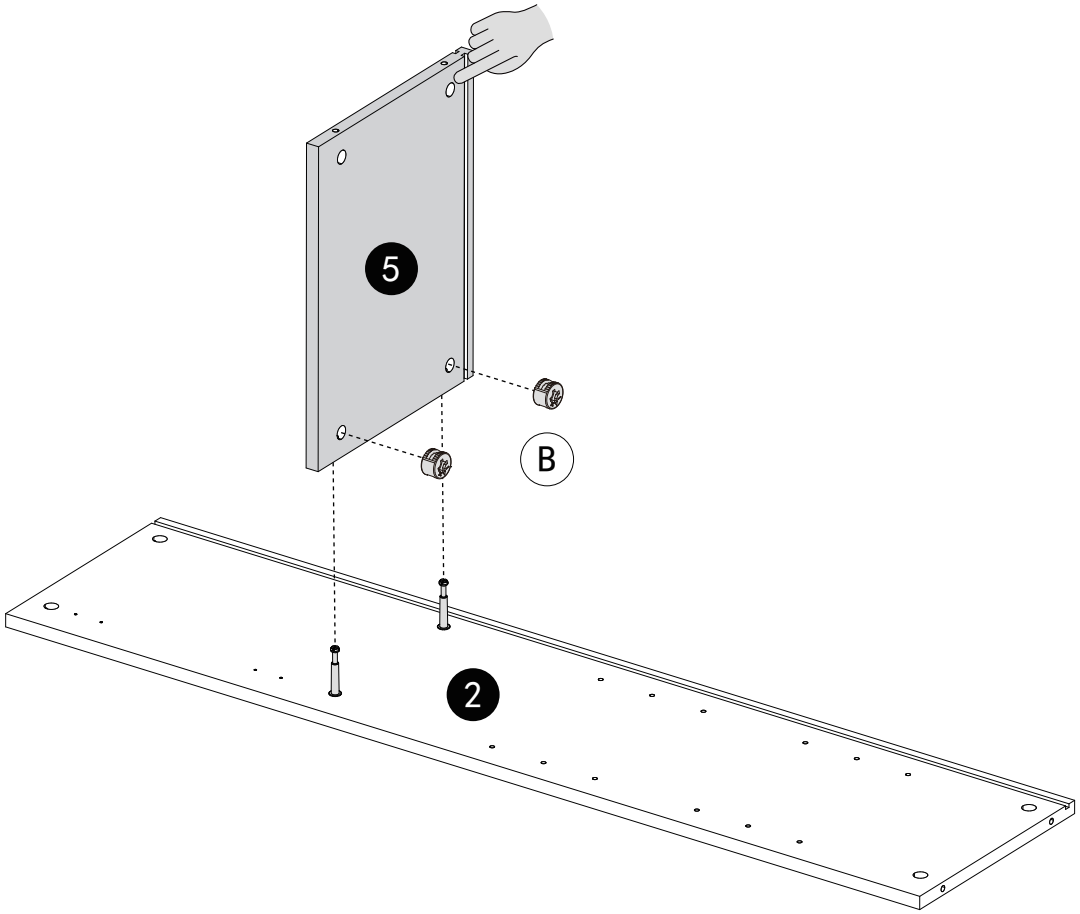


STEP14

YOU WILL NEED	
A x2	B x2

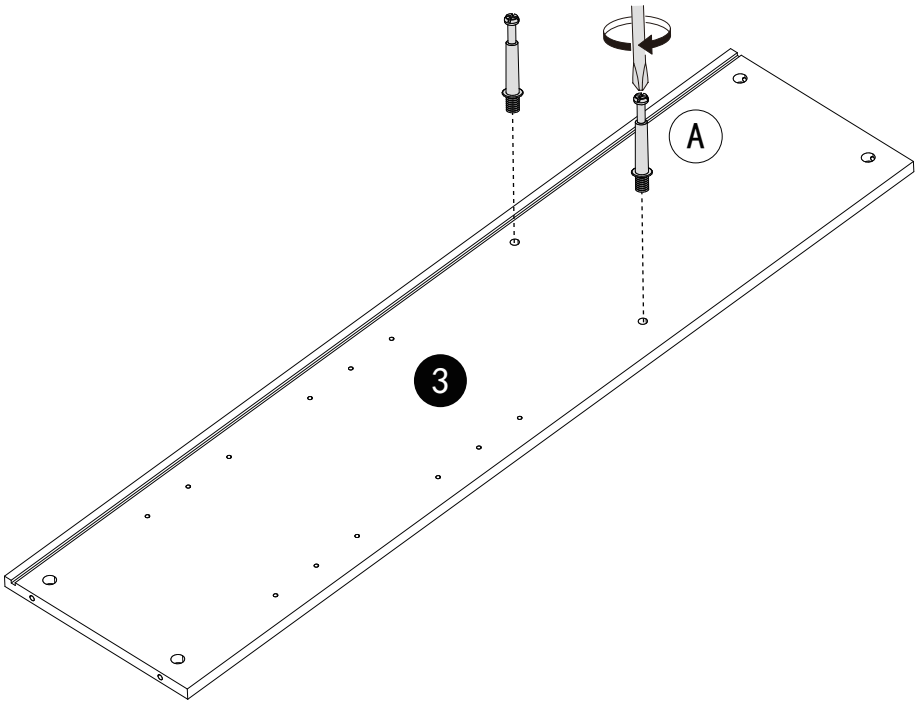

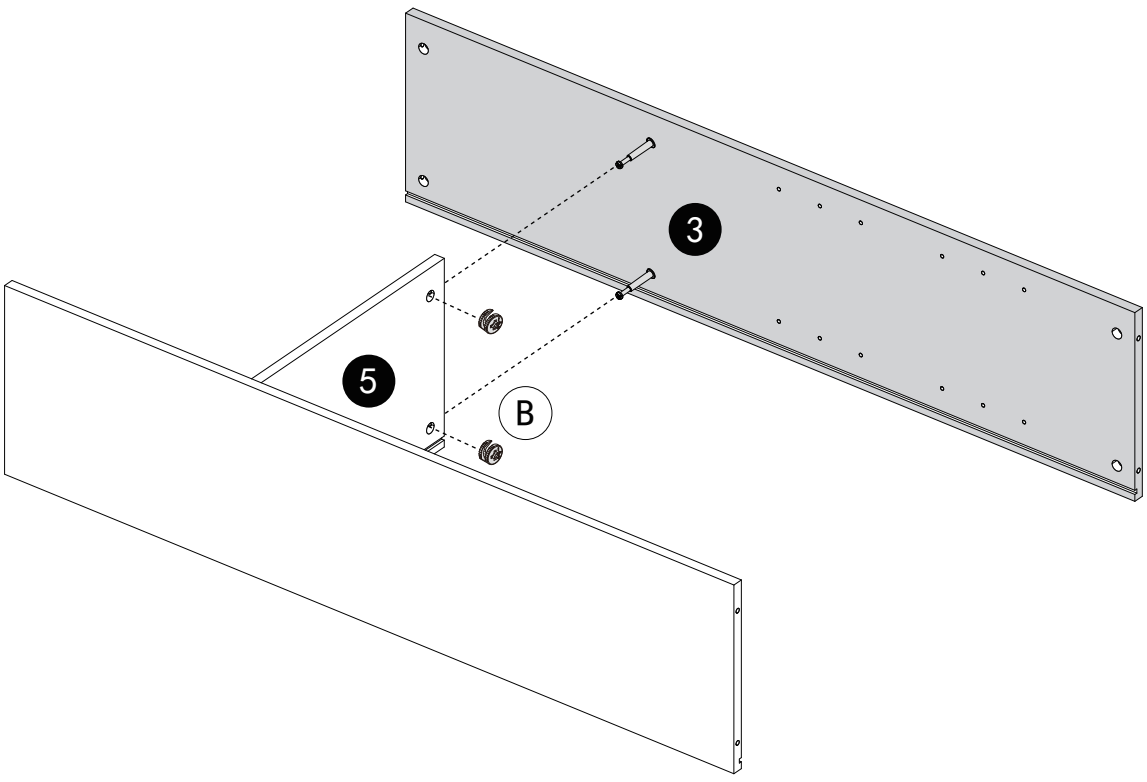



STEP15

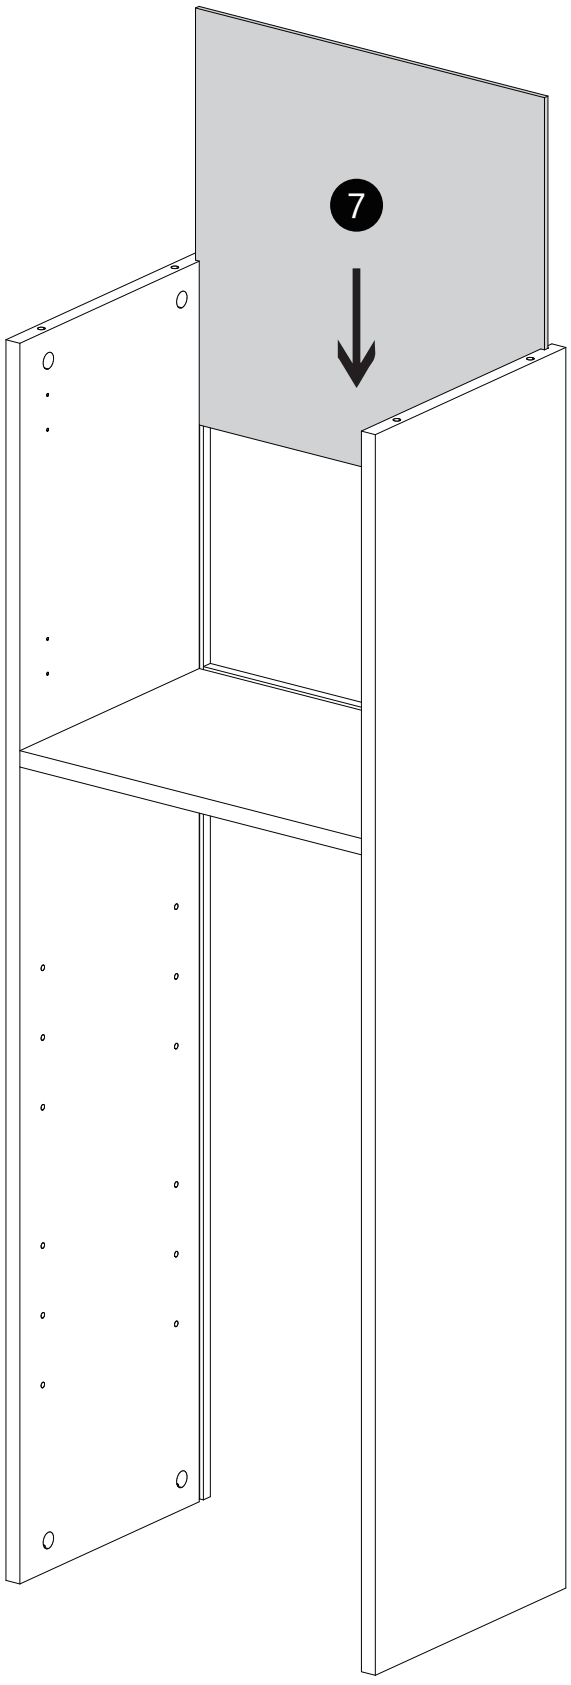


STEP16

YOU WILL NEED	
A x4	B x4

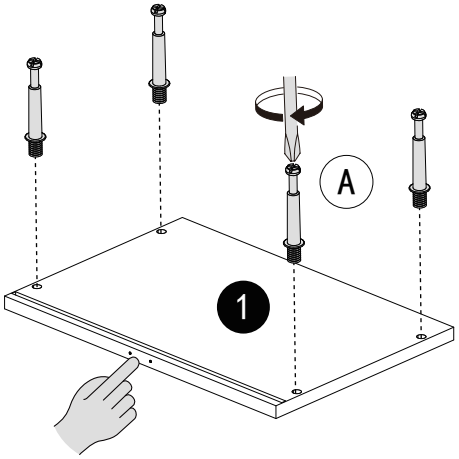

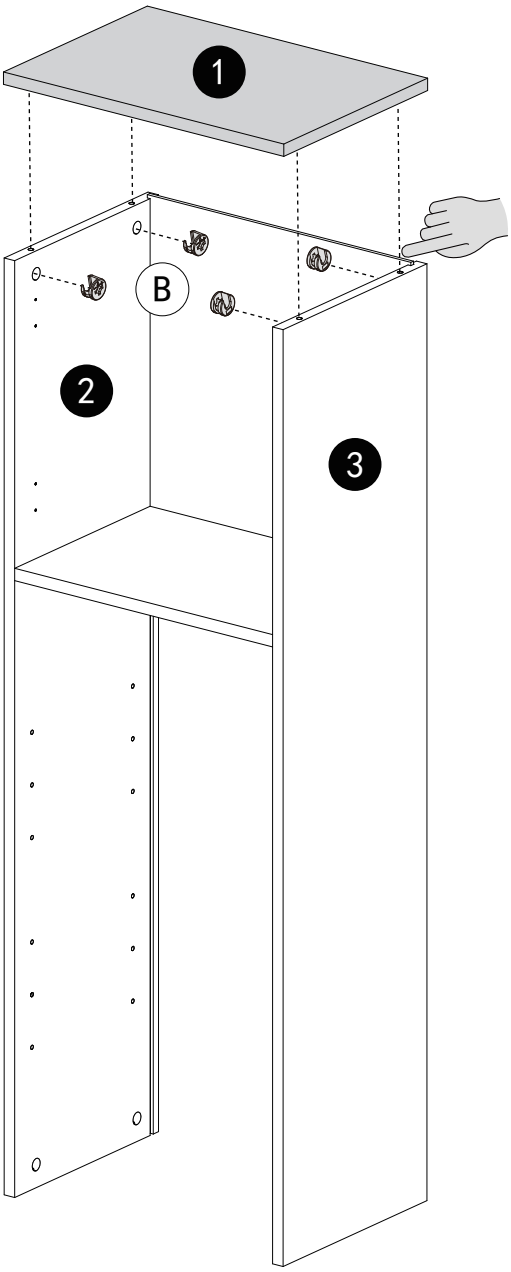


STEP17

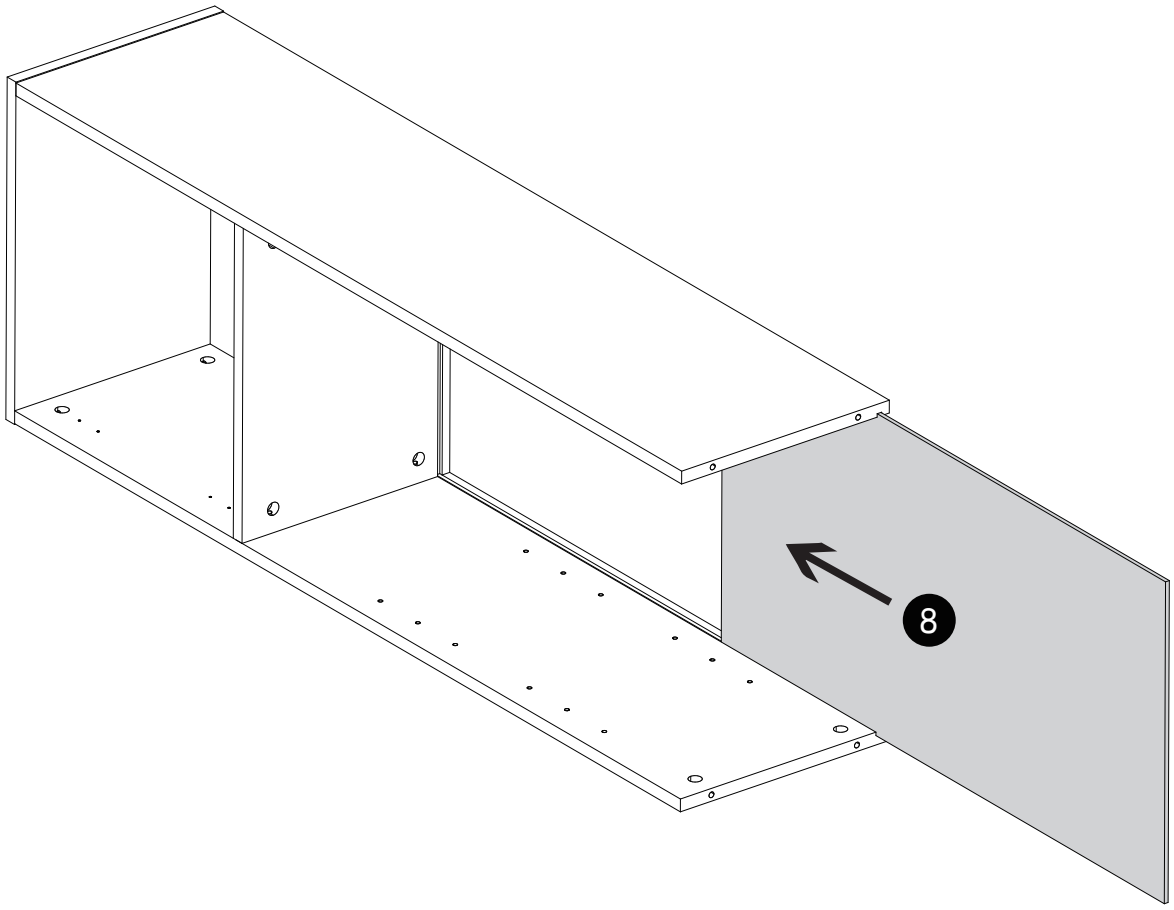


STEP18

YOU WILL NEED	
B x4	

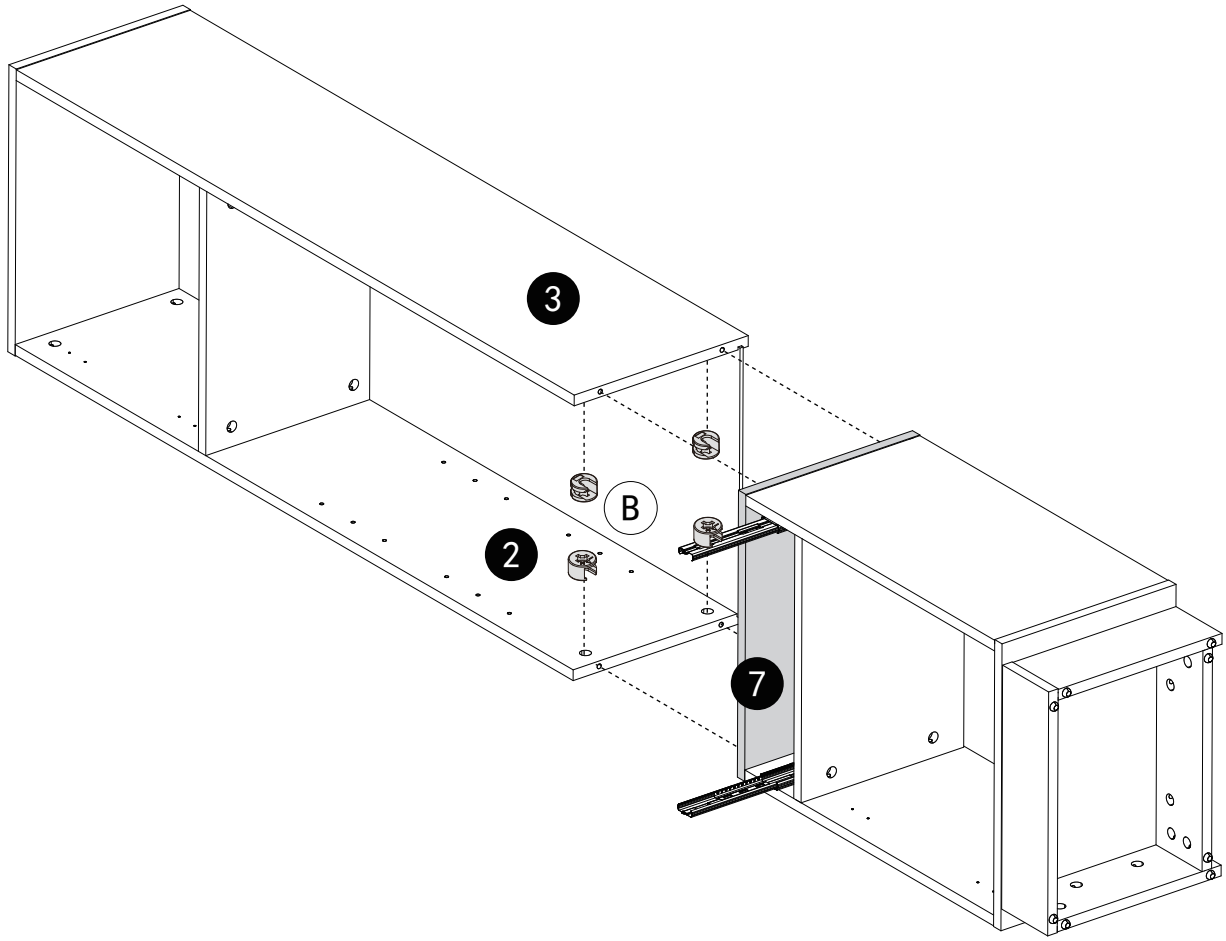



STEP19


YOU WILL NEED			
J			x16

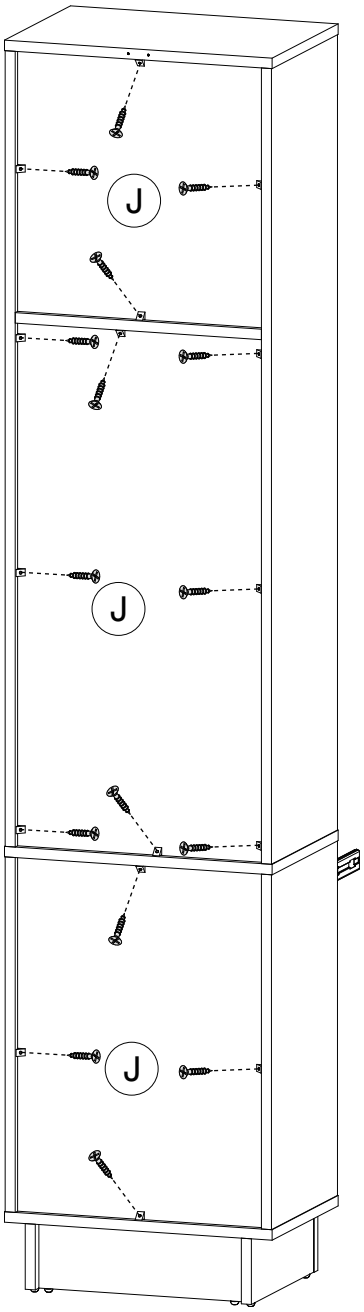


Note: J fittings must be installed, otherwise the cabinet will shake unsteadily.

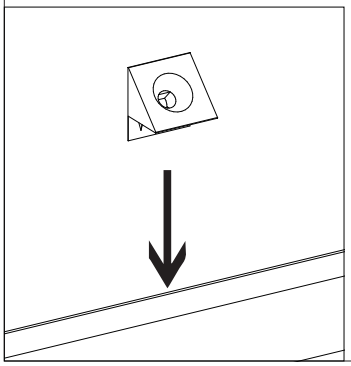

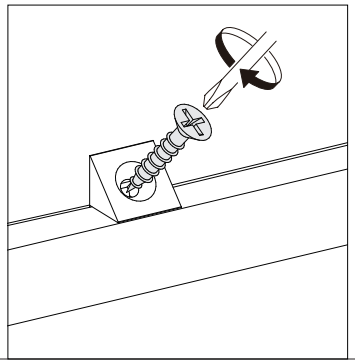


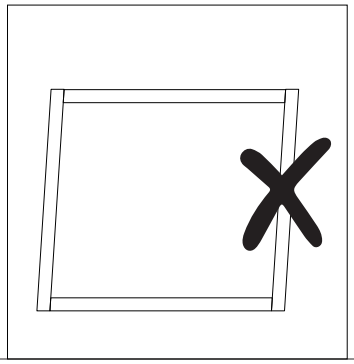

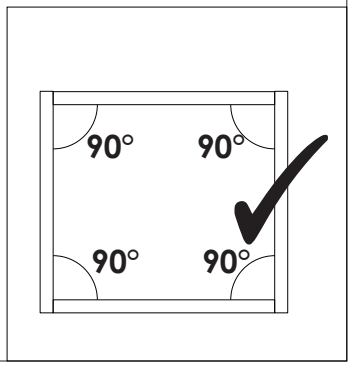


STEP20

YOU WILL NEED	
A x4	F x4

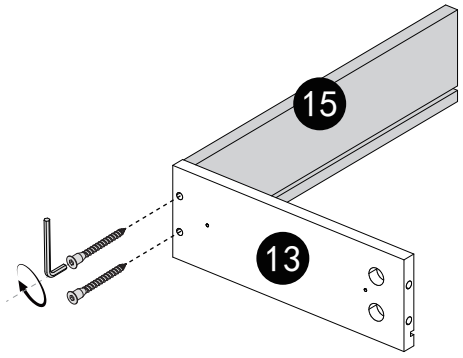


1

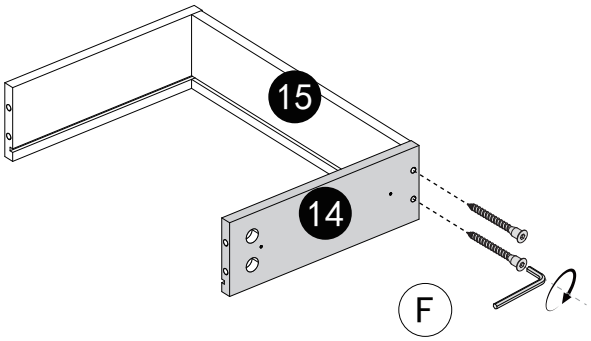


2

3

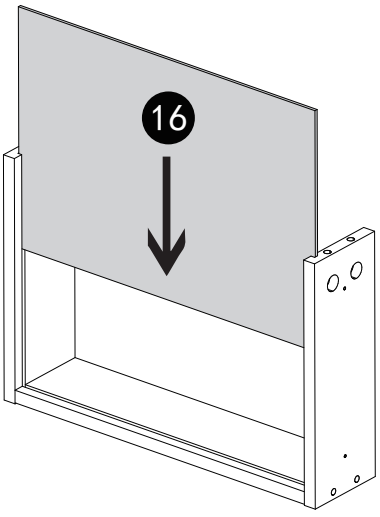



4

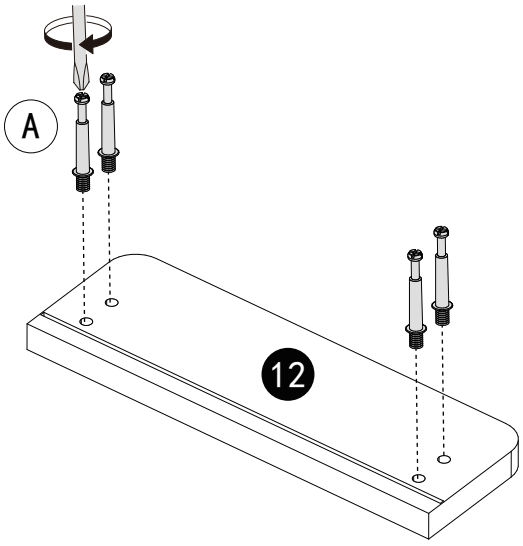


STEP21


YOU WILL NEED		
B x4	C2 x2	G x4

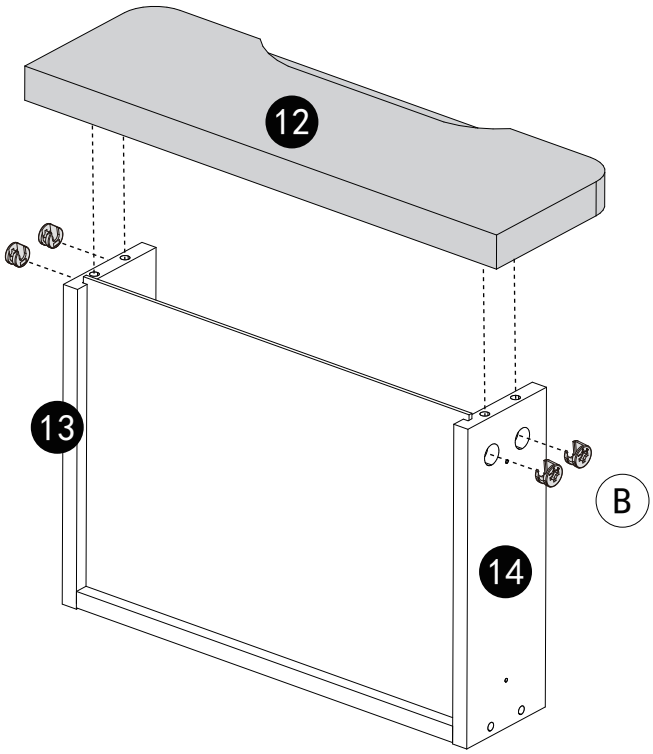

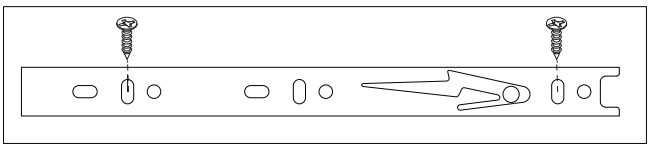


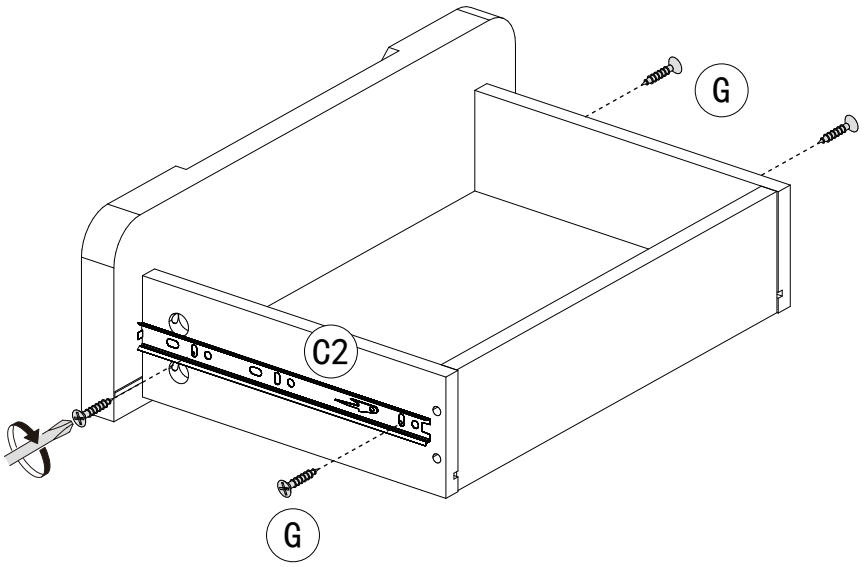


STEP22

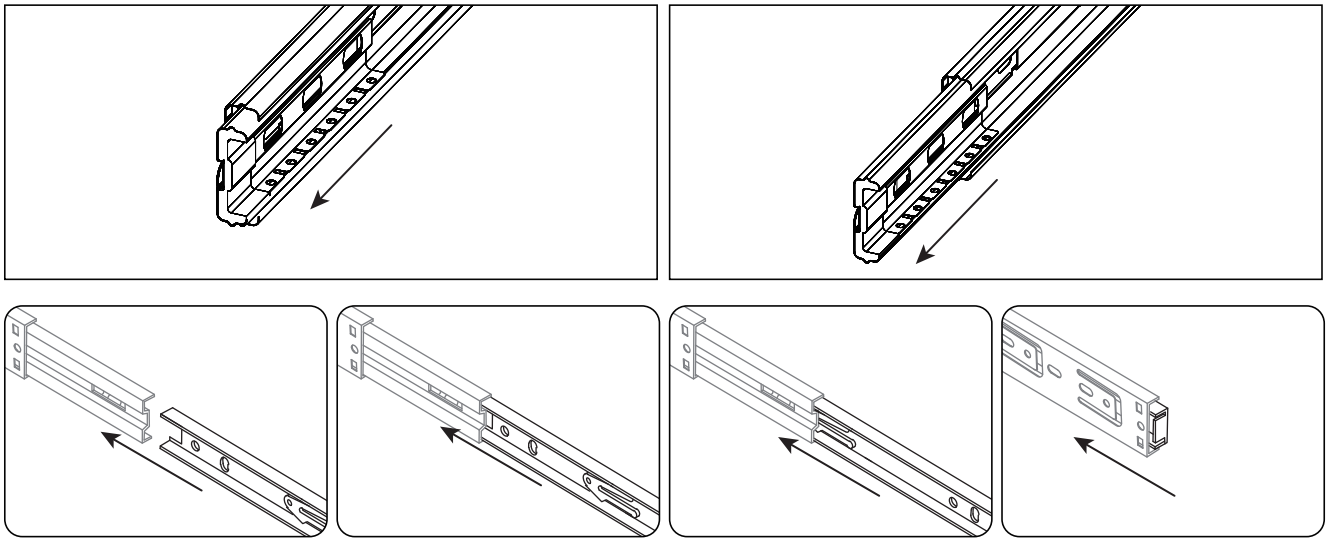

Remark: Align the slide runners on the drawer with the unit and push it carefully inside until it stops. If the drawer does not go in smoothly, please take it out and repeat the step.

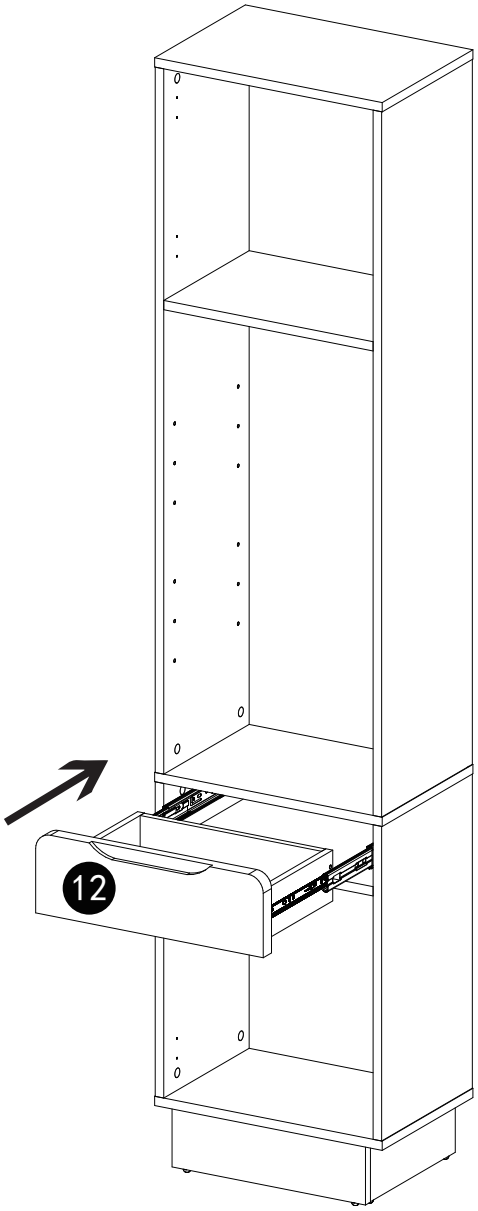


STEP23

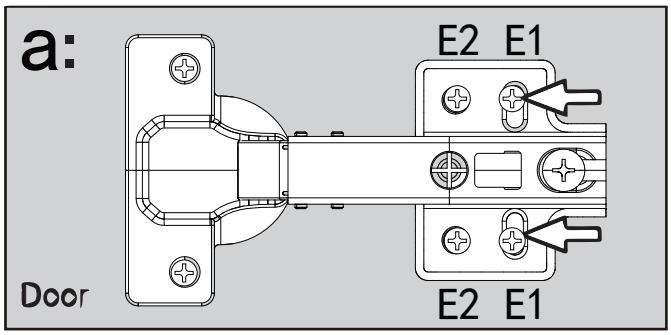

Straight arm

Hinge adjustment


To facilitate the adjustment, install the E1 screw first, and then install the E2 screw.

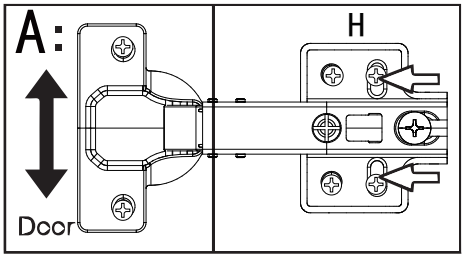

Hinge adjustment

A:To move doors up or down:loosen screws shown and move doors to suit.


Once doors are aligned, re-tighten Screws

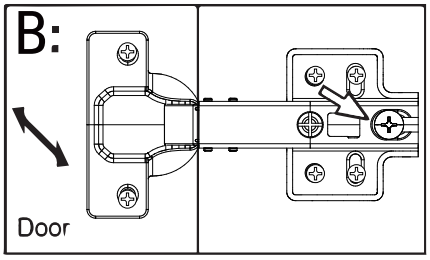

Hinge adjustment

B:To move doors in or out: loosen screw shown and move doors to suit.


Re-tighten screws

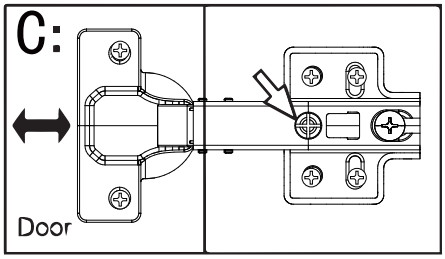


Hinge adjustment

C:To move doors left or right:loosen screw shown to move doors to suit.


A

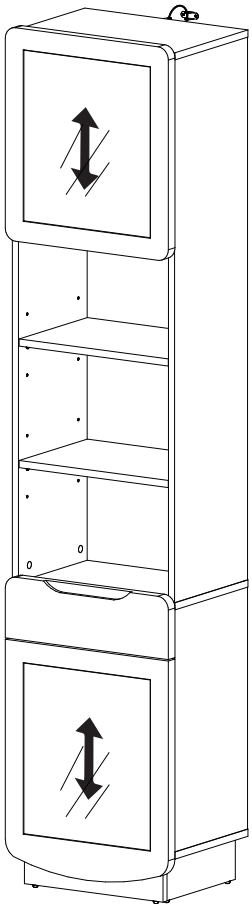

B

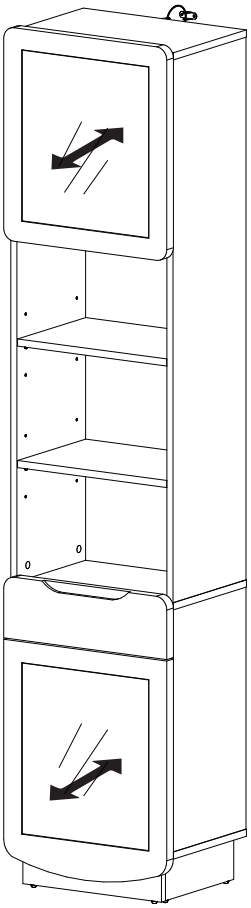



C

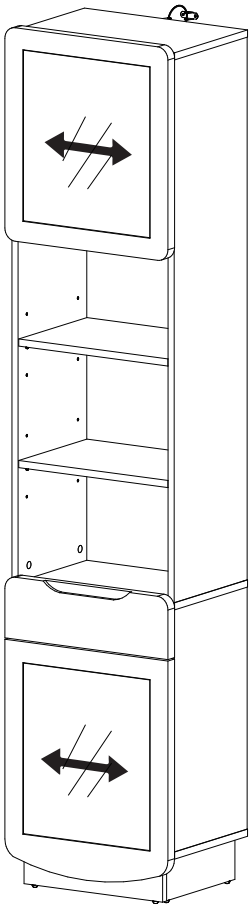

STEP24


YOU WILL NEED	
E x8	H x4

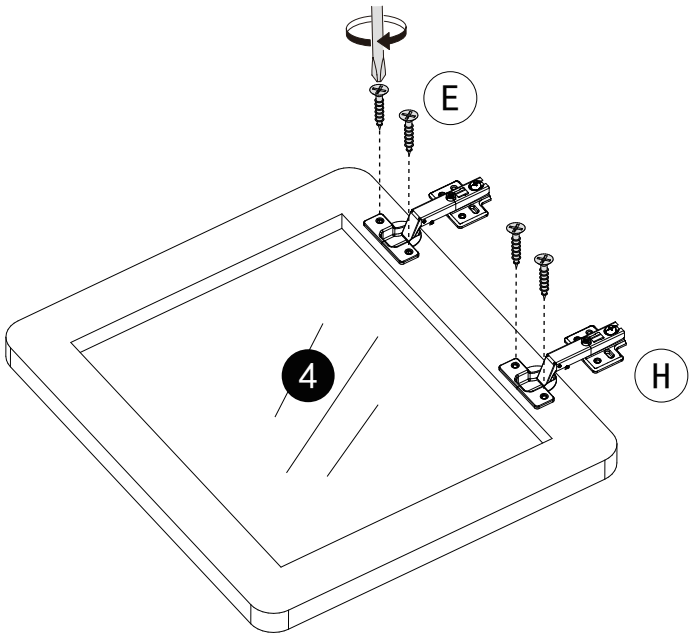

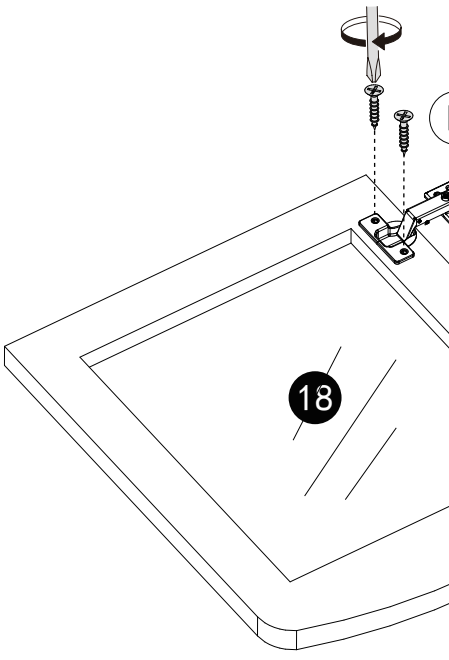


STEP25

YOU WILL NEED	
E x16	

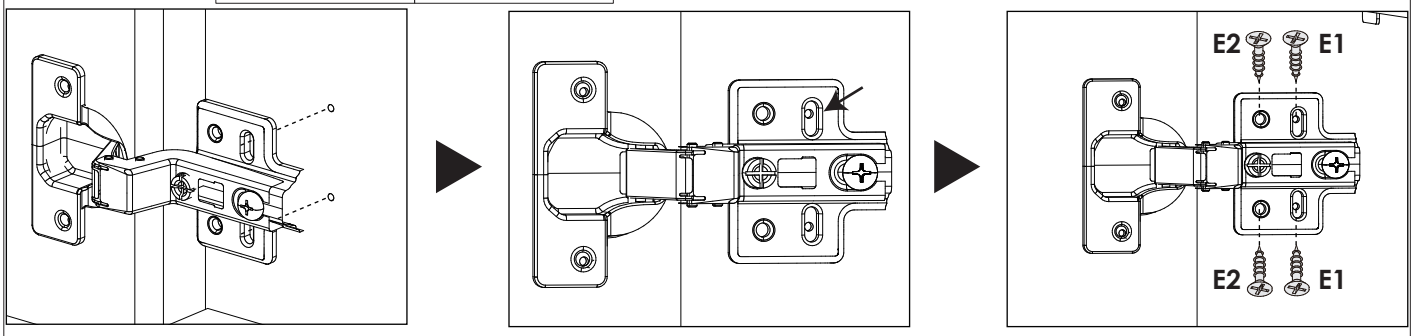



First install E1 , which allow for fine adjustment, then install E2 to secure the assembly.
Please note: The door panel can no longer be adjusted vertically after the E2 is installed.

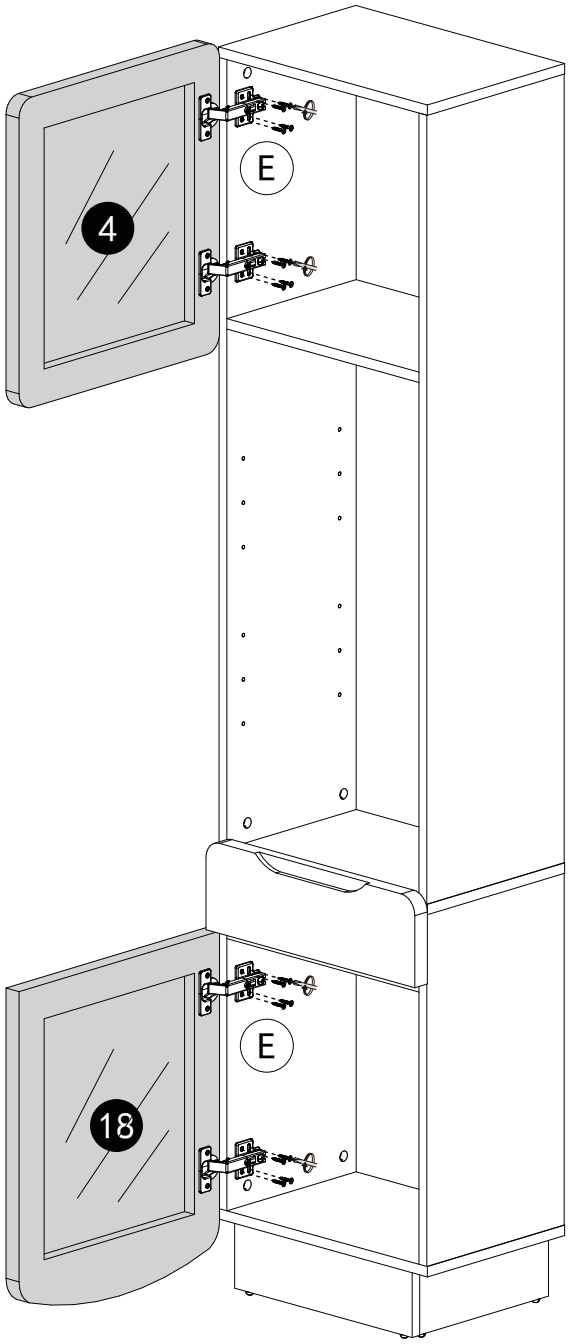

STEP26

YOU WILL NEED	
D	x8

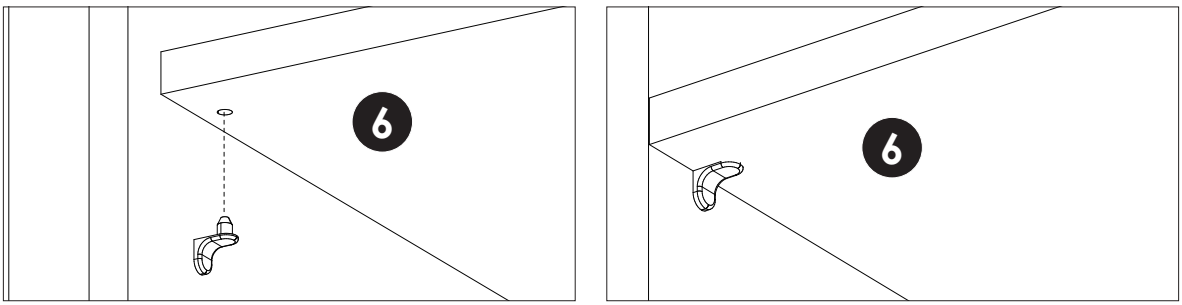


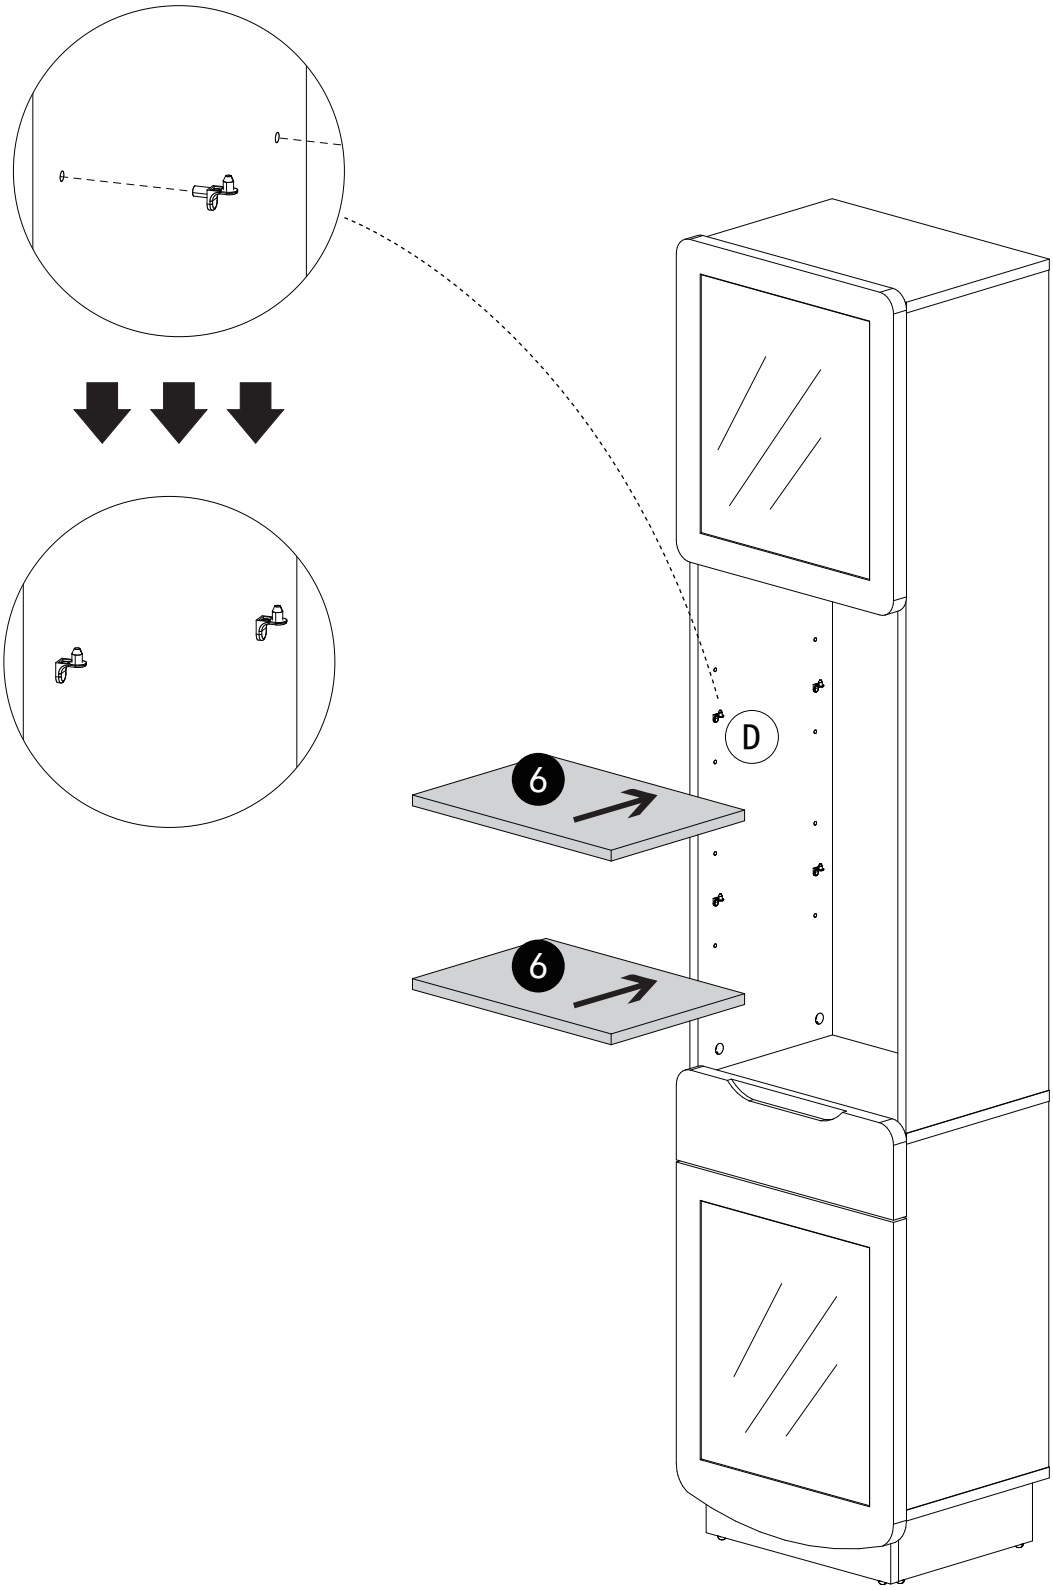


STEP27

YOU WILL NEED


K x1

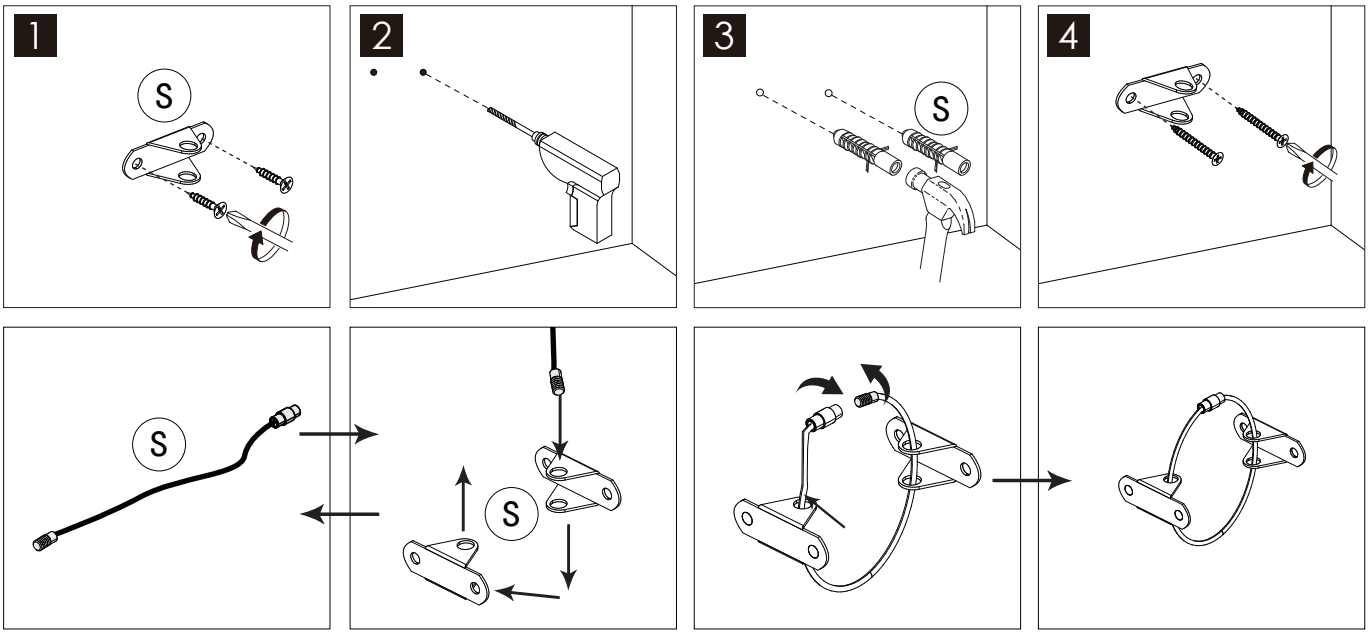


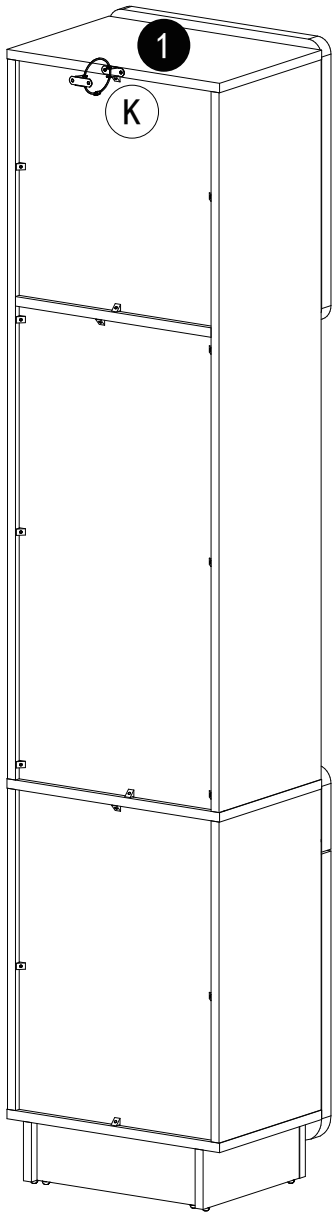


STEP28


YOU WILL NEED	
L x20	

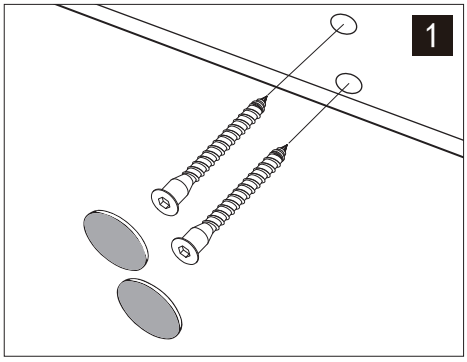

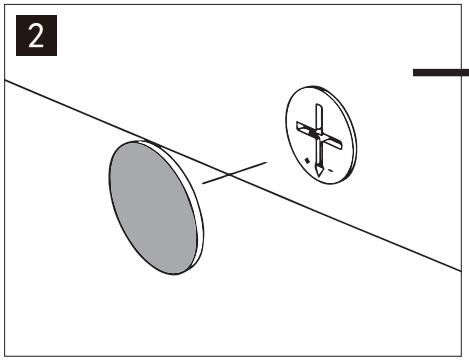

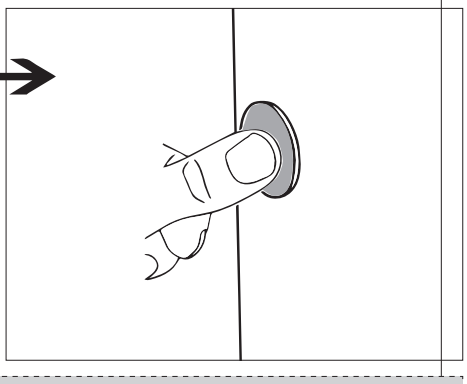

Add **L** fittings to all exposed holes on the front of the product

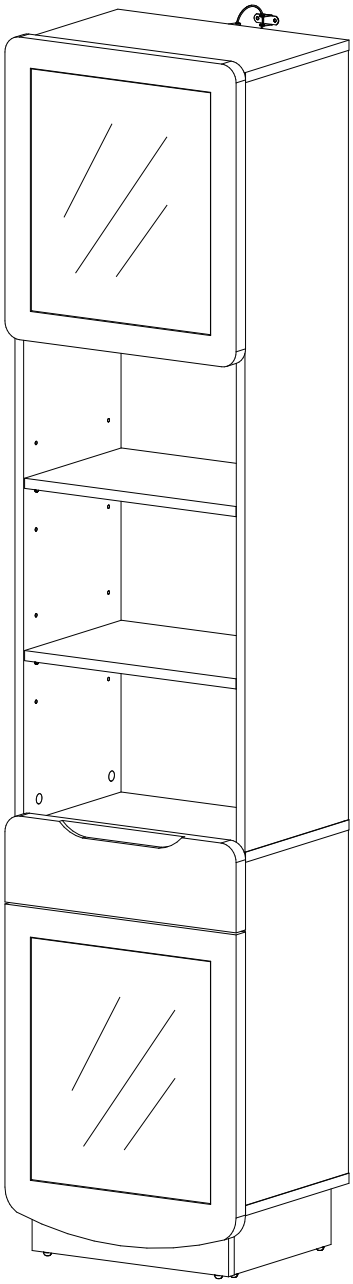

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.

