VIVOHOME

THANK YOU!

NOTE:

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.

Thank you for using VIVOHOME products in your home!

Thank You for Purchasing from

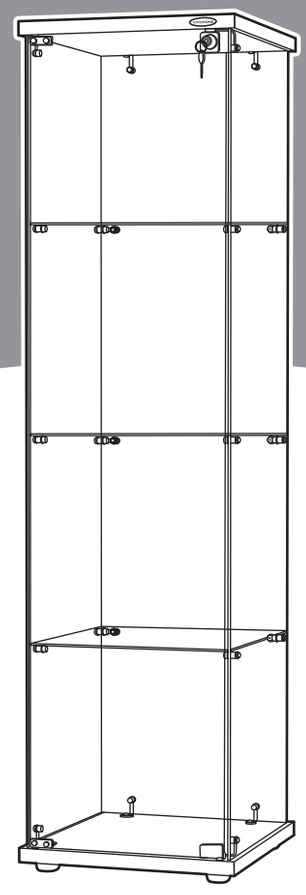
VIVOHOME

Made in China

VIVOHOME

HOW-TO

USER MANUAL



4 Layers Glass Showcase

Assembly is EASY!

WE WANT YOU TO ENJOY LIFE AT HOME

GO TO THE PRODUCT LISTING PAGE
FOR AN INSTRUCTIONAL VIDEO!

SECTION A

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and transfer it if you transfer the product to another user.
- This summary may not include every detail or all possible variations of the steps. Please contact us if further information or help is needed.

SECTION B

Note

- The product must be assembled and used in accordance with the provisions of the manual.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects directly on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface. To avoid product damage, do not place the unwrapped product directly on the ground.
- Please do not stand or sit on the wooden boards.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.


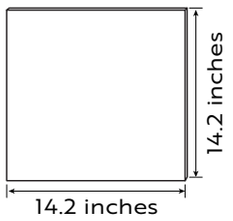
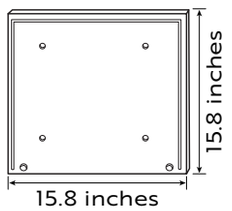
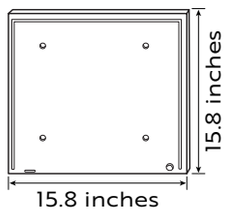
SECTION C

Warning

- Children are not allowed to assemble the product. During assembly, keep all small parts out of the reach of children, as it may be fatal to swallow or inhale them.
- Children are forbidden to climb or play on the product. Climbing or playing on the product may result in serious bodily injuries.



SECTION D





Parts List and Diagram

Item No.	Reference Image	Qty.
A		x1
B		x2
C		x1
D		x3
E		x1
F		x1

SECTION D




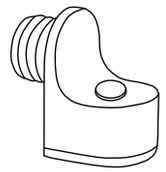
Parts List and Diagram




Item No.	Reference Image	Qty.
G		x4
I		x18
K		x1
M		x2
O		x1

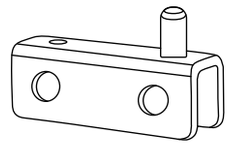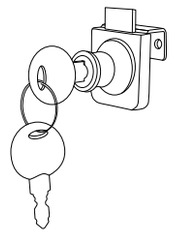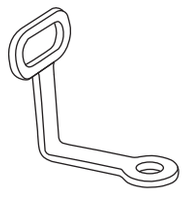Item No.	Reference Image	Qty.
H		x2
J		x8
L		x1
N		x1
1		x8

SECTION D

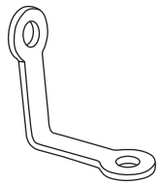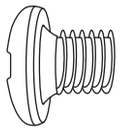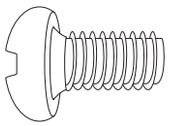
Parts List and Diagram

Item No.	Reference Image	Qty.
2		x4
4	 M4*8 mm. (0.16*0.3 in.)	x2
6	 M6*10 mm. (0.24*0.4 in.)	x8
8	 ST M4*25 mm. (0.16*1.0 in.)	x4

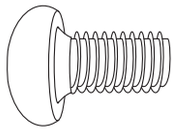Item No.	Reference Image	Qty.
3		x34
5	 M6*6 mm. (0.24*0.2 in.)	x4
7	 M6*11.5 mm. (0.24*0.5 in.)	x26


SECTION E

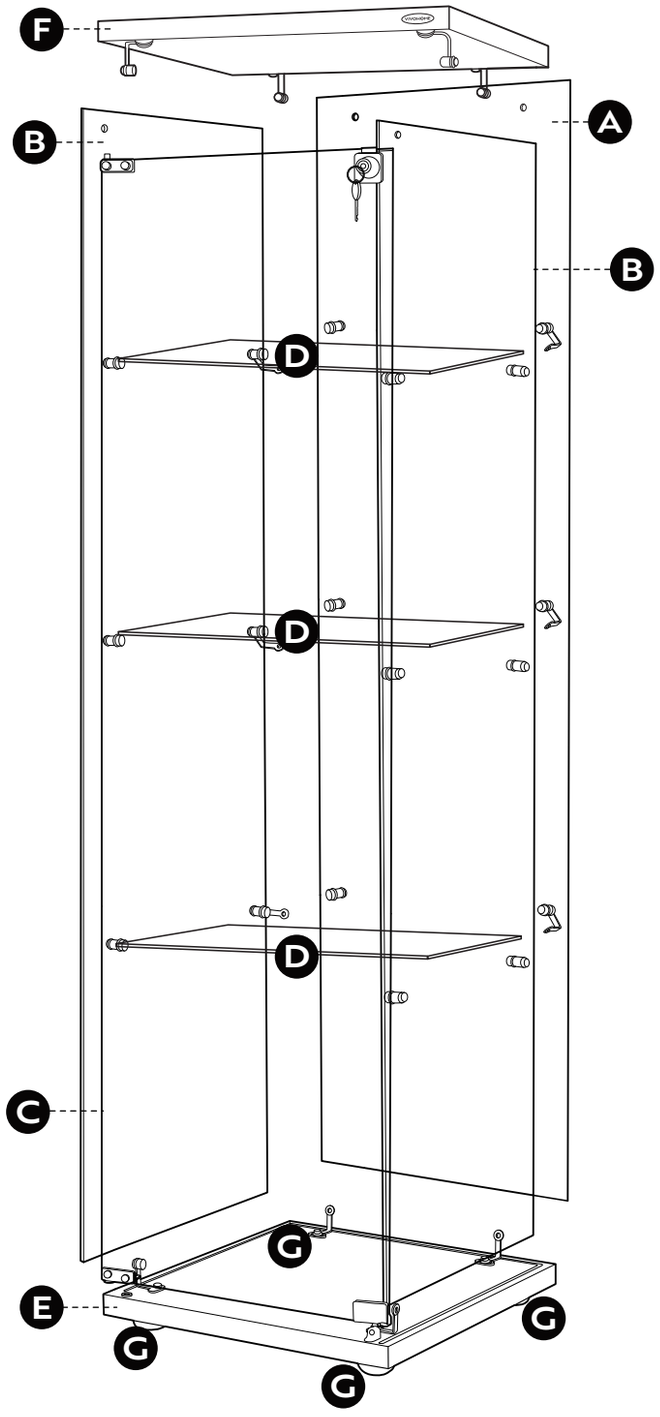Explosive View




STEP 1 — E x 1 pc. G x 4 pcs. 8 x 4 pcs.

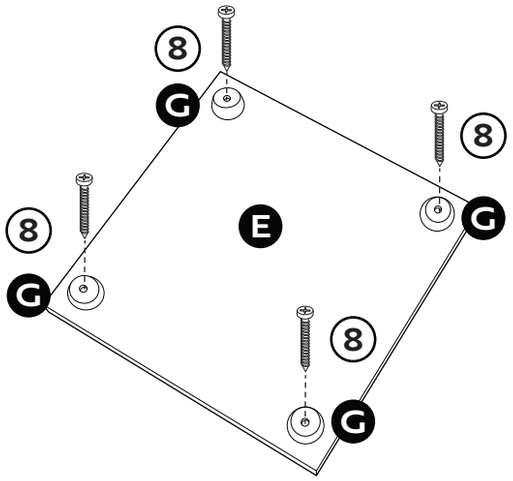Install Part G (4 pcs.) onto the Bottom Plate E (1 pc.). Fix them with #8 screws (4 pcs.).




STEP 2 — K x 1 pc. 1 x 4 pcs. 3 x 4 pcs. 6 x 4 pcs.

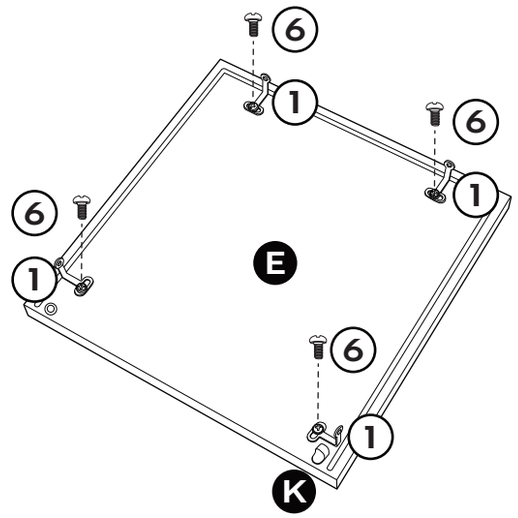Install Part K (1 pc.) and Part 1 (4 pcs.) onto the Bottom Plate E (1 pc.). Fix them with #3 washers (4 pcs.) and #6 bolts (4 pcs.).




STEP 3 — F x 1 pc. 1 x 4 pcs. 3 x 4 pcs. 6 x 4 pcs.

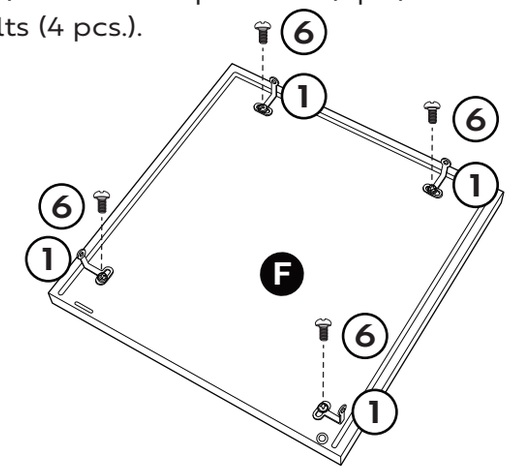Install Part 1 (4 pcs.) onto the Top Plate F (1 pc.). Fix them with #3 washers (4 pcs.) and #6 bolts (4 pcs.).




STEP 4 — B x 1 pc. I x 6 pcs. J x 1 pc. 2 x 3 pcs. 3 x 7 pcs. 7 x 7 pcs.

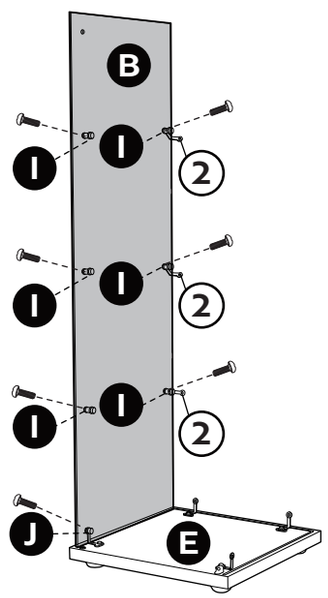Install Part B (1 pc.) and Part J (1 pc.) onto the Bottom Plate E (1 pc.), as shown in the figure. Install Part I (6 pcs.) and Part 2 (3 pcs.) onto Part B (1 pc.).




STEP 5	A x 1 pc. I x 6 pcs. J x 2 pcs. 2 x 3 pcs.
	3 x 8 pcs. 7 x 8 pcs.

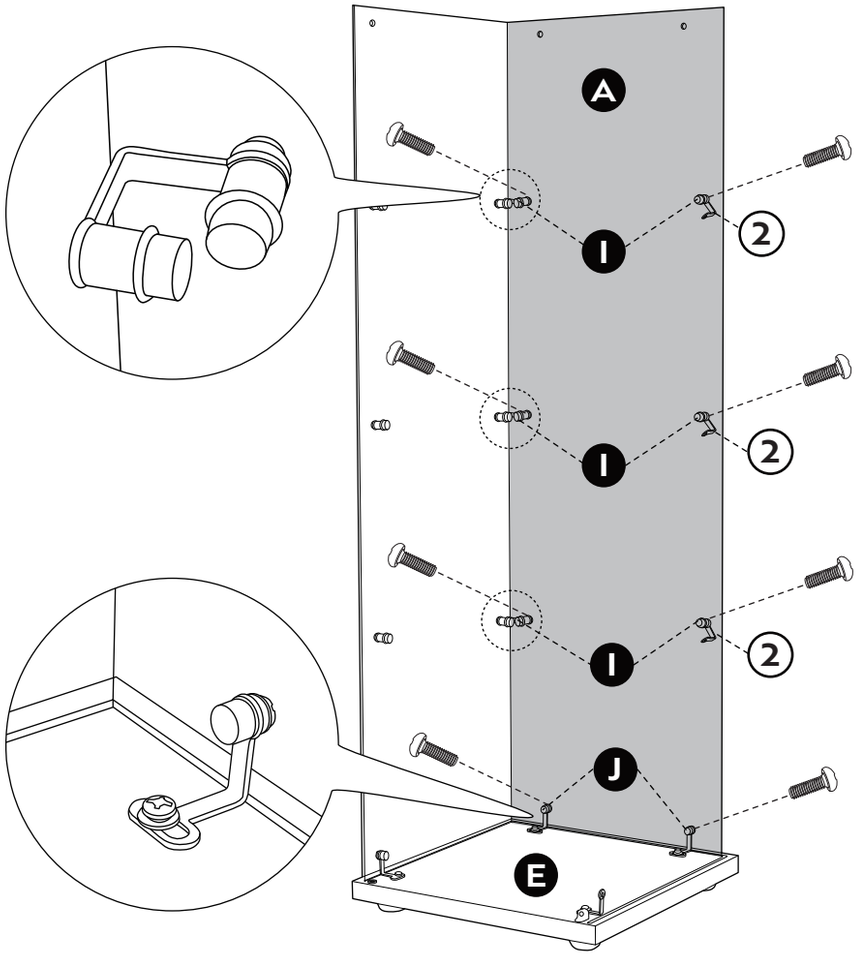Install Part A (1 pc.) and Part J (2 pcs.) onto the Bottom Plate E (1 pc.). Install Part I (6 pcs.) and Part 2 (3 pcs.) onto Part A (1 pc.).




STEP 6	B x 1 pc. I x 6 pcs. J x 1 pc. 3 x 7 pcs.
	7 x 7 pcs.

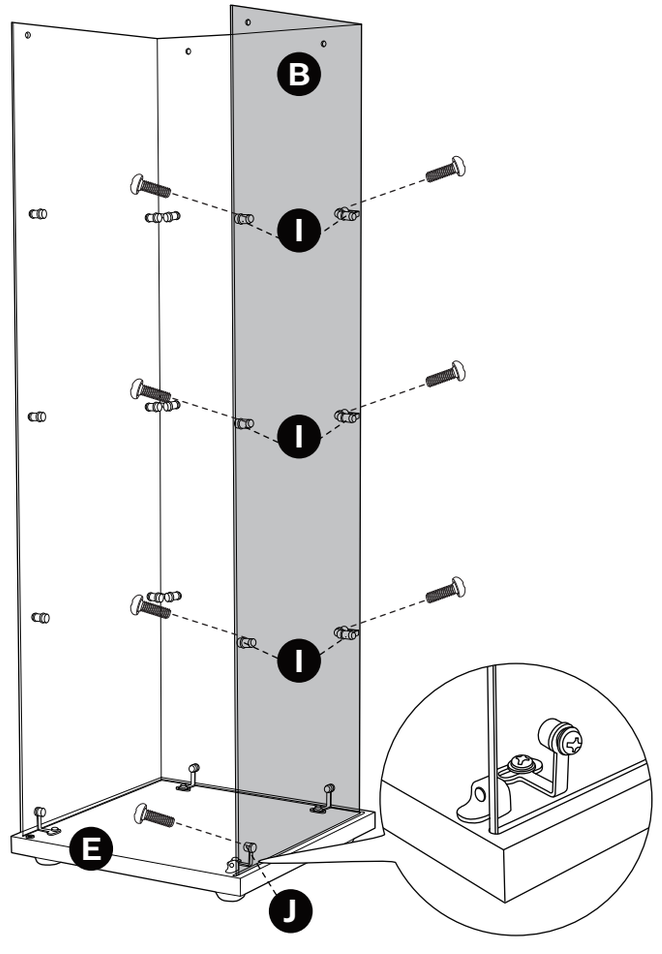Install the other Part B (1 pc.) and Part J (1 pc.) onto the Bottom Plate E (1 pc.). Install Part I (6 pcs.) onto Part B (1 pc.).




STEP 7	F x 1 pc.	J x 4 pcs.	3 x 4 pcs.	7 x 4 pcs.

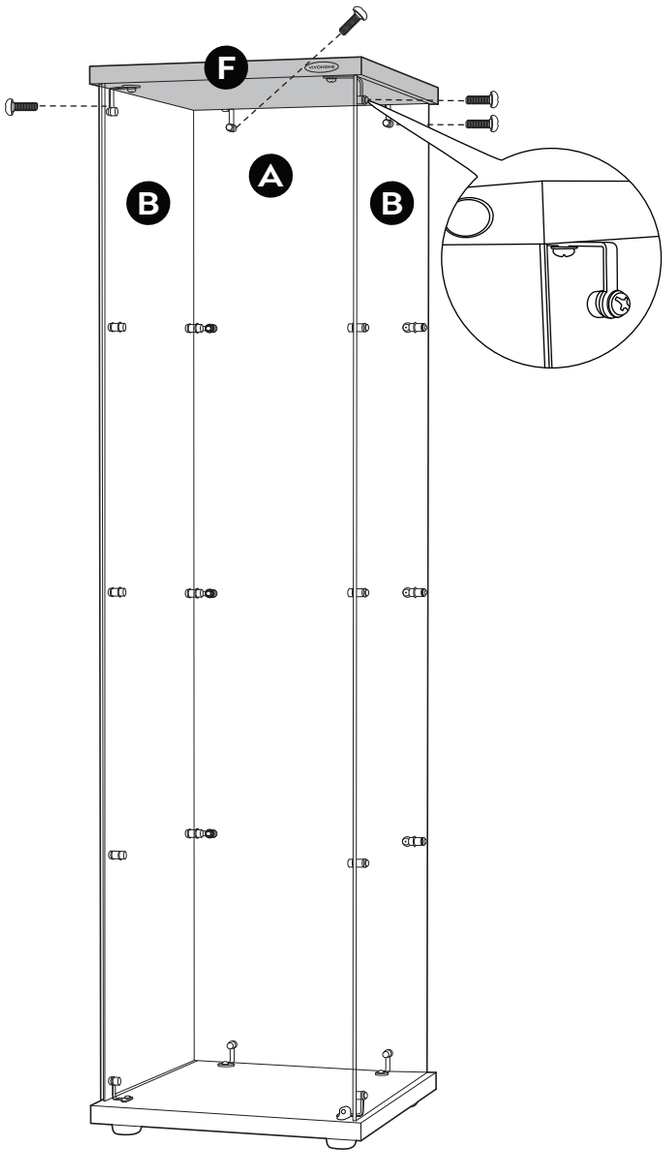Use Part J (4 pcs.), #3 washers (4 pcs.), and #7 bolts (4 pcs.) to connect the Top Plate F (1 pc.) with Part A (1 pc.) and Part B (2 pcs.).




STEP 8	C x 1 pc.	D x 3 pcs.	H x 2 pcs.	M x 2 pcs.
	5 x 4 pcs.			

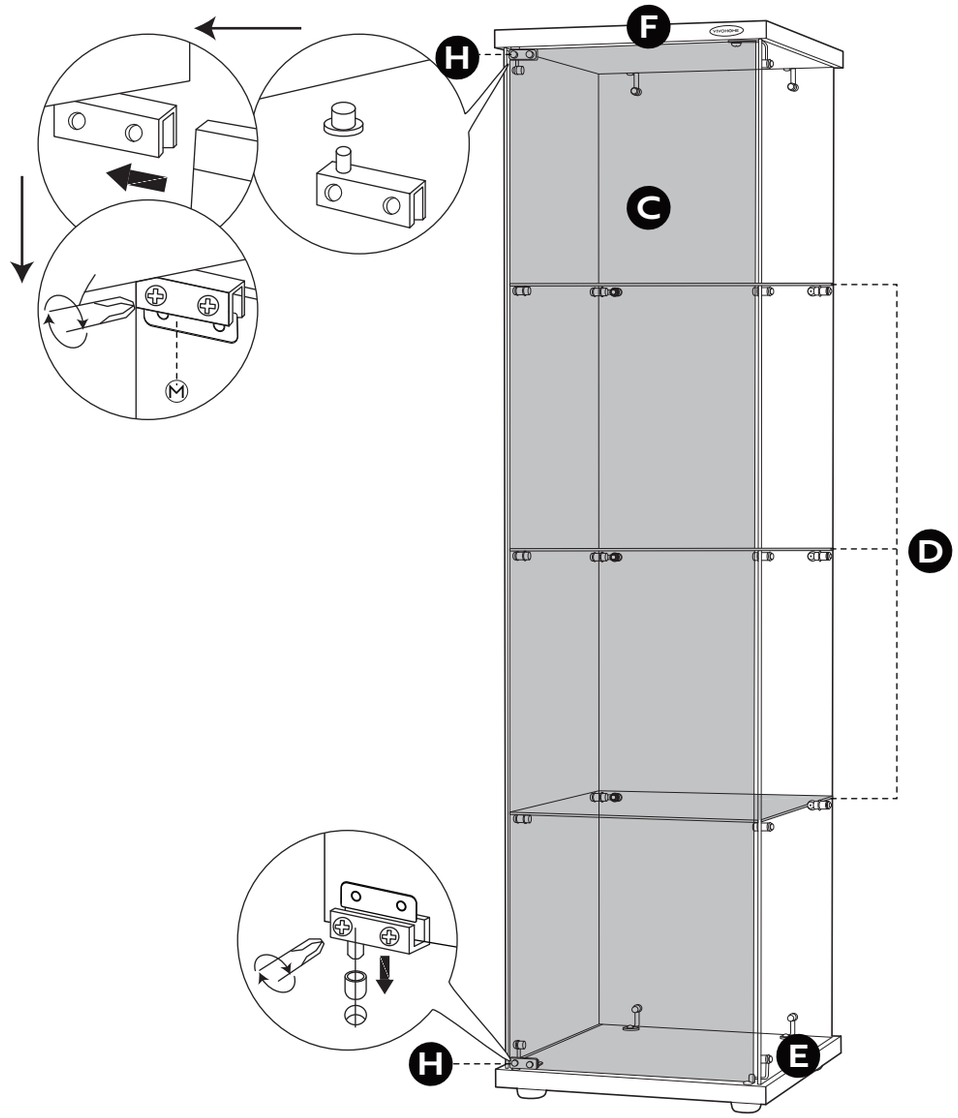
Assemble Part H (2 pcs.) respectively onto the Bottom Plate E (1 pc.) and the Top Plate F (1 pc.), as shown in the figure. Put the Middle Plates D into the glass showcase. Slide Part C (1 pc.) through Part H (2 pcs.) to put Part C between the Bottom Plate E and the Top Plate F. Finally, use #5 screws (4 pcs.) and Part M (2 pcs.) to fix Part H (2 pcs.).



STEP 9 | L x 1 pc. | N x 1 pc. | O x 1 pc. | 4 x 2 pcs.

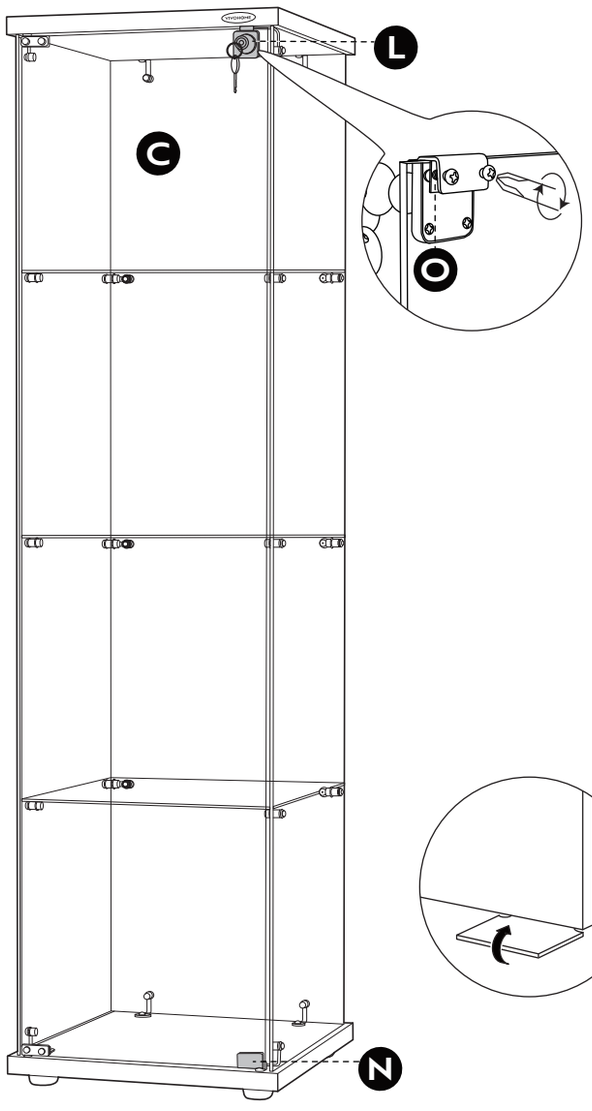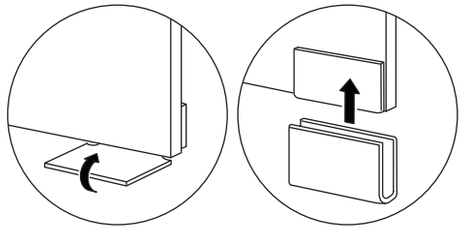
Install Part N (1 pc.) and Part L (1 pc.) onto Part C (1 pc.) at the positions shown in the figure. Fix them with the Plastic Shim O (1 pc.) and #4 bolts (2 pcs.).





STEP 10

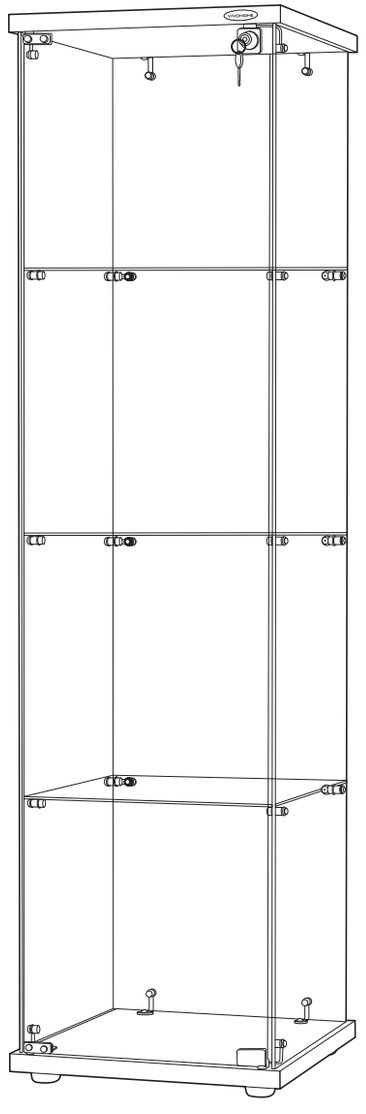The assembly is complete.



The VIVOHOME warranty program is our commitment to you.
We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

Warranty Coverage

This warranty program applies to any orders, purchases, receipts, or use of any products sold by VIVOHOME and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

Warranty Exclusions

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

SECTION G
Warranty

How to Make a Warranty Claim

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app' s direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem

VIVOHOME will provide technical support, replacement, refund, or other solutions based on the nature of the issue. If you wish to return the original package for any reason, please contact us for confirmation before proceeding. You can expect to receive a response within 48 hours.

Thank you for choosing VIVOHOME. We are committed to ensuring the quality and satisfaction of your purchase. If you have any questions or need assistance, please do not hesitate to contact our customer service team.