

EROMMY PRODUCT INSTRUCTION

Remember th at the a ssembly mig ht ta ke (0.3) hours and requires (1) peopl e.

REMEMBER

EROMMY isn’ t responsible for replacing parts lost or damaged during assembly. If you have issues, Email: **service@erommy.com** or Tel: 8886766299 instead of returning the uni t.

IMPORTANT

Finalize site preparation and foundation construction before unpacking. Remove all parts from the packaging and chec k the rig ht count and type of pie ces before assembling.

CAUTION

- Consult local authoriti es to ensure you have the required permits and are aware of any applicable local building regul ations.
- It's crucial to review the site preparation information in the manual beforehand to get everything ready.
- Read instructions thoroughly before starting assembly. Follow the steps carefully because the kit contains parts that might be damaged if constructed incorrectly.
- Please handle the kit with caution since some parts have sharp metal edges.
- Avoid working in severe winds or extreme cold and wear gloves, eye protection, and long sleeves during a ssembly or mai ntenance.
- When filling it, store heavier items near the bottom. The product isn’ t intended for children to play in, and do n't stand, sit, or store anything on the roof.


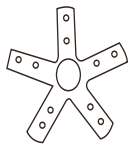


BRAND STORY





With the ideology of “ closer to life” in our mind, EROMMY is commit ted to bring you the most refinded and trustworthy products that fits your need. Our vision is to empower every customer to stay close to nature and ultim ately transform their li festyles.



EROMMY, Closer to Life!

Assembly Instruction

Parts List

A	B	C	D	E	G	H
						
5 pcs	5 pcs	1 pc	1 pc	1 pc	1 pc	1 pc

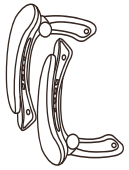I	J	K	L	M	N	O
		 M6*15mm	 M6*25mm	 M8*25mm	 M8*35mm	
1 pc	2 pcs	10 pcs	4 pcs	3 pcs	4 pcs	4 pcs

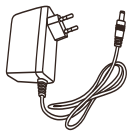P	Q	R				
						
1 pc	1 pc	1 pc				

Please note: Please check carefully if there are any missing parts before installation. If there are any missing parts, please place all the parts and take pictures then tell us the missing part number. We will reply you as soon as possible.

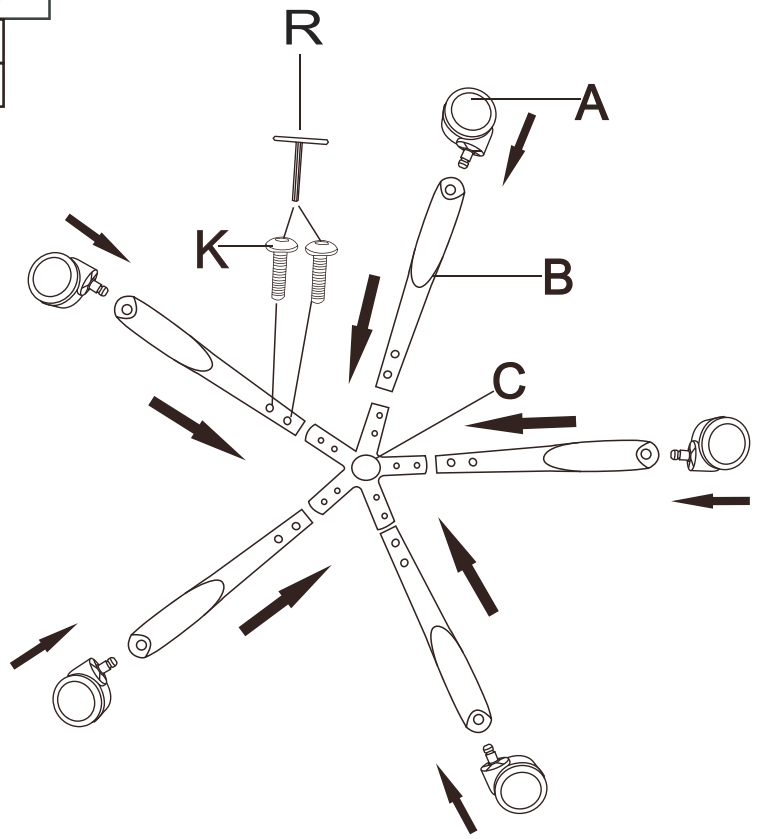
Assembly Instruction

Chair Assembly

Step 1

A*5

K*10




First, we need to prepare the connector (C), 5* metal feet (B), 5* universal wheels (A), 10*15mm screws (K) and a wrench (R). Then, according to the figure, insert the 5* metal feet into the connector, align the screw holes, install the screws and tighten them. Finally, a universal wheel is installed on the tail of each metal foot.

Assembly Instruction

Chair Assembly


Step 2

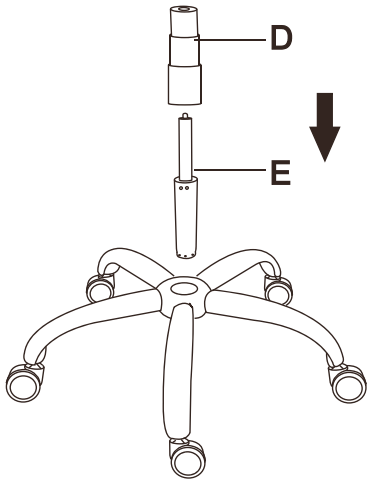D*1
E*1



Step 3

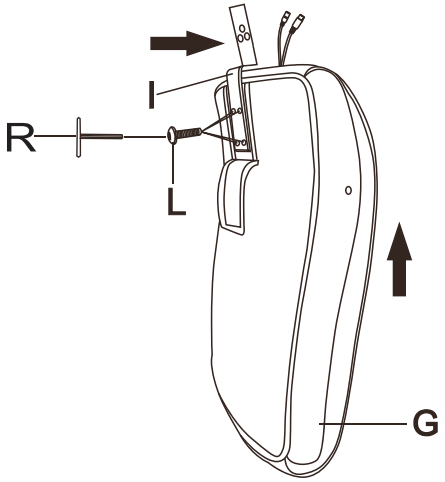L*4
I*1




As shown in the figure, insert the connecting piece 'I' into the interf at the bottom of the backrest and fix it with 4 screws numbered 'L'

Assembly Instruction

Chair Assembly

Step 4

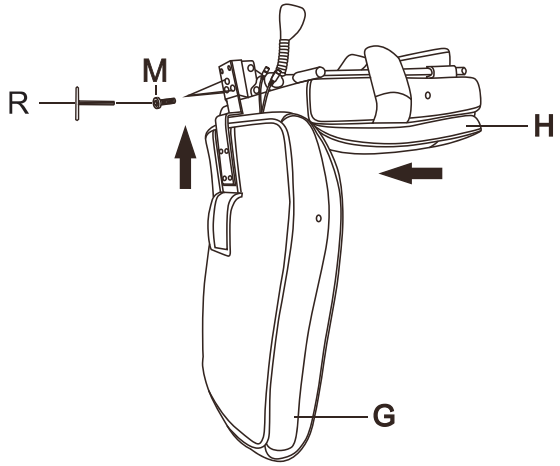
M*3



As shown in the figure, insert the other end of the connecting piece 'I' into the interface behind the cushion and fix it with 3 screws numbered 'M'.

Step 5

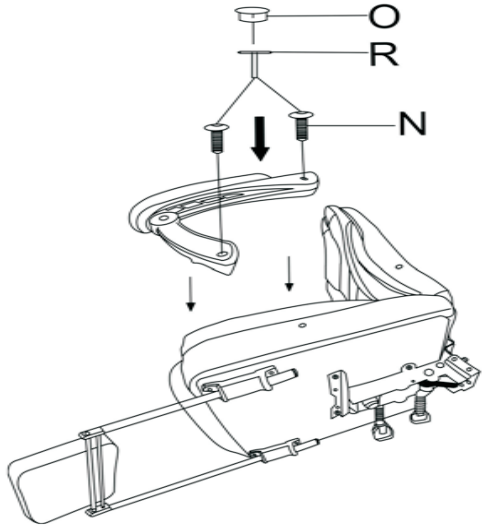
J*2
N*4
O*4



Assembly Instruction

Chair Assembly

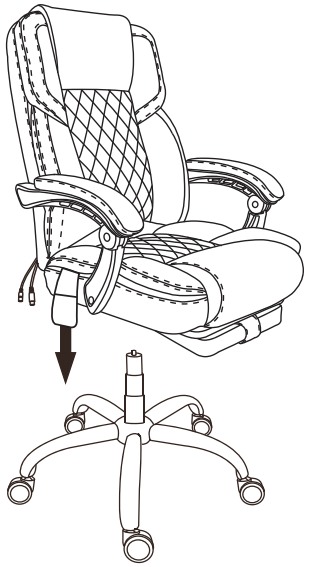
Step 6



Step 7

P*1

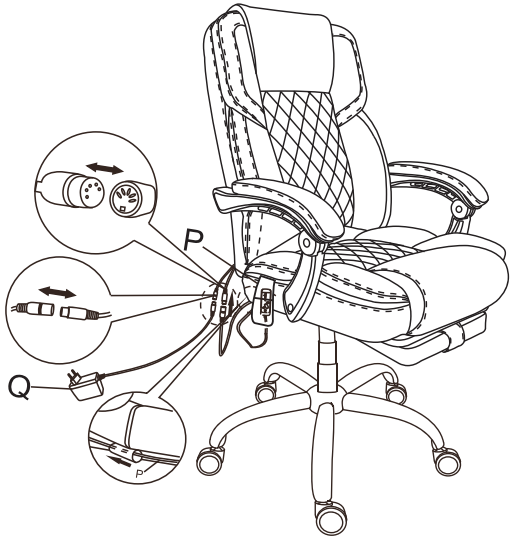
Q*1



Assembly Instruction

Chair Assembly

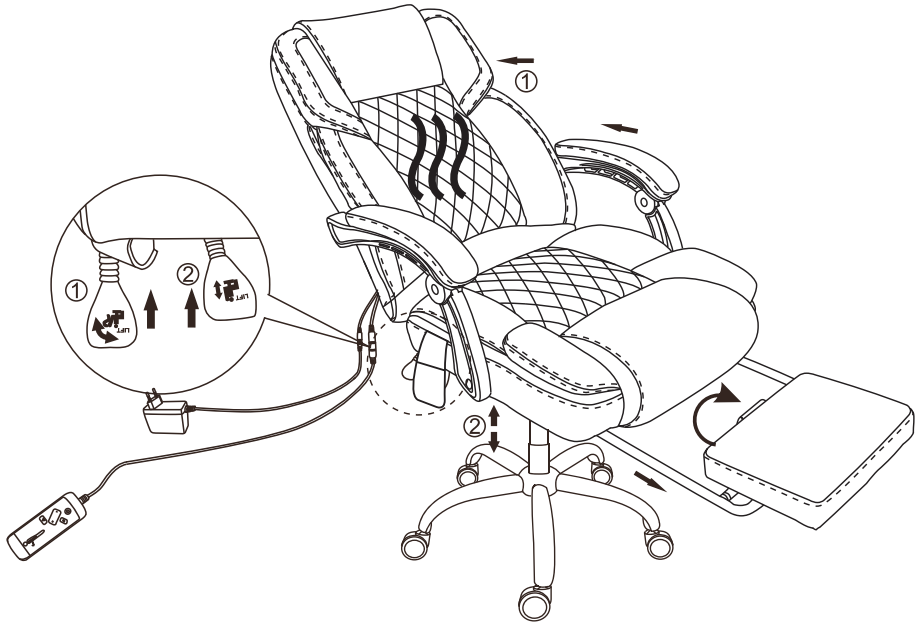Step 8



READ ALL INSTRUCTIONS

BEFORE USING THE ITEM




PRODUCT FEATURE

- ⌘ 4 Vibration Motors
- ⌘ 8 Massaging modes
- ⌘ Adjustable intensity
- ⌘ Two massage zones
- ⌘ The default timing is 15 min

HOW TO USE

1、 Insert adapter jack into the socket found on back of the massage cushion, then plug the adapter into a wall outlet(see Figure A)

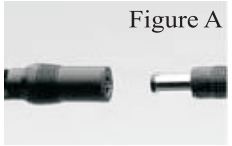Figure A



2、 Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on.

3、 Turn on the massage in each zone by pressing the Massage zone. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.

4、 To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates

5、 To change the massage intensity press the INTENSITY button. The LED for HIGH or LOW intensities will illuminate when chosen.
NOTE：Discontinue use immediately if you feel any discomfort or pain.

6、 NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that will turn the chair unit off after 30 minutes of continuous use.

7、 DO NOT use for more than 30 minutes of continuous use.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

1、 This product is for use on a 12V circuit Make sure that the product is connected to an outlet having the same configuration as the plug.

2、 Always unplug the massager from the power source after use, and before cleaning.

3、 Do not reach for massager if it has fallen into water. Unplug immediately.

4、 An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.

5、 Do not use outdoors.
6、 Do not carry this appliance by supplied cord as a handle.
7、 Keep the cord away from heated surfaces.
8、 Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
9、 This unit is not a toy. Children should not use it or play with it.
10、 Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
11、 Do not use near eyes or other highly sensitive areas.
12、 To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
13、 Keep cord away from heated surfaces.
14、 Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

HEALTH CAUTION

⌘ If you have any concerns regarding your health, consult your doctor before using this product.
⌘ Individuals with pacemakers should not use this product.
⌘ If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN:

⌘ Insure the unit is unplugged from the power source, and allow to cool before cleaning.
⌘ Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
⌘ Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniturepolish, paint thinner or water hotter than 120℃ to clean the unit.
⌘ To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.

WARRANTY

So glad you have completed the assembly and can enjoy it.

If you are satisfied with our products,thank you for showing

it to your around.

AFTER-SALE POLICY

For return reason:

Wrong purchase, bought by mistake, no longer needed, doesn't meet expectation, a size smaller than expectation, customer need to cover the return shipping fee.

For cancel order:

Customer needs to pay for shipping fee and carrier handle fee if the item has been shipped out.

For change address: customer needs to pay for extra shipping fee and carrier handle fee if the item has been shipped out.

Customer Service:

Any problem with the product or shipping issue, please feel free to contact us, we will try our best to serve and help.