

installation manual

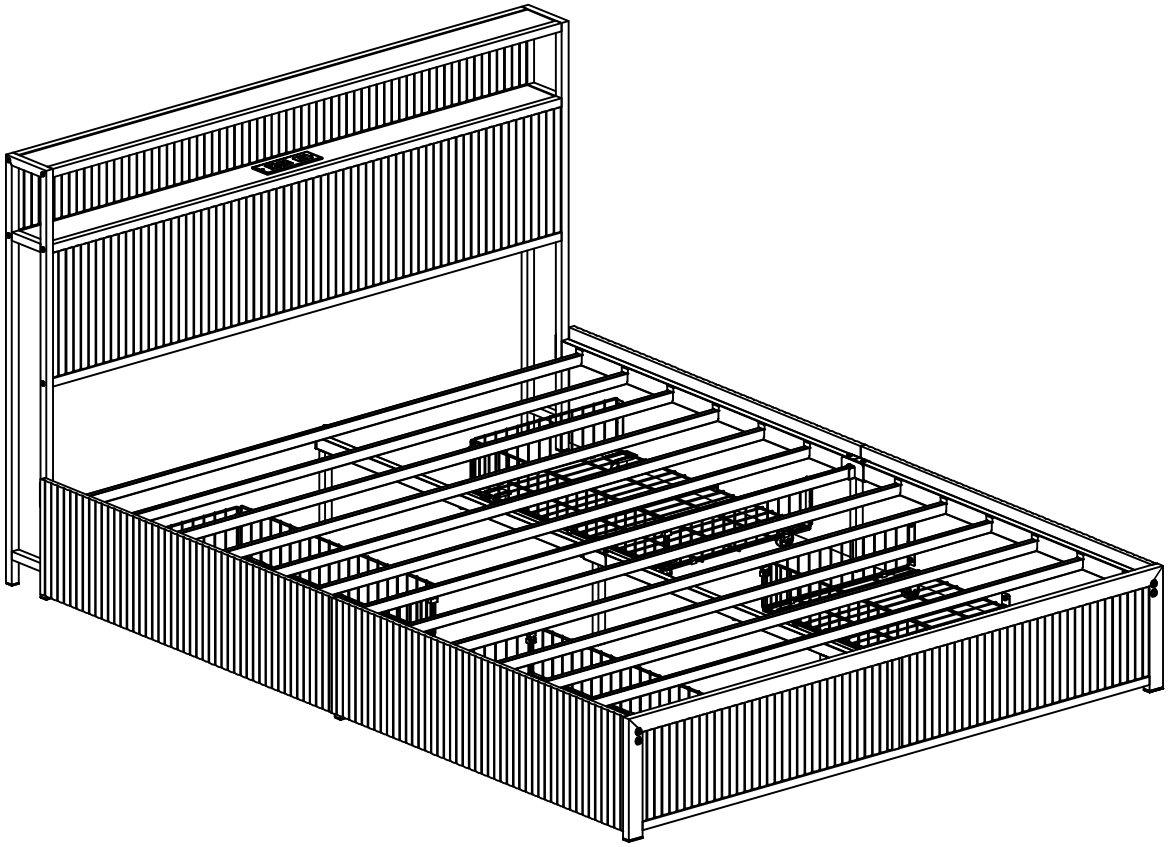


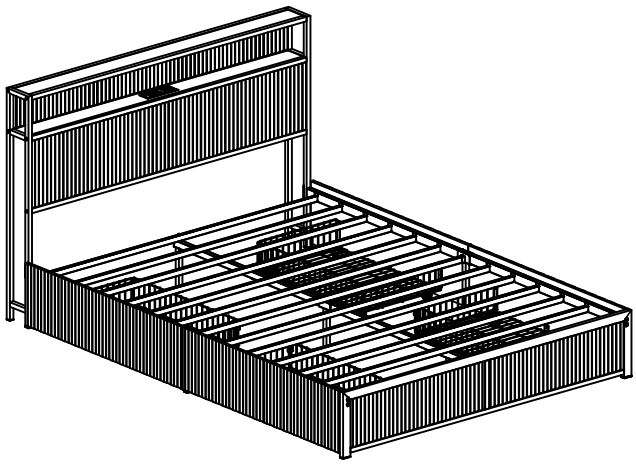












TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you.However, in the rare instance that your product is defective, missing parts or there!are some issues, please don't hesitate to contact our customer service to submit parts requirements,assembly suggestion or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. insert the screws in holes and tighten the screws, but not too tight,70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish













Components

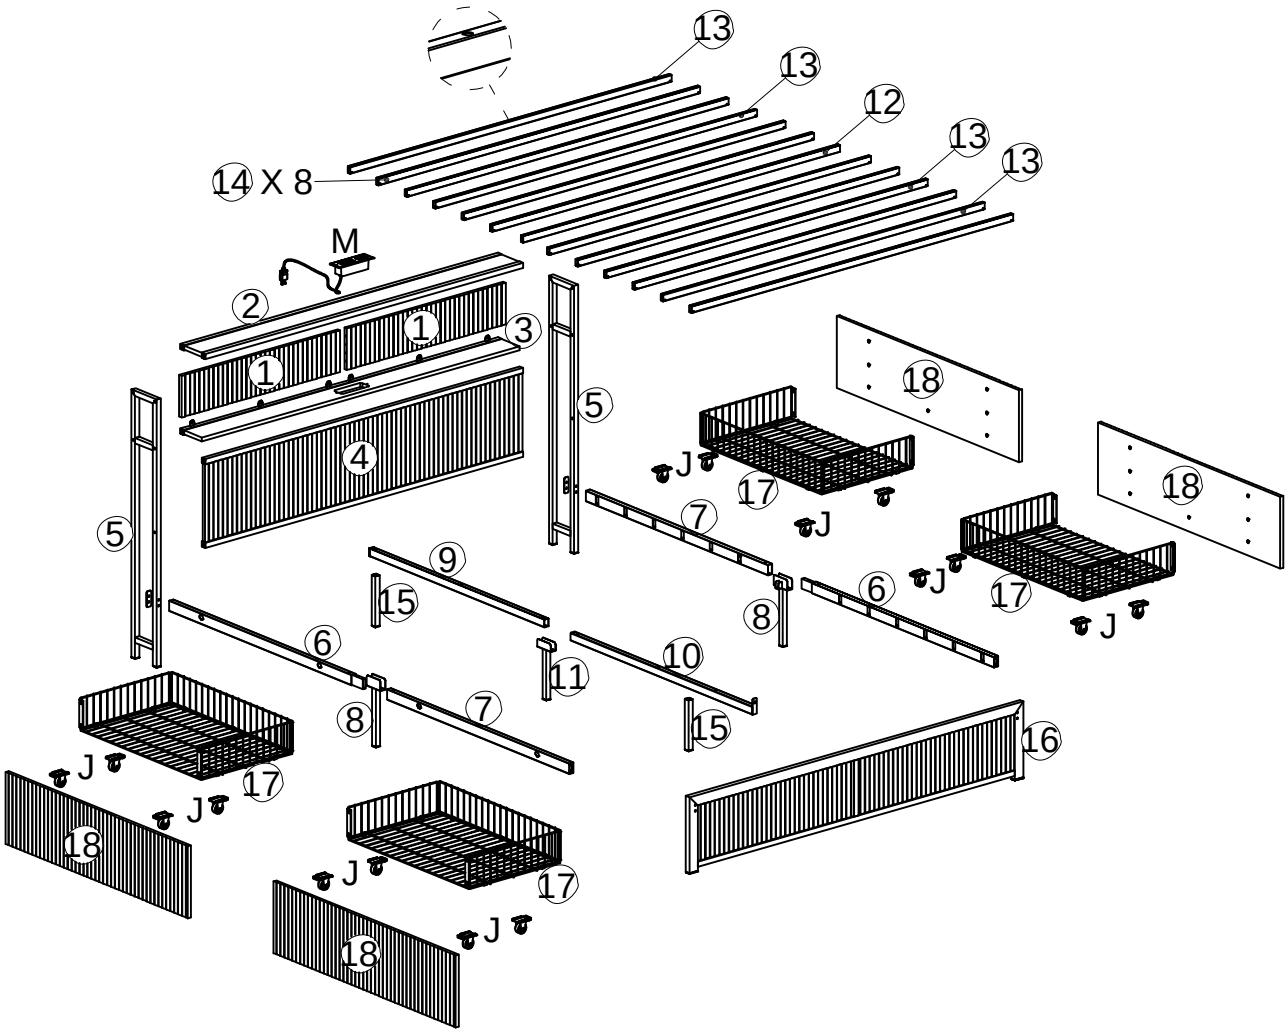
13
13
12
13
13
14 X 8
M
2
1
3
1
4
5
5
18
J
17
J
7
18
9
15
6
J
17
J
6
8
11
10
8
7
15
16
J
17
J
18
J
17
J
18

Hardware

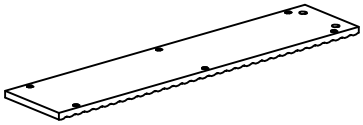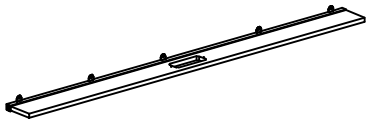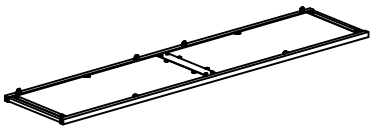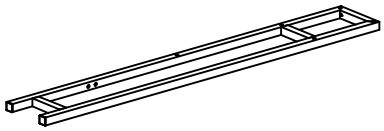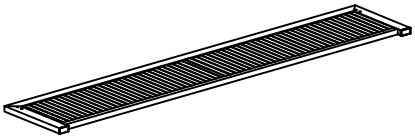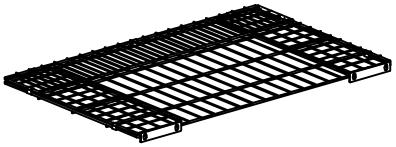
①  X 2	②  X 1	③  X 1
④  X 1	⑤  X 2	⑥  X 2
⑦  X 2	⑧  X 2	⑨  X 1
⑩  X 1	⑪  X 1	⑫  X 1
⑬  X 4	⑭  X 8	⑮  X 2
⑯  X 1	⑰  X 4	⑱  X 4

Hardware

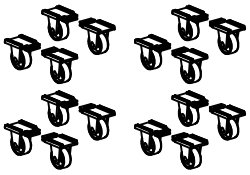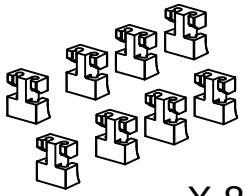A M6 x 65  X 5+1	B M6 x 45  X 12+2	C M6 x 35  X 17+2	D M6(15) x 11  X 21+2
E M6 x 12  X 8+1	F Ø5 x 60  X 2	G Ø15 x 9.5  X 4+1	H Ø6 x 30  X 2
J 60x55x40  X 16	K 35x25x6  X 4	L 20x15x16  X 8	M 162x55x40  X 1
N 3.0 x 12  X 2+1	P 60 x 20 x 2  X 2	Q 21.5 x 10.5 x 6  X 24+2	R Ø18/Ø6 x 2  X 4
S M4  X 1	T M6(13) x 11  X 16+2		

01


F	G	H	S
Ø5 x 60	Ø15 x 9.5	Ø6 x 30	M4
X2	X4	X2	X1

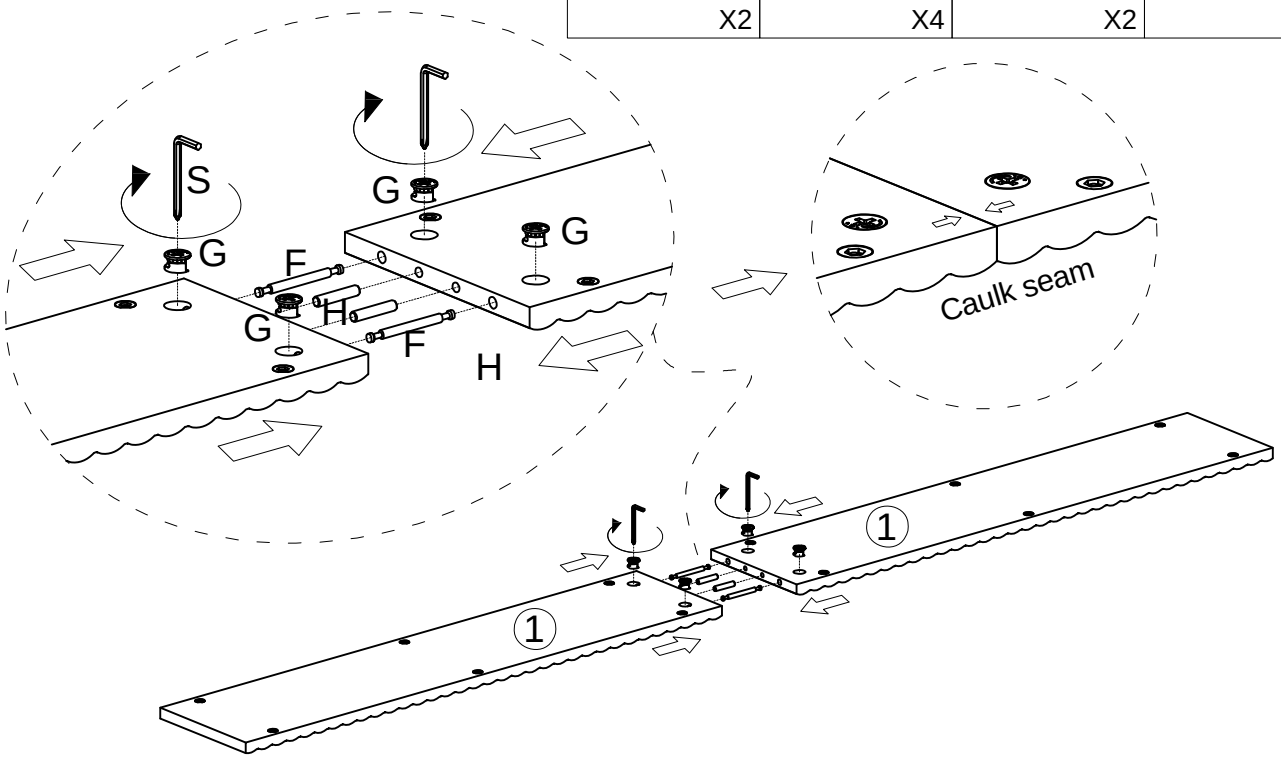

02


D	S
M6 x 11	M4
X6	X1

Keep the two drops consistent

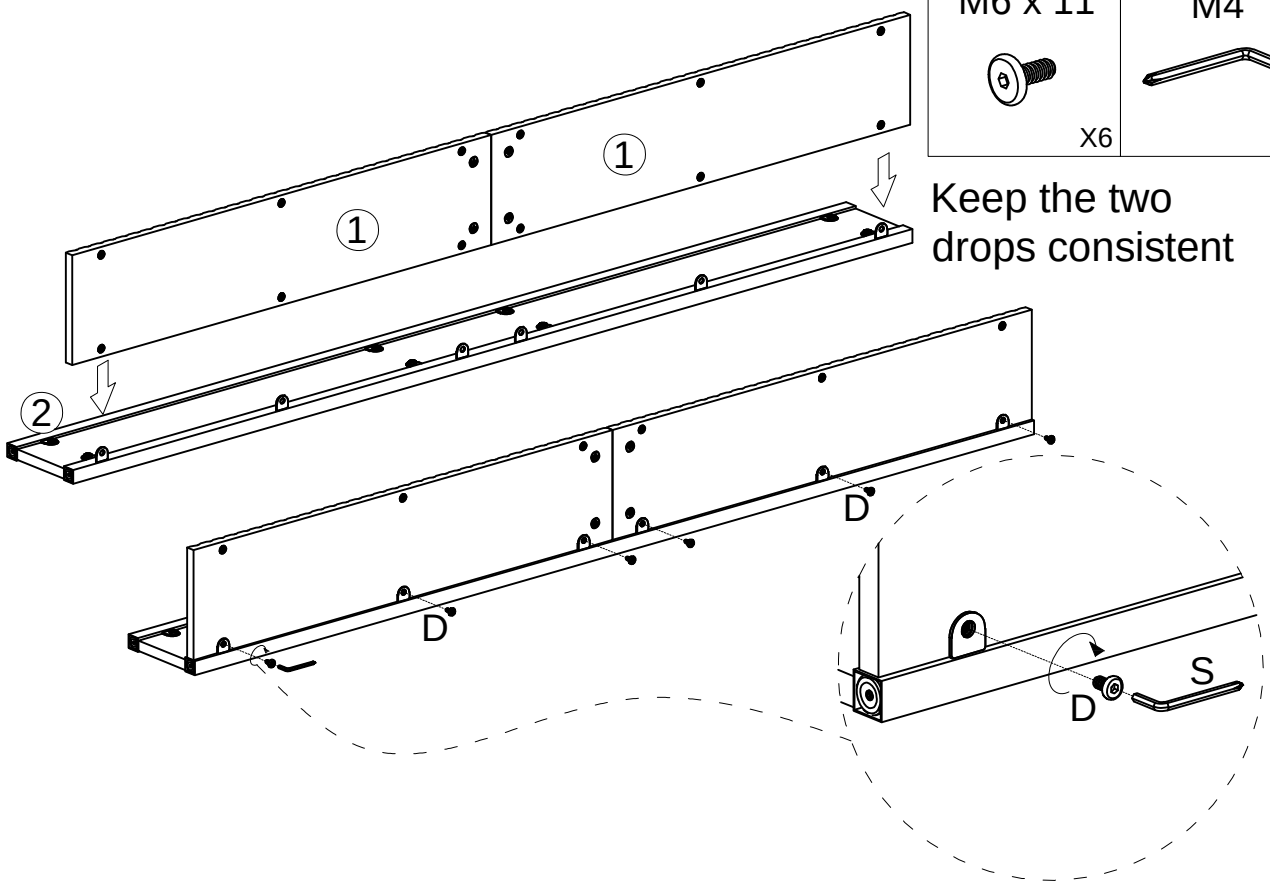

03


M	N	S
162x55x40	3.0 x 12	M4
X1	X2	X1

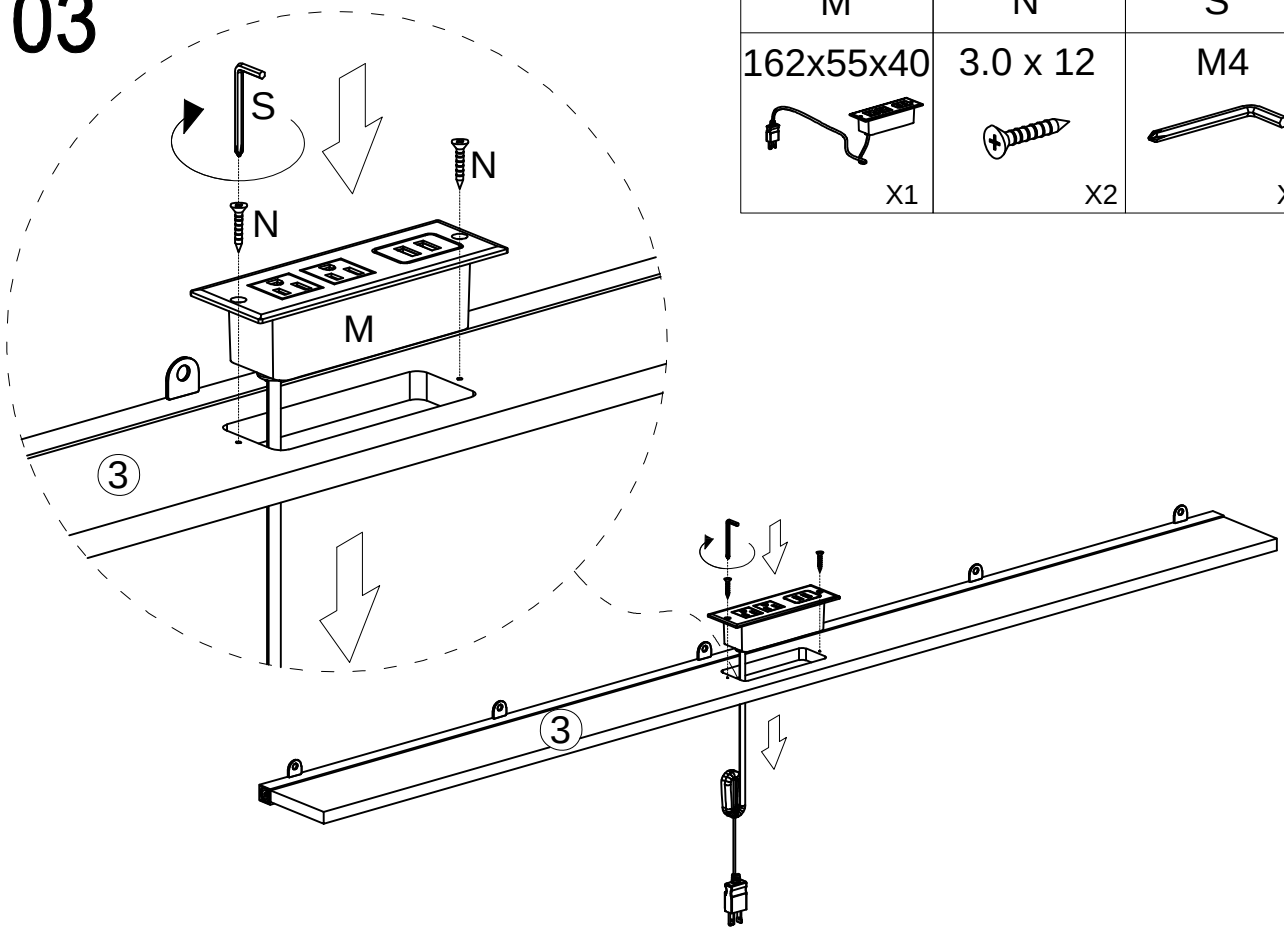

04


D	S
M6 x 11	M4
X4	X1

Keep the two drops consistent

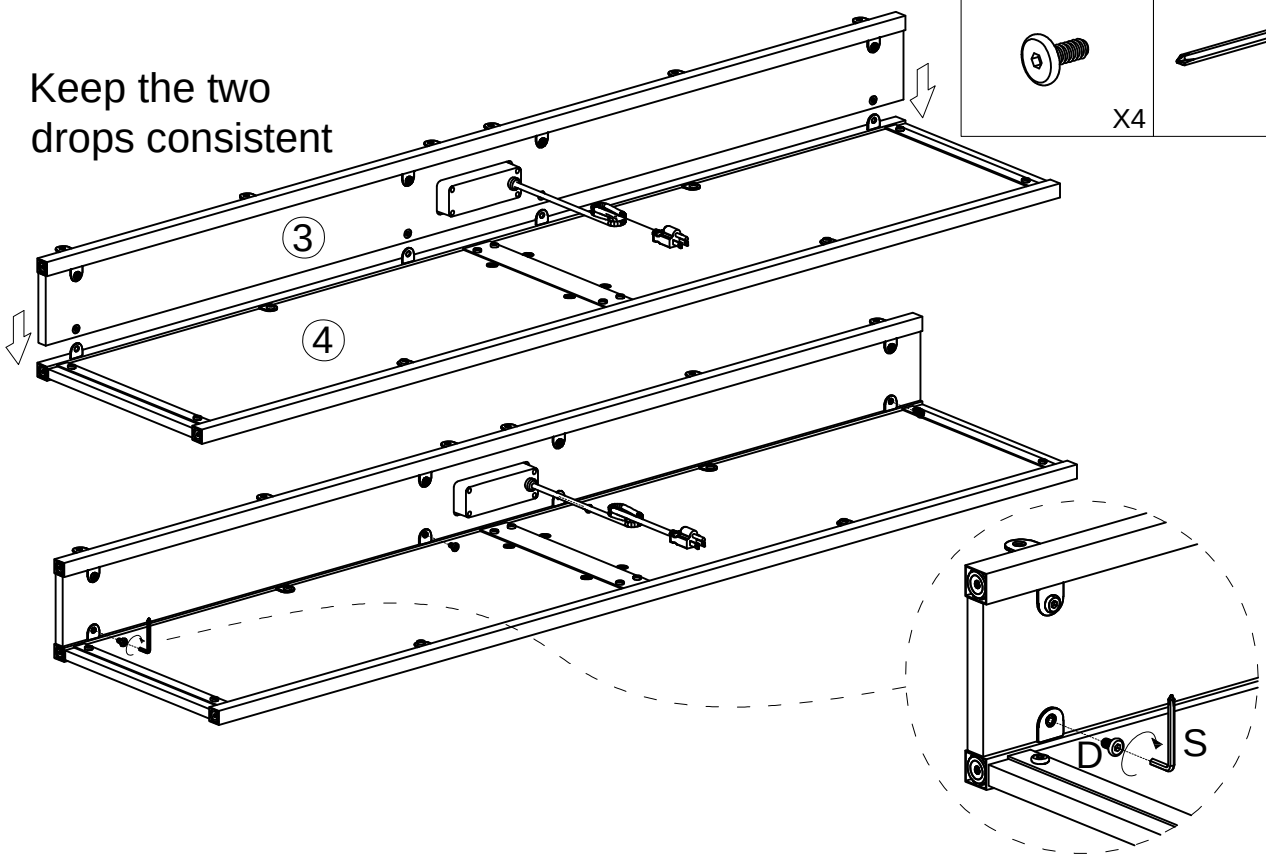


05

Keep the two drops consistent

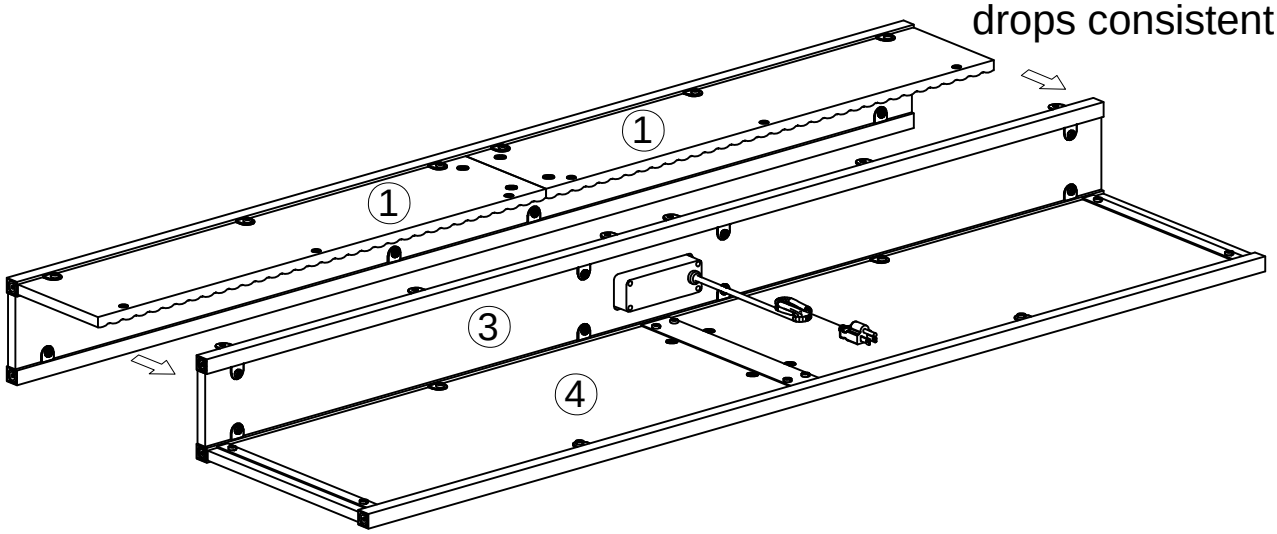


06

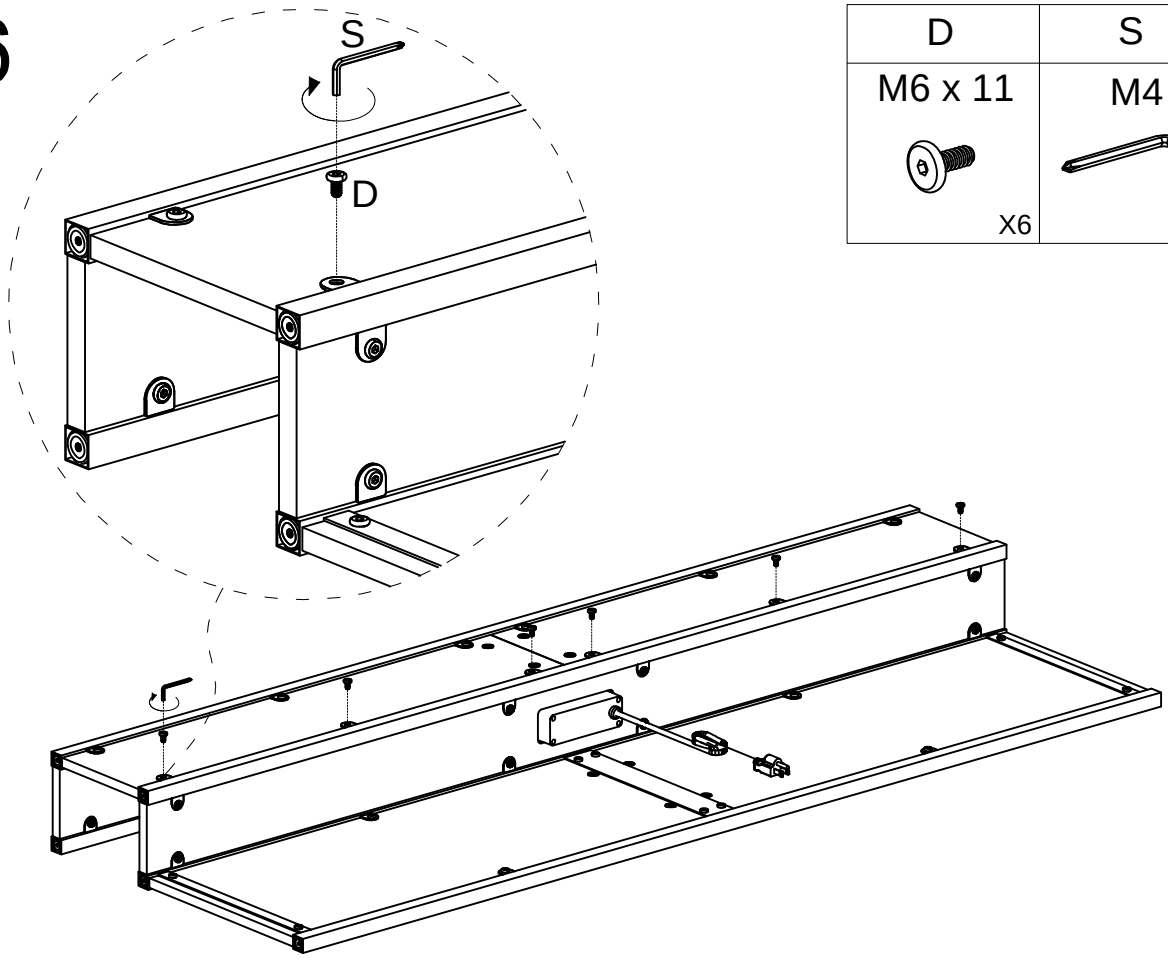


D	S
M6 x 11 X6	M4 X1

07

C	S
M6 x 35  X10	M4  X1


08

NOTE: The slots face the same side.

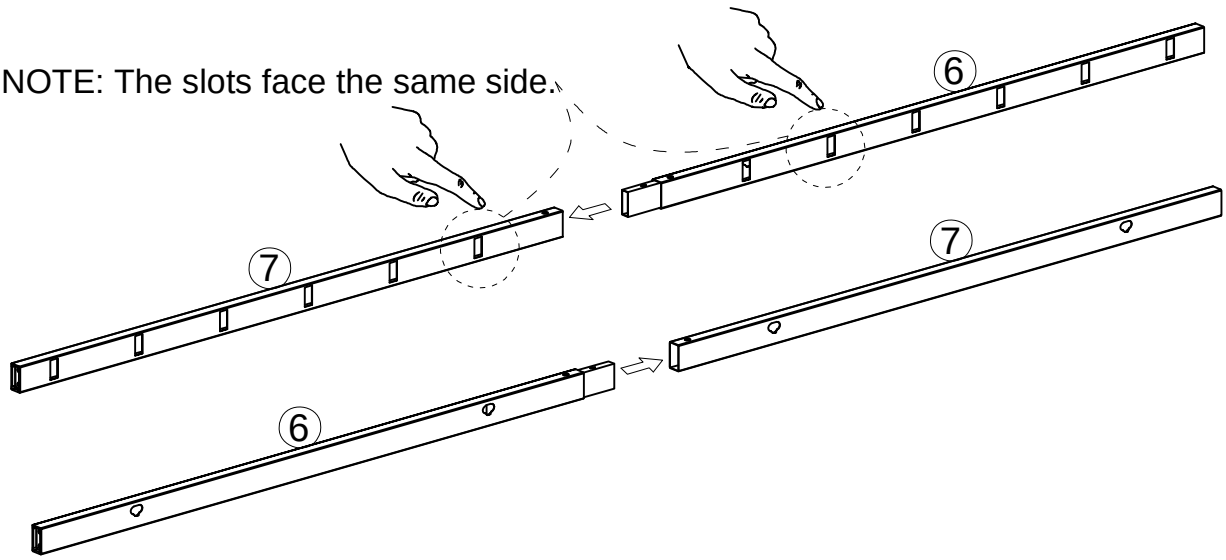

09


B	S
M6 x 45	M4
X4	X1

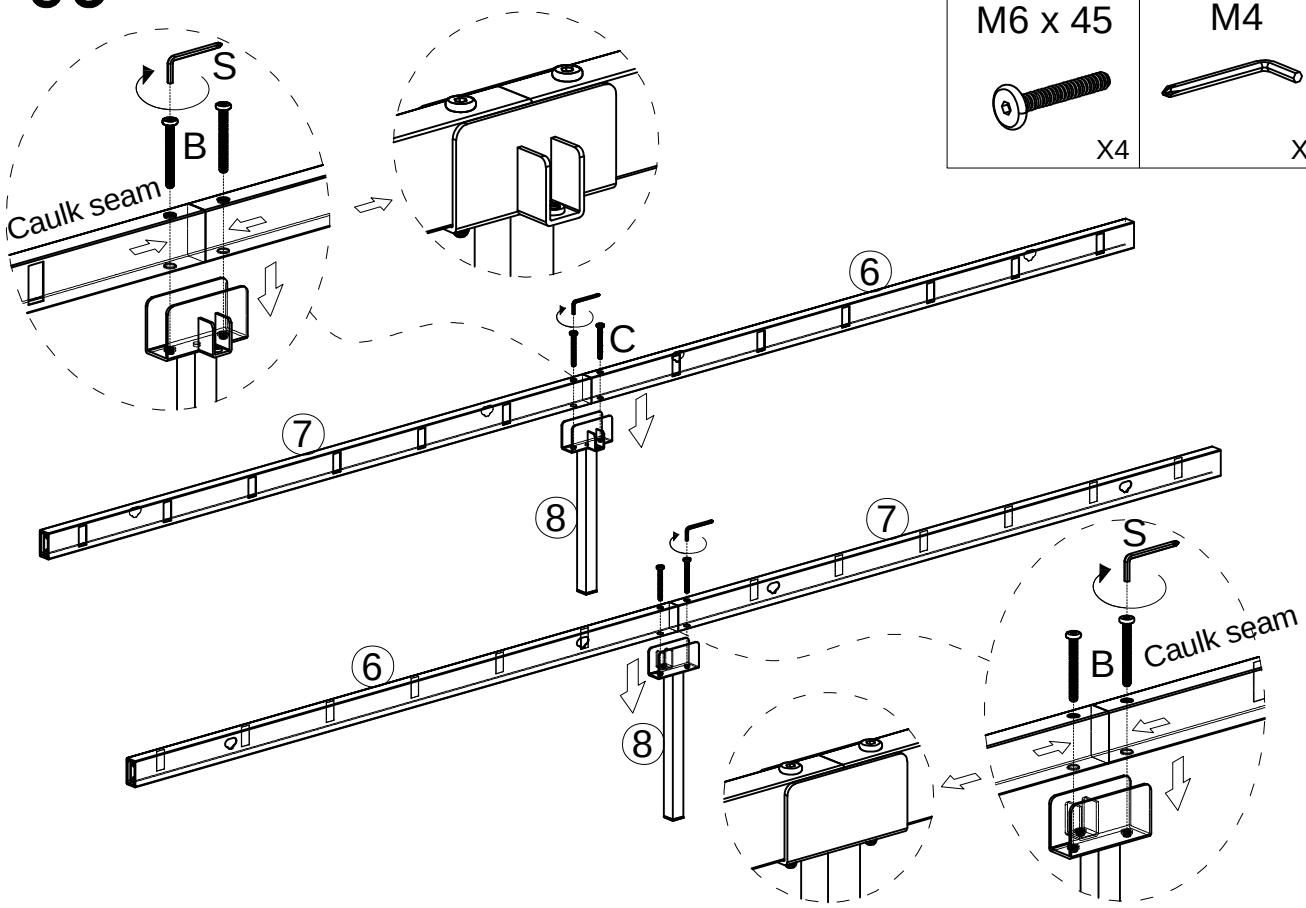

10


C	S
M6 x 35	M4
X2	X1

NOTE: It has a pull cap at the bottom.

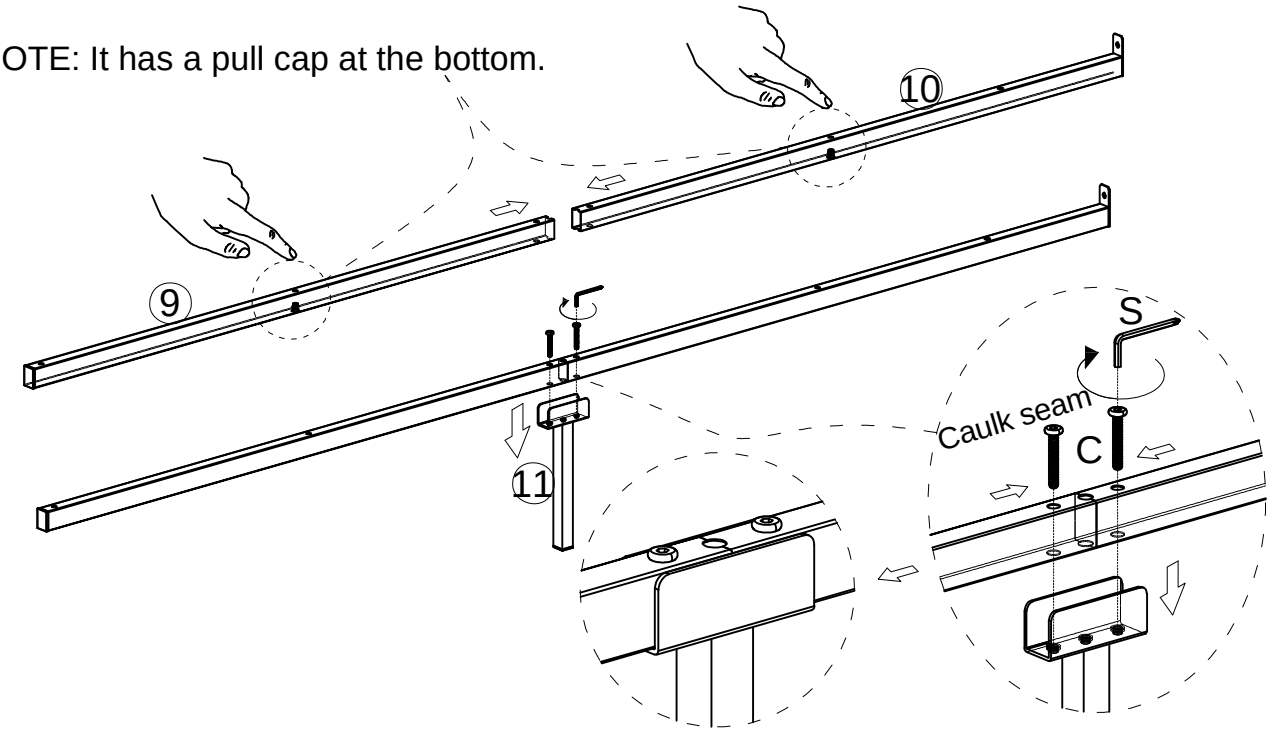


11

A	S
M6 x 65	M4
X1	X1

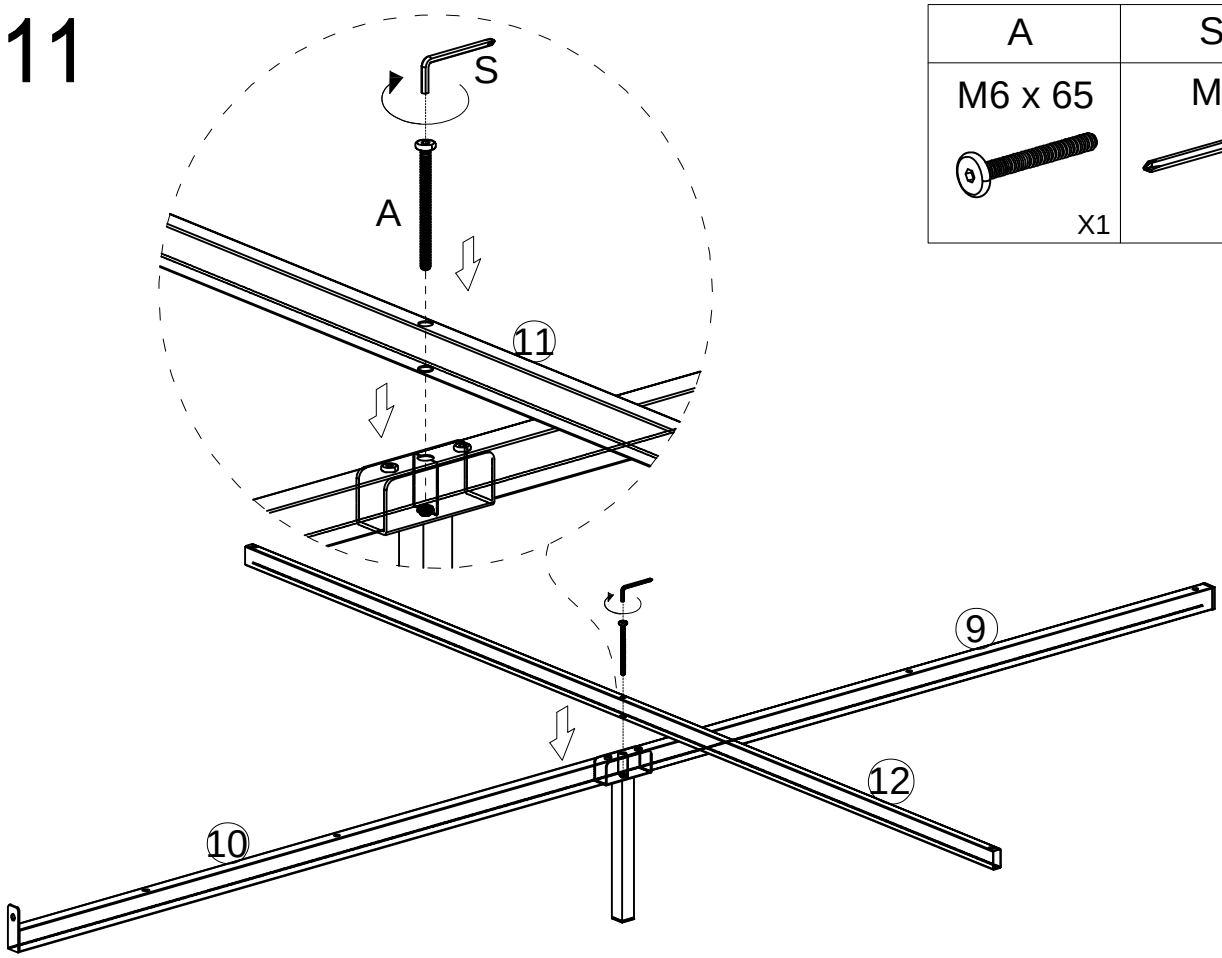


12

C	S
M6 x 35	M4
X2	X1

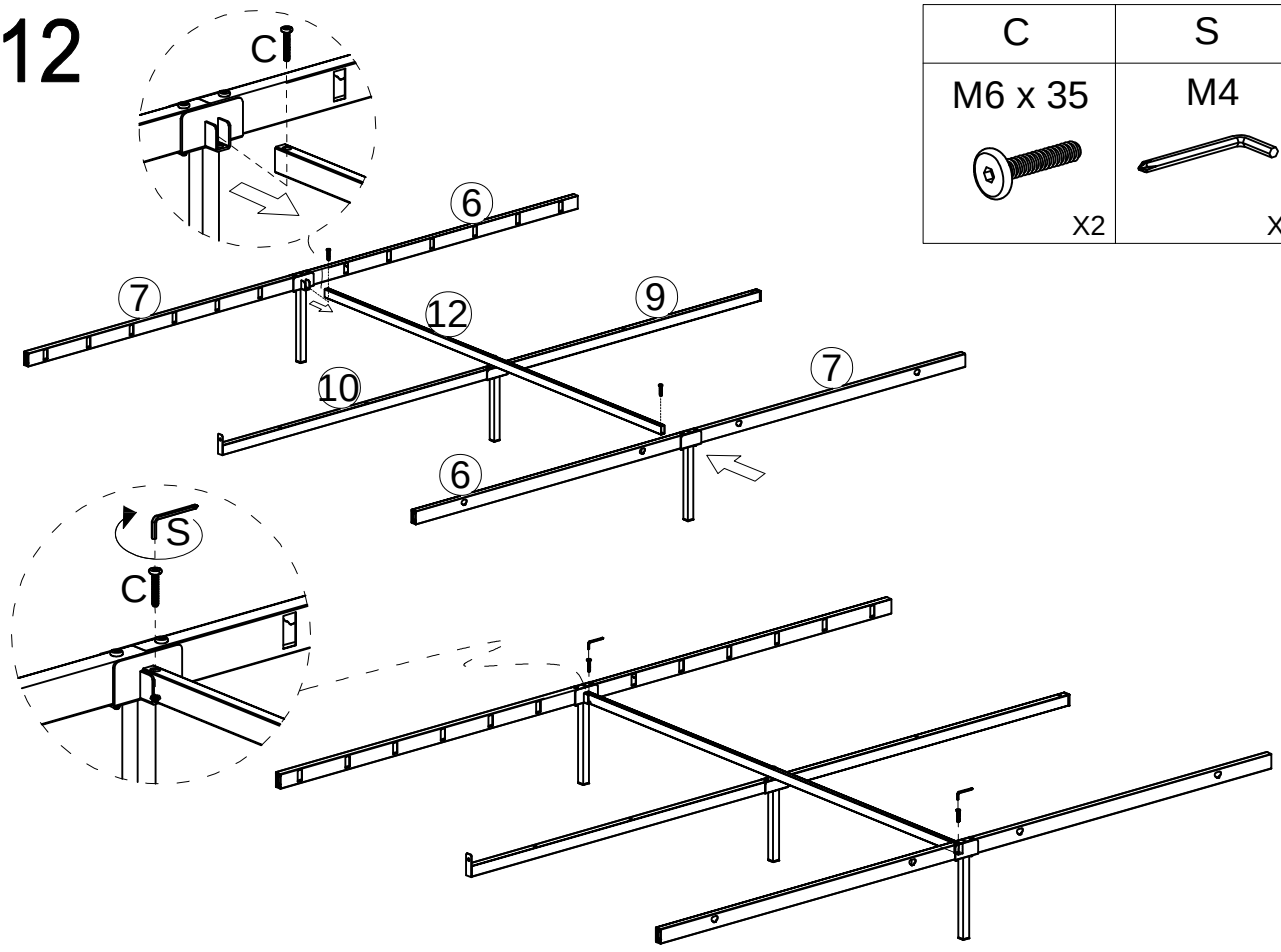


13

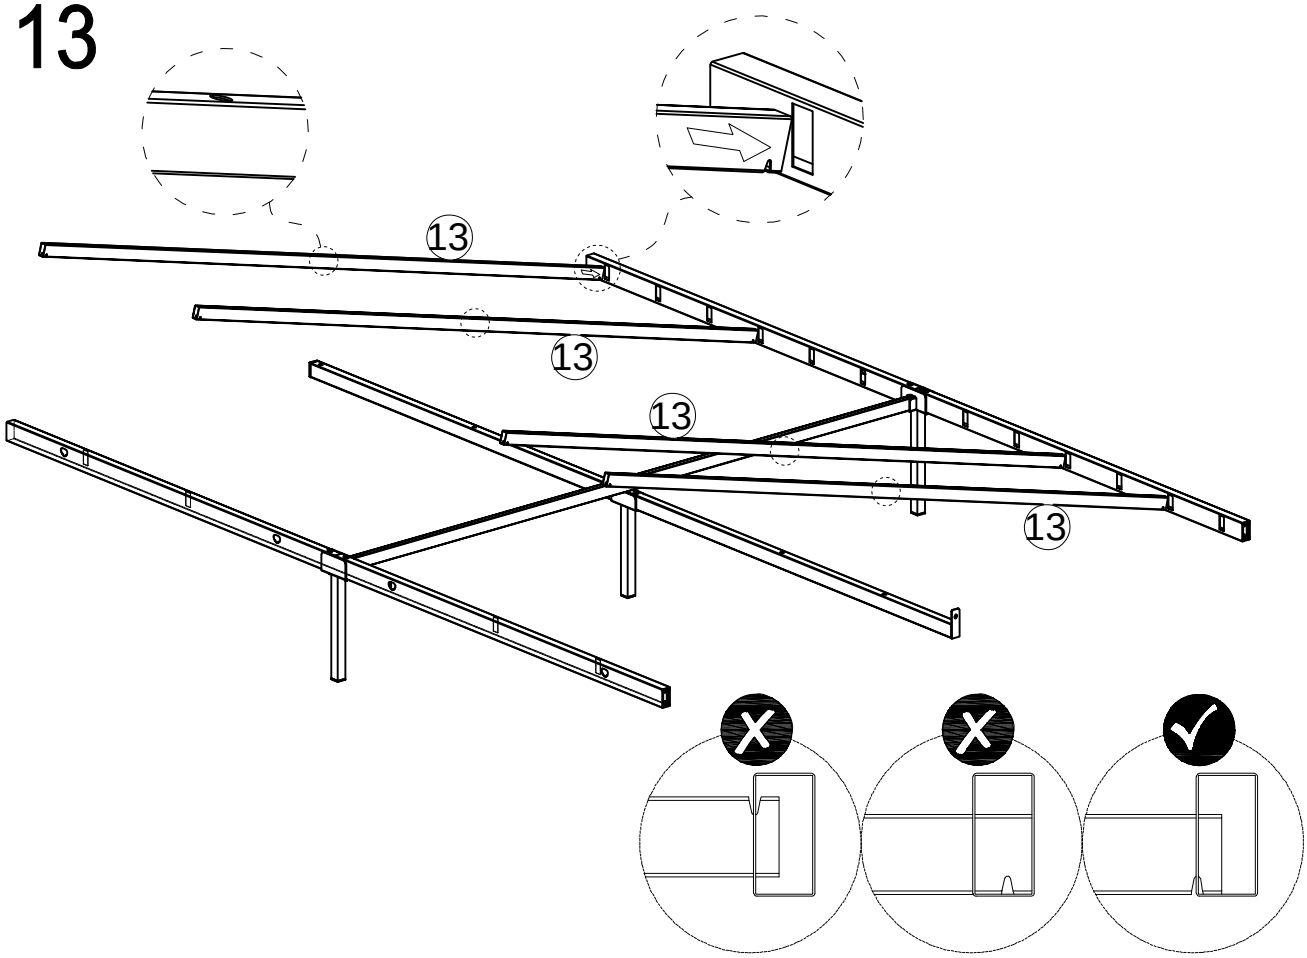


14

Q
21.5 x 10.5 x 6
X8

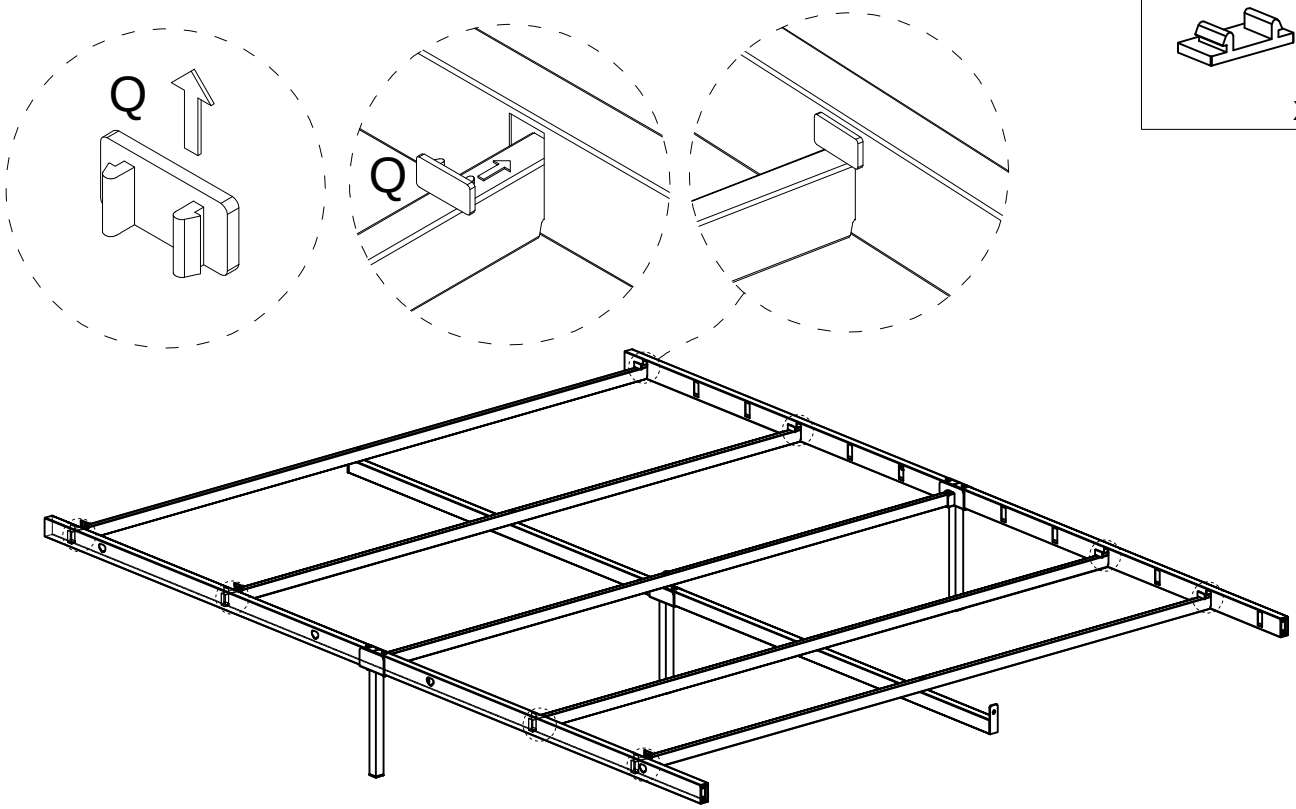


15

A	S
M6 x 65	M4
X4	X1

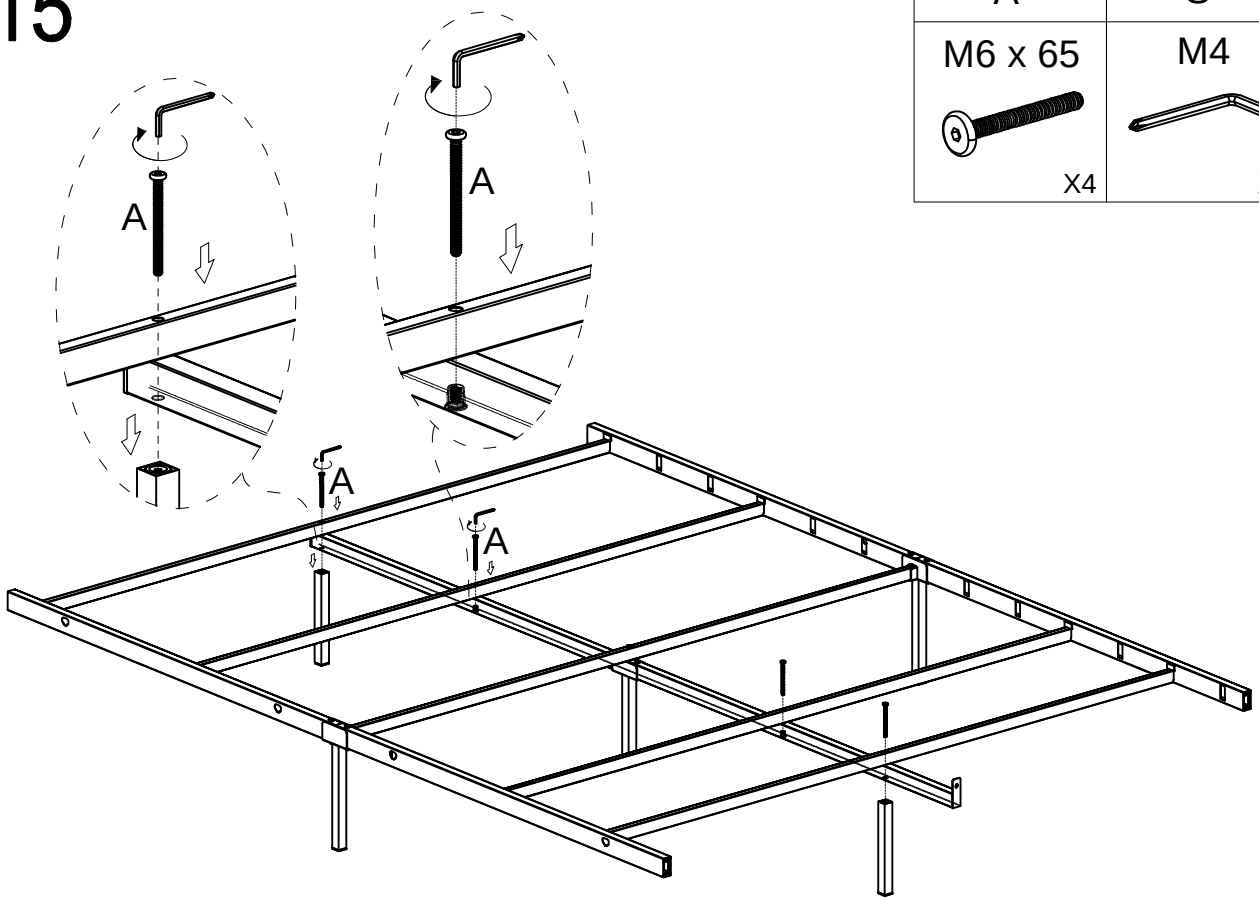


16

B	R	S
M6 x 45	Ø18/Ø6 x 2	M4
X4	X4	X1

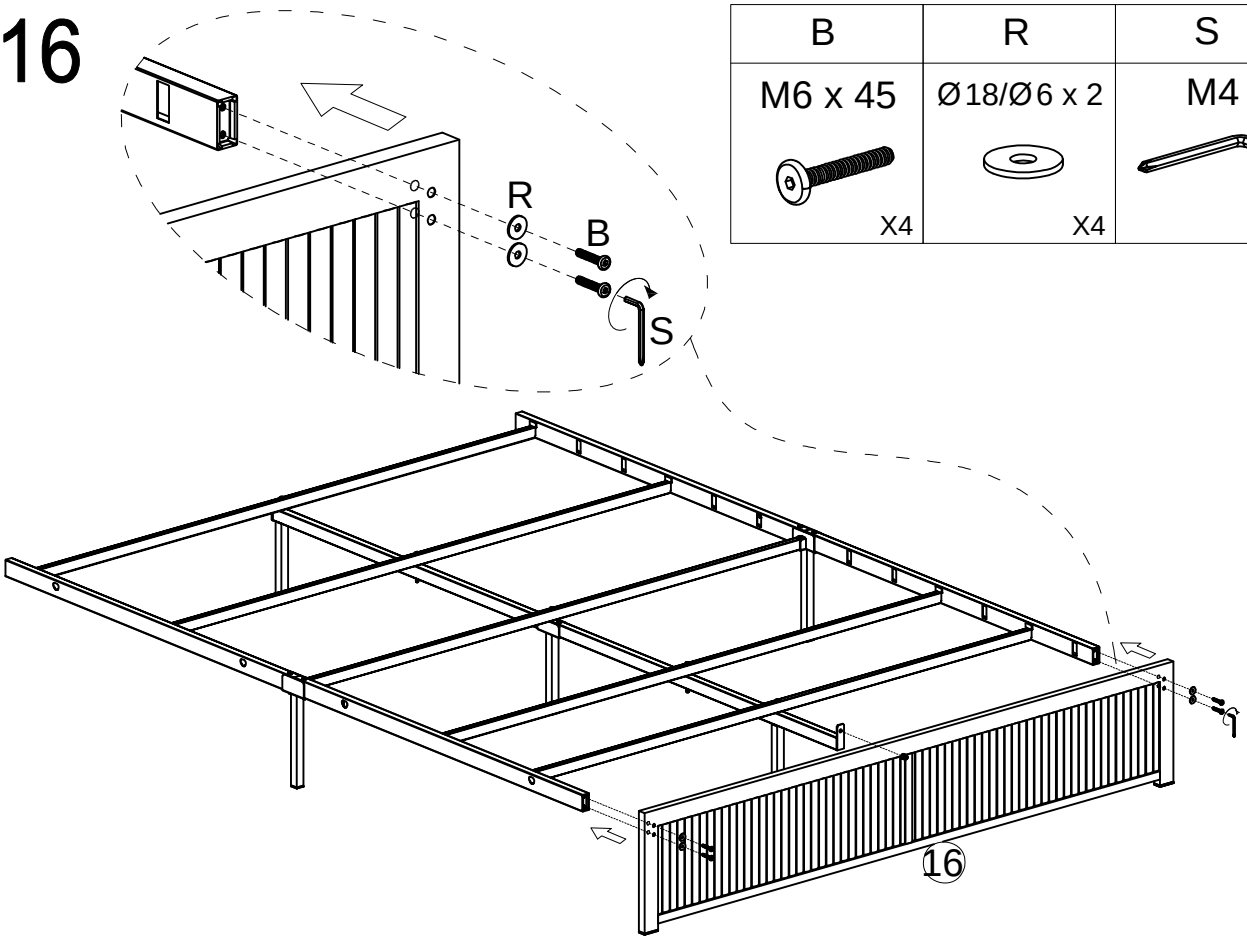


17

D	S
M6 x 11	M4
X1	X1

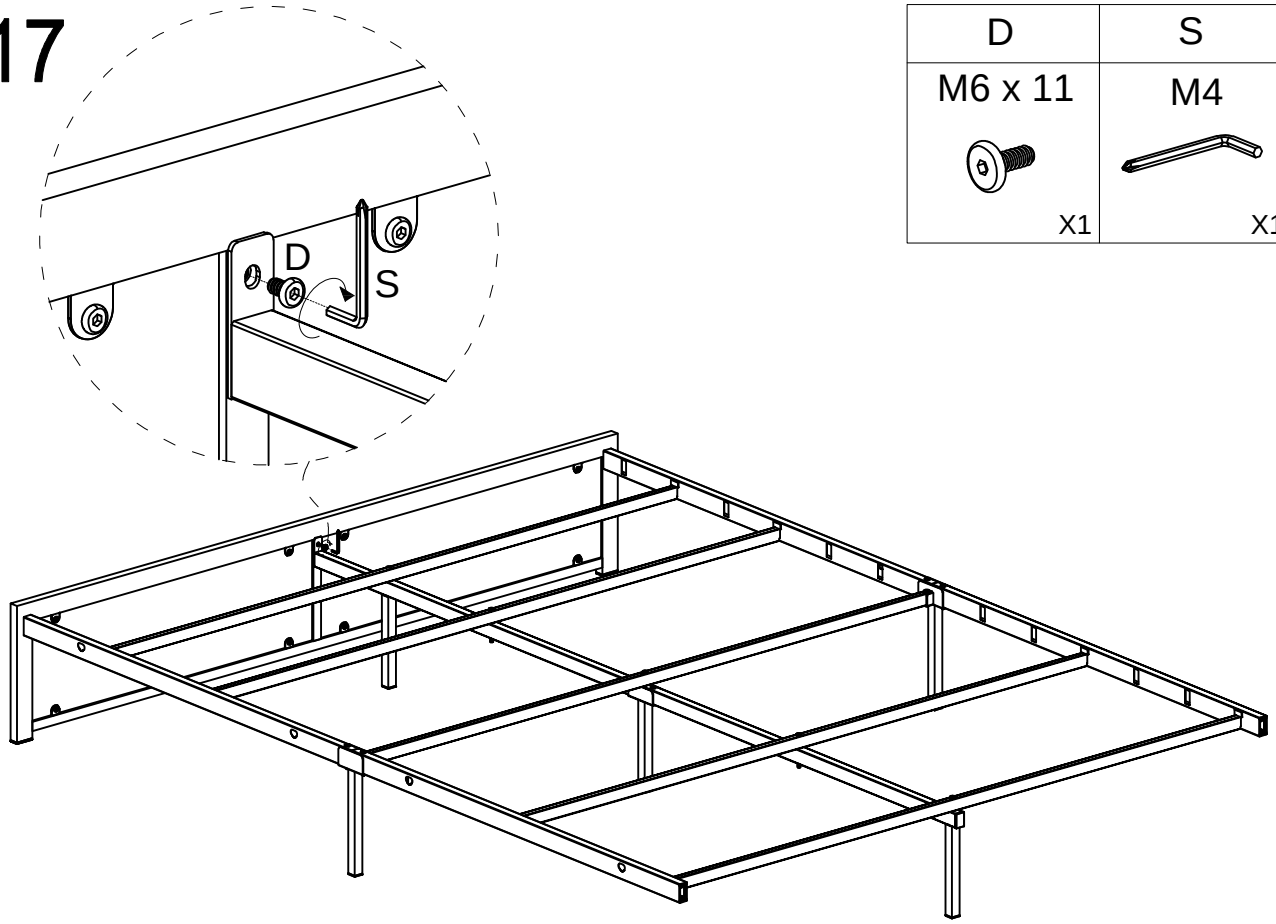


18


B	P	S
M6 x 45	60 x 20 x 2	M4
X4	X2	X1

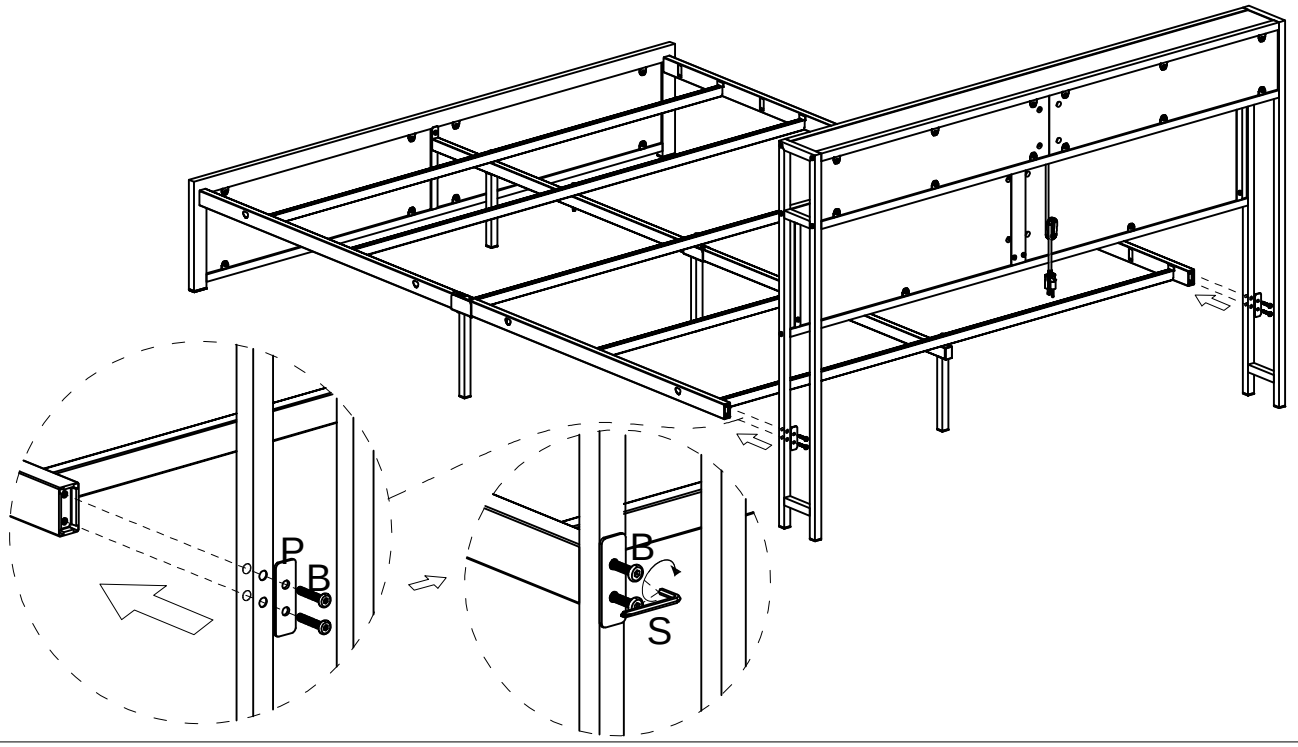

19

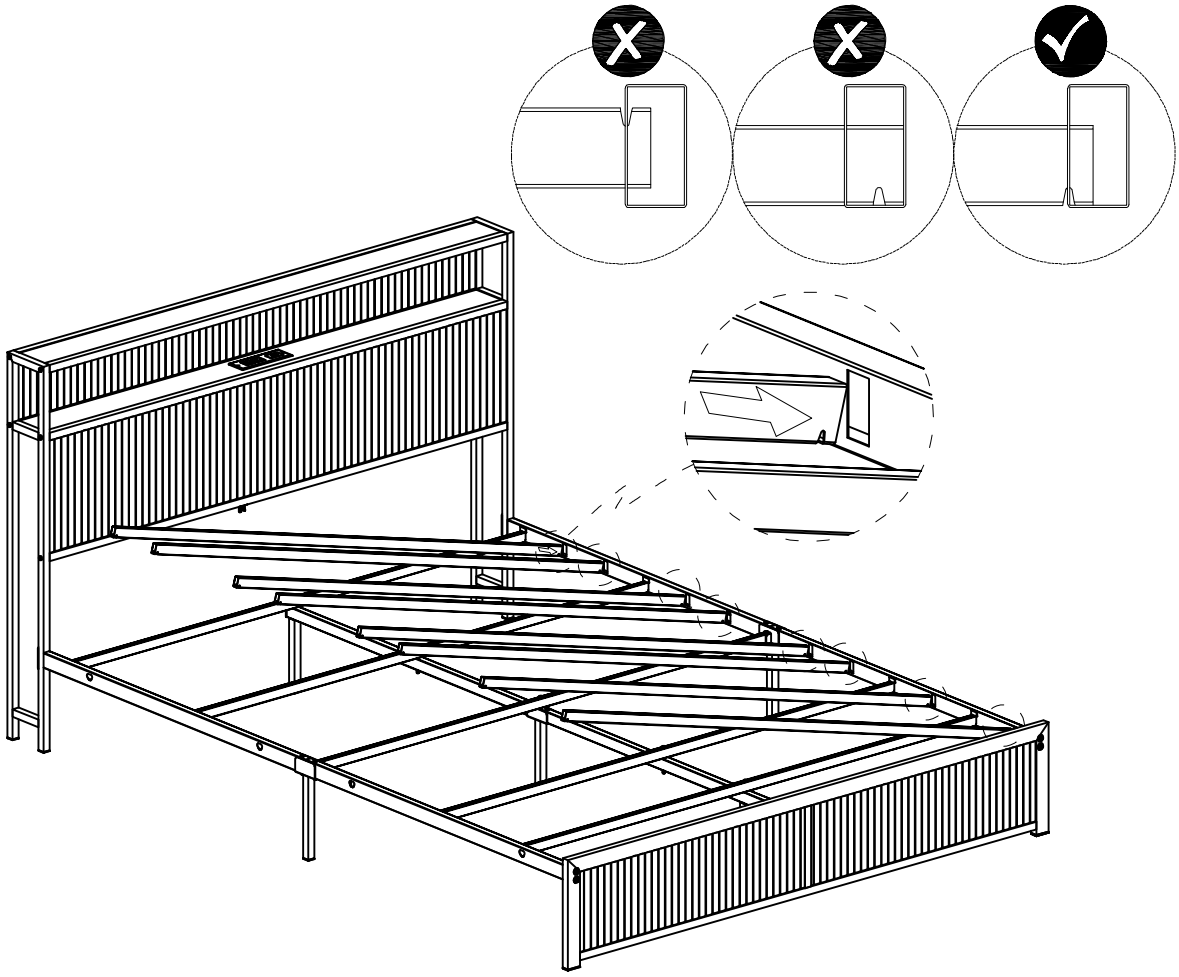


20

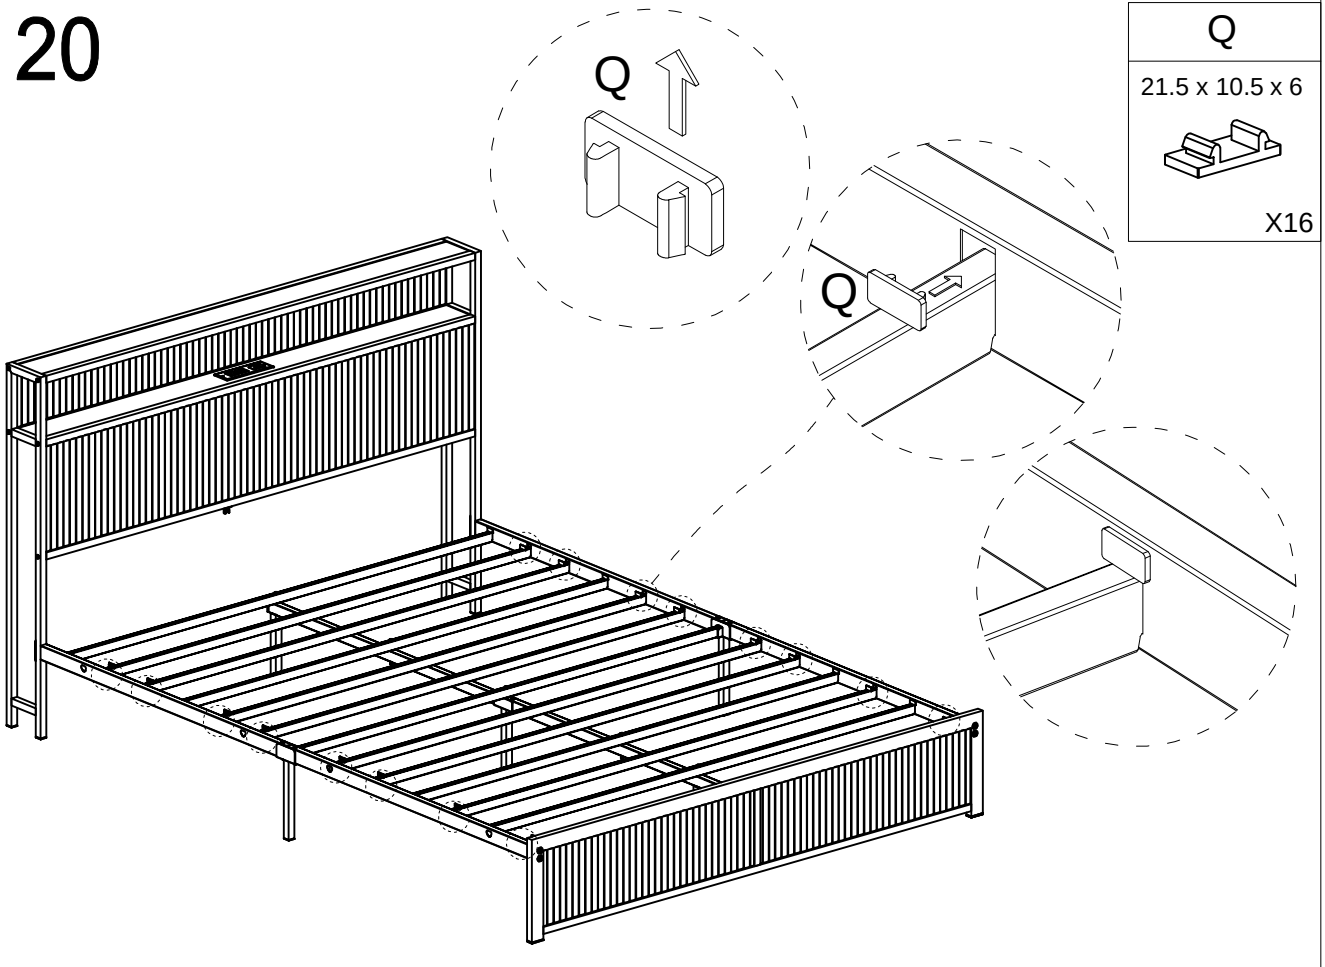


Q
21.5 x 10.5 x 6
X16

21

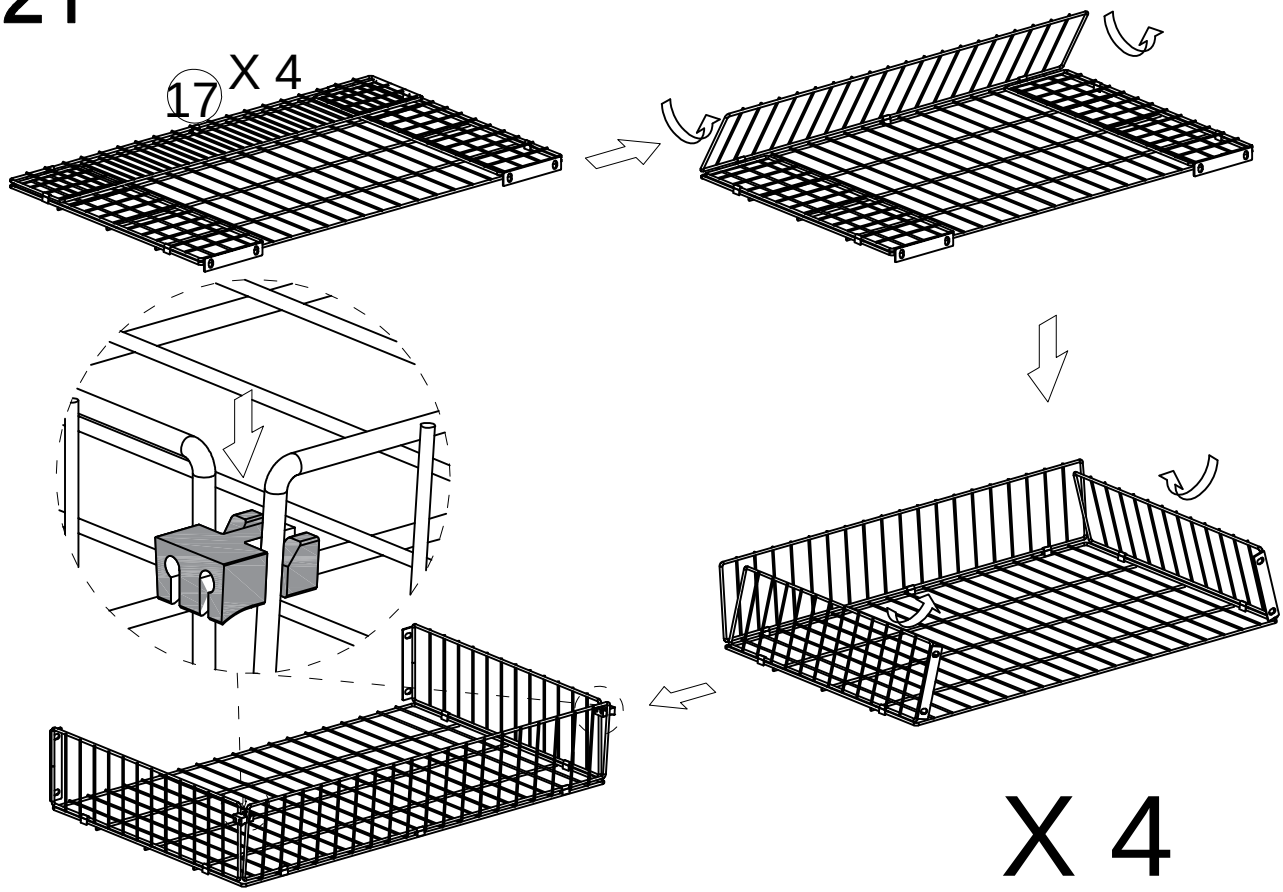


22

L
20x15x16
X8

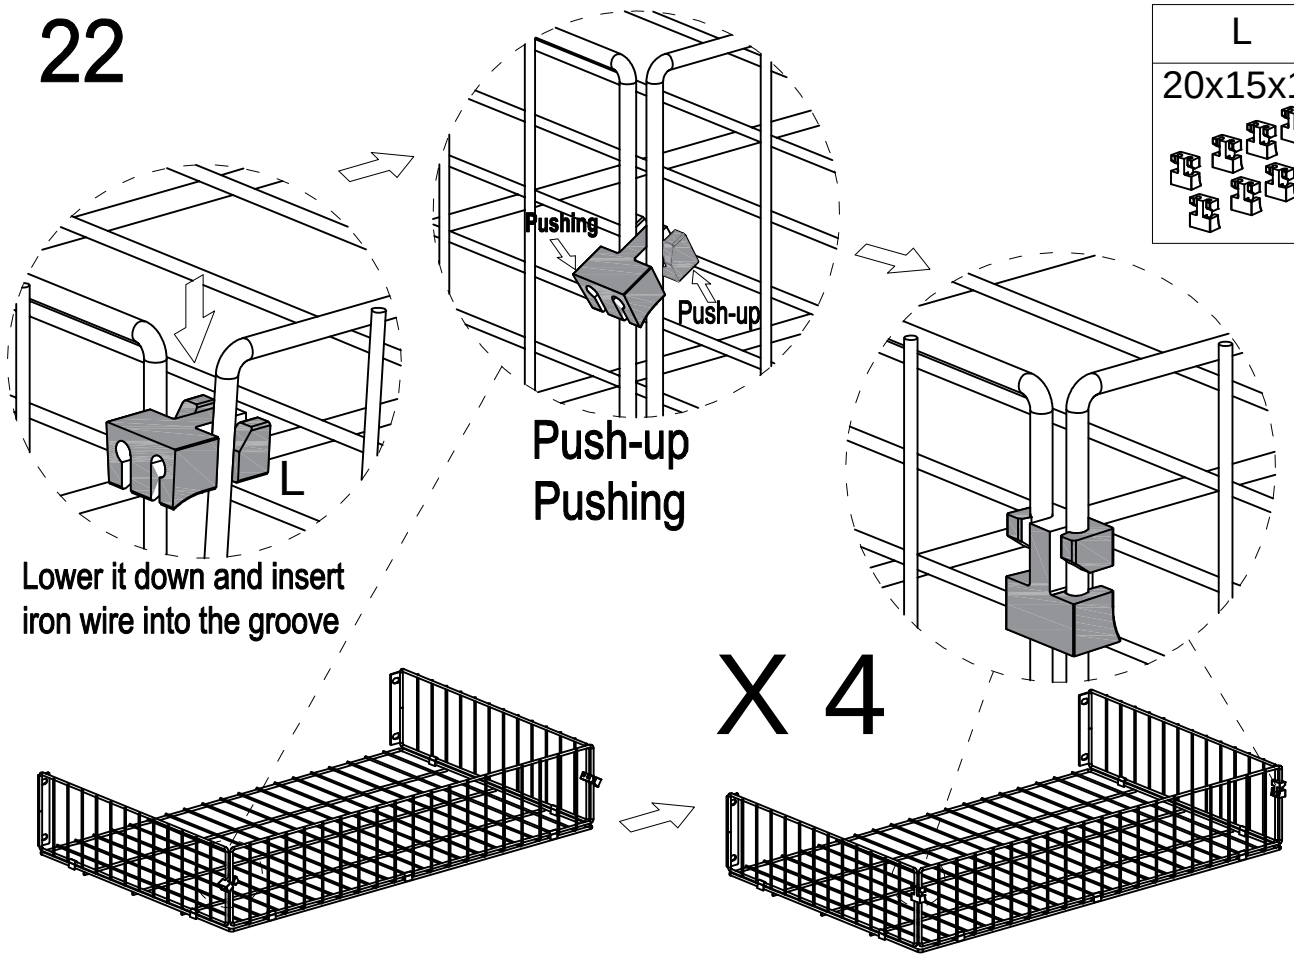


23

J
60x55x40
X16

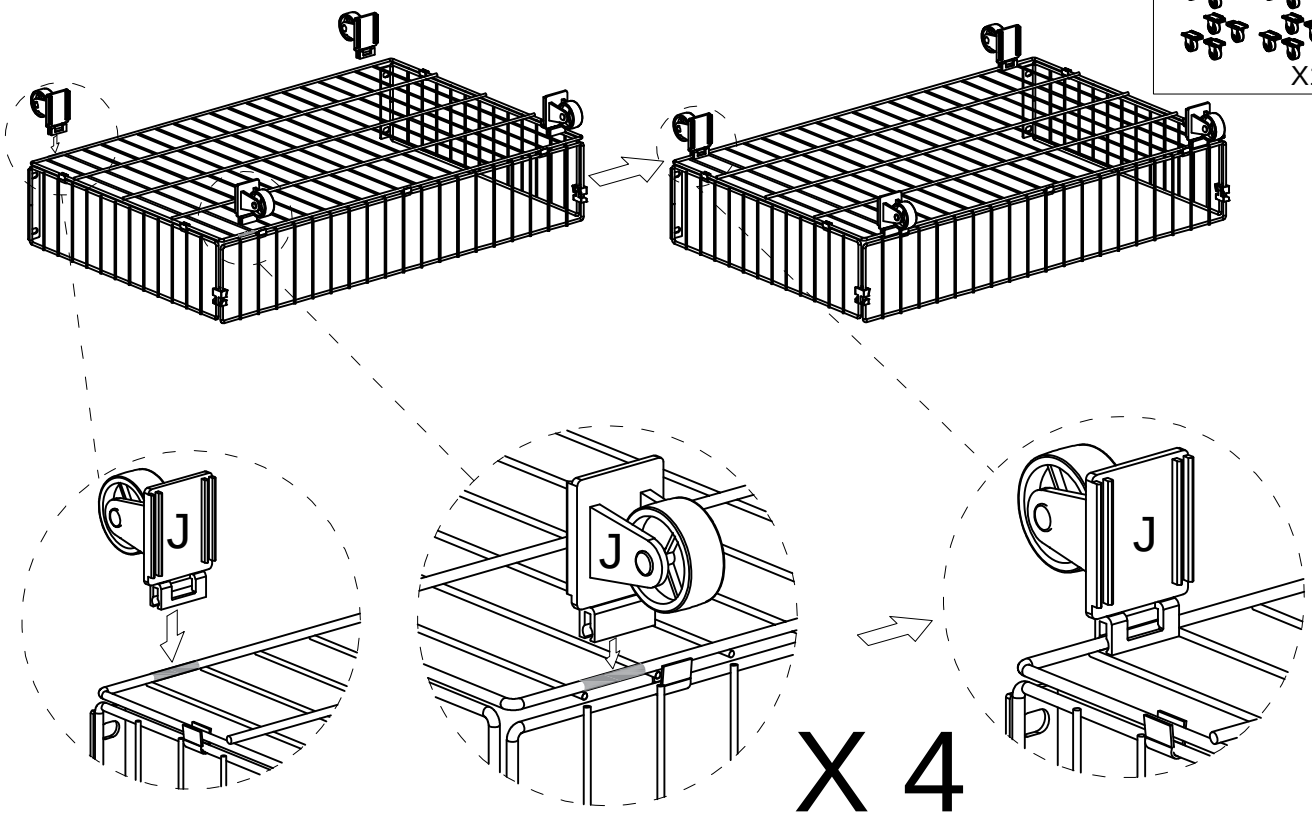


24

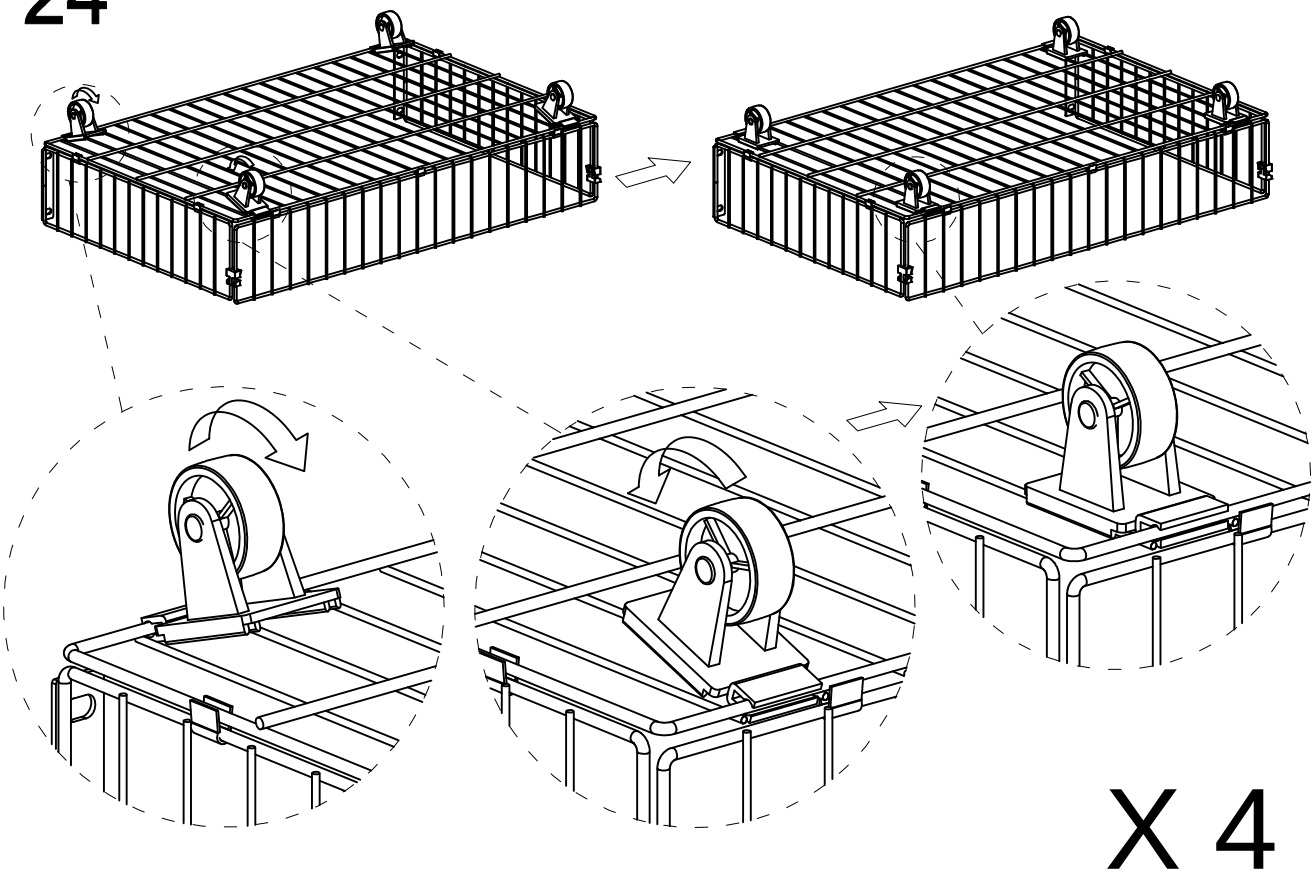

25


T	D	K	S
M6(13) x 11	M6(15) x 11	35x25x6	M4
X16	X4	X4	X1

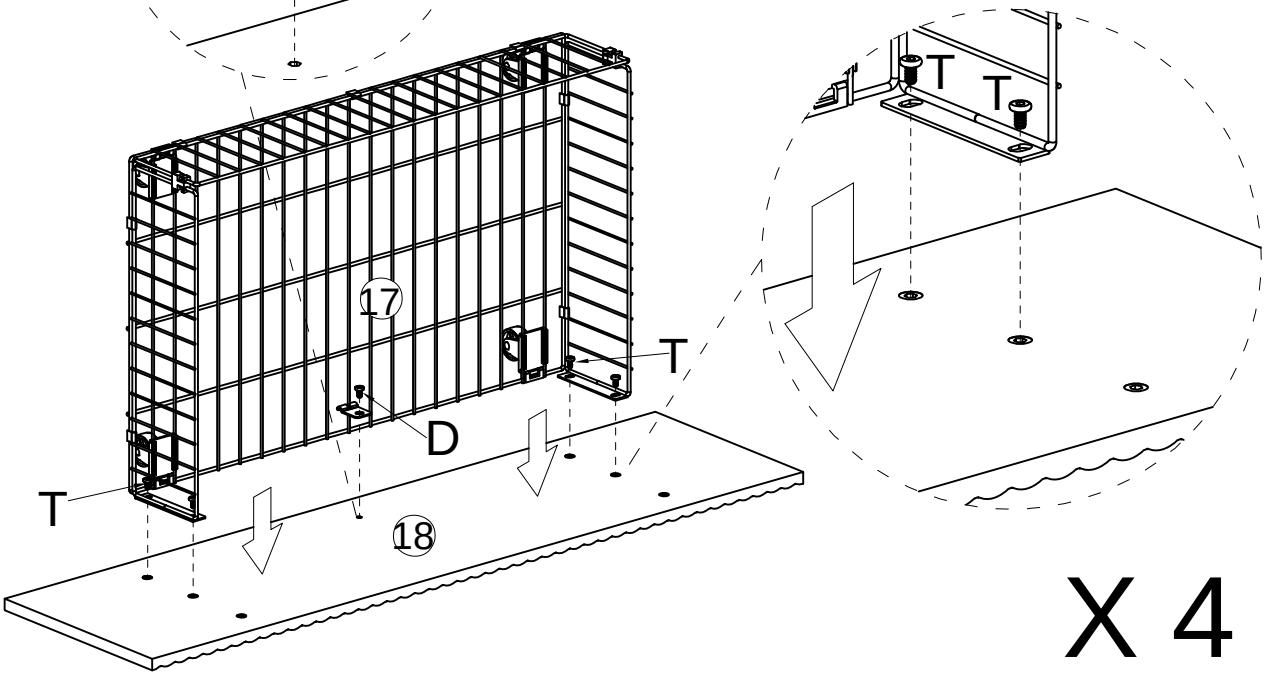

X 4

26


E	S
M6 x 12	M4
X8	X1

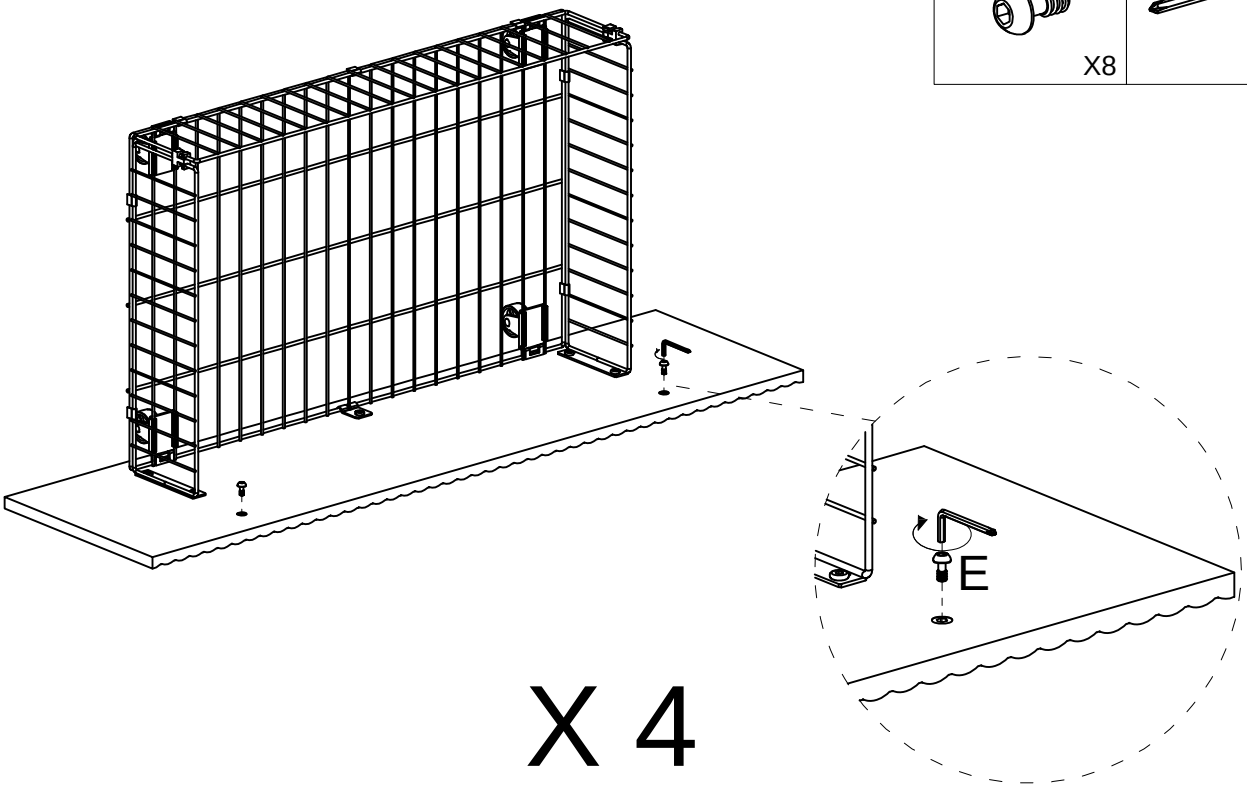

X 4

27

First , push it forward , then lift it up . Align the screw head with the elliptical hole and push it in . Release it when do ne.

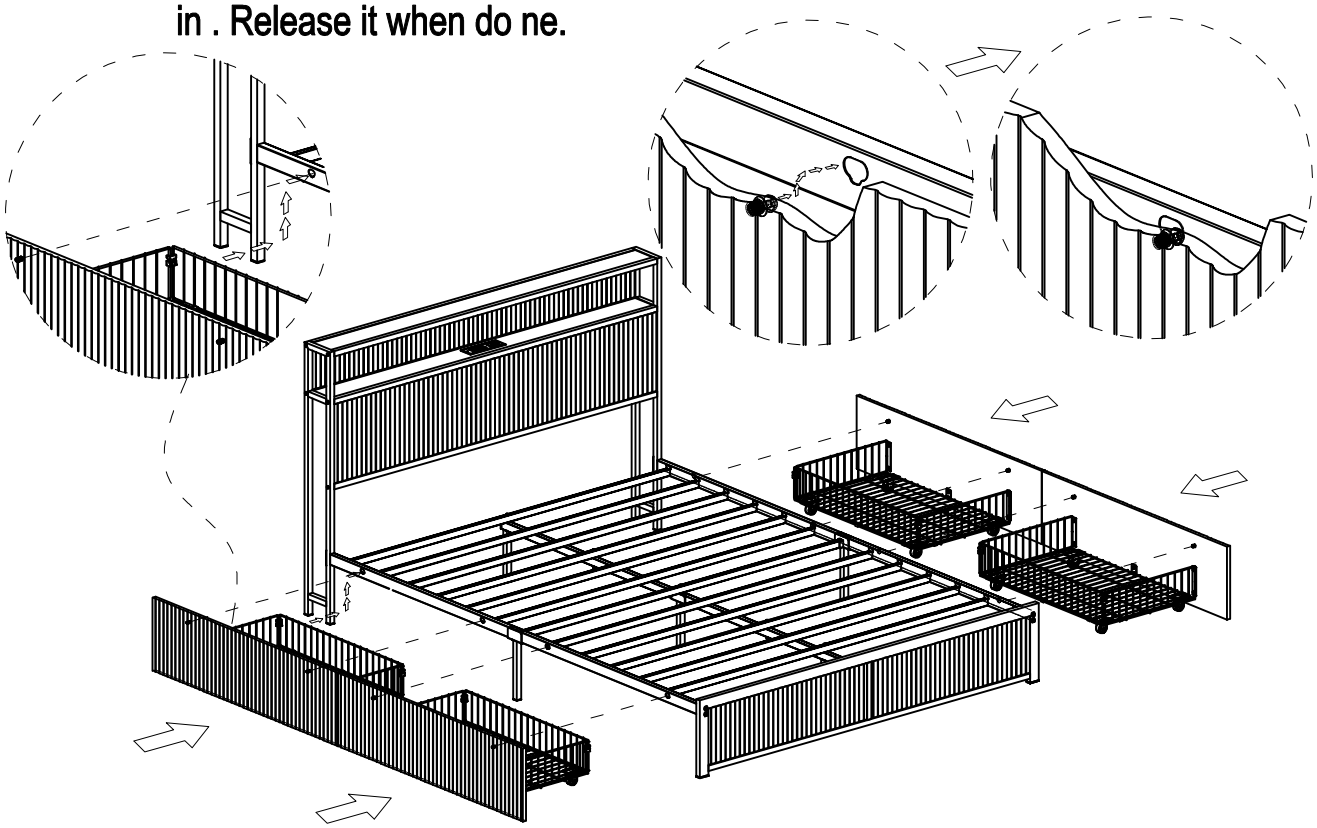

28

Note : First lift it up , then push and pull it outward

