
Assembly Guide

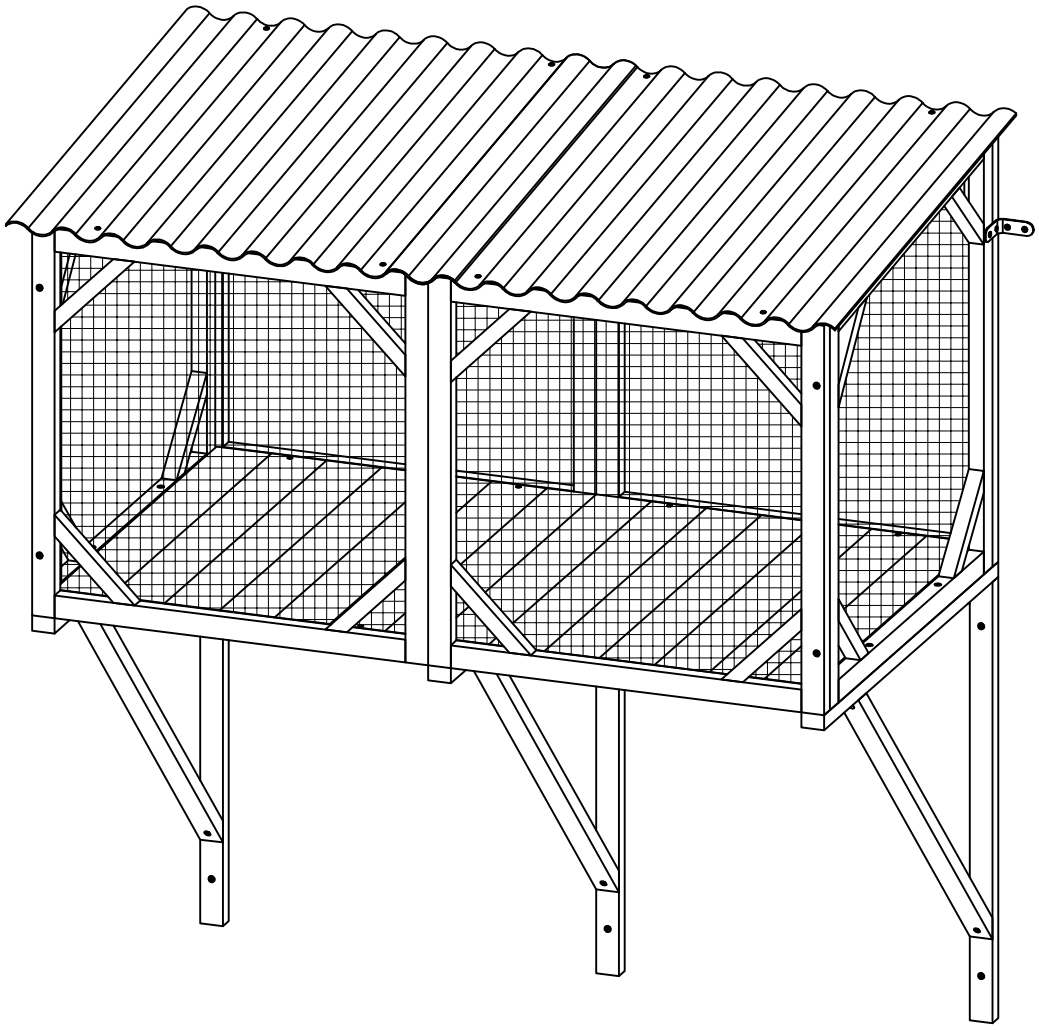


READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE


ASSEMBLY & INSTRUCTION MANUAL

PART LIST


Ax1

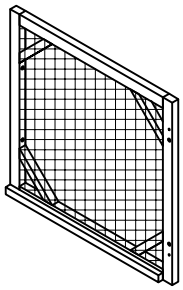


Bx1

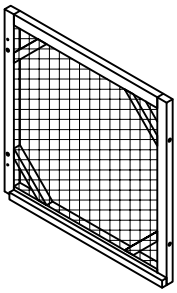


Cx1

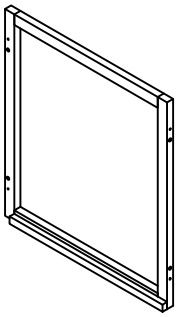


Dx1

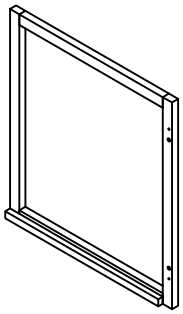


Ex1

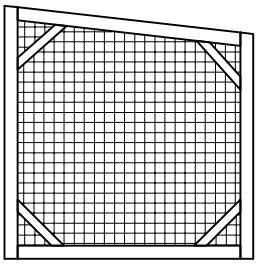


Fx1

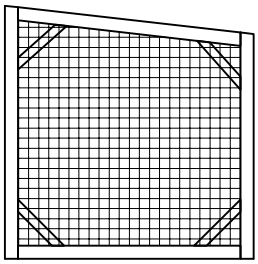


Gx2

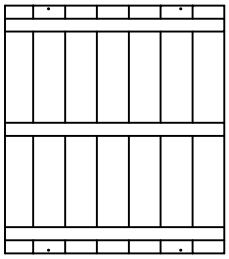


Hx2

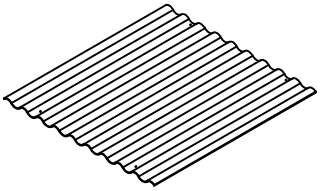


Ix2

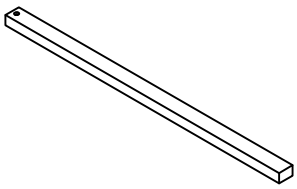


Jx1

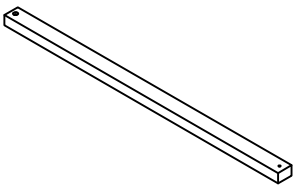


Kx3

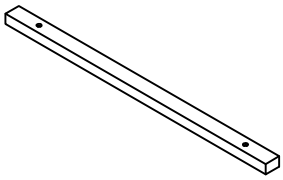

Lx3

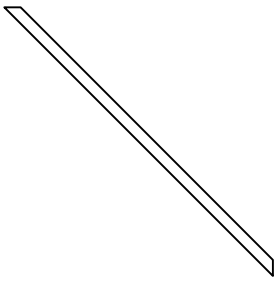

①x12+1



M3*16mm

②x8



M3*25mm

③x4



M3.5*25mm

④x7+1



M3.5*30mm

⑤x11+1



M3.5*35mm

⑥x10+1



M3.5*45mm

⑦x4



M3.5*50mm


⑧x12+1




wood stick

ϕ8*20mm


⑨x10

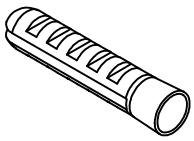

⑩x2




⑪x1

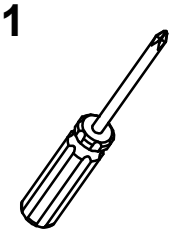


01

Cx1
Dx1
⑦x2
⑧x2

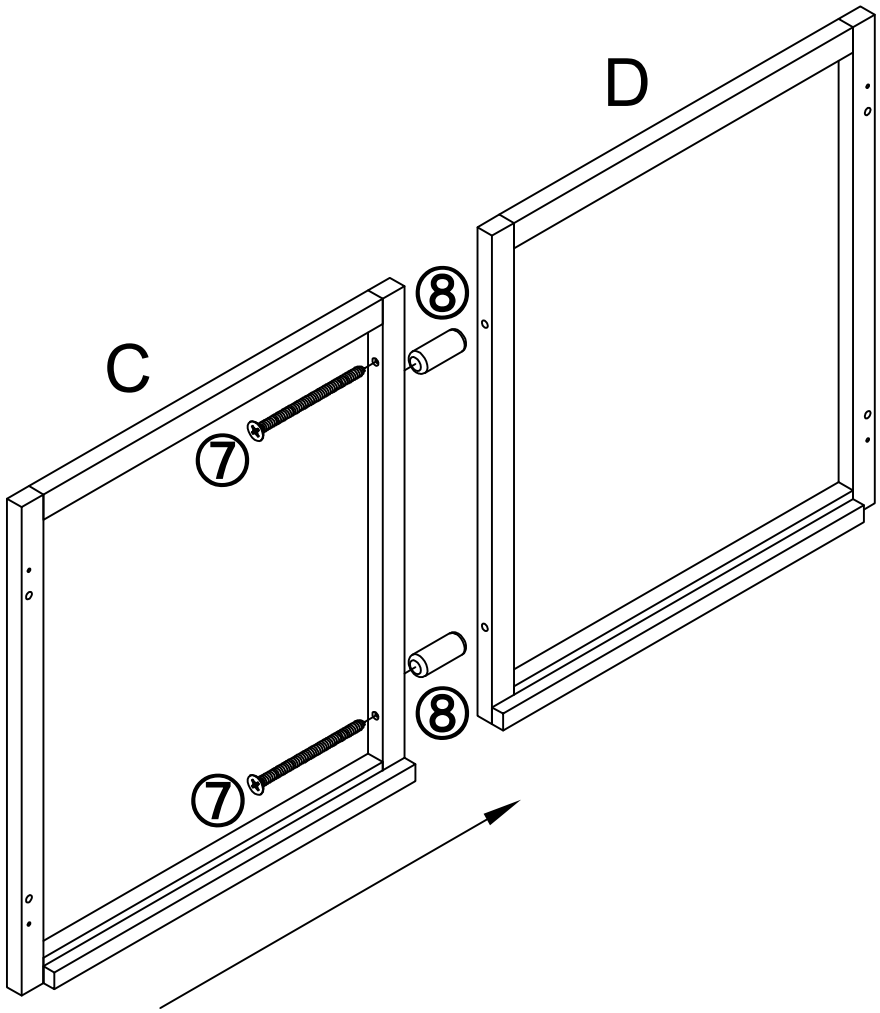


02

Ex1
Fx1
⑧x8

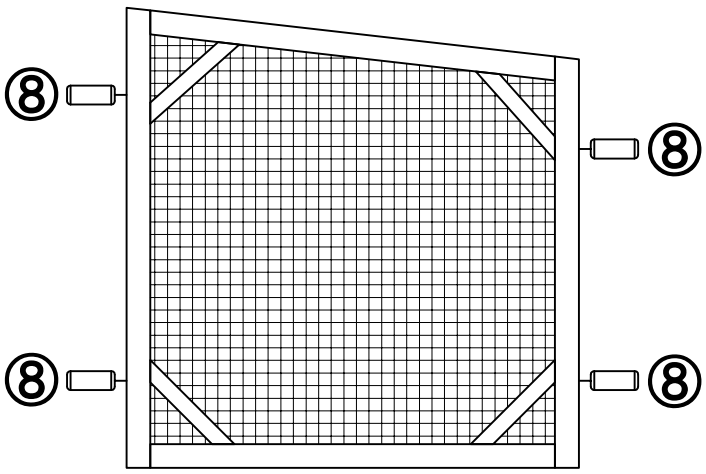


E

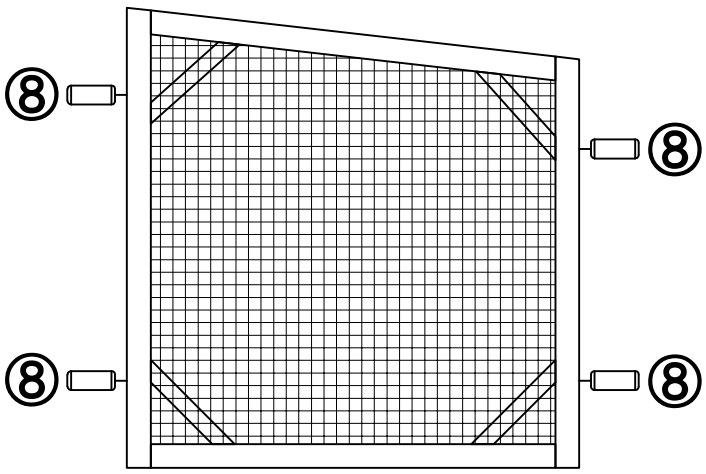


F


⑤x4

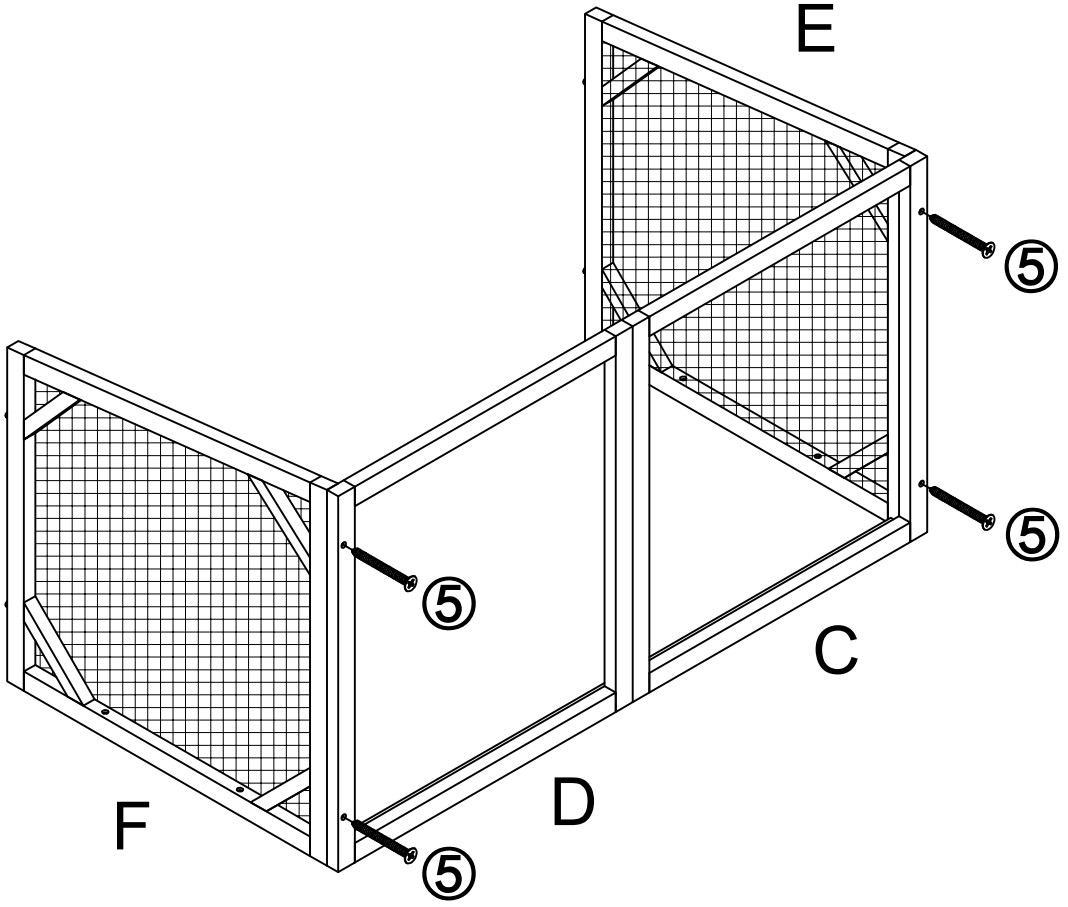

Ax1
Bx1
⑦x2
⑧x2

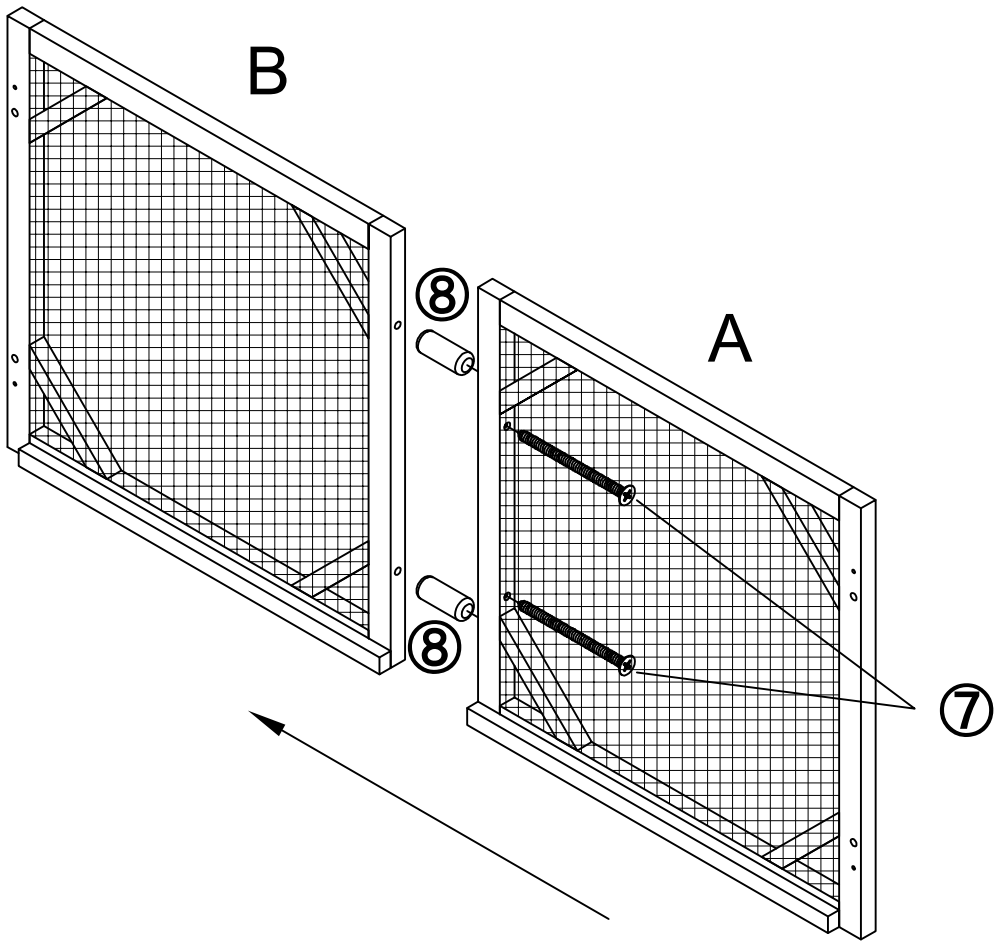


⑤x4

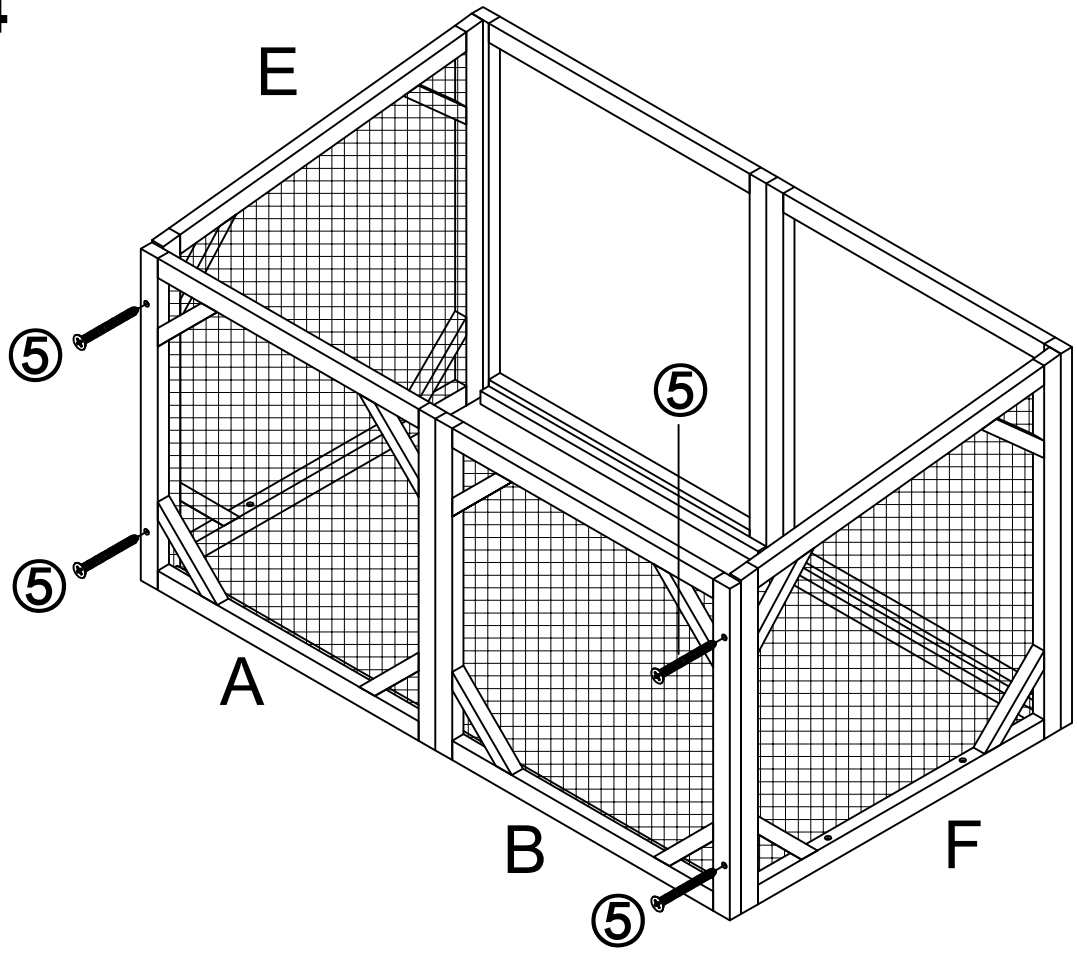


Gx2


②x8

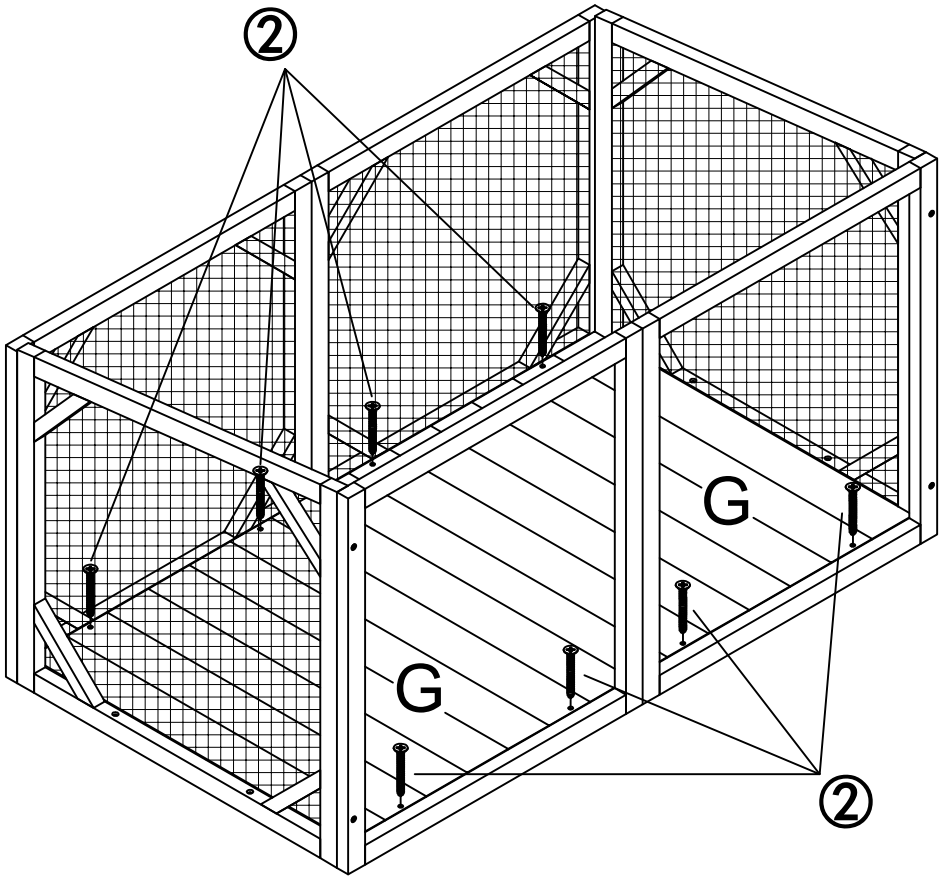

Hx2
①x8

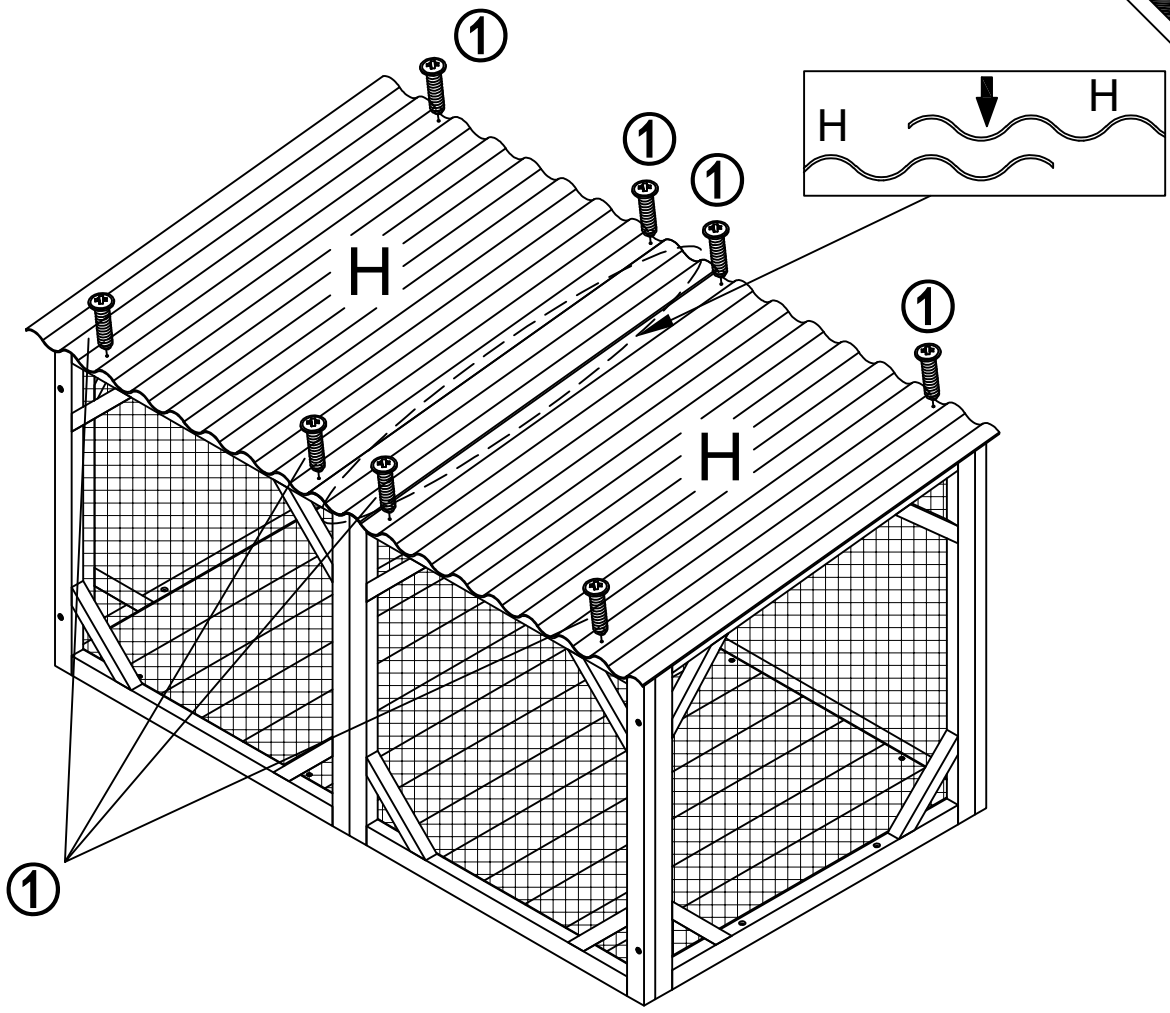


Ix2 **④x6**
Jx1 **⑤x3**
Kx3
Lx3

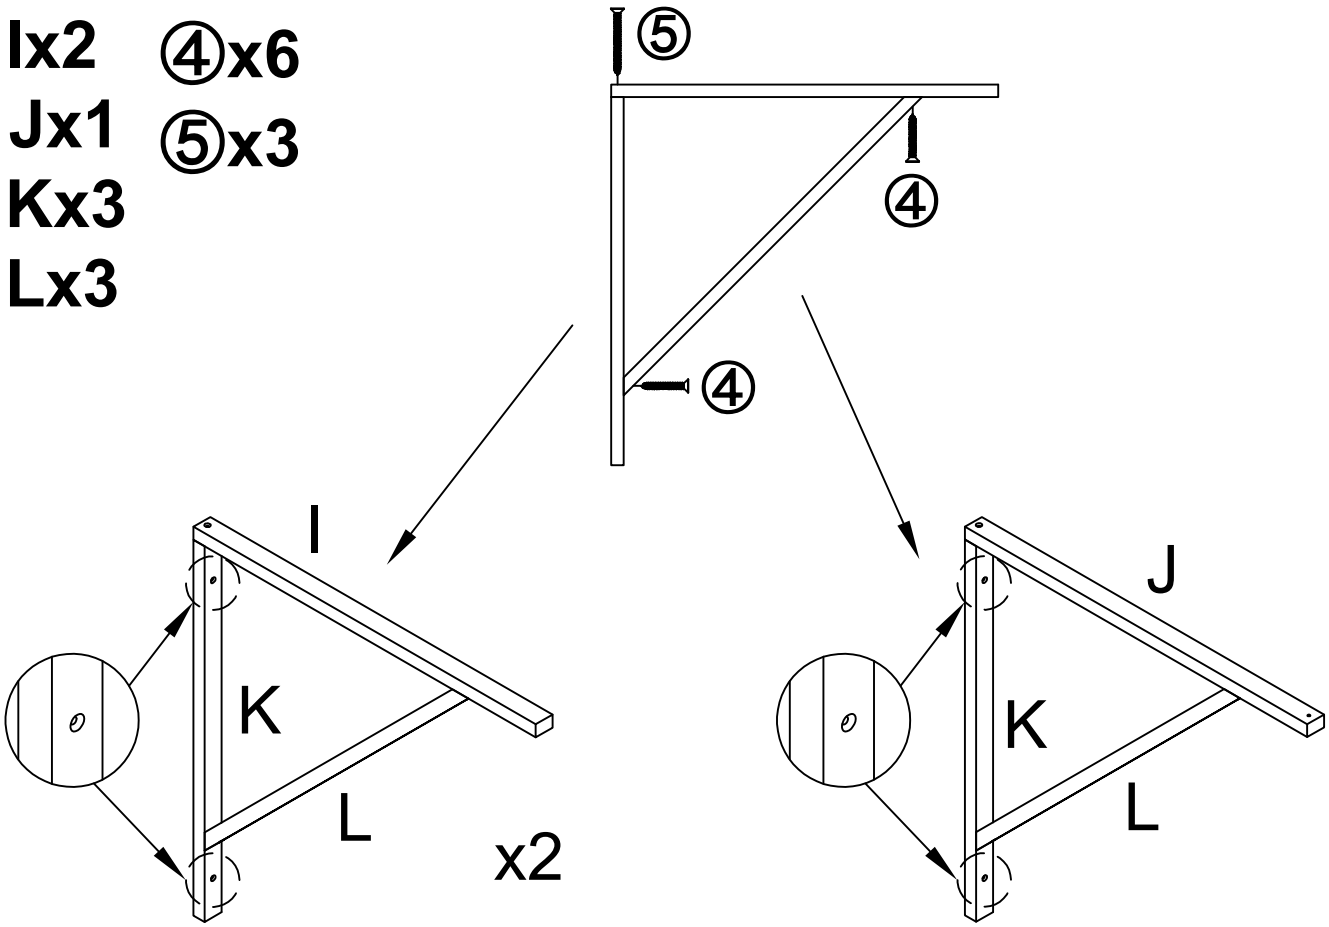


⑥x6

⑨x6

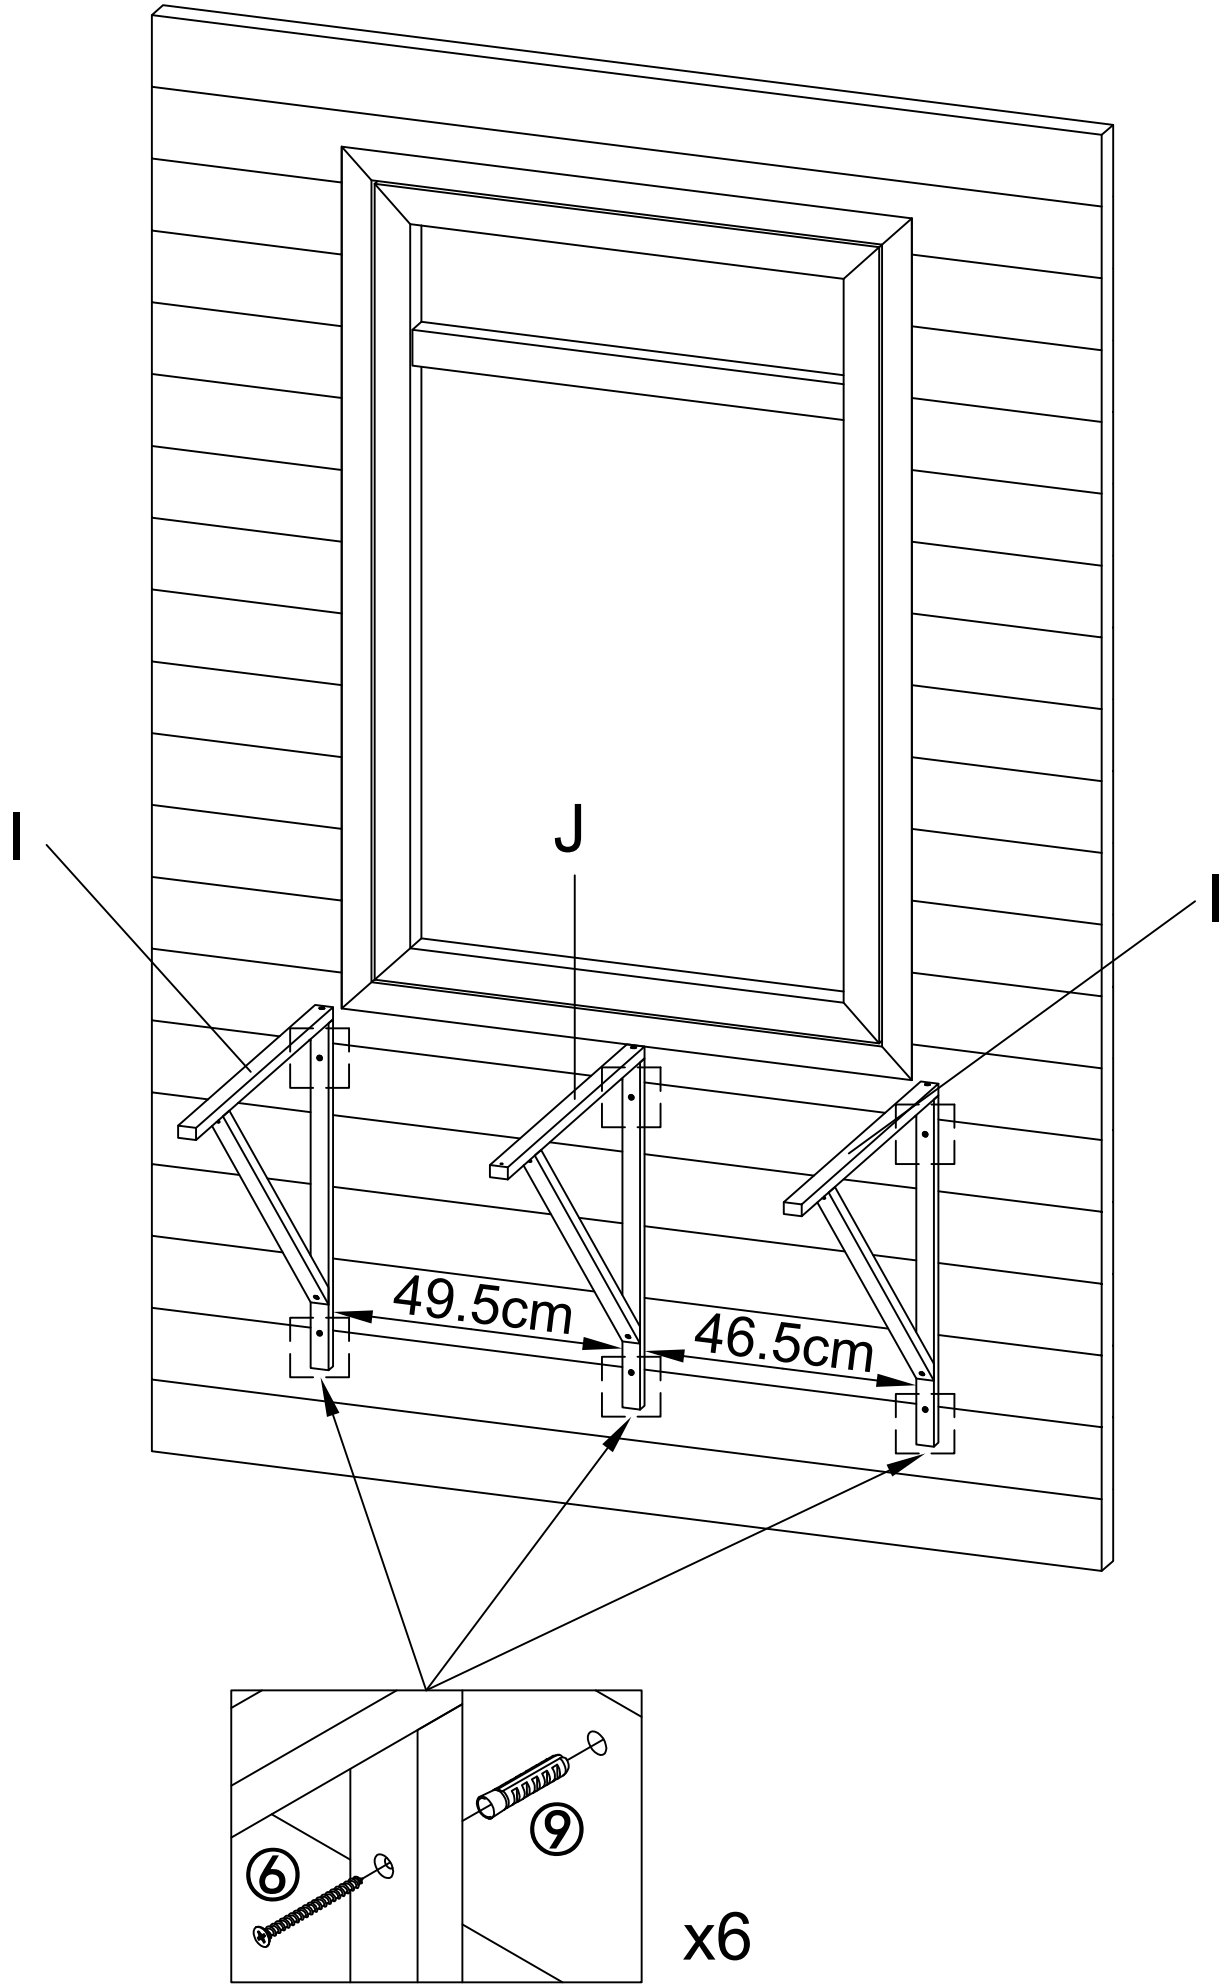



④x1


⑥x4

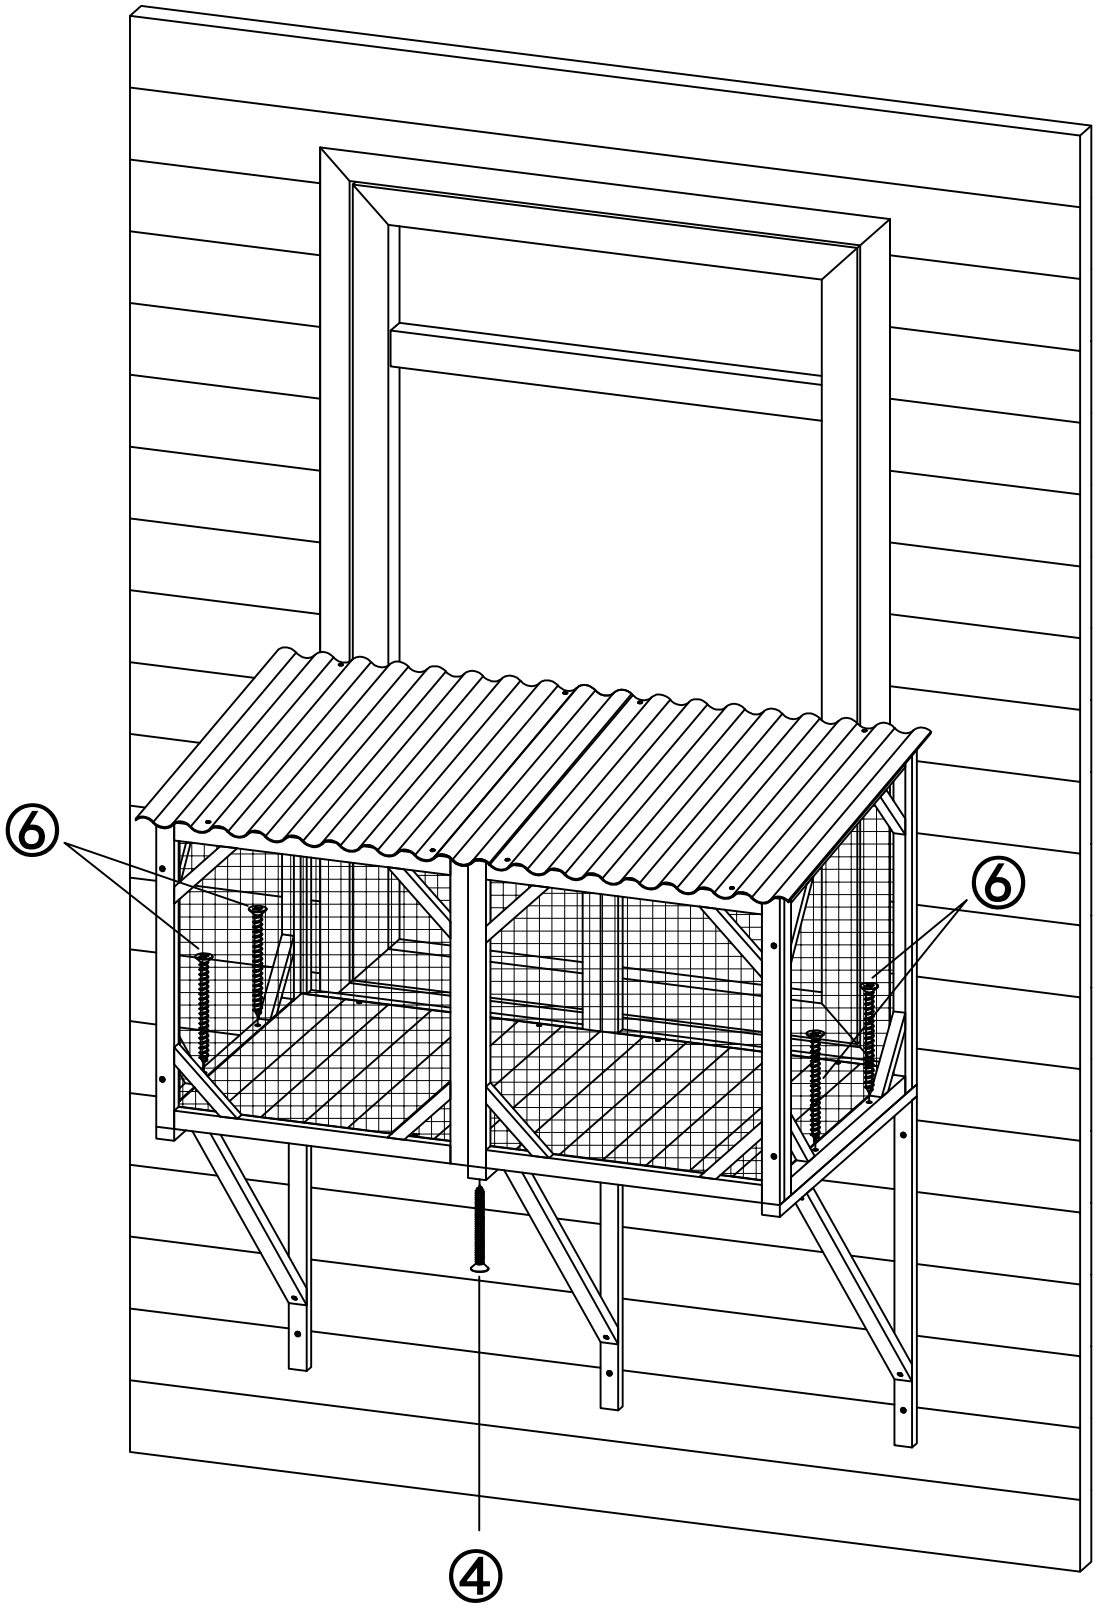

①x4
③x4
⑨x4
⑩x2

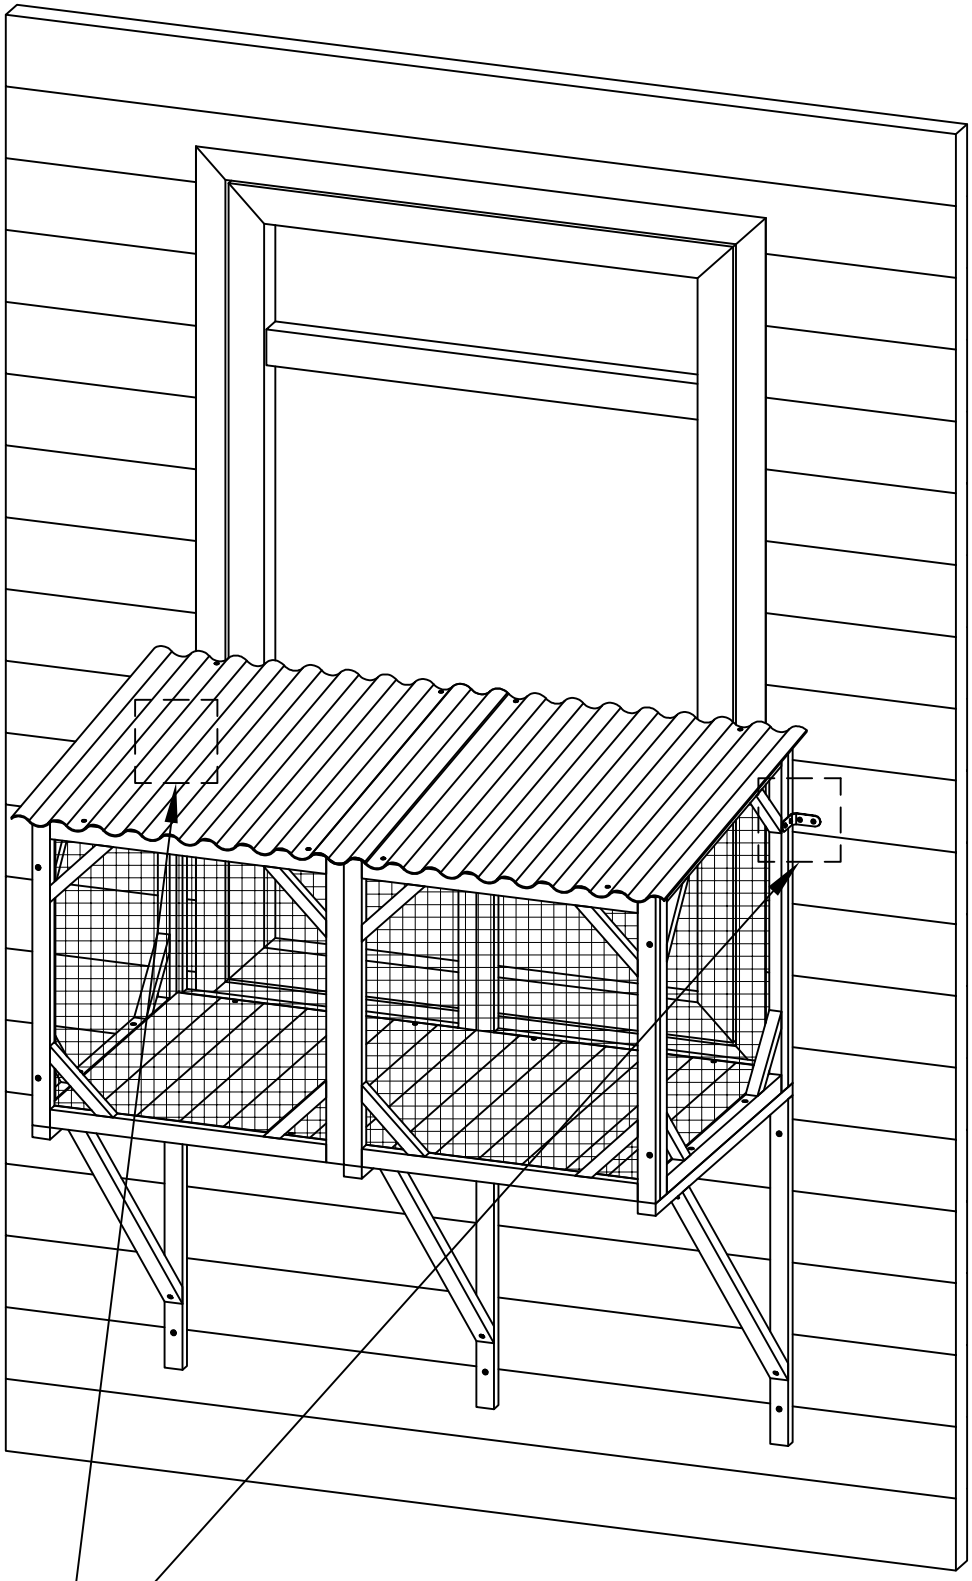

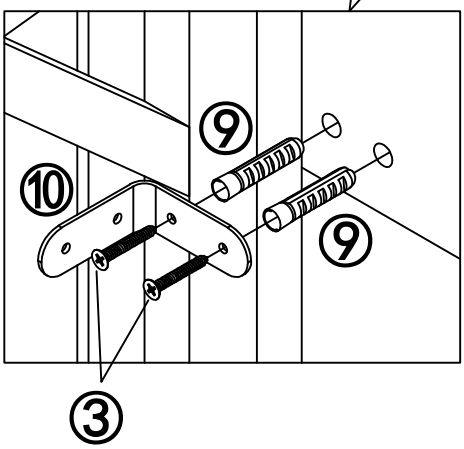

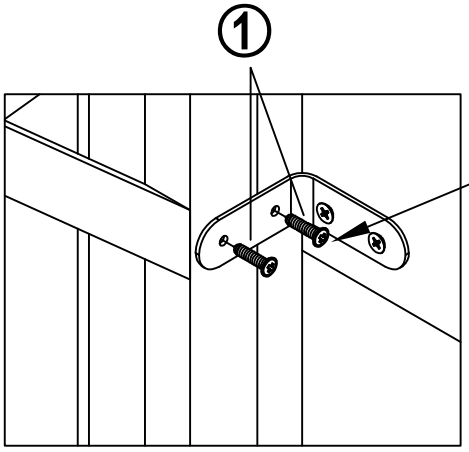

Note:
Please select the hole positions based on the actual window conditions.