

Dining Table

Assembly Instructions


CZ070

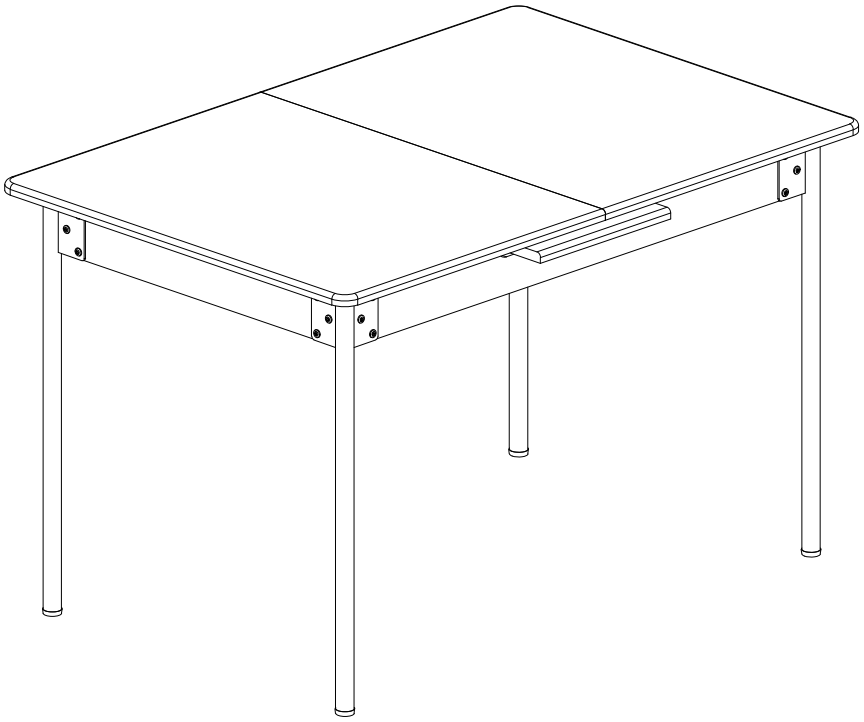

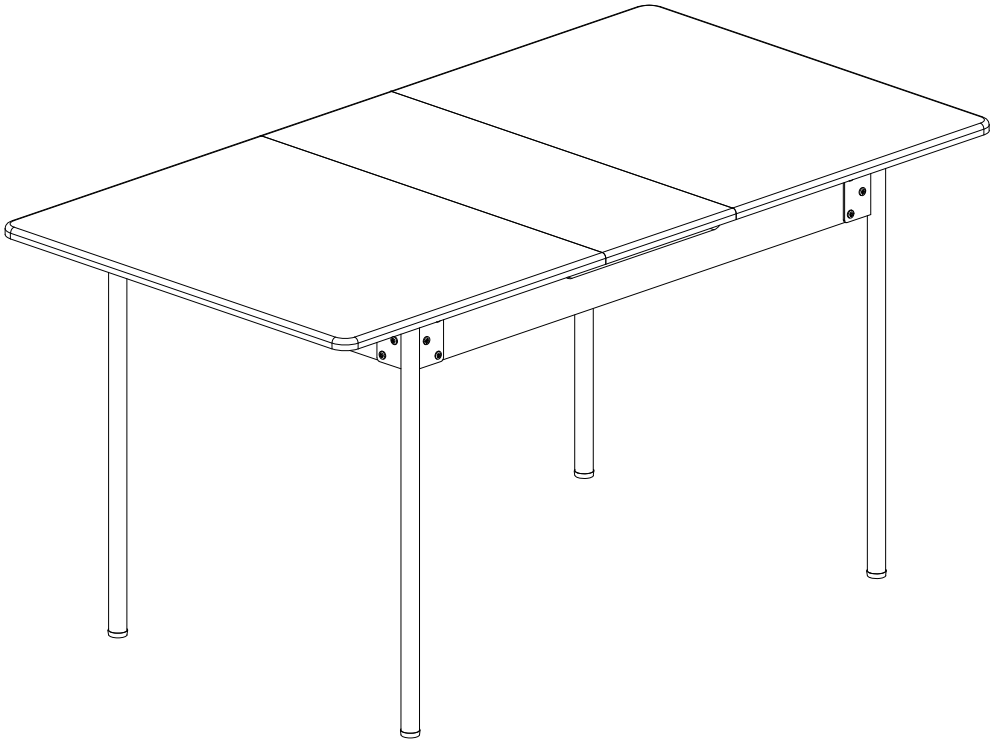

Assembly Overview


Caution: After unpacking, check the quantity of all parts against this instruction manual.

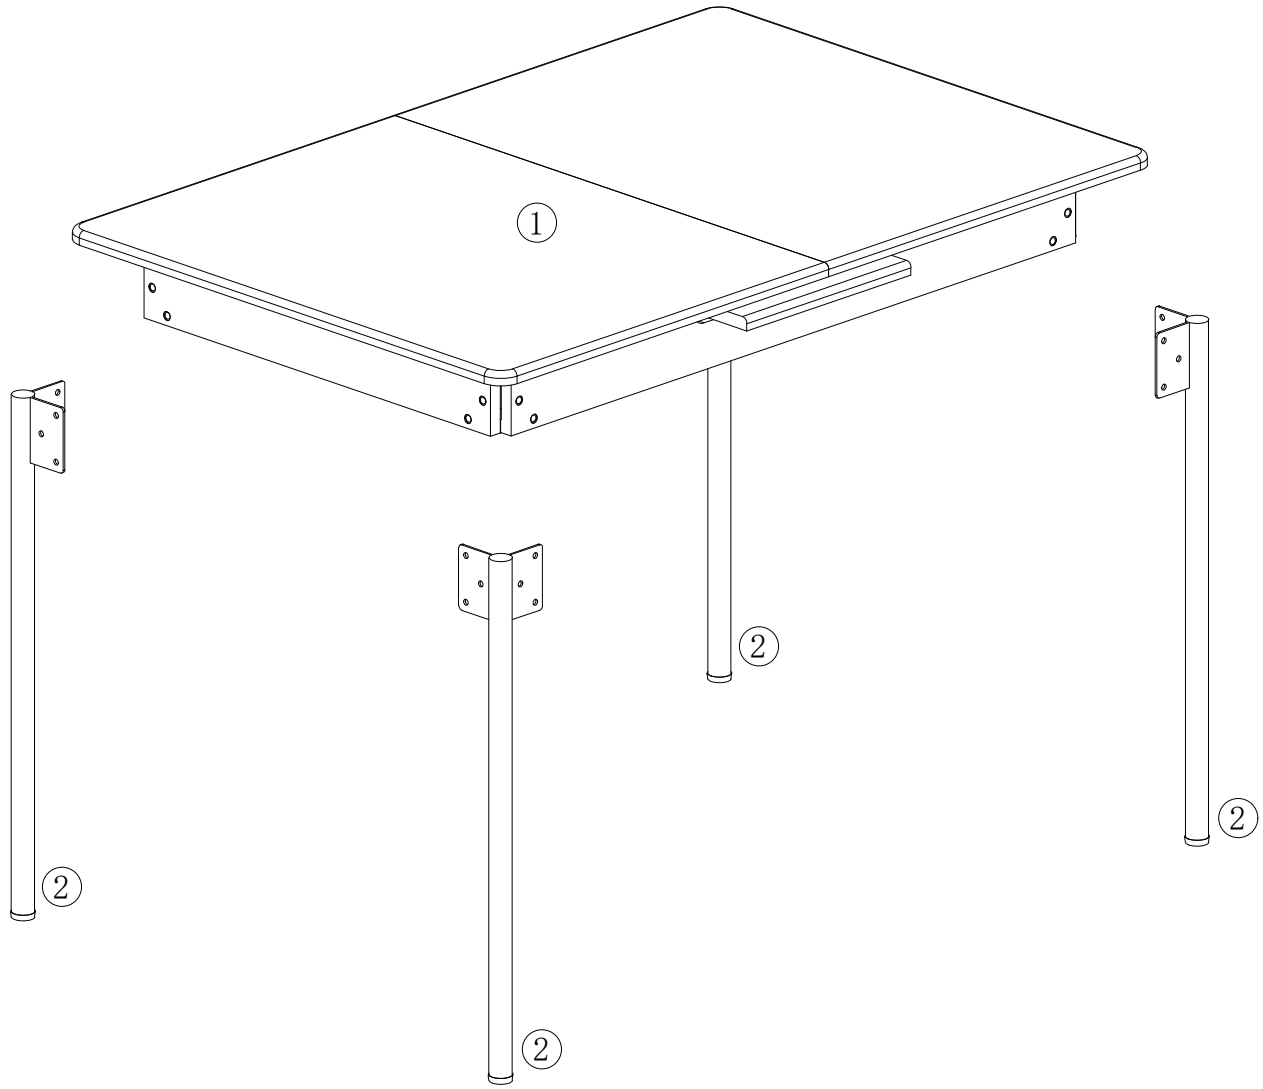

Parts List

Tabletop assembly


1

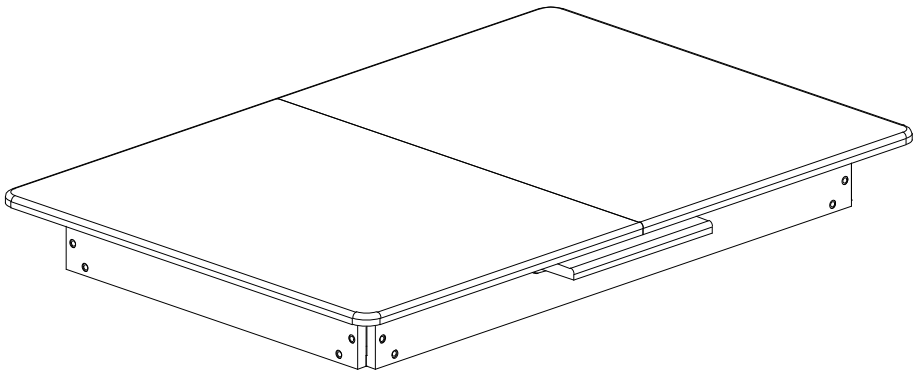

1 PC

Legs


2

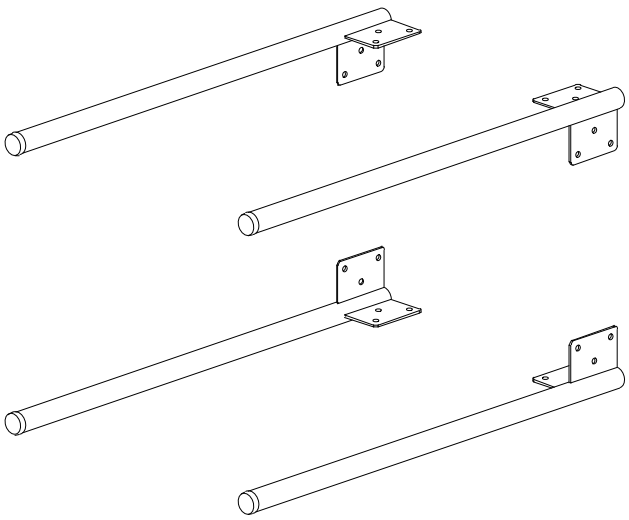


4 PCS

Screw Selection


Note: Use the correct screws to prevent damage to the parts.

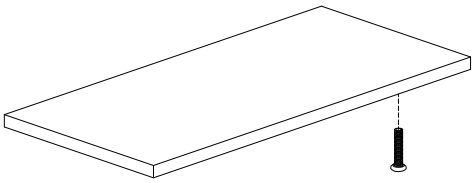

Example

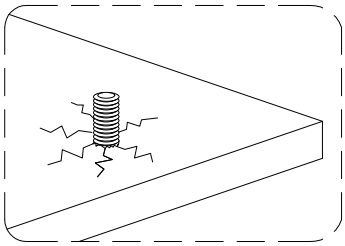

Incorrect: may split the panel

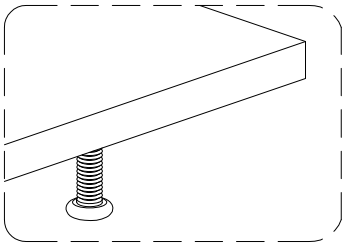


Correct screw size

Hardware & Tool

A Screw

M6 × 12MM


24 PCS

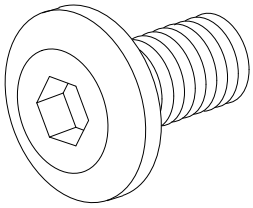

B Hex key (tool)

M4 × 100MM


1 PC

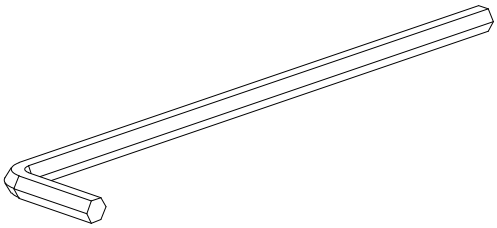

Slide Lock

Note: The slide lock lever is supplied in the open position.
You can extend or retract the tabletop as needed.
Open the lever to operate the extension mechanism.
Close the lever when you are not operating the mechanism.

①

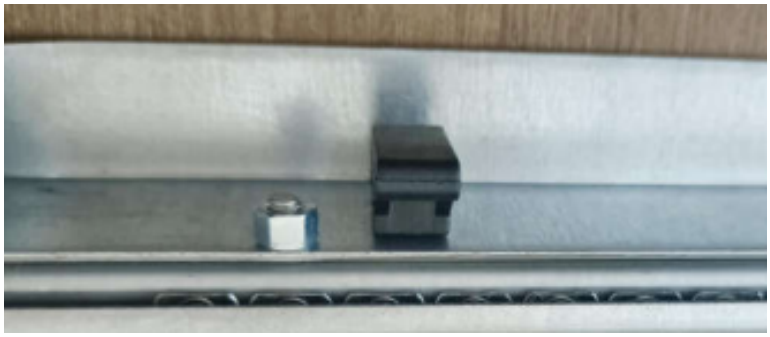

Closed

②






Open

Step 1


Attach the legs (2) to the tabletop assembly (1), as shown.

Hardware: A × 12 Tool: B × 1

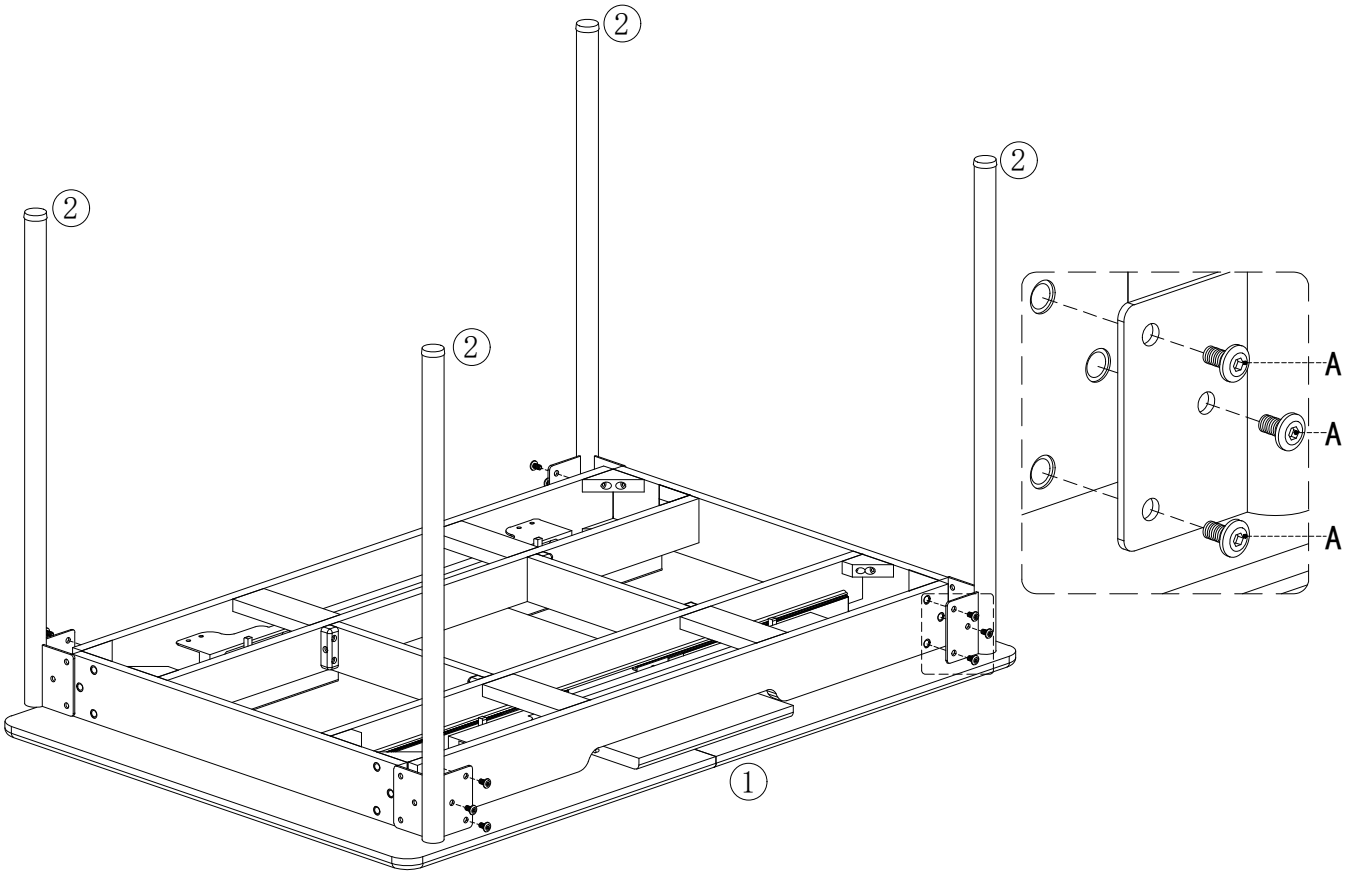


Step 2

Continue securing the legs (2) to the tabletop assembly (1),
as shown. Hardware: A × 12 Tool: B × 1

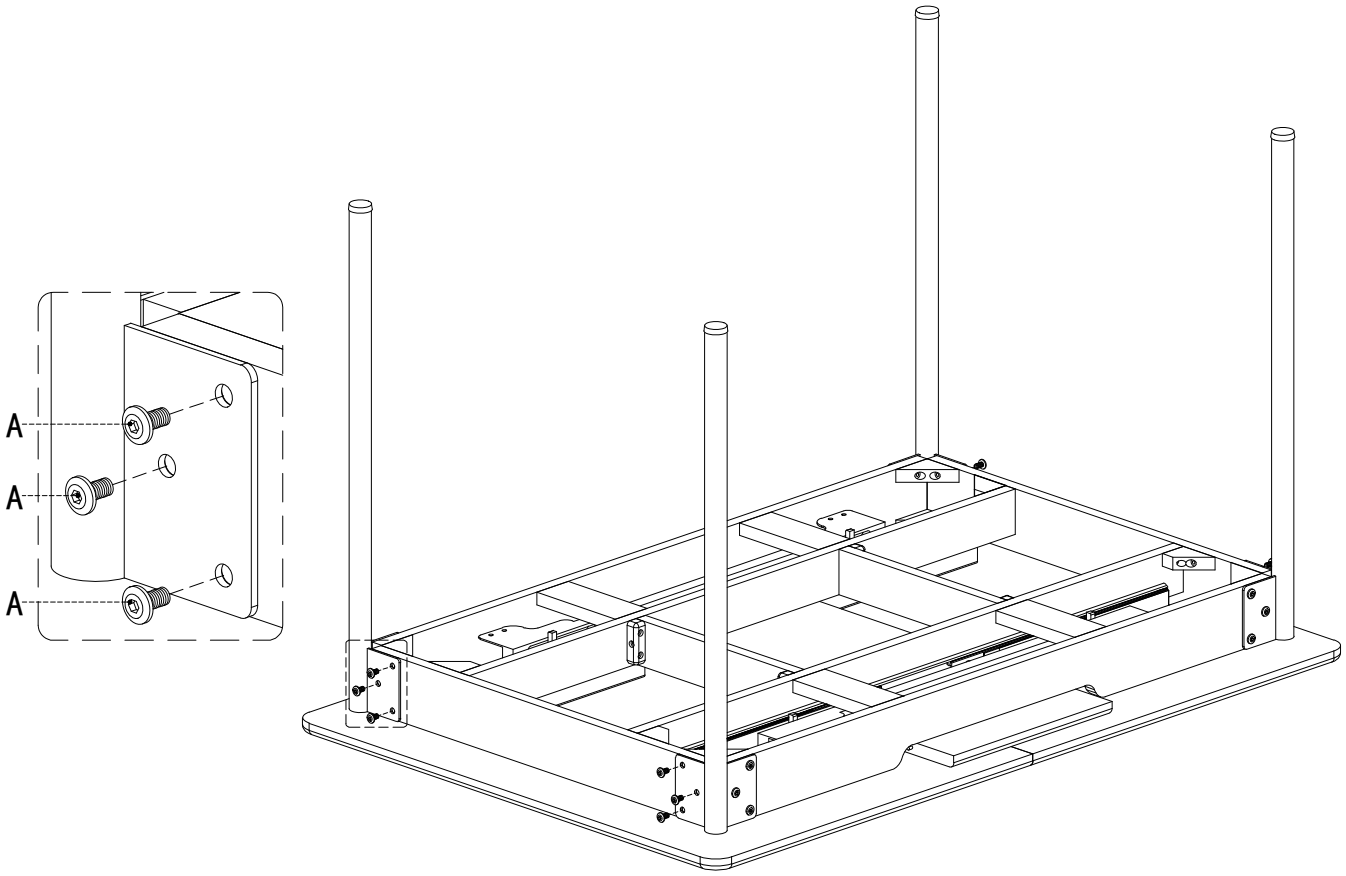

Step 3

Caution: Adjust the height of the feet to level the table.

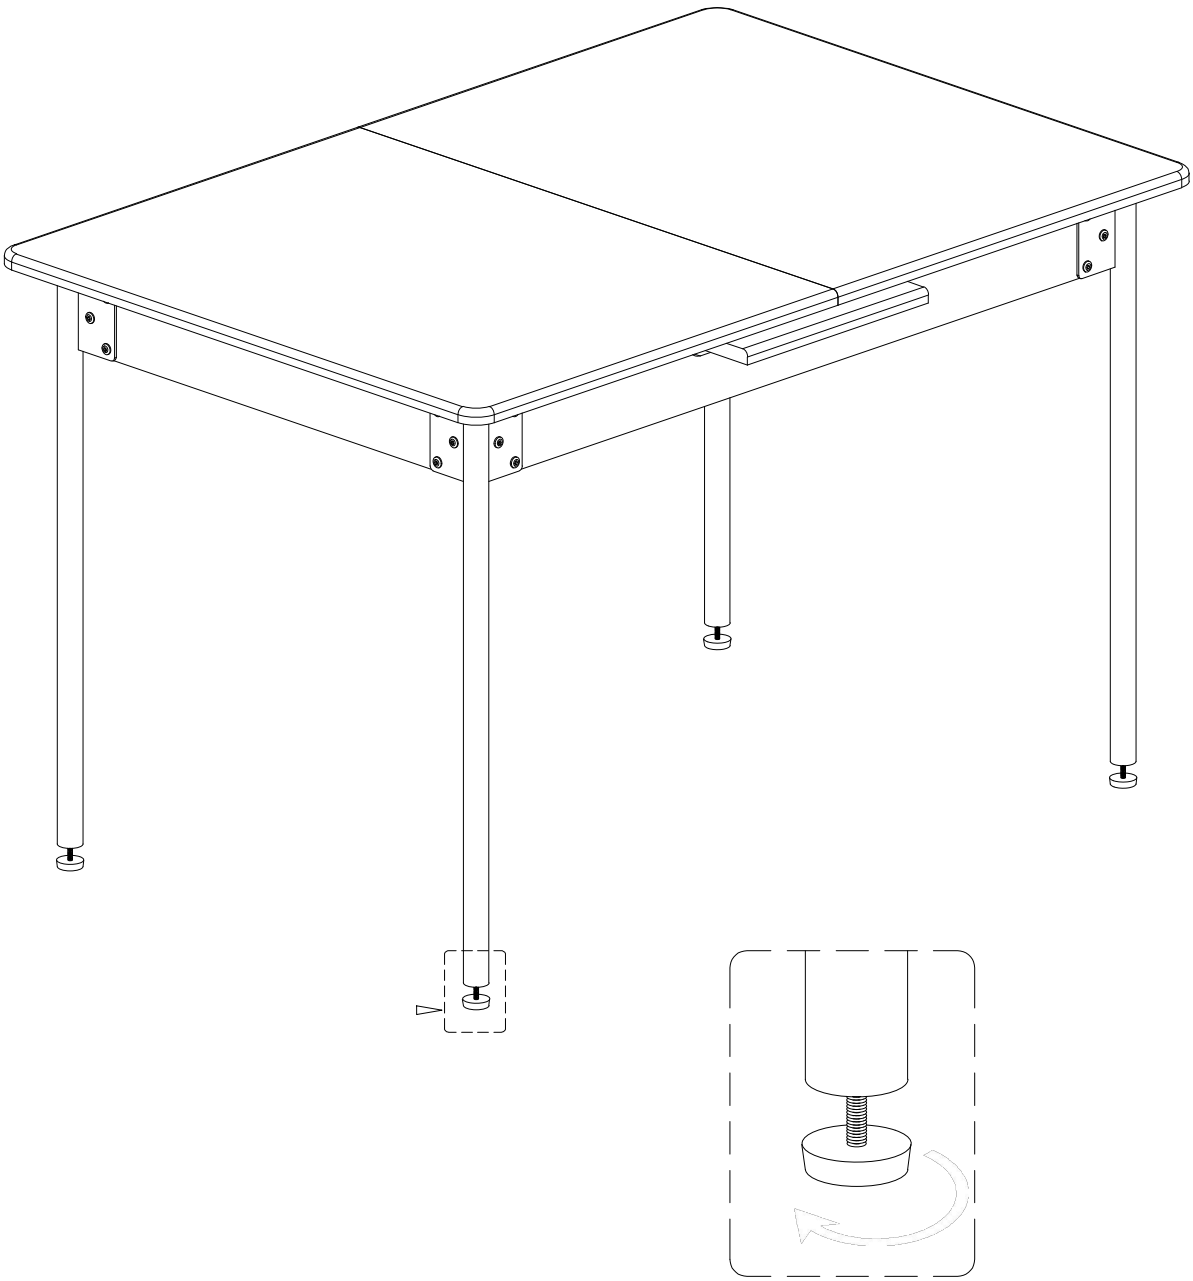

Step 4

Caution: To extend the tabletop, gently pull both side panels outward until the center panel rises fully. Push the side panels inward until they are flush against the center panel.
To retract it, gently pull both side panels outward until the center panel lowers fully. Push the side panels inward until they fit together.

