

DS--7A
7H







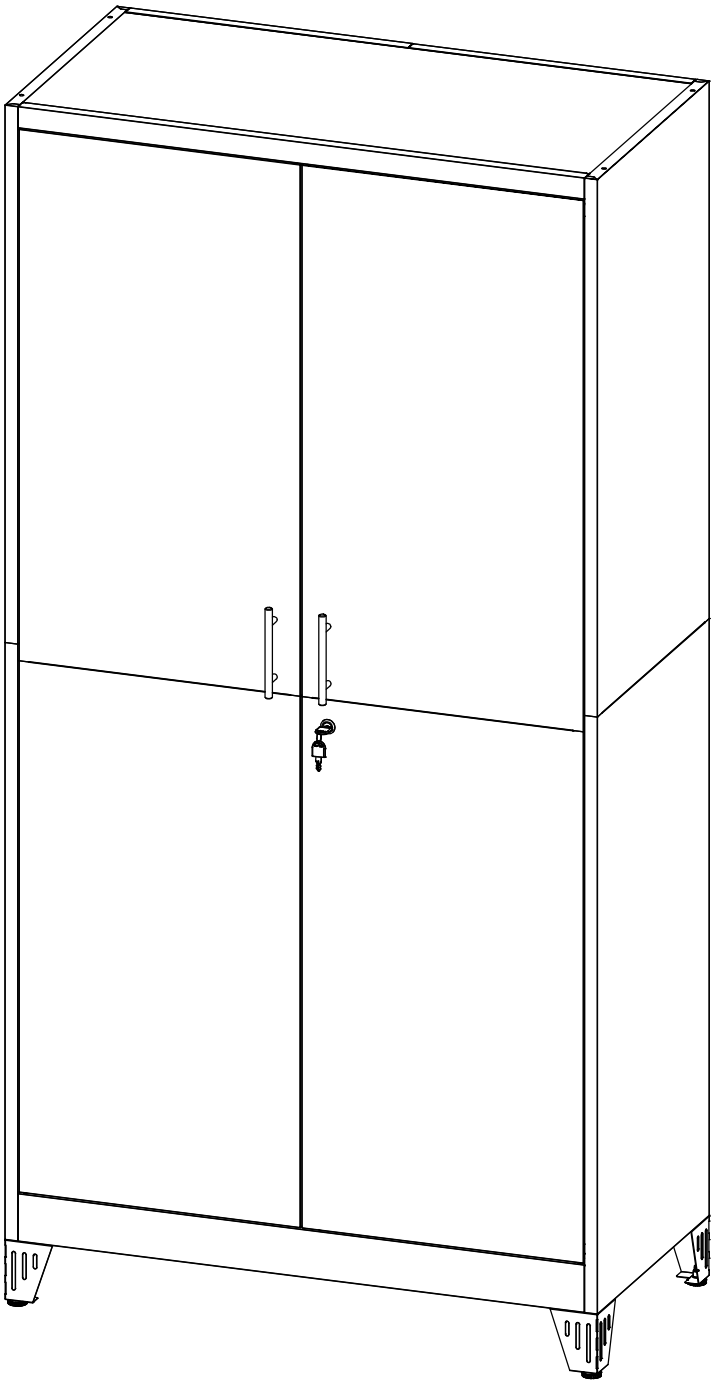
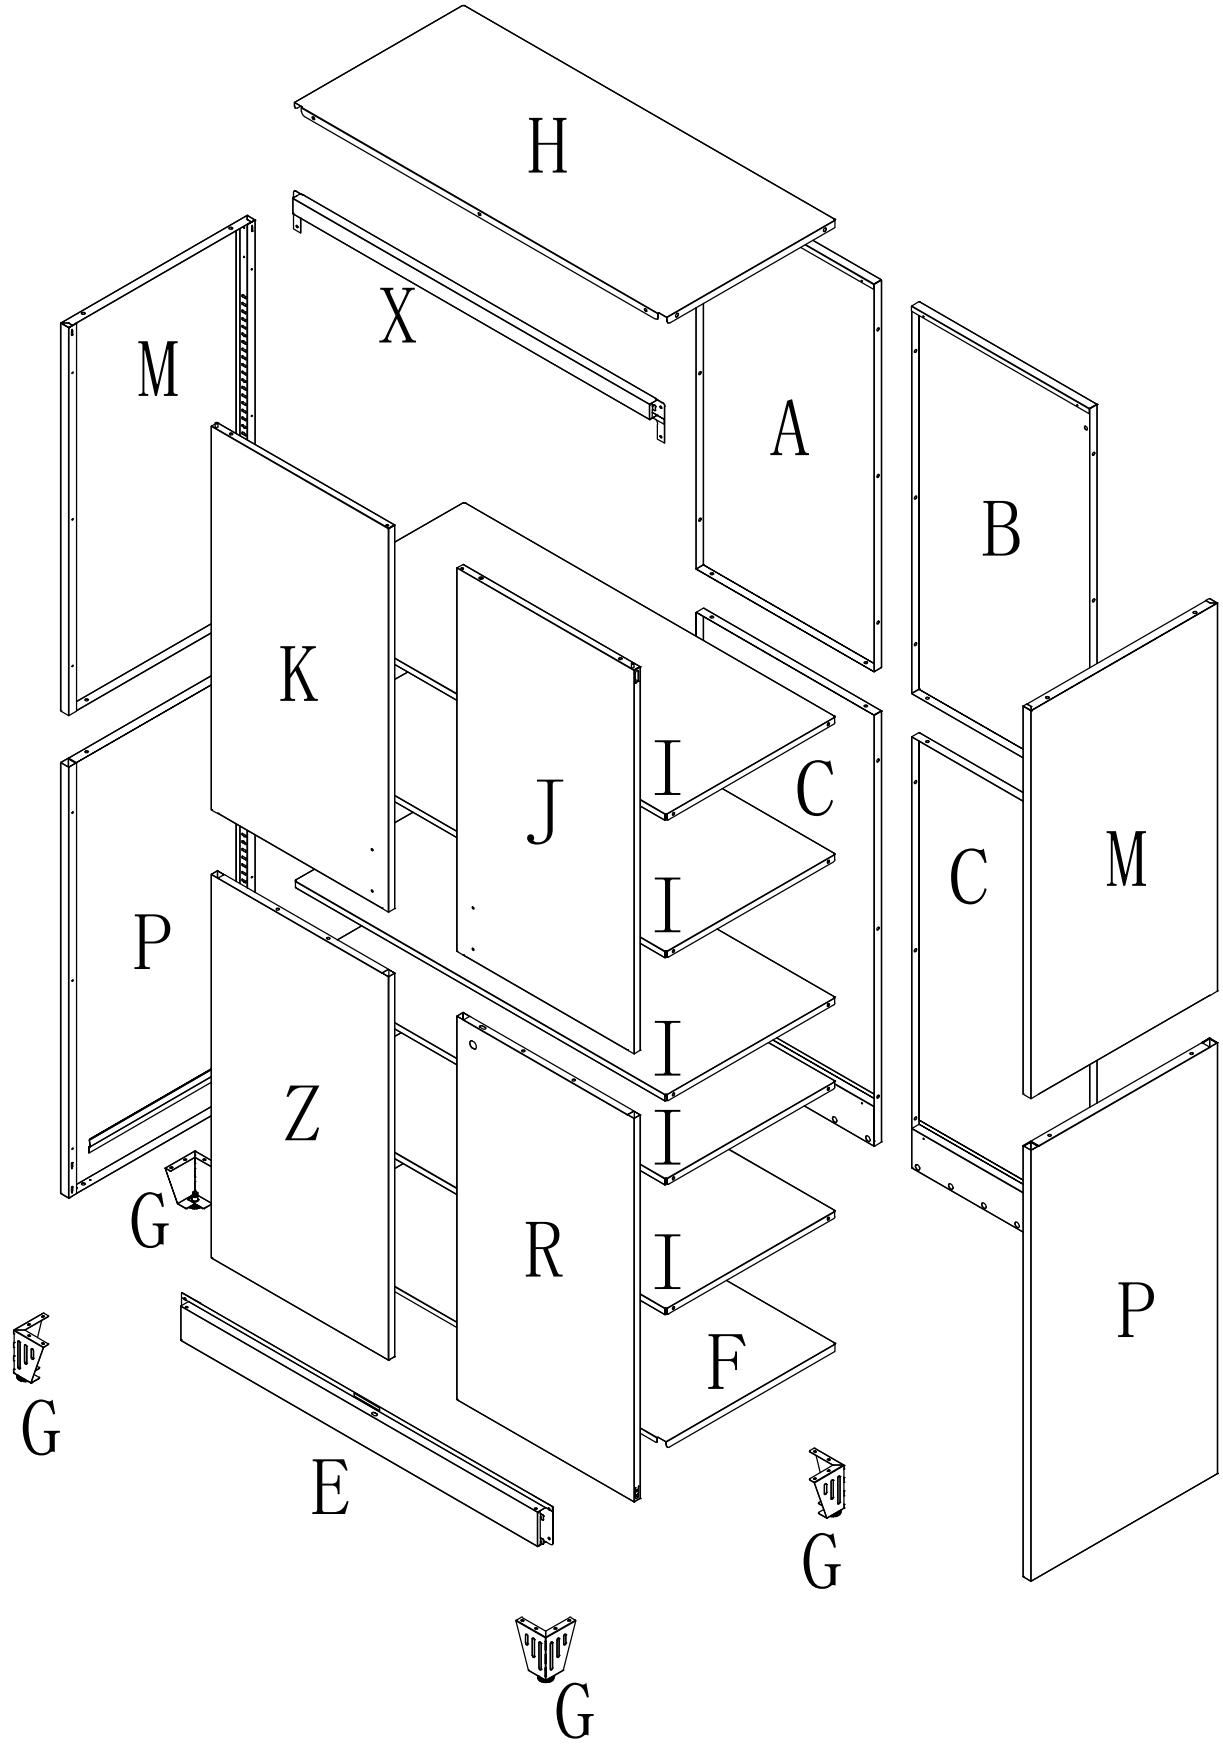


Important!
Thank you for your purchase. Please open it carefully.
If you encounter any problems during assembly and use,
please contact us through the Amazon email platform.
We have the ability to solve all your problems.
Service tenet - to enable customers to enjoy high-quality service.


the image shown here is indicative only. the actual product may differ .


H
X
M
A
B
K
J
I
C
C
M
P
I
I
Z
I
G
R
I
P
G
F
E
G
G

PARTS LIST LISTEDESPIECES LISTADEPIEZAS

Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante	Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante
A	Left backplate, upper part		1		L	M6 * 8 screws and nuts		18	
B	Right backplate, upper part		1		N	Self-tapping screw4*8		79	2
C	The lower part of the backplane		2		G	Standing leg		4	
M	Upper side panel		2		G	Adjustable foot		4	
P	lower side panel		2		O	Shelf support		20	
E	lower crossbar		1		V	laminate fastening buckle		20	
X	Upper crossbar		1		S	Door Pivot Pim/Shim		2	
F	boottom panel		1		T	Door handle		2	
H	top panel		1		U	Door knob screw		4	
I	Shelves		5		Q	magnet		4	
K	Left door panel upper part		1		W	fixing bolt		2	
Z	Left door panel lower part		1		AA	Door lock assembly		1	
J	Right door panel upper part		1		BB	Concealed door bolt		1	
R	Right door panel lower part		1		CC	Guiding sleeve		2	
Y	Connecting pipe		8		D	Concealed door hook		2	


1

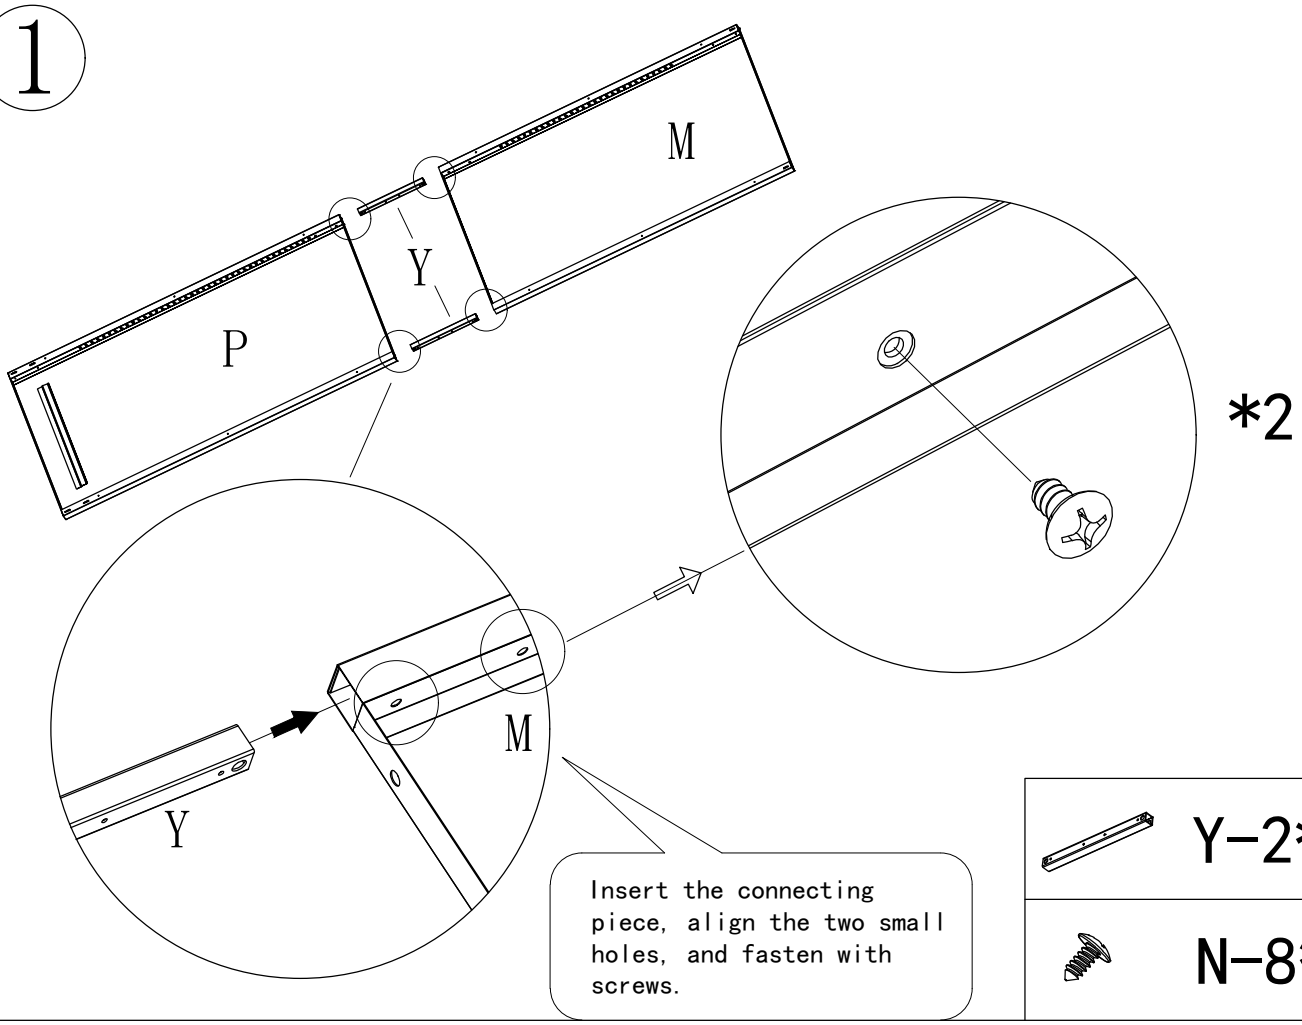

Y-2*2


N-8*2


2

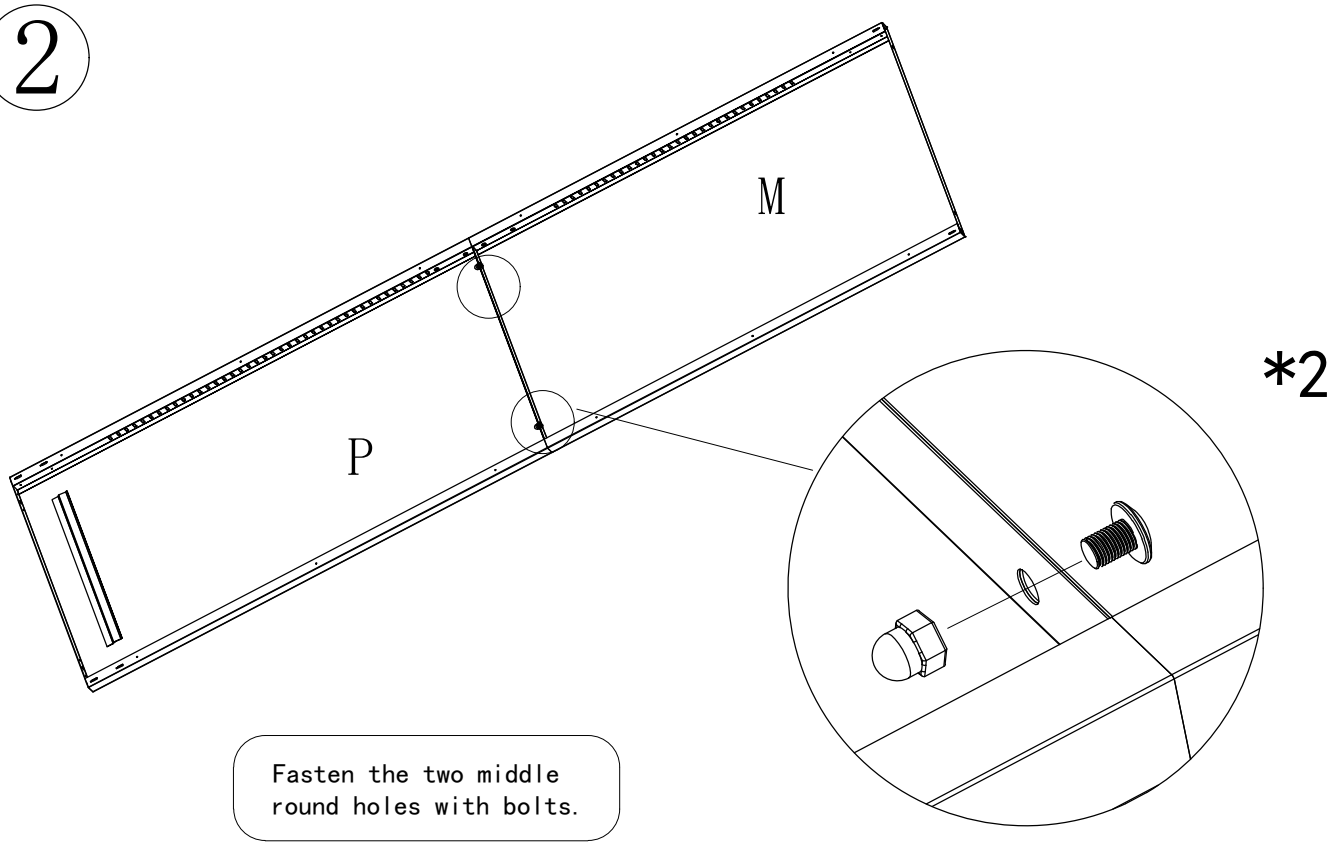

L-2*2


3

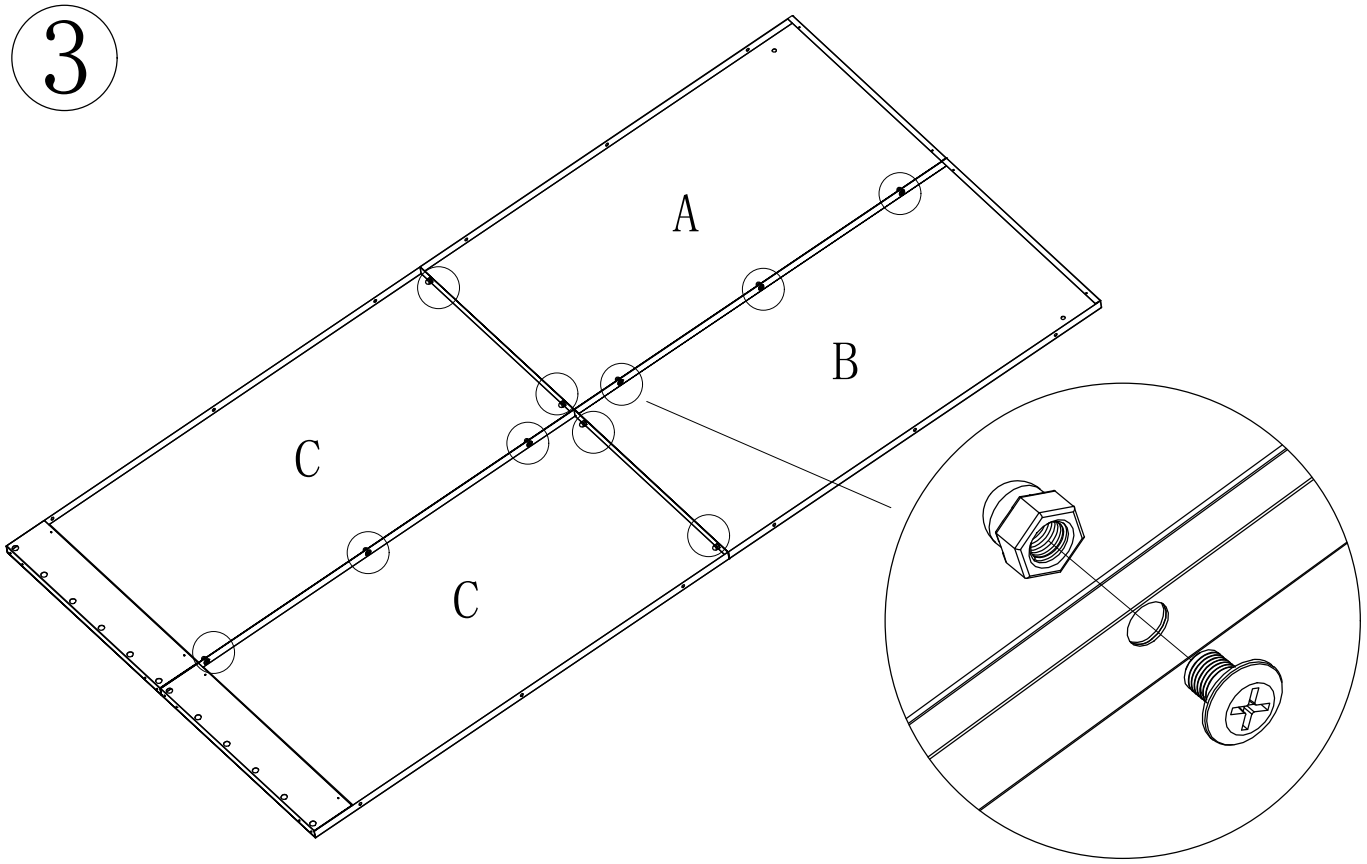

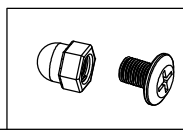

L-10

4

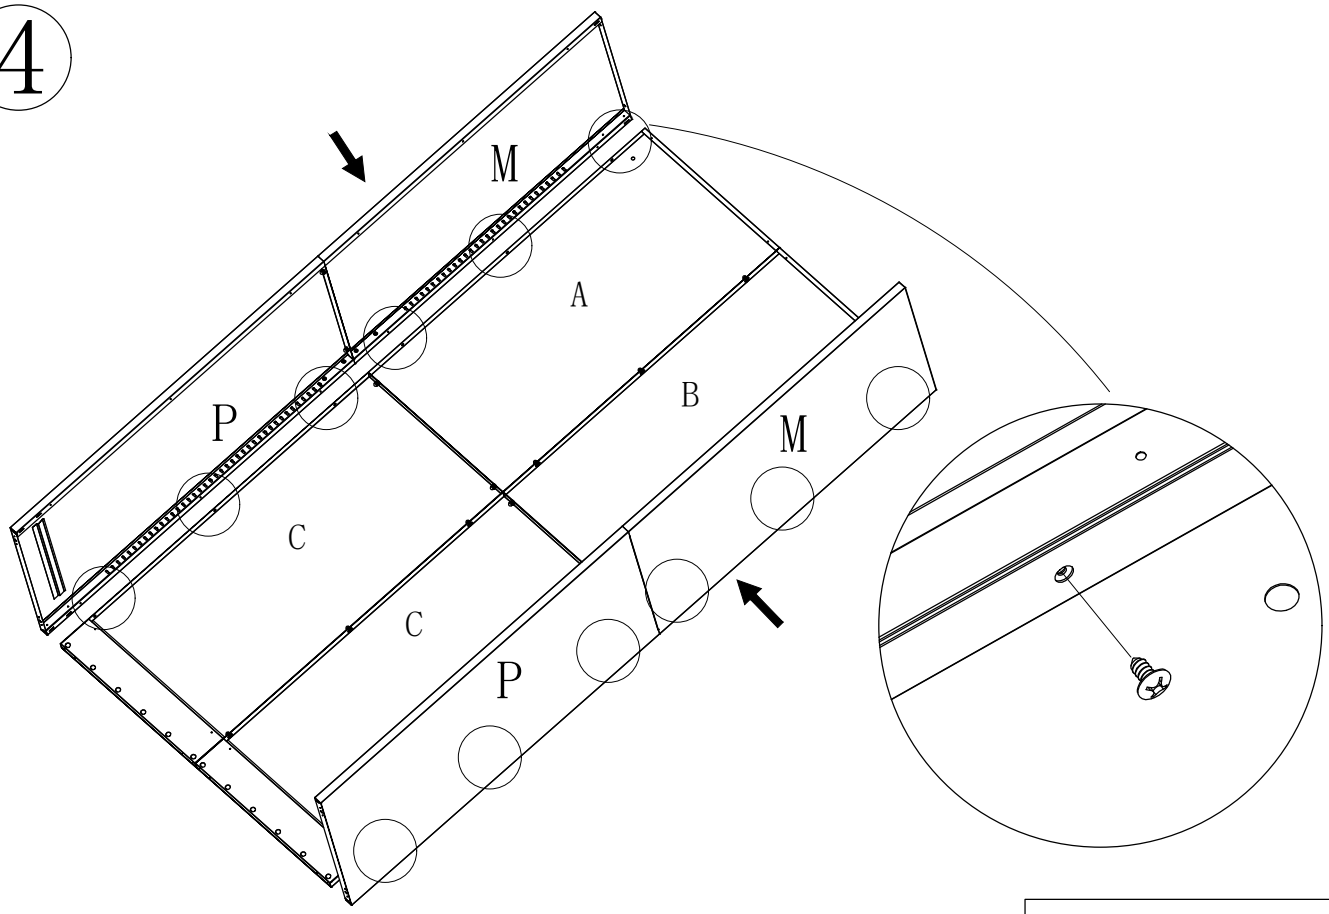




N-12


5

Snap the two buckles on either side of Part Einto the two holes in both side panels and thenpush it down so that it snaps into the bottom of the cabinet

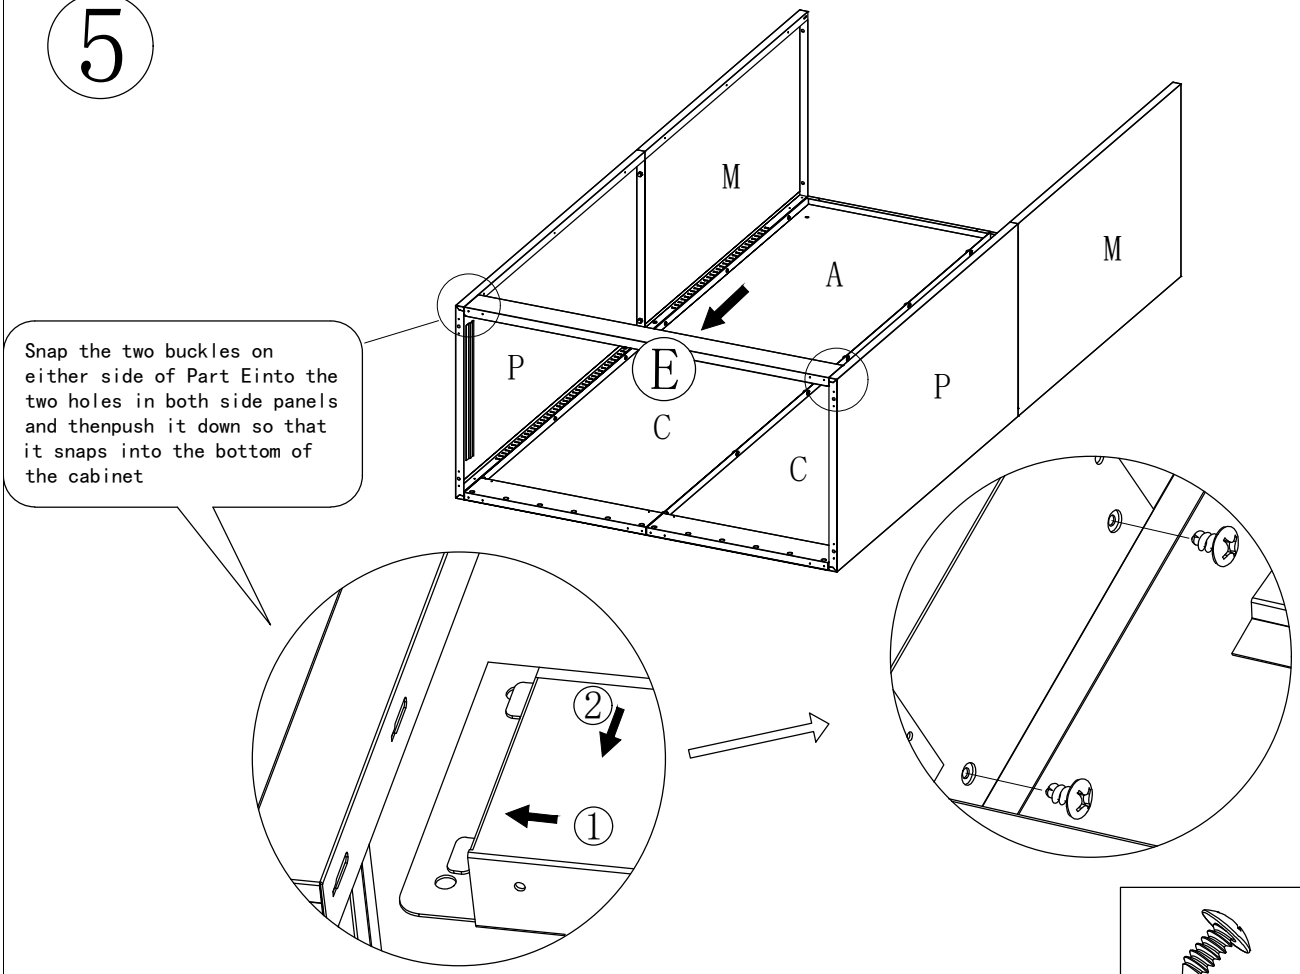


N-4


6

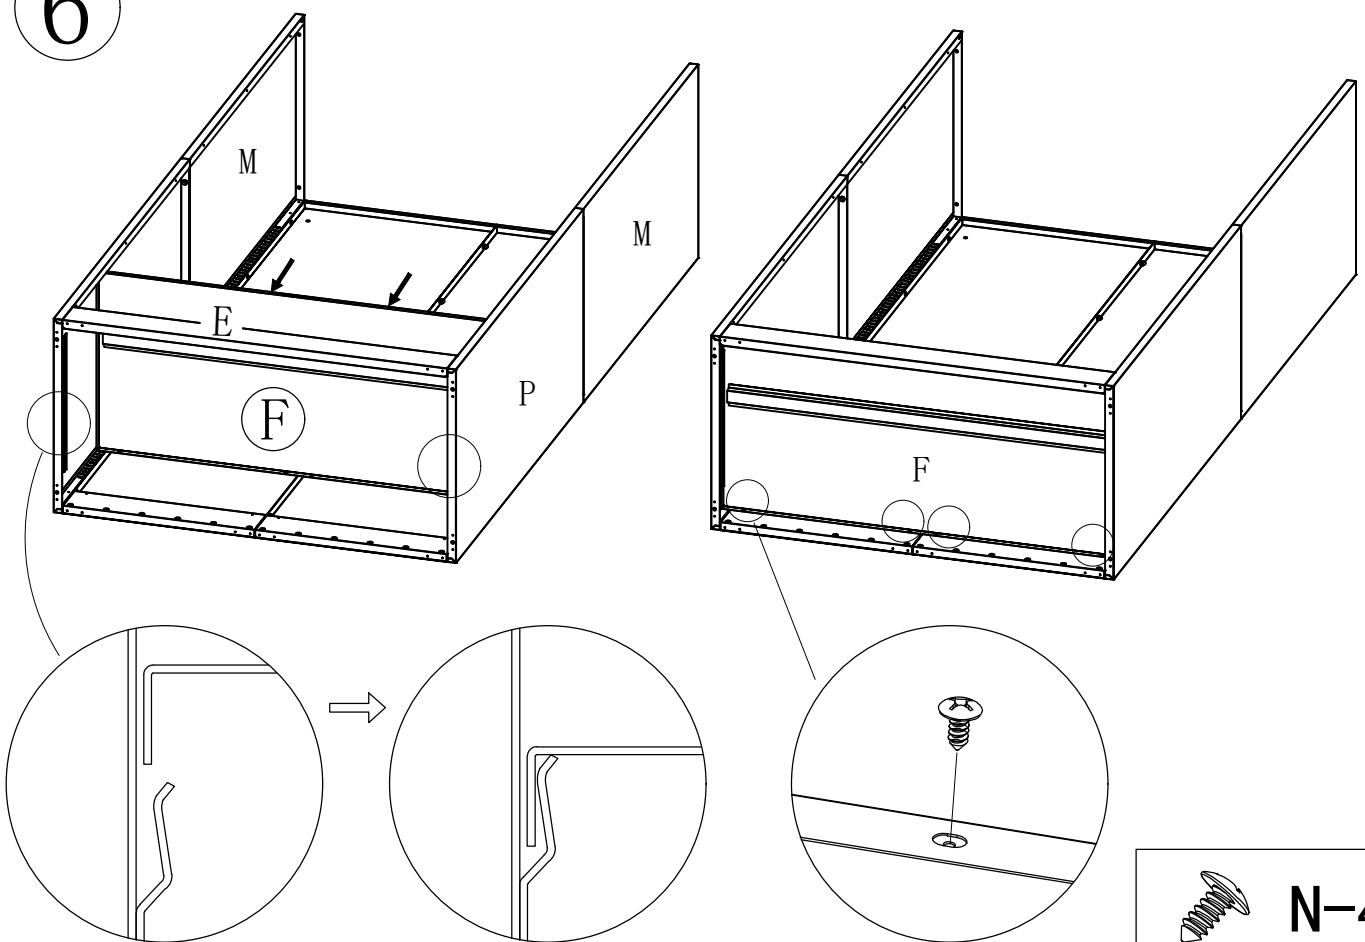


N-4


7

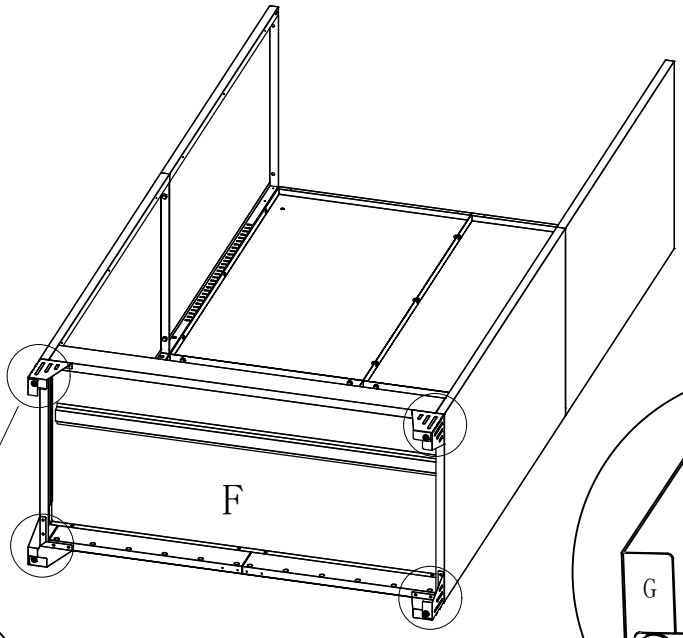

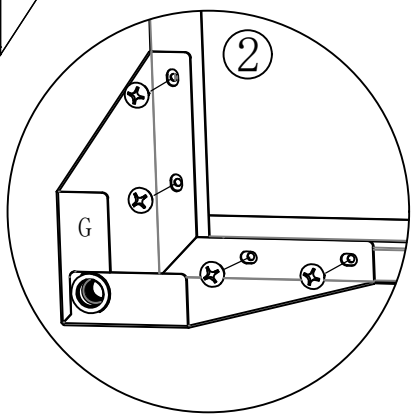

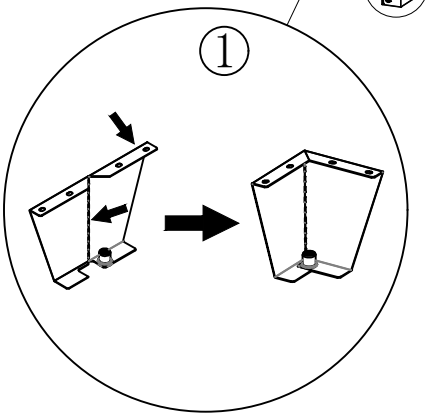



If you think it looksbetter without the standing corner, you can choose to skip this step (7) and the next step (8)



G-4


N-16

8

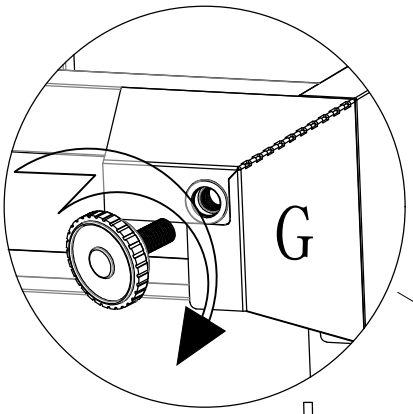


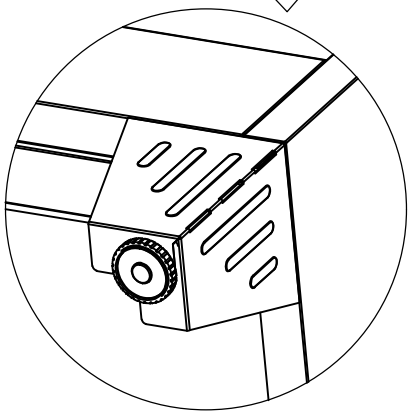


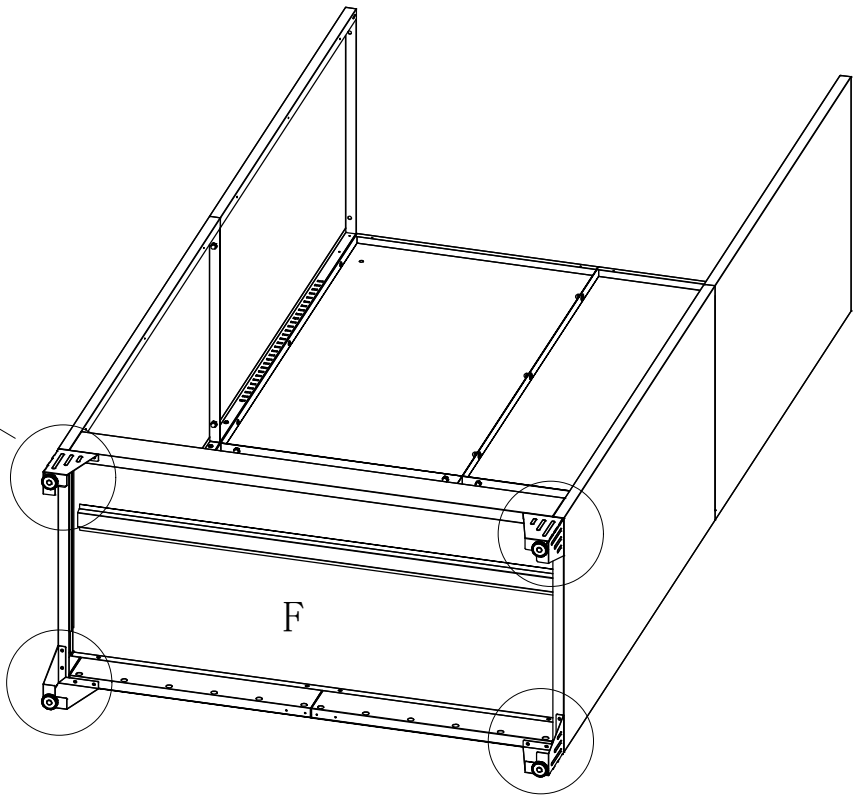


G-4


9

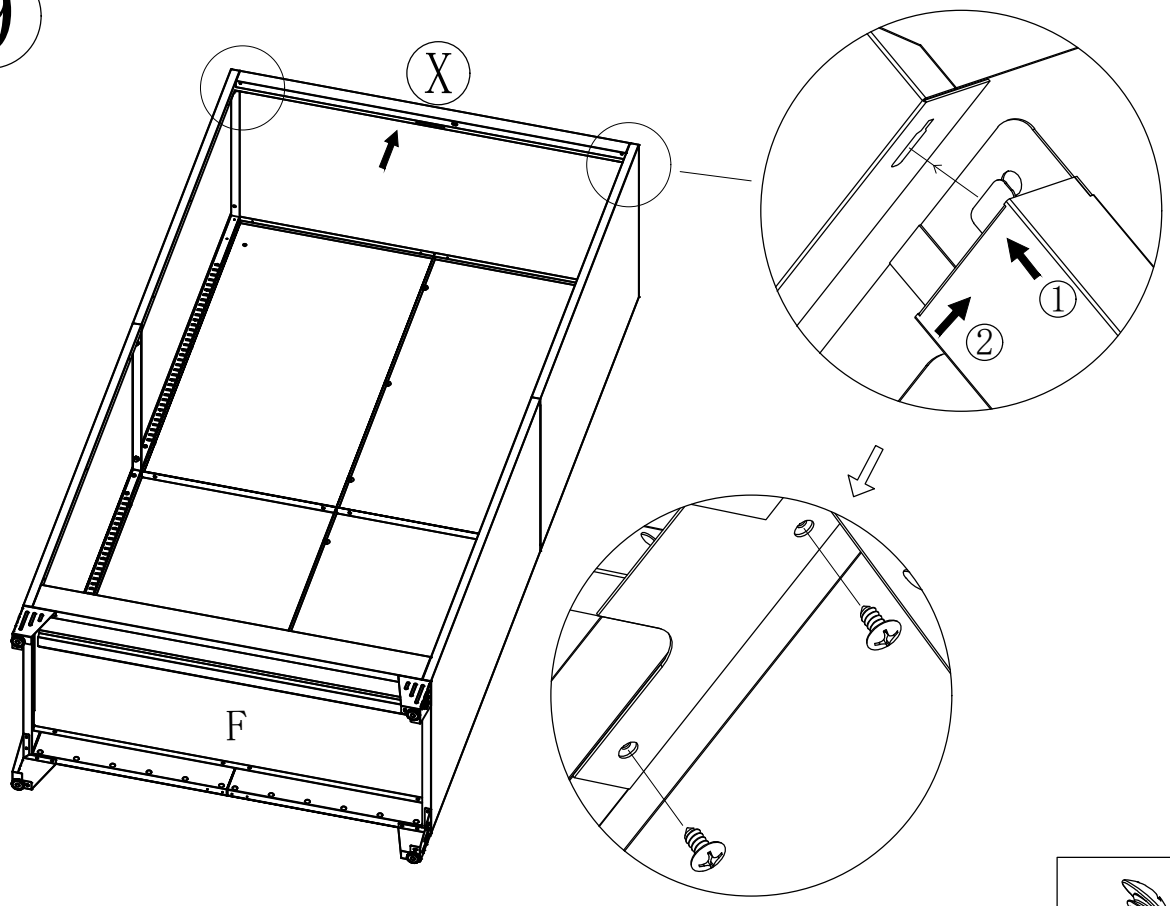



N-4


10

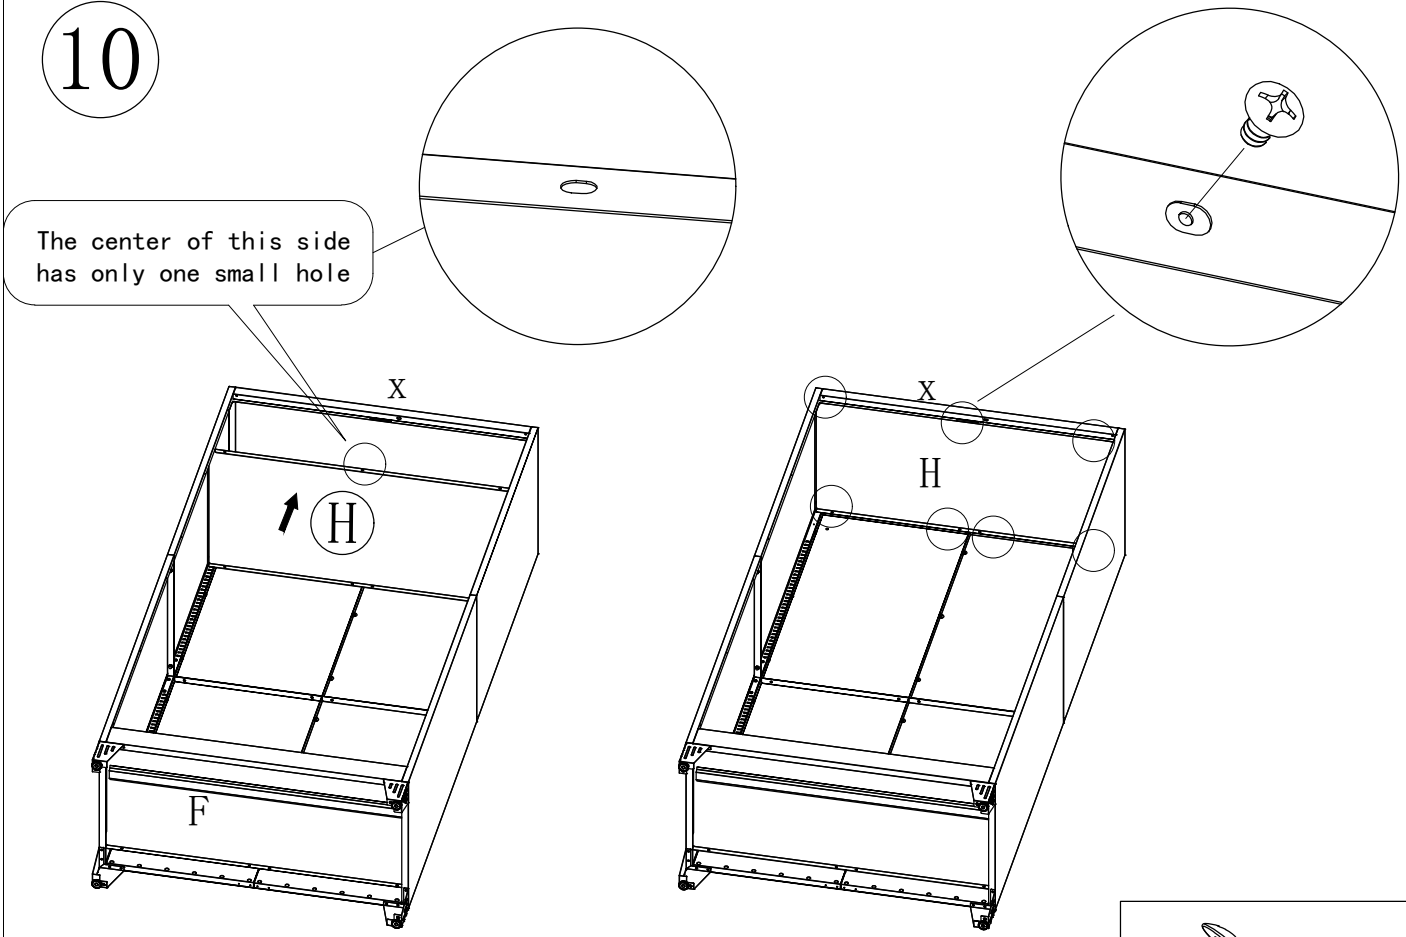





N-7

11

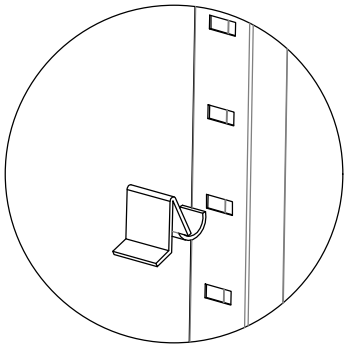

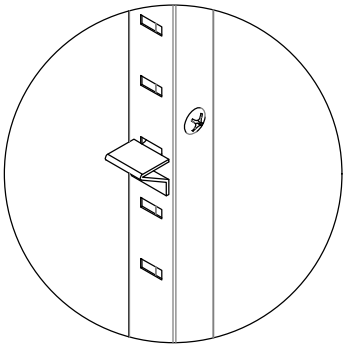


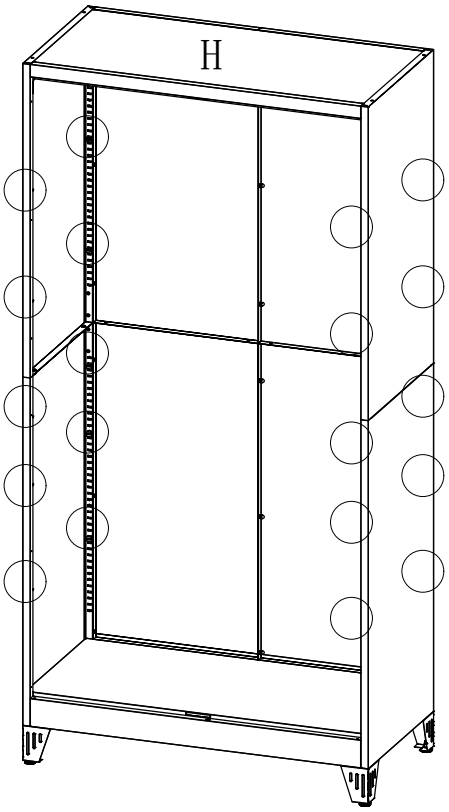





0-20

12

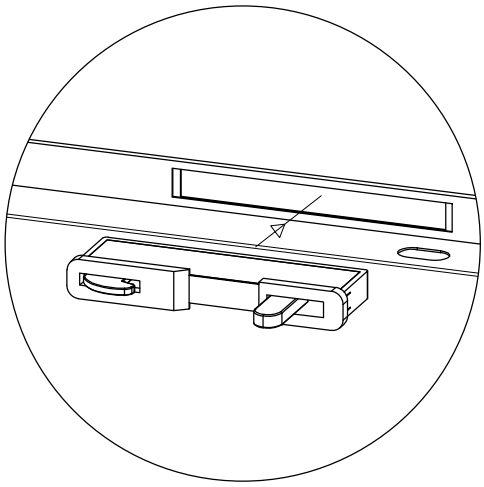


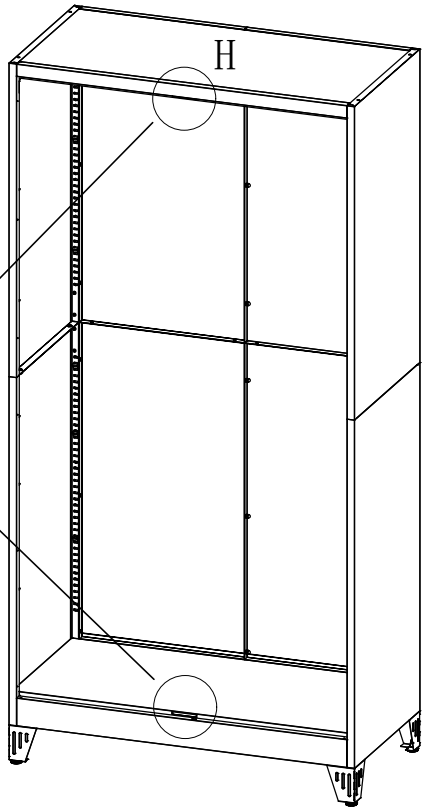





D-2


13

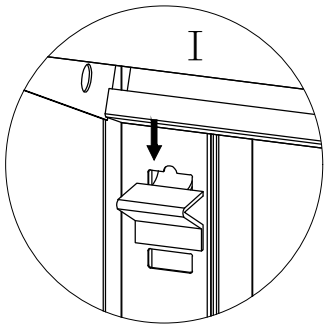


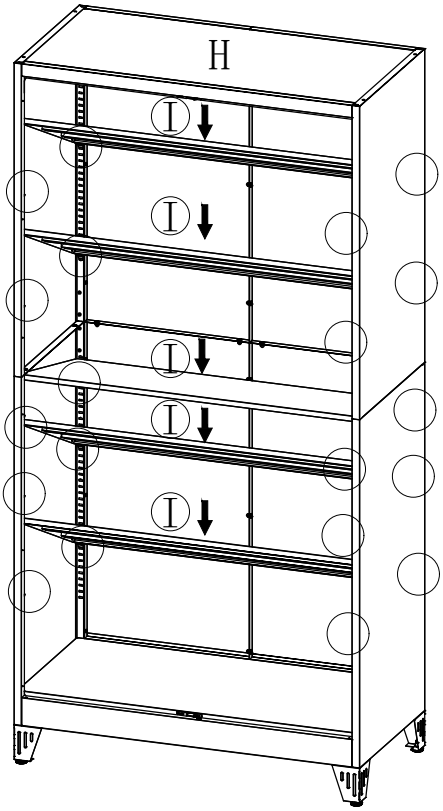


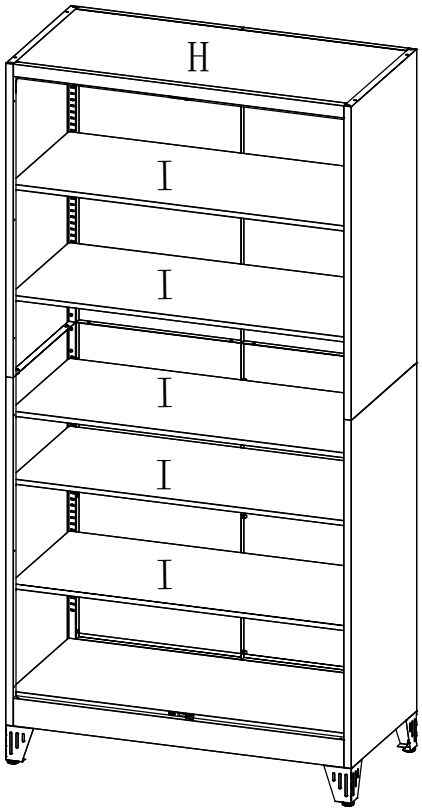


14

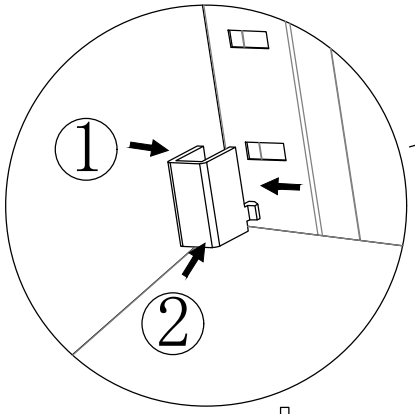

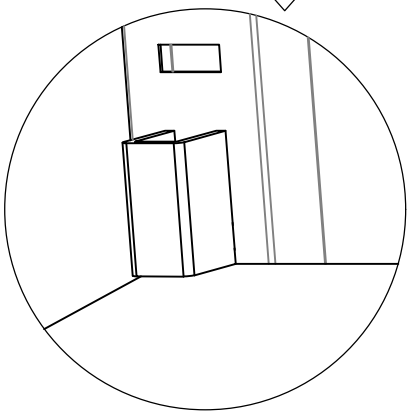

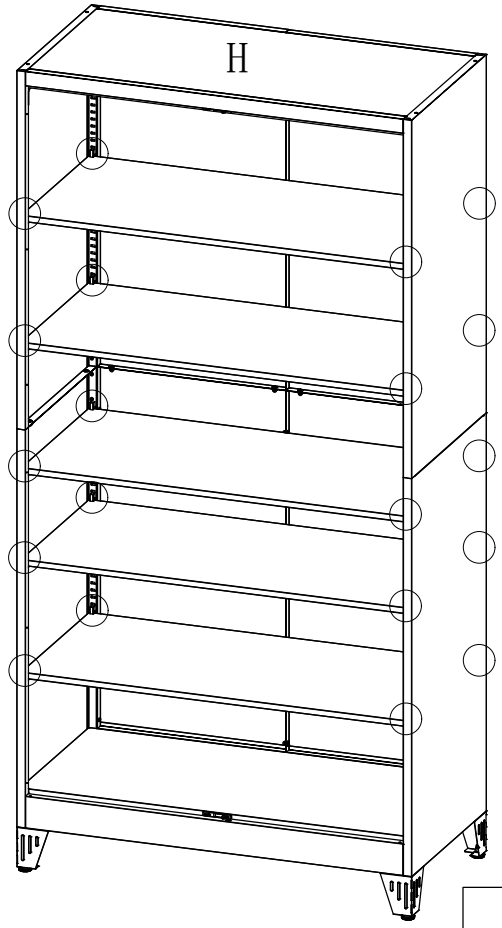




V-20

15

(K) and (Z) are the left door,
(J) and (R) are the right door

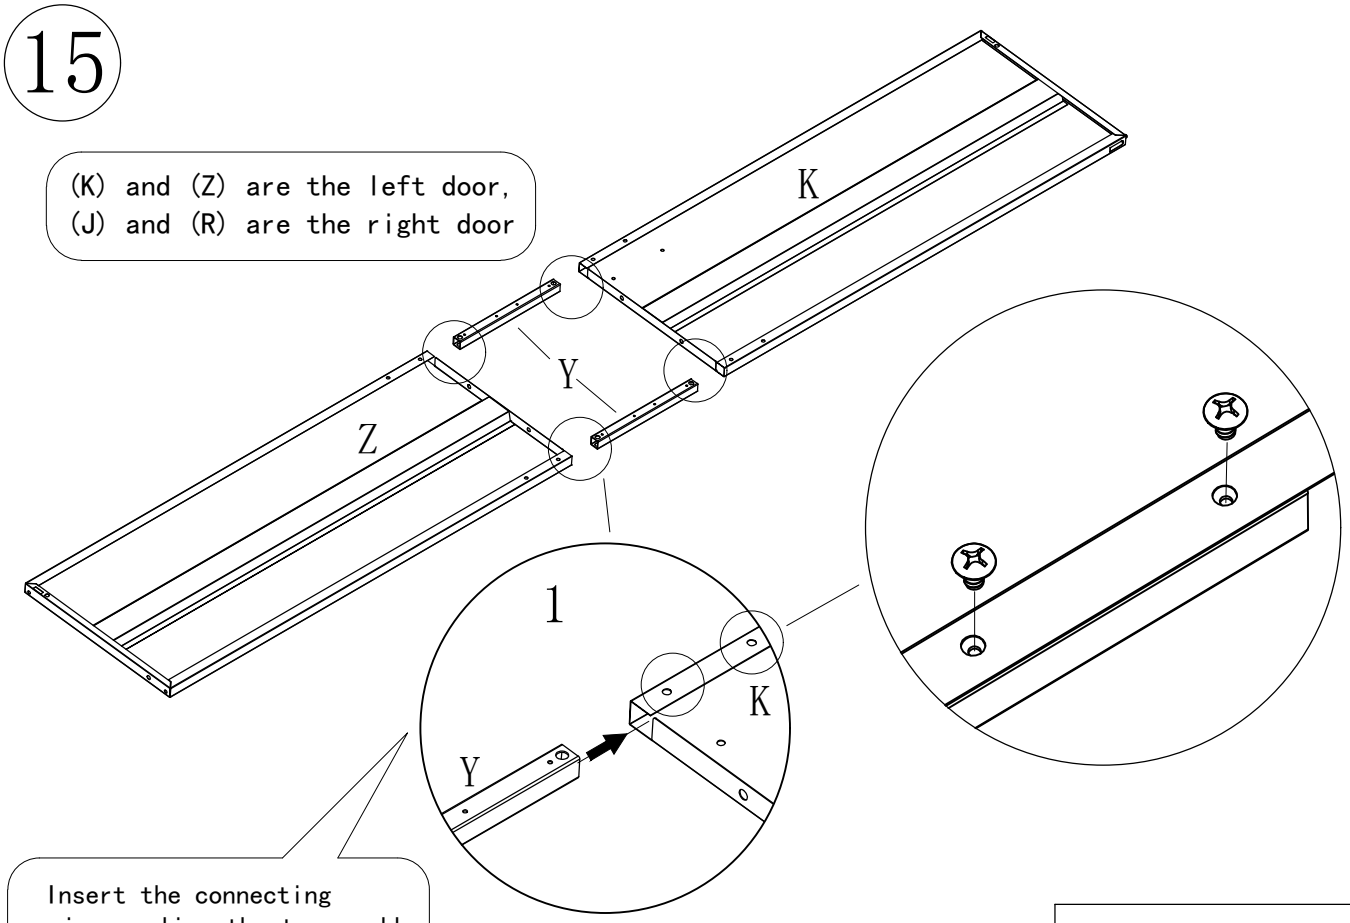



Insert the connecting piece, align the two small holes, and fasten with screws.



N-16


16

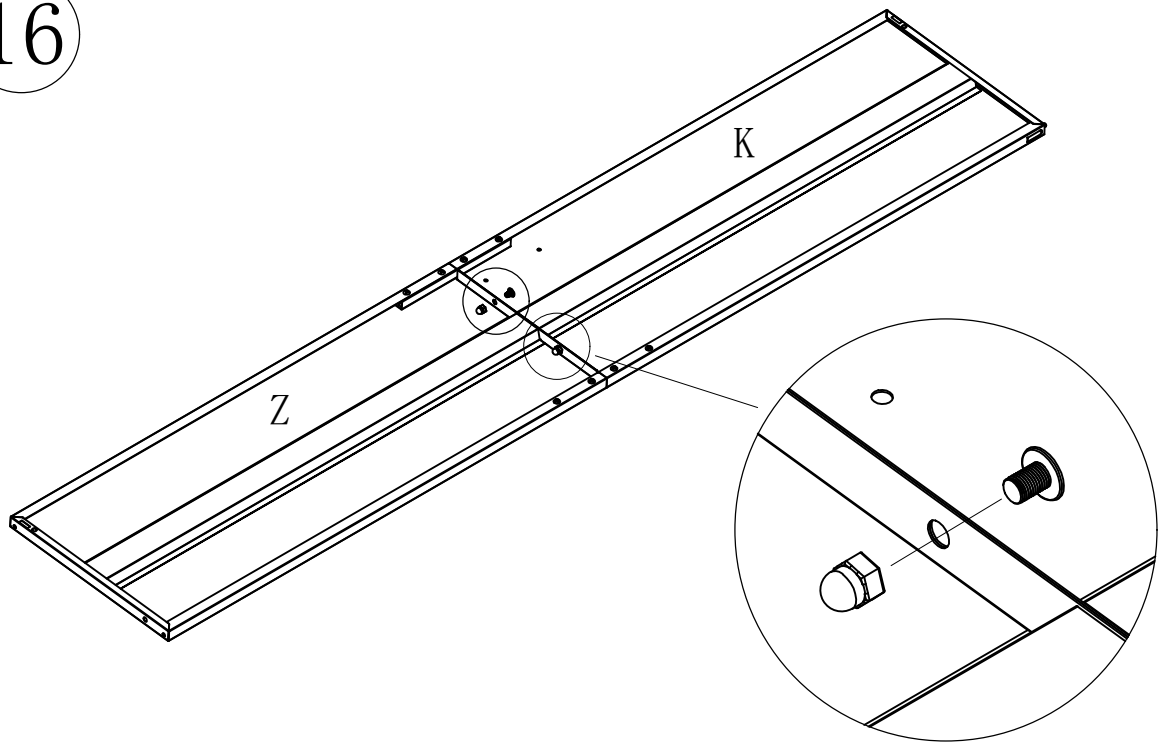




L-4

17

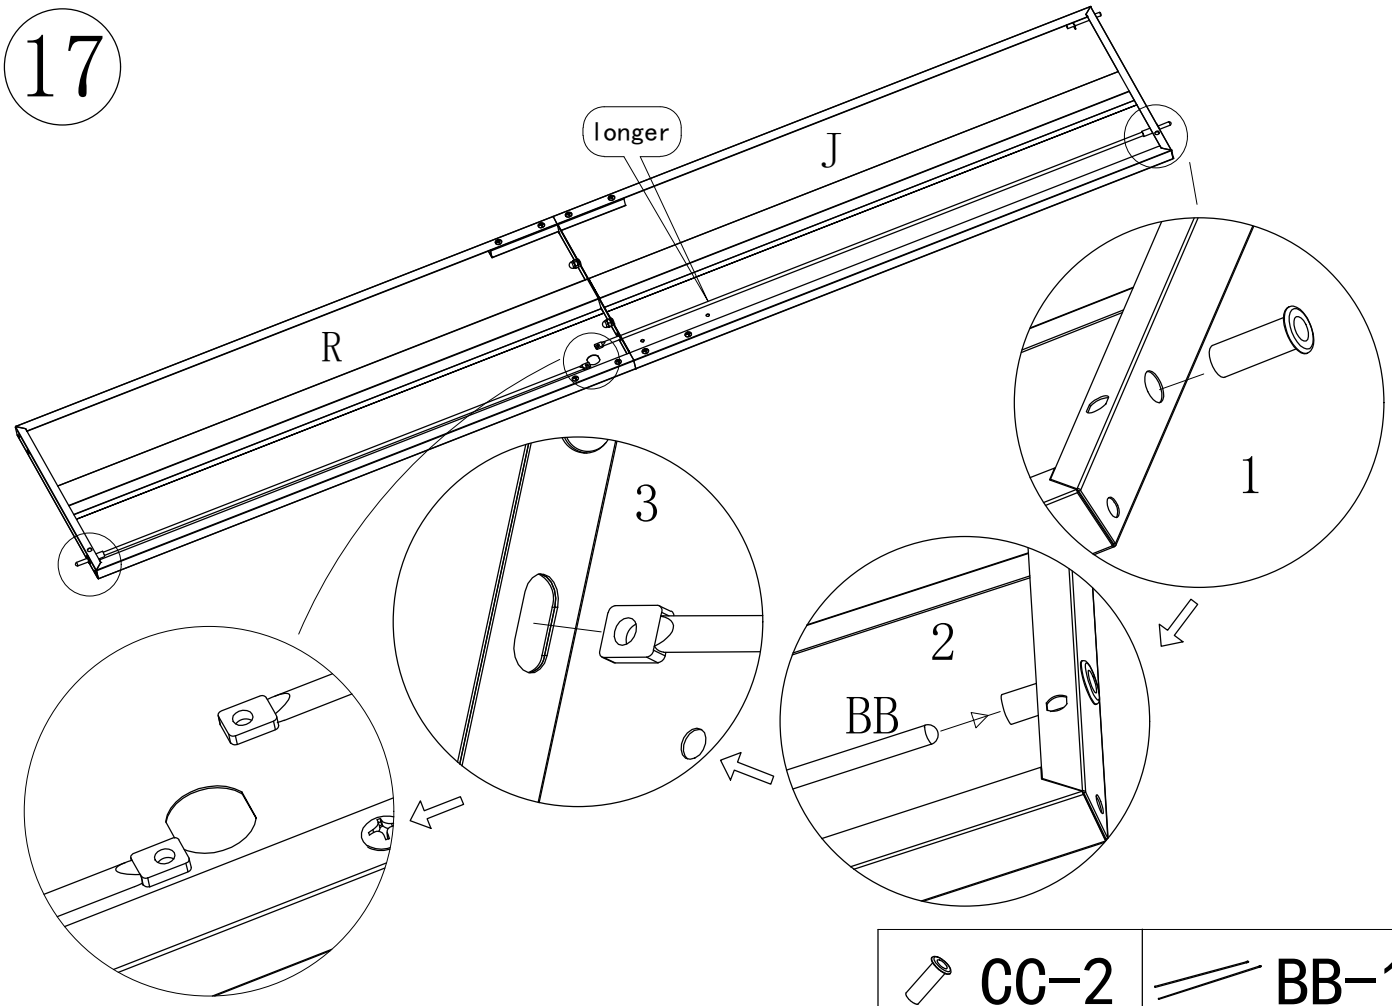

CC-2	BB-1


18

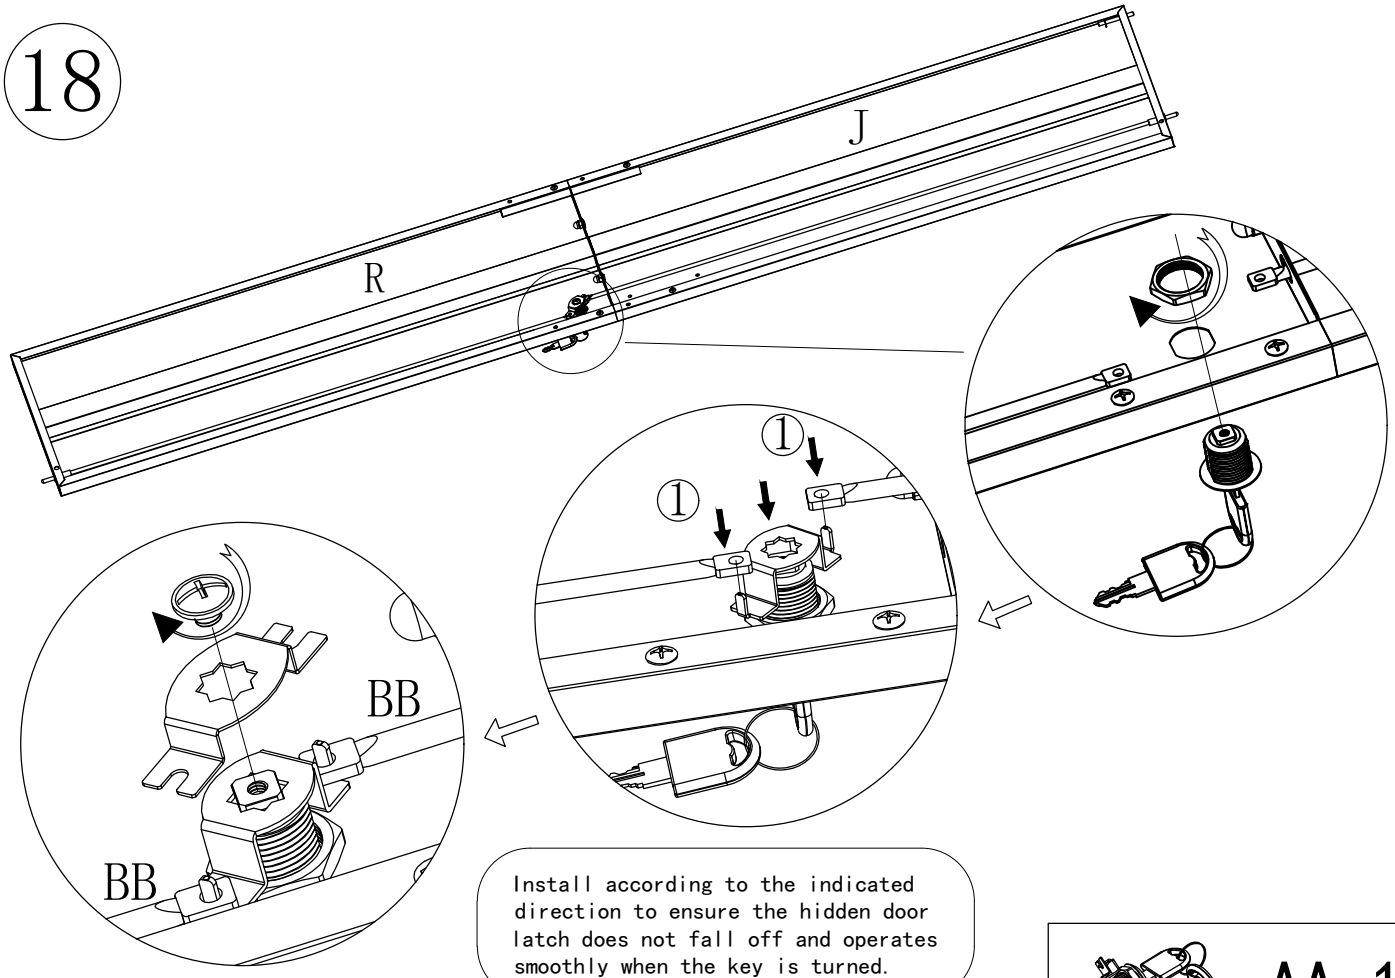

Install according to the indicated direction to ensure the hidden door latch does not fall off and operates smoothly when the key is turned.


AA-1

19

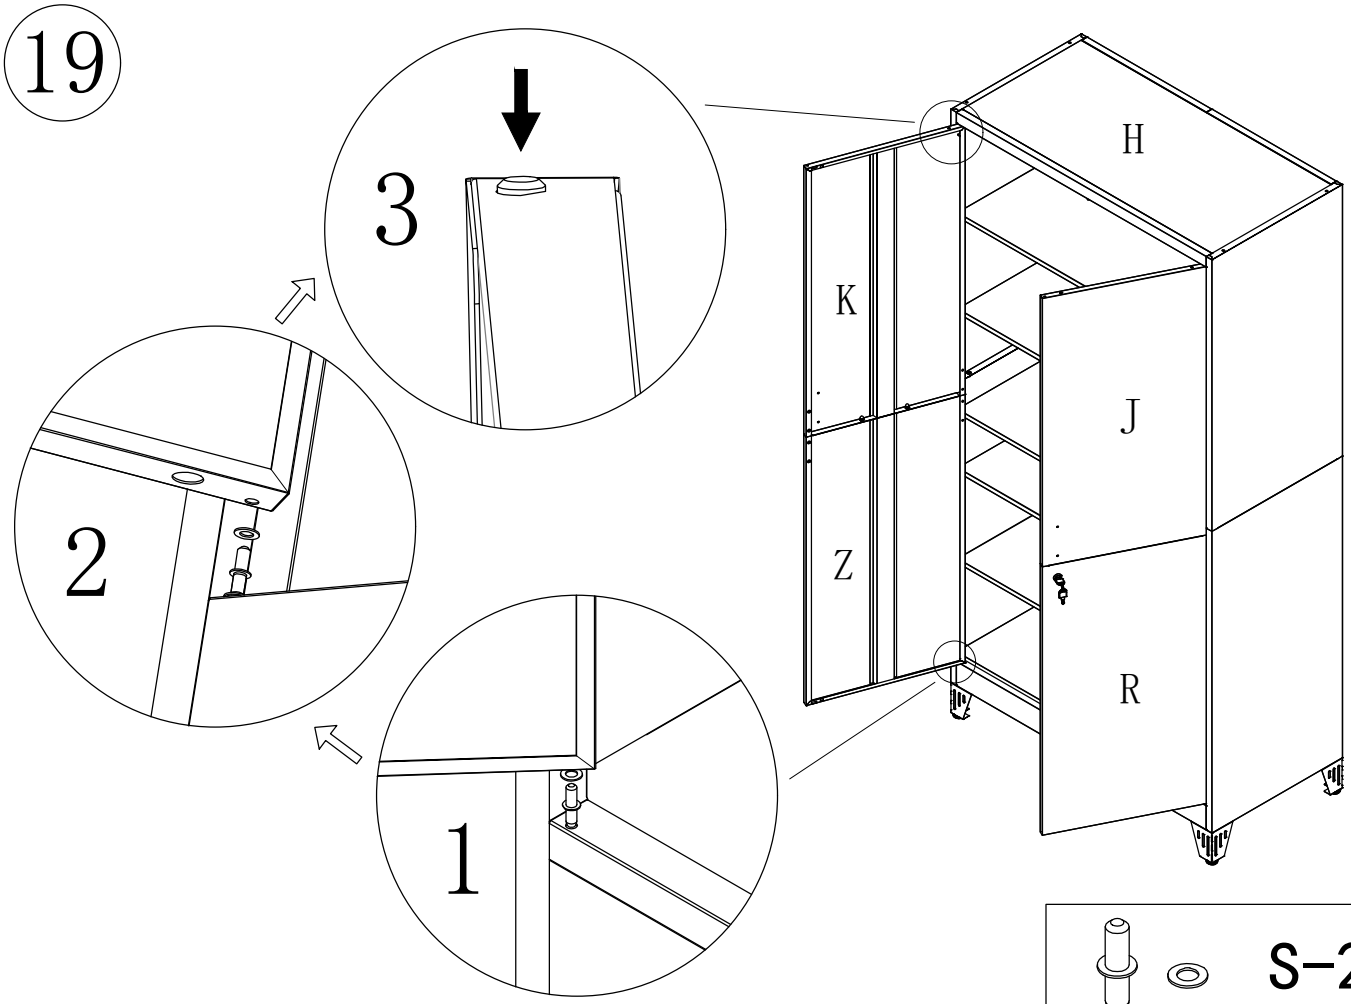

S-2

20

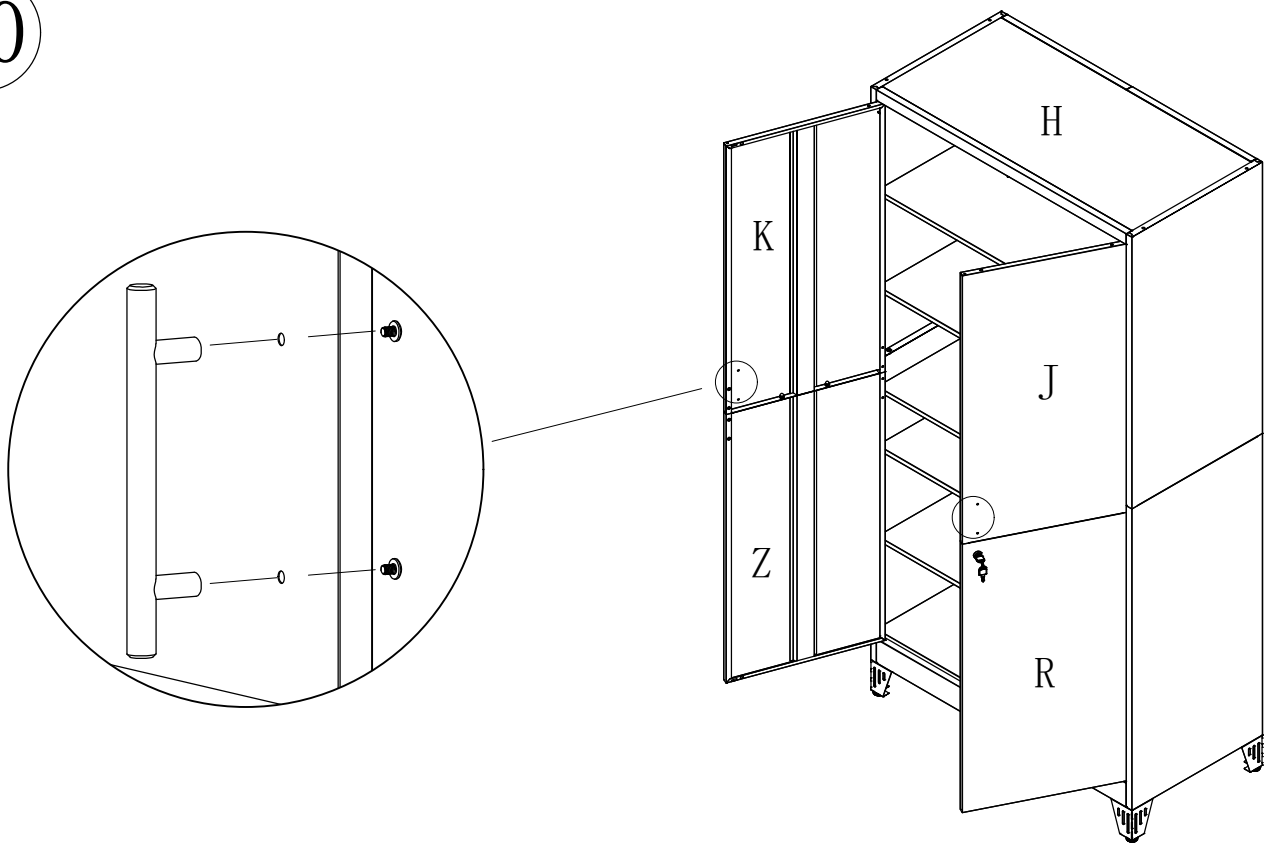




T-2




U-4

21

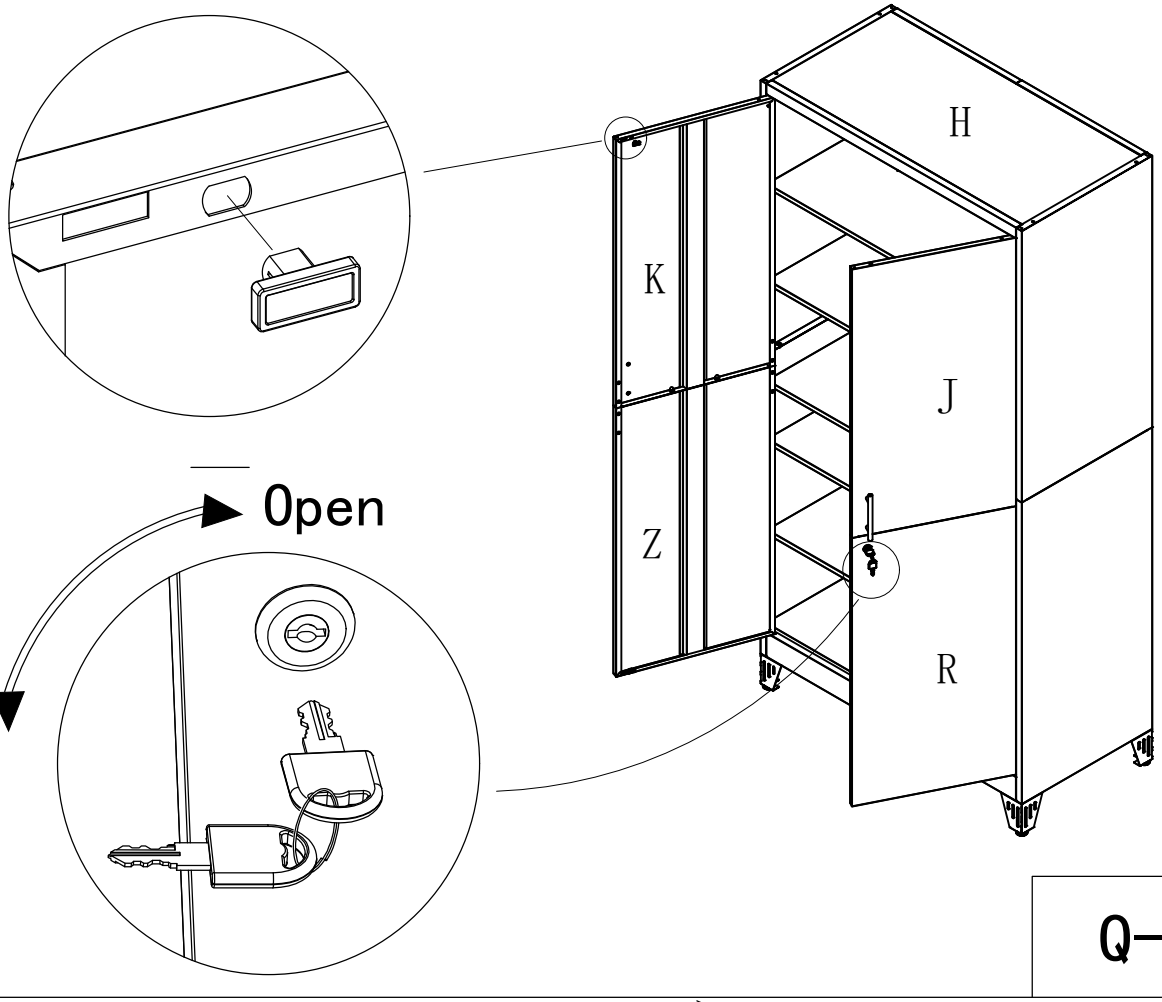

Q-4

22

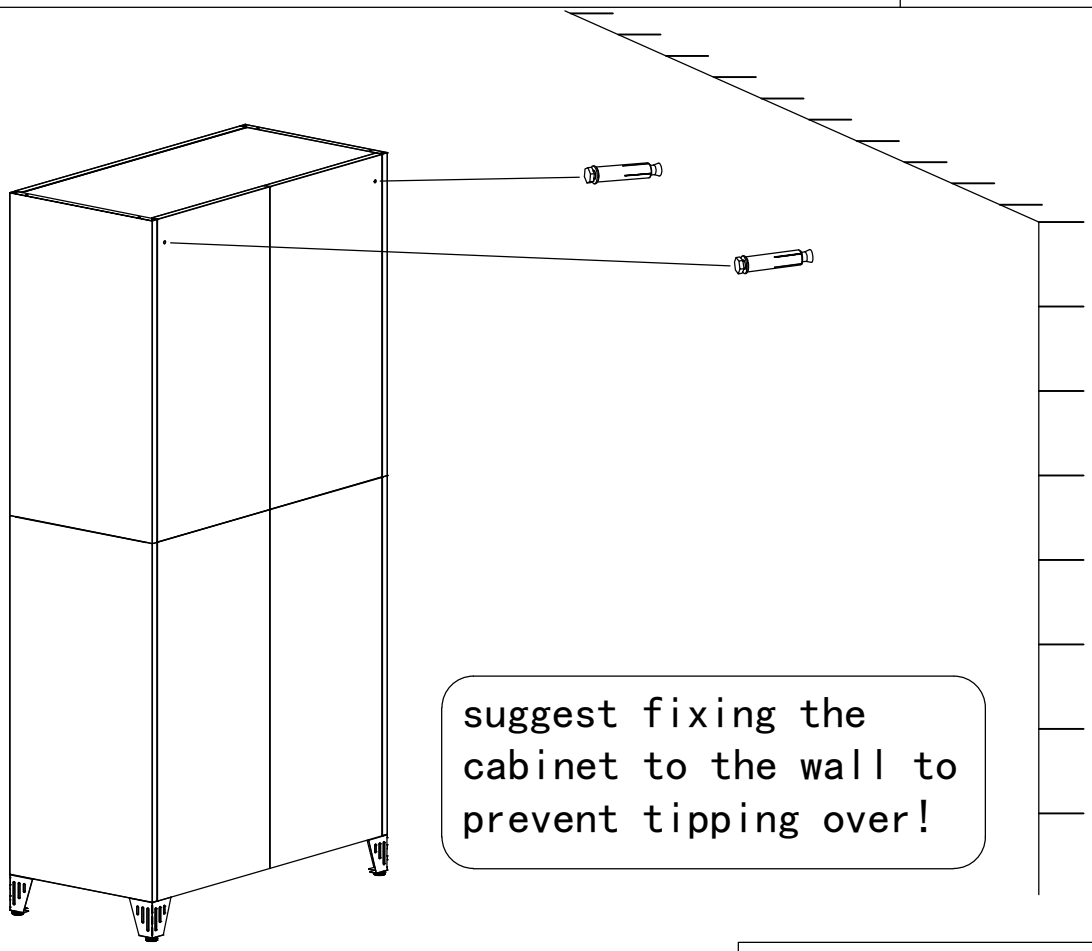


suggest fixing the cabinet to the wall to prevent tipping over!




W-2

Problems and Solutions

Question 1: when encountering uneven height of two door panels,
adjust the bottom adjustment foot to make it flat.

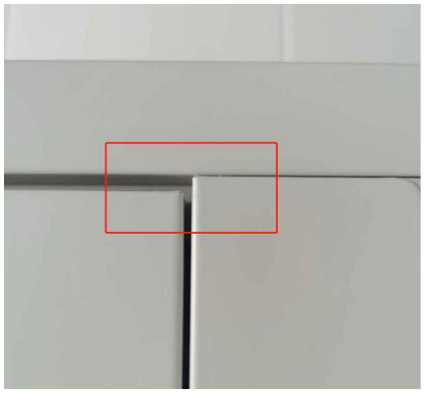

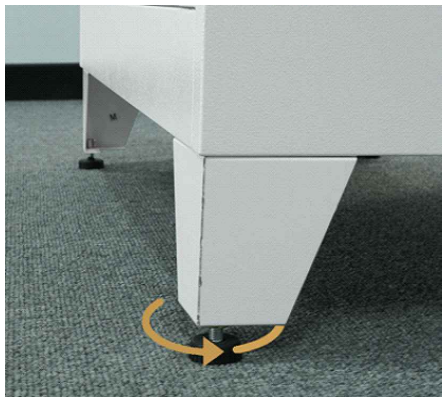

Question 2: When the door is closed, it still protrudes outward.
That's because the door is made of steel plate and has stretchability.
You can adjust it according to the method shown in the picture.



