
# Assembly Instructions

## PWS-EC4097-CO

## 58.27 IN CHARCOAL OAK WOOD TV STAND

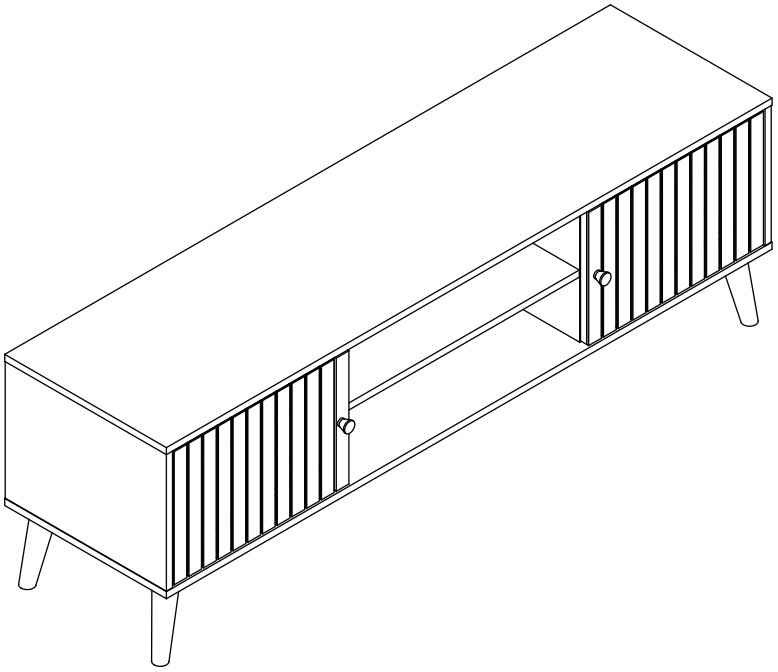


THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Do Not Return This Product!**
Contact our customer service team for help first.

Monday-Friday 9am - 5pm CST
**Visit:** support@cenports.com

## WARNING

- Unit can tip over causing severe injury or death.
- Anchor uni□o stud in wall (ifinstructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

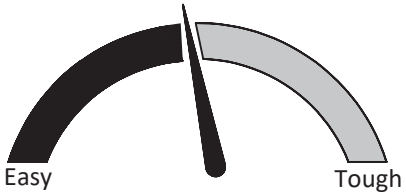


Assembly Difficulty Meter

# Contact Us!

## Do NOT return this product!

Contact our friendly customer service team first for help



**Visit support@cenports.com**

# Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**
ESTIMATED ASSEMBLY TIME: **30 MINUTE**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with a **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Use all the nails provided for the back panel and spread them out equally.




- Back panel must be used to make sure your unit is sturdy.



- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.

# Before You Start

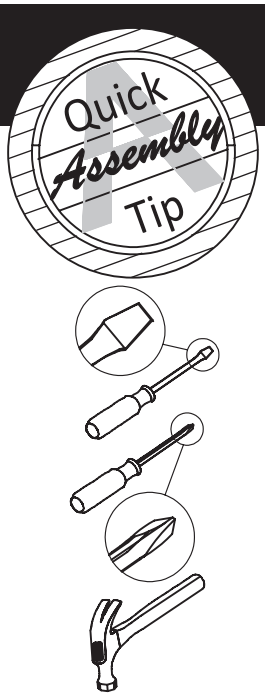



- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


# Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.


1

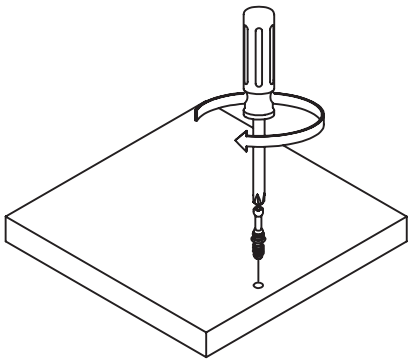


2

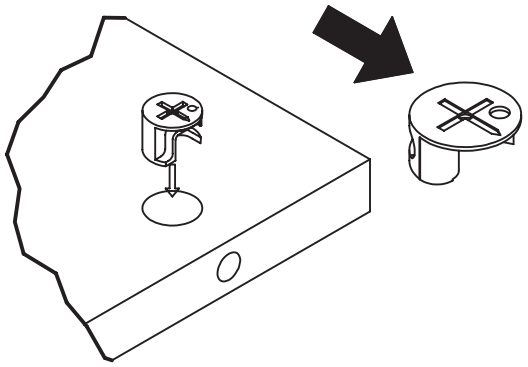

3

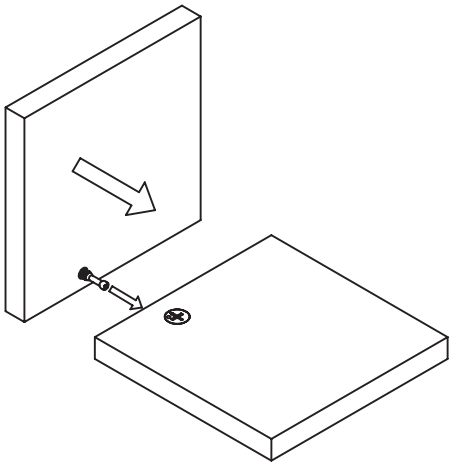

4

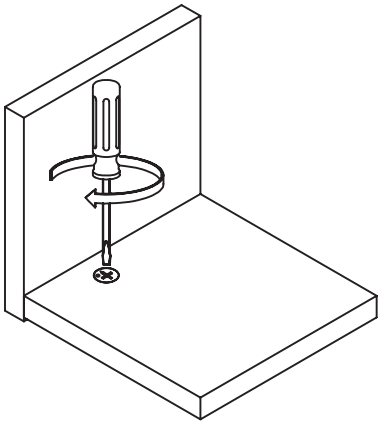




support@cenports.com

# Board Identification


Not actual size

A

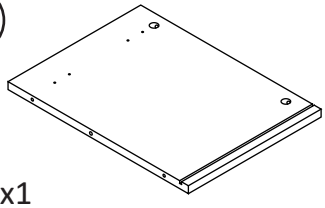


x1
SIDE PANEL LEFT

B

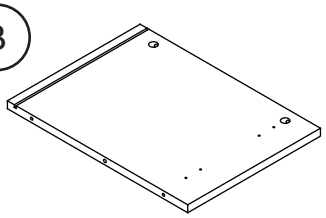


x1
SIDE PANEL RIGHT

C

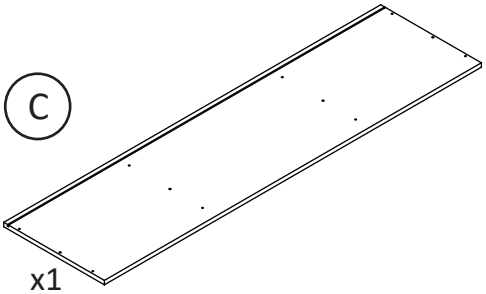


x1
TOP PANEL

D

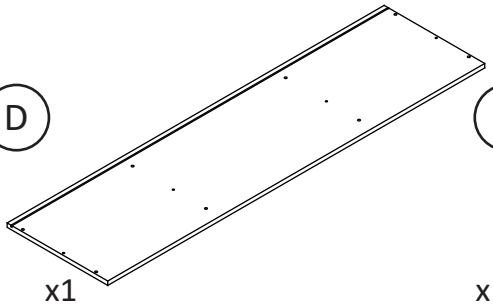


x1
BOTTOM PANEL

E

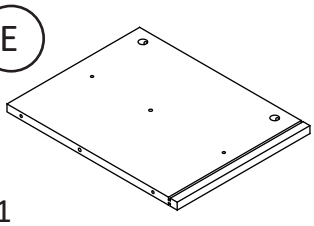


x1
CENTER LEFT PANEL

F

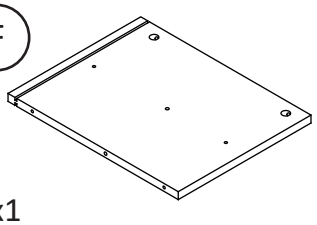


x1
CENTER RIGHT PANEL

G

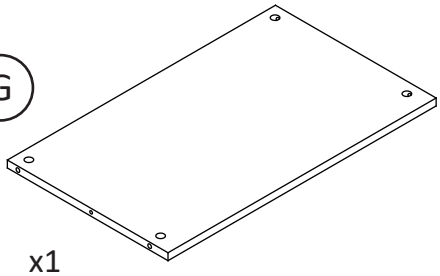


x1
CENTER SHELF PANEL

H

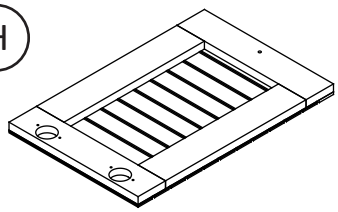


x1
DOOR LEFT PANEL

I

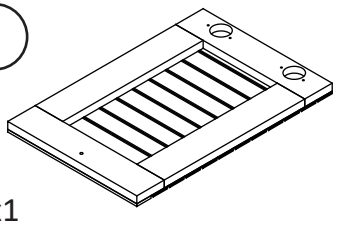


x1
DOOR RIGHT PANEL

Y

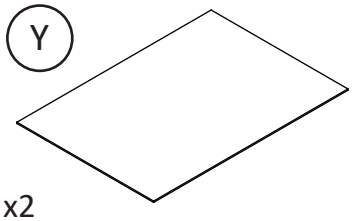

x2
BACKPLY PANEL

Y1

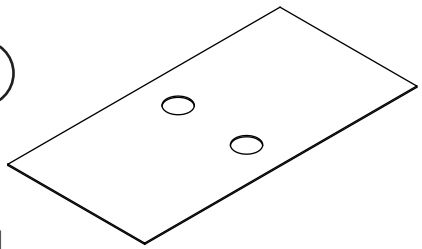

x1
CENTER BACKPLY PANEL




support@cenports.com

# Part List

## Not Actual Size




x12
Minifix Bolt

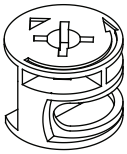


x12
Cam Lock
12-15




x10
Wood Dowel
6 X 30




x12
Backply Stopper




x12
Csk Screw
3.1 X 20




x16
Csk Screw
3.5 X 15



x4
Hinges 7/8




x2
Csk Screw
4 X 30

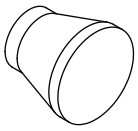


x2
Plastic Handle




x8
Unitar Screw
6.3 X 40




x5
Jcbc Screw
6 X 32

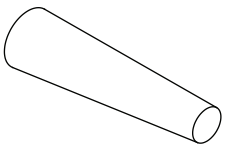

x4
Solidwood Leg
(160mm)

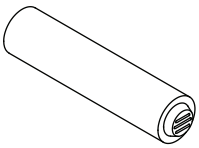

x1
Center Leg
(155mm)




x1
Allen Key M4




support@cenports.com

# Step 1

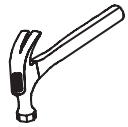




x10
Wood Dowel
6 X 30

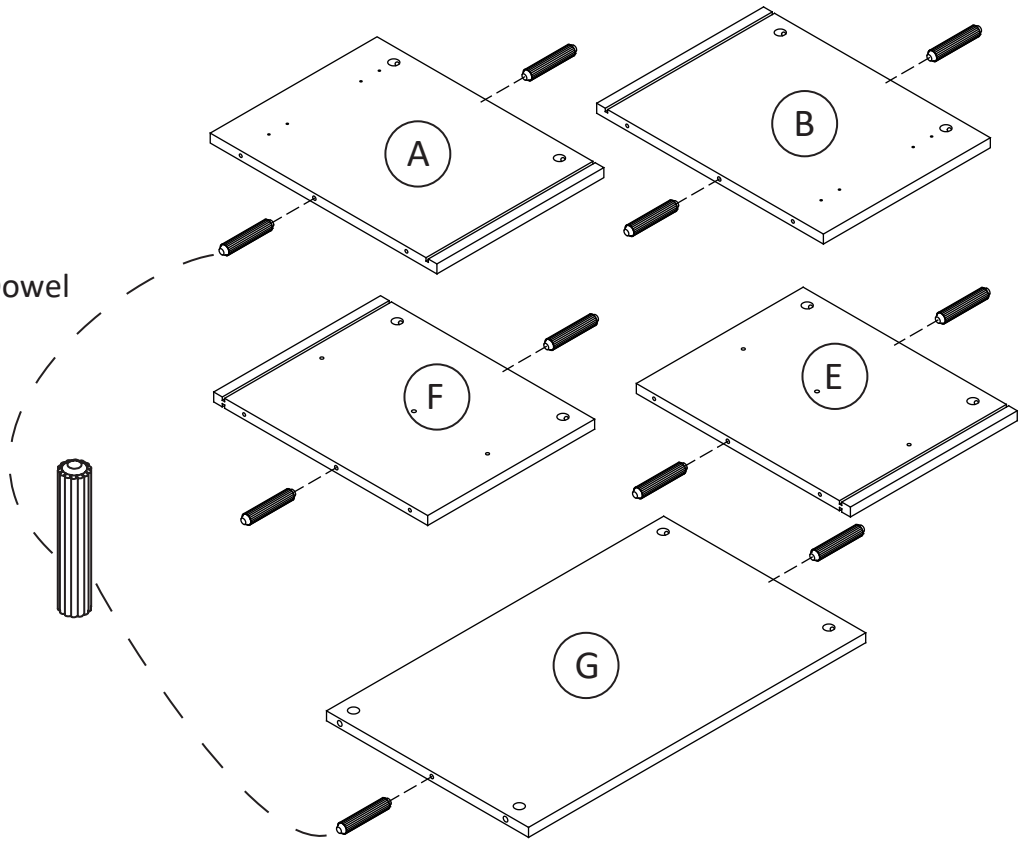




# Step 2

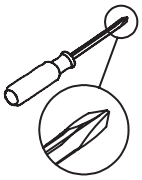



x12
Minifix Bolt

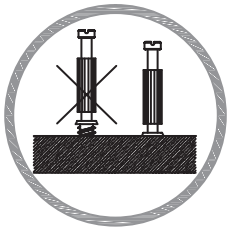


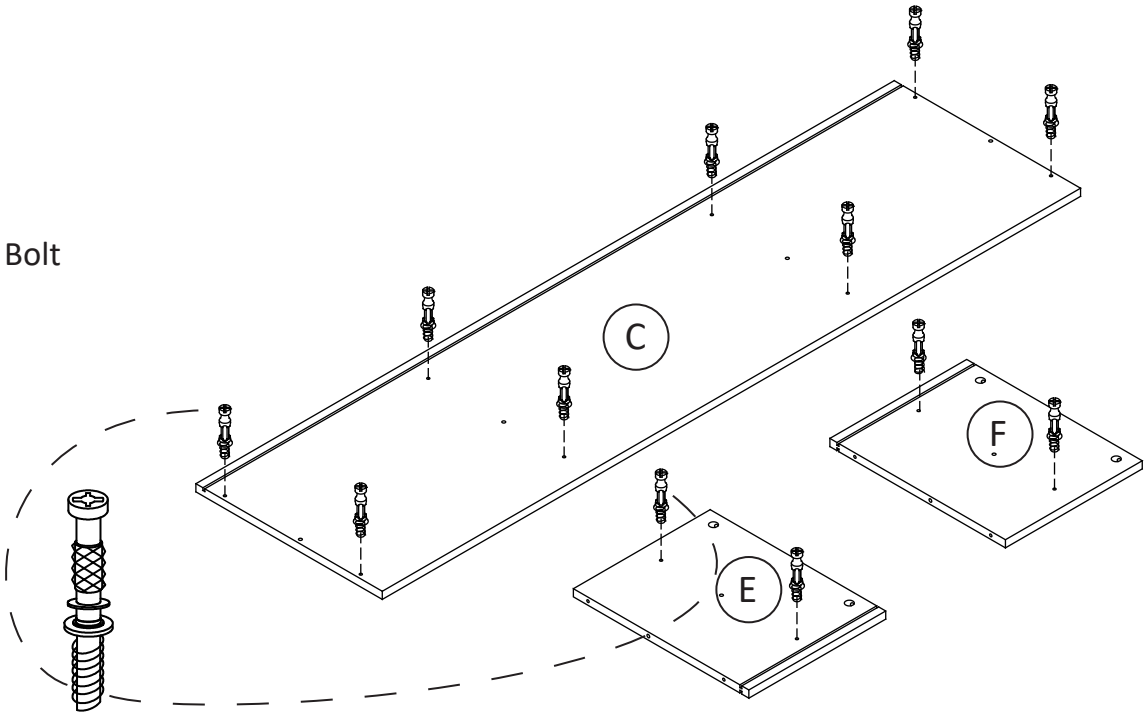





support@cenports.com

# Step 3

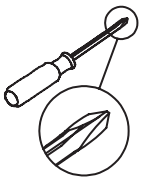





x8
Csk Screw
3.5 x 15




x4
Hinges
7/8

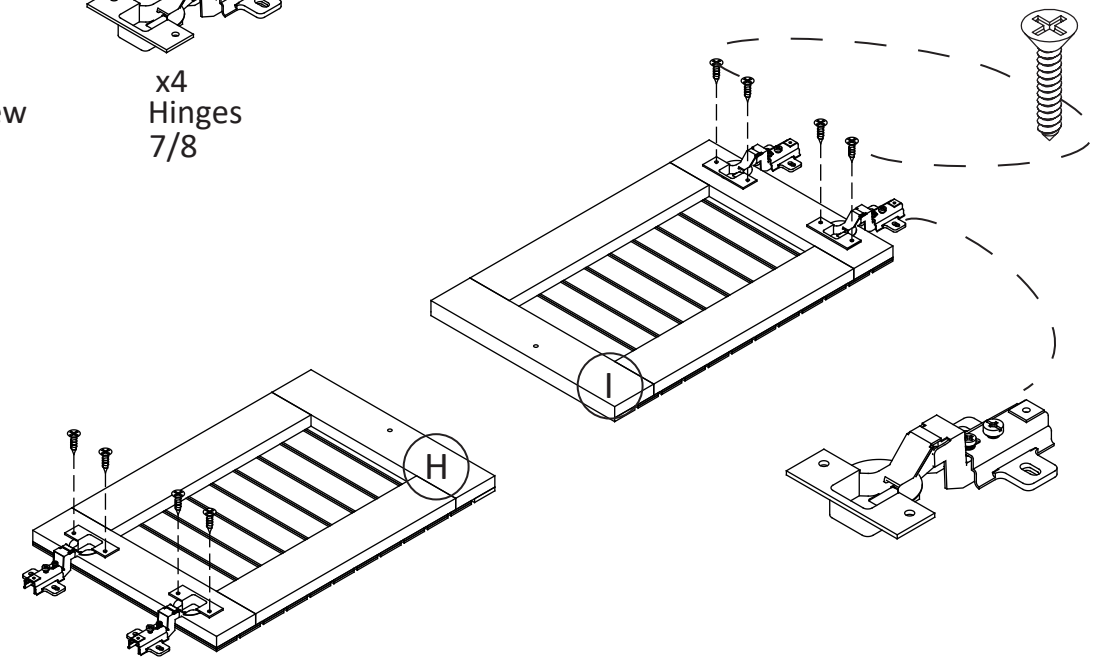



# Step 4

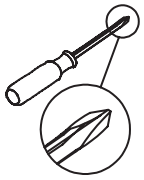

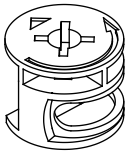

x4
Cam Lock
12-15

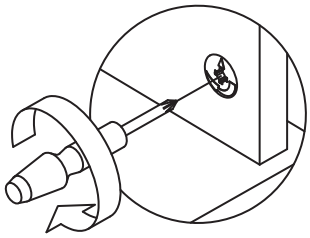







support@cenports.com


# Step 5



x5
Jcbc Screw
6 X 32

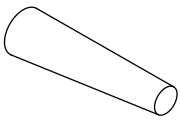

x4
Solidwood Leg
(160mm)

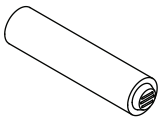


x1
Center Leg
(155mm)




# Step 6




x8
Unitar Screw
6.3 X 40

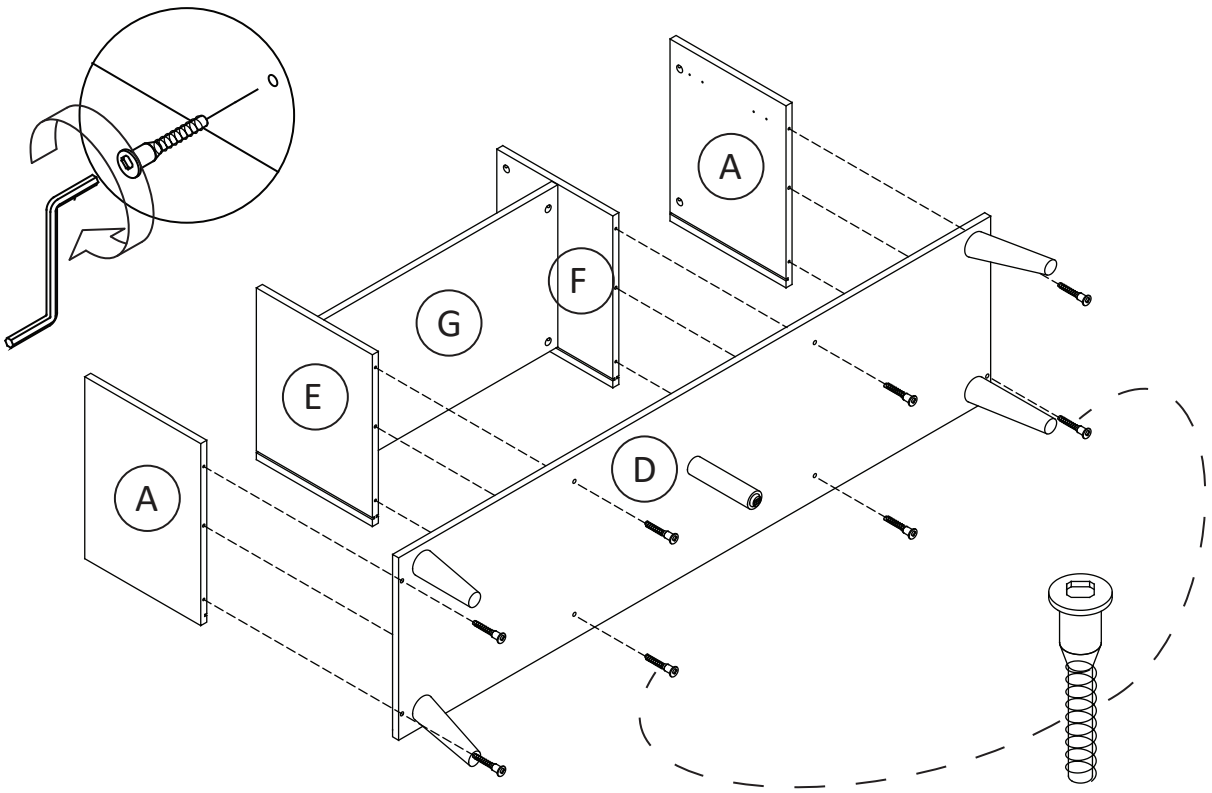






support@cenports.com

# Step 7

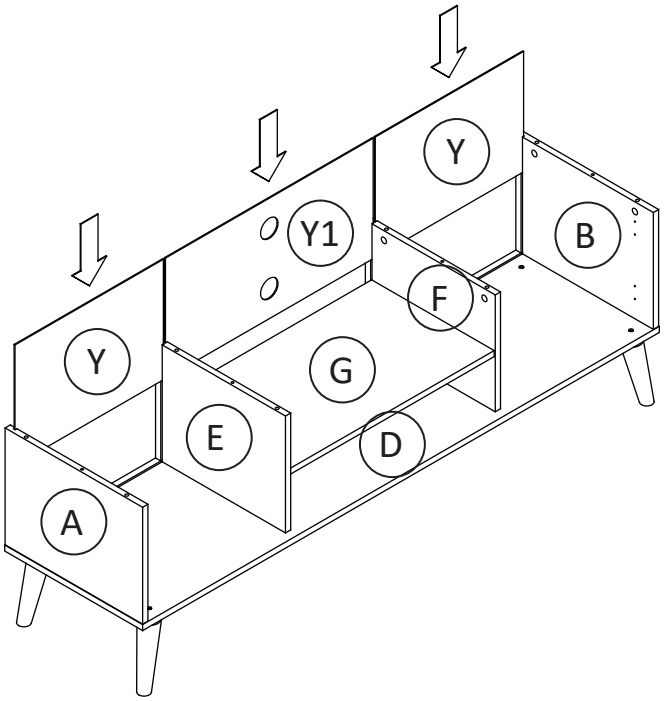




# Step 8

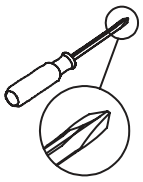

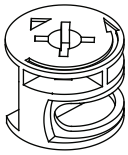

x8
Cam Lock
12-15

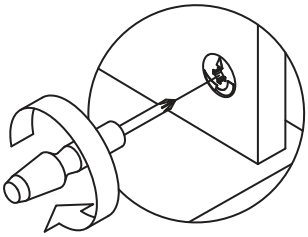


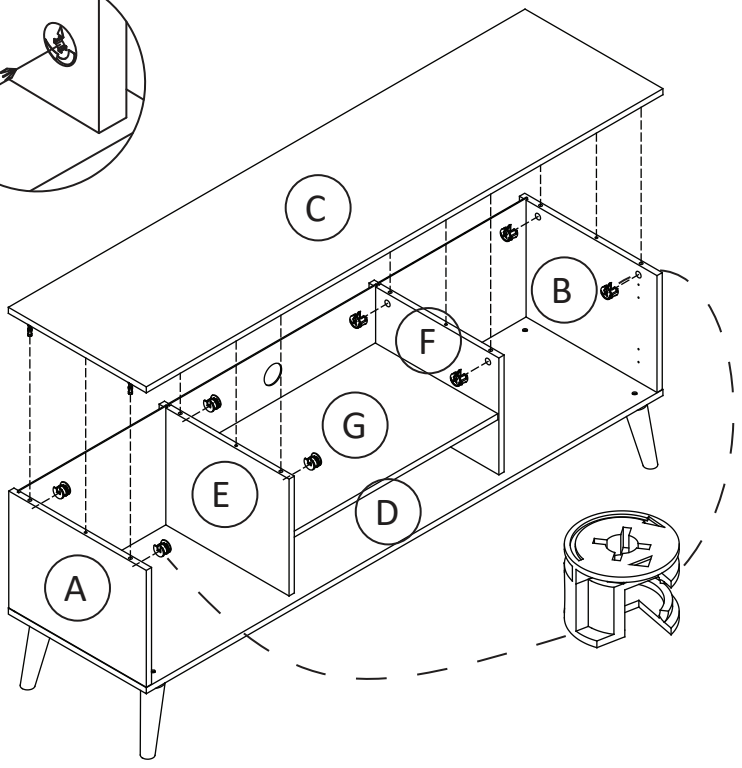






support@cenports.com

# Step 13

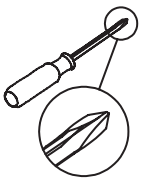





x12
Backply Stopper




x12
Csk Screw
3.1 x 20

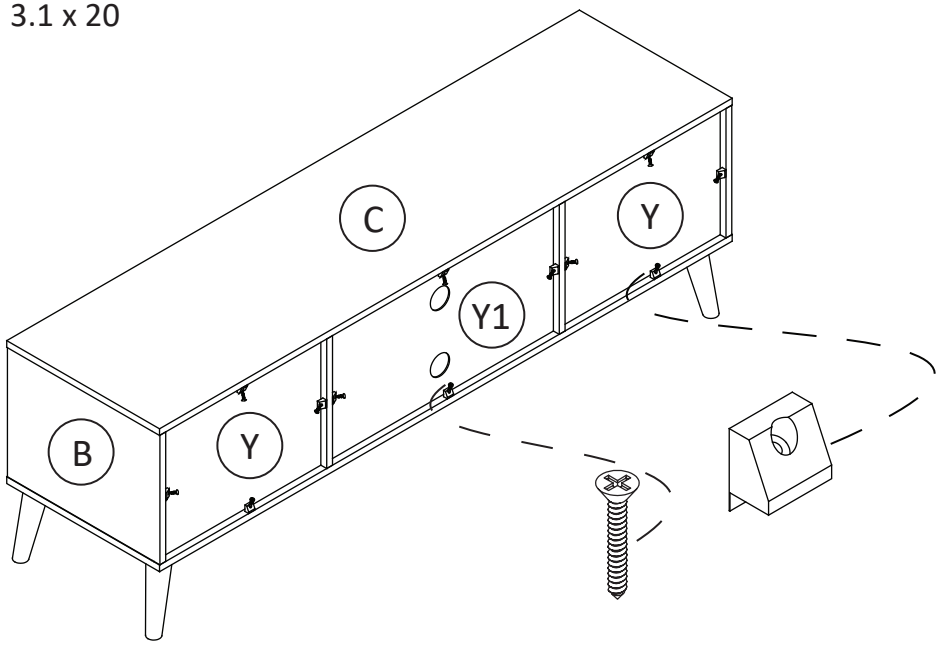



# Step 14

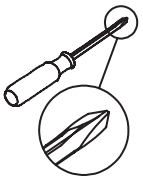




x1
Csk Screw
4 X 30

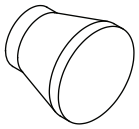


x1
Plastic Handle

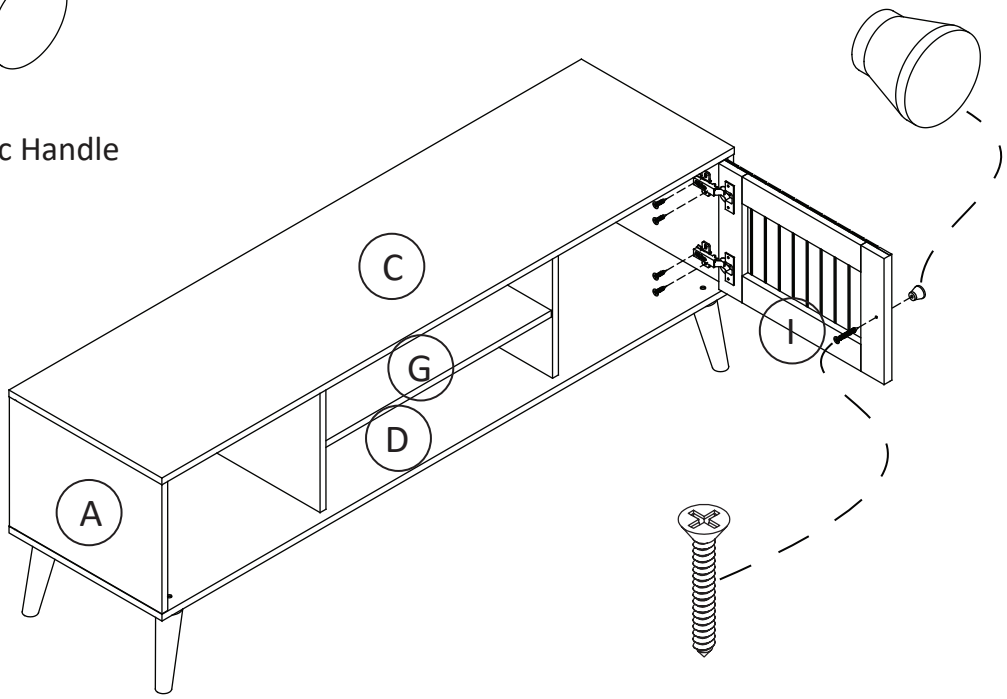






support@cenports.com

# Step 15

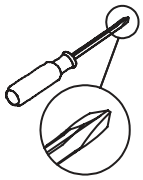




x1
Csk Screw
4 X 30

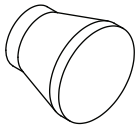


x1
Plastic Handle

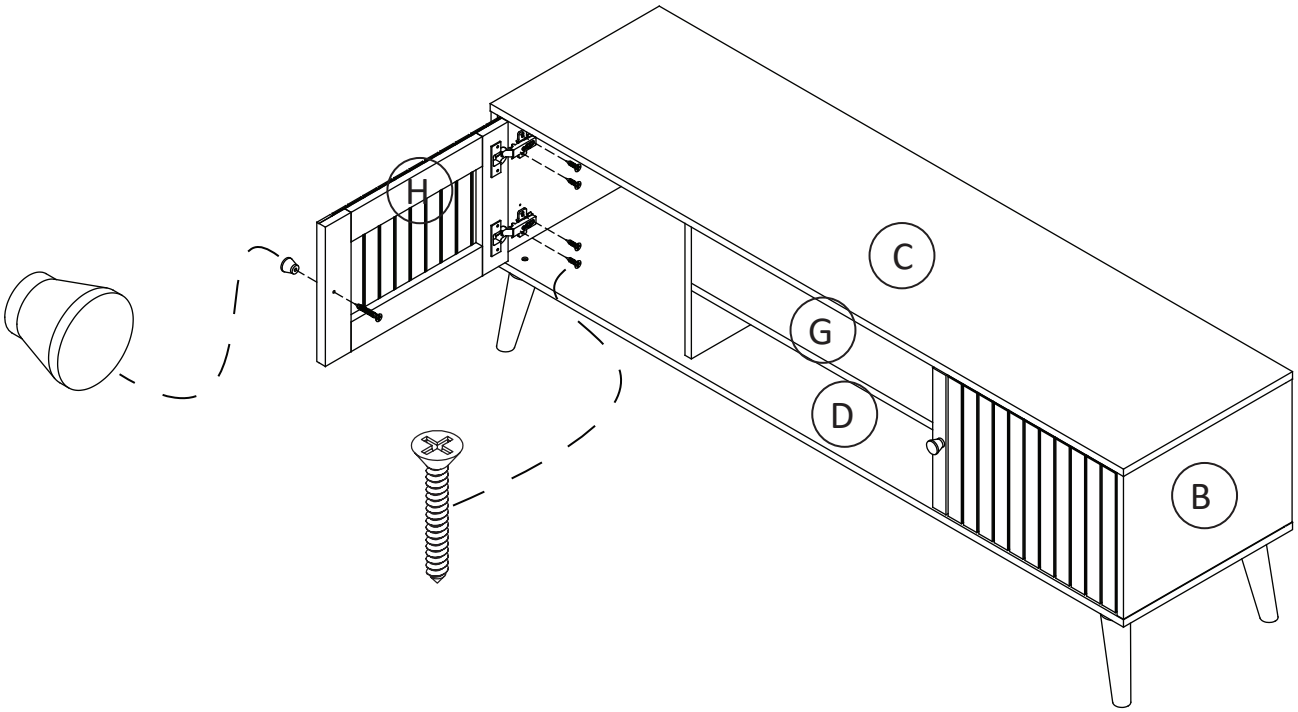




support@cenports.com

MAX WEIGHT LOAD: 99 LBS

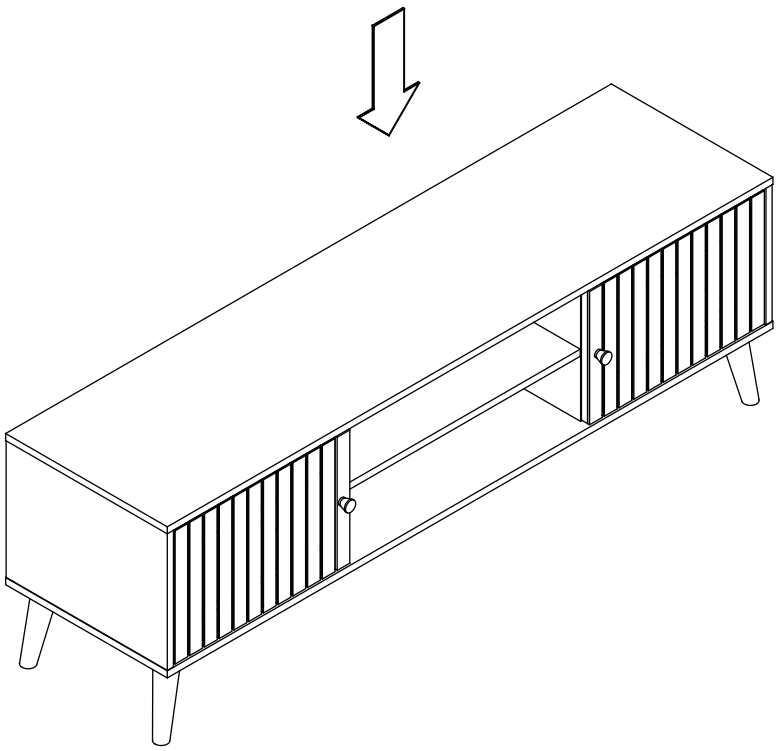



support@cenports.com

# Tips for Proper Care and Maintenance of Particle Board Furniture

**Understanding Particle Board**

Particle Board Composition:

Particle board is composed of wood particles, such as sawdust and wood chips, bonded together with adhesive under high pressure. The surface of particle board is typically covered with a laminate or veneer to enhance its appearance.

Sensitivity to Moisture:

One of the primary vulnerabilities of particle board is its sensitivity to moisture. Excessive exposure to water or high humidity can cause swelling, warping, or delamination.

**Cleaning and Maintenance Guidelines**

**1. Dust Regularly:**

Regular dusting is crucial to prevent the accumulation of dirt and grime on particle board surfaces. Use a soft, dry cloth or a duster to gently remove dust.

**2. Avoid Excess Water:**

Particle board should not be cleaned with excessive water or harsh cleaning agents. Use a slightly damp (not wet) cloth with a mild cleaner specifically designed for wood surfaces.

**3. Protect from Direct Sunlight:**

Prolonged exposure to direct sunlight can cause discoloration or fading of the particle board surface. Position furniture away from direct sunlight or use window coverings to reduce exposure.

**4. Use Coasters and Mats:**

Protect particle board surfaces from hot items, spills, and scratches by using coasters, placemats, or felt pads under objects. This precaution prevents damage and preserves the furniture's appearance.

**5. Repair Minor Damage Promptly:**

Address minor damage such as scratches or small chips promptly. You can use touch-up markers or putty to fill in and conceal minor imperfections. Ensure that the repair materials match the furniture's colour and finish.



support@cenports.com